

Vehicle	Year	System	Model	Function	Subfunction
ACCORD	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ACCORD	/	Four-wheel steering control system (4WS)	M52	Read codes	
ACCORD	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
ACCORD	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ACCORD	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
ACCORD	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ACCORD	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ACCORD	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
ACCORD	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ACCORD	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ACCORD	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ACCORD	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
ACCORD	/	Automatic shift control system (A/T)	M1E	Read codes	
ACCORD	/	Automatic shift control system (A/T)	M1E	Erase Codes	
ACCORD	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ACCORD	/	Automatic shift control system (A/T)	M1E	Read Live Data	
ACCORD	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
ACCORD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ACCORD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACCORD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACCORD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACCORD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACCORD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ACCORD	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
ACCORD	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
ACCORD	/	Automatic shift control system (A/T)	M3B	Read codes	
ACCORD	/	Automatic shift control system (A/T)	M3B	Erase Codes	
ACCORD	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ACCORD	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
ACCORD	/	Automatic shift control system (A/T)	M3B	Read Live Data	
ACCORD	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ACCORD	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ACCORD	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
ACCORD	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ACCORD	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
ACCORD	/	Automatic shift control system (A/T)	M3C	Read codes	
ACCORD	/	Automatic shift control system (A/T)	M3C	Erase Codes	
ACCORD	/	Automatic shift control system (A/T)	M81	Read ECU Information	
ACCORD	/	Automatic shift control system (A/T)	M81	Read codes	
ACCORD	/	Automatic shift control system (A/T)	M81	Erase Codes	
ACCORD	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ACCORD	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
ACCORD	/	Automatic shift control system (A/T)	M81	Read Live Data	
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACCORD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
ACCORD	/	Automatic shift control system (A/T)	M82	Read ECU Information	
ACCORD	/	Automatic shift control system (A/T)	M82	Read codes	
ACCORD	/	Automatic shift control system (A/T)	M82	Erase Codes	
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
ACCORD	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
ACCORD	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
ACCORD	/	Active Engine Control Support System (ACM)	M06	Read codes	
ACCORD	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
ACCORD	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
ACCORD	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
ACCORD	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
ACCORD	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
ACCORD	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
ACCORD	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ACCORD	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
ACCORD	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	

ACCORD /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
ACCORD /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
ACCORD /	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
ACCORD /	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
ACCORD /	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
ACCORD /	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
ACCORD /	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
ACCORD /	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
ACCORD /	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
ACCORD /	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
ACCORD /	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
ACCORD /	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
ACCORD /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
ACCORD /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
ACCORD /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
ACCORD /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
ACCORD /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
ACCORD /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
ACCORD /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
ACCORD /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
ACCORD /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
ACCORD /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
ACCORD /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
ACCORD /	Transmission Control System (AT)	M18	Read ECU Information	
ACCORD /	Transmission Control System (AT)	M18	Read codes	
ACCORD /	Transmission Control System (AT)	M18	Erase Codes	
ACCORD /	Transmission Control System (AT)	M18	Read Freeze Frame Data	
ACCORD /	Transmission Control System (AT)	M18	Read Live Data	
ACCORD /	Transmission Control System (AT)	M18	Adjustment	
ACCORD /	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
ACCORD /	Active Torque Converter Control System (ATTS)	M0E	Read codes	
ACCORD /	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
ACCORD /	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
ACCORD /	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
ACCORD /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
ACCORD /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
ACCORD /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ACCORD /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
ACCORD /	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
ACCORD /	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
ACCORD /	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
ACCORD /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
ACCORD /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
ACCORD /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
ACCORD /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
ACCORD /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
ACCORD /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
ACCORD /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
ACCORD /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
ACCORD /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
ACCORD /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
ACCORD /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
ACCORD /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
ACCORD /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
ACCORD /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
ACCORD /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
ACCORD /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
ACCORD /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
ACCORD /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
ACCORD /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
ACCORD /	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
ACCORD /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
ACCORD /	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
ACCORD /	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
ACCORD /	BODY ELECTRICAL/Door Locks	MFF	Read codes	
ACCORD /	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
ACCORD /	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
ACCORD /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
ACCORD /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
ACCORD /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
ACCORD /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
ACCORD /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
ACCORD /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
ACCORD /	BODY ELECTRICAL/e-Call	MFF	Read codes	
ACCORD /	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
ACCORD /	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
ACCORD /	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	

ACCORD	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
ACCORD	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ACCORD	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ACCORD	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ACCORD	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ACCORD	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ACCORD	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ACCORD	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ACCORD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ACCORD	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ACCORD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ACCORD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ACCORD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ACCORD	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ACCORD	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door

ACCORD	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ACCORD	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ACCORD	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
ACCORD	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ACCORD	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ACCORD	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ACCORD	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Security	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ACCORD	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
ACCORD	/	BODY ELECTRICAL/Security	MFF	History Data	
ACCORD	/	BODY ELECTRICAL/Security	MFF	History Clear	
ACCORD	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ACCORD	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ACCORD	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACCORD	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ACCORD	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACCORD	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ACCORD	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
ACCORD	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ACCORD	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ACCORD	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ACCORD	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
ACCORD	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ACCORD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
ACCORD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ACCORD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ACCORD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
ACCORD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ACCORD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ACCORD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ACCORD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ACCORD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ACCORD	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ACCORD	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ACCORD	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ACCORD	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
ACCORD	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ACCORD	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
ACCORD	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ACCORD	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ACCORD	/	Collision Mitigation Brake Control System (CMBS/CM5 M2E)		Read ECU Information	



ACCORD /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read codes	
ACCORD /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Erase Codes	
ACCORD /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read Freeze Frame Data	
ACCORD /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read Live Data	
ACCORD /	Collision Mitigation Brake Control System (CMBS/CM# M2E	CMBS (CMS) ACTIVATION HISTORY	
ACCORD /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Miscellaneous Test	RADAR AIMING
ACCORD /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Miscellaneous Test	CMBS Brake
ACCORD /	Promise Automatic Transmission Control System (CVT M1B	Read ECU Information	
ACCORD /	Promise Automatic Transmission Control System (CVT M1B	Read codes	
ACCORD /	Promise Automatic Transmission Control System (CVT M1B	Erase Codes	
ACCORD /	Promise Automatic Transmission Control System (CVT M1B	Read Freeze Frame Data	
ACCORD /	Promise Automatic Transmission Control System (CVT M1B	Read Live Data	
ACCORD /	Promise Automatic Transmission Control System (CVT M1B	ECMPCMC Reset	
ACCORD /	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD /	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Solenoid Tests
ACCORD /	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Electrical Oil Pump Activation
ACCORD /	Promise Automatic Transmission Control System (CVT M33	Read ECU Information	
ACCORD /	Promise Automatic Transmission Control System (CVT M33	Read codes	
ACCORD /	Promise Automatic Transmission Control System (CVT M33	Erase Codes	
ACCORD /	Promise Automatic Transmission Control System (CVT M33	Read Freeze Frame Data	
ACCORD /	Promise Automatic Transmission Control System (CVT M33	Read Live Data	
ACCORD /	Promise Automatic Transmission Control System (CVT M33	ECMPCMC Reset	
ACCORD /	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
ACCORD /	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
ACCORD /	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
ACCORD /	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	Read codes	
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	ECMPCMC Reset	
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
ACCORD /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
ACCORD /	DBW M34	Read ECU Information	
ACCORD /	DBW M34	Read codes	
ACCORD /	DBW M34	Erase Codes	
ACCORD /	DBW M34	Read Freeze Frame Data	
ACCORD /	DBW M34	Read Live Data	
ACCORD /	DBW M34	Inspection	Idle Speed Adjust
ACCORD /	DBW M34	Inspection	Throttle Test
ACCORD /	DBW M34	ECM Reset	
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Read codes	
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
ACCORD /	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
ACCORD /	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
ACCORD /	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
ACCORD /	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
ACCORD /	Diesel Engine Control System (DIESEL) M37	Read codes	
ACCORD /	Diesel Engine Control System (DIESEL) M37	Erase Codes	
ACCORD /	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
ACCORD /	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
ACCORD /	Diesel Engine Control System (DIESEL) M37	Read Live Data	
ACCORD /	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
ACCORD /	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
ACCORD /	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
ACCORD /	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
ACCORD /	Diesel Engine Control System (DIESEL) M85	Read codes	
ACCORD /	Diesel Engine Control System (DIESEL) M85	Erase Codes	
ACCORD /	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
ACCORD /	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
ACCORD /	Diesel Engine Control System (DIESEL) M85	Read Live Data	
ACCORD /	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
ACCORD /	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
ACCORD /	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
ACCORD /	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off

ACCORD	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
ACCORD	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
ACCORD	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
ACCORD	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
ACCORD	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
ACCORD	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
ACCORD	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
ACCORD	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
ACCORD	/	Capacitor Control System (EDLC)	M12	Read codes	
ACCORD	/	Capacitor Control System (EDLC)	M12	Erase Codes	
ACCORD	/	Capacitor Control System (EDLC)	M12	Read Live Data	
ACCORD	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
ACCORD	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
ACCORD	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
ACCORD	/	Electronic Brake Control System (EPB)	M1F	Read codes	
ACCORD	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
ACCORD	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
ACCORD	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
ACCORD	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
ACCORD	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
ACCORD	/	Electronic Brake Control System (EPB)	M3E	Read codes	
ACCORD	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
ACCORD	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
ACCORD	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
ACCORD	/	Electric Powertrain / IMA	M66	Read ECU Information	
ACCORD	/	Electric Powertrain / IMA	M66	Read codes	
ACCORD	/	Electric Powertrain / IMA	M66	Erase Codes	
ACCORD	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
ACCORD	/	Electric Powertrain / IMA	M66	Read Live Data	
ACCORD	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
ACCORD	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
ACCORD	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
ACCORD	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ACCORD	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ACCORD	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
ACCORD	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ACCORD	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ACCORD	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ACCORD	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ACCORD	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ACCORD	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ACCORD	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
ACCORD	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ACCORD	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ACCORD	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ACCORD	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ACCORD	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ACCORD	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ACCORD	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ACCORD	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ACCORD	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ACCORD	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ACCORD	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ACCORD	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ACCORD	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ACCORD	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ACCORD	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ACCORD	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
ACCORD	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ACCORD	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ACCORD	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ACCORD	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ACCORD	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ACCORD	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
ACCORD	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ACCORD	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ACCORD	/	New energy battery (EV)	M44	Read ECU Information	
ACCORD	/	New energy battery (EV)	M44	Read codes	
ACCORD	/	New energy battery (EV)	M44	Erase Codes	
ACCORD	/	New energy battery (EV)	M44	Read Freeze Frame Data	
ACCORD	/	New energy battery (EV)	M44	Read Live Data	
ACCORD	/	New energy battery (EV)	M44	Inspection	
ACCORD	/	New energy battery (EV)	M44	Adjustment	
ACCORD	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
ACCORD	/	Electronic vacuum pump (EVPS)	M21	Read codes	
ACCORD	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ACCORD	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ACCORD	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ACCORD	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ACCORD	/	Electronic vacuum pump (EVPS)	M22	Read codes	
ACCORD	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ACCORD	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ACCORD	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ACCORD	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ACCORD	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ACCORD	/	FCW LDW	M4E	Read ECU Information	
ACCORD	/	FCW LDW	M4E	Read codes	
ACCORD	/	FCW LDW	M4E	Erase Codes	
ACCORD	/	FCW LDW	M4E	Read Live Data	
ACCORD	/	FCW LDW	M4E	Function Test	FCW Drive
ACCORD	/	FCW LDW	M4E	Function Test	Left side lane departure warning
ACCORD	/	FCW LDW	M4E	Function Test	Right side lane departure warning
ACCORD	/	FCW LDW	M4E	Function Test	Indicator Drive

ACCORD	/	FCW LDW	M4E	Adjustment	
ACCORD	/	Instrument Display System (GAUGE)	M2C	Read codes	
ACCORD	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
ACCORD	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
ACCORD	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ACCORD	/	Anti-lock brake control system (ABS)	M01	Read codes	
ACCORD	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
ACCORD	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ACCORD	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
ACCORD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ACCORD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ACCORD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ACCORD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ACCORD	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ACCORD	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ACCORD	/	Anti-lock brake control system (ABS)	M02	Read codes	
ACCORD	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
ACCORD	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ACCORD	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
ACCORD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ACCORD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
ACCORD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ACCORD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ACCORD	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
ACCORD	/	Anti-lock brake control system (ABS)	M03	Read codes	
ACCORD	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
ACCORD	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
ACCORD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ACCORD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ACCORD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ACCORD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ACCORD	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
ACCORD	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ACCORD	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ACCORD	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ACCORD	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ACCORD	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ACCORD	/	Anti-lock brake control system (ABS)	M19	Read codes	
ACCORD	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
ACCORD	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
ACCORD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ACCORD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ACCORD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
ACCORD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ACCORD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ACCORD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ACCORD	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ACCORD	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ACCORD	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
ACCORD	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ACCORD	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
ACCORD	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
ACCORD	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ACCORD	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ACCORD	/	Intelligent Parking Control System (SPS)	M9B	Customize	
ACCORD	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ACCORD	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ACCORD	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ACCORD	/	Hydraulic booster control system (HBS)	M5F	Read codes	
ACCORD	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ACCORD	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ACCORD	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ACCORD	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ACCORD	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ACCORD	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ACCORD	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ACCORD	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ACCORD	/	IMA	M63	Read ECU Information	
ACCORD	/	IMA	M63	Read codes	
ACCORD	/	IMA	M63	Erase Codes	
ACCORD	/	IMA	M63	Read Freeze Frame Data	
ACCORD	/	IMA	M63	Read Live Data	
ACCORD	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ACCORD	/	IMA	M63	Adjustment	SOC PRESET
ACCORD	/	IMA	M64	Read ECU Information	
ACCORD	/	IMA	M64	Read codes	
ACCORD	/	IMA	M64	Erase Codes	
ACCORD	/	IMA	M64	Read Freeze Frame Data	

ACCORD	/	IMA	M64	Read Live Data	
ACCORD	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ACCORD	/	IMA	M64	Adjustment	SOC PRESET
ACCORD	/	IMA	M65	Read ECU Information	
ACCORD	/	IMA	M65	Read codes	
ACCORD	/	IMA	M65	Erase Codes	
ACCORD	/	IMA	M65	Read Freeze Frame Data	
ACCORD	/	IMA	M65	Read Live Data	
ACCORD	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
ACCORD	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ACCORD	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ACCORD	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ACCORD	/	Intake Sounder Control System (ISC)	M6D	Read codes	
ACCORD	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ACCORD	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ACCORD	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ACCORD	/	Night Vision System (INVS)	0XB1	Read ECU Information	
ACCORD	/	Night Vision System (INVS)	0XB1	Read codes	
ACCORD	/	Night Vision System (INVS)	0XB1	Erase Codes	
ACCORD	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ACCORD	/	Night Vision System (INVS)	0XB1	Read Live Data	
ACCORD	/	Night Vision System (INVS)	0XB1	Adjustment	
ACCORD	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ACCORD	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ACCORD	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ACCORD	/	i-SHIFT	0XB0	Read ECU Information	
ACCORD	/	i-SHIFT	0XB0	Read codes	
ACCORD	/	i-SHIFT	0XB0	Erase Codes	
ACCORD	/	i-SHIFT	0XB0	Read Live Data	
ACCORD	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ACCORD	/	Keyless Entry Control System (KAS)	M99	Read codes	
ACCORD	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
ACCORD	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
ACCORD	/	Keyless Entry Control System (KAS)	M99	Self Check	
ACCORD	/	Keyless Entry Control System (KAS)	M99	History Data	
ACCORD	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ACCORD	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ACCORD	/	Keyless Entry Control System (KAS)	M99	Registration	
ACCORD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ACCORD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ACCORD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
ACCORD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
ACCORD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
ACCORD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING

ACCORD	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	VIDEO OUTPUT
ACCORD	/	Electronically assisted lane keeping control system (Lk M71	Read ECU Information	
ACCORD	/	Electronically assisted lane keeping control system (Lk M71	Read codes	
ACCORD	/	Electronically assisted lane keeping control system (Lk M71	Erase Codes	
ACCORD	/	Electronically assisted lane keeping control system (Lk M71	Read Freeze Frame Data	
ACCORD	/	Electronically assisted lane keeping control system (Lk M71	Read Live Data	
ACCORD	/	Electronically assisted lane keeping control system (Lk M71	Adjustment	STEERING REWRITE
ACCORD	/	Electronically assisted lane keeping control system (Lk M71	Customize	LDW OFFSET
ACCORD	/	Electronically assisted lane keeping control system (Lk M71	Customize	GAIN ADJUST
ACCORD	/	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
ACCORD	/	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
ACCORD	/	Management ECU Module (ME) M74	Read ECU Information	
ACCORD	/	Management ECU Module (ME) M74	Read codes	
ACCORD	/	Management ECU Module (ME) M74	Erase Codes	
ACCORD	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
ACCORD	/	Management ECU Module (ME) M74	Read Live Data	
ACCORD	/	Multi-view camera and parking assist system (MVC/P, M26	Read ECU Information	
ACCORD	/	Multi-view camera and parking assist system (MVC/P, M26	Read codes	
ACCORD	/	Multi-view camera and parking assist system (MVC/P, M26	Erase Codes	
ACCORD	/	Multi-view camera and parking assist system (MVC/P, M26	Read Live Data	
ACCORD	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
ACCORD	/	Multi-view camera system (MVCS) M7A	Read codes	
ACCORD	/	Multi-view camera system (MVCS) M7A	Erase Codes	
ACCORD	/	Multi-view camera system (MVCS) M7A	Read Live Data	
ACCORD	/	Multi-view camera system (MVCS) M7A	Customization	
ACCORD	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
ACCORD	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
ACCORD	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
ACCORD	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
ACCORD	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
ACCORD	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
ACCORD	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
ACCORD	/	Power Control Unit (PCU) M83	Read ECU Information	
ACCORD	/	Power Control Unit (PCU) M83	Read codes	
ACCORD	/	Power Control Unit (PCU) M83	Erase Codes	
ACCORD	/	Power Control Unit (PCU) M83	Read Live Data	
ACCORD	/	Power Control Unit (PCU) M83	Self Check	
ACCORD	/	Power Control Unit (PCU) M83	History Data	
ACCORD	/	Engine Control System (PGM-FI) M23	Read ECU Information	
ACCORD	/	Engine Control System (PGM-FI) M23	Read codes	
ACCORD	/	Engine Control System (PGM-FI) M23	Erase Codes	
ACCORD	/	Engine Control System (PGM-FI) M23	Readiness Codes	
ACCORD	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
ACCORD	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
ACCORD	/	Engine Control System (PGM-FI) M23	Read Live Data	
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ACCORD	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ACCORD	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
ACCORD	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ACCORD	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
ACCORD	/	Engine Control System (PGM-FI) M23	VIN CHECK	
ACCORD	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
ACCORD	/	Engine Control System (PGM-FI) M50	Read ECU Information	
ACCORD	/	Engine Control System (PGM-FI) M50	Read codes	
ACCORD	/	Engine Control System (PGM-FI) M50	Erase Codes	
ACCORD	/	Engine Control System (PGM-FI) M50	Readiness Codes	
ACCORD	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
ACCORD	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
ACCORD	/	Engine Control System (PGM-FI) M50	Read Live Data	
ACCORD	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
ACCORD	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
ACCORD	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
ACCORD	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
ACCORD	/	Engine Control System (PGM-FI) M50	VIN CHECK	
ACCORD	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
ACCORD	/	Engine Control System (PGM-FI) M86	Read ECU Information	
ACCORD	/	Engine Control System (PGM-FI) M86	Read codes	
ACCORD	/	Engine Control System (PGM-FI) M86	Erase Codes	
ACCORD	/	Engine Control System (PGM-FI) M86	Readiness Codes	
ACCORD	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
ACCORD	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
ACCORD	/	Engine Control System (PGM-FI) M86	Read Live Data	
ACCORD	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
ACCORD	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
ACCORD	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
ACCORD	/	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
ACCORD	/	Engine Control System (PGM-FI) M86	Inspection	EGR TEST

ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	ACM
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ACCORD /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ACCORD /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ACCORD /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ACCORD /	Engine Control System (PGM-FI)	M86	VIN CHECK	
ACCORD /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ACCORD /	Four-wheel precision steering control system (PAWSC M96		Read codes	
ACCORD /	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
ACCORD /	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
ACCORD /	PSR	M27	Read ECU Information	
ACCORD /	PSR	M27	Read codes	
ACCORD /	PSR	M27	Erase Codes	
ACCORD /	PSR	M27	Read Live Data	
ACCORD /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ACCORD /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
ACCORD /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ACCORD /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ACCORD /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
ACCORD /	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
ACCORD /	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
ACCORD /	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
ACCORD /	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
ACCORD /	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
ACCORD /	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
ACCORD /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
ACCORD /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
ACCORD /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
ACCORD /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
ACCORD /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
ACCORD /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
ACCORD /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
ACCORD /	Remote starter (RS)	M90	System Check	
ACCORD /	Remote starter (RS)	M90	HISTORY	
ACCORD /	Remote starter (RS)	M90	Registration	
ACCORD /	Seat load cell (SWS)	M6F	Read ECU Information	
ACCORD /	Seat load cell (SWS)	M6F	Read codes	
ACCORD /	Seat load cell (SWS)	M6F	Erase Codes	
ACCORD /	Seat load cell (SWS)	M6F	Read Live Data	
ACCORD /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
ACCORD /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
ACCORD /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
ACCORD /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
ACCORD /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
ACCORD /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
ACCORD /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
ACCORD /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ACCORD /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
ACCORD /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
ACCORD /	Groove track drive unit (SLOT ECU)	M98	Read codes	
ACCORD /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
ACCORD /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
ACCORD /	Groove track drive unit (SLOT ECU)	M98	Self Check	
ACCORD /	Groove track drive unit (SLOT ECU)	M98	History Data	
ACCORD /	Groove track drive unit (SLOT ECU)	M98	System Information	
ACCORD /	Airbag Control System (SRS)	M9F	Read ECU Information	
ACCORD /	Airbag Control System (SRS)	M9F	Read codes	

ACCORD	/	Airbag Control System (SRS)	M9F	Erase Codes	
ACCORD	/	Airbag Control System (SRS)	M9F	Read Live Data	
ACCORD	/	Airbag Control System (SRS)	MA0	Read ECU Information	
ACCORD	/	Airbag Control System (SRS)	MA0	Read codes	
ACCORD	/	Airbag Control System (SRS)	MA0	Erase Codes	
ACCORD	/	Airbag Control System (SRS)	MA0	Read Live Data	
ACCORD	/	Airbag Control System (SRS)	MA1	Read ECU Information	
ACCORD	/	Airbag Control System (SRS)	MA1	Read codes	
ACCORD	/	Airbag Control System (SRS)	MA1	Erase Codes	
ACCORD	/	Airbag Control System (SRS)	MA1	Read Live Data	
ACCORD	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
ACCORD	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ACCORD	/	Airbag Control System (SRS)	M2A	Read codes	
ACCORD	/	Airbag Control System (SRS)	M2A	Erase Codes	
ACCORD	/	Airbag Control System (SRS)	M2A	Read Live Data	
ACCORD	/	Airbag Control System (SRS)	M9C	Read ECU Information	
ACCORD	/	Airbag Control System (SRS)	M9C	Read codes	
ACCORD	/	Airbag Control System (SRS)	M9C	Erase Codes	
ACCORD	/	Airbag Control System (SRS)	M9C	Read Live Data	
ACCORD	/	Airbag Control System (SRS)	M9D	Read ECU Information	
ACCORD	/	Airbag Control System (SRS)	M9D	Read codes	
ACCORD	/	Airbag Control System (SRS)	M9D	Erase Codes	
ACCORD	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
ACCORD	/	Airbag Control System (SRS)	M9D	Read Live Data	
ACCORD	/	Airbag Control System (SRS)	M9D	Parameter Information	
ACCORD	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
ACCORD	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
ACCORD	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
ACCORD	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
ACCORD	/	Airbag Control System (SRS)	M9D	Function Test	
ACCORD	/	Airbag Control System (SRS)	M9D	System Information	
ACCORD	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
ACCORD	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
ACCORD	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
ACCORD	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
ACCORD	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ACCORD	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ACCORD	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ACCORD	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ACCORD	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ACCORD	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ACCORD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ACCORD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ACCORD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ACCORD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ACCORD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
ACCORD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ACCORD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ACCORD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ACCORD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
ACCORD CROSSTO	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ACCORD CROSSTO	/	Four-wheel steering control system (4WS)	M52	Read codes	
ACCORD CROSSTO	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
ACCORD CROSSTO	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ACCORD CROSSTO	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
ACCORD CROSSTO	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ACCORD CROSSTO	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ACCORD CROSSTO	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
ACCORD CROSSTO	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ACCORD CROSSTO	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ACCORD CROSSTO	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	Read codes	
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	Erase Codes	
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	Read Live Data	
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M3B	Read codes	
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M3B	Erase Codes	
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
ACCORD CROSSTO	/	Automatic shift control system (A/T)	M3B	Read Live Data	

ACCORD CROSSTO /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ACCORD CROSSTO /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ACCORD CROSSTO /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
ACCORD CROSSTO /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ACCORD CROSSTO /	Automatic shift control system (A/T)	M3C	Read ECU Information	
ACCORD CROSSTO /	Automatic shift control system (A/T)	M3C	Read codes	
ACCORD CROSSTO /	Automatic shift control system (A/T)	M3C	Erase Codes	
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Read ECU Information	
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Read codes	
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Erase Codes	
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	ECMPCMC Reset	
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Read Live Data	
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACCORD CROSSTO /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
ACCORD CROSSTO /	Automatic shift control system (A/T)	M82	Read ECU Information	
ACCORD CROSSTO /	Automatic shift control system (A/T)	M82	Read codes	
ACCORD CROSSTO /	Automatic shift control system (A/T)	M82	Erase Codes	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
ACCORD CROSSTO /	Active Engine Control Support System (ACM)	M06	Read ECU Information	
ACCORD CROSSTO /	Active Engine Control Support System (ACM)	M06	Read codes	
ACCORD CROSSTO /	Active Engine Control Support System (ACM)	M06	Erase Codes	
ACCORD CROSSTO /	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
ACCORD CROSSTO /	Active Engine Control Support System (ACM)	M06	Read Live Data	
ACCORD CROSSTO /	Active Engine Control Support System (ACM)	M06	ACM Reset	
ACCORD CROSSTO /	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
ACCORD CROSSTO /	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
ACCORD CROSSTO /	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ACCORD CROSSTO /	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
ACCORD CROSSTO /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
ACCORD CROSSTO /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
ACCORD CROSSTO /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
ACCORD CROSSTO /	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read ECU Information	
ACCORD CROSSTO /	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read codes	
ACCORD CROSSTO /	Active / Automatic Shock Absorber Control System (A MOD	MOD	Erase Codes	
ACCORD CROSSTO /	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read Freeze Frame Data	
ACCORD CROSSTO /	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read Live Data	
ACCORD CROSSTO /	Active / Automatic Shock Absorber Control System (A MOD	MOD	Function Test	Damper Force Operation Test
ACCORD CROSSTO /	Active / Automatic Shock Absorber Control System (A MOD	MOD	Adjustment	Damper Stroke Calibration
ACCORD CROSSTO /	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
ACCORD CROSSTO /	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
ACCORD CROSSTO /	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
ACCORD CROSSTO /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
ACCORD CROSSTO /	Transmission Control System (AT)	M18	Read ECU Information	
ACCORD CROSSTO /	Transmission Control System (AT)	M18	Read codes	
ACCORD CROSSTO /	Transmission Control System (AT)	M18	Erase Codes	
ACCORD CROSSTO /	Transmission Control System (AT)	M18	Read Freeze Frame Data	
ACCORD CROSSTO /	Transmission Control System (AT)	M18	Read Live Data	
ACCORD CROSSTO /	Transmission Control System (AT)	M18	Adjustment	
ACCORD CROSSTO /	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
ACCORD CROSSTO /	Active Torque Converter Control System (ATTS)	M0E	Read codes	
ACCORD CROSSTO /	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	



ACCORD CROSSTO /	Active Torque Converter Control System (ATTS)	MOE	Read Freeze Frame Data	
ACCORD CROSSTO /	Active Torque Converter Control System (ATTS)	MOE	Read Live Data	
ACCORD CROSSTO /	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
ACCORD CROSSTO /	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	STEERING ANGLE
ACCORD CROSSTO /	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ACCORD CROSSTO /	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ALL SENSORS
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
ACCORD CROSSTO /	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
ACCORD CROSSTO /	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
ACCORD CROSSTO /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Function Test	Oncoming Vehicle Detection
ACCORD CROSSTO /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Function Test	Preceding Vehicle Detection
ACCORD CROSSTO /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
ACCORD CROSSTO /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
ACCORD CROSSTO /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Reset Operation
ACCORD CROSSTO /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Returning Operation
ACCORD CROSSTO /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Automatic Returning Distance
ACCORD CROSSTO /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Manual Returning Time
ACCORD CROSSTO /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Reset to default
ACCORD CROSSTO /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
ACCORD CROSSTO /	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
ACCORD CROSSTO /	BODY ELECTRICAL/Door Locks	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
ACCORD CROSSTO /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
ACCORD CROSSTO /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
ACCORD CROSSTO /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
ACCORD CROSSTO /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
ACCORD CROSSTO /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
ACCORD CROSSTO /	BODY ELECTRICAL/e-Call	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
ACCORD CROSSTO /	BODY ELECTRICAL/Front Panel	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
ACCORD CROSSTO /	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)

ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ACCORD CROSSTO /	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ACCORD CROSSTO /	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ACCORD CROSSTO /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ACCORD CROSSTO /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ACCORD CROSSTO /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ACCORD CROSSTO /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ACCORD CROSSTO /	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ACCORD CROSSTO /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ACCORD CROSSTO /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ACCORD CROSSTO /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ACCORD CROSSTO /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ACCORD CROSSTO /	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ACCORD CROSSTO /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
ACCORD CROSSTO /	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ACCORD CROSSTO /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ACCORD CROSSTO /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
ACCORD CROSSTO /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ACCORD CROSSTO /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ACCORD CROSSTO /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ACCORD CROSSTO /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Security	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Security	MFF	Erase Codes	

ACCORD CROSSTO /	BODY ELECTRICAL/Security	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ACCORD CROSSTO /	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
ACCORD CROSSTO /	BODY ELECTRICAL/Security	MFF	History Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Security	MFF	History Clear	
ACCORD CROSSTO /	BODY ELECTRICAL/Telematics	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ACCORD CROSSTO /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ACCORD CROSSTO /	BODY ELECTRICAL/Wiper	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACCORD CROSSTO /	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ACCORD CROSSTO /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACCORD CROSSTO /	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP Security	MFF	History Data	
ACCORD CROSSTO /	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ACCORD CROSSTO /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
ACCORD CROSSTO /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ACCORD CROSSTO /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ACCORD CROSSTO /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
ACCORD CROSSTO /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ACCORD CROSSTO /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ACCORD CROSSTO /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ACCORD CROSSTO /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ACCORD CROSSTO /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ACCORD CROSSTO /	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ACCORD CROSSTO /	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ACCORD CROSSTO /	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ACCORD CROSSTO /	Urban Active Brake Control System (CBAS)	M32	Read codes	
ACCORD CROSSTO /	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ACCORD CROSSTO /	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
ACCORD CROSSTO /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ACCORD CROSSTO /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ACCORD CROSSTO /	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	Read ECU Information	
ACCORD CROSSTO /	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	Read codes	
ACCORD CROSSTO /	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	Erase Codes	
ACCORD CROSSTO /	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	Read Freeze Frame Data	
ACCORD CROSSTO /	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	Read Live Data	
ACCORD CROSSTO /	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
ACCORD CROSSTO /	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	Miscellaneous Test	RADAR AIMING
ACCORD CROSSTO /	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	Miscellaneous Test	CMBS Brake
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
ACCORD CROSSTO /	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	



ACCORD CROSSTO /	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ACCORD CROSSTO /	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ACCORD CROSSTO /	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
ACCORD CROSSTO /	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ACCORD CROSSTO /	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ACCORD CROSSTO /	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ACCORD CROSSTO /	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ACCORD CROSSTO /	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ACCORD CROSSTO /	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M20	Read codes	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ACCORD CROSSTO /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ACCORD CROSSTO /	New energy battery (EV)	M44	Read ECU Information	
ACCORD CROSSTO /	New energy battery (EV)	M44	Read codes	
ACCORD CROSSTO /	New energy battery (EV)	M44	Erase Codes	
ACCORD CROSSTO /	New energy battery (EV)	M44	Read Freeze Frame Data	
ACCORD CROSSTO /	New energy battery (EV)	M44	Read Live Data	
ACCORD CROSSTO /	New energy battery (EV)	M44	Inspection	
ACCORD CROSSTO /	New energy battery (EV)	M44	Adjustment	
ACCORD CROSSTO /	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
ACCORD CROSSTO /	Electronic vacuum pump (EVPS)	M21	Read codes	
ACCORD CROSSTO /	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ACCORD CROSSTO /	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ACCORD CROSSTO /	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ACCORD CROSSTO /	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ACCORD CROSSTO /	Electronic vacuum pump (EVPS)	M22	Read codes	
ACCORD CROSSTO /	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ACCORD CROSSTO /	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ACCORD CROSSTO /	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ACCORD CROSSTO /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ACCORD CROSSTO /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ACCORD CROSSTO /	FCW LDW	M4E	Read ECU Information	
ACCORD CROSSTO /	FCW LDW	M4E	Read codes	
ACCORD CROSSTO /	FCW LDW	M4E	Erase Codes	
ACCORD CROSSTO /	FCW LDW	M4E	Read Live Data	
ACCORD CROSSTO /	FCW LDW	M4E	Function Test	FCW Drive
ACCORD CROSSTO /	FCW LDW	M4E	Function Test	Left side lane departure warning
ACCORD CROSSTO /	FCW LDW	M4E	Function Test	Right side lane departure warning
ACCORD CROSSTO /	FCW LDW	M4E	Function Test	Indicator Drive
ACCORD CROSSTO /	FCW LDW	M4E	Adjustment	
ACCORD CROSSTO /	Instrument Display System (GAUGE)	M2C	Read codes	
ACCORD CROSSTO /	Instrument Display System (GAUGE)	M2C	Erase Codes	
ACCORD CROSSTO /	Instrument Display System (GAUGE)	M2C	Read Live Data	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Read codes	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Erase Codes	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Read Live Data	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Read codes	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Erase Codes	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Read Live Data	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Read ECU Information	

ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Read codes	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Erase Codes	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Read Live Data	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Pulser Test	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Read codes	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Erase Codes	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Read Live Data	
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ACCORD CROSSTO /	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
ACCORD CROSSTO /	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ACCORD CROSSTO /	Intelligent Parking Control System (SPS)	M9B	Read codes	
ACCORD CROSSTO /	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
ACCORD CROSSTO /	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ACCORD CROSSTO /	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ACCORD CROSSTO /	Intelligent Parking Control System (SPS)	M9B	Customize	
ACCORD CROSSTO /	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ACCORD CROSSTO /	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ACCORD CROSSTO /	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ACCORD CROSSTO /	Hydraulic booster control system (HBS)	M5F	Read codes	
ACCORD CROSSTO /	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ACCORD CROSSTO /	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ACCORD CROSSTO /	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ACCORD CROSSTO /	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ACCORD CROSSTO /	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ACCORD CROSSTO /	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ACCORD CROSSTO /	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ACCORD CROSSTO /	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ACCORD CROSSTO /	IMA	M63	Read ECU Information	
ACCORD CROSSTO /	IMA	M63	Read codes	
ACCORD CROSSTO /	IMA	M63	Erase Codes	
ACCORD CROSSTO /	IMA	M63	Read Freeze Frame Data	
ACCORD CROSSTO /	IMA	M63	Read Live Data	
ACCORD CROSSTO /	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ACCORD CROSSTO /	IMA	M63	Adjustment	SOC PRESET
ACCORD CROSSTO /	IMA	M64	Read ECU Information	
ACCORD CROSSTO /	IMA	M64	Read codes	
ACCORD CROSSTO /	IMA	M64	Erase Codes	
ACCORD CROSSTO /	IMA	M64	Read Freeze Frame Data	
ACCORD CROSSTO /	IMA	M64	Read Live Data	
ACCORD CROSSTO /	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ACCORD CROSSTO /	IMA	M64	Adjustment	SOC PRESET
ACCORD CROSSTO /	IMA	M65	Read ECU Information	
ACCORD CROSSTO /	IMA	M65	Read codes	
ACCORD CROSSTO /	IMA	M65	Erase Codes	
ACCORD CROSSTO /	IMA	M65	Read Freeze Frame Data	
ACCORD CROSSTO /	IMA	M65	Read Live Data	
ACCORD CROSSTO /	IMA	M65	Function Test	IPU MODULE FAN DRIVE
ACCORD CROSSTO /	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ACCORD CROSSTO /	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ACCORD CROSSTO /	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ACCORD CROSSTO /	Intake Sounder Control System (ISC)	M6D	Read codes	
ACCORD CROSSTO /	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ACCORD CROSSTO /	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ACCORD CROSSTO /	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ACCORD CROSSTO /	Night Vision System (INVS)	0XB1	Read ECU Information	
ACCORD CROSSTO /	Night Vision System (INVS)	0XB1	Read codes	
ACCORD CROSSTO /	Night Vision System (INVS)	0XB1	Erase Codes	
ACCORD CROSSTO /	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ACCORD CROSSTO /	Night Vision System (INVS)	0XB1	Read Live Data	
ACCORD CROSSTO /	Night Vision System (INVS)	0XB1	Adjustment	
ACCORD CROSSTO /	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ACCORD CROSSTO /	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ACCORD CROSSTO /	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ACCORD CROSSTO /	i-SHIFT	0XB0	Read ECU Information	
ACCORD CROSSTO /	i-SHIFT	0XB0	Read codes	
ACCORD CROSSTO /	i-SHIFT	0XB0	Erase Codes	
ACCORD CROSSTO /	i-SHIFT	0XB0	Read Live Data	
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Read codes	
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Erase Codes	

ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Read Live Data	
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Self Check	
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	History Data	
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ACCORD CROSSTO /	Keyless Entry Control System (KAS)	M99	Registration	
ACCORD CROSSTO /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ACCORD CROSSTO /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ACCORD CROSSTO /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
ACCORD CROSSTO /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
ACCORD CROSSTO /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
ACCORD CROSSTO /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
ACCORD CROSSTO /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
ACCORD CROSSTO /	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
ACCORD CROSSTO /	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
ACCORD CROSSTO /	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
ACCORD CROSSTO /	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
ACCORD CROSSTO /	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
ACCORD CROSSTO /	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
ACCORD CROSSTO /	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
ACCORD CROSSTO /	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
ACCORD CROSSTO /	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
ACCORD CROSSTO /	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
ACCORD CROSSTO /	Management ECU Module (ME)	M74	Read ECU Information	
ACCORD CROSSTO /	Management ECU Module (ME)	M74	Read codes	
ACCORD CROSSTO /	Management ECU Module (ME)	M74	Erase Codes	
ACCORD CROSSTO /	Management ECU Module (ME)	M74	Read Freeze Frame Data	
ACCORD CROSSTO /	Management ECU Module (ME)	M74	Read Live Data	
ACCORD CROSSTO /	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
ACCORD CROSSTO /	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
ACCORD CROSSTO /	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
ACCORD CROSSTO /	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
ACCORD CROSSTO /	Multi-view camera system (MVCS)	M7A	Read ECU Information	
ACCORD CROSSTO /	Multi-view camera system (MVCS)	M7A	Read codes	
ACCORD CROSSTO /	Multi-view camera system (MVCS)	M7A	Erase Codes	
ACCORD CROSSTO /	Multi-view camera system (MVCS)	M7A	Read Live Data	
ACCORD CROSSTO /	Multi-view camera system (MVCS)	M7A	Customization	
ACCORD CROSSTO /	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
ACCORD CROSSTO /	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
ACCORD CROSSTO /	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
ACCORD CROSSTO /	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
ACCORD CROSSTO /	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
ACCORD CROSSTO /	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
ACCORD CROSSTO /	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function

ACCORD CROSSTO /	Power Control Unit (PCU)	M83	Read ECU Information	
ACCORD CROSSTO /	Power Control Unit (PCU)	M83	Read codes	
ACCORD CROSSTO /	Power Control Unit (PCU)	M83	Erase Codes	
ACCORD CROSSTO /	Power Control Unit (PCU)	M83	Read Live Data	
ACCORD CROSSTO /	Power Control Unit (PCU)	M83	Self Check	
ACCORD CROSSTO /	Power Control Unit (PCU)	M83	History Data	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Read ECU Information	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Read codes	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Erase Codes	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Readiness Codes	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Read Live Data	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	VIN CHECK	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	Read ECU Information	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	Read codes	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	Erase Codes	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	Readiness Codes	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	Read Live Data	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	VIN CHECK	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Read ECU Information	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Read codes	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Erase Codes	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Readiness Codes	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Read Live Data	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	ACM
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	VIN CHECK	
ACCORD CROSSTO /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ACCORD CROSSTO /	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
ACCORD CROSSTO /	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
ACCORD CROSSTO /	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	
ACCORD CROSSTO /	PSR	M27	Read ECU Information	
ACCORD CROSSTO /	PSR	M27	Read codes	
ACCORD CROSSTO /	PSR	M27	Erase Codes	
ACCORD CROSSTO /	PSR	M27	Read Live Data	
ACCORD CROSSTO /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ACCORD CROSSTO /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
ACCORD CROSSTO /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ACCORD CROSSTO /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ACCORD CROSSTO /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION



ACCORD CROSSTO /	Real-time four-wheel drive / intelligent control drive s M3A	Read codes	
ACCORD CROSSTO /	Real-time four-wheel drive / intelligent control drive s M3A	Erase Codes	
ACCORD CROSSTO /	Real-time four-wheel drive / intelligent control drive s M3A	Read Freeze Frame Data	
ACCORD CROSSTO /	Real-time four-wheel drive / intelligent control drive s M3A	Read Live Data	
ACCORD CROSSTO /	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	E-DPS Control Module Replacement
ACCORD CROSSTO /	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	Longitudinal G Sensor Learning
ACCORD CROSSTO /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read ECU Information	
ACCORD CROSSTO /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read codes	
ACCORD CROSSTO /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Erase Codes	
ACCORD CROSSTO /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read Live Data	
ACCORD CROSSTO /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Adjustment	
ACCORD CROSSTO /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test	Monitor and Alarm
ACCORD CROSSTO /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test	Display Rear Camera output image
ACCORD CROSSTO /	Remote starter (RS) M90	System Check	
ACCORD CROSSTO /	Remote starter (RS) M90	HISTORY	
ACCORD CROSSTO /	Remote starter (RS) M90	Registration	
ACCORD CROSSTO /	Seat load cell (SWS) M6F	Read ECU Information	
ACCORD CROSSTO /	Seat load cell (SWS) M6F	Read codes	
ACCORD CROSSTO /	Seat load cell (SWS) M6F	Erase Codes	
ACCORD CROSSTO /	Seat load cell (SWS) M6F	Read Live Data	
ACCORD CROSSTO /	Seat load cell (SWS) M6F	System Check	SWS DTC CHECK
ACCORD CROSSTO /	Seat load cell (SWS) M6F	System Check	Seat Output Check
ACCORD CROSSTO /	Seat load cell (SWS) M6F	System Check	AFTER A VEHICLE COLLISION
ACCORD CROSSTO /	Seat load cell (SWS) M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
ACCORD CROSSTO /	Seat load cell (SWS) M6F	Adjustment	ODS Unit Initialization
ACCORD CROSSTO /	Seat load cell (SWS) M6F	Adjustment	OPDS Initialization
ACCORD CROSSTO /	Seat load cell (SWS) M6F	Adjustment	SWS Initialization
ACCORD CROSSTO /	Seat load cell (SWS) M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M29	Read ECU Information	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M29	Read codes	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M29	Erase Codes	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M29	Readiness Codes	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M29	Read Freeze Frame Data	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M29	ECM/PCM Reset	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M29	Read Live Data	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M29	Inspection	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M29	Adjustment	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M29	VIN CHECK	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M29	Replace ECM/PCM	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Read ECU Information	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Read codes	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Erase Codes	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Read Freeze Frame Data	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Read Live Data	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Differential Torque	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ACCORD CROSSTO /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M ALL Sensor	
ACCORD CROSSTO /	Groove track drive unit (SLOT ECU) M98	Read ECU Information	
ACCORD CROSSTO /	Groove track drive unit (SLOT ECU) M98	Read codes	
ACCORD CROSSTO /	Groove track drive unit (SLOT ECU) M98	Erase Codes	
ACCORD CROSSTO /	Groove track drive unit (SLOT ECU) M98	Read Live Data	
ACCORD CROSSTO /	Groove track drive unit (SLOT ECU) M98	Self Check	
ACCORD CROSSTO /	Groove track drive unit (SLOT ECU) M98	History Data	
ACCORD CROSSTO /	Groove track drive unit (SLOT ECU) M98	System Information	
ACCORD CROSSTO /	Airbag Control System (SRS) M9F	Read ECU Information	
ACCORD CROSSTO /	Airbag Control System (SRS) M9F	Read codes	
ACCORD CROSSTO /	Airbag Control System (SRS) M9F	Erase Codes	
ACCORD CROSSTO /	Airbag Control System (SRS) M9F	Read Live Data	
ACCORD CROSSTO /	Airbag Control System (SRS) MA0	Read ECU Information	
ACCORD CROSSTO /	Airbag Control System (SRS) MA0	Read codes	
ACCORD CROSSTO /	Airbag Control System (SRS) MA0	Erase Codes	
ACCORD CROSSTO /	Airbag Control System (SRS) MA0	Read Live Data	
ACCORD CROSSTO /	Airbag Control System (SRS) MA1	Read ECU Information	
ACCORD CROSSTO /	Airbag Control System (SRS) MA1	Read codes	
ACCORD CROSSTO /	Airbag Control System (SRS) MA1	Erase Codes	
ACCORD CROSSTO /	Airbag Control System (SRS) MA1	Read Live Data	
ACCORD CROSSTO /	Airbag Control System (SRS) MA1	Miscellaneous Test	OPDS Initialization
ACCORD CROSSTO /	Airbag Control System (SRS) MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ACCORD CROSSTO /	Airbag Control System (SRS) M2A	Read codes	
ACCORD CROSSTO /	Airbag Control System (SRS) M2A	Erase Codes	
ACCORD CROSSTO /	Airbag Control System (SRS) M2A	Read Live Data	
ACCORD CROSSTO /	Airbag Control System (SRS) M9C	Read ECU Information	
ACCORD CROSSTO /	Airbag Control System (SRS) M9C	Read codes	
ACCORD CROSSTO /	Airbag Control System (SRS) M9C	Erase Codes	
ACCORD CROSSTO /	Airbag Control System (SRS) M9C	Read Live Data	
ACCORD CROSSTO /	Airbag Control System (SRS) M9D	Read ECU Information	
ACCORD CROSSTO /	Airbag Control System (SRS) M9D	Read codes	
ACCORD CROSSTO /	Airbag Control System (SRS) M9D	Erase Codes	
ACCORD CROSSTO /	Airbag Control System (SRS) M9D	Read Freeze Frame Data	
ACCORD CROSSTO /	Airbag Control System (SRS) M9D	Read Live Data	
ACCORD CROSSTO /	Airbag Control System (SRS) M9D	Parameter Information	
ACCORD CROSSTO /	Airbag Control System (SRS) M9D	CALIBRATION	ODS Unit Initialization
ACCORD CROSSTO /	Airbag Control System (SRS) M9D	CALIBRATION	OPDS Initialization
ACCORD CROSSTO /	Airbag Control System (SRS) M9D	CALIBRATION	SWS Initialization
ACCORD CROSSTO /	Airbag Control System (SRS) M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
ACCORD CROSSTO /	Airbag Control System (SRS) M9D	Function Test	
ACCORD CROSSTO /	Airbag Control System (SRS) M9D	System Information	
ACCORD CROSSTO /	Variable Valve Timing Control System (SVT) MA2	Read ECU Information	

ACCORD CROSSTO /	Variable Valve Timing Control System (SVT)	MA2	Read codes	
ACCORD CROSSTO /	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
ACCORD CROSSTO /	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
ACCORD CROSSTO /	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ACCORD CROSSTO /	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ACCORD CROSSTO /	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ACCORD CROSSTO /	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ACCORD CROSSTO /	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ACCORD CROSSTO /	Variable Valve Timing Control System (SVT)	MA2	System Information	
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ACCORD CROSSTO /	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ACCORD CROSSTO /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ACCORD CROSSTO /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ACCORD CROSSTO /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ACCORD CROSSTO /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
ACCORD CROSSTO /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ACCORD CROSSTO /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ACCORD CROSSTO /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ACCORD CROSSTO /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
ACCORD DIESEL /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ACCORD DIESEL /	Four-wheel steering control system (4WS)	M52	Read codes	
ACCORD DIESEL /	Four-wheel steering control system (4WS)	M52	Erase Codes	
ACCORD DIESEL /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ACCORD DIESEL /	Four-wheel steering control system (4WS)	M52	Read Live Data	
ACCORD DIESEL /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ACCORD DIESEL /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ACCORD DIESEL /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
ACCORD DIESEL /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ACCORD DIESEL /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ACCORD DIESEL /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	Read ECU Information	
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	Read codes	
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	Erase Codes	
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	Read Live Data	
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ACCORD DIESEL /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
ACCORD DIESEL /	Automatic shift control system (A/T)	M3B	Read ECU Information	
ACCORD DIESEL /	Automatic shift control system (A/T)	M3B	Read codes	
ACCORD DIESEL /	Automatic shift control system (A/T)	M3B	Erase Codes	
ACCORD DIESEL /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ACCORD DIESEL /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
ACCORD DIESEL /	Automatic shift control system (A/T)	M3B	Read Live Data	
ACCORD DIESEL /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ACCORD DIESEL /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ACCORD DIESEL /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
ACCORD DIESEL /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ACCORD DIESEL /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ACCORD DIESEL /	Automatic shift control system (A/T)	M3C	Read ECU Information	
ACCORD DIESEL /	Automatic shift control system (A/T)	M3C	Read codes	
ACCORD DIESEL /	Automatic shift control system (A/T)	M3C	Erase Codes	
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Read ECU Information	
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Read codes	
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Erase Codes	
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	ECMPCM Reset	
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Read Live Data	
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACCORD DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
ACCORD DIESEL /	Automatic shift control system (A/T)	M82	Read ECU Information	
ACCORD DIESEL /	Automatic shift control system (A/T)	M82	Read codes	
ACCORD DIESEL /	Automatic shift control system (A/T)	M82	Erase Codes	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	

ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61	Read Freeze Frame Data	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61	Read Live Data	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	Throttle Opening Angle Test
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 1
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 2
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	LIGHT CHECK
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
ACCORD DIESEL /	Active Engine Control Support System (ACM) M06	Read ECU Information	
ACCORD DIESEL /	Active Engine Control Support System (ACM) M06	Read codes	
ACCORD DIESEL /	Active Engine Control Support System (ACM) M06	Erase Codes	
ACCORD DIESEL /	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
ACCORD DIESEL /	Active Engine Control Support System (ACM) M06	Read Live Data	
ACCORD DIESEL /	Active Engine Control Support System (ACM) M06	ACM Reset	
ACCORD DIESEL /	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
ACCORD DIESEL /	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
ACCORD DIESEL /	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ACCORD DIESEL /	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
ACCORD DIESEL /	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
ACCORD DIESEL /	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
ACCORD DIESEL /	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
ACCORD DIESEL /	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
ACCORD DIESEL /	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
ACCORD DIESEL /	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
ACCORD DIESEL /	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
ACCORD DIESEL /	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
ACCORD DIESEL /	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
ACCORD DIESEL /	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
ACCORD DIESEL /	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
ACCORD DIESEL /	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
ACCORD DIESEL /	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
ACCORD DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
ACCORD DIESEL /	Transmission Control System (AT) M18	Read ECU Information	
ACCORD DIESEL /	Transmission Control System (AT) M18	Read codes	
ACCORD DIESEL /	Transmission Control System (AT) M18	Erase Codes	
ACCORD DIESEL /	Transmission Control System (AT) M18	Read Freeze Frame Data	
ACCORD DIESEL /	Transmission Control System (AT) M18	Read Live Data	
ACCORD DIESEL /	Transmission Control System (AT) M18	Adjustment	
ACCORD DIESEL /	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
ACCORD DIESEL /	Active Torque Converter Control System (ATTS) M0E	Read codes	
ACCORD DIESEL /	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
ACCORD DIESEL /	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
ACCORD DIESEL /	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
ACCORD DIESEL /	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
ACCORD DIESEL /	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
ACCORD DIESEL /	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ACCORD DIESEL /	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
ACCORD DIESEL /	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
ACCORD DIESEL /	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
ACCORD DIESEL /	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	

ACCORD DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes		
ACCORD DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data		
ACCORD DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection	
ACCORD DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection	
ACCORD DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation	
ACCORD DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu	
ACCORD DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation	
ACCORD DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation	
ACCORD DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance	
ACCORD DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time	
ACCORD DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default	
ACCORD DIESEL /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
ACCORD DIESEL /	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
ACCORD DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
ACCORD DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
ACCORD DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
ACCORD DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
ACCORD DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
ACCORD DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
ACCORD DIESEL /	BODY ELECTRICAL/e-Call	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
ACCORD DIESEL /	BODY ELECTRICAL/Front Panel	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
ACCORD DIESEL /	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ACCORD DIESEL /	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ACCORD DIESEL /	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ACCORD DIESEL /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ACCORD DIESEL /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ACCORD DIESEL /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ACCORD DIESEL /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Read Live Data	

ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ACCORD DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ACCORD DIESEL /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ACCORD DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ACCORD DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ACCORD DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ACCORD DIESEL /	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ACCORD DIESEL /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
ACCORD DIESEL /	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ACCORD DIESEL /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ACCORD DIESEL /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
ACCORD DIESEL /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ACCORD DIESEL /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ACCORD DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ACCORD DIESEL /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Security	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Security	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Security	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ACCORD DIESEL /	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
ACCORD DIESEL /	BODY ELECTRICAL/Security	MFF	History Data	
ACCORD DIESEL /	BODY ELECTRICAL/Security	MFF	History Clear	
ACCORD DIESEL /	BODY ELECTRICAL/Telematics	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ACCORD DIESEL /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ACCORD DIESEL /	BODY ELECTRICAL/Wiper	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACCORD DIESEL /	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ACCORD DIESEL /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACCORD DIESEL /	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ACCORD DIESEL /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
ACCORD DIESEL /	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ACCORD DIESEL /	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ACCORD DIESEL /	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ACCORD DIESEL /	BODY ELECTRICAL/YOP Security	MFF	History Data	
ACCORD DIESEL /	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ACCORD DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	

ACCORD DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ACCORD DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ACCORD DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
ACCORD DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ACCORD DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ACCORD DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ACCORD DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ACCORD DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ACCORD DIESEL /	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ACCORD DIESEL /	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ACCORD DIESEL /	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ACCORD DIESEL /	Urban Active Brake Control System (CBAS)	M32	Read codes	
ACCORD DIESEL /	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ACCORD DIESEL /	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
ACCORD DIESEL /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ACCORD DIESEL /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ACCORD DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read ECU Information	
ACCORD DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read codes	
ACCORD DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Erase Codes	
ACCORD DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read Freeze Frame Data	
ACCORD DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read Live Data	
ACCORD DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
ACCORD DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Miscellaneous Test	RADAR AIMING
ACCORD DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Miscellaneous Test	CMBS Brake
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Read codes	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		ECMPCM Reset	
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
ACCORD DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
ACCORD DIESEL /	DBW	M34	Read ECU Information	
ACCORD DIESEL /	DBW	M34	Read codes	
ACCORD DIESEL /	DBW	M34	Erase Codes	
ACCORD DIESEL /	DBW	M34	Read Freeze Frame Data	
ACCORD DIESEL /	DBW	M34	Read Live Data	
ACCORD DIESEL /	DBW	M34	Inspection	Idle Speed Adjust
ACCORD DIESEL /	DBW	M34	Inspection	Throttle Test
ACCORD DIESEL /	DBW	M34	ECM Reset	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Read codes	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test

ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M37	Read codes	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Read codes	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
ACCORD DIESEL /	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
ACCORD DIESEL /	Capacitor Control System (EDLC)	M12	Read codes	
ACCORD DIESEL /	Capacitor Control System (EDLC)	M12	Erase Codes	
ACCORD DIESEL /	Capacitor Control System (EDLC)	M12	Read Live Data	
ACCORD DIESEL /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
ACCORD DIESEL /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
ACCORD DIESEL /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
ACCORD DIESEL /	Electronic Brake Control System (EPB)	M1F	Read codes	
ACCORD DIESEL /	Electronic Brake Control System (EPB)	M1F	Erase Codes	
ACCORD DIESEL /	Electronic Brake Control System (EPB)	M1F	Read Live Data	
ACCORD DIESEL /	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
ACCORD DIESEL /	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
ACCORD DIESEL /	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
ACCORD DIESEL /	Electronic Brake Control System (EPB)	M3E	Read codes	
ACCORD DIESEL /	Electronic Brake Control System (EPB)	M3E	Erase Codes	
ACCORD DIESEL /	Electronic Brake Control System (EPB)	M3E	Read Live Data	
ACCORD DIESEL /	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
ACCORD DIESEL /	Electric Powertrain / IMA	M66	Read ECU Information	
ACCORD DIESEL /	Electric Powertrain / IMA	M66	Read codes	
ACCORD DIESEL /	Electric Powertrain / IMA	M66	Erase Codes	
ACCORD DIESEL /	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
ACCORD DIESEL /	Electric Powertrain / IMA	M66	Read Live Data	
ACCORD DIESEL /	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
ACCORD DIESEL /	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
ACCORD DIESEL /	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
ACCORD DIESEL /	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ACCORD DIESEL /	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ACCORD DIESEL /	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
ACCORD DIESEL /	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ACCORD DIESEL /	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ACCORD DIESEL /	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ACCORD DIESEL /	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ACCORD DIESEL /	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ACCORD DIESEL /	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M20	Read codes	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	

ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ACCORD DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ACCORD DIESEL /	New energy battery (EV)	M44	Read ECU Information	
ACCORD DIESEL /	New energy battery (EV)	M44	Read codes	
ACCORD DIESEL /	New energy battery (EV)	M44	Erase Codes	
ACCORD DIESEL /	New energy battery (EV)	M44	Read Freeze Frame Data	
ACCORD DIESEL /	New energy battery (EV)	M44	Read Live Data	
ACCORD DIESEL /	New energy battery (EV)	M44	Inspection	
ACCORD DIESEL /	New energy battery (EV)	M44	Adjustment	
ACCORD DIESEL /	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
ACCORD DIESEL /	Electronic vacuum pump (EVPS)	M21	Read codes	
ACCORD DIESEL /	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ACCORD DIESEL /	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ACCORD DIESEL /	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ACCORD DIESEL /	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ACCORD DIESEL /	Electronic vacuum pump (EVPS)	M22	Read codes	
ACCORD DIESEL /	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ACCORD DIESEL /	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ACCORD DIESEL /	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ACCORD DIESEL /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ACCORD DIESEL /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ACCORD DIESEL /	FCW LDW	M4E	Read ECU Information	
ACCORD DIESEL /	FCW LDW	M4E	Read codes	
ACCORD DIESEL /	FCW LDW	M4E	Erase Codes	
ACCORD DIESEL /	FCW LDW	M4E	Read Live Data	
ACCORD DIESEL /	FCW LDW	M4E	Function Test	FCW Drive
ACCORD DIESEL /	FCW LDW	M4E	Function Test	Left side lane departure warning
ACCORD DIESEL /	FCW LDW	M4E	Function Test	Right side lane departure warning
ACCORD DIESEL /	FCW LDW	M4E	Function Test	Indicator Drive
ACCORD DIESEL /	FCW LDW	M4E	Adjustment	
ACCORD DIESEL /	Instrument Display System (GAUGE)	M2C	Read codes	
ACCORD DIESEL /	Instrument Display System (GAUGE)	M2C	Erase Codes	
ACCORD DIESEL /	Instrument Display System (GAUGE)	M2C	Read Live Data	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Read codes	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Erase Codes	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Read Live Data	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Read codes	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Erase Codes	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Read Live Data	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Read ECU Information	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Read codes	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Erase Codes	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Read Live Data	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Pulser Test	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Read codes	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Erase Codes	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Read Live Data	
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ACCORD DIESEL /	Anti-lock brake control system (ABS)	M19	Deflation Warning System	



ACCORD DIESEL /	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ACCORD DIESEL /	Intelligent Parking Control System (SPS)	M9B	Read codes	
ACCORD DIESEL /	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
ACCORD DIESEL /	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ACCORD DIESEL /	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ACCORD DIESEL /	Intelligent Parking Control System (SPS)	M9B	Customize	
ACCORD DIESEL /	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ACCORD DIESEL /	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ACCORD DIESEL /	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ACCORD DIESEL /	Hydraulic booster control system (HBS)	M5F	Read codes	
ACCORD DIESEL /	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ACCORD DIESEL /	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ACCORD DIESEL /	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ACCORD DIESEL /	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ACCORD DIESEL /	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ACCORD DIESEL /	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ACCORD DIESEL /	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ACCORD DIESEL /	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ACCORD DIESEL /	IMA	M63	Read ECU Information	
ACCORD DIESEL /	IMA	M63	Read codes	
ACCORD DIESEL /	IMA	M63	Erase Codes	
ACCORD DIESEL /	IMA	M63	Read Freeze Frame Data	
ACCORD DIESEL /	IMA	M63	Read Live Data	
ACCORD DIESEL /	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ACCORD DIESEL /	IMA	M63	Adjustment	SOC PRESET
ACCORD DIESEL /	IMA	M64	Read ECU Information	
ACCORD DIESEL /	IMA	M64	Read codes	
ACCORD DIESEL /	IMA	M64	Erase Codes	
ACCORD DIESEL /	IMA	M64	Read Freeze Frame Data	
ACCORD DIESEL /	IMA	M64	Read Live Data	
ACCORD DIESEL /	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ACCORD DIESEL /	IMA	M64	Adjustment	SOC PRESET
ACCORD DIESEL /	IMA	M65	Read ECU Information	
ACCORD DIESEL /	IMA	M65	Read codes	
ACCORD DIESEL /	IMA	M65	Erase Codes	
ACCORD DIESEL /	IMA	M65	Read Freeze Frame Data	
ACCORD DIESEL /	IMA	M65	Read Live Data	
ACCORD DIESEL /	IMA	M65	Function Test	IPU MODULE FAN DRIVE
ACCORD DIESEL /	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ACCORD DIESEL /	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ACCORD DIESEL /	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ACCORD DIESEL /	Intake Sounder Control System (ISC)	M6D	Read codes	
ACCORD DIESEL /	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ACCORD DIESEL /	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ACCORD DIESEL /	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ACCORD DIESEL /	Night Vision System (INVS)	0XB1	Read ECU Information	
ACCORD DIESEL /	Night Vision System (INVS)	0XB1	Read codes	
ACCORD DIESEL /	Night Vision System (INVS)	0XB1	Erase Codes	
ACCORD DIESEL /	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ACCORD DIESEL /	Night Vision System (INVS)	0XB1	Read Live Data	
ACCORD DIESEL /	Night Vision System (INVS)	0XB1	Adjustment	
ACCORD DIESEL /	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ACCORD DIESEL /	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ACCORD DIESEL /	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ACCORD DIESEL /	i-SHIFT	0XB0	Read ECU Information	
ACCORD DIESEL /	i-SHIFT	0XB0	Read codes	
ACCORD DIESEL /	i-SHIFT	0XB0	Erase Codes	
ACCORD DIESEL /	i-SHIFT	0XB0	Read Live Data	
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Read codes	
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Erase Codes	
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Read Live Data	
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Self Check	
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	History Data	
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna LDC Output

ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ACCORD DIESEL /	Keyless Entry Control System (KAS)	M99	Registration	
ACCORD DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ACCORD DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ACCORD DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
ACCORD DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
ACCORD DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
ACCORD DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
ACCORD DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
ACCORD DIESEL /	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
ACCORD DIESEL /	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
ACCORD DIESEL /	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
ACCORD DIESEL /	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
ACCORD DIESEL /	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
ACCORD DIESEL /	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
ACCORD DIESEL /	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
ACCORD DIESEL /	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
ACCORD DIESEL /	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
ACCORD DIESEL /	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
ACCORD DIESEL /	Management ECU Module (ME)	M74	Read ECU Information	
ACCORD DIESEL /	Management ECU Module (ME)	M74	Read codes	
ACCORD DIESEL /	Management ECU Module (ME)	M74	Erase Codes	
ACCORD DIESEL /	Management ECU Module (ME)	M74	Read Freeze Frame Data	
ACCORD DIESEL /	Management ECU Module (ME)	M74	Read Live Data	
ACCORD DIESEL /	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
ACCORD DIESEL /	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
ACCORD DIESEL /	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
ACCORD DIESEL /	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
ACCORD DIESEL /	Multi-view camera system (MVCS)	M7A	Read ECU Information	
ACCORD DIESEL /	Multi-view camera system (MVCS)	M7A	Read codes	
ACCORD DIESEL /	Multi-view camera system (MVCS)	M7A	Erase Codes	
ACCORD DIESEL /	Multi-view camera system (MVCS)	M7A	Read Live Data	
ACCORD DIESEL /	Multi-view camera system (MVCS)	M7A	Customization	
ACCORD DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
ACCORD DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
ACCORD DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
ACCORD DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
ACCORD DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
ACCORD DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
ACCORD DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
ACCORD DIESEL /	Power Control Unit (PCU)	M83	Read ECU Information	
ACCORD DIESEL /	Power Control Unit (PCU)	M83	Read codes	
ACCORD DIESEL /	Power Control Unit (PCU)	M83	Erase Codes	
ACCORD DIESEL /	Power Control Unit (PCU)	M83	Read Live Data	
ACCORD DIESEL /	Power Control Unit (PCU)	M83	Self Check	
ACCORD DIESEL /	Power Control Unit (PCU)	M83	History Data	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Read ECU Information	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Read codes	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Erase Codes	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Readiness Codes	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Read Live Data	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN

ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	VIN CHECK	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	Read ECU Information	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	Read codes	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	Erase Codes	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	Readiness Codes	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	Read Live Data	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	VIN CHECK	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Read ECU Information	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Read codes	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Erase Codes	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Readiness Codes	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Read Live Data	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	ACM
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	VIN CHECK	
ACCORD DIESEL /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ACCORD DIESEL /	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
ACCORD DIESEL /	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
ACCORD DIESEL /	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
ACCORD DIESEL /	PSR	M27	Read ECU Information	
ACCORD DIESEL /	PSR	M27	Read codes	
ACCORD DIESEL /	PSR	M27	Erase Codes	
ACCORD DIESEL /	PSR	M27	Read Live Data	
ACCORD DIESEL /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ACCORD DIESEL /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
ACCORD DIESEL /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ACCORD DIESEL /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ACCORD DIESEL /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
ACCORD DIESEL /	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
ACCORD DIESEL /	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
ACCORD DIESEL /	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
ACCORD DIESEL /	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
ACCORD DIESEL /	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
ACCORD DIESEL /	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
ACCORD DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
ACCORD DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
ACCORD DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
ACCORD DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
ACCORD DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
ACCORD DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
ACCORD DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
ACCORD DIESEL /	Remote starter (RS)	M90	System Check	
ACCORD DIESEL /	Remote starter (RS)	M90	HISTORY	
ACCORD DIESEL /	Remote starter (RS)	M90	Registration	
ACCORD DIESEL /	Seat load cell (SWS)	M6F	Read ECU Information	
ACCORD DIESEL /	Seat load cell (SWS)	M6F	Read codes	
ACCORD DIESEL /	Seat load cell (SWS)	M6F	Erase Codes	
ACCORD DIESEL /	Seat load cell (SWS)	M6F	Read Live Data	
ACCORD DIESEL /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
ACCORD DIESEL /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
ACCORD DIESEL /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
ACCORD DIESEL /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
ACCORD DIESEL /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
ACCORD DIESEL /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
ACCORD DIESEL /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
ACCORD DIESEL /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	

ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ACCORD DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
ACCORD DIESEL /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
ACCORD DIESEL /	Groove track drive unit (SLOT ECU)	M98	Read codes	
ACCORD DIESEL /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
ACCORD DIESEL /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
ACCORD DIESEL /	Groove track drive unit (SLOT ECU)	M98	Self Check	
ACCORD DIESEL /	Groove track drive unit (SLOT ECU)	M98	History Data	
ACCORD DIESEL /	Groove track drive unit (SLOT ECU)	M98	System Information	
ACCORD DIESEL /	Airbag Control System (SRS)	M9F	Read ECU Information	
ACCORD DIESEL /	Airbag Control System (SRS)	M9F	Read codes	
ACCORD DIESEL /	Airbag Control System (SRS)	M9F	Erase Codes	
ACCORD DIESEL /	Airbag Control System (SRS)	M9F	Read Live Data	
ACCORD DIESEL /	Airbag Control System (SRS)	MA0	Read ECU Information	
ACCORD DIESEL /	Airbag Control System (SRS)	MA0	Read codes	
ACCORD DIESEL /	Airbag Control System (SRS)	MA0	Erase Codes	
ACCORD DIESEL /	Airbag Control System (SRS)	MA0	Read Live Data	
ACCORD DIESEL /	Airbag Control System (SRS)	MA1	Read ECU Information	
ACCORD DIESEL /	Airbag Control System (SRS)	MA1	Read codes	
ACCORD DIESEL /	Airbag Control System (SRS)	MA1	Erase Codes	
ACCORD DIESEL /	Airbag Control System (SRS)	MA1	Read Live Data	
ACCORD DIESEL /	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
ACCORD DIESEL /	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ACCORD DIESEL /	Airbag Control System (SRS)	M2A	Read codes	
ACCORD DIESEL /	Airbag Control System (SRS)	M2A	Erase Codes	
ACCORD DIESEL /	Airbag Control System (SRS)	M2A	Read Live Data	
ACCORD DIESEL /	Airbag Control System (SRS)	M9C	Read ECU Information	
ACCORD DIESEL /	Airbag Control System (SRS)	M9C	Read codes	
ACCORD DIESEL /	Airbag Control System (SRS)	M9C	Erase Codes	
ACCORD DIESEL /	Airbag Control System (SRS)	M9C	Read Live Data	
ACCORD DIESEL /	Airbag Control System (SRS)	M9D	Read ECU Information	
ACCORD DIESEL /	Airbag Control System (SRS)	M9D	Read codes	
ACCORD DIESEL /	Airbag Control System (SRS)	M9D	Erase Codes	
ACCORD DIESEL /	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
ACCORD DIESEL /	Airbag Control System (SRS)	M9D	Read Live Data	
ACCORD DIESEL /	Airbag Control System (SRS)	M9D	Parameter Information	
ACCORD DIESEL /	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
ACCORD DIESEL /	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
ACCORD DIESEL /	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
ACCORD DIESEL /	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
ACCORD DIESEL /	Airbag Control System (SRS)	M9D	Function Test	
ACCORD DIESEL /	Airbag Control System (SRS)	M9D	System Information	
ACCORD DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
ACCORD DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Read codes	
ACCORD DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
ACCORD DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
ACCORD DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ACCORD DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ACCORD DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ACCORD DIESEL /	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ACCORD DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ACCORD DIESEL /	Variable Valve Timing Control System (SVT)	MA2	System Information	
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ACCORD DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ACCORD DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ACCORD DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ACCORD DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ACCORD DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
ACCORD DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ACCORD DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ACCORD DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ACCORD DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
ACCORD HYBRID /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ACCORD HYBRID /	Four-wheel steering control system (4WS)	M52	Read codes	

ACCORD HYBRID /	Four-wheel steering control system (4WS)	M52	Erase Codes	
ACCORD HYBRID /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ACCORD HYBRID /	Four-wheel steering control system (4WS)	M52	Read Live Data	
ACCORD HYBRID /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ACCORD HYBRID /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ACCORD HYBRID /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
ACCORD HYBRID /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ACCORD HYBRID /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ACCORD HYBRID /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	Read ECU Information	
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	Read codes	
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	Erase Codes	
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	Read Live Data	
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ACCORD HYBRID /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
ACCORD HYBRID /	Automatic shift control system (A/T)	M3B	Read ECU Information	
ACCORD HYBRID /	Automatic shift control system (A/T)	M3B	Read codes	
ACCORD HYBRID /	Automatic shift control system (A/T)	M3B	Erase Codes	
ACCORD HYBRID /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ACCORD HYBRID /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
ACCORD HYBRID /	Automatic shift control system (A/T)	M3B	Read Live Data	
ACCORD HYBRID /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ACCORD HYBRID /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ACCORD HYBRID /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
ACCORD HYBRID /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ACCORD HYBRID /	Automatic shift control system (A/T)	M3C	Read ECU Information	
ACCORD HYBRID /	Automatic shift control system (A/T)	M3C	Read codes	
ACCORD HYBRID /	Automatic shift control system (A/T)	M3C	Erase Codes	
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Read ECU Information	
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Read codes	
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Erase Codes	
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	ECMPCM Reset	
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Read Live Data	
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACCORD HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
ACCORD HYBRID /	Automatic shift control system (A/T)	M82	Read ECU Information	
ACCORD HYBRID /	Automatic shift control system (A/T)	M82	Read codes	
ACCORD HYBRID /	Automatic shift control system (A/T)	M82	Erase Codes	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)		Read ECU Information	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)		Read codes	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)		Erase Codes	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)		Read Freeze Frame Data	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)		Read Live Data	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)		Function Test	Throttle Opening Angle Test
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)		Function Test	BRAKE BOOSTER 1
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)		Function Test	BRAKE BOOSTER 2
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)		Function Test	LIGHT CHECK
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)		Function Test	BUZZER CHECK
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)		Read ECU Information	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)		Read codes	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)		Erase Codes	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)		Read Freeze Frame Data	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)		Read Live Data	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)		Adjustment	RADAR AIMING
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)		Function Test	BRAKE ACTUATOR 3
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)		Function Test	ACC relay malfunction.
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)		Function Test	INDICATOR LIGHT
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)		Function Test	INFORMATION DISPLAY
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)		Function Test	ALARM BUZZER
ACCORD HYBRID /	Active Engine Control Support System (ACM)	M06	Read ECU Information	
ACCORD HYBRID /	Active Engine Control Support System (ACM)	M06	Read codes	
ACCORD HYBRID /	Active Engine Control Support System (ACM)	M06	Erase Codes	
ACCORD HYBRID /	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
ACCORD HYBRID /	Active Engine Control Support System (ACM)	M06	Read Live Data	
ACCORD HYBRID /	Active Engine Control Support System (ACM)	M06	ACM Reset	
ACCORD HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
ACCORD HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
ACCORD HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ACCORD HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
ACCORD HYBRID /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
ACCORD HYBRID /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
ACCORD HYBRID /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
ACCORD HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)		Read ECU Information	

ACCORD HYBRID /	Active / Automatic Shock Absorber Control System (A MOD	M18	Read codes	
ACCORD HYBRID /	Active / Automatic Shock Absorber Control System (A MOD	M18	Erase Codes	
ACCORD HYBRID /	Active / Automatic Shock Absorber Control System (A MOD	M18	Read Freeze Frame Data	
ACCORD HYBRID /	Active / Automatic Shock Absorber Control System (A MOD	M18	Read Live Data	
ACCORD HYBRID /	Active / Automatic Shock Absorber Control System (A MOD	M18	Function Test	Damper Force Operation Test
ACCORD HYBRID /	Active / Automatic Shock Absorber Control System (A MOD	M18	Adjustment	Damper Stroke Calibration
ACCORD HYBRID /	Active / Automatic Shock Absorber Control System (A M1A	M18	Read codes	
ACCORD HYBRID /	Active / Automatic Shock Absorber Control System (A M1A	M18	Erase Codes	
ACCORD HYBRID /	Active / Automatic Shock Absorber Control System (A M1A	M18	Read Live Data	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Read codes	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Erase Codes	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Read Freeze Frame Data	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Read Live Data	
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	ACC Brake (Brake Actuator)
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	CMBS Brake
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	Brake Light (ACC Relay)
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	Indicator Light
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	Information Display
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	Alarm Test
ACCORD HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Adjustment	Radar aiming
ACCORD HYBRID /	Transmission Control System (AT)	M18	Read ECU Information	
ACCORD HYBRID /	Transmission Control System (AT)	M18	Read codes	
ACCORD HYBRID /	Transmission Control System (AT)	M18	Erase Codes	
ACCORD HYBRID /	Transmission Control System (AT)	M18	Read Freeze Frame Data	
ACCORD HYBRID /	Transmission Control System (AT)	M18	Read Live Data	
ACCORD HYBRID /	Transmission Control System (AT)	M18	Adjustment	
ACCORD HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
ACCORD HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Read codes	
ACCORD HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
ACCORD HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
ACCORD HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
ACCORD HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
ACCORD HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
ACCORD HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ACCORD HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
ACCORD HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
ACCORD HYBRID /	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
ACCORD HYBRID /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
ACCORD HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
ACCORD HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
ACCORD HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
ACCORD HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
ACCORD HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
ACCORD HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
ACCORD HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
ACCORD HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
ACCORD HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
ACCORD HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
ACCORD HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
ACCORD HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
ACCORD HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
ACCORD HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
ACCORD HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
ACCORD HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
ACCORD HYBRID /	BODY ELECTRICAL/e-Call	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
ACCORD HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	

ACCORD HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
ACCORD HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ACCORD HYBRID /	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ACCORD HYBRID /	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ACCORD HYBRID /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ACCORD HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ACCORD HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ACCORD HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ACCORD HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ACCORD HYBRID /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ACCORD HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ACCORD HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ACCORD HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ACCORD HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ACCORD HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
ACCORD HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	

ACCORD HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ACCORD HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ACCORD HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
ACCORD HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ACCORD HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ACCORD HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ACCORD HYBRID /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Security	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Security	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Security	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ACCORD HYBRID /	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
ACCORD HYBRID /	BODY ELECTRICAL/Security	MFF	History Data	
ACCORD HYBRID /	BODY ELECTRICAL/Security	MFF	History Clear	
ACCORD HYBRID /	BODY ELECTRICAL/Telematics	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ACCORD HYBRID /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ACCORD HYBRID /	BODY ELECTRICAL/Wiper	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACCORD HYBRID /	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ACCORD HYBRID /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACCORD HYBRID /	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ACCORD HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
ACCORD HYBRID /	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ACCORD HYBRID /	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ACCORD HYBRID /	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ACCORD HYBRID /	BODY ELECTRICAL/YOP Security	MFF	History Data	
ACCORD HYBRID /	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ACCORD HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
ACCORD HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ACCORD HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ACCORD HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
ACCORD HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ACCORD HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ACCORD HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ACCORD HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ACCORD HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ACCORD HYBRID /	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ACCORD HYBRID /	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ACCORD HYBRID /	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ACCORD HYBRID /	Urban Active Brake Control System (CBAS)	M32	Read codes	
ACCORD HYBRID /	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ACCORD HYBRID /	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
ACCORD HYBRID /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ACCORD HYBRID /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ACCORD HYBRID /	Collision Mitigation Brake Control System (CMBS/CM: M2E)		Read ECU Information	
ACCORD HYBRID /	Collision Mitigation Brake Control System (CMBS/CM: M2E)		Read codes	
ACCORD HYBRID /	Collision Mitigation Brake Control System (CMBS/CM: M2E)		Erase Codes	
ACCORD HYBRID /	Collision Mitigation Brake Control System (CMBS/CM: M2E)		Read Freeze Frame Data	



ACCORD HYBRID /	Collision Mitigation Brake Control System (CMBS/CM! M2E	Read Live Data	
ACCORD HYBRID /	Collision Mitigation Brake Control System (CMBS/CM! M2E	CMBS (CMS) ACTIVATION HISTORY	
ACCORD HYBRID /	Collision Mitigation Brake Control System (CMBS/CM! M2E	Miscellaneous Test	RADAR AIMING
ACCORD HYBRID /	Collision Mitigation Brake Control System (CMBS/CM! M2E	Miscellaneous Test	CMBS Brake
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M1B	Read ECU Information	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M1B	Read codes	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M1B	Erase Codes	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M1B	Read Freeze Frame Data	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M1B	Read Live Data	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M1B	ECMPCM Reset	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Solenoid Tests
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Electrical Oil Pump Activation
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M33	Read ECU Information	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M33	Read codes	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M33	Erase Codes	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M33	Read Freeze Frame Data	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M33	Read Live Data	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M33	ECMPCM Reset	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	Read codes	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	ECMPCM Reset	
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
ACCORD HYBRID /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
ACCORD HYBRID /	DBW M34	Read ECU Information	
ACCORD HYBRID /	DBW M34	Read codes	
ACCORD HYBRID /	DBW M34	Erase Codes	
ACCORD HYBRID /	DBW M34	Read Freeze Frame Data	
ACCORD HYBRID /	DBW M34	Read Live Data	
ACCORD HYBRID /	DBW M34	Inspection	Idle Speed Adjust
ACCORD HYBRID /	DBW M34	Inspection	Throttle Test
ACCORD HYBRID /	DBW M34	ECM Reset	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Read codes	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M37	Read codes	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M37	Erase Codes	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M37	Read Live Data	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	Read codes	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	Erase Codes	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	Read Live Data	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
ACCORD HYBRID /	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status

ACCORD HYBRID /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
ACCORD HYBRID /	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
ACCORD HYBRID /	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
ACCORD HYBRID /	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
ACCORD HYBRID /	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
ACCORD HYBRID /	Capacitor Control System (EDLC)	M12	Read codes	
ACCORD HYBRID /	Capacitor Control System (EDLC)	M12	Erase Codes	
ACCORD HYBRID /	Capacitor Control System (EDLC)	M12	Read Live Data	
ACCORD HYBRID /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
ACCORD HYBRID /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
ACCORD HYBRID /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
ACCORD HYBRID /	Electronic Brake Control System (EPB)	M1F	Read codes	
ACCORD HYBRID /	Electronic Brake Control System (EPB)	M1F	Erase Codes	
ACCORD HYBRID /	Electronic Brake Control System (EPB)	M1F	Read Live Data	
ACCORD HYBRID /	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
ACCORD HYBRID /	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
ACCORD HYBRID /	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
ACCORD HYBRID /	Electronic Brake Control System (EPB)	M3E	Read codes	
ACCORD HYBRID /	Electronic Brake Control System (EPB)	M3E	Erase Codes	
ACCORD HYBRID /	Electronic Brake Control System (EPB)	M3E	Read Live Data	
ACCORD HYBRID /	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
ACCORD HYBRID /	Electric Powertrain / IMA	M66	Read ECU Information	
ACCORD HYBRID /	Electric Powertrain / IMA	M66	Read codes	
ACCORD HYBRID /	Electric Powertrain / IMA	M66	Erase Codes	
ACCORD HYBRID /	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
ACCORD HYBRID /	Electric Powertrain / IMA	M66	Read Live Data	
ACCORD HYBRID /	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
ACCORD HYBRID /	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
ACCORD HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
ACCORD HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ACCORD HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ACCORD HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
ACCORD HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ACCORD HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ACCORD HYBRID /	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ACCORD HYBRID /	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ACCORD HYBRID /	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ACCORD HYBRID /	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M20	Read codes	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ACCORD HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ACCORD HYBRID /	New energy battery (EV)	M44	Read ECU Information	
ACCORD HYBRID /	New energy battery (EV)	M44	Read codes	
ACCORD HYBRID /	New energy battery (EV)	M44	Erase Codes	
ACCORD HYBRID /	New energy battery (EV)	M44	Read Freeze Frame Data	
ACCORD HYBRID /	New energy battery (EV)	M44	Read Live Data	
ACCORD HYBRID /	New energy battery (EV)	M44	Inspection	
ACCORD HYBRID /	New energy battery (EV)	M44	Adjustment	
ACCORD HYBRID /	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
ACCORD HYBRID /	Electronic vacuum pump (EVPS)	M21	Read codes	
ACCORD HYBRID /	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ACCORD HYBRID /	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ACCORD HYBRID /	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ACCORD HYBRID /	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ACCORD HYBRID /	Electronic vacuum pump (EVPS)	M22	Read codes	
ACCORD HYBRID /	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ACCORD HYBRID /	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ACCORD HYBRID /	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ACCORD HYBRID /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ACCORD HYBRID /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ACCORD HYBRID /	FCW LDW	M4E	Read ECU Information	
ACCORD HYBRID /	FCW LDW	M4E	Read codes	
ACCORD HYBRID /	FCW LDW	M4E	Erase Codes	
ACCORD HYBRID /	FCW LDW	M4E	Read Live Data	
ACCORD HYBRID /	FCW LDW	M4E	Function Test	FCW Drive
ACCORD HYBRID /	FCW LDW	M4E	Function Test	Left side lane departure warning
ACCORD HYBRID /	FCW LDW	M4E	Function Test	Right side lane departure warning
ACCORD HYBRID /	FCW LDW	M4E	Function Test	Indicator Drive
ACCORD HYBRID /	FCW LDW	M4E	Adjustment	
ACCORD HYBRID /	Instrument Display System (GAUGE)	M2C	Read codes	
ACCORD HYBRID /	Instrument Display System (GAUGE)	M2C	Erase Codes	

ACCORD HYBRID /	Instrument Display System (GAUGE)	M2C	Read Live Data	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Read codes	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Erase Codes	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Read Live Data	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Read codes	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Erase Codes	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Read Live Data	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Read ECU Information	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Read codes	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Erase Codes	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Read Live Data	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Pulser Test	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Read codes	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Erase Codes	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Read Live Data	
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ACCORD HYBRID /	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
ACCORD HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ACCORD HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read codes	
ACCORD HYBRID /	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
ACCORD HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ACCORD HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ACCORD HYBRID /	Intelligent Parking Control System (SPS)	M9B	Customize	
ACCORD HYBRID /	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ACCORD HYBRID /	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ACCORD HYBRID /	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ACCORD HYBRID /	Hydraulic booster control system (HBS)	M5F	Read codes	
ACCORD HYBRID /	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ACCORD HYBRID /	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ACCORD HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ACCORD HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ACCORD HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ACCORD HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ACCORD HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ACCORD HYBRID /	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ACCORD HYBRID /	IMA	M63	Read ECU Information	
ACCORD HYBRID /	IMA	M63	Read codes	
ACCORD HYBRID /	IMA	M63	Erase Codes	
ACCORD HYBRID /	IMA	M63	Read Freeze Frame Data	
ACCORD HYBRID /	IMA	M63	Read Live Data	
ACCORD HYBRID /	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ACCORD HYBRID /	IMA	M63	Adjustment	SOC PRESET
ACCORD HYBRID /	IMA	M64	Read ECU Information	
ACCORD HYBRID /	IMA	M64	Read codes	
ACCORD HYBRID /	IMA	M64	Erase Codes	
ACCORD HYBRID /	IMA	M64	Read Freeze Frame Data	
ACCORD HYBRID /	IMA	M64	Read Live Data	
ACCORD HYBRID /	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ACCORD HYBRID /	IMA	M64	Adjustment	SOC PRESET

ACCORD HYBRID /	IMA	M65	Read ECU Information	
ACCORD HYBRID /	IMA	M65	Read codes	
ACCORD HYBRID /	IMA	M65	Erase Codes	
ACCORD HYBRID /	IMA	M65	Read Freeze Frame Data	
ACCORD HYBRID /	IMA	M65	Read Live Data	
ACCORD HYBRID /	IMA	M65	Function Test	IPU MODULE FAN DRIVE
ACCORD HYBRID /	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ACCORD HYBRID /	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ACCORD HYBRID /	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ACCORD HYBRID /	Intake Sounder Control System (ISC)	M6D	Read codes	
ACCORD HYBRID /	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ACCORD HYBRID /	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ACCORD HYBRID /	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ACCORD HYBRID /	Night Vision System (INVS)	0XB1	Read ECU Information	
ACCORD HYBRID /	Night Vision System (INVS)	0XB1	Read codes	
ACCORD HYBRID /	Night Vision System (INVS)	0XB1	Erase Codes	
ACCORD HYBRID /	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ACCORD HYBRID /	Night Vision System (INVS)	0XB1	Read Live Data	
ACCORD HYBRID /	Night Vision System (INVS)	0XB1	Adjustment	
ACCORD HYBRID /	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ACCORD HYBRID /	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ACCORD HYBRID /	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ACCORD HYBRID /	i-SHIFT	0XB0	Read ECU Information	
ACCORD HYBRID /	i-SHIFT	0XB0	Read codes	
ACCORD HYBRID /	i-SHIFT	0XB0	Erase Codes	
ACCORD HYBRID /	i-SHIFT	0XB0	Read Live Data	
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Read codes	
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Erase Codes	
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Read Live Data	
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Self Check	
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	History Data	
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMODC Terminal) Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ACCORD HYBRID /	Keyless Entry Control System (KAS)	M99	Registration	
ACCORD HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ACCORD HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ACCORD HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
ACCORD HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
ACCORD HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
ACCORD HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
ACCORD HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
ACCORD HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
ACCORD HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Read codes	

ACCORD HYBRID /	Electronically assisted lane keeping control system (Lk M71		Erase Codes	
ACCORD HYBRID /	Electronically assisted lane keeping control system (Lk M71		Read Freeze Frame Data	
ACCORD HYBRID /	Electronically assisted lane keeping control system (Lk M71		Read Live Data	
ACCORD HYBRID /	Electronically assisted lane keeping control system (Lk M71		Adjustment	STEERING REWRITE
ACCORD HYBRID /	Electronically assisted lane keeping control system (Lk M71		Customize	LDW OFFSET
ACCORD HYBRID /	Electronically assisted lane keeping control system (Lk M71		Customize	GAIN ADJUST
ACCORD HYBRID /	Electronically assisted lane keeping control system (Lk M71		Customize	DRIVING WILL
ACCORD HYBRID /	Electronically assisted lane keeping control system (Lk M71		Customize	CONTROL DELAY
ACCORD HYBRID /	Management ECU Module (ME)	M74	Read ECU Information	
ACCORD HYBRID /	Management ECU Module (ME)	M74	Read codes	
ACCORD HYBRID /	Management ECU Module (ME)	M74	Erase Codes	
ACCORD HYBRID /	Management ECU Module (ME)	M74	Read Freeze Frame Data	
ACCORD HYBRID /	Management ECU Module (ME)	M74	Read Live Data	
ACCORD HYBRID /	Multi-view camera and parking assist system (MVC/P, M26		Read ECU Information	
ACCORD HYBRID /	Multi-view camera and parking assist system (MVC/P, M26		Read codes	
ACCORD HYBRID /	Multi-view camera and parking assist system (MVC/P, M26		Erase Codes	
ACCORD HYBRID /	Multi-view camera and parking assist system (MVC/P, M26		Read Live Data	
ACCORD HYBRID /	Multi-view camera system (MVCS)	M7A	Read ECU Information	
ACCORD HYBRID /	Multi-view camera system (MVCS)	M7A	Read codes	
ACCORD HYBRID /	Multi-view camera system (MVCS)	M7A	Erase Codes	
ACCORD HYBRID /	Multi-view camera system (MVCS)	M7A	Read Live Data	
ACCORD HYBRID /	Multi-view camera system (MVCS)	M7A	Customization	
ACCORD HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
ACCORD HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
ACCORD HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
ACCORD HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
ACCORD HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
ACCORD HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
ACCORD HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
ACCORD HYBRID /	Power Control Unit (PCU)	M83	Read ECU Information	
ACCORD HYBRID /	Power Control Unit (PCU)	M83	Read codes	
ACCORD HYBRID /	Power Control Unit (PCU)	M83	Erase Codes	
ACCORD HYBRID /	Power Control Unit (PCU)	M83	Read Live Data	
ACCORD HYBRID /	Power Control Unit (PCU)	M83	Self Check	
ACCORD HYBRID /	Power Control Unit (PCU)	M83	History Data	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Read ECU Information	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Read codes	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Erase Codes	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Readiness Codes	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Read Live Data	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	VIN CHECK	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	Read ECU Information	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	Read codes	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	Erase Codes	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	Readiness Codes	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	Read Live Data	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	VIN CHECK	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Read ECU Information	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Read codes	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Erase Codes	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Readiness Codes	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Read Live Data	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST

ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ACM
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	VIN CHECK	
ACCORD HYBRID /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ACCORD HYBRID /	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
ACCORD HYBRID /	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
ACCORD HYBRID /	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
ACCORD HYBRID /	PSR	M27	Read ECU Information	
ACCORD HYBRID /	PSR	M27	Read codes	
ACCORD HYBRID /	PSR	M27	Erase Codes	
ACCORD HYBRID /	PSR	M27	Read Live Data	
ACCORD HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ACCORD HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
ACCORD HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ACCORD HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ACCORD HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
ACCORD HYBRID /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
ACCORD HYBRID /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
ACCORD HYBRID /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
ACCORD HYBRID /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
ACCORD HYBRID /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
ACCORD HYBRID /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
ACCORD HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
ACCORD HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
ACCORD HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
ACCORD HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
ACCORD HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
ACCORD HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
ACCORD HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
ACCORD HYBRID /	Remote starter (RS)	M90	System Check	
ACCORD HYBRID /	Remote starter (RS)	M90	HISTORY	
ACCORD HYBRID /	Remote starter (RS)	M90	Registration	
ACCORD HYBRID /	Seat load cell (SWS)	M6F	Read ECU Information	
ACCORD HYBRID /	Seat load cell (SWS)	M6F	Read codes	
ACCORD HYBRID /	Seat load cell (SWS)	M6F	Erase Codes	
ACCORD HYBRID /	Seat load cell (SWS)	M6F	Read Live Data	
ACCORD HYBRID /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
ACCORD HYBRID /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
ACCORD HYBRID /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
ACCORD HYBRID /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
ACCORD HYBRID /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
ACCORD HYBRID /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
ACCORD HYBRID /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
ACCORD HYBRID /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ACCORD HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
ACCORD HYBRID /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
ACCORD HYBRID /	Groove track drive unit (SLOT ECU)	M98	Read codes	
ACCORD HYBRID /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
ACCORD HYBRID /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
ACCORD HYBRID /	Groove track drive unit (SLOT ECU)	M98	Self Check	
ACCORD HYBRID /	Groove track drive unit (SLOT ECU)	M98	History Data	
ACCORD HYBRID /	Groove track drive unit (SLOT ECU)	M98	System Information	
ACCORD HYBRID /	Airbag Control System (SRS)	M9F	Read ECU Information	
ACCORD HYBRID /	Airbag Control System (SRS)	M9F	Read codes	
ACCORD HYBRID /	Airbag Control System (SRS)	M9F	Erase Codes	
ACCORD HYBRID /	Airbag Control System (SRS)	M9F	Read Live Data	
ACCORD HYBRID /	Airbag Control System (SRS)	MA0	Read ECU Information	

ACCORD HYBRID /	Airbag Control System (SRS)	MA0	Read codes	
ACCORD HYBRID /	Airbag Control System (SRS)	MA0	Erase Codes	
ACCORD HYBRID /	Airbag Control System (SRS)	MA0	Read Live Data	
ACCORD HYBRID /	Airbag Control System (SRS)	MA1	Read ECU Information	
ACCORD HYBRID /	Airbag Control System (SRS)	MA1	Read codes	
ACCORD HYBRID /	Airbag Control System (SRS)	MA1	Erase Codes	
ACCORD HYBRID /	Airbag Control System (SRS)	MA1	Read Live Data	
ACCORD HYBRID /	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
ACCORD HYBRID /	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ACCORD HYBRID /	Airbag Control System (SRS)	M2A	Read codes	
ACCORD HYBRID /	Airbag Control System (SRS)	M2A	Erase Codes	
ACCORD HYBRID /	Airbag Control System (SRS)	M2A	Read Live Data	
ACCORD HYBRID /	Airbag Control System (SRS)	M9C	Read ECU Information	
ACCORD HYBRID /	Airbag Control System (SRS)	M9C	Read codes	
ACCORD HYBRID /	Airbag Control System (SRS)	M9C	Erase Codes	
ACCORD HYBRID /	Airbag Control System (SRS)	M9C	Read Live Data	
ACCORD HYBRID /	Airbag Control System (SRS)	M9D	Read ECU Information	
ACCORD HYBRID /	Airbag Control System (SRS)	M9D	Read codes	
ACCORD HYBRID /	Airbag Control System (SRS)	M9D	Erase Codes	
ACCORD HYBRID /	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
ACCORD HYBRID /	Airbag Control System (SRS)	M9D	Read Live Data	
ACCORD HYBRID /	Airbag Control System (SRS)	M9D	Parameter Information	
ACCORD HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
ACCORD HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
ACCORD HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
ACCORD HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
ACCORD HYBRID /	Airbag Control System (SRS)	M9D	Function Test	
ACCORD HYBRID /	Airbag Control System (SRS)	M9D	System Information	
ACCORD HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
ACCORD HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read codes	
ACCORD HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
ACCORD HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
ACCORD HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ACCORD HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ACCORD HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ACCORD HYBRID /	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ACCORD HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ACCORD HYBRID /	Variable Valve Timing Control System (SVT)	MA2	System Information	
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ACCORD HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ACCORD HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ACCORD HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ACCORD HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ACCORD HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
ACCORD HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ACCORD HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ACCORD HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ACCORD HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
ACCORD V6 /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ACCORD V6 /	Four-wheel steering control system (4WS)	M52	Read codes	
ACCORD V6 /	Four-wheel steering control system (4WS)	M52	Erase Codes	
ACCORD V6 /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ACCORD V6 /	Four-wheel steering control system (4WS)	M52	Read Live Data	
ACCORD V6 /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ACCORD V6 /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ACCORD V6 /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
ACCORD V6 /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ACCORD V6 /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ACCORD V6 /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ACCORD V6 /	Automatic shift control system (A/T)	M1E	Read ECU Information	
ACCORD V6 /	Automatic shift control system (A/T)	M1E	Read codes	
ACCORD V6 /	Automatic shift control system (A/T)	M1E	Erase Codes	
ACCORD V6 /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ACCORD V6 /	Automatic shift control system (A/T)	M1E	Read Live Data	
ACCORD V6 /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
ACCORD V6 /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ACCORD V6 /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD V6 /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACCORD V6 /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACCORD V6 /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACCORD V6 /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACCORD V6 /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ACCORD V6 /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
ACCORD V6 /	Automatic shift control system (A/T)	M3B	Read ECU Information	
ACCORD V6 /	Automatic shift control system (A/T)	M3B	Read codes	
ACCORD V6 /	Automatic shift control system (A/T)	M3B	Erase Codes	
ACCORD V6 /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ACCORD V6 /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
ACCORD V6 /	Automatic shift control system (A/T)	M3B	Read Live Data	
ACCORD V6 /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ACCORD V6 /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ACCORD V6 /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B

ACCORD V6	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ACCORD V6	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
ACCORD V6	/	Automatic shift control system (A/T)	M3C	Read codes	
ACCORD V6	/	Automatic shift control system (A/T)	M3C	Erase Codes	
ACCORD V6	/	Automatic shift control system (A/T)	M81	Read ECU Information	
ACCORD V6	/	Automatic shift control system (A/T)	M81	Read codes	
ACCORD V6	/	Automatic shift control system (A/T)	M81	Erase Codes	
ACCORD V6	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ACCORD V6	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
ACCORD V6	/	Automatic shift control system (A/T)	M81	Read Live Data	
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACCORD V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
ACCORD V6	/	Automatic shift control system (A/T)	M82	Read ECU Information	
ACCORD V6	/	Automatic shift control system (A/T)	M82	Read codes	
ACCORD V6	/	Automatic shift control system (A/T)	M82	Erase Codes	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
ACCORD V6	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
ACCORD V6	/	Active Engine Control Support System (ACM)	M06	Read codes	
ACCORD V6	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
ACCORD V6	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
ACCORD V6	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
ACCORD V6	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
ACCORD V6	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
ACCORD V6	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
ACCORD V6	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ACCORD V6	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
ACCORD V6	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
ACCORD V6	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
ACCORD V6	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
ACCORD V6	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read ECU Information	
ACCORD V6	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read codes	
ACCORD V6	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Erase Codes	
ACCORD V6	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Freeze Frame Data	
ACCORD V6	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Live Data	
ACCORD V6	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Function Test	Damper Force Operation Test
ACCORD V6	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Adjustment	Damper Stroke Calibration
ACCORD V6	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
ACCORD V6	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
ACCORD V6	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
ACCORD V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
ACCORD V6	/	Transmission Control System (AT)	M18	Read ECU Information	
ACCORD V6	/	Transmission Control System (AT)	M18	Read codes	
ACCORD V6	/	Transmission Control System (AT)	M18	Erase Codes	
ACCORD V6	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
ACCORD V6	/	Transmission Control System (AT)	M18	Read Live Data	
ACCORD V6	/	Transmission Control System (AT)	M18	Adjustment	
ACCORD V6	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
ACCORD V6	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
ACCORD V6	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
ACCORD V6	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
ACCORD V6	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
ACCORD V6	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE



ACCORD V6	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	STEERING ANGLE
ACCORD V6	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ACCORD V6	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ALL SENSORS
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
ACCORD V6	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
ACCORD V6	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
ACCORD V6	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
ACCORD V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
ACCORD V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
ACCORD V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
ACCORD V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
ACCORD V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
ACCORD V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
ACCORD V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
ACCORD V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
ACCORD V6	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
ACCORD V6	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
ACCORD V6	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
ACCORD V6	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
ACCORD V6	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
ACCORD V6	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
ACCORD V6	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
ACCORD V6	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
ACCORD V6	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
ACCORD V6	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
ACCORD V6	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)

ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ACCORD V6	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ACCORD V6	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ACCORD V6	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ACCORD V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ACCORD V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ACCORD V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ACCORD V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ACCORD V6	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ACCORD V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ACCORD V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ACCORD V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ACCORD V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ACCORD V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
ACCORD V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ACCORD V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ACCORD V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
ACCORD V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ACCORD V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ACCORD V6	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ACCORD V6	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Security	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ACCORD V6	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command

ACCORD V6	/	BODY ELECTRICAL/Security	MFF	History Data	
ACCORD V6	/	BODY ELECTRICAL/Security	MFF	History Clear	
ACCORD V6	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ACCORD V6	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ACCORD V6	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACCORD V6	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ACCORD V6	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACCORD V6	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ACCORD V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
ACCORD V6	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ACCORD V6	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ACCORD V6	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ACCORD V6	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
ACCORD V6	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ACCORD V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
ACCORD V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ACCORD V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ACCORD V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
ACCORD V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ACCORD V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ACCORD V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ACCORD V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ACCORD V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ACCORD V6	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ACCORD V6	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ACCORD V6	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ACCORD V6	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
ACCORD V6	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ACCORD V6	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
ACCORD V6	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ACCORD V6	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ACCORD V6	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
ACCORD V6	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
ACCORD V6	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
ACCORD V6	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
ACCORD V6	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
ACCORD V6	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
ACCORD V6	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
ACCORD V6	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)

ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B	
ACCORD V6	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P	
ACCORD V6	/	DBW	M34	Read ECU Information	
ACCORD V6	/	DBW	M34	Read codes	
ACCORD V6	/	DBW	M34	Erase Codes	
ACCORD V6	/	DBW	M34	Read Freeze Frame Data	
ACCORD V6	/	DBW	M34	Read Live Data	
ACCORD V6	/	DBW	M34	Inspection	Idle Speed Adjust
ACCORD V6	/	DBW	M34	Inspection	Throttle Test
ACCORD V6	/	DBW	M34	ECM Reset	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
ACCORD V6	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
ACCORD V6	/	Capacitor Control System (EDLC)	M12	Read codes	
ACCORD V6	/	Capacitor Control System (EDLC)	M12	Erase Codes	
ACCORD V6	/	Capacitor Control System (EDLC)	M12	Read Live Data	
ACCORD V6	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
ACCORD V6	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
ACCORD V6	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
ACCORD V6	/	Electronic Brake Control System (EPB)	M1F	Read codes	
ACCORD V6	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
ACCORD V6	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
ACCORD V6	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
ACCORD V6	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
ACCORD V6	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
ACCORD V6	/	Electronic Brake Control System (EPB)	M3E	Read codes	
ACCORD V6	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
ACCORD V6	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
ACCORD V6	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
ACCORD V6	/	Electric Powertrain / IMA	M66	Read ECU Information	
ACCORD V6	/	Electric Powertrain / IMA	M66	Read codes	
ACCORD V6	/	Electric Powertrain / IMA	M66	Erase Codes	
ACCORD V6	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
ACCORD V6	/	Electric Powertrain / IMA	M66	Read Live Data	
ACCORD V6	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
ACCORD V6	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
ACCORD V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
ACCORD V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ACCORD V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ACCORD V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	

ACCORD V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ACCORD V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ACCORD V6	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ACCORD V6	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ACCORD V6	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ACCORD V6	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ACCORD V6	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ACCORD V6	/	New energy battery (EV)	M44	Read ECU Information	
ACCORD V6	/	New energy battery (EV)	M44	Read codes	
ACCORD V6	/	New energy battery (EV)	M44	Erase Codes	
ACCORD V6	/	New energy battery (EV)	M44	Read Freeze Frame Data	
ACCORD V6	/	New energy battery (EV)	M44	Read Live Data	
ACCORD V6	/	New energy battery (EV)	M44	Inspection	
ACCORD V6	/	New energy battery (EV)	M44	Adjustment	
ACCORD V6	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
ACCORD V6	/	Electronic vacuum pump (EVPS)	M21	Read codes	
ACCORD V6	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ACCORD V6	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ACCORD V6	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ACCORD V6	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ACCORD V6	/	Electronic vacuum pump (EVPS)	M22	Read codes	
ACCORD V6	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ACCORD V6	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ACCORD V6	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ACCORD V6	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ACCORD V6	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ACCORD V6	/	FCW LDW	M4E	Read ECU Information	
ACCORD V6	/	FCW LDW	M4E	Read codes	
ACCORD V6	/	FCW LDW	M4E	Erase Codes	
ACCORD V6	/	FCW LDW	M4E	Read Live Data	
ACCORD V6	/	FCW LDW	M4E	Function Test	FCW Drive
ACCORD V6	/	FCW LDW	M4E	Function Test	Left side lane departure warning
ACCORD V6	/	FCW LDW	M4E	Function Test	Right side lane departure warning
ACCORD V6	/	FCW LDW	M4E	Function Test	Indicator Drive
ACCORD V6	/	FCW LDW	M4E	Adjustment	
ACCORD V6	/	Instrument Display System (GAUGE)	M2C	Read codes	
ACCORD V6	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
ACCORD V6	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Read codes	
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Read codes	
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Read codes	
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Read Live Data	

ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ACCORD V6	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Read codes	
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ACCORD V6	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
ACCORD V6	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ACCORD V6	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
ACCORD V6	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
ACCORD V6	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ACCORD V6	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ACCORD V6	/	Intelligent Parking Control System (SPS)	M9B	Customize	
ACCORD V6	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ACCORD V6	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ACCORD V6	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ACCORD V6	/	Hydraulic booster control system (HBS)	M5F	Read codes	
ACCORD V6	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ACCORD V6	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ACCORD V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ACCORD V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ACCORD V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ACCORD V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ACCORD V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ACCORD V6	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ACCORD V6	/	IMA	M63	Read ECU Information	
ACCORD V6	/	IMA	M63	Read codes	
ACCORD V6	/	IMA	M63	Erase Codes	
ACCORD V6	/	IMA	M63	Read Freeze Frame Data	
ACCORD V6	/	IMA	M63	Read Live Data	
ACCORD V6	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ACCORD V6	/	IMA	M63	Adjustment	SOC PRESET
ACCORD V6	/	IMA	M64	Read ECU Information	
ACCORD V6	/	IMA	M64	Read codes	
ACCORD V6	/	IMA	M64	Erase Codes	
ACCORD V6	/	IMA	M64	Read Freeze Frame Data	
ACCORD V6	/	IMA	M64	Read Live Data	
ACCORD V6	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ACCORD V6	/	IMA	M64	Adjustment	SOC PRESET
ACCORD V6	/	IMA	M65	Read ECU Information	
ACCORD V6	/	IMA	M65	Read codes	
ACCORD V6	/	IMA	M65	Erase Codes	
ACCORD V6	/	IMA	M65	Read Freeze Frame Data	
ACCORD V6	/	IMA	M65	Read Live Data	
ACCORD V6	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
ACCORD V6	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ACCORD V6	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ACCORD V6	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ACCORD V6	/	Intake Sounder Control System (ISC)	M6D	Read codes	
ACCORD V6	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ACCORD V6	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ACCORD V6	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ACCORD V6	/	Night Vision System (INVS)	0XB1	Read ECU Information	
ACCORD V6	/	Night Vision System (INVS)	0XB1	Read codes	
ACCORD V6	/	Night Vision System (INVS)	0XB1	Erase Codes	
ACCORD V6	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ACCORD V6	/	Night Vision System (INVS)	0XB1	Read Live Data	
ACCORD V6	/	Night Vision System (INVS)	0XB1	Adjustment	
ACCORD V6	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ACCORD V6	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ACCORD V6	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ACCORD V6	/	i-SHIFT	0XB0	Read ECU Information	
ACCORD V6	/	i-SHIFT	0XB0	Read codes	
ACCORD V6	/	i-SHIFT	0XB0	Erase Codes	
ACCORD V6	/	i-SHIFT	0XB0	Read Live Data	
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Read codes	
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Self Check	
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	History Data	

ACCORD V6	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC terminal) Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ACCORD V6	/	Keyless Entry Control System (KAS)	M99	Registration	
ACCORD V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ACCORD V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ACCORD V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
ACCORD V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
ACCORD V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
ACCORD V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
ACCORD V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
ACCORD V6	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
ACCORD V6	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
ACCORD V6	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
ACCORD V6	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
ACCORD V6	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
ACCORD V6	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
ACCORD V6	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
ACCORD V6	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
ACCORD V6	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
ACCORD V6	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
ACCORD V6	/	Management ECU Module (ME)	M74	Read ECU Information	
ACCORD V6	/	Management ECU Module (ME)	M74	Read codes	
ACCORD V6	/	Management ECU Module (ME)	M74	Erase Codes	
ACCORD V6	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
ACCORD V6	/	Management ECU Module (ME)	M74	Read Live Data	
ACCORD V6	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
ACCORD V6	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
ACCORD V6	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
ACCORD V6	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
ACCORD V6	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
ACCORD V6	/	Multi-view camera system (MVCS)	M7A	Read codes	
ACCORD V6	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
ACCORD V6	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
ACCORD V6	/	Multi-view camera system (MVCS)	M7A	Customization	
ACCORD V6	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
ACCORD V6	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
ACCORD V6	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
ACCORD V6	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
ACCORD V6	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
ACCORD V6	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
ACCORD V6	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
ACCORD V6	/	Power Control Unit (PCU)	M83	Read ECU Information	
ACCORD V6	/	Power Control Unit (PCU)	M83	Read codes	
ACCORD V6	/	Power Control Unit (PCU)	M83	Erase Codes	

ACCORD V6	/	Power Control Unit (PCU)	M83	Read Live Data	
ACCORD V6	/	Power Control Unit (PCU)	M83	Self Check	
ACCORD V6	/	Power Control Unit (PCU)	M83	History Data	
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Read codes	
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Erase Codes	
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
ACCORD V6	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Read Live Data	
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ACCORD V6	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
ACCORD V6	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
ACCORD V6	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
ACCORD V6	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
ACCORD V6	/	Engine Control System (PGM-FI)	M50	Read codes	
ACCORD V6	/	Engine Control System (PGM-FI)	M50	Erase Codes	
ACCORD V6	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
ACCORD V6	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
ACCORD V6	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
ACCORD V6	/	Engine Control System (PGM-FI)	M50	Read Live Data	
ACCORD V6	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
ACCORD V6	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
ACCORD V6	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
ACCORD V6	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
ACCORD V6	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Read codes	
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Erase Codes	
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
ACCORD V6	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Read Live Data	
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ACCORD V6	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ACCORD V6	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
ACCORD V6	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ACCORD V6	/	Four-wheel precision steering control system (PAWSC M96)		Read codes	
ACCORD V6	/	Four-wheel precision steering control system (PAWSC M96)		Erase Codes	
ACCORD V6	/	Four-wheel precision steering control system (PAWSC M96)		Read Live Data	
ACCORD V6	/	PSR	M27	Read ECU Information	
ACCORD V6	/	PSR	M27	Read codes	
ACCORD V6	/	PSR	M27	Erase Codes	
ACCORD V6	/	PSR	M27	Read Live Data	
ACCORD V6	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ACCORD V6	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
ACCORD V6	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ACCORD V6	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ACCORD V6	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
ACCORD V6	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
ACCORD V6	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
ACCORD V6	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	



ACCORD V6	/	Real-time four-wheel drive / intelligent control drive s M3A	Read Live Data	
ACCORD V6	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	E-DPS Control Module Replacement
ACCORD V6	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	Longitudinal G Sensor Learning
ACCORD V6	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read ECU Information	
ACCORD V6	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read codes	
ACCORD V6	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Erase Codes	
ACCORD V6	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read Live Data	
ACCORD V6	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Adjustment	
ACCORD V6	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test	Monitor and Alarm
ACCORD V6	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test	Display Rear Camera output image
ACCORD V6	/	Remote starter (RS) M90	System Check	
ACCORD V6	/	Remote starter (RS) M90	HISTORY	
ACCORD V6	/	Remote starter (RS) M90	Registration	
ACCORD V6	/	Seat load cell (SWS) M6F	Read ECU Information	
ACCORD V6	/	Seat load cell (SWS) M6F	Read codes	
ACCORD V6	/	Seat load cell (SWS) M6F	Erase Codes	
ACCORD V6	/	Seat load cell (SWS) M6F	Read Live Data	
ACCORD V6	/	Seat load cell (SWS) M6F	System Check	SWS DTC CHECK
ACCORD V6	/	Seat load cell (SWS) M6F	System Check	Seat Output Check
ACCORD V6	/	Seat load cell (SWS) M6F	System Check	AFTER A VEHICLE COLLISION
ACCORD V6	/	Seat load cell (SWS) M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
ACCORD V6	/	Seat load cell (SWS) M6F	Adjustment	ODS Unit Initialization
ACCORD V6	/	Seat load cell (SWS) M6F	Adjustment	OPDS Initialization
ACCORD V6	/	Seat load cell (SWS) M6F	Adjustment	SWS Initialization
ACCORD V6	/	Seat load cell (SWS) M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M29	Read ECU Information	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M29	Read codes	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M29	Erase Codes	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M29	Readiness Codes	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M29	Read Freeze Frame Data	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M29	ECM/PCM Reset	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M29	Read Live Data	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M29	Inspection	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M29	Adjustment	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M29	VIN CHECK	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M29	Replace ECM/PCM	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Read ECU Information	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Read codes	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Erase Codes	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Read Freeze Frame Data	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Read Live Data	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Differential Torque	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ACCORD V6	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M ALL Sensor	
ACCORD V6	/	Groove track drive unit (SLOT ECU) M98	Read ECU Information	
ACCORD V6	/	Groove track drive unit (SLOT ECU) M98	Read codes	
ACCORD V6	/	Groove track drive unit (SLOT ECU) M98	Erase Codes	
ACCORD V6	/	Groove track drive unit (SLOT ECU) M98	Read Live Data	
ACCORD V6	/	Groove track drive unit (SLOT ECU) M98	Self Check	
ACCORD V6	/	Groove track drive unit (SLOT ECU) M98	History Data	
ACCORD V6	/	Groove track drive unit (SLOT ECU) M98	System Information	
ACCORD V6	/	Airbag Control System (SRS) M9F	Read ECU Information	
ACCORD V6	/	Airbag Control System (SRS) M9F	Read codes	
ACCORD V6	/	Airbag Control System (SRS) M9F	Erase Codes	
ACCORD V6	/	Airbag Control System (SRS) M9F	Read Live Data	
ACCORD V6	/	Airbag Control System (SRS) MA0	Read ECU Information	
ACCORD V6	/	Airbag Control System (SRS) MA0	Read codes	
ACCORD V6	/	Airbag Control System (SRS) MA0	Erase Codes	
ACCORD V6	/	Airbag Control System (SRS) MA0	Read Live Data	
ACCORD V6	/	Airbag Control System (SRS) MA1	Read ECU Information	
ACCORD V6	/	Airbag Control System (SRS) MA1	Read codes	
ACCORD V6	/	Airbag Control System (SRS) MA1	Erase Codes	
ACCORD V6	/	Airbag Control System (SRS) MA1	Read Live Data	
ACCORD V6	/	Airbag Control System (SRS) MA1	Miscellaneous Test	OPDS Initialization
ACCORD V6	/	Airbag Control System (SRS) MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ACCORD V6	/	Airbag Control System (SRS) M2A	Read codes	
ACCORD V6	/	Airbag Control System (SRS) M2A	Erase Codes	
ACCORD V6	/	Airbag Control System (SRS) M2A	Read Live Data	
ACCORD V6	/	Airbag Control System (SRS) M9C	Read ECU Information	
ACCORD V6	/	Airbag Control System (SRS) M9C	Read codes	
ACCORD V6	/	Airbag Control System (SRS) M9C	Erase Codes	
ACCORD V6	/	Airbag Control System (SRS) M9C	Read Live Data	
ACCORD V6	/	Airbag Control System (SRS) M9D	Read ECU Information	
ACCORD V6	/	Airbag Control System (SRS) M9D	Read codes	
ACCORD V6	/	Airbag Control System (SRS) M9D	Erase Codes	
ACCORD V6	/	Airbag Control System (SRS) M9D	Read Freeze Frame Data	
ACCORD V6	/	Airbag Control System (SRS) M9D	Read Live Data	
ACCORD V6	/	Airbag Control System (SRS) M9D	Parameter Information	
ACCORD V6	/	Airbag Control System (SRS) M9D	CALIBRATION	ODS Unit Initialization
ACCORD V6	/	Airbag Control System (SRS) M9D	CALIBRATION	OPDS Initialization
ACCORD V6	/	Airbag Control System (SRS) M9D	CALIBRATION	SWS Initialization
ACCORD V6	/	Airbag Control System (SRS) M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
ACCORD V6	/	Airbag Control System (SRS) M9D	Function Test	
ACCORD V6	/	Airbag Control System (SRS) M9D	System Information	
ACCORD V6	/	Variable Valve Timing Control System (SVT) MA2	Read ECU Information	
ACCORD V6	/	Variable Valve Timing Control System (SVT) MA2	Read codes	
ACCORD V6	/	Variable Valve Timing Control System (SVT) MA2	Erase Codes	
ACCORD V6	/	Variable Valve Timing Control System (SVT) MA2	Read Freeze Frame Data	

ACCORD V6	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ACCORD V6	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ACCORD V6	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ACCORD V6	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ACCORD V6	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ACCORD V6	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ACCORD V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ACCORD V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ACCORD V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ACCORD V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ACCORD V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
ACCORD V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ACCORD V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ACCORD V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ACCORD V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
ACTY	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ACTY	/	Four-wheel steering control system (4WS)	M52	Read codes	
ACTY	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
ACTY	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ACTY	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
ACTY	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ACTY	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ACTY	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
ACTY	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ACTY	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ACTY	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ACTY	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
ACTY	/	Automatic shift control system (A/T)	M1E	Read codes	
ACTY	/	Automatic shift control system (A/T)	M1E	Erase Codes	
ACTY	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ACTY	/	Automatic shift control system (A/T)	M1E	Read Live Data	
ACTY	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
ACTY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ACTY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ACTY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACTY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACTY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACTY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACTY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ACTY	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
ACTY	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
ACTY	/	Automatic shift control system (A/T)	M3B	Read codes	
ACTY	/	Automatic shift control system (A/T)	M3B	Erase Codes	
ACTY	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ACTY	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
ACTY	/	Automatic shift control system (A/T)	M3B	Read Live Data	
ACTY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ACTY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ACTY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
ACTY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ACTY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ACTY	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
ACTY	/	Automatic shift control system (A/T)	M3C	Read codes	
ACTY	/	Automatic shift control system (A/T)	M3C	Erase Codes	
ACTY	/	Automatic shift control system (A/T)	M81	Read ECU Information	
ACTY	/	Automatic shift control system (A/T)	M81	Read codes	
ACTY	/	Automatic shift control system (A/T)	M81	Erase Codes	
ACTY	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ACTY	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
ACTY	/	Automatic shift control system (A/T)	M81	Read Live Data	
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACTY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
ACTY	/	Automatic shift control system (A/T)	M82	Read ECU Information	
ACTY	/	Automatic shift control system (A/T)	M82	Read codes	
ACTY	/	Automatic shift control system (A/T)	M82	Erase Codes	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test

ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 1
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 2
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	LIGHT CHECK
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
ACTY	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
ACTY	/	Active Engine Control Support System (ACM) M06	Read codes	
ACTY	/	Active Engine Control Support System (ACM) M06	Erase Codes	
ACTY	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
ACTY	/	Active Engine Control Support System (ACM) M06	Read Live Data	
ACTY	/	Active Engine Control Support System (ACM) M06	ACM Reset	
ACTY	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
ACTY	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
ACTY	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ACTY	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
ACTY	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
ACTY	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
ACTY	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
ACTY	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
ACTY	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
ACTY	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
ACTY	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
ACTY	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
ACTY	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
ACTY	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
ACTY	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
ACTY	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
ACTY	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
ACTY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
ACTY	/	Transmission Control System (AT) M18	Read ECU Information	
ACTY	/	Transmission Control System (AT) M18	Read codes	
ACTY	/	Transmission Control System (AT) M18	Erase Codes	
ACTY	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
ACTY	/	Transmission Control System (AT) M18	Read Live Data	
ACTY	/	Transmission Control System (AT) M18	Adjustment	
ACTY	/	Active Torque Converter Control System (ATTTS) M0E	Read ECU Information	
ACTY	/	Active Torque Converter Control System (ATTTS) M0E	Read codes	
ACTY	/	Active Torque Converter Control System (ATTTS) M0E	Erase Codes	
ACTY	/	Active Torque Converter Control System (ATTTS) M0E	Read Freeze Frame Data	
ACTY	/	Active Torque Converter Control System (ATTTS) M0E	Read Live Data	
ACTY	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
ACTY	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	STEERING ANGLE
ACTY	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ACTY	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	ALL SENSORS
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
ACTY	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
ACTY	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
ACTY	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection

ACTY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Function Test	Preceding Vehicle Detection
ACTY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
ACTY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
ACTY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Reset Operation
ACTY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Returning Operation
ACTY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Automatic Returning Distance
ACTY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Manual Returning Time
ACTY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Reset to default
ACTY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
ACTY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
ACTY	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
ACTY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
ACTY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
ACTY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
ACTY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
ACTY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
ACTY	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
ACTY	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
ACTY	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ACTY	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ACTY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ACTY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ACTY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ACTY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ACTY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command

ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ACTY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ACTY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ACTY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ACTY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ACTY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ACTY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ACTY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
ACTY	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ACTY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ACTY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
ACTY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ACTY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ACTY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ACTY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Security	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ACTY	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
ACTY	/	BODY ELECTRICAL/Security	MFF	History Data	
ACTY	/	BODY ELECTRICAL/Security	MFF	History Clear	
ACTY	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ACTY	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ACTY	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACTY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ACTY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACTY	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ACTY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
ACTY	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ACTY	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ACTY	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ACTY	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
ACTY	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ACTY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
ACTY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ACTY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ACTY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	

ACTY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ACTY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ACTY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ACTY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ACTY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ACTY	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ACTY	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ACTY	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ACTY	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
ACTY	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ACTY	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
ACTY	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ACTY	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ACTY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read ECU Information	
ACTY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read codes	
ACTY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Erase Codes	
ACTY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Freeze Frame Data	
ACTY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Live Data	
ACTY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	CMBS (CMS) ACTIVATION HISTORY	
ACTY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	RADAR AIMING
ACTY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	CMBS Brake
ACTY	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read ECU Information	
ACTY	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read codes	
ACTY	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Erase Codes	
ACTY	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Freeze Frame Data	
ACTY	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Live Data	
ACTY	/	Promise Automatic Transmission Control System (CVT M1B	M1B	ECMPCM Reset	
ACTY	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Lock Solenoid Test
ACTY	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Solenoid Tests
ACTY	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Electrical Oil Pump Activation
ACTY	/	Promise Automatic Transmission Control System (CVT M33	M33	Read ECU Information	
ACTY	/	Promise Automatic Transmission Control System (CVT M33	M33	Read codes	
ACTY	/	Promise Automatic Transmission Control System (CVT M33	M33	Erase Codes	
ACTY	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Freeze Frame Data	
ACTY	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Live Data	
ACTY	/	Promise Automatic Transmission Control System (CVT M33	M33	ECMPCM Reset	
ACTY	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Inhibitor Solenoid
ACTY	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid A (LF)
ACTY	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid B (RF)
ACTY	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Start Clutch Feedback Learn
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read ECU Information	
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read codes	
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Erase Codes	
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Freeze Frame Data	
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Live Data	
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	ECMPCM Reset	
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Inhibitor Solenoid
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid A (LF)
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid B (RF)
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Start Clutch Feedback Learn
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve A
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve B
ACTY	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve O/P
ACTY	/	DBW	M34	Read ECU Information	
ACTY	/	DBW	M34	Read codes	
ACTY	/	DBW	M34	Erase Codes	
ACTY	/	DBW	M34	Read Freeze Frame Data	
ACTY	/	DBW	M34	Read Live Data	
ACTY	/	DBW	M34	Inspection	Idle Speed Adjust
ACTY	/	DBW	M34	Inspection	Throttle Test
ACTY	/	DBW	M34	ECM Reset	
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration

ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
ACTY	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
ACTY	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
ACTY	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
ACTY	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
ACTY	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
ACTY	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
ACTY	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
ACTY	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
ACTY	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
ACTY	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
ACTY	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
ACTY	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
ACTY	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
ACTY	/	Capacitor Control System (EDLC)	M12	Read codes	
ACTY	/	Capacitor Control System (EDLC)	M12	Erase Codes	
ACTY	/	Capacitor Control System (EDLC)	M12	Read Live Data	
ACTY	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
ACTY	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
ACTY	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
ACTY	/	Electronic Brake Control System (EPB)	M1F	Read codes	
ACTY	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
ACTY	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
ACTY	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
ACTY	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
ACTY	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
ACTY	/	Electronic Brake Control System (EPB)	M3E	Read codes	
ACTY	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
ACTY	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
ACTY	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
ACTY	/	Electric Powertrain / IMA	M66	Read ECU Information	
ACTY	/	Electric Powertrain / IMA	M66	Read codes	
ACTY	/	Electric Powertrain / IMA	M66	Erase Codes	
ACTY	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
ACTY	/	Electric Powertrain / IMA	M66	Read Live Data	
ACTY	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
ACTY	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
ACTY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
ACTY	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ACTY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ACTY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
ACTY	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ACTY	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ACTY	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ACTY	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ACTY	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ACTY	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ACTY	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
ACTY	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ACTY	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ACTY	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ACTY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ACTY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ACTY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ACTY	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ACTY	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ACTY	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ACTY	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ACTY	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ACTY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ACTY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ACTY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ACTY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ACTY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
ACTY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ACTY	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ACTY	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ACTY	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ACTY	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ACTY	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
ACTY	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ACTY	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ACTY	/	New energy battery (EV)	M44	Read ECU Information	

ACTY	/	New energy battery (EV)	M44	Read codes	
ACTY	/	New energy battery (EV)	M44	Erase Codes	
ACTY	/	New energy battery (EV)	M44	Read Freeze Frame Data	
ACTY	/	New energy battery (EV)	M44	Read Live Data	
ACTY	/	New energy battery (EV)	M44	Inspection	
ACTY	/	New energy battery (EV)	M44	Adjustment	
ACTY	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
ACTY	/	Electronic vacuum pump (EVPS)	M21	Read codes	
ACTY	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ACTY	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ACTY	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ACTY	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ACTY	/	Electronic vacuum pump (EVPS)	M22	Read codes	
ACTY	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ACTY	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ACTY	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ACTY	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ACTY	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ACTY	/	FCW LDW	M4E	Read ECU Information	
ACTY	/	FCW LDW	M4E	Read codes	
ACTY	/	FCW LDW	M4E	Erase Codes	
ACTY	/	FCW LDW	M4E	Read Live Data	
ACTY	/	FCW LDW	M4E	Function Test	FCW Drive
ACTY	/	FCW LDW	M4E	Function Test	Left side lane departure warning
ACTY	/	FCW LDW	M4E	Function Test	Right side lane departure warning
ACTY	/	FCW LDW	M4E	Function Test	Indicator Drive
ACTY	/	FCW LDW	M4E	Adjustment	
ACTY	/	Instrument Display System (GAUGE)	M2C	Read codes	
ACTY	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
ACTY	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
ACTY	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ACTY	/	Anti-lock brake control system (ABS)	M01	Read codes	
ACTY	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
ACTY	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ACTY	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
ACTY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ACTY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ACTY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ACTY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ACTY	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ACTY	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ACTY	/	Anti-lock brake control system (ABS)	M02	Read codes	
ACTY	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
ACTY	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ACTY	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
ACTY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ACTY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
ACTY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ACTY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ACTY	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
ACTY	/	Anti-lock brake control system (ABS)	M03	Read codes	
ACTY	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
ACTY	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
ACTY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ACTY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ACTY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ACTY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ACTY	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
ACTY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ACTY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ACTY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ACTY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ACTY	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ACTY	/	Anti-lock brake control system (ABS)	M19	Read codes	
ACTY	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
ACTY	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
ACTY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ACTY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ACTY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
ACTY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ACTY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ACTY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ACTY	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ACTY	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ACTY	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
ACTY	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ACTY	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
ACTY	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	



ACTY	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ACTY	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ACTY	/	Intelligent Parking Control System (SPS)	M9B	Customize	
ACTY	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ACTY	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ACTY	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ACTY	/	Hydraulic booster control system (HBS)	M5F	Read codes	
ACTY	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ACTY	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ACTY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ACTY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ACTY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ACTY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ACTY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ACTY	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ACTY	/	IMA	M63	Read ECU Information	
ACTY	/	IMA	M63	Read codes	
ACTY	/	IMA	M63	Erase Codes	
ACTY	/	IMA	M63	Read Freeze Frame Data	
ACTY	/	IMA	M63	Read Live Data	
ACTY	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ACTY	/	IMA	M63	Adjustment	SOC PRESET
ACTY	/	IMA	M64	Read ECU Information	
ACTY	/	IMA	M64	Read codes	
ACTY	/	IMA	M64	Erase Codes	
ACTY	/	IMA	M64	Read Freeze Frame Data	
ACTY	/	IMA	M64	Read Live Data	
ACTY	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ACTY	/	IMA	M64	Adjustment	SOC PRESET
ACTY	/	IMA	M65	Read ECU Information	
ACTY	/	IMA	M65	Read codes	
ACTY	/	IMA	M65	Erase Codes	
ACTY	/	IMA	M65	Read Freeze Frame Data	
ACTY	/	IMA	M65	Read Live Data	
ACTY	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
ACTY	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ACTY	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ACTY	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ACTY	/	Intake Sounder Control System (ISC)	M6D	Read codes	
ACTY	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ACTY	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ACTY	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ACTY	/	Night Vision System (INVS)	0XB1	Read ECU Information	
ACTY	/	Night Vision System (INVS)	0XB1	Read codes	
ACTY	/	Night Vision System (INVS)	0XB1	Erase Codes	
ACTY	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ACTY	/	Night Vision System (INVS)	0XB1	Read Live Data	
ACTY	/	Night Vision System (INVS)	0XB1	Adjustment	
ACTY	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ACTY	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ACTY	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ACTY	/	i-SHIFT	0XB0	Read ECU Information	
ACTY	/	i-SHIFT	0XB0	Read codes	
ACTY	/	i-SHIFT	0XB0	Erase Codes	
ACTY	/	i-SHIFT	0XB0	Read Live Data	
ACTY	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ACTY	/	Keyless Entry Control System (KAS)	M99	Read codes	
ACTY	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
ACTY	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
ACTY	/	Keyless Entry Control System (KAS)	M99	Self Check	
ACTY	/	Keyless Entry Control System (KAS)	M99	History Data	
ACTY	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output

ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ACTY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ACTY	/	Keyless Entry Control System (KAS)	M99	Registration	
ACTY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ACTY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ACTY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
ACTY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
ACTY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
ACTY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
ACTY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
ACTY	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
ACTY	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
ACTY	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
ACTY	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
ACTY	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
ACTY	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
ACTY	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
ACTY	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
ACTY	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
ACTY	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
ACTY	/	Management ECU Module (ME)	M74	Read ECU Information	
ACTY	/	Management ECU Module (ME)	M74	Read codes	
ACTY	/	Management ECU Module (ME)	M74	Erase Codes	
ACTY	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
ACTY	/	Management ECU Module (ME)	M74	Read Live Data	
ACTY	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
ACTY	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
ACTY	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
ACTY	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
ACTY	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
ACTY	/	Multi-view camera system (MVCS)	M7A	Read codes	
ACTY	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
ACTY	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
ACTY	/	Multi-view camera system (MVCS)	M7A	Customization	
ACTY	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
ACTY	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
ACTY	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
ACTY	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
ACTY	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
ACTY	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
ACTY	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
ACTY	/	Power Control Unit (PCU)	M83	Read ECU Information	
ACTY	/	Power Control Unit (PCU)	M83	Read codes	
ACTY	/	Power Control Unit (PCU)	M83	Erase Codes	
ACTY	/	Power Control Unit (PCU)	M83	Read Live Data	
ACTY	/	Power Control Unit (PCU)	M83	Self Check	
ACTY	/	Power Control Unit (PCU)	M83	History Data	
ACTY	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
ACTY	/	Engine Control System (PGM-FI)	M23	Read codes	
ACTY	/	Engine Control System (PGM-FI)	M23	Erase Codes	
ACTY	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
ACTY	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
ACTY	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
ACTY	/	Engine Control System (PGM-FI)	M23	Read Live Data	
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ACTY	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ACTY	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
ACTY	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ACTY	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
ACTY	/	Engine Control System (PGM-FI)	M23	VIN CHECK	

ACTY	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
ACTY	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
ACTY	/	Engine Control System (PGM-FI)	M50	Read codes	
ACTY	/	Engine Control System (PGM-FI)	M50	Erase Codes	
ACTY	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
ACTY	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
ACTY	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
ACTY	/	Engine Control System (PGM-FI)	M50	Read Live Data	
ACTY	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
ACTY	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
ACTY	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
ACTY	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
ACTY	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
ACTY	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
ACTY	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
ACTY	/	Engine Control System (PGM-FI)	M86	Read codes	
ACTY	/	Engine Control System (PGM-FI)	M86	Erase Codes	
ACTY	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
ACTY	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
ACTY	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
ACTY	/	Engine Control System (PGM-FI)	M86	Read Live Data	
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ACTY	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ACTY	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ACTY	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ACTY	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
ACTY	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ACTY	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
ACTY	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
ACTY	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
ACTY	/	PSR	M27	Read ECU Information	
ACTY	/	PSR	M27	Read codes	
ACTY	/	PSR	M27	Erase Codes	
ACTY	/	PSR	M27	Read Live Data	
ACTY	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ACTY	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
ACTY	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ACTY	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ACTY	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
ACTY	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
ACTY	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
ACTY	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
ACTY	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
ACTY	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
ACTY	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
ACTY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
ACTY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
ACTY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
ACTY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
ACTY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
ACTY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
ACTY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
ACTY	/	Remote starter (RS)	M90	System Check	
ACTY	/	Remote starter (RS)	M90	HISTORY	
ACTY	/	Remote starter (RS)	M90	Registration	
ACTY	/	Seat load cell (SWS)	M6F	Read ECU Information	
ACTY	/	Seat load cell (SWS)	M6F	Read codes	
ACTY	/	Seat load cell (SWS)	M6F	Erase Codes	
ACTY	/	Seat load cell (SWS)	M6F	Read Live Data	
ACTY	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
ACTY	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
ACTY	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
ACTY	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
ACTY	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
ACTY	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
ACTY	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
ACTY	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	

ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ACTY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
ACTY	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
ACTY	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
ACTY	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
ACTY	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
ACTY	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
ACTY	/	Groove track drive unit (SLOT ECU)	M98	History Data	
ACTY	/	Groove track drive unit (SLOT ECU)	M98	System Information	
ACTY	/	Airbag Control System (SRS)	M9F	Read ECU Information	
ACTY	/	Airbag Control System (SRS)	M9F	Read codes	
ACTY	/	Airbag Control System (SRS)	M9F	Erase Codes	
ACTY	/	Airbag Control System (SRS)	M9F	Read Live Data	
ACTY	/	Airbag Control System (SRS)	MA0	Read ECU Information	
ACTY	/	Airbag Control System (SRS)	MA0	Read codes	
ACTY	/	Airbag Control System (SRS)	MA0	Erase Codes	
ACTY	/	Airbag Control System (SRS)	MA0	Read Live Data	
ACTY	/	Airbag Control System (SRS)	MA1	Read ECU Information	
ACTY	/	Airbag Control System (SRS)	MA1	Read codes	
ACTY	/	Airbag Control System (SRS)	MA1	Erase Codes	
ACTY	/	Airbag Control System (SRS)	MA1	Read Live Data	
ACTY	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
ACTY	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ACTY	/	Airbag Control System (SRS)	M2A	Read codes	
ACTY	/	Airbag Control System (SRS)	M2A	Erase Codes	
ACTY	/	Airbag Control System (SRS)	M2A	Read Live Data	
ACTY	/	Airbag Control System (SRS)	M9C	Read ECU Information	
ACTY	/	Airbag Control System (SRS)	M9C	Read codes	
ACTY	/	Airbag Control System (SRS)	M9C	Erase Codes	
ACTY	/	Airbag Control System (SRS)	M9C	Read Live Data	
ACTY	/	Airbag Control System (SRS)	M9D	Read ECU Information	
ACTY	/	Airbag Control System (SRS)	M9D	Read codes	
ACTY	/	Airbag Control System (SRS)	M9D	Erase Codes	
ACTY	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
ACTY	/	Airbag Control System (SRS)	M9D	Read Live Data	
ACTY	/	Airbag Control System (SRS)	M9D	Parameter Information	
ACTY	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
ACTY	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
ACTY	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
ACTY	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
ACTY	/	Airbag Control System (SRS)	M9D	Function Test	
ACTY	/	Airbag Control System (SRS)	M9D	System Information	
ACTY	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
ACTY	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
ACTY	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
ACTY	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
ACTY	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ACTY	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ACTY	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ACTY	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ACTY	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ACTY	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ACTY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ACTY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ACTY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ACTY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ACTY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
ACTY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ACTY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ACTY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ACTY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
ACTY VAN	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ACTY VAN	/	Four-wheel steering control system (4WS)	M52	Read codes	
ACTY VAN	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
ACTY VAN	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ACTY VAN	/	Four-wheel steering control system (4WS)	M52	Read Live Data	

ACTY VAN	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ACTY VAN	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ACTY VAN	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
ACTY VAN	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ACTY VAN	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ACTY VAN	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ACTY VAN	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
ACTY VAN	/	Automatic shift control system (A/T)	M1E	Read codes	
ACTY VAN	/	Automatic shift control system (A/T)	M1E	Erase Codes	
ACTY VAN	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ACTY VAN	/	Automatic shift control system (A/T)	M1E	Read Live Data	
ACTY VAN	/	Automatic shift control system (A/T)	M1E	ECMPCMC Reset	
ACTY VAN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ACTY VAN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ACTY VAN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACTY VAN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACTY VAN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACTY VAN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACTY VAN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ACTY VAN	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
ACTY VAN	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
ACTY VAN	/	Automatic shift control system (A/T)	M3B	Read codes	
ACTY VAN	/	Automatic shift control system (A/T)	M3B	Erase Codes	
ACTY VAN	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ACTY VAN	/	Automatic shift control system (A/T)	M3B	ECMPCMC Reset	
ACTY VAN	/	Automatic shift control system (A/T)	M3B	Read Live Data	
ACTY VAN	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ACTY VAN	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ACTY VAN	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
ACTY VAN	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ACTY VAN	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
ACTY VAN	/	Automatic shift control system (A/T)	M3C	Read codes	
ACTY VAN	/	Automatic shift control system (A/T)	M3C	Erase Codes	
ACTY VAN	/	Automatic shift control system (A/T)	M81	Read ECU Information	
ACTY VAN	/	Automatic shift control system (A/T)	M81	Read codes	
ACTY VAN	/	Automatic shift control system (A/T)	M81	Erase Codes	
ACTY VAN	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ACTY VAN	/	Automatic shift control system (A/T)	M81	ECMPCMC Reset	
ACTY VAN	/	Automatic shift control system (A/T)	M81	Read Live Data	
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ACTY VAN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
ACTY VAN	/	Automatic shift control system (A/T)	M82	Read ECU Information	
ACTY VAN	/	Automatic shift control system (A/T)	M82	Read codes	
ACTY VAN	/	Automatic shift control system (A/T)	M82	Erase Codes	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
ACTY VAN	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
ACTY VAN	/	Active Engine Control Support System (ACM)	M06	Read codes	
ACTY VAN	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
ACTY VAN	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
ACTY VAN	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
ACTY VAN	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
ACTY VAN	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
ACTY VAN	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
ACTY VAN	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ACTY VAN	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
ACTY VAN	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
ACTY VAN	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
ACTY VAN	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
ACTY VAN	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
ACTY VAN	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
ACTY VAN	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
ACTY VAN	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	

ACTY VAN	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Read Live Data	
ACTY VAN	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Function Test	Damper Force Operation Test
ACTY VAN	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Adjustment	Damper Stroke Calibration
ACTY VAN	/	Active / Automatic Shock Absorber Control System (A M1A	M18	Read codes	
ACTY VAN	/	Active / Automatic Shock Absorber Control System (A M1A	M18	Erase Codes	
ACTY VAN	/	Active / Automatic Shock Absorber Control System (A M1A	M18	Read Live Data	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Read codes	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Erase Codes	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Read Freeze Frame Data	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Read Live Data	
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	ACC Brake (Brake Actuator)
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	CMBS Brake
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	Brake Light (ACC Relay)
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	Indicator Light
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	Information Display
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	Alarm Test
ACTY VAN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Adjustment	Radar aiming
ACTY VAN	/	Transmission Control System (AT)	M18	Read ECU Information	
ACTY VAN	/	Transmission Control System (AT)	M18	Read codes	
ACTY VAN	/	Transmission Control System (AT)	M18	Erase Codes	
ACTY VAN	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
ACTY VAN	/	Transmission Control System (AT)	M18	Read Live Data	
ACTY VAN	/	Transmission Control System (AT)	M18	Adjustment	
ACTY VAN	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
ACTY VAN	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
ACTY VAN	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
ACTY VAN	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
ACTY VAN	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
ACTY VAN	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
ACTY VAN	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
ACTY VAN	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ACTY VAN	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
ACTY VAN	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
ACTY VAN	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
ACTY VAN	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
ACTY VAN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
ACTY VAN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
ACTY VAN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
ACTY VAN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
ACTY VAN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
ACTY VAN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
ACTY VAN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
ACTY VAN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
ACTY VAN	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
ACTY VAN	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
ACTY VAN	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
ACTY VAN	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
ACTY VAN	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
ACTY VAN	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
ACTY VAN	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
ACTY VAN	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
ACTY VAN	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
ACTY VAN	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
ACTY VAN	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	

ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ACTY VAN	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ACTY VAN	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ACTY VAN	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ACTY VAN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ACTY VAN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ACTY VAN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ACTY VAN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ACTY VAN	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ACTY VAN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ACTY VAN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ACTY VAN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ACTY VAN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ACTY VAN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
ACTY VAN	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ACTY VAN	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ACTY VAN	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor

ACTY VAN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ACTY VAN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ACTY VAN	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ACTY VAN	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Security	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ACTY VAN	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
ACTY VAN	/	BODY ELECTRICAL/Security	MFF	History Data	
ACTY VAN	/	BODY ELECTRICAL/Security	MFF	History Clear	
ACTY VAN	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ACTY VAN	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ACTY VAN	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACTY VAN	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ACTY VAN	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ACTY VAN	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ACTY VAN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
ACTY VAN	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ACTY VAN	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ACTY VAN	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ACTY VAN	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
ACTY VAN	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ACTY VAN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
ACTY VAN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ACTY VAN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ACTY VAN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
ACTY VAN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ACTY VAN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ACTY VAN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ACTY VAN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ACTY VAN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ACTY VAN	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ACTY VAN	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ACTY VAN	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ACTY VAN	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
ACTY VAN	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ACTY VAN	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
ACTY VAN	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ACTY VAN	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ACTY VAN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
ACTY VAN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
ACTY VAN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
ACTY VAN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
ACTY VAN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
ACTY VAN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
ACTY VAN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING



ACTY VAN	/	Collision Mitigation Brake Control System (CMBS/CM	M2E	Miscellaneous Test	CMBS Brake
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
ACTY VAN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
ACTY VAN	/	DBW	M34	Read ECU Information	
ACTY VAN	/	DBW	M34	Read codes	
ACTY VAN	/	DBW	M34	Erase Codes	
ACTY VAN	/	DBW	M34	Read Freeze Frame Data	
ACTY VAN	/	DBW	M34	Read Live Data	
ACTY VAN	/	DBW	M34	Inspection	Idle Speed Adjust
ACTY VAN	/	DBW	M34	Inspection	Throttle Test
ACTY VAN	/	DBW	M34	ECM Reset	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'

ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
ACTY VAN	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
ACTY VAN	/	Capacitor Control System (EDLC)	M12	Read codes	
ACTY VAN	/	Capacitor Control System (EDLC)	M12	Erase Codes	
ACTY VAN	/	Capacitor Control System (EDLC)	M12	Read Live Data	
ACTY VAN	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
ACTY VAN	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
ACTY VAN	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
ACTY VAN	/	Electronic Brake Control System (EPB)	M1F	Read codes	
ACTY VAN	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
ACTY VAN	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
ACTY VAN	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
ACTY VAN	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
ACTY VAN	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
ACTY VAN	/	Electronic Brake Control System (EPB)	M3E	Read codes	
ACTY VAN	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
ACTY VAN	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
ACTY VAN	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
ACTY VAN	/	Electric Powertrain / IMA	M66	Read ECU Information	
ACTY VAN	/	Electric Powertrain / IMA	M66	Read codes	
ACTY VAN	/	Electric Powertrain / IMA	M66	Erase Codes	
ACTY VAN	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
ACTY VAN	/	Electric Powertrain / IMA	M66	Read Live Data	
ACTY VAN	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
ACTY VAN	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
ACTY VAN	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
ACTY VAN	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ACTY VAN	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ACTY VAN	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
ACTY VAN	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ACTY VAN	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ACTY VAN	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ACTY VAN	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ACTY VAN	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ACTY VAN	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ACTY VAN	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ACTY VAN	/	New energy battery (EV)	M44	Read ECU Information	
ACTY VAN	/	New energy battery (EV)	M44	Read codes	
ACTY VAN	/	New energy battery (EV)	M44	Erase Codes	
ACTY VAN	/	New energy battery (EV)	M44	Read Freeze Frame Data	
ACTY VAN	/	New energy battery (EV)	M44	Read Live Data	
ACTY VAN	/	New energy battery (EV)	M44	Inspection	
ACTY VAN	/	New energy battery (EV)	M44	Adjustment	
ACTY VAN	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
ACTY VAN	/	Electronic vacuum pump (EVPS)	M21	Read codes	
ACTY VAN	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ACTY VAN	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ACTY VAN	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ACTY VAN	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ACTY VAN	/	Electronic vacuum pump (EVPS)	M22	Read codes	
ACTY VAN	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ACTY VAN	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ACTY VAN	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ACTY VAN	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ACTY VAN	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ACTY VAN	/	FCW LDW	M4E	Read ECU Information	
ACTY VAN	/	FCW LDW	M4E	Read codes	
ACTY VAN	/	FCW LDW	M4E	Erase Codes	
ACTY VAN	/	FCW LDW	M4E	Read Live Data	
ACTY VAN	/	FCW LDW	M4E	Function Test	FCW Drive
ACTY VAN	/	FCW LDW	M4E	Function Test	Left side lane departure warning
ACTY VAN	/	FCW LDW	M4E	Function Test	Right side lane departure warning
ACTY VAN	/	FCW LDW	M4E	Function Test	Indicator Drive
ACTY VAN	/	FCW LDW	M4E	Adjustment	
ACTY VAN	/	Instrument Display System (GAUGE)	M2C	Read codes	
ACTY VAN	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
ACTY VAN	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Read codes	

ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Read codes	
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Read codes	
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ACTY VAN	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Read codes	
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ACTY VAN	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
ACTY VAN	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ACTY VAN	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
ACTY VAN	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
ACTY VAN	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ACTY VAN	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ACTY VAN	/	Intelligent Parking Control System (SPS)	M9B	Customize	
ACTY VAN	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ACTY VAN	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ACTY VAN	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ACTY VAN	/	Hydraulic booster control system (HBS)	M5F	Read codes	
ACTY VAN	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ACTY VAN	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ACTY VAN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ACTY VAN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ACTY VAN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ACTY VAN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ACTY VAN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ACTY VAN	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ACTY VAN	/	IMA	M63	Read ECU Information	
ACTY VAN	/	IMA	M63	Read codes	
ACTY VAN	/	IMA	M63	Erase Codes	
ACTY VAN	/	IMA	M63	Read Freeze Frame Data	
ACTY VAN	/	IMA	M63	Read Live Data	
ACTY VAN	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ACTY VAN	/	IMA	M63	Adjustment	SOC PRESET
ACTY VAN	/	IMA	M64	Read ECU Information	
ACTY VAN	/	IMA	M64	Read codes	
ACTY VAN	/	IMA	M64	Erase Codes	
ACTY VAN	/	IMA	M64	Read Freeze Frame Data	
ACTY VAN	/	IMA	M64	Read Live Data	
ACTY VAN	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ACTY VAN	/	IMA	M64	Adjustment	SOC PRESET
ACTY VAN	/	IMA	M65	Read ECU Information	
ACTY VAN	/	IMA	M65	Read codes	
ACTY VAN	/	IMA	M65	Erase Codes	

ACTY VAN	/	IMA	M65	Read Freeze Frame Data	
ACTY VAN	/	IMA	M65	Read Live Data	
ACTY VAN	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
ACTY VAN	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ACTY VAN	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ACTY VAN	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ACTY VAN	/	Intake Sounder Control System (ISC)	M6D	Read codes	
ACTY VAN	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ACTY VAN	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ACTY VAN	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ACTY VAN	/	Night Vision System (INVS)	0XB1	Read ECU Information	
ACTY VAN	/	Night Vision System (INVS)	0XB1	Read codes	
ACTY VAN	/	Night Vision System (INVS)	0XB1	Erase Codes	
ACTY VAN	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ACTY VAN	/	Night Vision System (INVS)	0XB1	Read Live Data	
ACTY VAN	/	Night Vision System (INVS)	0XB1	Adjustment	
ACTY VAN	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ACTY VAN	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ACTY VAN	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ACTY VAN	/	i-SHIFT	0XB0	Read ECU Information	
ACTY VAN	/	i-SHIFT	0XB0	Read codes	
ACTY VAN	/	i-SHIFT	0XB0	Erase Codes	
ACTY VAN	/	i-SHIFT	0XB0	Read Live Data	
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Read codes	
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Self Check	
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	History Data	
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ACTY VAN	/	Keyless Entry Control System (KAS)	M99	Registration	
ACTY VAN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ACTY VAN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ACTY VAN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
ACTY VAN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
ACTY VAN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
ACTY VAN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
ACTY VAN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
ACTY VAN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
ACTY VAN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
ACTY VAN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
ACTY VAN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
ACTY VAN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	

ACTY VAN	/	Electronically assisted lane keeping control system (Lk M71	Adjustment	STEERING REWRITE
ACTY VAN	/	Electronically assisted lane keeping control system (Lk M71	Customize	LDW OFFSET
ACTY VAN	/	Electronically assisted lane keeping control system (Lk M71	Customize	GAIN ADJUST
ACTY VAN	/	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
ACTY VAN	/	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
ACTY VAN	/	Management ECU Module (ME) M74	Read ECU Information	
ACTY VAN	/	Management ECU Module (ME) M74	Read codes	
ACTY VAN	/	Management ECU Module (ME) M74	Erase Codes	
ACTY VAN	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
ACTY VAN	/	Management ECU Module (ME) M74	Read Live Data	
ACTY VAN	/	Multi-view camera and parking assist system (MVC/P) M26	Read ECU Information	
ACTY VAN	/	Multi-view camera and parking assist system (MVC/P) M26	Read codes	
ACTY VAN	/	Multi-view camera and parking assist system (MVC/P) M26	Erase Codes	
ACTY VAN	/	Multi-view camera and parking assist system (MVC/P) M26	Read Live Data	
ACTY VAN	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
ACTY VAN	/	Multi-view camera system (MVCS) M7A	Read codes	
ACTY VAN	/	Multi-view camera system (MVCS) M7A	Erase Codes	
ACTY VAN	/	Multi-view camera system (MVCS) M7A	Read Live Data	
ACTY VAN	/	Multi-view camera system (MVCS) M7A	Customization	
ACTY VAN	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
ACTY VAN	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
ACTY VAN	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
ACTY VAN	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
ACTY VAN	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
ACTY VAN	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
ACTY VAN	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
ACTY VAN	/	Power Control Unit (PCU) M83	Read ECU Information	
ACTY VAN	/	Power Control Unit (PCU) M83	Read codes	
ACTY VAN	/	Power Control Unit (PCU) M83	Erase Codes	
ACTY VAN	/	Power Control Unit (PCU) M83	Read Live Data	
ACTY VAN	/	Power Control Unit (PCU) M83	Self Check	
ACTY VAN	/	Power Control Unit (PCU) M83	History Data	
ACTY VAN	/	Engine Control System (PGM-FI) M23	Read ECU Information	
ACTY VAN	/	Engine Control System (PGM-FI) M23	Read codes	
ACTY VAN	/	Engine Control System (PGM-FI) M23	Erase Codes	
ACTY VAN	/	Engine Control System (PGM-FI) M23	Readiness Codes	
ACTY VAN	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
ACTY VAN	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
ACTY VAN	/	Engine Control System (PGM-FI) M23	Read Live Data	
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ACTY VAN	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ACTY VAN	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
ACTY VAN	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ACTY VAN	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
ACTY VAN	/	Engine Control System (PGM-FI) M23	VIN CHECK	
ACTY VAN	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
ACTY VAN	/	Engine Control System (PGM-FI) M50	Read ECU Information	
ACTY VAN	/	Engine Control System (PGM-FI) M50	Read codes	
ACTY VAN	/	Engine Control System (PGM-FI) M50	Erase Codes	
ACTY VAN	/	Engine Control System (PGM-FI) M50	Readiness Codes	
ACTY VAN	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
ACTY VAN	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
ACTY VAN	/	Engine Control System (PGM-FI) M50	Read Live Data	
ACTY VAN	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
ACTY VAN	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
ACTY VAN	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
ACTY VAN	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
ACTY VAN	/	Engine Control System (PGM-FI) M50	VIN CHECK	
ACTY VAN	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
ACTY VAN	/	Engine Control System (PGM-FI) M86	Read ECU Information	
ACTY VAN	/	Engine Control System (PGM-FI) M86	Read codes	
ACTY VAN	/	Engine Control System (PGM-FI) M86	Erase Codes	
ACTY VAN	/	Engine Control System (PGM-FI) M86	Readiness Codes	
ACTY VAN	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
ACTY VAN	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
ACTY VAN	/	Engine Control System (PGM-FI) M86	Read Live Data	
ACTY VAN	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
ACTY VAN	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
ACTY VAN	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
ACTY VAN	/	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
ACTY VAN	/	Engine Control System (PGM-FI) M86	Inspection	EGR TEST
ACTY VAN	/	Engine Control System (PGM-FI) M86	Inspection	VTEC TEST
ACTY VAN	/	Engine Control System (PGM-FI) M86	Inspection	IACV TEST
ACTY VAN	/	Engine Control System (PGM-FI) M86	Inspection	O2S TEST
ACTY VAN	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ACTY VAN	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ACTY VAN	/	Engine Control System (PGM-FI) M86	Inspection	RADIATOR FAN

ACTY VAN	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
ACTY VAN	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
ACTY VAN	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
ACTY VAN	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ACTY VAN	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ACTY VAN	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ACTY VAN	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
ACTY VAN	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ACTY VAN	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ACTY VAN	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ACTY VAN	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ACTY VAN	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ACTY VAN	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
ACTY VAN	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ACTY VAN	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
ACTY VAN	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
ACTY VAN	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
ACTY VAN	/	PSR	M27	Read ECU Information	
ACTY VAN	/	PSR	M27	Read codes	
ACTY VAN	/	PSR	M27	Erase Codes	
ACTY VAN	/	PSR	M27	Read Live Data	
ACTY VAN	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ACTY VAN	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
ACTY VAN	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ACTY VAN	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ACTY VAN	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
ACTY VAN	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
ACTY VAN	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
ACTY VAN	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
ACTY VAN	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
ACTY VAN	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
ACTY VAN	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
ACTY VAN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
ACTY VAN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
ACTY VAN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
ACTY VAN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
ACTY VAN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
ACTY VAN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
ACTY VAN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
ACTY VAN	/	Remote starter (RS)	M90	System Check	
ACTY VAN	/	Remote starter (RS)	M90	HISTORY	
ACTY VAN	/	Remote starter (RS)	M90	Registration	
ACTY VAN	/	Seat load cell (SWS)	M6F	Read ECU Information	
ACTY VAN	/	Seat load cell (SWS)	M6F	Read codes	
ACTY VAN	/	Seat load cell (SWS)	M6F	Erase Codes	
ACTY VAN	/	Seat load cell (SWS)	M6F	Read Live Data	
ACTY VAN	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
ACTY VAN	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
ACTY VAN	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
ACTY VAN	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
ACTY VAN	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
ACTY VAN	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
ACTY VAN	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
ACTY VAN	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ACTY VAN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
ACTY VAN	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
ACTY VAN	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
ACTY VAN	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
ACTY VAN	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
ACTY VAN	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
ACTY VAN	/	Groove track drive unit (SLOT ECU)	M98	History Data	
ACTY VAN	/	Groove track drive unit (SLOT ECU)	M98	System Information	
ACTY VAN	/	Airbag Control System (SRS)	M9F	Read ECU Information	
ACTY VAN	/	Airbag Control System (SRS)	M9F	Read codes	
ACTY VAN	/	Airbag Control System (SRS)	M9F	Erase Codes	
ACTY VAN	/	Airbag Control System (SRS)	M9F	Read Live Data	
ACTY VAN	/	Airbag Control System (SRS)	MA0	Read ECU Information	
ACTY VAN	/	Airbag Control System (SRS)	MA0	Read codes	
ACTY VAN	/	Airbag Control System (SRS)	MA0	Erase Codes	
ACTY VAN	/	Airbag Control System (SRS)	MA0	Read Live Data	

ACTY VAN	/	Airbag Control System (SRS)	MA1	Read ECU Information	
ACTY VAN	/	Airbag Control System (SRS)	MA1	Read codes	
ACTY VAN	/	Airbag Control System (SRS)	MA1	Erase Codes	
ACTY VAN	/	Airbag Control System (SRS)	MA1	Read Live Data	
ACTY VAN	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
ACTY VAN	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ACTY VAN	/	Airbag Control System (SRS)	M2A	Read codes	
ACTY VAN	/	Airbag Control System (SRS)	M2A	Erase Codes	
ACTY VAN	/	Airbag Control System (SRS)	M2A	Read Live Data	
ACTY VAN	/	Airbag Control System (SRS)	M9C	Read ECU Information	
ACTY VAN	/	Airbag Control System (SRS)	M9C	Read codes	
ACTY VAN	/	Airbag Control System (SRS)	M9C	Erase Codes	
ACTY VAN	/	Airbag Control System (SRS)	M9C	Read Live Data	
ACTY VAN	/	Airbag Control System (SRS)	M9D	Read ECU Information	
ACTY VAN	/	Airbag Control System (SRS)	M9D	Read codes	
ACTY VAN	/	Airbag Control System (SRS)	M9D	Erase Codes	
ACTY VAN	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
ACTY VAN	/	Airbag Control System (SRS)	M9D	Read Live Data	
ACTY VAN	/	Airbag Control System (SRS)	M9D	Parameter Information	
ACTY VAN	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
ACTY VAN	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
ACTY VAN	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
ACTY VAN	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
ACTY VAN	/	Airbag Control System (SRS)	M9D	Function Test	
ACTY VAN	/	Airbag Control System (SRS)	M9D	System Information	
ACTY VAN	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
ACTY VAN	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
ACTY VAN	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
ACTY VAN	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
ACTY VAN	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ACTY VAN	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ACTY VAN	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ACTY VAN	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ACTY VAN	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ACTY VAN	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ACTY VAN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ACTY VAN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ACTY VAN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ACTY VAN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ACTY VAN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
ACTY VAN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ACTY VAN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ACTY VAN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ACTY VAN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
AIRWAVE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
AIRWAVE	/	Four-wheel steering control system (4WS)	M52	Read codes	
AIRWAVE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
AIRWAVE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
AIRWAVE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
AIRWAVE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
AIRWAVE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
AIRWAVE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
AIRWAVE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
AIRWAVE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
AIRWAVE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
AIRWAVE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
AIRWAVE	/	Automatic shift control system (A/T)	M1E	Read codes	
AIRWAVE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
AIRWAVE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
AIRWAVE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
AIRWAVE	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
AIRWAVE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
AIRWAVE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
AIRWAVE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
AIRWAVE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
AIRWAVE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
AIRWAVE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
AIRWAVE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
AIRWAVE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
AIRWAVE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
AIRWAVE	/	Automatic shift control system (A/T)	M3B	Read codes	
AIRWAVE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
AIRWAVE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
AIRWAVE	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
AIRWAVE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
AIRWAVE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
AIRWAVE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
AIRWAVE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
AIRWAVE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
AIRWAVE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
AIRWAVE	/	Automatic shift control system (A/T)	M3C	Read codes	

AIRWAVE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
AIRWAVE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
AIRWAVE	/	Automatic shift control system (A/T)	M81	Read codes	
AIRWAVE	/	Automatic shift control system (A/T)	M81	Erase Codes	
AIRWAVE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
AIRWAVE	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
AIRWAVE	/	Automatic shift control system (A/T)	M81	Read Live Data	
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
AIRWAVE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
AIRWAVE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
AIRWAVE	/	Automatic shift control system (A/T)	M82	Read codes	
AIRWAVE	/	Automatic shift control system (A/T)	M82	Erase Codes	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
AIRWAVE	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
AIRWAVE	/	Active Engine Control Support System (ACM)	M06	Read codes	
AIRWAVE	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
AIRWAVE	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
AIRWAVE	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
AIRWAVE	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
AIRWAVE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
AIRWAVE	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
AIRWAVE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
AIRWAVE	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
AIRWAVE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
AIRWAVE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
AIRWAVE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
AIRWAVE	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read ECU Information	
AIRWAVE	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read codes	
AIRWAVE	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Erase Codes	
AIRWAVE	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Freeze Frame Data	
AIRWAVE	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Live Data	
AIRWAVE	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Function Test	Damper Force Operation Test
AIRWAVE	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Adjustment	Damper Stroke Calibration
AIRWAVE	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
AIRWAVE	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
AIRWAVE	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
AIRWAVE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
AIRWAVE	/	Transmission Control System (AT)	M18	Read ECU Information	
AIRWAVE	/	Transmission Control System (AT)	M18	Read codes	
AIRWAVE	/	Transmission Control System (AT)	M18	Erase Codes	
AIRWAVE	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
AIRWAVE	/	Transmission Control System (AT)	M18	Read Live Data	
AIRWAVE	/	Transmission Control System (AT)	M18	Adjustment	
AIRWAVE	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
AIRWAVE	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
AIRWAVE	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
AIRWAVE	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
AIRWAVE	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
AIRWAVE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
AIRWAVE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
AIRWAVE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
AIRWAVE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS



AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
AIRWAVE	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
AIRWAVE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
AIRWAVE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
AIRWAVE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
AIRWAVE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
AIRWAVE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
AIRWAVE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
AIRWAVE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
AIRWAVE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
AIRWAVE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
AIRWAVE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
AIRWAVE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
AIRWAVE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
AIRWAVE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
AIRWAVE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
AIRWAVE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
AIRWAVE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
AIRWAVE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
AIRWAVE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
AIRWAVE	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
AIRWAVE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
AIRWAVE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control

AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
AIRWAVE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
AIRWAVE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
AIRWAVE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
AIRWAVE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
AIRWAVE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
AIRWAVE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
AIRWAVE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
AIRWAVE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
AIRWAVE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
AIRWAVE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
AIRWAVE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
AIRWAVE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
AIRWAVE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
AIRWAVE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
AIRWAVE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
AIRWAVE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
AIRWAVE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
AIRWAVE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
AIRWAVE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
AIRWAVE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Security	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
AIRWAVE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
AIRWAVE	/	BODY ELECTRICAL/Security	MFF	History Data	
AIRWAVE	/	BODY ELECTRICAL/Security	MFF	History Clear	
AIRWAVE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	

AIRWAVE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
AIRWAVE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
AIRWAVE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
AIRWAVE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
AIRWAVE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
AIRWAVE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
AIRWAVE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
AIRWAVE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
AIRWAVE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
AIRWAVE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
AIRWAVE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
AIRWAVE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
AIRWAVE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
AIRWAVE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
AIRWAVE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
AIRWAVE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
AIRWAVE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
AIRWAVE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
AIRWAVE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
AIRWAVE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
AIRWAVE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
AIRWAVE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
AIRWAVE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
AIRWAVE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
AIRWAVE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
AIRWAVE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
AIRWAVE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
AIRWAVE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
AIRWAVE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
AIRWAVE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
AIRWAVE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
AIRWAVE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
AIRWAVE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
AIRWAVE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
AIRWAVE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
AIRWAVE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
AIRWAVE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B

AIRWAVE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P	
AIRWAVE	/	DBW	M34	Read ECU Information	
AIRWAVE	/	DBW	M34	Read codes	
AIRWAVE	/	DBW	M34	Erase Codes	
AIRWAVE	/	DBW	M34	Read Freeze Frame Data	
AIRWAVE	/	DBW	M34	Read Live Data	
AIRWAVE	/	DBW	M34	Inspection	Idle Speed Adjust
AIRWAVE	/	DBW	M34	Inspection	Throttle Test
AIRWAVE	/	DBW	M34	ECM Reset	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
AIRWAVE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
AIRWAVE	/	Capacitor Control System (EDLC)	M12	Read codes	
AIRWAVE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
AIRWAVE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
AIRWAVE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
AIRWAVE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
AIRWAVE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
AIRWAVE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
AIRWAVE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
AIRWAVE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
AIRWAVE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
AIRWAVE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
AIRWAVE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
AIRWAVE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
AIRWAVE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
AIRWAVE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
AIRWAVE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
AIRWAVE	/	Electric Powertrain / IMA	M66	Read ECU Information	
AIRWAVE	/	Electric Powertrain / IMA	M66	Read codes	
AIRWAVE	/	Electric Powertrain / IMA	M66	Erase Codes	
AIRWAVE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
AIRWAVE	/	Electric Powertrain / IMA	M66	Read Live Data	
AIRWAVE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
AIRWAVE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
AIRWAVE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
AIRWAVE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
AIRWAVE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
AIRWAVE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
AIRWAVE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
AIRWAVE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
AIRWAVE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	

AIRWAVE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
AIRWAVE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
AIRWAVE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
AIRWAVE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
AIRWAVE	/	New energy battery (EV)	M44	Read ECU Information	
AIRWAVE	/	New energy battery (EV)	M44	Read codes	
AIRWAVE	/	New energy battery (EV)	M44	Erase Codes	
AIRWAVE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
AIRWAVE	/	New energy battery (EV)	M44	Read Live Data	
AIRWAVE	/	New energy battery (EV)	M44	Inspection	
AIRWAVE	/	New energy battery (EV)	M44	Adjustment	
AIRWAVE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
AIRWAVE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
AIRWAVE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
AIRWAVE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
AIRWAVE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
AIRWAVE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
AIRWAVE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
AIRWAVE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
AIRWAVE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
AIRWAVE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
AIRWAVE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
AIRWAVE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
AIRWAVE	/	FCW LDW	M4E	Read ECU Information	
AIRWAVE	/	FCW LDW	M4E	Read codes	
AIRWAVE	/	FCW LDW	M4E	Erase Codes	
AIRWAVE	/	FCW LDW	M4E	Read Live Data	
AIRWAVE	/	FCW LDW	M4E	Function Test	FCW Drive
AIRWAVE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
AIRWAVE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
AIRWAVE	/	FCW LDW	M4E	Function Test	Indicator Drive
AIRWAVE	/	FCW LDW	M4E	Adjustment	
AIRWAVE	/	Instrument Display System (GAUGE)	M2C	Read codes	
AIRWAVE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
AIRWAVE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Read codes	
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Read codes	
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Read codes	
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid

AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
AIRWAVE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Read codes	
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
AIRWAVE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
AIRWAVE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
AIRWAVE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
AIRWAVE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
AIRWAVE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
AIRWAVE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
AIRWAVE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
AIRWAVE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
AIRWAVE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
AIRWAVE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
AIRWAVE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
AIRWAVE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
AIRWAVE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
AIRWAVE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
AIRWAVE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
AIRWAVE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
AIRWAVE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
AIRWAVE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
AIRWAVE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
AIRWAVE	/	IMA	M63	Read ECU Information	
AIRWAVE	/	IMA	M63	Read codes	
AIRWAVE	/	IMA	M63	Erase Codes	
AIRWAVE	/	IMA	M63	Read Freeze Frame Data	
AIRWAVE	/	IMA	M63	Read Live Data	
AIRWAVE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
AIRWAVE	/	IMA	M63	Adjustment	SOC PRESET
AIRWAVE	/	IMA	M64	Read ECU Information	
AIRWAVE	/	IMA	M64	Read codes	
AIRWAVE	/	IMA	M64	Erase Codes	
AIRWAVE	/	IMA	M64	Read Freeze Frame Data	
AIRWAVE	/	IMA	M64	Read Live Data	
AIRWAVE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
AIRWAVE	/	IMA	M64	Adjustment	SOC PRESET
AIRWAVE	/	IMA	M65	Read ECU Information	
AIRWAVE	/	IMA	M65	Read codes	
AIRWAVE	/	IMA	M65	Erase Codes	
AIRWAVE	/	IMA	M65	Read Freeze Frame Data	
AIRWAVE	/	IMA	M65	Read Live Data	
AIRWAVE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
AIRWAVE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
AIRWAVE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
AIRWAVE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
AIRWAVE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
AIRWAVE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
AIRWAVE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
AIRWAVE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
AIRWAVE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
AIRWAVE	/	Night Vision System (INVS)	0XB1	Read codes	
AIRWAVE	/	Night Vision System (INVS)	0XB1	Erase Codes	
AIRWAVE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
AIRWAVE	/	Night Vision System (INVS)	0XB1	Read Live Data	
AIRWAVE	/	Night Vision System (INVS)	0XB1	Adjustment	
AIRWAVE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
AIRWAVE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
AIRWAVE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
AIRWAVE	/	i-SHIFT	0XB0	Read ECU Information	
AIRWAVE	/	i-SHIFT	0XB0	Read codes	
AIRWAVE	/	i-SHIFT	0XB0	Erase Codes	
AIRWAVE	/	i-SHIFT	0XB0	Read Live Data	
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Read codes	
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Self Check	
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	History Data	
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving

AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	I/MOCNT Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (I/MOCD Terminal) Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
AIRWAVE	/	Keyless Entry Control System (KAS)	M99	Registration	
AIRWAVE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
AIRWAVE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
AIRWAVE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
AIRWAVE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
AIRWAVE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
AIRWAVE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
AIRWAVE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
AIRWAVE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
AIRWAVE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
AIRWAVE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
AIRWAVE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
AIRWAVE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
AIRWAVE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
AIRWAVE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
AIRWAVE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
AIRWAVE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
AIRWAVE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
AIRWAVE	/	Management ECU Module (ME)	M74	Read ECU Information	
AIRWAVE	/	Management ECU Module (ME)	M74	Read codes	
AIRWAVE	/	Management ECU Module (ME)	M74	Erase Codes	
AIRWAVE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
AIRWAVE	/	Management ECU Module (ME)	M74	Read Live Data	
AIRWAVE	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read ECU Information	
AIRWAVE	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read codes	
AIRWAVE	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Erase Codes	
AIRWAVE	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read Live Data	
AIRWAVE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
AIRWAVE	/	Multi-view camera system (MVCS)	M7A	Read codes	
AIRWAVE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
AIRWAVE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
AIRWAVE	/	Multi-view camera system (MVCS)	M7A	Customization	
AIRWAVE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
AIRWAVE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
AIRWAVE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
AIRWAVE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
AIRWAVE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
AIRWAVE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
AIRWAVE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
AIRWAVE	/	Power Control Unit (PCU)	M83	Read ECU Information	
AIRWAVE	/	Power Control Unit (PCU)	M83	Read codes	
AIRWAVE	/	Power Control Unit (PCU)	M83	Erase Codes	
AIRWAVE	/	Power Control Unit (PCU)	M83	Read Live Data	
AIRWAVE	/	Power Control Unit (PCU)	M83	Self Check	
AIRWAVE	/	Power Control Unit (PCU)	M83	History Data	

AIRWAVE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Read codes	
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
AIRWAVE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
AIRWAVE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
AIRWAVE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
AIRWAVE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
AIRWAVE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
AIRWAVE	/	Engine Control System (PGM-FI)	M50	Read codes	
AIRWAVE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
AIRWAVE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
AIRWAVE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
AIRWAVE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
AIRWAVE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
AIRWAVE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
AIRWAVE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
AIRWAVE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
AIRWAVE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
AIRWAVE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Read codes	
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
AIRWAVE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
AIRWAVE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
AIRWAVE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
AIRWAVE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
AIRWAVE	/	Four-wheel precision steering control system (PAWSC M96)		Read codes	
AIRWAVE	/	Four-wheel precision steering control system (PAWSC M96)		Erase Codes	
AIRWAVE	/	Four-wheel precision steering control system (PAWSC M96)		Read Live Data	
AIRWAVE	/	PSR	M27	Read ECU Information	
AIRWAVE	/	PSR	M27	Read codes	
AIRWAVE	/	PSR	M27	Erase Codes	
AIRWAVE	/	PSR	M27	Read Live Data	
AIRWAVE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
AIRWAVE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
AIRWAVE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
AIRWAVE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
AIRWAVE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
AIRWAVE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
AIRWAVE	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
AIRWAVE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
AIRWAVE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
AIRWAVE	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
AIRWAVE	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning



AIRWAVE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
AIRWAVE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
AIRWAVE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
AIRWAVE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
AIRWAVE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
AIRWAVE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
AIRWAVE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
AIRWAVE	/	Remote starter (RS)	M90	System Check	
AIRWAVE	/	Remote starter (RS)	M90	HISTORY	
AIRWAVE	/	Remote starter (RS)	M90	Registration	
AIRWAVE	/	Seat load cell (SWS)	M6F	Read ECU Information	
AIRWAVE	/	Seat load cell (SWS)	M6F	Read codes	
AIRWAVE	/	Seat load cell (SWS)	M6F	Erase Codes	
AIRWAVE	/	Seat load cell (SWS)	M6F	Read Live Data	
AIRWAVE	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
AIRWAVE	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
AIRWAVE	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
AIRWAVE	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
AIRWAVE	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
AIRWAVE	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
AIRWAVE	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
AIRWAVE	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
AIRWAVE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
AIRWAVE	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
AIRWAVE	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
AIRWAVE	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
AIRWAVE	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
AIRWAVE	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
AIRWAVE	/	Groove track drive unit (SLOT ECU)	M98	History Data	
AIRWAVE	/	Groove track drive unit (SLOT ECU)	M98	System Information	
AIRWAVE	/	Airbag Control System (SRS)	M9F	Read ECU Information	
AIRWAVE	/	Airbag Control System (SRS)	M9F	Read codes	
AIRWAVE	/	Airbag Control System (SRS)	M9F	Erase Codes	
AIRWAVE	/	Airbag Control System (SRS)	M9F	Read Live Data	
AIRWAVE	/	Airbag Control System (SRS)	MA0	Read ECU Information	
AIRWAVE	/	Airbag Control System (SRS)	MA0	Read codes	
AIRWAVE	/	Airbag Control System (SRS)	MA0	Erase Codes	
AIRWAVE	/	Airbag Control System (SRS)	MA0	Read Live Data	
AIRWAVE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
AIRWAVE	/	Airbag Control System (SRS)	MA1	Read codes	
AIRWAVE	/	Airbag Control System (SRS)	MA1	Erase Codes	
AIRWAVE	/	Airbag Control System (SRS)	MA1	Read Live Data	
AIRWAVE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
AIRWAVE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
AIRWAVE	/	Airbag Control System (SRS)	M2A	Read codes	
AIRWAVE	/	Airbag Control System (SRS)	M2A	Erase Codes	
AIRWAVE	/	Airbag Control System (SRS)	M2A	Read Live Data	
AIRWAVE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
AIRWAVE	/	Airbag Control System (SRS)	M9C	Read codes	
AIRWAVE	/	Airbag Control System (SRS)	M9C	Erase Codes	
AIRWAVE	/	Airbag Control System (SRS)	M9C	Read Live Data	
AIRWAVE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
AIRWAVE	/	Airbag Control System (SRS)	M9D	Read codes	
AIRWAVE	/	Airbag Control System (SRS)	M9D	Erase Codes	
AIRWAVE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
AIRWAVE	/	Airbag Control System (SRS)	M9D	Read Live Data	
AIRWAVE	/	Airbag Control System (SRS)	M9D	Parameter Information	
AIRWAVE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
AIRWAVE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
AIRWAVE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
AIRWAVE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
AIRWAVE	/	Airbag Control System (SRS)	M9D	Function Test	
AIRWAVE	/	Airbag Control System (SRS)	M9D	System Information	
AIRWAVE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
AIRWAVE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
AIRWAVE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
AIRWAVE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
AIRWAVE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
AIRWAVE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
AIRWAVE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	

AIRWAVE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
AIRWAVE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
AIRWAVE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
AIRWAVE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
AIRWAVE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
AIRWAVE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
AIRWAVE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
AIRWAVE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
AIRWAVE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
AIRWAVE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
AIRWAVE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
AIRWAVE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
AMAZE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
AMAZE	/	Four-wheel steering control system (4WS)	M52	Read codes	
AMAZE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
AMAZE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
AMAZE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
AMAZE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
AMAZE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
AMAZE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
AMAZE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
AMAZE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
AMAZE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
AMAZE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
AMAZE	/	Automatic shift control system (A/T)	M1E	Read codes	
AMAZE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
AMAZE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
AMAZE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
AMAZE	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
AMAZE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
AMAZE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
AMAZE	/	Automatic shift control system (A/T)	M3B	Read codes	
AMAZE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
AMAZE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
AMAZE	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
AMAZE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
AMAZE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
AMAZE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
AMAZE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
AMAZE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
AMAZE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
AMAZE	/	Automatic shift control system (A/T)	M3C	Read codes	
AMAZE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
AMAZE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
AMAZE	/	Automatic shift control system (A/T)	M81	Read codes	
AMAZE	/	Automatic shift control system (A/T)	M81	Erase Codes	
AMAZE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
AMAZE	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
AMAZE	/	Automatic shift control system (A/T)	M81	Read Live Data	
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
AMAZE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
AMAZE	/	Automatic shift control system (A/T)	M82	Read codes	
AMAZE	/	Automatic shift control system (A/T)	M82	Erase Codes	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK

AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
AMAZE	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
AMAZE	/	Active Engine Control Support System (ACM) M06	Read codes	
AMAZE	/	Active Engine Control Support System (ACM) M06	Erase Codes	
AMAZE	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
AMAZE	/	Active Engine Control Support System (ACM) M06	Read Live Data	
AMAZE	/	Active Engine Control Support System (ACM) M06	ACM Reset	
AMAZE	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
AMAZE	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
AMAZE	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
AMAZE	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
AMAZE	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
AMAZE	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
AMAZE	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
AMAZE	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
AMAZE	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
AMAZE	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
AMAZE	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
AMAZE	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
AMAZE	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
AMAZE	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
AMAZE	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
AMAZE	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
AMAZE	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
AMAZE	/	Transmission Control System (AT) M18	Read ECU Information	
AMAZE	/	Transmission Control System (AT) M18	Read codes	
AMAZE	/	Transmission Control System (AT) M18	Erase Codes	
AMAZE	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
AMAZE	/	Transmission Control System (AT) M18	Read Live Data	
AMAZE	/	Transmission Control System (AT) M18	Adjustment	
AMAZE	/	Active Torque Converter Control System (ATTTS) M0E	Read ECU Information	
AMAZE	/	Active Torque Converter Control System (ATTTS) M0E	Read codes	
AMAZE	/	Active Torque Converter Control System (ATTTS) M0E	Erase Codes	
AMAZE	/	Active Torque Converter Control System (ATTTS) M0E	Read Freeze Frame Data	
AMAZE	/	Active Torque Converter Control System (ATTTS) M0E	Read Live Data	
AMAZE	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
AMAZE	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	STEERING ANGLE
AMAZE	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
AMAZE	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	ALL SENSORS
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
AMAZE	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
AMAZE	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
AMAZE	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu

AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
AMAZE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes
AMAZE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes
AMAZE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data
AMAZE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment
AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes
AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes
AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data
AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Lock All Doors
AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Unlock Driver's Side Door
AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Unlock All Doors
AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Fuel Fill Door Open
AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Left Power Sliding Door
AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Right Power Sliding Door
AMAZE	/	BODY ELECTRICAL/e-Call	MFF	Read codes
AMAZE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes
AMAZE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data
AMAZE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data
AMAZE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes
AMAZE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes
AMAZE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data
AMAZE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection
AMAZE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Read codes
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Speedometer
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Tachometer
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	VSA/TCS Activation Indicator
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	VSA/TCS Indicator
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	ABS INDICATOR
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	EBD Indicator(Electronic Brake Display)
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Cruise Activation Indicator
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	MIL Status
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Daytime Running Lights Indicator(Canada)
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Engine Oil Pressure Indicator
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Charging System Indicator
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Cruise Control Main Switch Indicator
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Maintenance Required Indicator
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	High Beam Indicator
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Light On Indicator
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Low fuel level indicator
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Security Indicator
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Trip Meter
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (P)
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (R)
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (N)
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (P)
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (R)
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (D3)
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (1)
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (2)
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (M)
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Sequential Sport Shift Mode Indicator
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Illumination Brightness Control
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Key Alarm Chime
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Headlight Alarm Chime
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Seatbelt Reminder Chime
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Self-diagnostic function
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Maintenance Minder
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment
AMAZE	/	BODY ELECTRICAL/Gauges	MFF	PAX Warning Reset
AMAZE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes
AMAZE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes
AMAZE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection
AMAZE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes
AMAZE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes
AMAZE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data
AMAZE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes
AMAZE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes
AMAZE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes
AMAZE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data
AMAZE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection
AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes
AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes
AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data
AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection
AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Trunk Lid Release Command
AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Keyless Buzzer
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Read codes
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Ignition Key Cylinder Light Command
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Interior Light Command
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Foot Light Command
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Left Turn Signal Command
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Right Turn Signal Command
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Hazard Flasher

AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
AMAZE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
AMAZE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
AMAZE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
AMAZE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
AMAZE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
AMAZE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
AMAZE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
AMAZE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
AMAZE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/Security	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
AMAZE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
AMAZE	/	BODY ELECTRICAL/Security	MFF	History Data	
AMAZE	/	BODY ELECTRICAL/Security	MFF	History Clear	
AMAZE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
AMAZE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
AMAZE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
AMAZE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
AMAZE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
AMAZE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
AMAZE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
AMAZE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
AMAZE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
AMAZE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
AMAZE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
AMAZE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid

AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
AMAZE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
AMAZE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
AMAZE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
AMAZE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
AMAZE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
AMAZE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
AMAZE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
AMAZE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read ECU Information	
AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read codes	
AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Erase Codes	
AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read Freeze Frame Data	
AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read Live Data	
AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	CMBS (CMS) ACTIVATION HISTORY	
AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Miscellaneous Test	RADAR AIMING
AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Miscellaneous Test	CMBS Brake
AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
AMAZE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
AMAZE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
AMAZE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
AMAZE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
AMAZE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
AMAZE	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
AMAZE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
AMAZE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
AMAZE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
AMAZE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
AMAZE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
AMAZE	/	DBW	M34	Read ECU Information	
AMAZE	/	DBW	M34	Read codes	
AMAZE	/	DBW	M34	Erase Codes	
AMAZE	/	DBW	M34	Read Freeze Frame Data	
AMAZE	/	DBW	M34	Read Live Data	
AMAZE	/	DBW	M34	Inspection	Idle Speed Adjust
AMAZE	/	DBW	M34	Inspection	Throttle Test
AMAZE	/	DBW	M34	ECM Reset	
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear

AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
AMAZE	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
AMAZE	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
AMAZE	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
AMAZE	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
AMAZE	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
AMAZE	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
AMAZE	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
AMAZE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
AMAZE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
AMAZE	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
AMAZE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
AMAZE	/	Capacitor Control System (EDLC)	M12	Read codes	
AMAZE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
AMAZE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
AMAZE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
AMAZE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
AMAZE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
AMAZE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
AMAZE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
AMAZE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
AMAZE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
AMAZE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
AMAZE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
AMAZE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
AMAZE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
AMAZE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
AMAZE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
AMAZE	/	Electric Powertrain / IMA	M66	Read ECU Information	
AMAZE	/	Electric Powertrain / IMA	M66	Read codes	
AMAZE	/	Electric Powertrain / IMA	M66	Erase Codes	
AMAZE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
AMAZE	/	Electric Powertrain / IMA	M66	Read Live Data	
AMAZE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
AMAZE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
AMAZE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
AMAZE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
AMAZE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
AMAZE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
AMAZE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
AMAZE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
AMAZE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
AMAZE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
AMAZE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
AMAZE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
AMAZE	/	New energy battery (EV)	M44	Read ECU Information	
AMAZE	/	New energy battery (EV)	M44	Read codes	
AMAZE	/	New energy battery (EV)	M44	Erase Codes	
AMAZE	/	New energy battery (EV)	M44	Read Freeze Frame Data	

AMAZE	/	New energy battery (EV)	M44	Read Live Data	
AMAZE	/	New energy battery (EV)	M44	Inspection	
AMAZE	/	New energy battery (EV)	M44	Adjustment	
AMAZE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
AMAZE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
AMAZE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
AMAZE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
AMAZE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
AMAZE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
AMAZE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
AMAZE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
AMAZE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
AMAZE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
AMAZE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
AMAZE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
AMAZE	/	FCW LDW	M4E	Read ECU Information	
AMAZE	/	FCW LDW	M4E	Read codes	
AMAZE	/	FCW LDW	M4E	Erase Codes	
AMAZE	/	FCW LDW	M4E	Read Live Data	
AMAZE	/	FCW LDW	M4E	Function Test	FCW Drive
AMAZE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
AMAZE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
AMAZE	/	FCW LDW	M4E	Function Test	Indicator Drive
AMAZE	/	FCW LDW	M4E	Adjustment	
AMAZE	/	Instrument Display System (GAUGE)	M2C	Read codes	
AMAZE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
AMAZE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
AMAZE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
AMAZE	/	Anti-lock brake control system (ABS)	M01	Read codes	
AMAZE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
AMAZE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
AMAZE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	ALL SENSORS
AMAZE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
AMAZE	/	Anti-lock brake control system (ABS)	M02	Read codes	
AMAZE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
AMAZE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
AMAZE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
AMAZE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
AMAZE	/	Anti-lock brake control system (ABS)	M03	Read codes	
AMAZE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
AMAZE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
AMAZE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
AMAZE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
AMAZE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
AMAZE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
AMAZE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
AMAZE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
AMAZE	/	Anti-lock brake control system (ABS)	M19	Read codes	
AMAZE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
AMAZE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
AMAZE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
AMAZE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
AMAZE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Customize	



AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
AMAZE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
AMAZE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
AMAZE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
AMAZE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
AMAZE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
AMAZE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
AMAZE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
AMAZE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
AMAZE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
AMAZE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
AMAZE	/	IMA	M63	Read ECU Information	
AMAZE	/	IMA	M63	Read codes	
AMAZE	/	IMA	M63	Erase Codes	
AMAZE	/	IMA	M63	Read Freeze Frame Data	
AMAZE	/	IMA	M63	Read Live Data	
AMAZE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
AMAZE	/	IMA	M63	Adjustment	SOC PRESET
AMAZE	/	IMA	M64	Read ECU Information	
AMAZE	/	IMA	M64	Read codes	
AMAZE	/	IMA	M64	Erase Codes	
AMAZE	/	IMA	M64	Read Freeze Frame Data	
AMAZE	/	IMA	M64	Read Live Data	
AMAZE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
AMAZE	/	IMA	M64	Adjustment	SOC PRESET
AMAZE	/	IMA	M65	Read ECU Information	
AMAZE	/	IMA	M65	Read codes	
AMAZE	/	IMA	M65	Erase Codes	
AMAZE	/	IMA	M65	Read Freeze Frame Data	
AMAZE	/	IMA	M65	Read Live Data	
AMAZE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
AMAZE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
AMAZE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
AMAZE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
AMAZE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
AMAZE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
AMAZE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
AMAZE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
AMAZE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
AMAZE	/	Night Vision System (INVS)	0XB1	Read codes	
AMAZE	/	Night Vision System (INVS)	0XB1	Erase Codes	
AMAZE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
AMAZE	/	Night Vision System (INVS)	0XB1	Read Live Data	
AMAZE	/	Night Vision System (INVS)	0XB1	Adjustment	
AMAZE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
AMAZE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
AMAZE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
AMAZE	/	i-SHIFT	0XB0	Read ECU Information	
AMAZE	/	i-SHIFT	0XB0	Read codes	
AMAZE	/	i-SHIFT	0XB0	Erase Codes	
AMAZE	/	i-SHIFT	0XB0	Read Live Data	
AMAZE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
AMAZE	/	Keyless Entry Control System (KAS)	M99	Read codes	
AMAZE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
AMAZE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
AMAZE	/	Keyless Entry Control System (KAS)	M99	Self Check	
AMAZE	/	Keyless Entry Control System (KAS)	M99	History Data	
AMAZE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output

AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
AMAZE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
AMAZE	/	Keyless Entry Control System (KAS)	M99	Registration	
AMAZE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
AMAZE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
AMAZE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
AMAZE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
AMAZE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
AMAZE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
AMAZE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
AMAZE	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
AMAZE	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
AMAZE	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
AMAZE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
AMAZE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
AMAZE	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
AMAZE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
AMAZE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
AMAZE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
AMAZE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
AMAZE	/	Management ECU Module (ME)	M74	Read ECU Information	
AMAZE	/	Management ECU Module (ME)	M74	Read codes	
AMAZE	/	Management ECU Module (ME)	M74	Erase Codes	
AMAZE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
AMAZE	/	Management ECU Module (ME)	M74	Read Live Data	
AMAZE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
AMAZE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
AMAZE	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
AMAZE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
AMAZE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
AMAZE	/	Multi-view camera system (MVCS)	M7A	Read codes	
AMAZE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
AMAZE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
AMAZE	/	Multi-view camera system (MVCS)	M7A	Customization	
AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
AMAZE	/	Power Control Unit (PCU)	M83	Read ECU Information	
AMAZE	/	Power Control Unit (PCU)	M83	Read codes	
AMAZE	/	Power Control Unit (PCU)	M83	Erase Codes	
AMAZE	/	Power Control Unit (PCU)	M83	Read Live Data	
AMAZE	/	Power Control Unit (PCU)	M83	Self Check	
AMAZE	/	Power Control Unit (PCU)	M83	History Data	
AMAZE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
AMAZE	/	Engine Control System (PGM-FI)	M23	Read codes	
AMAZE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
AMAZE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
AMAZE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
AMAZE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
AMAZE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
AMAZE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
AMAZE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
AMAZE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
AMAZE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
AMAZE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
AMAZE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
AMAZE	/	Engine Control System (PGM-FI)	M50	Read codes	

AMAZE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
AMAZE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
AMAZE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
AMAZE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
AMAZE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
AMAZE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
AMAZE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
AMAZE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
AMAZE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
AMAZE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
AMAZE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
AMAZE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
AMAZE	/	Engine Control System (PGM-FI)	M86	Read codes	
AMAZE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
AMAZE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
AMAZE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
AMAZE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
AMAZE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
AMAZE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
AMAZE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
AMAZE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
AMAZE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
AMAZE	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
AMAZE	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
AMAZE	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
AMAZE	/	PSR	M27	Read ECU Information	
AMAZE	/	PSR	M27	Read codes	
AMAZE	/	PSR	M27	Erase Codes	
AMAZE	/	PSR	M27	Read Live Data	
AMAZE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
AMAZE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
AMAZE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
AMAZE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
AMAZE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
AMAZE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
AMAZE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
AMAZE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
AMAZE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
AMAZE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
AMAZE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
AMAZE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
AMAZE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
AMAZE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
AMAZE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
AMAZE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
AMAZE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
AMAZE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
AMAZE	/	Remote starter (RS)	M90	System Check	
AMAZE	/	Remote starter (RS)	M90	HISTORY	
AMAZE	/	Remote starter (RS)	M90	Registration	
AMAZE	/	Seat load cell (SWS)	M6F	Read ECU Information	
AMAZE	/	Seat load cell (SWS)	M6F	Read codes	
AMAZE	/	Seat load cell (SWS)	M6F	Erase Codes	
AMAZE	/	Seat load cell (SWS)	M6F	Read Live Data	
AMAZE	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
AMAZE	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
AMAZE	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
AMAZE	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
AMAZE	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
AMAZE	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
AMAZE	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
AMAZE	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	

AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
AMAZE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
AMAZE	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
AMAZE	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
AMAZE	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
AMAZE	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
AMAZE	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
AMAZE	/	Groove track drive unit (SLOT ECU)	M98	History Data	
AMAZE	/	Groove track drive unit (SLOT ECU)	M98	System Information	
AMAZE	/	Airbag Control System (SRS)	M9F	Read ECU Information	
AMAZE	/	Airbag Control System (SRS)	M9F	Read codes	
AMAZE	/	Airbag Control System (SRS)	M9F	Erase Codes	
AMAZE	/	Airbag Control System (SRS)	M9F	Read Live Data	
AMAZE	/	Airbag Control System (SRS)	MA0	Read ECU Information	
AMAZE	/	Airbag Control System (SRS)	MA0	Read codes	
AMAZE	/	Airbag Control System (SRS)	MA0	Erase Codes	
AMAZE	/	Airbag Control System (SRS)	MA0	Read Live Data	
AMAZE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
AMAZE	/	Airbag Control System (SRS)	MA1	Read codes	
AMAZE	/	Airbag Control System (SRS)	MA1	Erase Codes	
AMAZE	/	Airbag Control System (SRS)	MA1	Read Live Data	
AMAZE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
AMAZE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
AMAZE	/	Airbag Control System (SRS)	M2A	Read codes	
AMAZE	/	Airbag Control System (SRS)	M2A	Erase Codes	
AMAZE	/	Airbag Control System (SRS)	M2A	Read Live Data	
AMAZE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
AMAZE	/	Airbag Control System (SRS)	M9C	Read codes	
AMAZE	/	Airbag Control System (SRS)	M9C	Erase Codes	
AMAZE	/	Airbag Control System (SRS)	M9C	Read Live Data	
AMAZE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
AMAZE	/	Airbag Control System (SRS)	M9D	Read codes	
AMAZE	/	Airbag Control System (SRS)	M9D	Erase Codes	
AMAZE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
AMAZE	/	Airbag Control System (SRS)	M9D	Read Live Data	
AMAZE	/	Airbag Control System (SRS)	M9D	Parameter Information	
AMAZE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
AMAZE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
AMAZE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
AMAZE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
AMAZE	/	Airbag Control System (SRS)	M9D	Function Test	
AMAZE	/	Airbag Control System (SRS)	M9D	System Information	
AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
ASCOT	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ASCOT	/	Four-wheel steering control system (4WS)	M52	Read codes	
ASCOT	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
ASCOT	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ASCOT	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
ASCOT	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ASCOT	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ASCOT	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK

ASCOT	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ASCOT	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ASCOT	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ASCOT	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
ASCOT	/	Automatic shift control system (A/T)	M1E	Read codes	
ASCOT	/	Automatic shift control system (A/T)	M1E	Erase Codes	
ASCOT	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ASCOT	/	Automatic shift control system (A/T)	M1E	Read Live Data	
ASCOT	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
ASCOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ASCOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ASCOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ASCOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ASCOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ASCOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ASCOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ASCOT	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
ASCOT	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
ASCOT	/	Automatic shift control system (A/T)	M3B	Read codes	
ASCOT	/	Automatic shift control system (A/T)	M3B	Erase Codes	
ASCOT	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ASCOT	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
ASCOT	/	Automatic shift control system (A/T)	M3B	Read Live Data	
ASCOT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ASCOT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ASCOT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
ASCOT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ASCOT	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
ASCOT	/	Automatic shift control system (A/T)	M3C	Read codes	
ASCOT	/	Automatic shift control system (A/T)	M3C	Erase Codes	
ASCOT	/	Automatic shift control system (A/T)	M81	Read ECU Information	
ASCOT	/	Automatic shift control system (A/T)	M81	Read codes	
ASCOT	/	Automatic shift control system (A/T)	M81	Erase Codes	
ASCOT	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ASCOT	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
ASCOT	/	Automatic shift control system (A/T)	M81	Read Live Data	
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ASCOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
ASCOT	/	Automatic shift control system (A/T)	M82	Read ECU Information	
ASCOT	/	Automatic shift control system (A/T)	M82	Read codes	
ASCOT	/	Automatic shift control system (A/T)	M82	Erase Codes	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
ASCOT	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
ASCOT	/	Active Engine Control Support System (ACM)	M06	Read codes	
ASCOT	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
ASCOT	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
ASCOT	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
ASCOT	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
ASCOT	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
ASCOT	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
ASCOT	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ASCOT	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
ASCOT	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
ASCOT	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
ASCOT	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
ASCOT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read ECU Information	
ASCOT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read codes	
ASCOT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Erase Codes	
ASCOT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Freeze Frame Data	
ASCOT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Live Data	
ASCOT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Function Test	Damper Force Operation Test
ASCOT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Adjustment	Damper Stroke Calibration

ASCOT	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
ASCOT	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
ASCOT	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
ASCOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
ASCOT	/	Transmission Control System (AT)	M18	Read ECU Information	
ASCOT	/	Transmission Control System (AT)	M18	Read codes	
ASCOT	/	Transmission Control System (AT)	M18	Erase Codes	
ASCOT	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
ASCOT	/	Transmission Control System (AT)	M18	Read Live Data	
ASCOT	/	Transmission Control System (AT)	M18	Adjustment	
ASCOT	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
ASCOT	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
ASCOT	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
ASCOT	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
ASCOT	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
ASCOT	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
ASCOT	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
ASCOT	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ASCOT	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
ASCOT	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
ASCOT	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
ASCOT	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
ASCOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
ASCOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
ASCOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
ASCOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
ASCOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
ASCOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
ASCOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
ASCOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
ASCOT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
ASCOT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
ASCOT	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
ASCOT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
ASCOT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
ASCOT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
ASCOT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
ASCOT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
ASCOT	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
ASCOT	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
ASCOT	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	

ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ASCOT	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ASCOT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ASCOT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ASCOT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ASCOT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ASCOT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ASCOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ASCOT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ASCOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ASCOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ASCOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ASCOT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ASCOT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
ASCOT	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ASCOT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ASCOT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
ASCOT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	

ASCOT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ASCOT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ASCOT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ASCOT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Security	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ASCOT	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
ASCOT	/	BODY ELECTRICAL/Security	MFF	History Data	
ASCOT	/	BODY ELECTRICAL/Security	MFF	History Clear	
ASCOT	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ASCOT	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ASCOT	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ASCOT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ASCOT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ASCOT	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ASCOT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
ASCOT	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ASCOT	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ASCOT	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ASCOT	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
ASCOT	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ASCOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
ASCOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ASCOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ASCOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
ASCOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ASCOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ASCOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ASCOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ASCOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ASCOT	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ASCOT	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ASCOT	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ASCOT	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
ASCOT	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ASCOT	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
ASCOT	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ASCOT	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ASCOT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
ASCOT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
ASCOT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
ASCOT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
ASCOT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
ASCOT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
ASCOT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
ASCOT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
ASCOT	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
ASCOT	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	



ASCOT	/	Promise Automatic Transmission Control System (CVT M1B)	Erase Codes	
ASCOT	/	Promise Automatic Transmission Control System (CVT M1B)	Read Freeze Frame Data	
ASCOT	/	Promise Automatic Transmission Control System (CVT M1B)	Read Live Data	
ASCOT	/	Promise Automatic Transmission Control System (CVT M1B)	ECMPCM Reset	
ASCOT	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Lock Solenoid Test
ASCOT	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Solenoid Tests
ASCOT	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Electrical Oil Pump Activation
ASCOT	/	Promise Automatic Transmission Control System (CVT M33)	Read ECU Information	
ASCOT	/	Promise Automatic Transmission Control System (CVT M33)	Read codes	
ASCOT	/	Promise Automatic Transmission Control System (CVT M33)	Erase Codes	
ASCOT	/	Promise Automatic Transmission Control System (CVT M33)	Read Freeze Frame Data	
ASCOT	/	Promise Automatic Transmission Control System (CVT M33)	Read Live Data	
ASCOT	/	Promise Automatic Transmission Control System (CVT M33)	ECMPCM Reset	
ASCOT	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid
ASCOT	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)
ASCOT	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)
ASCOT	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information	
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes	
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes	
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data	
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data	
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	ECMPCM Reset	
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B
ASCOT	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P
ASCOT	/	DBW M34	Read ECU Information	
ASCOT	/	DBW M34	Read codes	
ASCOT	/	DBW M34	Erase Codes	
ASCOT	/	DBW M34	Read Freeze Frame Data	
ASCOT	/	DBW M34	Read Live Data	
ASCOT	/	DBW M34	Inspection	Idle Speed Adjust
ASCOT	/	DBW M34	Inspection	Throttle Test
ASCOT	/	DBW M34	ECM Reset	
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
ASCOT	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
ASCOT	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
ASCOT	/	Diesel Engine Control System (DIESEL) M37	Read codes	
ASCOT	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
ASCOT	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
ASCOT	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
ASCOT	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
ASCOT	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
ASCOT	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
ASCOT	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Read codes	
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
ASCOT	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
ASCOT	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
ASCOT	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
ASCOT	/	Capacitor Control System (EDLC) M12	Read codes	

ASCOT	/	Capacitor Control System (EDLC)	M12	Erase Codes	
ASCOT	/	Capacitor Control System (EDLC)	M12	Read Live Data	
ASCOT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
ASCOT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
ASCOT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
ASCOT	/	Electronic Brake Control System (EPB)	M1F	Read codes	
ASCOT	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
ASCOT	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
ASCOT	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
ASCOT	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
ASCOT	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
ASCOT	/	Electronic Brake Control System (EPB)	M3E	Read codes	
ASCOT	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
ASCOT	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
ASCOT	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
ASCOT	/	Electric Powertrain / IMA	M66	Read ECU Information	
ASCOT	/	Electric Powertrain / IMA	M66	Read codes	
ASCOT	/	Electric Powertrain / IMA	M66	Erase Codes	
ASCOT	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
ASCOT	/	Electric Powertrain / IMA	M66	Read Live Data	
ASCOT	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
ASCOT	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
ASCOT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
ASCOT	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ASCOT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ASCOT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
ASCOT	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ASCOT	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ASCOT	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ASCOT	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ASCOT	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ASCOT	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ASCOT	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
ASCOT	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ASCOT	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ASCOT	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ASCOT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ASCOT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ASCOT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ASCOT	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ASCOT	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ASCOT	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ASCOT	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ASCOT	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ASCOT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ASCOT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ASCOT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ASCOT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ASCOT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
ASCOT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ASCOT	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ASCOT	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ASCOT	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ASCOT	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ASCOT	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
ASCOT	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ASCOT	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ASCOT	/	New energy battery (EV)	M44	Read ECU Information	
ASCOT	/	New energy battery (EV)	M44	Read codes	
ASCOT	/	New energy battery (EV)	M44	Erase Codes	
ASCOT	/	New energy battery (EV)	M44	Read Freeze Frame Data	
ASCOT	/	New energy battery (EV)	M44	Read Live Data	
ASCOT	/	New energy battery (EV)	M44	Inspection	
ASCOT	/	New energy battery (EV)	M44	Adjustment	
ASCOT	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
ASCOT	/	Electronic vacuum pump (EVPS)	M21	Read codes	
ASCOT	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ASCOT	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ASCOT	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ASCOT	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ASCOT	/	Electronic vacuum pump (EVPS)	M22	Read codes	
ASCOT	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ASCOT	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ASCOT	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ASCOT	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ASCOT	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ASCOT	/	FCW LDW	M4E	Read ECU Information	
ASCOT	/	FCW LDW	M4E	Read codes	
ASCOT	/	FCW LDW	M4E	Erase Codes	
ASCOT	/	FCW LDW	M4E	Read Live Data	
ASCOT	/	FCW LDW	M4E	Function Test	FCW Drive
ASCOT	/	FCW LDW	M4E	Function Test	Left side lane departure warning
ASCOT	/	FCW LDW	M4E	Function Test	Right side lane departure warning
ASCOT	/	FCW LDW	M4E	Function Test	Indicator Drive
ASCOT	/	FCW LDW	M4E	Adjustment	
ASCOT	/	Instrument Display System (GAUGE)	M2C	Read codes	
ASCOT	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
ASCOT	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
ASCOT	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ASCOT	/	Anti-lock brake control system (ABS)	M01	Read codes	
ASCOT	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
ASCOT	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ASCOT	/	Anti-lock brake control system (ABS)	M01	Read Live Data	

ASCOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ASCOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ASCOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ASCOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ASCOT	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ASCOT	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ASCOT	/	Anti-lock brake control system (ABS)	M02	Read codes	
ASCOT	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
ASCOT	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ASCOT	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
ASCOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ASCOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
ASCOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ASCOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ASCOT	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
ASCOT	/	Anti-lock brake control system (ABS)	M03	Read codes	
ASCOT	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
ASCOT	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
ASCOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ASCOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ASCOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ASCOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ASCOT	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
ASCOT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ASCOT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ASCOT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ASCOT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ASCOT	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ASCOT	/	Anti-lock brake control system (ABS)	M19	Read codes	
ASCOT	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
ASCOT	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
ASCOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ASCOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ASCOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
ASCOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ASCOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ASCOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ASCOT	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ASCOT	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ASCOT	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
ASCOT	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ASCOT	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
ASCOT	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
ASCOT	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ASCOT	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ASCOT	/	Intelligent Parking Control System (SPS)	M9B	Customize	
ASCOT	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ASCOT	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ASCOT	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ASCOT	/	Hydraulic booster control system (HBS)	M5F	Read codes	
ASCOT	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ASCOT	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ASCOT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ASCOT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ASCOT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ASCOT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ASCOT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ASCOT	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ASCOT	/	IMA	M63	Read ECU Information	
ASCOT	/	IMA	M63	Read codes	
ASCOT	/	IMA	M63	Erase Codes	
ASCOT	/	IMA	M63	Read Freeze Frame Data	
ASCOT	/	IMA	M63	Read Live Data	
ASCOT	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ASCOT	/	IMA	M63	Adjustment	SOC PRESET
ASCOT	/	IMA	M64	Read ECU Information	
ASCOT	/	IMA	M64	Read codes	
ASCOT	/	IMA	M64	Erase Codes	
ASCOT	/	IMA	M64	Read Freeze Frame Data	
ASCOT	/	IMA	M64	Read Live Data	
ASCOT	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ASCOT	/	IMA	M64	Adjustment	SOC PRESET
ASCOT	/	IMA	M65	Read ECU Information	
ASCOT	/	IMA	M65	Read codes	
ASCOT	/	IMA	M65	Erase Codes	
ASCOT	/	IMA	M65	Read Freeze Frame Data	
ASCOT	/	IMA	M65	Read Live Data	
ASCOT	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE

ASCOT	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ASCOT	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ASCOT	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ASCOT	/	Intake Sounder Control System (ISC)	M6D	Read codes	
ASCOT	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ASCOT	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ASCOT	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ASCOT	/	Night Vision System (INVS)	0XB1	Read ECU Information	
ASCOT	/	Night Vision System (INVS)	0XB1	Read codes	
ASCOT	/	Night Vision System (INVS)	0XB1	Erase Codes	
ASCOT	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ASCOT	/	Night Vision System (INVS)	0XB1	Read Live Data	
ASCOT	/	Night Vision System (INVS)	0XB1	Adjustment	
ASCOT	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ASCOT	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ASCOT	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ASCOT	/	i-SHIFT	0XB0	Read ECU Information	
ASCOT	/	i-SHIFT	0XB0	Read codes	
ASCOT	/	i-SHIFT	0XB0	Erase Codes	
ASCOT	/	i-SHIFT	0XB0	Read Live Data	
ASCOT	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ASCOT	/	Keyless Entry Control System (KAS)	M99	Read codes	
ASCOT	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
ASCOT	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
ASCOT	/	Keyless Entry Control System (KAS)	M99	Self Check	
ASCOT	/	Keyless Entry Control System (KAS)	M99	History Data	
ASCOT	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ASCOT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ASCOT	/	Keyless Entry Control System (KAS)	M99	Registration	
ASCOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ASCOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ASCOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
ASCOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
ASCOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
ASCOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
ASCOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
ASCOT	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
ASCOT	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
ASCOT	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
ASCOT	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
ASCOT	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
ASCOT	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
ASCOT	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
ASCOT	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST

ASCOT	/	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
ASCOT	/	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
ASCOT	/	Management ECU Module (ME) M74	Read ECU Information	
ASCOT	/	Management ECU Module (ME) M74	Read codes	
ASCOT	/	Management ECU Module (ME) M74	Erase Codes	
ASCOT	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
ASCOT	/	Management ECU Module (ME) M74	Read Live Data	
ASCOT	/	Multi-view camera and parking assist system (MVC/P) M26	Read ECU Information	
ASCOT	/	Multi-view camera and parking assist system (MVC/P) M26	Read codes	
ASCOT	/	Multi-view camera and parking assist system (MVC/P) M26	Erase Codes	
ASCOT	/	Multi-view camera and parking assist system (MVC/P) M26	Read Live Data	
ASCOT	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
ASCOT	/	Multi-view camera system (MVCS) M7A	Read codes	
ASCOT	/	Multi-view camera system (MVCS) M7A	Erase Codes	
ASCOT	/	Multi-view camera system (MVCS) M7A	Read Live Data	
ASCOT	/	Multi-view camera system (MVCS) M7A	Customization	
ASCOT	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
ASCOT	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
ASCOT	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
ASCOT	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
ASCOT	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
ASCOT	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
ASCOT	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
ASCOT	/	Power Control Unit (PCU) M83	Read ECU Information	
ASCOT	/	Power Control Unit (PCU) M83	Read codes	
ASCOT	/	Power Control Unit (PCU) M83	Erase Codes	
ASCOT	/	Power Control Unit (PCU) M83	Read Live Data	
ASCOT	/	Power Control Unit (PCU) M83	Self Check	
ASCOT	/	Power Control Unit (PCU) M83	History Data	
ASCOT	/	Engine Control System (PGM-FI) M23	Read ECU Information	
ASCOT	/	Engine Control System (PGM-FI) M23	Read codes	
ASCOT	/	Engine Control System (PGM-FI) M23	Erase Codes	
ASCOT	/	Engine Control System (PGM-FI) M23	Readiness Codes	
ASCOT	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
ASCOT	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
ASCOT	/	Engine Control System (PGM-FI) M23	Read Live Data	
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ASCOT	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ASCOT	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
ASCOT	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ASCOT	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
ASCOT	/	Engine Control System (PGM-FI) M23	VIN CHECK	
ASCOT	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
ASCOT	/	Engine Control System (PGM-FI) M50	Read ECU Information	
ASCOT	/	Engine Control System (PGM-FI) M50	Read codes	
ASCOT	/	Engine Control System (PGM-FI) M50	Erase Codes	
ASCOT	/	Engine Control System (PGM-FI) M50	Readiness Codes	
ASCOT	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
ASCOT	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
ASCOT	/	Engine Control System (PGM-FI) M50	Read Live Data	
ASCOT	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
ASCOT	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
ASCOT	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
ASCOT	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
ASCOT	/	Engine Control System (PGM-FI) M50	VIN CHECK	
ASCOT	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
ASCOT	/	Engine Control System (PGM-FI) M86	Read ECU Information	
ASCOT	/	Engine Control System (PGM-FI) M86	Read codes	
ASCOT	/	Engine Control System (PGM-FI) M86	Erase Codes	
ASCOT	/	Engine Control System (PGM-FI) M86	Readiness Codes	
ASCOT	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
ASCOT	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
ASCOT	/	Engine Control System (PGM-FI) M86	Read Live Data	
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection	EGR TEST
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection	VTEC TEST
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection	IACV TEST
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection	O2S TEST
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection	RADIATOR FAN
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection	A/C CLUTCH
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection	FUEL PUMP ON
ASCOT	/	Engine Control System (PGM-FI) M86	Inspection	FUEL PUMP OFF

ASCOT	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ASCOT	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ASCOT	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ASCOT	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
ASCOT	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ASCOT	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ASCOT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ASCOT	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ASCOT	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ASCOT	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
ASCOT	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ASCOT	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
ASCOT	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
ASCOT	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
ASCOT	/	PSR	M27	Read ECU Information	
ASCOT	/	PSR	M27	Read codes	
ASCOT	/	PSR	M27	Erase Codes	
ASCOT	/	PSR	M27	Read Live Data	
ASCOT	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ASCOT	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
ASCOT	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ASCOT	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ASCOT	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
ASCOT	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
ASCOT	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
ASCOT	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
ASCOT	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
ASCOT	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
ASCOT	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
ASCOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
ASCOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
ASCOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
ASCOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
ASCOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
ASCOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
ASCOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
ASCOT	/	Remote starter (RS)	M90	System Check	
ASCOT	/	Remote starter (RS)	M90	HISTORY	
ASCOT	/	Remote starter (RS)	M90	Registration	
ASCOT	/	Seat load cell (SWS)	M6F	Read ECU Information	
ASCOT	/	Seat load cell (SWS)	M6F	Read codes	
ASCOT	/	Seat load cell (SWS)	M6F	Erase Codes	
ASCOT	/	Seat load cell (SWS)	M6F	Read Live Data	
ASCOT	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
ASCOT	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
ASCOT	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
ASCOT	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
ASCOT	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
ASCOT	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
ASCOT	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
ASCOT	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ASCOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
ASCOT	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
ASCOT	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
ASCOT	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
ASCOT	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
ASCOT	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
ASCOT	/	Groove track drive unit (SLOT ECU)	M98	History Data	
ASCOT	/	Groove track drive unit (SLOT ECU)	M98	System Information	
ASCOT	/	Airbag Control System (SRS)	M9F	Read ECU Information	
ASCOT	/	Airbag Control System (SRS)	M9F	Read codes	
ASCOT	/	Airbag Control System (SRS)	M9F	Erase Codes	
ASCOT	/	Airbag Control System (SRS)	M9F	Read Live Data	
ASCOT	/	Airbag Control System (SRS)	MA0	Read ECU Information	
ASCOT	/	Airbag Control System (SRS)	MA0	Read codes	
ASCOT	/	Airbag Control System (SRS)	MA0	Erase Codes	
ASCOT	/	Airbag Control System (SRS)	MA0	Read Live Data	
ASCOT	/	Airbag Control System (SRS)	MA1	Read ECU Information	
ASCOT	/	Airbag Control System (SRS)	MA1	Read codes	
ASCOT	/	Airbag Control System (SRS)	MA1	Erase Codes	

ASCOT	/	Airbag Control System (SRS)	MA1	Read Live Data	
ASCOT	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
ASCOT	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ASCOT	/	Airbag Control System (SRS)	M2A	Read codes	
ASCOT	/	Airbag Control System (SRS)	M2A	Erase Codes	
ASCOT	/	Airbag Control System (SRS)	M2A	Read Live Data	
ASCOT	/	Airbag Control System (SRS)	M9C	Read ECU Information	
ASCOT	/	Airbag Control System (SRS)	M9C	Read codes	
ASCOT	/	Airbag Control System (SRS)	M9C	Erase Codes	
ASCOT	/	Airbag Control System (SRS)	M9C	Read Live Data	
ASCOT	/	Airbag Control System (SRS)	M9D	Read ECU Information	
ASCOT	/	Airbag Control System (SRS)	M9D	Read codes	
ASCOT	/	Airbag Control System (SRS)	M9D	Erase Codes	
ASCOT	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
ASCOT	/	Airbag Control System (SRS)	M9D	Read Live Data	
ASCOT	/	Airbag Control System (SRS)	M9D	Parameter Information	
ASCOT	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
ASCOT	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
ASCOT	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
ASCOT	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
ASCOT	/	Airbag Control System (SRS)	M9D	Function Test	
ASCOT	/	Airbag Control System (SRS)	M9D	System Information	
ASCOT	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
ASCOT	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
ASCOT	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
ASCOT	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
ASCOT	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ASCOT	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ASCOT	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ASCOT	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ASCOT	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ASCOT	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ASCOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ASCOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ASCOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ASCOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ASCOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
ASCOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ASCOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ASCOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ASCOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
AVANCIER	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
AVANCIER	/	Four-wheel steering control system (4WS)	M52	Read codes	
AVANCIER	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
AVANCIER	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
AVANCIER	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
AVANCIER	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
AVANCIER	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
AVANCIER	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
AVANCIER	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
AVANCIER	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
AVANCIER	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
AVANCIER	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
AVANCIER	/	Automatic shift control system (A/T)	M1E	Read codes	
AVANCIER	/	Automatic shift control system (A/T)	M1E	Erase Codes	
AVANCIER	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
AVANCIER	/	Automatic shift control system (A/T)	M1E	Read Live Data	
AVANCIER	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
AVANCIER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
AVANCIER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
AVANCIER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
AVANCIER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
AVANCIER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
AVANCIER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
AVANCIER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
AVANCIER	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
AVANCIER	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
AVANCIER	/	Automatic shift control system (A/T)	M3B	Read codes	
AVANCIER	/	Automatic shift control system (A/T)	M3B	Erase Codes	
AVANCIER	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
AVANCIER	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
AVANCIER	/	Automatic shift control system (A/T)	M3B	Read Live Data	
AVANCIER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
AVANCIER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
AVANCIER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
AVANCIER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
AVANCIER	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
AVANCIER	/	Automatic shift control system (A/T)	M3C	Read codes	
AVANCIER	/	Automatic shift control system (A/T)	M3C	Erase Codes	
AVANCIER	/	Automatic shift control system (A/T)	M81	Read ECU Information	
AVANCIER	/	Automatic shift control system (A/T)	M81	Read codes	

AVANCIER	/	Automatic shift control system (A/T)	M81	Erase Codes	
AVANCIER	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
AVANCIER	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
AVANCIER	/	Automatic shift control system (A/T)	M81	Read Live Data	
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
AVANCIER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
AVANCIER	/	Automatic shift control system (A/T)	M82	Read ECU Information	
AVANCIER	/	Automatic shift control system (A/T)	M82	Read codes	
AVANCIER	/	Automatic shift control system (A/T)	M82	Erase Codes	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
AVANCIER	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
AVANCIER	/	Active Engine Control Support System (ACM)	M06	Read codes	
AVANCIER	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
AVANCIER	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
AVANCIER	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
AVANCIER	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
AVANCIER	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
AVANCIER	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
AVANCIER	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
AVANCIER	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
AVANCIER	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
AVANCIER	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
AVANCIER	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
AVANCIER	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read ECU Information	
AVANCIER	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read codes	
AVANCIER	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Erase Codes	
AVANCIER	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Freeze Frame Data	
AVANCIER	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Live Data	
AVANCIER	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Function Test	Damper Force Operation Test
AVANCIER	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Adjustment	Damper Stroke Calibration
AVANCIER	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
AVANCIER	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
AVANCIER	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
AVANCIER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
AVANCIER	/	Transmission Control System (AT)	M18	Read ECU Information	
AVANCIER	/	Transmission Control System (AT)	M18	Read codes	
AVANCIER	/	Transmission Control System (AT)	M18	Erase Codes	
AVANCIER	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
AVANCIER	/	Transmission Control System (AT)	M18	Read Live Data	
AVANCIER	/	Transmission Control System (AT)	M18	Adjustment	
AVANCIER	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
AVANCIER	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
AVANCIER	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
AVANCIER	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
AVANCIER	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
AVANCIER	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
AVANCIER	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
AVANCIER	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
AVANCIER	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	



AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
AVANCIER	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
AVANCIER	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
AVANCIER	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
AVANCIER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
AVANCIER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
AVANCIER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
AVANCIER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
AVANCIER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
AVANCIER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
AVANCIER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
AVANCIER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
AVANCIER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
AVANCIER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
AVANCIER	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
AVANCIER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
AVANCIER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
AVANCIER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
AVANCIER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
AVANCIER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
AVANCIER	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
AVANCIER	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
AVANCIER	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime

AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
AVANCIER	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
AVANCIER	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
AVANCIER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
AVANCIER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
AVANCIER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
AVANCIER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
AVANCIER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
AVANCIER	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
AVANCIER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
AVANCIER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
AVANCIER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
AVANCIER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
AVANCIER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
AVANCIER	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
AVANCIER	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
AVANCIER	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
AVANCIER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
AVANCIER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
AVANCIER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
AVANCIER	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Security	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
AVANCIER	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
AVANCIER	/	BODY ELECTRICAL/Security	MFF	History Data	
AVANCIER	/	BODY ELECTRICAL/Security	MFF	History Clear	
AVANCIER	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red

AVANCIER	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
AVANCIER	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
AVANCIER	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
AVANCIER	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
AVANCIER	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
AVANCIER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
AVANCIER	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
AVANCIER	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
AVANCIER	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
AVANCIER	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
AVANCIER	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
AVANCIER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
AVANCIER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
AVANCIER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
AVANCIER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
AVANCIER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
AVANCIER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
AVANCIER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
AVANCIER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
AVANCIER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
AVANCIER	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
AVANCIER	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
AVANCIER	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
AVANCIER	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
AVANCIER	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
AVANCIER	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
AVANCIER	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
AVANCIER	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
AVANCIER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
AVANCIER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
AVANCIER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
AVANCIER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
AVANCIER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
AVANCIER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
AVANCIER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
AVANCIER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
AVANCIER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
AVANCIER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
AVANCIER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
AVANCIER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
AVANCIER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
AVANCIER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
AVANCIER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
AVANCIER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
AVANCIER	/	DBW	M34	Read ECU Information	
AVANCIER	/	DBW	M34	Read codes	

AVANCIER	/	DBW	M34	Erase Codes	
AVANCIER	/	DBW	M34	Read Freeze Frame Data	
AVANCIER	/	DBW	M34	Read Live Data	
AVANCIER	/	DBW	M34	Inspection	Idle Speed Adjust
AVANCIER	/	DBW	M34	Inspection	Throttle Test
AVANCIER	/	DBW	M34	ECM Reset	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
AVANCIER	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
AVANCIER	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
AVANCIER	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
AVANCIER	/	Capacitor Control System (EDLC)	M12	Read codes	
AVANCIER	/	Capacitor Control System (EDLC)	M12	Erase Codes	
AVANCIER	/	Capacitor Control System (EDLC)	M12	Read Live Data	
AVANCIER	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
AVANCIER	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
AVANCIER	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
AVANCIER	/	Electronic Brake Control System (EPB)	M1F	Read codes	
AVANCIER	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
AVANCIER	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
AVANCIER	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
AVANCIER	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
AVANCIER	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
AVANCIER	/	Electronic Brake Control System (EPB)	M3E	Read codes	
AVANCIER	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
AVANCIER	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
AVANCIER	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
AVANCIER	/	Electric Powertrain / IMA	M66	Read ECU Information	
AVANCIER	/	Electric Powertrain / IMA	M66	Read codes	
AVANCIER	/	Electric Powertrain / IMA	M66	Erase Codes	
AVANCIER	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
AVANCIER	/	Electric Powertrain / IMA	M66	Read Live Data	
AVANCIER	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
AVANCIER	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
AVANCIER	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
AVANCIER	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
AVANCIER	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
AVANCIER	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
AVANCIER	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
AVANCIER	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
AVANCIER	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
AVANCIER	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
AVANCIER	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
AVANCIER	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	

AVANCIER	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
AVANCIER	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
AVANCIER	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
AVANCIER	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
AVANCIER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
AVANCIER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
AVANCIER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
AVANCIER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
AVANCIER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
AVANCIER	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
AVANCIER	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
AVANCIER	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
AVANCIER	/	New energy battery (EV)	M44	Read ECU Information	
AVANCIER	/	New energy battery (EV)	M44	Read codes	
AVANCIER	/	New energy battery (EV)	M44	Erase Codes	
AVANCIER	/	New energy battery (EV)	M44	Read Freeze Frame Data	
AVANCIER	/	New energy battery (EV)	M44	Read Live Data	
AVANCIER	/	New energy battery (EV)	M44	Inspection	
AVANCIER	/	New energy battery (EV)	M44	Adjustment	
AVANCIER	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
AVANCIER	/	Electronic vacuum pump (EVPS)	M21	Read codes	
AVANCIER	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
AVANCIER	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
AVANCIER	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
AVANCIER	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
AVANCIER	/	Electronic vacuum pump (EVPS)	M22	Read codes	
AVANCIER	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
AVANCIER	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
AVANCIER	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
AVANCIER	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
AVANCIER	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
AVANCIER	/	FCW LDW	M4E	Read ECU Information	
AVANCIER	/	FCW LDW	M4E	Read codes	
AVANCIER	/	FCW LDW	M4E	Erase Codes	
AVANCIER	/	FCW LDW	M4E	Read Live Data	
AVANCIER	/	FCW LDW	M4E	Function Test	FCW Drive
AVANCIER	/	FCW LDW	M4E	Function Test	Left side lane departure warning
AVANCIER	/	FCW LDW	M4E	Function Test	Right side lane departure warning
AVANCIER	/	FCW LDW	M4E	Function Test	Indicator Drive
AVANCIER	/	FCW LDW	M4E	Adjustment	
AVANCIER	/	Instrument Display System (GAUGE)	M2C	Read codes	
AVANCIER	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
AVANCIER	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Read codes	
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Read codes	
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Read codes	
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA

AVANCIER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
AVANCIER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
AVANCIER	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Read codes	
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
AVANCIER	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
AVANCIER	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
AVANCIER	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
AVANCIER	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
AVANCIER	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
AVANCIER	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
AVANCIER	/	Intelligent Parking Control System (SPS)	M9B	Customize	
AVANCIER	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
AVANCIER	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
AVANCIER	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
AVANCIER	/	Hydraulic booster control system (HBS)	M5F	Read codes	
AVANCIER	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
AVANCIER	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
AVANCIER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
AVANCIER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
AVANCIER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
AVANCIER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
AVANCIER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
AVANCIER	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
AVANCIER	/	IMA	M63	Read ECU Information	
AVANCIER	/	IMA	M63	Read codes	
AVANCIER	/	IMA	M63	Erase Codes	
AVANCIER	/	IMA	M63	Read Freeze Frame Data	
AVANCIER	/	IMA	M63	Read Live Data	
AVANCIER	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
AVANCIER	/	IMA	M63	Adjustment	SOC PRESET
AVANCIER	/	IMA	M64	Read ECU Information	
AVANCIER	/	IMA	M64	Read codes	
AVANCIER	/	IMA	M64	Erase Codes	
AVANCIER	/	IMA	M64	Read Freeze Frame Data	
AVANCIER	/	IMA	M64	Read Live Data	
AVANCIER	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
AVANCIER	/	IMA	M64	Adjustment	SOC PRESET
AVANCIER	/	IMA	M65	Read ECU Information	
AVANCIER	/	IMA	M65	Read codes	
AVANCIER	/	IMA	M65	Erase Codes	
AVANCIER	/	IMA	M65	Read Freeze Frame Data	
AVANCIER	/	IMA	M65	Read Live Data	
AVANCIER	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
AVANCIER	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
AVANCIER	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
AVANCIER	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
AVANCIER	/	Intake Sounder Control System (ISC)	M6D	Read codes	
AVANCIER	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
AVANCIER	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
AVANCIER	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
AVANCIER	/	Night Vision System (INVS)	0XB1	Read ECU Information	
AVANCIER	/	Night Vision System (INVS)	0XB1	Read codes	
AVANCIER	/	Night Vision System (INVS)	0XB1	Erase Codes	
AVANCIER	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
AVANCIER	/	Night Vision System (INVS)	0XB1	Read Live Data	
AVANCIER	/	Night Vision System (INVS)	0XB1	Adjustment	
AVANCIER	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
AVANCIER	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
AVANCIER	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
AVANCIER	/	i-SHIFT	0XB0	Read ECU Information	
AVANCIER	/	i-SHIFT	0XB0	Read codes	
AVANCIER	/	i-SHIFT	0XB0	Erase Codes	
AVANCIER	/	i-SHIFT	0XB0	Read Live Data	
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Read codes	
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Self Check	
AVANCIER	/	Keyless Entry Control System (KAS)	M99	History Data	
AVANCIER	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving

AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
AVANCIER	/	Keyless Entry Control System (KAS)	M99	Registration	
AVANCIER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
AVANCIER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
AVANCIER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
AVANCIER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
AVANCIER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
AVANCIER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
AVANCIER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
AVANCIER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
AVANCIER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
AVANCIER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
AVANCIER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
AVANCIER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
AVANCIER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
AVANCIER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
AVANCIER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
AVANCIER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
AVANCIER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
AVANCIER	/	Management ECU Module (ME)	M74	Read ECU Information	
AVANCIER	/	Management ECU Module (ME)	M74	Read codes	
AVANCIER	/	Management ECU Module (ME)	M74	Erase Codes	
AVANCIER	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
AVANCIER	/	Management ECU Module (ME)	M74	Read Live Data	
AVANCIER	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
AVANCIER	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
AVANCIER	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
AVANCIER	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
AVANCIER	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
AVANCIER	/	Multi-view camera system (MVCS)	M7A	Read codes	
AVANCIER	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
AVANCIER	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
AVANCIER	/	Multi-view camera system (MVCS)	M7A	Customization	
AVANCIER	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
AVANCIER	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
AVANCIER	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
AVANCIER	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
AVANCIER	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
AVANCIER	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
AVANCIER	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
AVANCIER	/	Power Control Unit (PCU)	M83	Read ECU Information	
AVANCIER	/	Power Control Unit (PCU)	M83	Read codes	
AVANCIER	/	Power Control Unit (PCU)	M83	Erase Codes	
AVANCIER	/	Power Control Unit (PCU)	M83	Read Live Data	
AVANCIER	/	Power Control Unit (PCU)	M83	Self Check	
AVANCIER	/	Power Control Unit (PCU)	M83	History Data	
AVANCIER	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
AVANCIER	/	Engine Control System (PGM-FI)	M23	Read codes	
AVANCIER	/	Engine Control System (PGM-FI)	M23	Erase Codes	

AVANCIER	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
AVANCIER	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
AVANCIER	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
AVANCIER	/	Engine Control System (PGM-FI)	M23	Read Live Data	
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
AVANCIER	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
AVANCIER	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
AVANCIER	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
AVANCIER	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
AVANCIER	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
AVANCIER	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
AVANCIER	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
AVANCIER	/	Engine Control System (PGM-FI)	M50	Read codes	
AVANCIER	/	Engine Control System (PGM-FI)	M50	Erase Codes	
AVANCIER	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
AVANCIER	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
AVANCIER	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
AVANCIER	/	Engine Control System (PGM-FI)	M50	Read Live Data	
AVANCIER	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
AVANCIER	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
AVANCIER	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
AVANCIER	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
AVANCIER	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
AVANCIER	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
AVANCIER	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
AVANCIER	/	Engine Control System (PGM-FI)	M86	Read codes	
AVANCIER	/	Engine Control System (PGM-FI)	M86	Erase Codes	
AVANCIER	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
AVANCIER	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
AVANCIER	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
AVANCIER	/	Engine Control System (PGM-FI)	M86	Read Live Data	
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
AVANCIER	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
AVANCIER	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
AVANCIER	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
AVANCIER	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
AVANCIER	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
AVANCIER	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
AVANCIER	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
AVANCIER	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
AVANCIER	/	PSR	M27	Read ECU Information	
AVANCIER	/	PSR	M27	Read codes	
AVANCIER	/	PSR	M27	Erase Codes	
AVANCIER	/	PSR	M27	Read Live Data	
AVANCIER	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
AVANCIER	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
AVANCIER	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
AVANCIER	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
AVANCIER	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
AVANCIER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
AVANCIER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
AVANCIER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
AVANCIER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
AVANCIER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
AVANCIER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
AVANCIER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
AVANCIER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
AVANCIER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	



AVANCIER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
AVANCIER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
AVANCIER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
AVANCIER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
AVANCIER	/	Remote starter (RS)	M90	System Check	
AVANCIER	/	Remote starter (RS)	M90	HISTORY	
AVANCIER	/	Remote starter (RS)	M90	Registration	
AVANCIER	/	Seat load cell (SWS)	M6F	Read ECU Information	
AVANCIER	/	Seat load cell (SWS)	M6F	Read codes	
AVANCIER	/	Seat load cell (SWS)	M6F	Erase Codes	
AVANCIER	/	Seat load cell (SWS)	M6F	Read Live Data	
AVANCIER	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
AVANCIER	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
AVANCIER	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
AVANCIER	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
AVANCIER	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
AVANCIER	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
AVANCIER	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
AVANCIER	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
AVANCIER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
AVANCIER	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
AVANCIER	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
AVANCIER	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
AVANCIER	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
AVANCIER	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
AVANCIER	/	Groove track drive unit (SLOT ECU)	M98	History Data	
AVANCIER	/	Groove track drive unit (SLOT ECU)	M98	System Information	
AVANCIER	/	Airbag Control System (SRS)	M9F	Read ECU Information	
AVANCIER	/	Airbag Control System (SRS)	M9F	Read codes	
AVANCIER	/	Airbag Control System (SRS)	M9F	Erase Codes	
AVANCIER	/	Airbag Control System (SRS)	M9F	Read Live Data	
AVANCIER	/	Airbag Control System (SRS)	MA0	Read ECU Information	
AVANCIER	/	Airbag Control System (SRS)	MA0	Read codes	
AVANCIER	/	Airbag Control System (SRS)	MA0	Erase Codes	
AVANCIER	/	Airbag Control System (SRS)	MA0	Read Live Data	
AVANCIER	/	Airbag Control System (SRS)	MA1	Read ECU Information	
AVANCIER	/	Airbag Control System (SRS)	MA1	Read codes	
AVANCIER	/	Airbag Control System (SRS)	MA1	Erase Codes	
AVANCIER	/	Airbag Control System (SRS)	MA1	Read Live Data	
AVANCIER	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
AVANCIER	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
AVANCIER	/	Airbag Control System (SRS)	M2A	Read codes	
AVANCIER	/	Airbag Control System (SRS)	M2A	Erase Codes	
AVANCIER	/	Airbag Control System (SRS)	M2A	Read Live Data	
AVANCIER	/	Airbag Control System (SRS)	M9C	Read ECU Information	
AVANCIER	/	Airbag Control System (SRS)	M9C	Read codes	
AVANCIER	/	Airbag Control System (SRS)	M9C	Erase Codes	
AVANCIER	/	Airbag Control System (SRS)	M9C	Read Live Data	
AVANCIER	/	Airbag Control System (SRS)	M9D	Read ECU Information	
AVANCIER	/	Airbag Control System (SRS)	M9D	Read codes	
AVANCIER	/	Airbag Control System (SRS)	M9D	Erase Codes	
AVANCIER	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
AVANCIER	/	Airbag Control System (SRS)	M9D	Read Live Data	
AVANCIER	/	Airbag Control System (SRS)	M9D	Parameter Information	
AVANCIER	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
AVANCIER	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
AVANCIER	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
AVANCIER	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
AVANCIER	/	Airbag Control System (SRS)	M9D	Function Test	
AVANCIER	/	Airbag Control System (SRS)	M9D	System Information	
AVANCIER	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
AVANCIER	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
AVANCIER	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
AVANCIER	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
AVANCIER	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
AVANCIER	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
AVANCIER	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
AVANCIER	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
AVANCIER	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
AVANCIER	/	Variable Valve Timing Control System (SVT)	MA2	System Information	

AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
AVANCIER /	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
AVANCIER /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
AVANCIER /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
AVANCIER /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
AVANCIER /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
AVANCIER /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
AVANCIER /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
AVANCIER /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
AVANCIER /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
Accord Plug-In Hyb /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
Accord Plug-In Hyb /	Four-wheel steering control system (4WS)	M52	Read codes	
Accord Plug-In Hyb /	Four-wheel steering control system (4WS)	M52	Erase Codes	
Accord Plug-In Hyb /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
Accord Plug-In Hyb /	Four-wheel steering control system (4WS)	M52	Read Live Data	
Accord Plug-In Hyb /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
Accord Plug-In Hyb /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
Accord Plug-In Hyb /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
Accord Plug-In Hyb /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
Accord Plug-In Hyb /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
Accord Plug-In Hyb /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	Read ECU Information	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	Read codes	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	Erase Codes	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	Read Live Data	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3B	Read ECU Information	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3B	Read codes	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3B	Erase Codes	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3B	Read Live Data	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3C	Read ECU Information	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3C	Read codes	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M3C	Erase Codes	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Read ECU Information	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Read codes	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Erase Codes	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	ECMPCM Reset	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Read Live Data	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M82	Read ECU Information	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M82	Read codes	
Accord Plug-In Hyb /	Automatic shift control system (A/T)	M82	Erase Codes	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	

Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
Accord Plug-In Hyb /	Active Engine Control Support System (ACM) M06	Read ECU Information	
Accord Plug-In Hyb /	Active Engine Control Support System (ACM) M06	Read codes	
Accord Plug-In Hyb /	Active Engine Control Support System (ACM) M06	Erase Codes	
Accord Plug-In Hyb /	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
Accord Plug-In Hyb /	Active Engine Control Support System (ACM) M06	Read Live Data	
Accord Plug-In Hyb /	Active Engine Control Support System (ACM) M06	ACM Reset	
Accord Plug-In Hyb /	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
Accord Plug-In Hyb /	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
Accord Plug-In Hyb /	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
Accord Plug-In Hyb /	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
Accord Plug-In Hyb /	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
Accord Plug-In Hyb /	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
Accord Plug-In Hyb /	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
Accord Plug-In Hyb /	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
Accord Plug-In Hyb /	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
Accord Plug-In Hyb /	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
Accord Plug-In Hyb /	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
Accord Plug-In Hyb /	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
Accord Plug-In Hyb /	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
Accord Plug-In Hyb /	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
Accord Plug-In Hyb /	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
Accord Plug-In Hyb /	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
Accord Plug-In Hyb /	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
Accord Plug-In Hyb /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
Accord Plug-In Hyb /	Transmission Control System (AT) M18	Read ECU Information	
Accord Plug-In Hyb /	Transmission Control System (AT) M18	Read codes	
Accord Plug-In Hyb /	Transmission Control System (AT) M18	Erase Codes	
Accord Plug-In Hyb /	Transmission Control System (AT) M18	Read Freeze Frame Data	
Accord Plug-In Hyb /	Transmission Control System (AT) M18	Read Live Data	
Accord Plug-In Hyb /	Transmission Control System (AT) M18	Adjustment	
Accord Plug-In Hyb /	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
Accord Plug-In Hyb /	Active Torque Converter Control System (ATTS) M0E	Read codes	
Accord Plug-In Hyb /	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
Accord Plug-In Hyb /	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
Accord Plug-In Hyb /	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
Accord Plug-In Hyb /	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
Accord Plug-In Hyb /	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
Accord Plug-In Hyb /	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
Accord Plug-In Hyb /	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
Accord Plug-In Hyb /	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
Accord Plug-In Hyb /	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Oncoming Vehicle Detection
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Preceding Vehicle Detection
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset Operation
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Returning Operation
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Automatic Returning Distance

Accord Plug-In Hyb /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
Accord Plug-In Hyb /	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
Accord Plug-In Hyb /	BODY ELECTRICAL/Door Locks	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
Accord Plug-In Hyb /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
Accord Plug-In Hyb /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
Accord Plug-In Hyb /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
Accord Plug-In Hyb /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
Accord Plug-In Hyb /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
Accord Plug-In Hyb /	BODY ELECTRICAL/e-Call	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Front Panel	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
Accord Plug-In Hyb /	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
Accord Plug-In Hyb /	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
Accord Plug-In Hyb /	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
Accord Plug-In Hyb /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
Accord Plug-In Hyb /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
Accord Plug-In Hyb /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
Accord Plug-In Hyb /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command

Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
Accord Plug-In Hyb /	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
Accord Plug-In Hyb /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
Accord Plug-In Hyb /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
Accord Plug-In Hyb /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Security	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Security	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Security	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
Accord Plug-In Hyb /	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
Accord Plug-In Hyb /	BODY ELECTRICAL/Security	MFF	History Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Security	MFF	History Clear	
Accord Plug-In Hyb /	BODY ELECTRICAL/Telematics	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
Accord Plug-In Hyb /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
Accord Plug-In Hyb /	BODY ELECTRICAL/Wiper	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Accord Plug-In Hyb /	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
Accord Plug-In Hyb /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Accord Plug-In Hyb /	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP Security	MFF	Read codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP Security	MFF	History Data	
Accord Plug-In Hyb /	BODY ELECTRICAL/YOP Security	MFF	History Clear	
Accord Plug-In Hyb /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
Accord Plug-In Hyb /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
Accord Plug-In Hyb /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
Accord Plug-In Hyb /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
Accord Plug-In Hyb /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
Accord Plug-In Hyb /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
Accord Plug-In Hyb /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
Accord Plug-In Hyb /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	

Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
Accord Plug-In Hyb /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
Accord Plug-In Hyb /	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
Accord Plug-In Hyb /	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
Accord Plug-In Hyb /	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
Accord Plug-In Hyb /	Urban Active Brake Control System (CBAS)	M32	Read codes	
Accord Plug-In Hyb /	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
Accord Plug-In Hyb /	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
Accord Plug-In Hyb /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
Accord Plug-In Hyb /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
Accord Plug-In Hyb /	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read ECU Information	
Accord Plug-In Hyb /	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read codes	
Accord Plug-In Hyb /	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Erase Codes	
Accord Plug-In Hyb /	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Freeze Frame Data	
Accord Plug-In Hyb /	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Live Data	
Accord Plug-In Hyb /	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	CMBS (CMS) ACTIVATION HISTORY	
Accord Plug-In Hyb /	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	RADAR AIMING
Accord Plug-In Hyb /	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	CMBS Brake
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M1B	M1B	Read ECU Information	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M1B	M1B	Read codes	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M1B	M1B	Erase Codes	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Freeze Frame Data	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Live Data	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M1B	M1B	ECMPCM Reset	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Lock Solenoid Test
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Solenoid Tests
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Electrical Oil Pump Activation
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M33	M33	Read ECU Information	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M33	M33	Read codes	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M33	M33	Erase Codes	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M33	M33	Read Freeze Frame Data	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M33	M33	Read Live Data	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M33	M33	ECMPCM Reset	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Inhibitor Solenoid
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid A (LF)
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid B (RF)
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Start Clutch Feedback Learn
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	Read ECU Information	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	Read codes	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	Erase Codes	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Freeze Frame Data	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Live Data	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	ECMPCM Reset	
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Inhibitor Solenoid
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid A (LF)
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid B (RF)
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Start Clutch Feedback Learn
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve A
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve B
Accord Plug-In Hyb /	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve O/P
Accord Plug-In Hyb /	DBW	M34	Read ECU Information	
Accord Plug-In Hyb /	DBW	M34	Read codes	
Accord Plug-In Hyb /	DBW	M34	Erase Codes	
Accord Plug-In Hyb /	DBW	M34	Read Freeze Frame Data	
Accord Plug-In Hyb /	DBW	M34	Read Live Data	
Accord Plug-In Hyb /	DBW	M34	Inspection	Idle Speed Adjust
Accord Plug-In Hyb /	DBW	M34	Inspection	Throttle Test
Accord Plug-In Hyb /	DBW	M34	ECM Reset	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Read codes	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	

Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M37	Read codes	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Read codes	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
Accord Plug-In Hyb /	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
Accord Plug-In Hyb /	Capacitor Control System (EDLC)	M12	Read codes	
Accord Plug-In Hyb /	Capacitor Control System (EDLC)	M12	Erase Codes	
Accord Plug-In Hyb /	Capacitor Control System (EDLC)	M12	Read Live Data	
Accord Plug-In Hyb /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
Accord Plug-In Hyb /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
Accord Plug-In Hyb /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
Accord Plug-In Hyb /	Electronic Brake Control System (EPB)	M1F	Read codes	
Accord Plug-In Hyb /	Electronic Brake Control System (EPB)	M1F	Erase Codes	
Accord Plug-In Hyb /	Electronic Brake Control System (EPB)	M1F	Read Live Data	
Accord Plug-In Hyb /	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
Accord Plug-In Hyb /	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
Accord Plug-In Hyb /	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
Accord Plug-In Hyb /	Electronic Brake Control System (EPB)	M3E	Read codes	
Accord Plug-In Hyb /	Electronic Brake Control System (EPB)	M3E	Erase Codes	
Accord Plug-In Hyb /	Electronic Brake Control System (EPB)	M3E	Read Live Data	
Accord Plug-In Hyb /	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
Accord Plug-In Hyb /	Electric Powertrain / IMA	M66	Read ECU Information	
Accord Plug-In Hyb /	Electric Powertrain / IMA	M66	Read codes	
Accord Plug-In Hyb /	Electric Powertrain / IMA	M66	Erase Codes	
Accord Plug-In Hyb /	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
Accord Plug-In Hyb /	Electric Powertrain / IMA	M66	Read Live Data	
Accord Plug-In Hyb /	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
Accord Plug-In Hyb /	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
Accord Plug-In Hyb /	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
Accord Plug-In Hyb /	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
Accord Plug-In Hyb /	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
Accord Plug-In Hyb /	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
Accord Plug-In Hyb /	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
Accord Plug-In Hyb /	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
Accord Plug-In Hyb /	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
Accord Plug-In Hyb /	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
Accord Plug-In Hyb /	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
Accord Plug-In Hyb /	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M20	Read codes	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M3F	Read codes	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M6B	Read codes	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
Accord Plug-In Hyb /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
Accord Plug-In Hyb /	New energy battery (EV)	M44	Read ECU Information	
Accord Plug-In Hyb /	New energy battery (EV)	M44	Read codes	
Accord Plug-In Hyb /	New energy battery (EV)	M44	Erase Codes	
Accord Plug-In Hyb /	New energy battery (EV)	M44	Read Freeze Frame Data	
Accord Plug-In Hyb /	New energy battery (EV)	M44	Read Live Data	
Accord Plug-In Hyb /	New energy battery (EV)	M44	Inspection	
Accord Plug-In Hyb /	New energy battery (EV)	M44	Adjustment	

Accord Plug-In Hyb /	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
Accord Plug-In Hyb /	Electronic vacuum pump (EVPS)	M21	Read codes	
Accord Plug-In Hyb /	Electronic vacuum pump (EVPS)	M21	Erase Codes	
Accord Plug-In Hyb /	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
Accord Plug-In Hyb /	Electronic vacuum pump (EVPS)	M21	Read Live Data	
Accord Plug-In Hyb /	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
Accord Plug-In Hyb /	Electronic vacuum pump (EVPS)	M22	Read codes	
Accord Plug-In Hyb /	Electronic vacuum pump (EVPS)	M22	Erase Codes	
Accord Plug-In Hyb /	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
Accord Plug-In Hyb /	Electronic vacuum pump (EVPS)	M22	Read Live Data	
Accord Plug-In Hyb /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
Accord Plug-In Hyb /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
Accord Plug-In Hyb /	FCW LDW	M4E	Read ECU Information	
Accord Plug-In Hyb /	FCW LDW	M4E	Read codes	
Accord Plug-In Hyb /	FCW LDW	M4E	Erase Codes	
Accord Plug-In Hyb /	FCW LDW	M4E	Read Live Data	
Accord Plug-In Hyb /	FCW LDW	M4E	Function Test	FCW Drive
Accord Plug-In Hyb /	FCW LDW	M4E	Function Test	Left side lane departure warning
Accord Plug-In Hyb /	FCW LDW	M4E	Function Test	Right side lane departure warning
Accord Plug-In Hyb /	FCW LDW	M4E	Function Test	Indicator Drive
Accord Plug-In Hyb /	FCW LDW	M4E	Adjustment	
Accord Plug-In Hyb /	Instrument Display System (GAUGE)	M2C	Read codes	
Accord Plug-In Hyb /	Instrument Display System (GAUGE)	M2C	Erase Codes	
Accord Plug-In Hyb /	Instrument Display System (GAUGE)	M2C	Read Live Data	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Read ECU Information	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Read codes	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Erase Codes	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Read Live Data	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Read ECU Information	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Read codes	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Erase Codes	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Read Live Data	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Read ECU Information	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Read codes	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Erase Codes	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Read Live Data	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Pulser Test	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Read codes	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Erase Codes	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Read Live Data	
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
Accord Plug-In Hyb /	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
Accord Plug-In Hyb /	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
Accord Plug-In Hyb /	Intelligent Parking Control System (SPS)	M9B	Read codes	
Accord Plug-In Hyb /	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
Accord Plug-In Hyb /	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
Accord Plug-In Hyb /	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
Accord Plug-In Hyb /	Intelligent Parking Control System (SPS)	M9B	Customize	
Accord Plug-In Hyb /	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
Accord Plug-In Hyb /	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
Accord Plug-In Hyb /	Hydraulic booster control system (HBS)	M5F	Read ECU Information	



Accord Plug-In Hyb /	Hydraulic booster control system (HBS)	M5F	Read codes	
Accord Plug-In Hyb /	Hydraulic booster control system (HBS)	M5F	Erase Codes	
Accord Plug-In Hyb /	Hydraulic booster control system (HBS)	M5F	Read Live Data	
Accord Plug-In Hyb /	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
Accord Plug-In Hyb /	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
Accord Plug-In Hyb /	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
Accord Plug-In Hyb /	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
Accord Plug-In Hyb /	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
Accord Plug-In Hyb /	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
Accord Plug-In Hyb /	IMA	M63	Read ECU Information	
Accord Plug-In Hyb /	IMA	M63	Read codes	
Accord Plug-In Hyb /	IMA	M63	Erase Codes	
Accord Plug-In Hyb /	IMA	M63	Read Freeze Frame Data	
Accord Plug-In Hyb /	IMA	M63	Read Live Data	
Accord Plug-In Hyb /	IMA	M63	Function Test	IPU MODULE FAN DRIVE
Accord Plug-In Hyb /	IMA	M63	Adjustment	SOC PRESET
Accord Plug-In Hyb /	IMA	M64	Read ECU Information	
Accord Plug-In Hyb /	IMA	M64	Read codes	
Accord Plug-In Hyb /	IMA	M64	Erase Codes	
Accord Plug-In Hyb /	IMA	M64	Read Freeze Frame Data	
Accord Plug-In Hyb /	IMA	M64	Read Live Data	
Accord Plug-In Hyb /	IMA	M64	Function Test	IPU MODULE FAN DRIVE
Accord Plug-In Hyb /	IMA	M64	Adjustment	SOC PRESET
Accord Plug-In Hyb /	IMA	M65	Read ECU Information	
Accord Plug-In Hyb /	IMA	M65	Read codes	
Accord Plug-In Hyb /	IMA	M65	Erase Codes	
Accord Plug-In Hyb /	IMA	M65	Read Freeze Frame Data	
Accord Plug-In Hyb /	IMA	M65	Read Live Data	
Accord Plug-In Hyb /	IMA	M65	Function Test	IPU MODULE FAN DRIVE
Accord Plug-In Hyb /	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
Accord Plug-In Hyb /	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
Accord Plug-In Hyb /	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
Accord Plug-In Hyb /	Intake Sounder Control System (ISC)	M6D	Read codes	
Accord Plug-In Hyb /	Intake Sounder Control System (ISC)	M6D	Erase Codes	
Accord Plug-In Hyb /	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
Accord Plug-In Hyb /	Intake Sounder Control System (ISC)	M6D	Read Live Data	
Accord Plug-In Hyb /	Night Vision System (INVS)	0XB1	Read ECU Information	
Accord Plug-In Hyb /	Night Vision System (INVS)	0XB1	Read codes	
Accord Plug-In Hyb /	Night Vision System (INVS)	0XB1	Erase Codes	
Accord Plug-In Hyb /	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
Accord Plug-In Hyb /	Night Vision System (INVS)	0XB1	Read Live Data	
Accord Plug-In Hyb /	Night Vision System (INVS)	0XB1	Adjustment	
Accord Plug-In Hyb /	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
Accord Plug-In Hyb /	Night Vision System (INVS)	0XB1	Function Test	Camera Test
Accord Plug-In Hyb /	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
Accord Plug-In Hyb /	i-SHIFT	0XB0	Read ECU Information	
Accord Plug-In Hyb /	i-SHIFT	0XB0	Read codes	
Accord Plug-In Hyb /	i-SHIFT	0XB0	Erase Codes	
Accord Plug-In Hyb /	i-SHIFT	0XB0	Read Live Data	
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Read ECU Information	
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Read codes	
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Erase Codes	
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Read Live Data	
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Self Check	
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	History Data	
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output

Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
Accord Plug-In Hyb /	Keyless Entry Control System (KAS)	M99	Registration	
Accord Plug-In Hyb /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
Accord Plug-In Hyb /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
Accord Plug-In Hyb /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
Accord Plug-In Hyb /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
Accord Plug-In Hyb /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
Accord Plug-In Hyb /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
Accord Plug-In Hyb /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
Accord Plug-In Hyb /	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
Accord Plug-In Hyb /	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
Accord Plug-In Hyb /	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
Accord Plug-In Hyb /	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
Accord Plug-In Hyb /	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
Accord Plug-In Hyb /	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
Accord Plug-In Hyb /	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
Accord Plug-In Hyb /	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
Accord Plug-In Hyb /	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
Accord Plug-In Hyb /	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
Accord Plug-In Hyb /	Management ECU Module (ME)	M74	Read ECU Information	
Accord Plug-In Hyb /	Management ECU Module (ME)	M74	Read codes	
Accord Plug-In Hyb /	Management ECU Module (ME)	M74	Erase Codes	
Accord Plug-In Hyb /	Management ECU Module (ME)	M74	Read Freeze Frame Data	
Accord Plug-In Hyb /	Management ECU Module (ME)	M74	Read Live Data	
Accord Plug-In Hyb /	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
Accord Plug-In Hyb /	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
Accord Plug-In Hyb /	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
Accord Plug-In Hyb /	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
Accord Plug-In Hyb /	Multi-view camera system (MVCS)	M7A	Read ECU Information	
Accord Plug-In Hyb /	Multi-view camera system (MVCS)	M7A	Read codes	
Accord Plug-In Hyb /	Multi-view camera system (MVCS)	M7A	Erase Codes	
Accord Plug-In Hyb /	Multi-view camera system (MVCS)	M7A	Read Live Data	
Accord Plug-In Hyb /	Multi-view camera system (MVCS)	M7A	Customization	
Accord Plug-In Hyb /	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
Accord Plug-In Hyb /	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
Accord Plug-In Hyb /	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
Accord Plug-In Hyb /	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
Accord Plug-In Hyb /	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
Accord Plug-In Hyb /	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
Accord Plug-In Hyb /	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
Accord Plug-In Hyb /	Power Control Unit (PCU)	M83	Read ECU Information	
Accord Plug-In Hyb /	Power Control Unit (PCU)	M83	Read codes	
Accord Plug-In Hyb /	Power Control Unit (PCU)	M83	Erase Codes	
Accord Plug-In Hyb /	Power Control Unit (PCU)	M83	Read Live Data	
Accord Plug-In Hyb /	Power Control Unit (PCU)	M83	Self Check	
Accord Plug-In Hyb /	Power Control Unit (PCU)	M83	History Data	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Read ECU Information	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Read codes	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Erase Codes	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Readiness Codes	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Read Live Data	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	VIN CHECK	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	Read ECU Information	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	Read codes	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	Erase Codes	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	Readiness Codes	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	

Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	Read Live Data	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	VIN CHECK	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Read ECU Information	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Read codes	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Erase Codes	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Readiness Codes	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Read Live Data	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	ACM
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	VIN CHECK	
Accord Plug-In Hyb /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
Accord Plug-In Hyb /	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
Accord Plug-In Hyb /	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
Accord Plug-In Hyb /	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
Accord Plug-In Hyb /	PSR	M27	Read ECU Information	
Accord Plug-In Hyb /	PSR	M27	Read codes	
Accord Plug-In Hyb /	PSR	M27	Erase Codes	
Accord Plug-In Hyb /	PSR	M27	Read Live Data	
Accord Plug-In Hyb /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
Accord Plug-In Hyb /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
Accord Plug-In Hyb /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
Accord Plug-In Hyb /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
Accord Plug-In Hyb /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
Accord Plug-In Hyb /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
Accord Plug-In Hyb /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
Accord Plug-In Hyb /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
Accord Plug-In Hyb /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
Accord Plug-In Hyb /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
Accord Plug-In Hyb /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
Accord Plug-In Hyb /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
Accord Plug-In Hyb /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
Accord Plug-In Hyb /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
Accord Plug-In Hyb /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
Accord Plug-In Hyb /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
Accord Plug-In Hyb /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
Accord Plug-In Hyb /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
Accord Plug-In Hyb /	Remote starter (RS)	M90	System Check	
Accord Plug-In Hyb /	Remote starter (RS)	M90	HISTORY	
Accord Plug-In Hyb /	Remote starter (RS)	M90	Registration	
Accord Plug-In Hyb /	Seat load cell (SWS)	M6F	Read ECU Information	
Accord Plug-In Hyb /	Seat load cell (SWS)	M6F	Read codes	
Accord Plug-In Hyb /	Seat load cell (SWS)	M6F	Erase Codes	
Accord Plug-In Hyb /	Seat load cell (SWS)	M6F	Read Live Data	
Accord Plug-In Hyb /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
Accord Plug-In Hyb /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
Accord Plug-In Hyb /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
Accord Plug-In Hyb /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
Accord Plug-In Hyb /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
Accord Plug-In Hyb /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
Accord Plug-In Hyb /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
Accord Plug-In Hyb /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	

Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
Accord Plug-In Hyb /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
Accord Plug-In Hyb /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
Accord Plug-In Hyb /	Groove track drive unit (SLOT ECU)	M98	Read codes	
Accord Plug-In Hyb /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
Accord Plug-In Hyb /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
Accord Plug-In Hyb /	Groove track drive unit (SLOT ECU)	M98	Self Check	
Accord Plug-In Hyb /	Groove track drive unit (SLOT ECU)	M98	History Data	
Accord Plug-In Hyb /	Groove track drive unit (SLOT ECU)	M98	System Information	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9F	Read ECU Information	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9F	Read codes	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9F	Erase Codes	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9F	Read Live Data	
Accord Plug-In Hyb /	Airbag Control System (SRS)	MA0	Read ECU Information	
Accord Plug-In Hyb /	Airbag Control System (SRS)	MA0	Read codes	
Accord Plug-In Hyb /	Airbag Control System (SRS)	MA0	Erase Codes	
Accord Plug-In Hyb /	Airbag Control System (SRS)	MA0	Read Live Data	
Accord Plug-In Hyb /	Airbag Control System (SRS)	MA1	Read ECU Information	
Accord Plug-In Hyb /	Airbag Control System (SRS)	MA1	Read codes	
Accord Plug-In Hyb /	Airbag Control System (SRS)	MA1	Erase Codes	
Accord Plug-In Hyb /	Airbag Control System (SRS)	MA1	Read Live Data	
Accord Plug-In Hyb /	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
Accord Plug-In Hyb /	Airbag Control System (SRS)	M2A	Miscellaneous Test	Blinking Side Airbag Indicator Light
Accord Plug-In Hyb /	Airbag Control System (SRS)	M2A	Read codes	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M2A	Erase Codes	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M2A	Read Live Data	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9C	Read ECU Information	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9C	Read codes	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9C	Erase Codes	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9C	Read Live Data	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9D	Read ECU Information	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9D	Read codes	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9D	Erase Codes	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9D	Read Live Data	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9D	Parameter Information	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9D	Function Test	
Accord Plug-In Hyb /	Airbag Control System (SRS)	M9D	System Information	
Accord Plug-In Hyb /	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
Accord Plug-In Hyb /	Variable Valve Timing Control System (SVT)	MA2	Read codes	
Accord Plug-In Hyb /	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
Accord Plug-In Hyb /	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
Accord Plug-In Hyb /	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
Accord Plug-In Hyb /	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
Accord Plug-In Hyb /	Variable Valve Timing Control System (SVT)	MA2	Inspection	
Accord Plug-In Hyb /	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
Accord Plug-In Hyb /	Variable Valve Timing Control System (SVT)	MA2	Function Test	
Accord Plug-In Hyb /	Variable Valve Timing Control System (SVT)	MA2	System Information	
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
Accord Plug-In Hyb /	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
Accord Plug-In Hyb /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
Accord Plug-In Hyb /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
Accord Plug-In Hyb /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
Accord Plug-In Hyb /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
Accord Plug-In Hyb /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
Accord Plug-In Hyb /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
Accord Plug-In Hyb /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
Accord Plug-In Hyb /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
BALLADE /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
BALLADE /	Four-wheel steering control system (4WS)	M52	Read codes	
BALLADE /	Four-wheel steering control system (4WS)	M52	Erase Codes	
BALLADE /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
BALLADE /	Four-wheel steering control system (4WS)	M52	Read Live Data	
BALLADE /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
BALLADE /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
BALLADE /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
BALLADE /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
BALLADE /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
BALLADE /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK

BALLADE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
BALLADE	/	Automatic shift control system (A/T)	M1E	Read codes	
BALLADE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
BALLADE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
BALLADE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
BALLADE	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
BALLADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
BALLADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
BALLADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
BALLADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
BALLADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
BALLADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
BALLADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
BALLADE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
BALLADE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
BALLADE	/	Automatic shift control system (A/T)	M3B	Read codes	
BALLADE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
BALLADE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
BALLADE	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
BALLADE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
BALLADE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
BALLADE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
BALLADE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
BALLADE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
BALLADE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
BALLADE	/	Automatic shift control system (A/T)	M3C	Read codes	
BALLADE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
BALLADE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
BALLADE	/	Automatic shift control system (A/T)	M81	Read codes	
BALLADE	/	Automatic shift control system (A/T)	M81	Erase Codes	
BALLADE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
BALLADE	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
BALLADE	/	Automatic shift control system (A/T)	M81	Read Live Data	
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
BALLADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
BALLADE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
BALLADE	/	Automatic shift control system (A/T)	M82	Read codes	
BALLADE	/	Automatic shift control system (A/T)	M82	Erase Codes	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
BALLADE	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
BALLADE	/	Active Engine Control Support System (ACM)	M06	Read codes	
BALLADE	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
BALLADE	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
BALLADE	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
BALLADE	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
BALLADE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
BALLADE	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
BALLADE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
BALLADE	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
BALLADE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
BALLADE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
BALLADE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
BALLADE	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read ECU Information	
BALLADE	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read codes	
BALLADE	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Erase Codes	
BALLADE	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read Freeze Frame Data	
BALLADE	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read Live Data	
BALLADE	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Function Test	Damper Force Operation Test
BALLADE	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Adjustment	Damper Stroke Calibration
BALLADE	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
BALLADE	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
BALLADE	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	

BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
BALLADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
BALLADE	/	Transmission Control System (AT) M18	Read ECU Information	
BALLADE	/	Transmission Control System (AT) M18	Read codes	
BALLADE	/	Transmission Control System (AT) M18	Erase Codes	
BALLADE	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
BALLADE	/	Transmission Control System (AT) M18	Read Live Data	
BALLADE	/	Transmission Control System (AT) M18	Adjustment	
BALLADE	/	Active Torque Converter Control System (ATTTS) MOE	Read ECU Information	
BALLADE	/	Active Torque Converter Control System (ATTTS) MOE	Read codes	
BALLADE	/	Active Torque Converter Control System (ATTTS) MOE	Erase Codes	
BALLADE	/	Active Torque Converter Control System (ATTTS) MOE	Read Freeze Frame Data	
BALLADE	/	Active Torque Converter Control System (ATTTS) MOE	Read Live Data	
BALLADE	/	Active Torque Converter Control System (ATTTS) MOE	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
BALLADE	/	Active Torque Converter Control System (ATTTS) MOE	Miscellaneous Test	STEERING ANGLE
BALLADE	/	Active Torque Converter Control System (ATTTS) MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
BALLADE	/	Active Torque Converter Control System (ATTTS) MOE	Miscellaneous Test	ALL SENSORS
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
BALLADE	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
BALLADE	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
BALLADE	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Oncoming Vehicle Detection
BALLADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Preceding Vehicle Detection
BALLADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
BALLADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
BALLADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset Operation
BALLADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Returning Operation
BALLADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Automatic Returning Distance
BALLADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Manual Returning Time
BALLADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset to default
BALLADE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
BALLADE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
BALLADE	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
BALLADE	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
BALLADE	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
BALLADE	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
BALLADE	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
BALLADE	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
BALLADE	/	BODY ELECTRICAL/e-Call MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
BALLADE	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
BALLADE	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
BALLADE	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	
BALLADE	/	BODY ELECTRICAL/Gauges MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Gauges MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Gauges MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Gauges MFF	Function Test	Speedometer
BALLADE	/	BODY ELECTRICAL/Gauges MFF	Function Test	Tachometer
BALLADE	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Activation Indicator

BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
BALLADE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
BALLADE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
BALLADE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
BALLADE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
BALLADE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
BALLADE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
BALLADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
BALLADE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
BALLADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
BALLADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
BALLADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
BALLADE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
BALLADE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
BALLADE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
BALLADE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
BALLADE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
BALLADE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
BALLADE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	

BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
BALLADE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
BALLADE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Security	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
BALLADE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
BALLADE	/	BODY ELECTRICAL/Security	MFF	History Data	
BALLADE	/	BODY ELECTRICAL/Security	MFF	History Clear	
BALLADE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
BALLADE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
BALLADE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
BALLADE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
BALLADE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
BALLADE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
BALLADE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
BALLADE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
BALLADE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
BALLADE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
BALLADE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
BALLADE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
BALLADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
BALLADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
BALLADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
BALLADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
BALLADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
BALLADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
BALLADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
BALLADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
BALLADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
BALLADE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
BALLADE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
BALLADE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
BALLADE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
BALLADE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
BALLADE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
BALLADE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
BALLADE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
BALLADE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
BALLADE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
BALLADE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
BALLADE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
BALLADE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
BALLADE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
BALLADE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
BALLADE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
BALLADE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
BALLADE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
BALLADE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
BALLADE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
BALLADE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	



BALLADE	/	Promise Automatic Transmission Control System (CVT M1B)	ECMPCM Reset	
BALLADE	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Lock Solenoid Test
BALLADE	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Solenoid Tests
BALLADE	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Electrical Oil Pump Activation
BALLADE	/	Promise Automatic Transmission Control System (CVT M33)	Read ECU Information	
BALLADE	/	Promise Automatic Transmission Control System (CVT M33)	Read codes	
BALLADE	/	Promise Automatic Transmission Control System (CVT M33)	Erase Codes	
BALLADE	/	Promise Automatic Transmission Control System (CVT M33)	Read Freeze Frame Data	
BALLADE	/	Promise Automatic Transmission Control System (CVT M33)	Read Live Data	
BALLADE	/	Promise Automatic Transmission Control System (CVT M33)	ECMPCM Reset	
BALLADE	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid
BALLADE	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)
BALLADE	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)
BALLADE	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information	
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes	
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes	
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data	
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data	
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	ECMPCM Reset	
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B
BALLADE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P
BALLADE	/	DBW M34	Read ECU Information	
BALLADE	/	DBW M34	Read codes	
BALLADE	/	DBW M34	Erase Codes	
BALLADE	/	DBW M34	Read Freeze Frame Data	
BALLADE	/	DBW M34	Read Live Data	
BALLADE	/	DBW M34	Inspection	Idle Speed Adjust
BALLADE	/	DBW M34	Inspection	Throttle Test
BALLADE	/	DBW M34	ECM Reset	
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
BALLADE	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
BALLADE	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
BALLADE	/	Diesel Engine Control System (DIESEL) M37	Read codes	
BALLADE	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
BALLADE	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
BALLADE	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
BALLADE	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
BALLADE	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
BALLADE	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
BALLADE	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Read codes	
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
BALLADE	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
BALLADE	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
BALLADE	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
BALLADE	/	Capacitor Control System (EDLC) M12	Read codes	
BALLADE	/	Capacitor Control System (EDLC) M12	Erase Codes	
BALLADE	/	Capacitor Control System (EDLC) M12	Read Live Data	
BALLADE	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge and Charge Test

BALLADE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
BALLADE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
BALLADE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
BALLADE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
BALLADE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
BALLADE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
BALLADE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
BALLADE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
BALLADE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
BALLADE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
BALLADE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
BALLADE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
BALLADE	/	Electric Powertrain / IMA	M66	Read ECU Information	
BALLADE	/	Electric Powertrain / IMA	M66	Read codes	
BALLADE	/	Electric Powertrain / IMA	M66	Erase Codes	
BALLADE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
BALLADE	/	Electric Powertrain / IMA	M66	Read Live Data	
BALLADE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
BALLADE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
BALLADE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
BALLADE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
BALLADE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
BALLADE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
BALLADE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
BALLADE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
BALLADE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
BALLADE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
BALLADE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
BALLADE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
BALLADE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
BALLADE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
BALLADE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
BALLADE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
BALLADE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
BALLADE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
BALLADE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
BALLADE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
BALLADE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
BALLADE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
BALLADE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
BALLADE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
BALLADE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
BALLADE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
BALLADE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
BALLADE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
BALLADE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
BALLADE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
BALLADE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
BALLADE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
BALLADE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
BALLADE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
BALLADE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
BALLADE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
BALLADE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
BALLADE	/	New energy battery (EV)	M44	Read ECU Information	
BALLADE	/	New energy battery (EV)	M44	Read codes	
BALLADE	/	New energy battery (EV)	M44	Erase Codes	
BALLADE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
BALLADE	/	New energy battery (EV)	M44	Read Live Data	
BALLADE	/	New energy battery (EV)	M44	Inspection	
BALLADE	/	New energy battery (EV)	M44	Adjustment	
BALLADE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
BALLADE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
BALLADE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
BALLADE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
BALLADE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
BALLADE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
BALLADE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
BALLADE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
BALLADE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
BALLADE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
BALLADE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
BALLADE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
BALLADE	/	FCW LDW	M4E	Read ECU Information	
BALLADE	/	FCW LDW	M4E	Read codes	
BALLADE	/	FCW LDW	M4E	Erase Codes	
BALLADE	/	FCW LDW	M4E	Read Live Data	
BALLADE	/	FCW LDW	M4E	Function Test	FCW Drive
BALLADE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
BALLADE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
BALLADE	/	FCW LDW	M4E	Function Test	Indicator Drive
BALLADE	/	FCW LDW	M4E	Adjustment	
BALLADE	/	Instrument Display System (GAUGE)	M2C	Read codes	
BALLADE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
BALLADE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
BALLADE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
BALLADE	/	Anti-lock brake control system (ABS)	M01	Read codes	
BALLADE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
BALLADE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
BALLADE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
BALLADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid

BALLADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
BALLADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
BALLADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
BALLADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
BALLADE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
BALLADE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
BALLADE	/	Anti-lock brake control system (ABS)	M02	Read codes	
BALLADE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
BALLADE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
BALLADE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
BALLADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
BALLADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
BALLADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
BALLADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
BALLADE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
BALLADE	/	Anti-lock brake control system (ABS)	M03	Read codes	
BALLADE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
BALLADE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
BALLADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
BALLADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
BALLADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
BALLADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
BALLADE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
BALLADE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
BALLADE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
BALLADE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
BALLADE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
BALLADE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
BALLADE	/	Anti-lock brake control system (ABS)	M19	Read codes	
BALLADE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
BALLADE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
BALLADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
BALLADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
BALLADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
BALLADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
BALLADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
BALLADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
BALLADE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
BALLADE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
BALLADE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
BALLADE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
BALLADE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
BALLADE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
BALLADE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
BALLADE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
BALLADE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
BALLADE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
BALLADE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
BALLADE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
BALLADE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
BALLADE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
BALLADE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
BALLADE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
BALLADE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
BALLADE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
BALLADE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
BALLADE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
BALLADE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
BALLADE	/	IMA	M63	Read ECU Information	
BALLADE	/	IMA	M63	Read codes	
BALLADE	/	IMA	M63	Erase Codes	
BALLADE	/	IMA	M63	Read Freeze Frame Data	
BALLADE	/	IMA	M63	Read Live Data	
BALLADE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
BALLADE	/	IMA	M63	Adjustment	SOC PRESET
BALLADE	/	IMA	M64	Read ECU Information	
BALLADE	/	IMA	M64	Read codes	
BALLADE	/	IMA	M64	Erase Codes	
BALLADE	/	IMA	M64	Read Freeze Frame Data	
BALLADE	/	IMA	M64	Read Live Data	
BALLADE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
BALLADE	/	IMA	M64	Adjustment	SOC PRESET
BALLADE	/	IMA	M65	Read ECU Information	
BALLADE	/	IMA	M65	Read codes	
BALLADE	/	IMA	M65	Erase Codes	
BALLADE	/	IMA	M65	Read Freeze Frame Data	
BALLADE	/	IMA	M65	Read Live Data	
BALLADE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
BALLADE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
BALLADE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
BALLADE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	

BALLADE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
BALLADE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
BALLADE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
BALLADE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
BALLADE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
BALLADE	/	Night Vision System (INVS)	0XB1	Read codes	
BALLADE	/	Night Vision System (INVS)	0XB1	Erase Codes	
BALLADE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
BALLADE	/	Night Vision System (INVS)	0XB1	Read Live Data	
BALLADE	/	Night Vision System (INVS)	0XB1	Adjustment	
BALLADE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
BALLADE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
BALLADE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
BALLADE	/	i-SHIFT	0XB0	Read ECU Information	
BALLADE	/	i-SHIFT	0XB0	Read codes	
BALLADE	/	i-SHIFT	0XB0	Erase Codes	
BALLADE	/	i-SHIFT	0XB0	Read Live Data	
BALLADE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
BALLADE	/	Keyless Entry Control System (KAS)	M99	Read codes	
BALLADE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
BALLADE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
BALLADE	/	Keyless Entry Control System (KAS)	M99	Self Check	
BALLADE	/	Keyless Entry Control System (KAS)	M99	History Data	
BALLADE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
BALLADE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
BALLADE	/	Keyless Entry Control System (KAS)	M99	Registration	
BALLADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
BALLADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
BALLADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
BALLADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
BALLADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
BALLADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
BALLADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
BALLADE	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
BALLADE	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
BALLADE	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
BALLADE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
BALLADE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
BALLADE	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
BALLADE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
BALLADE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
BALLADE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
BALLADE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
BALLADE	/	Management ECU Module (ME)	M74	Read ECU Information	

BALLADE	/	Management ECU Module (ME)	M74	Read codes	
BALLADE	/	Management ECU Module (ME)	M74	Erase Codes	
BALLADE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
BALLADE	/	Management ECU Module (ME)	M74	Read Live Data	
BALLADE	/	Multi-view camera and parking assist system (MVC/P, M26		Read ECU Information	
BALLADE	/	Multi-view camera and parking assist system (MVC/P, M26		Read codes	
BALLADE	/	Multi-view camera and parking assist system (MVC/P, M26		Erase Codes	
BALLADE	/	Multi-view camera and parking assist system (MVC/P, M26		Read Live Data	
BALLADE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
BALLADE	/	Multi-view camera system (MVCS)	M7A	Read codes	
BALLADE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
BALLADE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
BALLADE	/	Multi-view camera system (MVCS)	M7A	Customization	
BALLADE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
BALLADE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
BALLADE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
BALLADE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
BALLADE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
BALLADE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
BALLADE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
BALLADE	/	Power Control Unit (PCU)	M83	Read ECU Information	
BALLADE	/	Power Control Unit (PCU)	M83	Read codes	
BALLADE	/	Power Control Unit (PCU)	M83	Erase Codes	
BALLADE	/	Power Control Unit (PCU)	M83	Read Live Data	
BALLADE	/	Power Control Unit (PCU)	M83	Self Check	
BALLADE	/	Power Control Unit (PCU)	M83	History Data	
BALLADE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
BALLADE	/	Engine Control System (PGM-FI)	M23	Read codes	
BALLADE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
BALLADE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
BALLADE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
BALLADE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
BALLADE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
BALLADE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
BALLADE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
BALLADE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
BALLADE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
BALLADE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
BALLADE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
BALLADE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
BALLADE	/	Engine Control System (PGM-FI)	M50	Read codes	
BALLADE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
BALLADE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
BALLADE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
BALLADE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
BALLADE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
BALLADE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
BALLADE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
BALLADE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
BALLADE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
BALLADE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
BALLADE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
BALLADE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
BALLADE	/	Engine Control System (PGM-FI)	M86	Read codes	
BALLADE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
BALLADE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
BALLADE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
BALLADE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
BALLADE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY

BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
BALLADE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
BALLADE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
BALLADE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
BALLADE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
BALLADE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
BALLADE	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
BALLADE	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
BALLADE	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
BALLADE	/	PSR	M27	Read ECU Information	
BALLADE	/	PSR	M27	Read codes	
BALLADE	/	PSR	M27	Erase Codes	
BALLADE	/	PSR	M27	Read Live Data	
BALLADE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
BALLADE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
BALLADE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
BALLADE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
BALLADE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
BALLADE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
BALLADE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
BALLADE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
BALLADE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
BALLADE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
BALLADE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
BALLADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
BALLADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
BALLADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
BALLADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
BALLADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
BALLADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
BALLADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
BALLADE	/	Remote starter (RS)	M90	System Check	
BALLADE	/	Remote starter (RS)	M90	HISTORY	
BALLADE	/	Remote starter (RS)	M90	Registration	
BALLADE	/	Seat load cell (SWS)	M6F	Read ECU Information	
BALLADE	/	Seat load cell (SWS)	M6F	Read codes	
BALLADE	/	Seat load cell (SWS)	M6F	Erase Codes	
BALLADE	/	Seat load cell (SWS)	M6F	Read Live Data	
BALLADE	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
BALLADE	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
BALLADE	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
BALLADE	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
BALLADE	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
BALLADE	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
BALLADE	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
BALLADE	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
BALLADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
BALLADE	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
BALLADE	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
BALLADE	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
BALLADE	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
BALLADE	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
BALLADE	/	Groove track drive unit (SLOT ECU)	M98	History Data	
BALLADE	/	Groove track drive unit (SLOT ECU)	M98	System Information	
BALLADE	/	Airbag Control System (SRS)	M9F	Read ECU Information	
BALLADE	/	Airbag Control System (SRS)	M9F	Read codes	
BALLADE	/	Airbag Control System (SRS)	M9F	Erase Codes	
BALLADE	/	Airbag Control System (SRS)	M9F	Read Live Data	
BALLADE	/	Airbag Control System (SRS)	MA0	Read ECU Information	
BALLADE	/	Airbag Control System (SRS)	MA0	Read codes	
BALLADE	/	Airbag Control System (SRS)	MA0	Erase Codes	
BALLADE	/	Airbag Control System (SRS)	MA0	Read Live Data	
BALLADE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
BALLADE	/	Airbag Control System (SRS)	MA1	Read codes	
BALLADE	/	Airbag Control System (SRS)	MA1	Erase Codes	
BALLADE	/	Airbag Control System (SRS)	MA1	Read Live Data	
BALLADE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
BALLADE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light

BALLADE	/	Airbag Control System (SRS)	M2A	Read codes	
BALLADE	/	Airbag Control System (SRS)	M2A	Erase Codes	
BALLADE	/	Airbag Control System (SRS)	M2A	Read Live Data	
BALLADE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
BALLADE	/	Airbag Control System (SRS)	M9C	Read codes	
BALLADE	/	Airbag Control System (SRS)	M9C	Erase Codes	
BALLADE	/	Airbag Control System (SRS)	M9C	Read Live Data	
BALLADE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
BALLADE	/	Airbag Control System (SRS)	M9D	Read codes	
BALLADE	/	Airbag Control System (SRS)	M9D	Erase Codes	
BALLADE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
BALLADE	/	Airbag Control System (SRS)	M9D	Read Live Data	
BALLADE	/	Airbag Control System (SRS)	M9D	Parameter Information	
BALLADE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
BALLADE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
BALLADE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
BALLADE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pre-tensioner For CMBS (CMS)
BALLADE	/	Airbag Control System (SRS)	M9D	Function Test	
BALLADE	/	Airbag Control System (SRS)	M9D	System Information	
BALLADE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
BALLADE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
BALLADE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
BALLADE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
BALLADE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
BALLADE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
BALLADE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
BALLADE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
BALLADE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
BALLADE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
BALLADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
BALLADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
BALLADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
BALLADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
BALLADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
BALLADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
BALLADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
BALLADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
BALLADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
BR-V	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
BR-V	/	Four-wheel steering control system (4WS)	M52	Read codes	
BR-V	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
BR-V	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
BR-V	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
BR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
BR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
BR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
BR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
BR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
BR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
BR-V	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
BR-V	/	Automatic shift control system (A/T)	M1E	Read codes	
BR-V	/	Automatic shift control system (A/T)	M1E	Erase Codes	
BR-V	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
BR-V	/	Automatic shift control system (A/T)	M1E	Read Live Data	
BR-V	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
BR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
BR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
BR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
BR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
BR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
BR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
BR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
BR-V	/	Automatic shift control system (A/T)	M3B	REPLACE PCM/TCM	
BR-V	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
BR-V	/	Automatic shift control system (A/T)	M3B	Read codes	
BR-V	/	Automatic shift control system (A/T)	M3B	Erase Codes	
BR-V	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
BR-V	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
BR-V	/	Automatic shift control system (A/T)	M3B	Read Live Data	
BR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
BR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
BR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
BR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
BR-V	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
BR-V	/	Automatic shift control system (A/T)	M3C	Read codes	
BR-V	/	Automatic shift control system (A/T)	M3C	Erase Codes	
BR-V	/	Automatic shift control system (A/T)	M81	Read ECU Information	
BR-V	/	Automatic shift control system (A/T)	M81	Read codes	
BR-V	/	Automatic shift control system (A/T)	M81	Erase Codes	
BR-V	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
BR-V	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	

BR-V	/	Automatic shift control system (A/T)	M81	Read Live Data	
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
BR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
BR-V	/	Automatic shift control system (A/T)	M82	Read ECU Information	
BR-V	/	Automatic shift control system (A/T)	M82	Read codes	
BR-V	/	Automatic shift control system (A/T)	M82	Erase Codes	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
BR-V	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
BR-V	/	Active Engine Control Support System (ACM)	M06	Read codes	
BR-V	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
BR-V	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
BR-V	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
BR-V	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
BR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
BR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
BR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
BR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
BR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
BR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
BR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
BR-V	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read ECU Information	
BR-V	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read codes	
BR-V	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Erase Codes	
BR-V	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Freeze Frame Data	
BR-V	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Live Data	
BR-V	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Function Test	Damper Force Operation Test
BR-V	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Adjustment	Damper Stroke Calibration
BR-V	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
BR-V	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
BR-V	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
BR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
BR-V	/	Transmission Control System (AT)	M18	Read ECU Information	
BR-V	/	Transmission Control System (AT)	M18	Read codes	
BR-V	/	Transmission Control System (AT)	M18	Erase Codes	
BR-V	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
BR-V	/	Transmission Control System (AT)	M18	Read Live Data	
BR-V	/	Transmission Control System (AT)	M18	Adjustment	
BR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
BR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
BR-V	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
BR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
BR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
BR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
BR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
BR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
BR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator



BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
BR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
BR-V	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
BR-V	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
BR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
BR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
BR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
BR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
BR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
BR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
BR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
BR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
BR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
BR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
BR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
BR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
BR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
BR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
BR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
BR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
BR-V	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
BR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
BR-V	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
BR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset

BR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
BR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
BR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
BR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
BR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
BR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
BR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
BR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
BR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
BR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
BR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
BR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
BR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
BR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
BR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
BR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
BR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
BR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
BR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Security	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
BR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
BR-V	/	BODY ELECTRICAL/Security	MFF	History Data	
BR-V	/	BODY ELECTRICAL/Security	MFF	History Clear	
BR-V	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
BR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
BR-V	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	

BR-V	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
BR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
BR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
BR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
BR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
BR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
BR-V	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
BR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
BR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
BR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
BR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
BR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
BR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
BR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
BR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
BR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
BR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
BR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
BR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
BR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
BR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
BR-V	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
BR-V	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
BR-V	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
BR-V	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
BR-V	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
BR-V	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
BR-V	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Read ECU Information	
BR-V	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Read codes	
BR-V	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Erase Codes	
BR-V	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Read Freeze Frame Data	
BR-V	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Read Live Data	
BR-V	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		CMBS (CMS) ACTIVATION HISTORY	
BR-V	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Miscellaneous Test	RADAR AIMING
BR-V	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Miscellaneous Test	CMBS Brake
BR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
BR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
BR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
BR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
BR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
BR-V	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
BR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
BR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
BR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
BR-V	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
BR-V	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
BR-V	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
BR-V	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
BR-V	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
BR-V	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
BR-V	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
BR-V	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
BR-V	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
BR-V	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		ECMPCM Reset	
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
BR-V	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
BR-V	/	DBW	M34	Read ECU Information	
BR-V	/	DBW	M34	Read codes	
BR-V	/	DBW	M34	Erase Codes	
BR-V	/	DBW	M34	Read Freeze Frame Data	
BR-V	/	DBW	M34	Read Live Data	

BR-V	/	DBW	M34	Inspection	Idle Speed Adjust
BR-V	/	DBW	M34	Inspection	Throttle Test
BR-V	/	DBW	M34	ECM Reset	
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
BR-V	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
BR-V	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
BR-V	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
BR-V	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
BR-V	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
BR-V	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
BR-V	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
BR-V	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
BR-V	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
BR-V	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
BR-V	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
BR-V	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
BR-V	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
BR-V	/	Capacitor Control System (EDLC)	M12	Read codes	
BR-V	/	Capacitor Control System (EDLC)	M12	Erase Codes	
BR-V	/	Capacitor Control System (EDLC)	M12	Read Live Data	
BR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
BR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
BR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
BR-V	/	Electronic Brake Control System (EPB)	M1F	Read codes	
BR-V	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
BR-V	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
BR-V	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
BR-V	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
BR-V	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
BR-V	/	Electronic Brake Control System (EPB)	M3E	Read codes	
BR-V	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
BR-V	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
BR-V	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
BR-V	/	Electric Powertrain / IMA	M66	Read ECU Information	
BR-V	/	Electric Powertrain / IMA	M66	Read codes	
BR-V	/	Electric Powertrain / IMA	M66	Erase Codes	
BR-V	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
BR-V	/	Electric Powertrain / IMA	M66	Read Live Data	
BR-V	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
BR-V	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
BR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
BR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
BR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
BR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
BR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
BR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
BR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
BR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
BR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
BR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
BR-V	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
BR-V	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
BR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	

BR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
BR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
BR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
BR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
BR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
BR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
BR-V	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
BR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
BR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
BR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
BR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
BR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
BR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
BR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
BR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
BR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
BR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
BR-V	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
BR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
BR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
BR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
BR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
BR-V	/	New energy battery (EV)	M44	Read ECU Information	
BR-V	/	New energy battery (EV)	M44	Read codes	
BR-V	/	New energy battery (EV)	M44	Erase Codes	
BR-V	/	New energy battery (EV)	M44	Read Freeze Frame Data	
BR-V	/	New energy battery (EV)	M44	Read Live Data	
BR-V	/	New energy battery (EV)	M44	Inspection	
BR-V	/	New energy battery (EV)	M44	Adjustment	
BR-V	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
BR-V	/	Electronic vacuum pump (EVPS)	M21	Read codes	
BR-V	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
BR-V	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
BR-V	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
BR-V	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
BR-V	/	Electronic vacuum pump (EVPS)	M22	Read codes	
BR-V	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
BR-V	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
BR-V	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
BR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
BR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
BR-V	/	FCW LDW	M4E	Read ECU Information	
BR-V	/	FCW LDW	M4E	Read codes	
BR-V	/	FCW LDW	M4E	Erase Codes	
BR-V	/	FCW LDW	M4E	Read Live Data	
BR-V	/	FCW LDW	M4E	Function Test	FCW Drive
BR-V	/	FCW LDW	M4E	Function Test	Left side lane departure warning
BR-V	/	FCW LDW	M4E	Function Test	Right side lane departure warning
BR-V	/	FCW LDW	M4E	Function Test	Indicator Drive
BR-V	/	FCW LDW	M4E	Adjustment	
BR-V	/	Instrument Display System (GAUGE)	M2C	Read codes	
BR-V	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
BR-V	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
BR-V	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
BR-V	/	Anti-lock brake control system (ABS)	M01	Read codes	
BR-V	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
BR-V	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
BR-V	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
BR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
BR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
BR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
BR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
BR-V	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
BR-V	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
BR-V	/	Anti-lock brake control system (ABS)	M02	Read codes	
BR-V	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
BR-V	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
BR-V	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
BR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
BR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
BR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
BR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
BR-V	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
BR-V	/	Anti-lock brake control system (ABS)	M03	Read codes	
BR-V	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
BR-V	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
BR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
BR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
BR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
BR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
BR-V	/	Anti-lock brake control system (ABS)	M03	Pulser Test	

BR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
BR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
BR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
BR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
BR-V	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
BR-V	/	Anti-lock brake control system (ABS)	M19	Read codes	
BR-V	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
BR-V	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
BR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
BR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
BR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
BR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
BR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
BR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
BR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
BR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
BR-V	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
BR-V	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
BR-V	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
BR-V	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
BR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
BR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
BR-V	/	Intelligent Parking Control System (SPS)	M9B	Customize	
BR-V	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
BR-V	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
BR-V	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
BR-V	/	Hydraulic booster control system (HBS)	M5F	Read codes	
BR-V	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
BR-V	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
BR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
BR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
BR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
BR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
BR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
BR-V	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
BR-V	/	IMA	M63	Read ECU Information	
BR-V	/	IMA	M63	Read codes	
BR-V	/	IMA	M63	Erase Codes	
BR-V	/	IMA	M63	Read Freeze Frame Data	
BR-V	/	IMA	M63	Read Live Data	
BR-V	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
BR-V	/	IMA	M63	Adjustment	SOC PRESET
BR-V	/	IMA	M64	Read ECU Information	
BR-V	/	IMA	M64	Read codes	
BR-V	/	IMA	M64	Erase Codes	
BR-V	/	IMA	M64	Read Freeze Frame Data	
BR-V	/	IMA	M64	Read Live Data	
BR-V	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
BR-V	/	IMA	M64	Adjustment	SOC PRESET
BR-V	/	IMA	M65	Read ECU Information	
BR-V	/	IMA	M65	Read codes	
BR-V	/	IMA	M65	Erase Codes	
BR-V	/	IMA	M65	Read Freeze Frame Data	
BR-V	/	IMA	M65	Read Live Data	
BR-V	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
BR-V	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
BR-V	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
BR-V	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
BR-V	/	Intake Sounder Control System (ISC)	M6D	Read codes	
BR-V	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
BR-V	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
BR-V	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
BR-V	/	Night Vision System (INVS)	0XB1	Read ECU Information	
BR-V	/	Night Vision System (INVS)	0XB1	Read codes	
BR-V	/	Night Vision System (INVS)	0XB1	Erase Codes	
BR-V	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
BR-V	/	Night Vision System (INVS)	0XB1	Read Live Data	
BR-V	/	Night Vision System (INVS)	0XB1	Adjustment	
BR-V	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
BR-V	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
BR-V	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
BR-V	/	i-SHIFT	0XB0	Read ECU Information	
BR-V	/	i-SHIFT	0XB0	Read codes	
BR-V	/	i-SHIFT	0XB0	Erase Codes	
BR-V	/	i-SHIFT	0XB0	Read Live Data	
BR-V	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
BR-V	/	Keyless Entry Control System (KAS)	M99	Read codes	
BR-V	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
BR-V	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
BR-V	/	Keyless Entry Control System (KAS)	M99	Self Check	
BR-V	/	Keyless Entry Control System (KAS)	M99	History Data	
BR-V	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCONT Driving

BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IM OCD Terminal) Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
BR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
BR-V	/	Keyless Entry Control System (KAS)	M99	Registration	
BR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
BR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
BR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
BR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
BR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
BR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
BR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
BR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
BR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
BR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
BR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
BR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
BR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
BR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
BR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
BR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
BR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
BR-V	/	Management ECU Module (ME)	M74	Read ECU Information	
BR-V	/	Management ECU Module (ME)	M74	Read codes	
BR-V	/	Management ECU Module (ME)	M74	Erase Codes	
BR-V	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
BR-V	/	Management ECU Module (ME)	M74	Read Live Data	
BR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
BR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
BR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
BR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
BR-V	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
BR-V	/	Multi-view camera system (MVCS)	M7A	Read codes	
BR-V	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
BR-V	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
BR-V	/	Multi-view camera system (MVCS)	M7A	Customization	
BR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
BR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
BR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
BR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
BR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
BR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
BR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
BR-V	/	Power Control Unit (PCU)	M83	Read ECU Information	
BR-V	/	Power Control Unit (PCU)	M83	Read codes	
BR-V	/	Power Control Unit (PCU)	M83	Erase Codes	
BR-V	/	Power Control Unit (PCU)	M83	Read Live Data	
BR-V	/	Power Control Unit (PCU)	M83	Self Check	
BR-V	/	Power Control Unit (PCU)	M83	History Data	
BR-V	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
BR-V	/	Engine Control System (PGM-FI)	M23	Read codes	
BR-V	/	Engine Control System (PGM-FI)	M23	Erase Codes	
BR-V	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
BR-V	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
BR-V	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	

BR-V	/	Engine Control System (PGM-FI)	M23	Read Live Data	
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
BR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
BR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
BR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
BR-V	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
BR-V	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
BR-V	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
BR-V	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
BR-V	/	Engine Control System (PGM-FI)	M50	Read codes	
BR-V	/	Engine Control System (PGM-FI)	M50	Erase Codes	
BR-V	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
BR-V	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
BR-V	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
BR-V	/	Engine Control System (PGM-FI)	M50	Read Live Data	
BR-V	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
BR-V	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
BR-V	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
BR-V	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
BR-V	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
BR-V	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
BR-V	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
BR-V	/	Engine Control System (PGM-FI)	M86	Read codes	
BR-V	/	Engine Control System (PGM-FI)	M86	Erase Codes	
BR-V	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
BR-V	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
BR-V	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
BR-V	/	Engine Control System (PGM-FI)	M86	Read Live Data	
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
BR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
BR-V	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
BR-V	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
BR-V	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
BR-V	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
BR-V	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
BR-V	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
BR-V	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
BR-V	/	PSR	M27	Read ECU Information	
BR-V	/	PSR	M27	Read codes	
BR-V	/	PSR	M27	Erase Codes	
BR-V	/	PSR	M27	Read Live Data	
BR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
BR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
BR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
BR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
BR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
BR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
BR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
BR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
BR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
BR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
BR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
BR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
BR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
BR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
BR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
BR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
BR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm



BR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
BR-V	/	Remote starter (RS)	M90	System Check	
BR-V	/	Remote starter (RS)	M90	HISTORY	
BR-V	/	Remote starter (RS)	M90	Registration	
BR-V	/	Seat load cell (SWS)	M6F	Read ECU Information	
BR-V	/	Seat load cell (SWS)	M6F	Read codes	
BR-V	/	Seat load cell (SWS)	M6F	Erase Codes	
BR-V	/	Seat load cell (SWS)	M6F	Read Live Data	
BR-V	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
BR-V	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
BR-V	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
BR-V	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
BR-V	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
BR-V	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
BR-V	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
BR-V	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function T Shift Solenoid Test	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function T Acceleration Device Test	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function T Direct electromagnetic clutch Test	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function T Clutch Coil Test	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
BR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
BR-V	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
BR-V	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
BR-V	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
BR-V	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
BR-V	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
BR-V	/	Groove track drive unit (SLOT ECU)	M98	History Data	
BR-V	/	Groove track drive unit (SLOT ECU)	M98	System Information	
BR-V	/	Airbag Control System (SRS)	M9F	Read ECU Information	
BR-V	/	Airbag Control System (SRS)	M9F	Read codes	
BR-V	/	Airbag Control System (SRS)	M9F	Erase Codes	
BR-V	/	Airbag Control System (SRS)	M9F	Read Live Data	
BR-V	/	Airbag Control System (SRS)	MA0	Read ECU Information	
BR-V	/	Airbag Control System (SRS)	MA0	Read codes	
BR-V	/	Airbag Control System (SRS)	MA0	Erase Codes	
BR-V	/	Airbag Control System (SRS)	MA0	Read Live Data	
BR-V	/	Airbag Control System (SRS)	MA1	Read ECU Information	
BR-V	/	Airbag Control System (SRS)	MA1	Read codes	
BR-V	/	Airbag Control System (SRS)	MA1	Erase Codes	
BR-V	/	Airbag Control System (SRS)	MA1	Read Live Data	
BR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
BR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
BR-V	/	Airbag Control System (SRS)	M2A	Read codes	
BR-V	/	Airbag Control System (SRS)	M2A	Erase Codes	
BR-V	/	Airbag Control System (SRS)	M2A	Read Live Data	
BR-V	/	Airbag Control System (SRS)	M9C	Read ECU Information	
BR-V	/	Airbag Control System (SRS)	M9C	Read codes	
BR-V	/	Airbag Control System (SRS)	M9C	Erase Codes	
BR-V	/	Airbag Control System (SRS)	M9C	Read Live Data	
BR-V	/	Airbag Control System (SRS)	M9D	Read ECU Information	
BR-V	/	Airbag Control System (SRS)	M9D	Read codes	
BR-V	/	Airbag Control System (SRS)	M9D	Erase Codes	
BR-V	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
BR-V	/	Airbag Control System (SRS)	M9D	Read Live Data	
BR-V	/	Airbag Control System (SRS)	M9D	Parameter Information	
BR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
BR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
BR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
BR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
BR-V	/	Airbag Control System (SRS)	M9D	Function Test	
BR-V	/	Airbag Control System (SRS)	M9D	System Information	
BR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
BR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
BR-V	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
BR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
BR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
BR-V	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
BR-V	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
BR-V	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
BR-V	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
BR-V	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
BR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
BR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
BR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	

BR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
BR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
BR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
BR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
BR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
BR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
BR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
BR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
BR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
BR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
BR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
BR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
BR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
BR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
BR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
BR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
BR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
BR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
BRIO	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
BRIO	/	Four-wheel steering control system (4WS)	M52	Read codes	
BRIO	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
BRIO	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
BRIO	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
BRIO	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
BRIO	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
BRIO	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
BRIO	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
BRIO	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
BRIO	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
BRIO	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
BRIO	/	Automatic shift control system (A/T)	M1E	Read codes	
BRIO	/	Automatic shift control system (A/T)	M1E	Erase Codes	
BRIO	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
BRIO	/	Automatic shift control system (A/T)	M1E	Read Live Data	
BRIO	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
BRIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
BRIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
BRIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
BRIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
BRIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
BRIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
BRIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
BRIO	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
BRIO	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
BRIO	/	Automatic shift control system (A/T)	M3B	Read codes	
BRIO	/	Automatic shift control system (A/T)	M3B	Erase Codes	
BRIO	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
BRIO	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
BRIO	/	Automatic shift control system (A/T)	M3B	Read Live Data	
BRIO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
BRIO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
BRIO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
BRIO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
BRIO	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
BRIO	/	Automatic shift control system (A/T)	M3C	Read codes	
BRIO	/	Automatic shift control system (A/T)	M3C	Erase Codes	
BRIO	/	Automatic shift control system (A/T)	M81	Read ECU Information	
BRIO	/	Automatic shift control system (A/T)	M81	Read codes	
BRIO	/	Automatic shift control system (A/T)	M81	Erase Codes	
BRIO	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
BRIO	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
BRIO	/	Automatic shift control system (A/T)	M81	Read Live Data	
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
BRIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
BRIO	/	Automatic shift control system (A/T)	M82	Read ECU Information	
BRIO	/	Automatic shift control system (A/T)	M82	Read codes	
BRIO	/	Automatic shift control system (A/T)	M82	Erase Codes	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	

BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
BRIO	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
BRIO	/	Active Engine Control Support System (ACM) M06	Read codes	
BRIO	/	Active Engine Control Support System (ACM) M06	Erase Codes	
BRIO	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
BRIO	/	Active Engine Control Support System (ACM) M06	Read Live Data	
BRIO	/	Active Engine Control Support System (ACM) M06	ACM Reset	
BRIO	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
BRIO	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
BRIO	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
BRIO	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
BRIO	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
BRIO	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
BRIO	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
BRIO	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
BRIO	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
BRIO	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
BRIO	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
BRIO	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
BRIO	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
BRIO	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
BRIO	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
BRIO	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
BRIO	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
BRIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
BRIO	/	Transmission Control System (AT) M18	Read ECU Information	
BRIO	/	Transmission Control System (AT) M18	Read codes	
BRIO	/	Transmission Control System (AT) M18	Erase Codes	
BRIO	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
BRIO	/	Transmission Control System (AT) M18	Read Live Data	
BRIO	/	Transmission Control System (AT) M18	Adjustment	
BRIO	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
BRIO	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
BRIO	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
BRIO	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
BRIO	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
BRIO	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
BRIO	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
BRIO	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
BRIO	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
BRIO	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
BRIO	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
BRIO	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
BRIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
BRIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
BRIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
BRIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
BRIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
BRIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
BRIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
BRIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
BRIO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	

BRIO	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
BRIO	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
BRIO	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
BRIO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
BRIO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
BRIO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
BRIO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
BRIO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
BRIO	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
BRIO	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
BRIO	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
BRIO	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
BRIO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
BRIO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
BRIO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
BRIO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
BRIO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light

BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
BRIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
BRIO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
BRIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
BRIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
BRIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
BRIO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
BRIO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
BRIO	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
BRIO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
BRIO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
BRIO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
BRIO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
BRIO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
BRIO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Security	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
BRIO	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
BRIO	/	BODY ELECTRICAL/Security	MFF	History Data	
BRIO	/	BODY ELECTRICAL/Security	MFF	History Clear	
BRIO	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
BRIO	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
BRIO	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
BRIO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
BRIO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
BRIO	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
BRIO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
BRIO	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
BRIO	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
BRIO	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
BRIO	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
BRIO	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
BRIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
BRIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
BRIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
BRIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
BRIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
BRIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
BRIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
BRIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
BRIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
BRIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
BRIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
BRIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
BRIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid

BRIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
BRIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
BRIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
BRIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
BRIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
BRIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
BRIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
BRIO	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Neutral Rewrite	
BRIO	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
BRIO	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
BRIO	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
BRIO	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
BRIO	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
BRIO	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
BRIO	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
BRIO	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
BRIO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read ECU Information	
BRIO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read codes	
BRIO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Erase Codes	
BRIO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Freeze Frame Data	
BRIO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Live Data	
BRIO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	CMBS (CMS) ACTIVATION HISTORY	
BRIO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	RADAR AIMING
BRIO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	CMBS Brake
BRIO	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read ECU Information	
BRIO	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read codes	
BRIO	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Erase Codes	
BRIO	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Freeze Frame Data	
BRIO	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Live Data	
BRIO	/	Promise Automatic Transmission Control System (CVT M1B	M1B	ECMPCM Reset	
BRIO	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Lock Solenoid Test
BRIO	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Solenoid Tests
BRIO	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Electrical Oil Pump Activation
BRIO	/	Promise Automatic Transmission Control System (CVT M33	M33	Read ECU Information	
BRIO	/	Promise Automatic Transmission Control System (CVT M33	M33	Read codes	
BRIO	/	Promise Automatic Transmission Control System (CVT M33	M33	Erase Codes	
BRIO	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Freeze Frame Data	
BRIO	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Live Data	
BRIO	/	Promise Automatic Transmission Control System (CVT M33	M33	ECMPCM Reset	
BRIO	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Inhibitor Solenoid
BRIO	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid A (LF)
BRIO	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid B (RF)
BRIO	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Start Clutch Feedback Learn
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read ECU Information	
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read codes	
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Erase Codes	
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Freeze Frame Data	
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Live Data	
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	ECMPCM Reset	
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Inhibitor Solenoid
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid A (LF)
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid B (RF)
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Start Clutch Feedback Learn
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve A
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve B
BRIO	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve O/P
BRIO	/	DBW	M34	Read ECU Information	
BRIO	/	DBW	M34	Read codes	
BRIO	/	DBW	M34	Erase Codes	
BRIO	/	DBW	M34	Read Freeze Frame Data	
BRIO	/	DBW	M34	Read Live Data	
BRIO	/	DBW	M34	Inspection	Idle Speed Adjust
BRIO	/	DBW	M34	Inspection	Throttle Test
BRIO	/	DBW	M34	ECM Reset	
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
BRIO	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
BRIO	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
BRIO	/	Diesel Engine Control System (DIESEL)	M37	Read codes	

BRIO	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
BRIO	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
BRIO	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
BRIO	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
BRIO	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
BRIO	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
BRIO	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
BRIO	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset *Calculated PM Value'
BRIO	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
BRIO	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
BRIO	/	Capacitor Control System (EDLC)	M12	Read codes	
BRIO	/	Capacitor Control System (EDLC)	M12	Erase Codes	
BRIO	/	Capacitor Control System (EDLC)	M12	Read Live Data	
BRIO	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
BRIO	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
BRIO	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
BRIO	/	Electronic Brake Control System (EPB)	M1F	Read codes	
BRIO	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
BRIO	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
BRIO	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
BRIO	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
BRIO	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
BRIO	/	Electronic Brake Control System (EPB)	M3E	Read codes	
BRIO	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
BRIO	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
BRIO	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
BRIO	/	Electric Powertrain / IMA	M66	Read ECU Information	
BRIO	/	Electric Powertrain / IMA	M66	Read codes	
BRIO	/	Electric Powertrain / IMA	M66	Erase Codes	
BRIO	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
BRIO	/	Electric Powertrain / IMA	M66	Read Live Data	
BRIO	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
BRIO	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
BRIO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
BRIO	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
BRIO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
BRIO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
BRIO	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
BRIO	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
BRIO	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
BRIO	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
BRIO	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
BRIO	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
BRIO	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
BRIO	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
BRIO	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
BRIO	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
BRIO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
BRIO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
BRIO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
BRIO	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
BRIO	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
BRIO	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
BRIO	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
BRIO	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
BRIO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
BRIO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
BRIO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
BRIO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
BRIO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
BRIO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
BRIO	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
BRIO	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
BRIO	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
BRIO	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
BRIO	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
BRIO	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
BRIO	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
BRIO	/	New energy battery (EV)	M44	Read ECU Information	
BRIO	/	New energy battery (EV)	M44	Read codes	
BRIO	/	New energy battery (EV)	M44	Erase Codes	
BRIO	/	New energy battery (EV)	M44	Read Freeze Frame Data	
BRIO	/	New energy battery (EV)	M44	Read Live Data	
BRIO	/	New energy battery (EV)	M44	Inspection	
BRIO	/	New energy battery (EV)	M44	Adjustment	
BRIO	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
BRIO	/	Electronic vacuum pump (EVPS)	M21	Read codes	
BRIO	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	

BRIO	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
BRIO	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
BRIO	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
BRIO	/	Electronic vacuum pump (EVPS)	M22	Read codes	
BRIO	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
BRIO	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
BRIO	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
BRIO	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
BRIO	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
BRIO	/	FCW LDW	M4E	Read ECU Information	
BRIO	/	FCW LDW	M4E	Read codes	
BRIO	/	FCW LDW	M4E	Erase Codes	
BRIO	/	FCW LDW	M4E	Read Live Data	
BRIO	/	FCW LDW	M4E	Function Test	FCW Drive
BRIO	/	FCW LDW	M4E	Function Test	Left side lane departure warning
BRIO	/	FCW LDW	M4E	Function Test	Right side lane departure warning
BRIO	/	FCW LDW	M4E	Function Test	Indicator Drive
BRIO	/	FCW LDW	M4E	Adjustment	
BRIO	/	Instrument Display System (GAUGE)	M2C	Read codes	
BRIO	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
BRIO	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
BRIO	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
BRIO	/	Anti-lock brake control system (ABS)	M01	Read codes	
BRIO	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
BRIO	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
BRIO	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
BRIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
BRIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
BRIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
BRIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
BRIO	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
BRIO	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
BRIO	/	Anti-lock brake control system (ABS)	M02	Read codes	
BRIO	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
BRIO	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
BRIO	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
BRIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
BRIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
BRIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
BRIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
BRIO	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
BRIO	/	Anti-lock brake control system (ABS)	M03	Read codes	
BRIO	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
BRIO	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
BRIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
BRIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
BRIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
BRIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
BRIO	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
BRIO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
BRIO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
BRIO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
BRIO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
BRIO	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
BRIO	/	Anti-lock brake control system (ABS)	M19	Read codes	
BRIO	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
BRIO	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
BRIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
BRIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
BRIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
BRIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
BRIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
BRIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
BRIO	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
BRIO	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
BRIO	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
BRIO	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
BRIO	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
BRIO	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
BRIO	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
BRIO	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
BRIO	/	Intelligent Parking Control System (SPS)	M9B	Customize	
BRIO	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
BRIO	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
BRIO	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
BRIO	/	Hydraulic booster control system (HBS)	M5F	Read codes	
BRIO	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
BRIO	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	



BRIO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
BRIO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
BRIO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
BRIO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
BRIO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
BRIO	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
BRIO	/	IMA	M63	Read ECU Information	
BRIO	/	IMA	M63	Read codes	
BRIO	/	IMA	M63	Erase Codes	
BRIO	/	IMA	M63	Read Freeze Frame Data	
BRIO	/	IMA	M63	Read Live Data	
BRIO	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
BRIO	/	IMA	M63	Adjustment	SOC PRESET
BRIO	/	IMA	M64	Read ECU Information	
BRIO	/	IMA	M64	Read codes	
BRIO	/	IMA	M64	Erase Codes	
BRIO	/	IMA	M64	Read Freeze Frame Data	
BRIO	/	IMA	M64	Read Live Data	
BRIO	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
BRIO	/	IMA	M64	Adjustment	SOC PRESET
BRIO	/	IMA	M65	Read ECU Information	
BRIO	/	IMA	M65	Read codes	
BRIO	/	IMA	M65	Erase Codes	
BRIO	/	IMA	M65	Read Freeze Frame Data	
BRIO	/	IMA	M65	Read Live Data	
BRIO	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
BRIO	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
BRIO	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
BRIO	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
BRIO	/	Intake Sounder Control System (ISC)	M6D	Read codes	
BRIO	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
BRIO	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
BRIO	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
BRIO	/	Night Vision System (INVS)	0XB1	Read ECU Information	
BRIO	/	Night Vision System (INVS)	0XB1	Read codes	
BRIO	/	Night Vision System (INVS)	0XB1	Erase Codes	
BRIO	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
BRIO	/	Night Vision System (INVS)	0XB1	Read Live Data	
BRIO	/	Night Vision System (INVS)	0XB1	Adjustment	
BRIO	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
BRIO	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
BRIO	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
BRIO	/	i-SHIFT	0XB0	Read ECU Information	
BRIO	/	i-SHIFT	0XB0	Read codes	
BRIO	/	i-SHIFT	0XB0	Erase Codes	
BRIO	/	i-SHIFT	0XB0	Read Live Data	
BRIO	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
BRIO	/	Keyless Entry Control System (KAS)	M99	Read codes	
BRIO	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
BRIO	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
BRIO	/	Keyless Entry Control System (KAS)	M99	Self Check	
BRIO	/	Keyless Entry Control System (KAS)	M99	History Data	
BRIO	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMODC Terminal) Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output

BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
BRIO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
BRIO	/	Keyless Entry Control System (KAS)	M99	Registration	
BRIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
BRIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
BRIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
BRIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
BRIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
BRIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
BRIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
BRIO	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
BRIO	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
BRIO	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
BRIO	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
BRIO	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
BRIO	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
BRIO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
BRIO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
BRIO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
BRIO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
BRIO	/	Management ECU Module (ME)	M74	Read ECU Information	
BRIO	/	Management ECU Module (ME)	M74	Read codes	
BRIO	/	Management ECU Module (ME)	M74	Erase Codes	
BRIO	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
BRIO	/	Management ECU Module (ME)	M74	Read Live Data	
BRIO	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
BRIO	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
BRIO	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
BRIO	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
BRIO	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
BRIO	/	Multi-view camera system (MVCS)	M7A	Read codes	
BRIO	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
BRIO	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
BRIO	/	Multi-view camera system (MVCS)	M7A	Customization	
BRIO	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
BRIO	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
BRIO	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
BRIO	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
BRIO	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
BRIO	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
BRIO	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
BRIO	/	Power Control Unit (PCU)	M83	Read ECU Information	
BRIO	/	Power Control Unit (PCU)	M83	Read codes	
BRIO	/	Power Control Unit (PCU)	M83	Erase Codes	
BRIO	/	Power Control Unit (PCU)	M83	Read Live Data	
BRIO	/	Power Control Unit (PCU)	M83	Self Check	
BRIO	/	Power Control Unit (PCU)	M83	History Data	
BRIO	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
BRIO	/	Engine Control System (PGM-FI)	M23	Read codes	
BRIO	/	Engine Control System (PGM-FI)	M23	Erase Codes	
BRIO	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
BRIO	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
BRIO	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
BRIO	/	Engine Control System (PGM-FI)	M23	Read Live Data	
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
BRIO	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
BRIO	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
BRIO	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
BRIO	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
BRIO	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
BRIO	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
BRIO	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
BRIO	/	Engine Control System (PGM-FI)	M50	Read codes	
BRIO	/	Engine Control System (PGM-FI)	M50	Erase Codes	
BRIO	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
BRIO	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
BRIO	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
BRIO	/	Engine Control System (PGM-FI)	M50	Read Live Data	
BRIO	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST

BRIO	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
BRIO	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
BRIO	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
BRIO	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
BRIO	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
BRIO	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
BRIO	/	Engine Control System (PGM-FI)	M86	Read codes	
BRIO	/	Engine Control System (PGM-FI)	M86	Erase Codes	
BRIO	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
BRIO	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
BRIO	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
BRIO	/	Engine Control System (PGM-FI)	M86	Read Live Data	
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
BRIO	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
BRIO	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
BRIO	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
BRIO	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
BRIO	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
BRIO	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
BRIO	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
BRIO	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
BRIO	/	PSR	M27	Read ECU Information	
BRIO	/	PSR	M27	Read codes	
BRIO	/	PSR	M27	Erase Codes	
BRIO	/	PSR	M27	Read Live Data	
BRIO	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
BRIO	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
BRIO	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
BRIO	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
BRIO	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
BRIO	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
BRIO	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
BRIO	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
BRIO	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
BRIO	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
BRIO	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
BRIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
BRIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
BRIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
BRIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
BRIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
BRIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
BRIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
BRIO	/	Remote starter (RS)	M90	System Check	
BRIO	/	Remote starter (RS)	M90	HISTORY	
BRIO	/	Remote starter (RS)	M90	Registration	
BRIO	/	Seat load cell (SWS)	M6F	Read ECU Information	
BRIO	/	Seat load cell (SWS)	M6F	Read codes	
BRIO	/	Seat load cell (SWS)	M6F	Erase Codes	
BRIO	/	Seat load cell (SWS)	M6F	Read Live Data	
BRIO	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
BRIO	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
BRIO	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
BRIO	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
BRIO	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
BRIO	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
BRIO	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
BRIO	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	

BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
BRIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
BRIO	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
BRIO	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
BRIO	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
BRIO	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
BRIO	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
BRIO	/	Groove track drive unit (SLOT ECU)	M98	History Data	
BRIO	/	Groove track drive unit (SLOT ECU)	M98	System Information	
BRIO	/	Airbag Control System (SRS)	M9F	Read ECU Information	
BRIO	/	Airbag Control System (SRS)	M9F	Read codes	
BRIO	/	Airbag Control System (SRS)	M9F	Erase Codes	
BRIO	/	Airbag Control System (SRS)	M9F	Read Live Data	
BRIO	/	Airbag Control System (SRS)	MA0	Read ECU Information	
BRIO	/	Airbag Control System (SRS)	MA0	Read codes	
BRIO	/	Airbag Control System (SRS)	MA0	Erase Codes	
BRIO	/	Airbag Control System (SRS)	MA0	Read Live Data	
BRIO	/	Airbag Control System (SRS)	MA1	Read ECU Information	
BRIO	/	Airbag Control System (SRS)	MA1	Read codes	
BRIO	/	Airbag Control System (SRS)	MA1	Erase Codes	
BRIO	/	Airbag Control System (SRS)	MA1	Read Live Data	
BRIO	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
BRIO	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
BRIO	/	Airbag Control System (SRS)	M2A	Read codes	
BRIO	/	Airbag Control System (SRS)	M2A	Erase Codes	
BRIO	/	Airbag Control System (SRS)	M2A	Read Live Data	
BRIO	/	Airbag Control System (SRS)	M9C	Read ECU Information	
BRIO	/	Airbag Control System (SRS)	M9C	Read codes	
BRIO	/	Airbag Control System (SRS)	M9C	Erase Codes	
BRIO	/	Airbag Control System (SRS)	M9C	Read Live Data	
BRIO	/	Airbag Control System (SRS)	M9D	Read ECU Information	
BRIO	/	Airbag Control System (SRS)	M9D	Read codes	
BRIO	/	Airbag Control System (SRS)	M9D	Erase Codes	
BRIO	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
BRIO	/	Airbag Control System (SRS)	M9D	Read Live Data	
BRIO	/	Airbag Control System (SRS)	M9D	Parameter Information	
BRIO	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
BRIO	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
BRIO	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
BRIO	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pre-tensioner For CMBS (CMS)
BRIO	/	Airbag Control System (SRS)	M9D	Function Test	
BRIO	/	Airbag Control System (SRS)	M9D	System Information	
BRIO	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
BRIO	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
BRIO	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
BRIO	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
BRIO	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
BRIO	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
BRIO	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
BRIO	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
BRIO	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
BRIO	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
BRIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
BRIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
BRIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
BRIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
BRIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
BRIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
BRIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
BRIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
BRIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
BRIO AMAZE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
BRIO AMAZE	/	Four-wheel steering control system (4WS)	M52	Read codes	
BRIO AMAZE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
BRIO AMAZE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
BRIO AMAZE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
BRIO AMAZE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
BRIO AMAZE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
BRIO AMAZE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
BRIO AMAZE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
BRIO AMAZE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
BRIO AMAZE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	Read codes	
BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	Erase Codes	

BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	ECMPCMC Reset	
BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
BRIO AMAZE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
BRIO AMAZE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
BRIO AMAZE	/	Automatic shift control system (A/T)	M3B	Read codes	
BRIO AMAZE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
BRIO AMAZE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
BRIO AMAZE	/	Automatic shift control system (A/T)	M3B	ECMPCMC Reset	
BRIO AMAZE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
BRIO AMAZE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
BRIO AMAZE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
BRIO AMAZE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
BRIO AMAZE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
BRIO AMAZE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
BRIO AMAZE	/	Automatic shift control system (A/T)	M3C	Read codes	
BRIO AMAZE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Read codes	
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Erase Codes	
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	ECMPCMC Reset	
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Read Live Data	
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
BRIO AMAZE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
BRIO AMAZE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
BRIO AMAZE	/	Automatic shift control system (A/T)	M82	Read codes	
BRIO AMAZE	/	Automatic shift control system (A/T)	M82	Erase Codes	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read codes	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Erase Codes	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Freeze Frame Data	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Live Data	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	Throttle Opening Angle Test
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 1
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 2
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	LIGHT CHECK
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BUZZER CHECK
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read ECU Information	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read codes	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Erase Codes	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Freeze Frame Data	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Live Data	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Adjustment	RADAR AIMING
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	BRAKE ACTUATOR 3
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ACC relay malfunction.
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INDICATOR LIGHT
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INFORMATION DISPLAY
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ALARM BUZZER
BRIO AMAZE	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
BRIO AMAZE	/	Active Engine Control Support System (ACM)	M06	Read codes	
BRIO AMAZE	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
BRIO AMAZE	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
BRIO AMAZE	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
BRIO AMAZE	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
BRIO AMAZE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
BRIO AMAZE	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
BRIO AMAZE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
BRIO AMAZE	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
BRIO AMAZE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
BRIO AMAZE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
BRIO AMAZE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
BRIO AMAZE	/	Active / Automatic Shock Absorber Control System (A	MOD	Read ECU Information	
BRIO AMAZE	/	Active / Automatic Shock Absorber Control System (A	MOD	Read codes	
BRIO AMAZE	/	Active / Automatic Shock Absorber Control System (A	MOD	Erase Codes	
BRIO AMAZE	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Freeze Frame Data	
BRIO AMAZE	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Live Data	
BRIO AMAZE	/	Active / Automatic Shock Absorber Control System (A	MOD	Function Test	Damper Force Operation Test
BRIO AMAZE	/	Active / Automatic Shock Absorber Control System (A	MOD	Adjustment	Damper Stroke Calibration
BRIO AMAZE	/	Active / Automatic Shock Absorber Control System (A	M1A	Read codes	
BRIO AMAZE	/	Active / Automatic Shock Absorber Control System (A	M1A	Erase Codes	
BRIO AMAZE	/	Active / Automatic Shock Absorber Control System (A	M1A	Read Live Data	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read codes	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Erase Codes	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Freeze Frame Data	

BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
BRIO AMAZE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
BRIO AMAZE	/	Transmission Control System (AT)	M18	Read ECU Information	
BRIO AMAZE	/	Transmission Control System (AT)	M18	Read codes	
BRIO AMAZE	/	Transmission Control System (AT)	M18	Erase Codes	
BRIO AMAZE	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
BRIO AMAZE	/	Transmission Control System (AT)	M18	Read Live Data	
BRIO AMAZE	/	Transmission Control System (AT)	M18	Adjustment	
BRIO AMAZE	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
BRIO AMAZE	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
BRIO AMAZE	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
BRIO AMAZE	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
BRIO AMAZE	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
BRIO AMAZE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
BRIO AMAZE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
BRIO AMAZE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
BRIO AMAZE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
BRIO AMAZE	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
BRIO AMAZE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
BRIO AMAZE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
BRIO AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
BRIO AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
BRIO AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
BRIO AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
BRIO AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
BRIO AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
BRIO AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
BRIO AMAZE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
BRIO AMAZE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
BRIO AMAZE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
BRIO AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
BRIO AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
BRIO AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
BRIO AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
BRIO AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
BRIO AMAZE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
BRIO AMAZE	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
BRIO AMAZE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
BRIO AMAZE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)

BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
BRIO AMAZE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
BRIO AMAZE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
BRIO AMAZE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
BRIO AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
BRIO AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
BRIO AMAZE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
BRIO AMAZE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
BRIO AMAZE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
BRIO AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
BRIO AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
BRIO AMAZE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
BRIO AMAZE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
BRIO AMAZE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
BRIO AMAZE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
BRIO AMAZE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
BRIO AMAZE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
BRIO AMAZE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
BRIO AMAZE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up

BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
BRIO AMAZE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
BRIO AMAZE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Security	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
BRIO AMAZE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
BRIO AMAZE	/	BODY ELECTRICAL/Security	MFF	History Data	
BRIO AMAZE	/	BODY ELECTRICAL/Security	MFF	History Clear	
BRIO AMAZE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
BRIO AMAZE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
BRIO AMAZE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
BRIO AMAZE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
BRIO AMAZE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
BRIO AMAZE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
BRIO AMAZE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
BRIO AMAZE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
BRIO AMAZE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
BRIO AMAZE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
BRIO AMAZE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
BRIO AMAZE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
BRIO AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
BRIO AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
BRIO AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
BRIO AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
BRIO AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
BRIO AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
BRIO AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
BRIO AMAZE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
BRIO AMAZE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
BRIO AMAZE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
BRIO AMAZE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
BRIO AMAZE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
BRIO AMAZE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
BRIO AMAZE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
BRIO AMAZE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
BRIO AMAZE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
BRIO AMAZE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
BRIO AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
BRIO AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
BRIO AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
BRIO AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
BRIO AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
BRIO AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
BRIO AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
BRIO AMAZE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests



BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Electrical Oil Pump Activation
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M33	Read ECU Information	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M33	Read codes	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M33	Erase Codes	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M33	Read Freeze Frame Data	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M33	Read Live Data	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M33	ECM/PCM Reset	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	Read codes	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	ECM/PCM Reset	
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
BRIO AMAZE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
BRIO AMAZE	/	DBW M34	Read ECU Information	
BRIO AMAZE	/	DBW M34	Read codes	
BRIO AMAZE	/	DBW M34	Erase Codes	
BRIO AMAZE	/	DBW M34	Read Freeze Frame Data	
BRIO AMAZE	/	DBW M34	Read Live Data	
BRIO AMAZE	/	DBW M34	Inspection	Idle Speed Adjust
BRIO AMAZE	/	DBW M34	Inspection	Throttle Test
BRIO AMAZE	/	DBW M34	ECM Reset	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M37	Read codes	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Read codes	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
BRIO AMAZE	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
BRIO AMAZE	/	Capacitor Control System (EDLC) M12	Read codes	
BRIO AMAZE	/	Capacitor Control System (EDLC) M12	Erase Codes	
BRIO AMAZE	/	Capacitor Control System (EDLC) M12	Read Live Data	
BRIO AMAZE	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge and Charge Test
BRIO AMAZE	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge for Removal or Disposal
BRIO AMAZE	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Usage History Clear
BRIO AMAZE	/	Electronic Brake Control System (EPB) M1F	Read codes	

BRIO AMAZE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
BRIO AMAZE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
BRIO AMAZE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
BRIO AMAZE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
BRIO AMAZE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
BRIO AMAZE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
BRIO AMAZE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
BRIO AMAZE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
BRIO AMAZE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
BRIO AMAZE	/	Electric Powertrain / IMA	M66	Read ECU Information	
BRIO AMAZE	/	Electric Powertrain / IMA	M66	Read codes	
BRIO AMAZE	/	Electric Powertrain / IMA	M66	Erase Codes	
BRIO AMAZE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
BRIO AMAZE	/	Electric Powertrain / IMA	M66	Read Live Data	
BRIO AMAZE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
BRIO AMAZE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
BRIO AMAZE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
BRIO AMAZE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
BRIO AMAZE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
BRIO AMAZE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
BRIO AMAZE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
BRIO AMAZE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
BRIO AMAZE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
BRIO AMAZE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
BRIO AMAZE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
BRIO AMAZE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
BRIO AMAZE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
BRIO AMAZE	/	New energy battery (EV)	M44	Read ECU Information	
BRIO AMAZE	/	New energy battery (EV)	M44	Read codes	
BRIO AMAZE	/	New energy battery (EV)	M44	Erase Codes	
BRIO AMAZE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
BRIO AMAZE	/	New energy battery (EV)	M44	Read Live Data	
BRIO AMAZE	/	New energy battery (EV)	M44	Inspection	
BRIO AMAZE	/	New energy battery (EV)	M44	Adjustment	
BRIO AMAZE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
BRIO AMAZE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
BRIO AMAZE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
BRIO AMAZE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
BRIO AMAZE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
BRIO AMAZE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
BRIO AMAZE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
BRIO AMAZE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
BRIO AMAZE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
BRIO AMAZE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
BRIO AMAZE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
BRIO AMAZE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
BRIO AMAZE	/	FCW LDW	M4E	Read ECU Information	
BRIO AMAZE	/	FCW LDW	M4E	Read codes	
BRIO AMAZE	/	FCW LDW	M4E	Erase Codes	
BRIO AMAZE	/	FCW LDW	M4E	Read Live Data	
BRIO AMAZE	/	FCW LDW	M4E	Function Test	FCW Drive
BRIO AMAZE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
BRIO AMAZE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
BRIO AMAZE	/	FCW LDW	M4E	Function Test	Indicator Drive
BRIO AMAZE	/	FCW LDW	M4E	Adjustment	
BRIO AMAZE	/	Instrument Display System (GAUGE)	M2C	Read codes	
BRIO AMAZE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
BRIO AMAZE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Read codes	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA

BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Read codes	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Read codes	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Read codes	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
BRIO AMAZE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
BRIO AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
BRIO AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
BRIO AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
BRIO AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
BRIO AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
BRIO AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
BRIO AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
BRIO AMAZE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
BRIO AMAZE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
BRIO AMAZE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
BRIO AMAZE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
BRIO AMAZE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
BRIO AMAZE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
BRIO AMAZE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
BRIO AMAZE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
BRIO AMAZE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
BRIO AMAZE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
BRIO AMAZE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
BRIO AMAZE	/	IMA	M63	Read ECU Information	
BRIO AMAZE	/	IMA	M63	Read codes	
BRIO AMAZE	/	IMA	M63	Erase Codes	
BRIO AMAZE	/	IMA	M63	Read Freeze Frame Data	
BRIO AMAZE	/	IMA	M63	Read Live Data	
BRIO AMAZE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
BRIO AMAZE	/	IMA	M63	Adjustment	SOC PRESET
BRIO AMAZE	/	IMA	M64	Read ECU Information	
BRIO AMAZE	/	IMA	M64	Read codes	
BRIO AMAZE	/	IMA	M64	Erase Codes	
BRIO AMAZE	/	IMA	M64	Read Freeze Frame Data	
BRIO AMAZE	/	IMA	M64	Read Live Data	
BRIO AMAZE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
BRIO AMAZE	/	IMA	M64	Adjustment	SOC PRESET
BRIO AMAZE	/	IMA	M65	Read ECU Information	
BRIO AMAZE	/	IMA	M65	Read codes	
BRIO AMAZE	/	IMA	M65	Erase Codes	
BRIO AMAZE	/	IMA	M65	Read Freeze Frame Data	
BRIO AMAZE	/	IMA	M65	Read Live Data	
BRIO AMAZE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
BRIO AMAZE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
BRIO AMAZE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
BRIO AMAZE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
BRIO AMAZE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
BRIO AMAZE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
BRIO AMAZE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	

BRIO AMAZE /	Intake Sounder Control System (ISC)	M6D	Read Live Data	
BRIO AMAZE /	Night Vision System (INVS)	0XB1	Read ECU Information	
BRIO AMAZE /	Night Vision System (INVS)	0XB1	Read codes	
BRIO AMAZE /	Night Vision System (INVS)	0XB1	Erase Codes	
BRIO AMAZE /	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
BRIO AMAZE /	Night Vision System (INVS)	0XB1	Read Live Data	
BRIO AMAZE /	Night Vision System (INVS)	0XB1	Adjustment	
BRIO AMAZE /	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
BRIO AMAZE /	Night Vision System (INVS)	0XB1	Function Test	Camera Test
BRIO AMAZE /	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
BRIO AMAZE /	i-SHIFT	0XB0	Read ECU Information	
BRIO AMAZE /	i-SHIFT	0XB0	Read codes	
BRIO AMAZE /	i-SHIFT	0XB0	Erase Codes	
BRIO AMAZE /	i-SHIFT	0XB0	Read Live Data	
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Read ECU Information	
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Read codes	
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Erase Codes	
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Read Live Data	
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Self Check	
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	History Data	
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
BRIO AMAZE /	Keyless Entry Control System (KAS)	M99	Registration	KEYLESS ACCESS Remote SLOT Antenna DC Output
BRIO AMAZE /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
BRIO AMAZE /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
BRIO AMAZE /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
BRIO AMAZE /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
BRIO AMAZE /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
BRIO AMAZE /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
BRIO AMAZE /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
BRIO AMAZE /	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
BRIO AMAZE /	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
BRIO AMAZE /	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
BRIO AMAZE /	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
BRIO AMAZE /	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
BRIO AMAZE /	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
BRIO AMAZE /	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
BRIO AMAZE /	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
BRIO AMAZE /	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
BRIO AMAZE /	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
BRIO AMAZE /	Management ECU Module (ME)	M74	Read ECU Information	
BRIO AMAZE /	Management ECU Module (ME)	M74	Read codes	
BRIO AMAZE /	Management ECU Module (ME)	M74	Erase Codes	
BRIO AMAZE /	Management ECU Module (ME)	M74	Read Freeze Frame Data	

BRIO AMAZE	/	Management ECU Module (ME)	M74	Read Live Data	
BRIO AMAZE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
BRIO AMAZE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
BRIO AMAZE	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
BRIO AMAZE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
BRIO AMAZE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
BRIO AMAZE	/	Multi-view camera system (MVCS)	M7A	Read codes	
BRIO AMAZE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
BRIO AMAZE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
BRIO AMAZE	/	Multi-view camera system (MVCS)	M7A	Customization	
BRIO AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
BRIO AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
BRIO AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
BRIO AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
BRIO AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
BRIO AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
BRIO AMAZE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
BRIO AMAZE	/	Power Control Unit (PCU)	M83	Read ECU Information	
BRIO AMAZE	/	Power Control Unit (PCU)	M83	Read codes	
BRIO AMAZE	/	Power Control Unit (PCU)	M83	Erase Codes	
BRIO AMAZE	/	Power Control Unit (PCU)	M83	Read Live Data	
BRIO AMAZE	/	Power Control Unit (PCU)	M83	Self Check	
BRIO AMAZE	/	Power Control Unit (PCU)	M83	History Data	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Read codes	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	Read codes	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Read codes	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
BRIO AMAZE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST

BRIO AMAZE /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
BRIO AMAZE /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
BRIO AMAZE /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
BRIO AMAZE /	Engine Control System (PGM-FI)	M86	VIN CHECK	
BRIO AMAZE /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
BRIO AMAZE /	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
BRIO AMAZE /	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
BRIO AMAZE /	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
BRIO AMAZE /	PSR	M27	Read ECU Information	
BRIO AMAZE /	PSR	M27	Read codes	
BRIO AMAZE /	PSR	M27	Erase Codes	
BRIO AMAZE /	PSR	M27	Read Live Data	
BRIO AMAZE /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
BRIO AMAZE /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
BRIO AMAZE /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
BRIO AMAZE /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
BRIO AMAZE /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
BRIO AMAZE /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
BRIO AMAZE /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
BRIO AMAZE /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
BRIO AMAZE /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
BRIO AMAZE /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
BRIO AMAZE /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
BRIO AMAZE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
BRIO AMAZE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
BRIO AMAZE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
BRIO AMAZE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
BRIO AMAZE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
BRIO AMAZE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
BRIO AMAZE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
BRIO AMAZE /	Remote starter (RS)	M90	System Check	
BRIO AMAZE /	Remote starter (RS)	M90	HISTORY	
BRIO AMAZE /	Remote starter (RS)	M90	Registration	
BRIO AMAZE /	Seat load cell (SWS)	M6F	Read ECU Information	
BRIO AMAZE /	Seat load cell (SWS)	M6F	Read codes	
BRIO AMAZE /	Seat load cell (SWS)	M6F	Erase Codes	
BRIO AMAZE /	Seat load cell (SWS)	M6F	Read Live Data	
BRIO AMAZE /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
BRIO AMAZE /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
BRIO AMAZE /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
BRIO AMAZE /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
BRIO AMAZE /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
BRIO AMAZE /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
BRIO AMAZE /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
BRIO AMAZE /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
BRIO AMAZE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
BRIO AMAZE /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
BRIO AMAZE /	Groove track drive unit (SLOT ECU)	M98	Read codes	
BRIO AMAZE /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
BRIO AMAZE /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
BRIO AMAZE /	Groove track drive unit (SLOT ECU)	M98	Self Check	
BRIO AMAZE /	Groove track drive unit (SLOT ECU)	M98	History Data	
BRIO AMAZE /	Groove track drive unit (SLOT ECU)	M98	System Information	
BRIO AMAZE /	Airbag Control System (SRS)	M9F	Read ECU Information	
BRIO AMAZE /	Airbag Control System (SRS)	M9F	Read codes	
BRIO AMAZE /	Airbag Control System (SRS)	M9F	Erase Codes	
BRIO AMAZE /	Airbag Control System (SRS)	M9F	Read Live Data	
BRIO AMAZE /	Airbag Control System (SRS)	MA0	Read ECU Information	
BRIO AMAZE /	Airbag Control System (SRS)	MA0	Read codes	
BRIO AMAZE /	Airbag Control System (SRS)	MA0	Erase Codes	
BRIO AMAZE /	Airbag Control System (SRS)	MA0	Read Live Data	
BRIO AMAZE /	Airbag Control System (SRS)	MA1	Read ECU Information	
BRIO AMAZE /	Airbag Control System (SRS)	MA1	Read codes	
BRIO AMAZE /	Airbag Control System (SRS)	MA1	Erase Codes	
BRIO AMAZE /	Airbag Control System (SRS)	MA1	Read Live Data	
BRIO AMAZE /	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
BRIO AMAZE /	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
BRIO AMAZE /	Airbag Control System (SRS)	M2A	Read codes	
BRIO AMAZE /	Airbag Control System (SRS)	M2A	Erase Codes	
BRIO AMAZE /	Airbag Control System (SRS)	M2A	Read Live Data	

BRIO AMAZE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
BRIO AMAZE	/	Airbag Control System (SRS)	M9C	Read codes	
BRIO AMAZE	/	Airbag Control System (SRS)	M9C	Erase Codes	
BRIO AMAZE	/	Airbag Control System (SRS)	M9C	Read Live Data	
BRIO AMAZE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
BRIO AMAZE	/	Airbag Control System (SRS)	M9D	Read codes	
BRIO AMAZE	/	Airbag Control System (SRS)	M9D	Erase Codes	
BRIO AMAZE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
BRIO AMAZE	/	Airbag Control System (SRS)	M9D	Read Live Data	
BRIO AMAZE	/	Airbag Control System (SRS)	M9D	Parameter Information	
BRIO AMAZE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
BRIO AMAZE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
BRIO AMAZE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
BRIO AMAZE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
BRIO AMAZE	/	Airbag Control System (SRS)	M9D	Function Test	
BRIO AMAZE	/	Airbag Control System (SRS)	M9D	System Information	
BRIO AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
BRIO AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
BRIO AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
BRIO AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
BRIO AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
BRIO AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
BRIO AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
BRIO AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
BRIO AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
BRIO AMAZE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
BRIO AMAZE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
BRIO AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
BRIO AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
BRIO AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
BRIO AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
BRIO AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
BRIO AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
BRIO AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
BRIO AMAZE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
BRIO DIESEL	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
BRIO DIESEL	/	Four-wheel steering control system (4WS)	M52	Read codes	
BRIO DIESEL	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
BRIO DIESEL	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
BRIO DIESEL	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
BRIO DIESEL	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
BRIO DIESEL	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
BRIO DIESEL	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
BRIO DIESEL	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
BRIO DIESEL	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
BRIO DIESEL	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	Read codes	
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	Erase Codes	
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	Read Live Data	
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
BRIO DIESEL	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
BRIO DIESEL	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
BRIO DIESEL	/	Automatic shift control system (A/T)	M3B	Read codes	
BRIO DIESEL	/	Automatic shift control system (A/T)	M3B	Erase Codes	
BRIO DIESEL	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
BRIO DIESEL	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
BRIO DIESEL	/	Automatic shift control system (A/T)	M3B	Read Live Data	
BRIO DIESEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
BRIO DIESEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
BRIO DIESEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
BRIO DIESEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
BRIO DIESEL	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
BRIO DIESEL	/	Automatic shift control system (A/T)	M3C	Read codes	
BRIO DIESEL	/	Automatic shift control system (A/T)	M3C	Erase Codes	
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Read ECU Information	
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Read codes	
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Erase Codes	
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Read Live Data	
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A

BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
BRIO DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
BRIO DIESEL	/	Automatic shift control system (A/T)	M82	Read ECU Information	
BRIO DIESEL	/	Automatic shift control system (A/T)	M82	Read codes	
BRIO DIESEL	/	Automatic shift control system (A/T)	M82	Erase Codes	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
BRIO DIESEL	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
BRIO DIESEL	/	Active Engine Control Support System (ACM)	M06	Read codes	
BRIO DIESEL	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
BRIO DIESEL	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
BRIO DIESEL	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
BRIO DIESEL	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
BRIO DIESEL	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
BRIO DIESEL	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
BRIO DIESEL	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
BRIO DIESEL	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
BRIO DIESEL	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
BRIO DIESEL	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
BRIO DIESEL	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
BRIO DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Read ECU Information	
BRIO DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Read codes	
BRIO DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Erase Codes	
BRIO DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Read Freeze Frame Data	
BRIO DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Read Live Data	
BRIO DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Function Test	Damper Force Operation Test
BRIO DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Adjustment	Damper Stroke Calibration
BRIO DIESEL	/	Active / Automatic Shock Absorber Control System (A M1A	M18	Read codes	
BRIO DIESEL	/	Active / Automatic Shock Absorber Control System (A M1A	M18	Erase Codes	
BRIO DIESEL	/	Active / Automatic Shock Absorber Control System (A M1A	M18	Read Live Data	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
BRIO DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
BRIO DIESEL	/	Transmission Control System (AT)	M18	Read ECU Information	
BRIO DIESEL	/	Transmission Control System (AT)	M18	Read codes	
BRIO DIESEL	/	Transmission Control System (AT)	M18	Erase Codes	
BRIO DIESEL	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
BRIO DIESEL	/	Transmission Control System (AT)	M18	Read Live Data	
BRIO DIESEL	/	Transmission Control System (AT)	M18	Adjustment	
BRIO DIESEL	/	Active Torque Converter Control System (ATTTS)	M0E	Read ECU Information	
BRIO DIESEL	/	Active Torque Converter Control System (ATTTS)	M0E	Read codes	
BRIO DIESEL	/	Active Torque Converter Control System (ATTTS)	M0E	Erase Codes	
BRIO DIESEL	/	Active Torque Converter Control System (ATTTS)	M0E	Read Freeze Frame Data	
BRIO DIESEL	/	Active Torque Converter Control System (ATTTS)	M0E	Read Live Data	
BRIO DIESEL	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
BRIO DIESEL	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	STEERING ANGLE
BRIO DIESEL	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
BRIO DIESEL	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ALL SENSORS
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON



BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
BRIO DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
BRIO DIESEL	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
BRIO DIESEL	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
BRIO DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
BRIO DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
BRIO DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
BRIO DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
BRIO DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
BRIO DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
BRIO DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
BRIO DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
BRIO DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
BRIO DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
BRIO DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
BRIO DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
BRIO DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
BRIO DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
BRIO DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
BRIO DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
BRIO DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
BRIO DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
BRIO DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
BRIO DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
BRIO DIESEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	

BRIO DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
BRIO DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
BRIO DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
BRIO DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
BRIO DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
BRIO DIESEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
BRIO DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
BRIO DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
BRIO DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
BRIO DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
BRIO DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
BRIO DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
BRIO DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
BRIO DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
BRIO DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
BRIO DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
BRIO DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
BRIO DIESEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Security	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
BRIO DIESEL	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
BRIO DIESEL	/	BODY ELECTRICAL/Security	MFF	History Data	
BRIO DIESEL	/	BODY ELECTRICAL/Security	MFF	History Clear	
BRIO DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
BRIO DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
BRIO DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
BRIO DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper

BRIO DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
BRIO DIESEL	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
BRIO DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
BRIO DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
BRIO DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
BRIO DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
BRIO DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
BRIO DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
BRIO DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
BRIO DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
BRIO DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
BRIO DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
BRIO DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
BRIO DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
BRIO DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
BRIO DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
BRIO DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
BRIO DIESEL	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
BRIO DIESEL	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
BRIO DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
BRIO DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
BRIO DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
BRIO DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
BRIO DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
BRIO DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
BRIO DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read ECU Information	
BRIO DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read codes	
BRIO DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Erase Codes	
BRIO DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read Freeze Frame Data	
BRIO DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read Live Data	
BRIO DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
BRIO DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Miscellaneous Test	RADAR AIMING
BRIO DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Miscellaneous Test	CMBS Brake
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		ECMPCM Reset	
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
BRIO DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
BRIO DIESEL	/	DBW	M34	Read ECU Information	
BRIO DIESEL	/	DBW	M34	Read codes	
BRIO DIESEL	/	DBW	M34	Erase Codes	
BRIO DIESEL	/	DBW	M34	Read Freeze Frame Data	
BRIO DIESEL	/	DBW	M34	Read Live Data	
BRIO DIESEL	/	DBW	M34	Inspection	Idle Speed Adjust
BRIO DIESEL	/	DBW	M34	Inspection	Throttle Test
BRIO DIESEL	/	DBW	M34	ECM Reset	

BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
BRIO DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
BRIO DIESEL	/	Capacitor Control System (EDLC)	M12	Read codes	
BRIO DIESEL	/	Capacitor Control System (EDLC)	M12	Erase Codes	
BRIO DIESEL	/	Capacitor Control System (EDLC)	M12	Read Live Data	
BRIO DIESEL	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
BRIO DIESEL	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
BRIO DIESEL	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
BRIO DIESEL	/	Electronic Brake Control System (EPB)	M1F	Read codes	
BRIO DIESEL	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
BRIO DIESEL	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
BRIO DIESEL	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
BRIO DIESEL	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
BRIO DIESEL	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
BRIO DIESEL	/	Electronic Brake Control System (EPB)	M3E	Read codes	
BRIO DIESEL	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
BRIO DIESEL	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
BRIO DIESEL	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
BRIO DIESEL	/	Electric Powertrain / IMA	M66	Read ECU Information	
BRIO DIESEL	/	Electric Powertrain / IMA	M66	Read codes	
BRIO DIESEL	/	Electric Powertrain / IMA	M66	Erase Codes	
BRIO DIESEL	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
BRIO DIESEL	/	Electric Powertrain / IMA	M66	Read Live Data	
BRIO DIESEL	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
BRIO DIESEL	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
BRIO DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
BRIO DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
BRIO DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
BRIO DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
BRIO DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
BRIO DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
BRIO DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
BRIO DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
BRIO DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
BRIO DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear

BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
BRIO DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
BRIO DIESEL	/	New energy battery (EV)	M44	Read ECU Information	
BRIO DIESEL	/	New energy battery (EV)	M44	Read codes	
BRIO DIESEL	/	New energy battery (EV)	M44	Erase Codes	
BRIO DIESEL	/	New energy battery (EV)	M44	Read Freeze Frame Data	
BRIO DIESEL	/	New energy battery (EV)	M44	Read Live Data	
BRIO DIESEL	/	New energy battery (EV)	M44	Inspection	
BRIO DIESEL	/	New energy battery (EV)	M44	Adjustment	
BRIO DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
BRIO DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read codes	
BRIO DIESEL	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
BRIO DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
BRIO DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
BRIO DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
BRIO DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read codes	
BRIO DIESEL	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
BRIO DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
BRIO DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
BRIO DIESEL	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
BRIO DIESEL	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
BRIO DIESEL	/	FCW LDW	M4E	Read ECU Information	
BRIO DIESEL	/	FCW LDW	M4E	Read codes	
BRIO DIESEL	/	FCW LDW	M4E	Erase Codes	
BRIO DIESEL	/	FCW LDW	M4E	Read Live Data	
BRIO DIESEL	/	FCW LDW	M4E	Function Test	FCW Drive
BRIO DIESEL	/	FCW LDW	M4E	Function Test	Left side lane departure warning
BRIO DIESEL	/	FCW LDW	M4E	Function Test	Right side lane departure warning
BRIO DIESEL	/	FCW LDW	M4E	Function Test	Indicator Drive
BRIO DIESEL	/	FCW LDW	M4E	Adjustment	
BRIO DIESEL	/	Instrument Display System (GAUGE)	M2C	Read codes	
BRIO DIESEL	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
BRIO DIESEL	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Read codes	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Read codes	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Read codes	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser

BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Read codes	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
BRIO DIESEL	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
BRIO DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
BRIO DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
BRIO DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
BRIO DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
BRIO DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
BRIO DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Customize	
BRIO DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
BRIO DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
BRIO DIESEL	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
BRIO DIESEL	/	Hydraulic booster control system (HBS)	M5F	Read codes	
BRIO DIESEL	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
BRIO DIESEL	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
BRIO DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
BRIO DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
BRIO DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
BRIO DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
BRIO DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
BRIO DIESEL	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
BRIO DIESEL	/	IMA	M63	Read ECU Information	
BRIO DIESEL	/	IMA	M63	Read codes	
BRIO DIESEL	/	IMA	M63	Erase Codes	
BRIO DIESEL	/	IMA	M63	Read Freeze Frame Data	
BRIO DIESEL	/	IMA	M63	Read Live Data	
BRIO DIESEL	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
BRIO DIESEL	/	IMA	M63	Adjustment	SOC PRESET
BRIO DIESEL	/	IMA	M64	Read ECU Information	
BRIO DIESEL	/	IMA	M64	Read codes	
BRIO DIESEL	/	IMA	M64	Erase Codes	
BRIO DIESEL	/	IMA	M64	Read Freeze Frame Data	
BRIO DIESEL	/	IMA	M64	Read Live Data	
BRIO DIESEL	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
BRIO DIESEL	/	IMA	M64	Adjustment	SOC PRESET
BRIO DIESEL	/	IMA	M65	Read ECU Information	
BRIO DIESEL	/	IMA	M65	Read codes	
BRIO DIESEL	/	IMA	M65	Erase Codes	
BRIO DIESEL	/	IMA	M65	Read Freeze Frame Data	
BRIO DIESEL	/	IMA	M65	Read Live Data	
BRIO DIESEL	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
BRIO DIESEL	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
BRIO DIESEL	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
BRIO DIESEL	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
BRIO DIESEL	/	Intake Sounder Control System (ISC)	M6D	Read codes	
BRIO DIESEL	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
BRIO DIESEL	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
BRIO DIESEL	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
BRIO DIESEL	/	Night Vision System (INVS)	0XB1	Read ECU Information	
BRIO DIESEL	/	Night Vision System (INVS)	0XB1	Read codes	
BRIO DIESEL	/	Night Vision System (INVS)	0XB1	Erase Codes	
BRIO DIESEL	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
BRIO DIESEL	/	Night Vision System (INVS)	0XB1	Read Live Data	
BRIO DIESEL	/	Night Vision System (INVS)	0XB1	Adjustment	
BRIO DIESEL	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
BRIO DIESEL	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
BRIO DIESEL	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
BRIO DIESEL	/	i-SHIFT	0XB0	Read ECU Information	
BRIO DIESEL	/	i-SHIFT	0XB0	Read codes	
BRIO DIESEL	/	i-SHIFT	0XB0	Erase Codes	
BRIO DIESEL	/	i-SHIFT	0XB0	Read Live Data	
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Read codes	
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Self Check	
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	History Data	
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving

BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
BRIO DIESEL	/	Keyless Entry Control System (KAS)	M99	Registration	
BRIO DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
BRIO DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
BRIO DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
BRIO DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
BRIO DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
BRIO DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
BRIO DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
BRIO DIESEL	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
BRIO DIESEL	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
BRIO DIESEL	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
BRIO DIESEL	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
BRIO DIESEL	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
BRIO DIESEL	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
BRIO DIESEL	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
BRIO DIESEL	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
BRIO DIESEL	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
BRIO DIESEL	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
BRIO DIESEL	/	Management ECU Module (ME)	M74	Read ECU Information	
BRIO DIESEL	/	Management ECU Module (ME)	M74	Read codes	
BRIO DIESEL	/	Management ECU Module (ME)	M74	Erase Codes	
BRIO DIESEL	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
BRIO DIESEL	/	Management ECU Module (ME)	M74	Read Live Data	
BRIO DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
BRIO DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
BRIO DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
BRIO DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
BRIO DIESEL	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
BRIO DIESEL	/	Multi-view camera system (MVCS)	M7A	Read codes	
BRIO DIESEL	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
BRIO DIESEL	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
BRIO DIESEL	/	Multi-view camera system (MVCS)	M7A	Customization	
BRIO DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
BRIO DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
BRIO DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
BRIO DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
BRIO DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
BRIO DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
BRIO DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
BRIO DIESEL	/	Power Control Unit (PCU)	M83	Read ECU Information	
BRIO DIESEL	/	Power Control Unit (PCU)	M83	Read codes	
BRIO DIESEL	/	Power Control Unit (PCU)	M83	Erase Codes	
BRIO DIESEL	/	Power Control Unit (PCU)	M83	Read Live Data	
BRIO DIESEL	/	Power Control Unit (PCU)	M83	Self Check	
BRIO DIESEL	/	Power Control Unit (PCU)	M83	History Data	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Read codes	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Erase Codes	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Read Live Data	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST

BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	Read codes	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	Erase Codes	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	Read Live Data	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Read codes	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Erase Codes	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Read Live Data	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
BRIO DIESEL	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
BRIO DIESEL	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
BRIO DIESEL	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
BRIO DIESEL	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
BRIO DIESEL	/	PSR	M27	Read ECU Information	
BRIO DIESEL	/	PSR	M27	Read codes	
BRIO DIESEL	/	PSR	M27	Erase Codes	
BRIO DIESEL	/	PSR	M27	Read Live Data	
BRIO DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
BRIO DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
BRIO DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
BRIO DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
BRIO DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
BRIO DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
BRIO DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
BRIO DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
BRIO DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
BRIO DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
BRIO DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
BRIO DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
BRIO DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
BRIO DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
BRIO DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
BRIO DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
BRIO DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
BRIO DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
BRIO DIESEL	/	Remote starter (RS)	M90	System Check	
BRIO DIESEL	/	Remote starter (RS)	M90	HISTORY	



BRIO DIESEL	/	Remote starter (RS)	M90	Registration	
BRIO DIESEL	/	Seat load cell (SWS)	M6F	Read ECU Information	
BRIO DIESEL	/	Seat load cell (SWS)	M6F	Read codes	
BRIO DIESEL	/	Seat load cell (SWS)	M6F	Erase Codes	
BRIO DIESEL	/	Seat load cell (SWS)	M6F	Read Live Data	
BRIO DIESEL	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
BRIO DIESEL	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
BRIO DIESEL	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
BRIO DIESEL	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
BRIO DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
BRIO DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
BRIO DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
BRIO DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
BRIO DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
BRIO DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
BRIO DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
BRIO DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
BRIO DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
BRIO DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
BRIO DIESEL	/	Groove track drive unit (SLOT ECU)	M98	History Data	
BRIO DIESEL	/	Groove track drive unit (SLOT ECU)	M98	System Information	
BRIO DIESEL	/	Airbag Control System (SRS)	M9F	Read ECU Information	
BRIO DIESEL	/	Airbag Control System (SRS)	M9F	Read codes	
BRIO DIESEL	/	Airbag Control System (SRS)	M9F	Erase Codes	
BRIO DIESEL	/	Airbag Control System (SRS)	M9F	Read Live Data	
BRIO DIESEL	/	Airbag Control System (SRS)	MA0	Read ECU Information	
BRIO DIESEL	/	Airbag Control System (SRS)	MA0	Read codes	
BRIO DIESEL	/	Airbag Control System (SRS)	MA0	Erase Codes	
BRIO DIESEL	/	Airbag Control System (SRS)	MA0	Read Live Data	
BRIO DIESEL	/	Airbag Control System (SRS)	MA1	Read ECU Information	
BRIO DIESEL	/	Airbag Control System (SRS)	MA1	Read codes	
BRIO DIESEL	/	Airbag Control System (SRS)	MA1	Erase Codes	
BRIO DIESEL	/	Airbag Control System (SRS)	MA1	Read Live Data	
BRIO DIESEL	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
BRIO DIESEL	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
BRIO DIESEL	/	Airbag Control System (SRS)	M2A	Read codes	
BRIO DIESEL	/	Airbag Control System (SRS)	M2A	Erase Codes	
BRIO DIESEL	/	Airbag Control System (SRS)	M2A	Read Live Data	
BRIO DIESEL	/	Airbag Control System (SRS)	M9C	Read ECU Information	
BRIO DIESEL	/	Airbag Control System (SRS)	M9C	Read codes	
BRIO DIESEL	/	Airbag Control System (SRS)	M9C	Erase Codes	
BRIO DIESEL	/	Airbag Control System (SRS)	M9C	Read Live Data	
BRIO DIESEL	/	Airbag Control System (SRS)	M9D	Read ECU Information	
BRIO DIESEL	/	Airbag Control System (SRS)	M9D	Read codes	
BRIO DIESEL	/	Airbag Control System (SRS)	M9D	Erase Codes	
BRIO DIESEL	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
BRIO DIESEL	/	Airbag Control System (SRS)	M9D	Read Live Data	
BRIO DIESEL	/	Airbag Control System (SRS)	M9D	Parameter Information	
BRIO DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
BRIO DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
BRIO DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
BRIO DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
BRIO DIESEL	/	Airbag Control System (SRS)	M9D	Function Test	
BRIO DIESEL	/	Airbag Control System (SRS)	M9D	System Information	
BRIO DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
BRIO DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
BRIO DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
BRIO DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
BRIO DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
BRIO DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
BRIO DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
BRIO DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
BRIO DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
BRIO DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	

BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
BRIO DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
BRIO DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
BRIO DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
BRIO DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
BRIO DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
BRIO DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
BRIO DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
BRIO DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
BRIO DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CAPA	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CAPA	/	Four-wheel steering control system (4WS)	M52	Read codes	
CAPA	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CAPA	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CAPA	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CAPA	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CAPA	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CAPA	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CAPA	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CAPA	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CAPA	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CAPA	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CAPA	/	Automatic shift control system (A/T)	M1E	Read codes	
CAPA	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CAPA	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CAPA	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CAPA	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CAPA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CAPA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CAPA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CAPA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CAPA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CAPA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CAPA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CAPA	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CAPA	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CAPA	/	Automatic shift control system (A/T)	M3B	Read codes	
CAPA	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CAPA	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CAPA	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CAPA	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CAPA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CAPA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CAPA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CAPA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CAPA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid D
CAPA	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CAPA	/	Automatic shift control system (A/T)	M3C	Read codes	
CAPA	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CAPA	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CAPA	/	Automatic shift control system (A/T)	M81	Read codes	
CAPA	/	Automatic shift control system (A/T)	M81	Erase Codes	
CAPA	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CAPA	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CAPA	/	Automatic shift control system (A/T)	M81	Read Live Data	
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CAPA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CAPA	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CAPA	/	Automatic shift control system (A/T)	M82	Read codes	
CAPA	/	Automatic shift control system (A/T)	M82	Erase Codes	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.

CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
CAPA	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
CAPA	/	Active Engine Control Support System (ACM) M06	Read codes	
CAPA	/	Active Engine Control Support System (ACM) M06	Erase Codes	
CAPA	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
CAPA	/	Active Engine Control Support System (ACM) M06	Read Live Data	
CAPA	/	Active Engine Control Support System (ACM) M06	ACM Reset	
CAPA	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
CAPA	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
CAPA	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CAPA	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
CAPA	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
CAPA	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
CAPA	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
CAPA	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
CAPA	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
CAPA	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
CAPA	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
CAPA	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
CAPA	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
CAPA	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
CAPA	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
CAPA	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
CAPA	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
CAPA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
CAPA	/	Transmission Control System (AT) M18	Read ECU Information	
CAPA	/	Transmission Control System (AT) M18	Read codes	
CAPA	/	Transmission Control System (AT) M18	Erase Codes	
CAPA	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
CAPA	/	Transmission Control System (AT) M18	Read Live Data	
CAPA	/	Transmission Control System (AT) M18	Adjustment	
CAPA	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
CAPA	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
CAPA	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
CAPA	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
CAPA	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
CAPA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CAPA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
CAPA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CAPA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
CAPA	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
CAPA	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
CAPA	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
CAPA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
CAPA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CAPA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CAPA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
CAPA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
CAPA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
CAPA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
CAPA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
CAPA	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor

CAPA	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CAPA	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CAPA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CAPA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CAPA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CAPA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CAPA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CAPA	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CAPA	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CAPA	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CAPA	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CAPA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CAPA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CAPA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CAPA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CAPA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CAPA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CAPA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	

CAPA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CAPA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CAPA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CAPA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CAPA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CAPA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CAPA	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CAPA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CAPA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CAPA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CAPA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CAPA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CAPA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Security	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CAPA	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CAPA	/	BODY ELECTRICAL/Security	MFF	History Data	
CAPA	/	BODY ELECTRICAL/Security	MFF	History Clear	
CAPA	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CAPA	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CAPA	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CAPA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CAPA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CAPA	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CAPA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CAPA	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CAPA	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CAPA	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CAPA	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CAPA	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CAPA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CAPA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CAPA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CAPA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CAPA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CAPA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CAPA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CAPA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid

CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CAPA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CAPA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CAPA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CAPA	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CAPA	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CAPA	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CAPA	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CAPA	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CAPA	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CAPA	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read ECU Information	
CAPA	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read codes	
CAPA	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Erase Codes	
CAPA	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Freeze Frame Data	
CAPA	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Live Data	
CAPA	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CAPA	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	RADAR AIMING
CAPA	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	CMBS Brake
CAPA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
CAPA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
CAPA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
CAPA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
CAPA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
CAPA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
CAPA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
CAPA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
CAPA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
CAPA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
CAPA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
CAPA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
CAPA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
CAPA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
CAPA	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
CAPA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
CAPA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
CAPA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
CAPA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
CAPA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
CAPA	/	DBW	M34	Read ECU Information	
CAPA	/	DBW	M34	Read codes	
CAPA	/	DBW	M34	Erase Codes	
CAPA	/	DBW	M34	Read Freeze Frame Data	
CAPA	/	DBW	M34	Read Live Data	
CAPA	/	DBW	M34	Inspection	Idle Speed Adjust
CAPA	/	DBW	M34	Inspection	Throttle Test
CAPA	/	DBW	M34	ECM Reset	
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CAPA	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CAPA	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CAPA	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CAPA	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CAPA	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CAPA	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	

CAPA	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CAPA	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CAPA	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CAPA	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CAPA	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CAPA	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CAPA	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CAPA	/	Capacitor Control System (EDLC)	M12	Read codes	
CAPA	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CAPA	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CAPA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CAPA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CAPA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CAPA	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CAPA	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CAPA	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CAPA	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CAPA	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CAPA	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CAPA	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CAPA	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CAPA	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CAPA	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CAPA	/	Electric Powertrain / IMA	M66	Read ECU Information	
CAPA	/	Electric Powertrain / IMA	M66	Read codes	
CAPA	/	Electric Powertrain / IMA	M66	Erase Codes	
CAPA	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CAPA	/	Electric Powertrain / IMA	M66	Read Live Data	
CAPA	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CAPA	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CAPA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CAPA	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CAPA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CAPA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CAPA	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CAPA	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CAPA	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CAPA	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CAPA	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CAPA	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CAPA	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CAPA	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CAPA	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CAPA	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CAPA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CAPA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CAPA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CAPA	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CAPA	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CAPA	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CAPA	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CAPA	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CAPA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CAPA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CAPA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CAPA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CAPA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CAPA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CAPA	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CAPA	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CAPA	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CAPA	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CAPA	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CAPA	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CAPA	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CAPA	/	New energy battery (EV)	M44	Read ECU Information	
CAPA	/	New energy battery (EV)	M44	Read codes	
CAPA	/	New energy battery (EV)	M44	Erase Codes	
CAPA	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CAPA	/	New energy battery (EV)	M44	Read Live Data	
CAPA	/	New energy battery (EV)	M44	Inspection	
CAPA	/	New energy battery (EV)	M44	Adjustment	
CAPA	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CAPA	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CAPA	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CAPA	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CAPA	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CAPA	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	

CAPA	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CAPA	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CAPA	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CAPA	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CAPA	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CAPA	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CAPA	/	FCW LDW	M4E	Read ECU Information	
CAPA	/	FCW LDW	M4E	Read codes	
CAPA	/	FCW LDW	M4E	Erase Codes	
CAPA	/	FCW LDW	M4E	Read Live Data	
CAPA	/	FCW LDW	M4E	Function Test	FCW Drive
CAPA	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CAPA	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CAPA	/	FCW LDW	M4E	Function Test	Indicator Drive
CAPA	/	FCW LDW	M4E	Adjustment	
CAPA	/	Instrument Display System (GAUGE)	M2C	Read codes	
CAPA	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CAPA	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CAPA	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CAPA	/	Anti-lock brake control system (ABS)	M01	Read codes	
CAPA	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CAPA	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CAPA	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CAPA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CAPA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CAPA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CAPA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CAPA	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CAPA	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CAPA	/	Anti-lock brake control system (ABS)	M02	Read codes	
CAPA	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CAPA	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CAPA	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CAPA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CAPA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CAPA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CAPA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CAPA	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CAPA	/	Anti-lock brake control system (ABS)	M03	Read codes	
CAPA	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CAPA	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CAPA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CAPA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CAPA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CAPA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CAPA	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CAPA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CAPA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CAPA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CAPA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CAPA	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CAPA	/	Anti-lock brake control system (ABS)	M19	Read codes	
CAPA	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CAPA	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CAPA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CAPA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CAPA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CAPA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CAPA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CAPA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CAPA	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CAPA	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CAPA	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CAPA	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CAPA	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CAPA	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CAPA	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CAPA	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CAPA	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CAPA	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CAPA	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CAPA	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CAPA	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CAPA	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CAPA	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CAPA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CAPA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CAPA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test



CAPA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CAPA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CAPA	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CAPA	/	IMA	M63	Read ECU Information	
CAPA	/	IMA	M63	Read codes	
CAPA	/	IMA	M63	Erase Codes	
CAPA	/	IMA	M63	Read Freeze Frame Data	
CAPA	/	IMA	M63	Read Live Data	
CAPA	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CAPA	/	IMA	M63	Adjustment	SOC PRESET
CAPA	/	IMA	M64	Read ECU Information	
CAPA	/	IMA	M64	Read codes	
CAPA	/	IMA	M64	Erase Codes	
CAPA	/	IMA	M64	Read Freeze Frame Data	
CAPA	/	IMA	M64	Read Live Data	
CAPA	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CAPA	/	IMA	M64	Adjustment	SOC PRESET
CAPA	/	IMA	M65	Read ECU Information	
CAPA	/	IMA	M65	Read codes	
CAPA	/	IMA	M65	Erase Codes	
CAPA	/	IMA	M65	Read Freeze Frame Data	
CAPA	/	IMA	M65	Read Live Data	
CAPA	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CAPA	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CAPA	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CAPA	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CAPA	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CAPA	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CAPA	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CAPA	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CAPA	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CAPA	/	Night Vision System (INVS)	0XB1	Read codes	
CAPA	/	Night Vision System (INVS)	0XB1	Erase Codes	
CAPA	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CAPA	/	Night Vision System (INVS)	0XB1	Read Live Data	
CAPA	/	Night Vision System (INVS)	0XB1	Adjustment	
CAPA	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CAPA	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CAPA	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CAPA	/	i-SHIFT	0XB0	Read ECU Information	
CAPA	/	i-SHIFT	0XB0	Read codes	
CAPA	/	i-SHIFT	0XB0	Erase Codes	
CAPA	/	i-SHIFT	0XB0	Read Live Data	
CAPA	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CAPA	/	Keyless Entry Control System (KAS)	M99	Read codes	
CAPA	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CAPA	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CAPA	/	Keyless Entry Control System (KAS)	M99	Self Check	
CAPA	/	Keyless Entry Control System (KAS)	M99	History Data	
CAPA	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)

CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CAPA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CAPA	/	Keyless Entry Control System (KAS)	M99	Registration	
CAPA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CAPA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CAPA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CAPA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CAPA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CAPA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CAPA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CAPA	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CAPA	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CAPA	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CAPA	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CAPA	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CAPA	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CAPA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CAPA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CAPA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CAPA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CAPA	/	Management ECU Module (ME)	M74	Read ECU Information	
CAPA	/	Management ECU Module (ME)	M74	Read codes	
CAPA	/	Management ECU Module (ME)	M74	Erase Codes	
CAPA	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CAPA	/	Management ECU Module (ME)	M74	Read Live Data	
CAPA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CAPA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CAPA	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CAPA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CAPA	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CAPA	/	Multi-view camera system (MVCS)	M7A	Read codes	
CAPA	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CAPA	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CAPA	/	Multi-view camera system (MVCS)	M7A	Customization	
CAPA	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CAPA	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CAPA	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CAPA	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CAPA	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CAPA	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CAPA	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CAPA	/	Power Control Unit (PCU)	M83	Read ECU Information	
CAPA	/	Power Control Unit (PCU)	M83	Read codes	
CAPA	/	Power Control Unit (PCU)	M83	Erase Codes	
CAPA	/	Power Control Unit (PCU)	M83	Read Live Data	
CAPA	/	Power Control Unit (PCU)	M83	Self Check	
CAPA	/	Power Control Unit (PCU)	M83	History Data	
CAPA	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CAPA	/	Engine Control System (PGM-FI)	M23	Read codes	
CAPA	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CAPA	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CAPA	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CAPA	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CAPA	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CAPA	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CAPA	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CAPA	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CAPA	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CAPA	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CAPA	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CAPA	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CAPA	/	Engine Control System (PGM-FI)	M50	Read codes	
CAPA	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CAPA	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CAPA	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CAPA	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CAPA	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CAPA	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CAPA	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CAPA	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC Low V/T CHECK
CAPA	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST

CAPA	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CAPA	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CAPA	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CAPA	/	Engine Control System (PGM-FI)	M86	Read codes	
CAPA	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CAPA	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CAPA	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CAPA	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CAPA	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CAPA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CAPA	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CAPA	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CAPA	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CAPA	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CAPA	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
CAPA	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
CAPA	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
CAPA	/	PSR	M27	Read ECU Information	
CAPA	/	PSR	M27	Read codes	
CAPA	/	PSR	M27	Erase Codes	
CAPA	/	PSR	M27	Read Live Data	
CAPA	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CAPA	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CAPA	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CAPA	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CAPA	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CAPA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CAPA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CAPA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CAPA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CAPA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CAPA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CAPA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CAPA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CAPA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CAPA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CAPA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CAPA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CAPA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CAPA	/	Remote starter (RS)	M90	System Check	
CAPA	/	Remote starter (RS)	M90	HISTORY	
CAPA	/	Remote starter (RS)	M90	Registration	
CAPA	/	Seat load cell (SWS)	M6F	Read ECU Information	
CAPA	/	Seat load cell (SWS)	M6F	Read codes	
CAPA	/	Seat load cell (SWS)	M6F	Erase Codes	
CAPA	/	Seat load cell (SWS)	M6F	Read Live Data	
CAPA	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CAPA	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CAPA	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CAPA	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
CAPA	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CAPA	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CAPA	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CAPA	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	

CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CAPA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CAPA	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CAPA	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CAPA	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CAPA	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CAPA	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CAPA	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CAPA	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CAPA	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CAPA	/	Airbag Control System (SRS)	M9F	Read codes	
CAPA	/	Airbag Control System (SRS)	M9F	Erase Codes	
CAPA	/	Airbag Control System (SRS)	M9F	Read Live Data	
CAPA	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CAPA	/	Airbag Control System (SRS)	MA0	Read codes	
CAPA	/	Airbag Control System (SRS)	MA0	Erase Codes	
CAPA	/	Airbag Control System (SRS)	MA0	Read Live Data	
CAPA	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CAPA	/	Airbag Control System (SRS)	MA1	Read codes	
CAPA	/	Airbag Control System (SRS)	MA1	Erase Codes	
CAPA	/	Airbag Control System (SRS)	MA1	Read Live Data	
CAPA	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CAPA	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CAPA	/	Airbag Control System (SRS)	M2A	Read codes	
CAPA	/	Airbag Control System (SRS)	M2A	Erase Codes	
CAPA	/	Airbag Control System (SRS)	M2A	Read Live Data	
CAPA	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CAPA	/	Airbag Control System (SRS)	M9C	Read codes	
CAPA	/	Airbag Control System (SRS)	M9C	Erase Codes	
CAPA	/	Airbag Control System (SRS)	M9C	Read Live Data	
CAPA	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CAPA	/	Airbag Control System (SRS)	M9D	Read codes	
CAPA	/	Airbag Control System (SRS)	M9D	Erase Codes	
CAPA	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CAPA	/	Airbag Control System (SRS)	M9D	Read Live Data	
CAPA	/	Airbag Control System (SRS)	M9D	Parameter Information	
CAPA	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CAPA	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CAPA	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CAPA	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CAPA	/	Airbag Control System (SRS)	M9D	Function Test	
CAPA	/	Airbag Control System (SRS)	M9D	System Information	
CAPA	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CAPA	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CAPA	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CAPA	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CAPA	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CAPA	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CAPA	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CAPA	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CAPA	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CAPA	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CAPA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CAPA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CAPA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CAPA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CAPA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CAPA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CAPA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CAPA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CAPA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CIIMO	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CIIMO	/	Four-wheel steering control system (4WS)	M52	Read codes	
CIIMO	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CIIMO	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CIIMO	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CIIMO	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CIIMO	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CIIMO	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CIIMO	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CIIMO	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CIIMO	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CIIMO	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CIIMO	/	Automatic shift control system (A/T)	M1E	Read codes	
CIIMO	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CIIMO	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CIIMO	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CIIMO	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	

CIIMO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CIIMO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CIIMO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIIMO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIIMO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIIMO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIIMO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CIIMO	/	Automatic shift control system (A/T)	M3B	REPLACE PCM/TCM	
CIIMO	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CIIMO	/	Automatic shift control system (A/T)	M3B	Read codes	
CIIMO	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CIIMO	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CIIMO	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CIIMO	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CIIMO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CIIMO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CIIMO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CIIMO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CIIMO	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CIIMO	/	Automatic shift control system (A/T)	M3C	Read codes	
CIIMO	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CIIMO	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CIIMO	/	Automatic shift control system (A/T)	M81	Read codes	
CIIMO	/	Automatic shift control system (A/T)	M81	Erase Codes	
CIIMO	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CIIMO	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CIIMO	/	Automatic shift control system (A/T)	M81	Read Live Data	
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIIMO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CIIMO	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CIIMO	/	Automatic shift control system (A/T)	M82	Read codes	
CIIMO	/	Automatic shift control system (A/T)	M82	Erase Codes	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
CIIMO	/	Active Engine Control Support System (ACM) M06	M06	Read ECU Information	
CIIMO	/	Active Engine Control Support System (ACM) M06	M06	Read codes	
CIIMO	/	Active Engine Control Support System (ACM) M06	M06	Erase Codes	
CIIMO	/	Active Engine Control Support System (ACM) M06	M06	Read Freeze Frame Data	
CIIMO	/	Active Engine Control Support System (ACM) M06	M06	Read Live Data	
CIIMO	/	Active Engine Control Support System (ACM) M06	M06	ACM Reset	
CIIMO	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Front ACM Solenoid ON/OFF
CIIMO	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Rear ACM Solenoid ON/OFF
CIIMO	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CIIMO	/	Active Engine Control Support System (ACM) M06	M06	Inspection	ACM Test
CIIMO	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Read codes	
CIIMO	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Erase Codes	
CIIMO	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Read Live Data	
CIIMO	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
CIIMO	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
CIIMO	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
CIIMO	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
CIIMO	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
CIIMO	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
CIIMO	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
CIIMO	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
CIIMO	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
CIIMO	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake

CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
CIIMO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
CIIMO	/	Transmission Control System (AT) M18	Read ECU Information	
CIIMO	/	Transmission Control System (AT) M18	Read codes	
CIIMO	/	Transmission Control System (AT) M18	Erase Codes	
CIIMO	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
CIIMO	/	Transmission Control System (AT) M18	Read Live Data	
CIIMO	/	Transmission Control System (AT) M18	Adjustment	
CIIMO	/	Active Torque Converter Control System (ATTS) MOE	Read ECU Information	
CIIMO	/	Active Torque Converter Control System (ATTS) MOE	Read codes	
CIIMO	/	Active Torque Converter Control System (ATTS) MOE	Erase Codes	
CIIMO	/	Active Torque Converter Control System (ATTS) MOE	Read Freeze Frame Data	
CIIMO	/	Active Torque Converter Control System (ATTS) MOE	Read Live Data	
CIIMO	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CIIMO	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	STEERING ANGLE
CIIMO	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CIIMO	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	ALL SENSORS
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
CIIMO	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
CIIMO	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
CIIMO	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
CIIMO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
CIIMO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CIIMO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CIIMO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
CIIMO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
CIIMO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
CIIMO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
CIIMO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
CIIMO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
CIIMO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
CIIMO	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
CIIMO	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
CIIMO	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
CIIMO	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
CIIMO	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
CIIMO	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
CIIMO	/	BODY ELECTRICAL/e-Call MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
CIIMO	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
CIIMO	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Function Test	Speedometer
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Function Test	Tachometer
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Activation Indicator
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Indicator
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Function Test	ABS INDICATOR
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Function Test	EBD Indicator(Electronic Brake Display)
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Function Test	Cruise Activation Indicator
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Function Test	MIL Status
CIIMO	/	BODY ELECTRICAL/Gauges MFF	Function Test	Daytime Running Lights Indicator(Canada)

CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CIIMO	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CIIMO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CIIMO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CIIMO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CIIMO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CIIMO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CIIMO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CIIMO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CIIMO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CIIMO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CIIMO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CIIMO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CIIMO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CIIMO	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CIIMO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CIIMO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CIIMO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CIIMO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down

CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CIIMO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CIIMO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Security	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CIIMO	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CIIMO	/	BODY ELECTRICAL/Security	MFF	History Data	
CIIMO	/	BODY ELECTRICAL/Security	MFF	History Clear	
CIIMO	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CIIMO	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CIIMO	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIIMO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CIIMO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIIMO	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CIIMO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CIIMO	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CIIMO	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CIIMO	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CIIMO	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CIIMO	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CIIMO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CIIMO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CIIMO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CIIMO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CIIMO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CIIMO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CIIMO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CIIMO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CIIMO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CIIMO	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CIIMO	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CIIMO	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CIIMO	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CIIMO	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CIIMO	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CIIMO	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CIIMO	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CIIMO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
CIIMO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
CIIMO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
CIIMO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
CIIMO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
CIIMO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CIIMO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
CIIMO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
CIIMO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
CIIMO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
CIIMO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
CIIMO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
CIIMO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
CIIMO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
CIIMO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
CIIMO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
CIIMO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
CIIMO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
CIIMO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	



CIIMO	/	Promise Automatic Transmission Control System (CVT M33)	Erase Codes	
CIIMO	/	Promise Automatic Transmission Control System (CVT M33)	Read Freeze Frame Data	
CIIMO	/	Promise Automatic Transmission Control System (CVT M33)	Read Live Data	
CIIMO	/	Promise Automatic Transmission Control System (CVT M33)	ECMPCM Reset	
CIIMO	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid
CIIMO	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)
CIIMO	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)
CIIMO	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information	
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes	
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes	
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data	
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data	
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	ECMPCM Reset	
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B
CIIMO	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P
CIIMO	/	DBW M34	Read ECU Information	
CIIMO	/	DBW M34	Read codes	
CIIMO	/	DBW M34	Erase Codes	
CIIMO	/	DBW M34	Read Freeze Frame Data	
CIIMO	/	DBW M34	Read Live Data	
CIIMO	/	DBW M34	Inspection	Idle Speed Adjust
CIIMO	/	DBW M34	Inspection	Throttle Test
CIIMO	/	DBW M34	ECM Reset	
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
CIIMO	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
CIIMO	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
CIIMO	/	Diesel Engine Control System (DIESEL) M37	Read codes	
CIIMO	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
CIIMO	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
CIIMO	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
CIIMO	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
CIIMO	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
CIIMO	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
CIIMO	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Read codes	
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
CIIMO	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
CIIMO	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
CIIMO	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
CIIMO	/	Capacitor Control System (EDLC) M12	Read codes	
CIIMO	/	Capacitor Control System (EDLC) M12	Erase Codes	
CIIMO	/	Capacitor Control System (EDLC) M12	Read Live Data	
CIIMO	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge and Charge Test
CIIMO	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge for Removal or Disposal
CIIMO	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Usage History Clear
CIIMO	/	Electronic Brake Control System (EPB) M1F	Read codes	
CIIMO	/	Electronic Brake Control System (EPB) M1F	Erase Codes	
CIIMO	/	Electronic Brake Control System (EPB) M1F	Read Live Data	
CIIMO	/	Electronic Brake Control System (EPB) M1F	Adjustment	Sensor Calibration

CIIMO	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CIIMO	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CIIMO	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CIIMO	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CIIMO	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CIIMO	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CIIMO	/	Electric Powertrain / IMA	M66	Read ECU Information	
CIIMO	/	Electric Powertrain / IMA	M66	Read codes	
CIIMO	/	Electric Powertrain / IMA	M66	Erase Codes	
CIIMO	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CIIMO	/	Electric Powertrain / IMA	M66	Read Live Data	
CIIMO	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CIIMO	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CIIMO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CIIMO	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CIIMO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CIIMO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CIIMO	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CIIMO	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CIIMO	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CIIMO	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CIIMO	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CIIMO	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CIIMO	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CIIMO	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CIIMO	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CIIMO	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CIIMO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CIIMO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CIIMO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CIIMO	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CIIMO	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CIIMO	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CIIMO	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CIIMO	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CIIMO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CIIMO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CIIMO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CIIMO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CIIMO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CIIMO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CIIMO	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CIIMO	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CIIMO	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CIIMO	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CIIMO	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CIIMO	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CIIMO	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CIIMO	/	New energy battery (EV)	M44	Read ECU Information	
CIIMO	/	New energy battery (EV)	M44	Read codes	
CIIMO	/	New energy battery (EV)	M44	Erase Codes	
CIIMO	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CIIMO	/	New energy battery (EV)	M44	Read Live Data	
CIIMO	/	New energy battery (EV)	M44	Inspection	
CIIMO	/	New energy battery (EV)	M44	Adjustment	
CIIMO	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CIIMO	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CIIMO	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CIIMO	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CIIMO	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CIIMO	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CIIMO	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CIIMO	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CIIMO	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CIIMO	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CIIMO	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CIIMO	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CIIMO	/	FCW LDW	M4E	Read ECU Information	
CIIMO	/	FCW LDW	M4E	Read codes	
CIIMO	/	FCW LDW	M4E	Erase Codes	
CIIMO	/	FCW LDW	M4E	Read Live Data	
CIIMO	/	FCW LDW	M4E	Function Test	FCW Drive
CIIMO	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CIIMO	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CIIMO	/	FCW LDW	M4E	Function Test	Indicator Drive
CIIMO	/	FCW LDW	M4E	Adjustment	
CIIMO	/	Instrument Display System (GAUGE)	M2C	Read codes	
CIIMO	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CIIMO	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CIIMO	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CIIMO	/	Anti-lock brake control system (ABS)	M01	Read codes	
CIIMO	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CIIMO	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CIIMO	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CIIMO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CIIMO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CIIMO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CIIMO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CIIMO	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS

CIIMO	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CIIMO	/	Anti-lock brake control system (ABS)	M02	Read codes	
CIIMO	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CIIMO	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CIIMO	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CIIMO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CIIMO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CIIMO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CIIMO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CIIMO	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CIIMO	/	Anti-lock brake control system (ABS)	M03	Read codes	
CIIMO	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CIIMO	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CIIMO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CIIMO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CIIMO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CIIMO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CIIMO	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CIIMO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CIIMO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CIIMO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CIIMO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CIIMO	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CIIMO	/	Anti-lock brake control system (ABS)	M19	Read codes	
CIIMO	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CIIMO	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CIIMO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CIIMO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CIIMO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CIIMO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CIIMO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CIIMO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CIIMO	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CIIMO	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CIIMO	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CIIMO	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CIIMO	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CIIMO	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CIIMO	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CIIMO	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CIIMO	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CIIMO	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CIIMO	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CIIMO	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CIIMO	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CIIMO	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CIIMO	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CIIMO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CIIMO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CIIMO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CIIMO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CIIMO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CIIMO	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CIIMO	/	IMA	M63	Read ECU Information	
CIIMO	/	IMA	M63	Read codes	
CIIMO	/	IMA	M63	Erase Codes	
CIIMO	/	IMA	M63	Read Freeze Frame Data	
CIIMO	/	IMA	M63	Read Live Data	
CIIMO	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CIIMO	/	IMA	M63	Adjustment	SOC PRESET
CIIMO	/	IMA	M64	Read ECU Information	
CIIMO	/	IMA	M64	Read codes	
CIIMO	/	IMA	M64	Erase Codes	
CIIMO	/	IMA	M64	Read Freeze Frame Data	
CIIMO	/	IMA	M64	Read Live Data	
CIIMO	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CIIMO	/	IMA	M64	Adjustment	SOC PRESET
CIIMO	/	IMA	M65	Read ECU Information	
CIIMO	/	IMA	M65	Read codes	
CIIMO	/	IMA	M65	Erase Codes	
CIIMO	/	IMA	M65	Read Freeze Frame Data	
CIIMO	/	IMA	M65	Read Live Data	
CIIMO	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CIIMO	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CIIMO	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CIIMO	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CIIMO	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CIIMO	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CIIMO	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CIIMO	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CIIMO	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CIIMO	/	Night Vision System (INVS)	0XB1	Read codes	

CIIMO	/	Night Vision System (INVS)	0XB1	Erase Codes	
CIIMO	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CIIMO	/	Night Vision System (INVS)	0XB1	Read Live Data	
CIIMO	/	Night Vision System (INVS)	0XB1	Adjustment	
CIIMO	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CIIMO	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CIIMO	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CIIMO	/	i-SHIFT	0XB0	Read ECU Information	
CIIMO	/	i-SHIFT	0XB0	Read codes	
CIIMO	/	i-SHIFT	0XB0	Erase Codes	
CIIMO	/	i-SHIFT	0XB0	Read Live Data	
CIIMO	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CIIMO	/	Keyless Entry Control System (KAS)	M99	Read codes	
CIIMO	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CIIMO	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CIIMO	/	Keyless Entry Control System (KAS)	M99	Self Check	
CIIMO	/	Keyless Entry Control System (KAS)	M99	History Data	
CIIMO	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CIIMO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CIIMO	/	Keyless Entry Control System (KAS)	M99	Registration	
CIIMO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CIIMO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CIIMO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CIIMO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CIIMO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CIIMO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CIIMO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CIIMO	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CIIMO	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CIIMO	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CIIMO	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CIIMO	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CIIMO	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CIIMO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CIIMO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CIIMO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CIIMO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CIIMO	/	Management ECU Module (ME)	M74	Read ECU Information	
CIIMO	/	Management ECU Module (ME)	M74	Read codes	
CIIMO	/	Management ECU Module (ME)	M74	Erase Codes	
CIIMO	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CIIMO	/	Management ECU Module (ME)	M74	Read Live Data	
CIIMO	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CIIMO	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	

CIIMO	/	Multi-view camera and parking assist system (MVC/P, M26	Erase Codes	
CIIMO	/	Multi-view camera and parking assist system (MVC/P, M26	Read Live Data	
CIIMO	/	Multi-view camera system (MVCS)	Read ECU Information	
CIIMO	/	Multi-view camera system (MVCS)	Read codes	
CIIMO	/	Multi-view camera system (MVCS)	Erase Codes	
CIIMO	/	Multi-view camera system (MVCS)	Read Live Data	
CIIMO	/	Multi-view camera system (MVCS)	Customization	
CIIMO	/	Multi-view camera system (MVCS)	Function Test	Monitor Out
CIIMO	/	Multi-view camera system (MVCS)	Function Test	LED Light
CIIMO	/	Multi-view camera system (MVCS)	Function Test	Front Camera Image
CIIMO	/	Multi-view camera system (MVCS)	Function Test	Left Side Camera Image
CIIMO	/	Multi-view camera system (MVCS)	Function Test	Right Side Camera Image
CIIMO	/	Multi-view camera system (MVCS)	Function Test	Rear Camera Image
CIIMO	/	Multi-view camera system (MVCS)	Function Test	MVC Function
CIIMO	/	Power Control Unit (PCU)	Read ECU Information	
CIIMO	/	Power Control Unit (PCU)	Read codes	
CIIMO	/	Power Control Unit (PCU)	Erase Codes	
CIIMO	/	Power Control Unit (PCU)	Read Live Data	
CIIMO	/	Power Control Unit (PCU)	Self Check	
CIIMO	/	Power Control Unit (PCU)	History Data	
CIIMO	/	Engine Control System (PGM-FI)	Read ECU Information	
CIIMO	/	Engine Control System (PGM-FI)	Read codes	
CIIMO	/	Engine Control System (PGM-FI)	Erase Codes	
CIIMO	/	Engine Control System (PGM-FI)	Readiness Codes	
CIIMO	/	Engine Control System (PGM-FI)	Read Freeze Frame Data	
CIIMO	/	Engine Control System (PGM-FI)	ECM/PCM Reset	
CIIMO	/	Engine Control System (PGM-FI)	Read Live Data	
CIIMO	/	Engine Control System (PGM-FI)	Inspection	EVAP Test
CIIMO	/	Engine Control System (PGM-FI)	Inspection	IMT (IMRC) TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	EGR TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	IACV TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	VTC TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	VTEC TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	ETCS (TAC) TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	RADIATOR FAN
CIIMO	/	Engine Control System (PGM-FI)	Inspection	A/C CLUTCH
CIIMO	/	Engine Control System (PGM-FI)	Inspection	FUEL PUMP ON
CIIMO	/	Engine Control System (PGM-FI)	Inspection	FUEL PUMP OFF
CIIMO	/	Engine Control System (PGM-FI)	Inspection	ALL INJECTORS STOP
CIIMO	/	Engine Control System (PGM-FI)	Inspection	ONE INJECTOR STOP
CIIMO	/	Engine Control System (PGM-FI)	Inspection	CRUISE CONTROL CANCEL HISTORY
CIIMO	/	Engine Control System (PGM-FI)	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	IDLE STOP STARTER COUNTER CHECK
CIIMO	/	Engine Control System (PGM-FI)	Adjustment	CRANK (CKP) PATTERN
CIIMO	/	Engine Control System (PGM-FI)	Adjustment	Main Fuel Tank Alcohol Content Write Data
CIIMO	/	Engine Control System (PGM-FI)	TP POSITION CHECK	
CIIMO	/	Engine Control System (PGM-FI)	VIN CHECK	
CIIMO	/	Engine Control System (PGM-FI)	Replace ECM/PCM	
CIIMO	/	Engine Control System (PGM-FI)	Read ECU Information	
CIIMO	/	Engine Control System (PGM-FI)	Read codes	
CIIMO	/	Engine Control System (PGM-FI)	Erase Codes	
CIIMO	/	Engine Control System (PGM-FI)	Readiness Codes	
CIIMO	/	Engine Control System (PGM-FI)	Read Freeze Frame Data	
CIIMO	/	Engine Control System (PGM-FI)	ECM/PCM Reset	
CIIMO	/	Engine Control System (PGM-FI)	Read Live Data	
CIIMO	/	Engine Control System (PGM-FI)	Inspection	IDLE ADJUST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	EVAP Test
CIIMO	/	Engine Control System (PGM-FI)	Inspection	VTEC LOW V/T CHECK
CIIMO	/	Engine Control System (PGM-FI)	Inspection	O2S TEST
CIIMO	/	Engine Control System (PGM-FI)	VIN CHECK	
CIIMO	/	Engine Control System (PGM-FI)	Replace ECM/PCM	
CIIMO	/	Engine Control System (PGM-FI)	Read ECU Information	
CIIMO	/	Engine Control System (PGM-FI)	Read codes	
CIIMO	/	Engine Control System (PGM-FI)	Erase Codes	
CIIMO	/	Engine Control System (PGM-FI)	Readiness Codes	
CIIMO	/	Engine Control System (PGM-FI)	Read Freeze Frame Data	
CIIMO	/	Engine Control System (PGM-FI)	ECM/PCM Reset	
CIIMO	/	Engine Control System (PGM-FI)	Read Live Data	
CIIMO	/	Engine Control System (PGM-FI)	Inspection	IDLE ADJUST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	EVAP Test
CIIMO	/	Engine Control System (PGM-FI)	Inspection	VTC TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	IMT (IMRC) TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	EGR TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	VTEC TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	IACV TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	O2S TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CIIMO	/	Engine Control System (PGM-FI)	Inspection	RADIATOR FAN
CIIMO	/	Engine Control System (PGM-FI)	Inspection	A/C CLUTCH
CIIMO	/	Engine Control System (PGM-FI)	Inspection	FUEL PUMP ON
CIIMO	/	Engine Control System (PGM-FI)	Inspection	FUEL PUMP OFF
CIIMO	/	Engine Control System (PGM-FI)	Inspection	ALL INJECTORS STOP
CIIMO	/	Engine Control System (PGM-FI)	Inspection	ONE INJECTOR STOP
CIIMO	/	Engine Control System (PGM-FI)	Inspection	CRUISE CONTROL CANCEL HISTORY
CIIMO	/	Engine Control System (PGM-FI)	Inspection	ACM
CIIMO	/	Engine Control System (PGM-FI)	Inspection	WGS TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	ABV TEST
CIIMO	/	Engine Control System (PGM-FI)	Inspection	FUEL PRESSURE TEST
CIIMO	/	Engine Control System (PGM-FI)	CRANK (CKP) PATTERN CLEAR	
CIIMO	/	Engine Control System (PGM-FI)	Adjustment	CRANK (CKP) PATTERN

CIIMO	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CIIMO	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CIIMO	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
CIIMO	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
CIIMO	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
CIIMO	/	PSR	M27	Read ECU Information	
CIIMO	/	PSR	M27	Read codes	
CIIMO	/	PSR	M27	Erase Codes	
CIIMO	/	PSR	M27	Read Live Data	
CIIMO	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CIIMO	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CIIMO	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CIIMO	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CIIMO	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CIIMO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CIIMO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CIIMO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CIIMO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CIIMO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CIIMO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CIIMO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CIIMO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CIIMO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CIIMO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CIIMO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CIIMO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CIIMO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CIIMO	/	Remote starter (RS)	M90	System Check	
CIIMO	/	Remote starter (RS)	M90	HISTORY	
CIIMO	/	Remote starter (RS)	M90	Registration	
CIIMO	/	Seat load cell (SWS)	M6F	Read ECU Information	
CIIMO	/	Seat load cell (SWS)	M6F	Read codes	
CIIMO	/	Seat load cell (SWS)	M6F	Erase Codes	
CIIMO	/	Seat load cell (SWS)	M6F	Read Live Data	
CIIMO	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CIIMO	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CIIMO	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CIIMO	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
CIIMO	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CIIMO	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CIIMO	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CIIMO	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CIIMO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CIIMO	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CIIMO	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CIIMO	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CIIMO	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CIIMO	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CIIMO	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CIIMO	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CIIMO	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CIIMO	/	Airbag Control System (SRS)	M9F	Read codes	
CIIMO	/	Airbag Control System (SRS)	M9F	Erase Codes	
CIIMO	/	Airbag Control System (SRS)	M9F	Read Live Data	
CIIMO	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CIIMO	/	Airbag Control System (SRS)	MA0	Read codes	
CIIMO	/	Airbag Control System (SRS)	MA0	Erase Codes	
CIIMO	/	Airbag Control System (SRS)	MA0	Read Live Data	
CIIMO	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CIIMO	/	Airbag Control System (SRS)	MA1	Read codes	
CIIMO	/	Airbag Control System (SRS)	MA1	Erase Codes	
CIIMO	/	Airbag Control System (SRS)	MA1	Read Live Data	
CIIMO	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CIIMO	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CIIMO	/	Airbag Control System (SRS)	M2A	Read codes	
CIIMO	/	Airbag Control System (SRS)	M2A	Erase Codes	
CIIMO	/	Airbag Control System (SRS)	M2A	Read Live Data	
CIIMO	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CIIMO	/	Airbag Control System (SRS)	M9C	Read codes	
CIIMO	/	Airbag Control System (SRS)	M9C	Erase Codes	

CIIMO	/	Airbag Control System (SRS)	M9C	Read Live Data	
CIIMO	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CIIMO	/	Airbag Control System (SRS)	M9D	Read codes	
CIIMO	/	Airbag Control System (SRS)	M9D	Erase Codes	
CIIMO	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CIIMO	/	Airbag Control System (SRS)	M9D	Read Live Data	
CIIMO	/	Airbag Control System (SRS)	M9D	Parameter Information	
CIIMO	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CIIMO	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CIIMO	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CIIMO	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CIIMO	/	Airbag Control System (SRS)	M9D	Function Test	
CIIMO	/	Airbag Control System (SRS)	M9D	System Information	
CIIMO	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CIIMO	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CIIMO	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CIIMO	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CIIMO	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CIIMO	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CIIMO	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CIIMO	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CIIMO	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CIIMO	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CIIMO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CIIMO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CIIMO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CIIMO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CIIMO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CIIMO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CIIMO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CIIMO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CIIMO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CITY	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CITY	/	Four-wheel steering control system (4WS)	M52	Read codes	
CITY	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CITY	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CITY	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CITY	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CITY	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CITY	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CITY	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CITY	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CITY	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CITY	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CITY	/	Automatic shift control system (A/T)	M1E	Read codes	
CITY	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CITY	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CITY	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CITY	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CITY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CITY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CITY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CITY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CITY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CITY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CITY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CITY	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CITY	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CITY	/	Automatic shift control system (A/T)	M3B	Read codes	
CITY	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CITY	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CITY	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CITY	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CITY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CITY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CITY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CITY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CITY	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CITY	/	Automatic shift control system (A/T)	M3C	Read codes	
CITY	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CITY	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CITY	/	Automatic shift control system (A/T)	M81	Read codes	
CITY	/	Automatic shift control system (A/T)	M81	Erase Codes	
CITY	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CITY	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CITY	/	Automatic shift control system (A/T)	M81	Read Live Data	
CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D

CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CITY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CITY	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CITY	/	Automatic shift control system (A/T)	M82	Read codes	
CITY	/	Automatic shift control system (A/T)	M82	Erase Codes	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
CITY	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CITY	/	Active Engine Control Support System (ACM)	M06	Read codes	
CITY	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
CITY	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CITY	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
CITY	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
CITY	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CITY	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CITY	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CITY	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CITY	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CITY	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
CITY	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CITY	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
CITY	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
CITY	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
CITY	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
CITY	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
CITY	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
CITY	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
CITY	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
CITY	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
CITY	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
CITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
CITY	/	Transmission Control System (AT)	M18	Read ECU Information	
CITY	/	Transmission Control System (AT)	M18	Read codes	
CITY	/	Transmission Control System (AT)	M18	Erase Codes	
CITY	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
CITY	/	Transmission Control System (AT)	M18	Read Live Data	
CITY	/	Transmission Control System (AT)	M18	Adjustment	
CITY	/	Active Torque Converter Control System (ATTTS)	M0E	Read ECU Information	
CITY	/	Active Torque Converter Control System (ATTTS)	M0E	Read codes	
CITY	/	Active Torque Converter Control System (ATTTS)	M0E	Erase Codes	
CITY	/	Active Torque Converter Control System (ATTTS)	M0E	Read Freeze Frame Data	
CITY	/	Active Torque Converter Control System (ATTTS)	M0E	Read Live Data	
CITY	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
CITY	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	STEERING ANGLE
CITY	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CITY	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ALL SENSORS
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF



CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CITY	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CITY	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CITY	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
CITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
CITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
CITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
CITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
CITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
CITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
CITY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CITY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CITY	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CITY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CITY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CITY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CITY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CITY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CITY	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CITY	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CITY	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CITY	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CITY	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CITY	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CITY	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CITY	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CITY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CITY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CITY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CITY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	

CITY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CITY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CITY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CITY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CITY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CITY	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CITY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CITY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CITY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CITY	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CITY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CITY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CITY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CITY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CITY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CITY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Security	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CITY	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CITY	/	BODY ELECTRICAL/Security	MFF	History Data	
CITY	/	BODY ELECTRICAL/Security	MFF	History Clear	
CITY	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CITY	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CITY	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CITY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CITY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CITY	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CITY	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	

CITY	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CITY	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CITY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CITY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CITY	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CITY	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CITY	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CITY	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CITY	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CITY	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CITY	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CITY	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CITY	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CITY	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CITY	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CITY	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CITY	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
CITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
CITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
CITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
CITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
CITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
CITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
CITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
CITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
CITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
CITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
CITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
CITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
CITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
CITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
CITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
CITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
CITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
CITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
CITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
CITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
CITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
CITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
CITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
CITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
CITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
CITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
CITY	/	DBW	M34	Read ECU Information	
CITY	/	DBW	M34	Read codes	
CITY	/	DBW	M34	Erase Codes	
CITY	/	DBW	M34	Read Freeze Frame Data	
CITY	/	DBW	M34	Read Live Data	
CITY	/	DBW	M34	Inspection	Idle Speed Adjust
CITY	/	DBW	M34	Inspection	Throttle Test
CITY	/	DBW	M34	ECM Reset	
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	

CITY	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CITY	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CITY	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CITY	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CITY	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CITY	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CITY	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CITY	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CITY	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CITY	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CITY	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CITY	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CITY	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CITY	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CITY	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CITY	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CITY	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CITY	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CITY	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CITY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CITY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CITY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CITY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CITY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CITY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CITY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CITY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CITY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CITY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CITY	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CITY	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CITY	/	Capacitor Control System (EDLC)	M12	Read codes	
CITY	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CITY	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CITY	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CITY	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CITY	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CITY	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CITY	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CITY	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CITY	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CITY	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CITY	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CITY	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CITY	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CITY	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CITY	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CITY	/	Electric Powertrain / IMA	M66	Read ECU Information	
CITY	/	Electric Powertrain / IMA	M66	Read codes	
CITY	/	Electric Powertrain / IMA	M66	Erase Codes	
CITY	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CITY	/	Electric Powertrain / IMA	M66	Read Live Data	
CITY	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CITY	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CITY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CITY	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CITY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CITY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CITY	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CITY	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CITY	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CITY	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CITY	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CITY	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CITY	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CITY	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CITY	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CITY	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CITY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CITY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CITY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CITY	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CITY	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	

CITY	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CITY	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CITY	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CITY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CITY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CITY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CITY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CITY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CITY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CITY	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CITY	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CITY	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CITY	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CITY	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CITY	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CITY	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CITY	/	New energy battery (EV)	M44	Read ECU Information	
CITY	/	New energy battery (EV)	M44	Read codes	
CITY	/	New energy battery (EV)	M44	Erase Codes	
CITY	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CITY	/	New energy battery (EV)	M44	Read Live Data	
CITY	/	New energy battery (EV)	M44	Inspection	
CITY	/	New energy battery (EV)	M44	Adjustment	
CITY	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CITY	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CITY	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CITY	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CITY	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CITY	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CITY	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CITY	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CITY	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CITY	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CITY	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CITY	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CITY	/	FCW LDW	M4E	Read ECU Information	
CITY	/	FCW LDW	M4E	Read codes	
CITY	/	FCW LDW	M4E	Erase Codes	
CITY	/	FCW LDW	M4E	Read Live Data	
CITY	/	FCW LDW	M4E	Function Test	FCW Drive
CITY	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CITY	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CITY	/	FCW LDW	M4E	Function Test	Indicator Drive
CITY	/	FCW LDW	M4E	Adjustment	
CITY	/	Instrument Display System (GAUGE)	M2C	Read codes	
CITY	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CITY	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CITY	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CITY	/	Anti-lock brake control system (ABS)	M01	Read codes	
CITY	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CITY	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CITY	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CITY	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CITY	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CITY	/	Anti-lock brake control system (ABS)	M02	Read codes	
CITY	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CITY	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CITY	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CITY	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CITY	/	Anti-lock brake control system (ABS)	M03	Read codes	
CITY	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CITY	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CITY	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CITY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CITY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CITY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CITY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CITY	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CITY	/	Anti-lock brake control system (ABS)	M19	Read codes	

CITY	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CITY	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CITY	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CITY	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CITY	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CITY	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CITY	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CITY	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CITY	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CITY	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CITY	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CITY	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CITY	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CITY	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CITY	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CITY	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CITY	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CITY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CITY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CITY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CITY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CITY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CITY	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CITY	/	IMA	M63	Read ECU Information	
CITY	/	IMA	M63	Read codes	
CITY	/	IMA	M63	Erase Codes	
CITY	/	IMA	M63	Read Freeze Frame Data	
CITY	/	IMA	M63	Read Live Data	
CITY	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CITY	/	IMA	M63	Adjustment	SOC PRESET
CITY	/	IMA	M64	Read ECU Information	
CITY	/	IMA	M64	Read codes	
CITY	/	IMA	M64	Erase Codes	
CITY	/	IMA	M64	Read Freeze Frame Data	
CITY	/	IMA	M64	Read Live Data	
CITY	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CITY	/	IMA	M64	Adjustment	SOC PRESET
CITY	/	IMA	M65	Read ECU Information	
CITY	/	IMA	M65	Read codes	
CITY	/	IMA	M65	Erase Codes	
CITY	/	IMA	M65	Read Freeze Frame Data	
CITY	/	IMA	M65	Read Live Data	
CITY	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CITY	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CITY	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CITY	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CITY	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CITY	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CITY	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CITY	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CITY	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CITY	/	Night Vision System (INVS)	0XB1	Read codes	
CITY	/	Night Vision System (INVS)	0XB1	Erase Codes	
CITY	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CITY	/	Night Vision System (INVS)	0XB1	Read Live Data	
CITY	/	Night Vision System (INVS)	0XB1	Adjustment	
CITY	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CITY	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CITY	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CITY	/	i-SHIFT	0XB0	Read ECU Information	
CITY	/	i-SHIFT	0XB0	Read codes	
CITY	/	i-SHIFT	0XB0	Erase Codes	
CITY	/	i-SHIFT	0XB0	Read Live Data	
CITY	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CITY	/	Keyless Entry Control System (KAS)	M99	Read codes	
CITY	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CITY	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CITY	/	Keyless Entry Control System (KAS)	M99	Self Check	
CITY	/	Keyless Entry Control System (KAS)	M99	History Data	
CITY	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	I-MOCNT Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC D Terminal) Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving

CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CITY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CITY	/	Keyless Entry Control System (KAS)	M99	Registration	
CITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CITY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
CITY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
CITY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
CITY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
CITY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
CITY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
CITY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
CITY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
CITY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
CITY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
CITY	/	Management ECU Module (ME)	M74	Read ECU Information	
CITY	/	Management ECU Module (ME)	M74	Read codes	
CITY	/	Management ECU Module (ME)	M74	Erase Codes	
CITY	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CITY	/	Management ECU Module (ME)	M74	Read Live Data	
CITY	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read ECU Information	
CITY	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read codes	
CITY	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Erase Codes	
CITY	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read Live Data	
CITY	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CITY	/	Multi-view camera system (MVCS)	M7A	Read codes	
CITY	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CITY	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CITY	/	Multi-view camera system (MVCS)	M7A	Customization	
CITY	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CITY	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CITY	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CITY	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CITY	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CITY	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CITY	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CITY	/	Power Control Unit (PCU)	M83	Read ECU Information	
CITY	/	Power Control Unit (PCU)	M83	Read codes	
CITY	/	Power Control Unit (PCU)	M83	Erase Codes	
CITY	/	Power Control Unit (PCU)	M83	Read Live Data	
CITY	/	Power Control Unit (PCU)	M83	Self Check	
CITY	/	Power Control Unit (PCU)	M83	History Data	
CITY	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CITY	/	Engine Control System (PGM-FI)	M23	Read codes	
CITY	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CITY	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CITY	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CITY	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CITY	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST

CITY	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CITY	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CITY	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CITY	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CITY	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CITY	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CITY	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CITY	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CITY	/	Engine Control System (PGM-FI)	M50	Read codes	
CITY	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CITY	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CITY	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CITY	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CITY	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CITY	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CITY	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CITY	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CITY	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CITY	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CITY	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CITY	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CITY	/	Engine Control System (PGM-FI)	M86	Read codes	
CITY	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CITY	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CITY	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CITY	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CITY	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CITY	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CITY	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CITY	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CITY	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CITY	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CITY	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CITY	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CITY	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
CITY	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
CITY	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
CITY	/	PSR	M27	Read ECU Information	
CITY	/	PSR	M27	Read codes	
CITY	/	PSR	M27	Erase Codes	
CITY	/	PSR	M27	Read Live Data	
CITY	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CITY	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CITY	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CITY	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CITY	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CITY	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CITY	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CITY	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CITY	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CITY	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CITY	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CITY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CITY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CITY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CITY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CITY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CITY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CITY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CITY	/	Remote starter (RS)	M90	System Check	
CITY	/	Remote starter (RS)	M90	HISTORY	
CITY	/	Remote starter (RS)	M90	Registration	
CITY	/	Seat load cell (SWS)	M6F	Read ECU Information	
CITY	/	Seat load cell (SWS)	M6F	Read codes	



CITY	/	Seat load cell (SWS)	M6F	Erase Codes	
CITY	/	Seat load cell (SWS)	M6F	Read Live Data	
CITY	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CITY	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CITY	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CITY	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
CITY	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CITY	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CITY	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CITY	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CITY	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CITY	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CITY	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CITY	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CITY	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CITY	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CITY	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CITY	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CITY	/	Airbag Control System (SRS)	M9F	Read codes	
CITY	/	Airbag Control System (SRS)	M9F	Erase Codes	
CITY	/	Airbag Control System (SRS)	M9F	Read Live Data	
CITY	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CITY	/	Airbag Control System (SRS)	MA0	Read codes	
CITY	/	Airbag Control System (SRS)	MA0	Erase Codes	
CITY	/	Airbag Control System (SRS)	MA0	Read Live Data	
CITY	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CITY	/	Airbag Control System (SRS)	MA1	Read codes	
CITY	/	Airbag Control System (SRS)	MA1	Erase Codes	
CITY	/	Airbag Control System (SRS)	MA1	Read Live Data	
CITY	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CITY	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CITY	/	Airbag Control System (SRS)	M2A	Read codes	
CITY	/	Airbag Control System (SRS)	M2A	Erase Codes	
CITY	/	Airbag Control System (SRS)	M2A	Read Live Data	
CITY	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CITY	/	Airbag Control System (SRS)	M9C	Read codes	
CITY	/	Airbag Control System (SRS)	M9C	Erase Codes	
CITY	/	Airbag Control System (SRS)	M9C	Read Live Data	
CITY	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CITY	/	Airbag Control System (SRS)	M9D	Read codes	
CITY	/	Airbag Control System (SRS)	M9D	Erase Codes	
CITY	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CITY	/	Airbag Control System (SRS)	M9D	Read Live Data	
CITY	/	Airbag Control System (SRS)	M9D	Parameter Information	
CITY	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CITY	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CITY	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CITY	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CITY	/	Airbag Control System (SRS)	M9D	Function Test	
CITY	/	Airbag Control System (SRS)	M9D	System Information	
CITY	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CITY	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CITY	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CITY	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CITY	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CITY	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CITY	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CITY	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CITY	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CITY	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CITY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CITY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CITY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CITY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CITY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	

CITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CIVIC	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CIVIC	/	Four-wheel steering control system (4WS)	M52	Read codes	
CIVIC	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CIVIC	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CIVIC	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CIVIC	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CIVIC	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CIVIC	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CIVIC	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CIVIC	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CIVIC	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CIVIC	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CIVIC	/	Automatic shift control system (A/T)	M1E	Read codes	
CIVIC	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CIVIC	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CIVIC	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CIVIC	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CIVIC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CIVIC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CIVIC	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CIVIC	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CIVIC	/	Automatic shift control system (A/T)	M3B	Read codes	
CIVIC	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CIVIC	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CIVIC	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CIVIC	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CIVIC	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CIVIC	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CIVIC	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CIVIC	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CIVIC	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CIVIC	/	Automatic shift control system (A/T)	M3C	Read codes	
CIVIC	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CIVIC	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CIVIC	/	Automatic shift control system (A/T)	M81	Read codes	
CIVIC	/	Automatic shift control system (A/T)	M81	Erase Codes	
CIVIC	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CIVIC	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CIVIC	/	Automatic shift control system (A/T)	M81	Read Live Data	
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CIVIC	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CIVIC	/	Automatic shift control system (A/T)	M82	Read codes	
CIVIC	/	Automatic shift control system (A/T)	M82	Erase Codes	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read ECU Information	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read codes	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Erase Codes	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read Freeze Frame Data	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read Live Data	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	Throttle Opening Angle Test
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	BRAKE BOOSTER 1
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	BRAKE BOOSTER 2
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	LIGHT CHECK
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	BUZZER CHECK
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Read ECU Information	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Read codes	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Erase Codes	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Read Freeze Frame Data	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Read Live Data	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Adjustment	RADAR AIMING
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Function Test	BRAKE ACTUATOR 3
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Function Test	ACC relay malfunction.
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Function Test	INDICATOR LIGHT
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Function Test	INFORMATION DISPLAY
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Function Test	ALARM BUZZER

CIVIC	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CIVIC	/	Active Engine Control Support System (ACM)	M06	Read codes	
CIVIC	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
CIVIC	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CIVIC	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
CIVIC	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
CIVIC	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CIVIC	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CIVIC	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CIVIC	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CIVIC	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CIVIC	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
CIVIC	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CIVIC	/	Active / Automatic Shock Absorber Control System (A MOD)		Read ECU Information	
CIVIC	/	Active / Automatic Shock Absorber Control System (A MOD)		Read codes	
CIVIC	/	Active / Automatic Shock Absorber Control System (A MOD)		Erase Codes	
CIVIC	/	Active / Automatic Shock Absorber Control System (A MOD)		Read Freeze Frame Data	
CIVIC	/	Active / Automatic Shock Absorber Control System (A MOD)		Read Live Data	
CIVIC	/	Active / Automatic Shock Absorber Control System (A MOD)		Function Test	Damper Force Operation Test
CIVIC	/	Active / Automatic Shock Absorber Control System (A MOD)		Adjustment	Damper Stroke Calibration
CIVIC	/	Active / Automatic Shock Absorber Control System (A M1A)		Read codes	
CIVIC	/	Active / Automatic Shock Absorber Control System (A M1A)		Erase Codes	
CIVIC	/	Active / Automatic Shock Absorber Control System (A M1A)		Read Live Data	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Read codes	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Erase Codes	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Read Freeze Frame Data	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Read Live Data	
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	ACC Brake (Brake Actuator)
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	CMBS Brake
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Brake Light (ACC Relay)
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Indicator Light
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Information Display
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Alarm Test
CIVIC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Adjustment	Radar aiming
CIVIC	/	Transmission Control System (AT)	M18	Read ECU Information	
CIVIC	/	Transmission Control System (AT)	M18	Read codes	
CIVIC	/	Transmission Control System (AT)	M18	Erase Codes	
CIVIC	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
CIVIC	/	Transmission Control System (AT)	M18	Read Live Data	
CIVIC	/	Transmission Control System (AT)	M18	Adjustment	
CIVIC	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
CIVIC	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
CIVIC	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
CIVIC	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
CIVIC	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
CIVIC	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CIVIC	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
CIVIC	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CIVIC	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CIVIC	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CIVIC	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CIVIC	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Function Test	Oncoming Vehicle Detection
CIVIC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Function Test	Preceding Vehicle Detection
CIVIC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CIVIC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CIVIC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Reset Operation
CIVIC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Returning Operation
CIVIC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Automatic Returning Distance
CIVIC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Manual Returning Time
CIVIC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Reset to default
CIVIC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CIVIC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CIVIC	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	

CIVIC	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CIVIC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CIVIC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CIVIC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CIVIC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CIVIC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CIVIC	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CIVIC	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CIVIC	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CIVIC	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CIVIC	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CIVIC	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CIVIC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CIVIC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CIVIC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CIVIC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CIVIC	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	

CIVIC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CIVIC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CIVIC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CIVIC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CIVIC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CIVIC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CIVIC	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CIVIC	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CIVIC	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CIVIC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CIVIC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CIVIC	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CIVIC	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Security	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CIVIC	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CIVIC	/	BODY ELECTRICAL/Security	MFF	History Data	
CIVIC	/	BODY ELECTRICAL/Security	MFF	History Clear	
CIVIC	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CIVIC	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CIVIC	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CIVIC	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CIVIC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CIVIC	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CIVIC	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CIVIC	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CIVIC	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CIVIC	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CIVIC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CIVIC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CIVIC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CIVIC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CIVIC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CIVIC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CIVIC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CIVIC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA

CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CIVIC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CIVIC	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CIVIC	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CIVIC	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CIVIC	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CIVIC	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CIVIC	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CIVIC	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CIVIC	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CIVIC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read ECU Information	
CIVIC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read codes	
CIVIC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Erase Codes	
CIVIC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Freeze Frame Data	
CIVIC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Live Data	
CIVIC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CIVIC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	RADAR AIMING
CIVIC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	CMBS Brake
CIVIC	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
CIVIC	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
CIVIC	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
CIVIC	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
CIVIC	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
CIVIC	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
CIVIC	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
CIVIC	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
CIVIC	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
CIVIC	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
CIVIC	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
CIVIC	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
CIVIC	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
CIVIC	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
CIVIC	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
CIVIC	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
CIVIC	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
CIVIC	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
CIVIC	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		ECMPCM Reset	
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
CIVIC	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
CIVIC	/	DBW	M34	Read ECU Information	
CIVIC	/	DBW	M34	Read codes	
CIVIC	/	DBW	M34	Erase Codes	
CIVIC	/	DBW	M34	Read Freeze Frame Data	
CIVIC	/	DBW	M34	Read Live Data	
CIVIC	/	DBW	M34	Inspection	Idle Speed Adjust
CIVIC	/	DBW	M34	Inspection	Throttle Test
CIVIC	/	DBW	M34	ECM Reset	
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CIVIC	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CIVIC	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CIVIC	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CIVIC	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CIVIC	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CIVIC	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CIVIC	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CIVIC	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CIVIC	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test

CIVIC	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CIVIC	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CIVIC	/	Capacitor Control System (EDLC)	M12	Read codes	
CIVIC	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CIVIC	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CIVIC	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CIVIC	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CIVIC	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CIVIC	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CIVIC	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CIVIC	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CIVIC	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CIVIC	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CIVIC	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CIVIC	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CIVIC	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CIVIC	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CIVIC	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CIVIC	/	Electric Powertrain / IMA	M66	Read ECU Information	
CIVIC	/	Electric Powertrain / IMA	M66	Read codes	
CIVIC	/	Electric Powertrain / IMA	M66	Erase Codes	
CIVIC	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CIVIC	/	Electric Powertrain / IMA	M66	Read Live Data	
CIVIC	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CIVIC	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CIVIC	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CIVIC	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CIVIC	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CIVIC	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CIVIC	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CIVIC	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CIVIC	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CIVIC	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CIVIC	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CIVIC	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CIVIC	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CIVIC	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CIVIC	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CIVIC	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CIVIC	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CIVIC	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CIVIC	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CIVIC	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CIVIC	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CIVIC	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CIVIC	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CIVIC	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CIVIC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CIVIC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CIVIC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CIVIC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CIVIC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CIVIC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CIVIC	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CIVIC	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CIVIC	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CIVIC	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CIVIC	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CIVIC	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CIVIC	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CIVIC	/	New energy battery (EV)	M44	Read ECU Information	
CIVIC	/	New energy battery (EV)	M44	Read codes	
CIVIC	/	New energy battery (EV)	M44	Erase Codes	
CIVIC	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CIVIC	/	New energy battery (EV)	M44	Read Live Data	
CIVIC	/	New energy battery (EV)	M44	Inspection	
CIVIC	/	New energy battery (EV)	M44	Adjustment	
CIVIC	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CIVIC	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CIVIC	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CIVIC	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CIVIC	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CIVIC	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CIVIC	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CIVIC	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CIVIC	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	

CIVIC	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CIVIC	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CIVIC	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CIVIC	/	FCW LDW	M4E	Read ECU Information	
CIVIC	/	FCW LDW	M4E	Read codes	
CIVIC	/	FCW LDW	M4E	Erase Codes	
CIVIC	/	FCW LDW	M4E	Read Live Data	
CIVIC	/	FCW LDW	M4E	Function Test	FCW Drive
CIVIC	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CIVIC	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CIVIC	/	FCW LDW	M4E	Function Test	Indicator Drive
CIVIC	/	FCW LDW	M4E	Adjustment	
CIVIC	/	Instrument Display System (GAUGE)	M2C	Read codes	
CIVIC	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CIVIC	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CIVIC	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CIVIC	/	Anti-lock brake control system (ABS)	M01	Read codes	
CIVIC	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CIVIC	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CIVIC	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CIVIC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CIVIC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CIVIC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CIVIC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CIVIC	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CIVIC	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CIVIC	/	Anti-lock brake control system (ABS)	M02	Read codes	
CIVIC	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CIVIC	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CIVIC	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CIVIC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CIVIC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CIVIC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CIVIC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CIVIC	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CIVIC	/	Anti-lock brake control system (ABS)	M03	Read codes	
CIVIC	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CIVIC	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CIVIC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CIVIC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CIVIC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CIVIC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CIVIC	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CIVIC	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CIVIC	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CIVIC	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CIVIC	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CIVIC	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CIVIC	/	Anti-lock brake control system (ABS)	M19	Read codes	
CIVIC	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CIVIC	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CIVIC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CIVIC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CIVIC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CIVIC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CIVIC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CIVIC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CIVIC	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CIVIC	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CIVIC	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CIVIC	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CIVIC	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CIVIC	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CIVIC	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CIVIC	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CIVIC	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CIVIC	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CIVIC	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CIVIC	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CIVIC	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CIVIC	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CIVIC	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CIVIC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CIVIC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CIVIC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CIVIC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CIVIC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CIVIC	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position



CIVIC	/	IMA	M63	Read ECU Information	
CIVIC	/	IMA	M63	Read codes	
CIVIC	/	IMA	M63	Erase Codes	
CIVIC	/	IMA	M63	Read Freeze Frame Data	
CIVIC	/	IMA	M63	Read Live Data	
CIVIC	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CIVIC	/	IMA	M63	Adjustment	SOC PRESET
CIVIC	/	IMA	M64	Read ECU Information	
CIVIC	/	IMA	M64	Read codes	
CIVIC	/	IMA	M64	Erase Codes	
CIVIC	/	IMA	M64	Read Freeze Frame Data	
CIVIC	/	IMA	M64	Read Live Data	
CIVIC	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CIVIC	/	IMA	M64	Adjustment	SOC PRESET
CIVIC	/	IMA	M65	Read ECU Information	
CIVIC	/	IMA	M65	Read codes	
CIVIC	/	IMA	M65	Erase Codes	
CIVIC	/	IMA	M65	Read Freeze Frame Data	
CIVIC	/	IMA	M65	Read Live Data	
CIVIC	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CIVIC	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CIVIC	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CIVIC	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CIVIC	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CIVIC	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CIVIC	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CIVIC	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CIVIC	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CIVIC	/	Night Vision System (INVS)	0XB1	Read codes	
CIVIC	/	Night Vision System (INVS)	0XB1	Erase Codes	
CIVIC	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CIVIC	/	Night Vision System (INVS)	0XB1	Read Live Data	
CIVIC	/	Night Vision System (INVS)	0XB1	Adjustment	
CIVIC	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CIVIC	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CIVIC	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CIVIC	/	i-SHIFT	0XB0	Read ECU Information	
CIVIC	/	i-SHIFT	0XB0	Read codes	
CIVIC	/	i-SHIFT	0XB0	Erase Codes	
CIVIC	/	i-SHIFT	0XB0	Read Live Data	
CIVIC	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CIVIC	/	Keyless Entry Control System (KAS)	M99	Read codes	
CIVIC	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CIVIC	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CIVIC	/	Keyless Entry Control System (KAS)	M99	Self Check	
CIVIC	/	Keyless Entry Control System (KAS)	M99	History Data	
CIVIC	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCED Terminal) Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving

CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CIVIC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CIVIC	/	Keyless Entry Control System (KAS)	M99	Registration	
CIVIC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CIVIC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CIVIC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CIVIC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CIVIC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CIVIC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CIVIC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CIVIC	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CIVIC	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CIVIC	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CIVIC	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CIVIC	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CIVIC	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CIVIC	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CIVIC	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CIVIC	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CIVIC	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CIVIC	/	Management ECU Module (ME)	M74	Read ECU Information	
CIVIC	/	Management ECU Module (ME)	M74	Read codes	
CIVIC	/	Management ECU Module (ME)	M74	Erase Codes	
CIVIC	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CIVIC	/	Management ECU Module (ME)	M74	Read Live Data	
CIVIC	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CIVIC	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CIVIC	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CIVIC	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CIVIC	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CIVIC	/	Multi-view camera system (MVCS)	M7A	Read codes	
CIVIC	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CIVIC	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CIVIC	/	Multi-view camera system (MVCS)	M7A	Customization	
CIVIC	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CIVIC	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CIVIC	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CIVIC	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CIVIC	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CIVIC	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CIVIC	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CIVIC	/	Power Control Unit (PCU)	M83	Read ECU Information	
CIVIC	/	Power Control Unit (PCU)	M83	Read codes	
CIVIC	/	Power Control Unit (PCU)	M83	Erase Codes	
CIVIC	/	Power Control Unit (PCU)	M83	Read Live Data	
CIVIC	/	Power Control Unit (PCU)	M83	Self Check	
CIVIC	/	Power Control Unit (PCU)	M83	History Data	
CIVIC	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CIVIC	/	Engine Control System (PGM-FI)	M23	Read codes	
CIVIC	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CIVIC	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CIVIC	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CIVIC	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CIVIC	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CIVIC	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CIVIC	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CIVIC	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CIVIC	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CIVIC	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CIVIC	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CIVIC	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CIVIC	/	Engine Control System (PGM-FI)	M50	Read codes	
CIVIC	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CIVIC	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CIVIC	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CIVIC	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CIVIC	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CIVIC	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CIVIC	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CIVIC	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CIVIC	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CIVIC	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CIVIC	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CIVIC	/	Engine Control System (PGM-FI)	M86	Read ECU Information	

CIVIC	/	Engine Control System (PGM-FI)	M86	Read codes	
CIVIC	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CIVIC	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CIVIC	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CIVIC	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CIVIC	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CIVIC	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CIVIC	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CIVIC	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CIVIC	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CIVIC	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CIVIC	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
CIVIC	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
CIVIC	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
CIVIC	/	PSR	M27	Read ECU Information	
CIVIC	/	PSR	M27	Read codes	
CIVIC	/	PSR	M27	Erase Codes	
CIVIC	/	PSR	M27	Read Live Data	
CIVIC	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CIVIC	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CIVIC	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CIVIC	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CIVIC	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CIVIC	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
CIVIC	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
CIVIC	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
CIVIC	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
CIVIC	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
CIVIC	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
CIVIC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CIVIC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CIVIC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CIVIC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CIVIC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CIVIC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CIVIC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CIVIC	/	Remote starter (RS)	M90	System Check	
CIVIC	/	Remote starter (RS)	M90	HISTORY	
CIVIC	/	Remote starter (RS)	M90	Registration	
CIVIC	/	Seat load cell (SWS)	M6F	Read ECU Information	
CIVIC	/	Seat load cell (SWS)	M6F	Read codes	
CIVIC	/	Seat load cell (SWS)	M6F	Erase Codes	
CIVIC	/	Seat load cell (SWS)	M6F	Read Live Data	
CIVIC	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CIVIC	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CIVIC	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CIVIC	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
CIVIC	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CIVIC	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CIVIC	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CIVIC	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	

CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CIVIC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CIVIC	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CIVIC	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CIVIC	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CIVIC	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CIVIC	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CIVIC	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CIVIC	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CIVIC	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CIVIC	/	Airbag Control System (SRS)	M9F	Read codes	
CIVIC	/	Airbag Control System (SRS)	M9F	Erase Codes	
CIVIC	/	Airbag Control System (SRS)	M9F	Read Live Data	
CIVIC	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CIVIC	/	Airbag Control System (SRS)	MA0	Read codes	
CIVIC	/	Airbag Control System (SRS)	MA0	Erase Codes	
CIVIC	/	Airbag Control System (SRS)	MA0	Read Live Data	
CIVIC	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CIVIC	/	Airbag Control System (SRS)	MA1	Read codes	
CIVIC	/	Airbag Control System (SRS)	MA1	Erase Codes	
CIVIC	/	Airbag Control System (SRS)	MA1	Read Live Data	
CIVIC	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CIVIC	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CIVIC	/	Airbag Control System (SRS)	M2A	Read codes	
CIVIC	/	Airbag Control System (SRS)	M2A	Erase Codes	
CIVIC	/	Airbag Control System (SRS)	M2A	Read Live Data	
CIVIC	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CIVIC	/	Airbag Control System (SRS)	M9C	Read codes	
CIVIC	/	Airbag Control System (SRS)	M9C	Erase Codes	
CIVIC	/	Airbag Control System (SRS)	M9C	Read Live Data	
CIVIC	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CIVIC	/	Airbag Control System (SRS)	M9D	Read codes	
CIVIC	/	Airbag Control System (SRS)	M9D	Erase Codes	
CIVIC	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CIVIC	/	Airbag Control System (SRS)	M9D	Read Live Data	
CIVIC	/	Airbag Control System (SRS)	M9D	Parameter Information	
CIVIC	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CIVIC	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CIVIC	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CIVIC	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CIVIC	/	Airbag Control System (SRS)	M9D	Function Test	
CIVIC	/	Airbag Control System (SRS)	M9D	System Information	
CIVIC	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CIVIC	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CIVIC	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CIVIC	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CIVIC	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CIVIC	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CIVIC	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CIVIC	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CIVIC	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CIVIC	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CIVIC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CIVIC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CIVIC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CIVIC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CIVIC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CIVIC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CIVIC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CIVIC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CIVIC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CIVIC 5D	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CIVIC 5D	/	Four-wheel steering control system (4WS)	M52	Read codes	
CIVIC 5D	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CIVIC 5D	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CIVIC 5D	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CIVIC 5D	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CIVIC 5D	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CIVIC 5D	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CIVIC 5D	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CIVIC 5D	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CIVIC 5D	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	Read codes	
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A

CIVIC 5D	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CIVIC 5D	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CIVIC 5D	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CIVIC 5D	/	Automatic shift control system (A/T)	M3B	Read codes	
CIVIC 5D	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CIVIC 5D	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CIVIC 5D	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CIVIC 5D	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CIVIC 5D	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CIVIC 5D	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CIVIC 5D	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CIVIC 5D	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CIVIC 5D	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CIVIC 5D	/	Automatic shift control system (A/T)	M3C	Read codes	
CIVIC 5D	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Read codes	
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Erase Codes	
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CIVIC 5D	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Read Live Data	
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC 5D	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CIVIC 5D	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CIVIC 5D	/	Automatic shift control system (A/T)	M82	Read codes	
CIVIC 5D	/	Automatic shift control system (A/T)	M82	Erase Codes	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
CIVIC 5D	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CIVIC 5D	/	Active Engine Control Support System (ACM)	M06	Read codes	
CIVIC 5D	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
CIVIC 5D	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CIVIC 5D	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
CIVIC 5D	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
CIVIC 5D	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CIVIC 5D	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CIVIC 5D	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CIVIC 5D	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CIVIC 5D	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CIVIC 5D	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
CIVIC 5D	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CIVIC 5D	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read ECU Information	
CIVIC 5D	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read codes	
CIVIC 5D	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Erase Codes	
CIVIC 5D	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read Freeze Frame Data	
CIVIC 5D	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read Live Data	
CIVIC 5D	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Function Test	Damper Force Operation Test
CIVIC 5D	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Adjustment	Damper Stroke Calibration
CIVIC 5D	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
CIVIC 5D	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
CIVIC 5D	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display

CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
CIVIC 5D	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
CIVIC 5D	/	Transmission Control System (AT)	M18	Read ECU Information	
CIVIC 5D	/	Transmission Control System (AT)	M18	Read codes	
CIVIC 5D	/	Transmission Control System (AT)	M18	Erase Codes	
CIVIC 5D	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
CIVIC 5D	/	Transmission Control System (AT)	M18	Read Live Data	
CIVIC 5D	/	Transmission Control System (AT)	M18	Adjustment	
CIVIC 5D	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
CIVIC 5D	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
CIVIC 5D	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
CIVIC 5D	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
CIVIC 5D	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
CIVIC 5D	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CIVIC 5D	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
CIVIC 5D	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CIVIC 5D	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CIVIC 5D	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CIVIC 5D	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CIVIC 5D	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
CIVIC 5D	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
CIVIC 5D	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CIVIC 5D	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CIVIC 5D	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
CIVIC 5D	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
CIVIC 5D	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
CIVIC 5D	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
CIVIC 5D	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
CIVIC 5D	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CIVIC 5D	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CIVIC 5D	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CIVIC 5D	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CIVIC 5D	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CIVIC 5D	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CIVIC 5D	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CIVIC 5D	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CIVIC 5D	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CIVIC 5D	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CIVIC 5D	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator

CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CIVIC 5D	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CIVIC 5D	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CIVIC 5D	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CIVIC 5D	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CIVIC 5D	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CIVIC 5D	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CIVIC 5D	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CIVIC 5D	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CIVIC 5D	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CIVIC 5D	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CIVIC 5D	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CIVIC 5D	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CIVIC 5D	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CIVIC 5D	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CIVIC 5D	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CIVIC 5D	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CIVIC 5D	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CIVIC 5D	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down

CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CIVIC 5D	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CIVIC 5D	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Security	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CIVIC 5D	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CIVIC 5D	/	BODY ELECTRICAL/Security	MFF	History Data	
CIVIC 5D	/	BODY ELECTRICAL/Security	MFF	History Clear	
CIVIC 5D	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CIVIC 5D	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CIVIC 5D	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC 5D	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CIVIC 5D	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC 5D	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CIVIC 5D	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CIVIC 5D	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CIVIC 5D	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CIVIC 5D	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CIVIC 5D	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CIVIC 5D	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CIVIC 5D	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CIVIC 5D	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CIVIC 5D	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CIVIC 5D	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CIVIC 5D	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CIVIC 5D	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CIVIC 5D	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CIVIC 5D	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CIVIC 5D	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CIVIC 5D	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CIVIC 5D	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CIVIC 5D	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CIVIC 5D	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CIVIC 5D	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CIVIC 5D	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CIVIC 5D	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CIVIC 5D	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CIVIC 5D	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
CIVIC 5D	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
CIVIC 5D	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
CIVIC 5D	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
CIVIC 5D	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
CIVIC 5D	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CIVIC 5D	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
CIVIC 5D	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	



CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M33	ECMPCM Reset	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	Read codes	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	ECMPCM Reset	
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
CIVIC 5D	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
CIVIC 5D	/	DBW M34	Read ECU Information	
CIVIC 5D	/	DBW M34	Read codes	
CIVIC 5D	/	DBW M34	Erase Codes	
CIVIC 5D	/	DBW M34	Read Freeze Frame Data	
CIVIC 5D	/	DBW M34	Read Live Data	
CIVIC 5D	/	DBW M34	Inspection	Idle Speed Adjust
CIVIC 5D	/	DBW M34	Inspection	Throttle Test
CIVIC 5D	/	DBW M34	ECM Reset	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M37	Read codes	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Read codes	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
CIVIC 5D	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
CIVIC 5D	/	Capacitor Control System (EDLC) M12	Read codes	
CIVIC 5D	/	Capacitor Control System (EDLC) M12	Erase Codes	
CIVIC 5D	/	Capacitor Control System (EDLC) M12	Read Live Data	
CIVIC 5D	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge and Charge Test
CIVIC 5D	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge for Removal or Disposal
CIVIC 5D	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Usage History Clear
CIVIC 5D	/	Electronic Brake Control System (EPB) M1F	Read codes	
CIVIC 5D	/	Electronic Brake Control System (EPB) M1F	Erase Codes	
CIVIC 5D	/	Electronic Brake Control System (EPB) M1F	Read Live Data	
CIVIC 5D	/	Electronic Brake Control System (EPB) M1F	Adjustment	Sensor Calibration
CIVIC 5D	/	Electronic Brake Control System (EPB) M1F	Adjustment	Brake Pad Maintenance Mode
CIVIC 5D	/	Electronic Brake Control System (EPB) M3E	Read ECU Information	
CIVIC 5D	/	Electronic Brake Control System (EPB) M3E	Read codes	

CIVIC 5D	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CIVIC 5D	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CIVIC 5D	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CIVIC 5D	/	Electric Powertrain / IMA	M66	Read ECU Information	
CIVIC 5D	/	Electric Powertrain / IMA	M66	Read codes	
CIVIC 5D	/	Electric Powertrain / IMA	M66	Erase Codes	
CIVIC 5D	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CIVIC 5D	/	Electric Powertrain / IMA	M66	Read Live Data	
CIVIC 5D	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CIVIC 5D	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CIVIC 5D	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CIVIC 5D	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CIVIC 5D	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CIVIC 5D	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CIVIC 5D	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CIVIC 5D	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CIVIC 5D	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CIVIC 5D	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CIVIC 5D	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CIVIC 5D	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CIVIC 5D	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CIVIC 5D	/	New energy battery (EV)	M44	Read ECU Information	
CIVIC 5D	/	New energy battery (EV)	M44	Read codes	
CIVIC 5D	/	New energy battery (EV)	M44	Erase Codes	
CIVIC 5D	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CIVIC 5D	/	New energy battery (EV)	M44	Read Live Data	
CIVIC 5D	/	New energy battery (EV)	M44	Inspection	
CIVIC 5D	/	New energy battery (EV)	M44	Adjustment	
CIVIC 5D	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CIVIC 5D	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CIVIC 5D	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CIVIC 5D	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CIVIC 5D	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CIVIC 5D	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CIVIC 5D	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CIVIC 5D	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CIVIC 5D	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CIVIC 5D	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CIVIC 5D	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CIVIC 5D	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CIVIC 5D	/	FCW LDW	M4E	Read ECU Information	
CIVIC 5D	/	FCW LDW	M4E	Read codes	
CIVIC 5D	/	FCW LDW	M4E	Erase Codes	
CIVIC 5D	/	FCW LDW	M4E	Read Live Data	
CIVIC 5D	/	FCW LDW	M4E	Function Test	FCW Drive
CIVIC 5D	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CIVIC 5D	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CIVIC 5D	/	FCW LDW	M4E	Function Test	Indicator Drive
CIVIC 5D	/	FCW LDW	M4E	Adjustment	
CIVIC 5D	/	Instrument Display System (GAUGE)	M2C	Read codes	
CIVIC 5D	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CIVIC 5D	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Read codes	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Read codes	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Erase Codes	

CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Read codes	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CIVIC 5D	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Read codes	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CIVIC 5D	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CIVIC 5D	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CIVIC 5D	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CIVIC 5D	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CIVIC 5D	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CIVIC 5D	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CIVIC 5D	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CIVIC 5D	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CIVIC 5D	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CIVIC 5D	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CIVIC 5D	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CIVIC 5D	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CIVIC 5D	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CIVIC 5D	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CIVIC 5D	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CIVIC 5D	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CIVIC 5D	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CIVIC 5D	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CIVIC 5D	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CIVIC 5D	/	IMA	M63	Read ECU Information	
CIVIC 5D	/	IMA	M63	Read codes	
CIVIC 5D	/	IMA	M63	Erase Codes	
CIVIC 5D	/	IMA	M63	Read Freeze Frame Data	
CIVIC 5D	/	IMA	M63	Read Live Data	
CIVIC 5D	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CIVIC 5D	/	IMA	M63	Adjustment	SOC PRESET
CIVIC 5D	/	IMA	M64	Read ECU Information	
CIVIC 5D	/	IMA	M64	Read codes	
CIVIC 5D	/	IMA	M64	Erase Codes	
CIVIC 5D	/	IMA	M64	Read Freeze Frame Data	
CIVIC 5D	/	IMA	M64	Read Live Data	
CIVIC 5D	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CIVIC 5D	/	IMA	M64	Adjustment	SOC PRESET
CIVIC 5D	/	IMA	M65	Read ECU Information	
CIVIC 5D	/	IMA	M65	Read codes	
CIVIC 5D	/	IMA	M65	Erase Codes	
CIVIC 5D	/	IMA	M65	Read Freeze Frame Data	
CIVIC 5D	/	IMA	M65	Read Live Data	
CIVIC 5D	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CIVIC 5D	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CIVIC 5D	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CIVIC 5D	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CIVIC 5D	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CIVIC 5D	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CIVIC 5D	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CIVIC 5D	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CIVIC 5D	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CIVIC 5D	/	Night Vision System (INVS)	0XB1	Read codes	
CIVIC 5D	/	Night Vision System (INVS)	0XB1	Erase Codes	
CIVIC 5D	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CIVIC 5D	/	Night Vision System (INVS)	0XB1	Read Live Data	

CIVIC 5D	/	Night Vision System (INVS)	0XB1	Adjustment	
CIVIC 5D	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CIVIC 5D	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CIVIC 5D	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CIVIC 5D	/	i-SHIFT	0XB0	Read ECU Information	
CIVIC 5D	/	i-SHIFT	0XB0	Read codes	
CIVIC 5D	/	i-SHIFT	0XB0	Erase Codes	
CIVIC 5D	/	i-SHIFT	0XB0	Read Live Data	
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Read codes	
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Self Check	
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	History Data	
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CIVIC 5D	/	Keyless Entry Control System (KAS)	M99	Registration	
CIVIC 5D	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CIVIC 5D	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CIVIC 5D	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CIVIC 5D	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CIVIC 5D	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CIVIC 5D	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CIVIC 5D	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CIVIC 5D	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
CIVIC 5D	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
CIVIC 5D	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
CIVIC 5D	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
CIVIC 5D	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
CIVIC 5D	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
CIVIC 5D	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
CIVIC 5D	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
CIVIC 5D	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
CIVIC 5D	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
CIVIC 5D	/	Management ECU Module (ME)	M74	Read ECU Information	
CIVIC 5D	/	Management ECU Module (ME)	M74	Read codes	
CIVIC 5D	/	Management ECU Module (ME)	M74	Erase Codes	
CIVIC 5D	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CIVIC 5D	/	Management ECU Module (ME)	M74	Read Live Data	
CIVIC 5D	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read ECU Information	
CIVIC 5D	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read codes	
CIVIC 5D	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Erase Codes	
CIVIC 5D	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read Live Data	
CIVIC 5D	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	

CIVIC 5D	/	Multi-view camera system (MVCS)	M7A	Read codes	
CIVIC 5D	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CIVIC 5D	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CIVIC 5D	/	Multi-view camera system (MVCS)	M7A	Customization	
CIVIC 5D	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CIVIC 5D	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CIVIC 5D	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CIVIC 5D	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CIVIC 5D	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CIVIC 5D	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CIVIC 5D	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CIVIC 5D	/	Power Control Unit (PCU)	M83	Read ECU Information	
CIVIC 5D	/	Power Control Unit (PCU)	M83	Read codes	
CIVIC 5D	/	Power Control Unit (PCU)	M83	Erase Codes	
CIVIC 5D	/	Power Control Unit (PCU)	M83	Read Live Data	
CIVIC 5D	/	Power Control Unit (PCU)	M83	Self Check	
CIVIC 5D	/	Power Control Unit (PCU)	M83	History Data	
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Read codes	
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CIVIC 5D	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	Read codes	
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CIVIC 5D	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Read codes	
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CIVIC 5D	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CIVIC 5D	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	

CIVIC 5D	/	Four-wheel precision steering control system (PAWSC M96	Erase Codes
CIVIC 5D	/	Four-wheel precision steering control system (PAWSC M96	Read Live Data
CIVIC 5D	/	PSR M27	Read ECU Information
CIVIC 5D	/	PSR M27	Read codes
CIVIC 5D	/	PSR M27	Erase Codes
CIVIC 5D	/	PSR M27	Read Live Data
CIVIC 5D	/	Pedestrian Collision Protection System (PUH) M8C	Read ECU Information
CIVIC 5D	/	Pedestrian Collision Protection System (PUH) M8C	Read codes
CIVIC 5D	/	Pedestrian Collision Protection System (PUH) M8C	Erase Codes
CIVIC 5D	/	Pedestrian Collision Protection System (PUH) M8C	Read Live Data
CIVIC 5D	/	Pedestrian Collision Protection System (PUH) M8C	Miscellaneous Test
CIVIC 5D	/	Real-time four-wheel drive / intelligent control drive s M3A	WARNING DISPLAY FORCE ACTIVATION
CIVIC 5D	/	Real-time four-wheel drive / intelligent control drive s M3A	Read codes
CIVIC 5D	/	Real-time four-wheel drive / intelligent control drive s M3A	Erase Codes
CIVIC 5D	/	Real-time four-wheel drive / intelligent control drive s M3A	Read Freeze Frame Data
CIVIC 5D	/	Real-time four-wheel drive / intelligent control drive s M3A	Read Live Data
CIVIC 5D	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment
CIVIC 5D	/	Real-time four-wheel drive / intelligent control drive s M3A	E-DPS Control Module Replacement
CIVIC 5D	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment
CIVIC 5D	/	Real-time four-wheel drive / intelligent control drive s M3A	Longitudinal G Sensor Learning
CIVIC 5D	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read ECU Information
CIVIC 5D	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read codes
CIVIC 5D	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Erase Codes
CIVIC 5D	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read Live Data
CIVIC 5D	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Adjustment
CIVIC 5D	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test
CIVIC 5D	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Monitor and Alarm
CIVIC 5D	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Display Rear Camera output image
CIVIC 5D	/	Remote starter (RS) M90	System Check
CIVIC 5D	/	Remote starter (RS) M90	HISTORY
CIVIC 5D	/	Remote starter (RS) M90	Registration
CIVIC 5D	/	Seat load cell (SWS) M6F	Read ECU Information
CIVIC 5D	/	Seat load cell (SWS) M6F	Read codes
CIVIC 5D	/	Seat load cell (SWS) M6F	Erase Codes
CIVIC 5D	/	Seat load cell (SWS) M6F	Read Live Data
CIVIC 5D	/	Seat load cell (SWS) M6F	System Check
CIVIC 5D	/	Seat load cell (SWS) M6F	SWS DTC CHECK
CIVIC 5D	/	Seat load cell (SWS) M6F	System Check
CIVIC 5D	/	Seat load cell (SWS) M6F	Seat Output Check
CIVIC 5D	/	Seat load cell (SWS) M6F	AFTER A VEHICLE COLLISION
CIVIC 5D	/	Seat load cell (SWS) M6F	System Check
CIVIC 5D	/	Seat load cell (SWS) M6F	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
CIVIC 5D	/	Seat load cell (SWS) M6F	Adjustment
CIVIC 5D	/	Seat load cell (SWS) M6F	ODS Unit Initialization
CIVIC 5D	/	Seat load cell (SWS) M6F	Adjustment
CIVIC 5D	/	Seat load cell (SWS) M6F	OPDS Initialization
CIVIC 5D	/	Seat load cell (SWS) M6F	SWS Initialization
CIVIC 5D	/	Seat load cell (SWS) M6F	Adjustment
CIVIC 5D	/	Seat load cell (SWS) M6F	E-Pretensioner For CMBS (CMS)
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M29	Read ECU Information
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M29	Read codes
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M29	Erase Codes
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M29	Readiness Codes
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M29	Read Freeze Frame Data
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M29	ECM/PCM Reset
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M29	Read Live Data
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M29	Inspection
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M29	Adjustment
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M29	VIN CHECK
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M29	Replace ECM/PCM
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Read ECU Information
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Read codes
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Erase Codes
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Read Freeze Frame Data
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Read Live Data
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Shift Solenoid Test
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Acceleration Device Test
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Clutch Coil Test
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Differential Torque
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Steering Angle Sensor
CIVIC 5D	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M ALL Sensor
CIVIC 5D	/	Groove track drive unit (SLOT ECU) M98	Read ECU Information
CIVIC 5D	/	Groove track drive unit (SLOT ECU) M98	Read codes
CIVIC 5D	/	Groove track drive unit (SLOT ECU) M98	Erase Codes
CIVIC 5D	/	Groove track drive unit (SLOT ECU) M98	Read Live Data
CIVIC 5D	/	Groove track drive unit (SLOT ECU) M98	Self Check
CIVIC 5D	/	Groove track drive unit (SLOT ECU) M98	History Data
CIVIC 5D	/	Groove track drive unit (SLOT ECU) M98	System Information
CIVIC 5D	/	Airbag Control System (SRS) M9F	Read ECU Information
CIVIC 5D	/	Airbag Control System (SRS) M9F	Read codes
CIVIC 5D	/	Airbag Control System (SRS) M9F	Erase Codes
CIVIC 5D	/	Airbag Control System (SRS) M9F	Read Live Data
CIVIC 5D	/	Airbag Control System (SRS) MA0	Read ECU Information
CIVIC 5D	/	Airbag Control System (SRS) MA0	Read codes
CIVIC 5D	/	Airbag Control System (SRS) MA0	Erase Codes
CIVIC 5D	/	Airbag Control System (SRS) MA0	Read Live Data
CIVIC 5D	/	Airbag Control System (SRS) MA1	Read ECU Information
CIVIC 5D	/	Airbag Control System (SRS) MA1	Read codes
CIVIC 5D	/	Airbag Control System (SRS) MA1	Erase Codes
CIVIC 5D	/	Airbag Control System (SRS) MA1	Read Live Data
CIVIC 5D	/	Airbag Control System (SRS) MA1	Miscellaneous Test
CIVIC 5D	/	Airbag Control System (SRS) MA1	OPDS Initialization
CIVIC 5D	/	Airbag Control System (SRS) MA1	Miscellaneous Test
CIVIC 5D	/	Airbag Control System (SRS) M2A	Blinking Side Airbag Indicator Light
CIVIC 5D	/	Airbag Control System (SRS) M2A	Read codes
CIVIC 5D	/	Airbag Control System (SRS) M2A	Erase Codes
CIVIC 5D	/	Airbag Control System (SRS) M2A	Read Live Data
CIVIC 5D	/	Airbag Control System (SRS) M9C	Read ECU Information
CIVIC 5D	/	Airbag Control System (SRS) M9C	Read codes
CIVIC 5D	/	Airbag Control System (SRS) M9C	Erase Codes
CIVIC 5D	/	Airbag Control System (SRS) M9C	Read Live Data
CIVIC 5D	/	Airbag Control System (SRS) M9D	Read ECU Information
CIVIC 5D	/	Airbag Control System (SRS) M9D	Read codes

CIVIC 5D	/	Airbag Control System (SRS)	M9D	Erase Codes	
CIVIC 5D	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CIVIC 5D	/	Airbag Control System (SRS)	M9D	Read Live Data	
CIVIC 5D	/	Airbag Control System (SRS)	M9D	Parameter Information	
CIVIC 5D	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CIVIC 5D	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CIVIC 5D	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CIVIC 5D	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CIVIC 5D	/	Airbag Control System (SRS)	M9D	Function Test	
CIVIC 5D	/	Airbag Control System (SRS)	M9D	System Information	
CIVIC 5D	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CIVIC 5D	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CIVIC 5D	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CIVIC 5D	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CIVIC 5D	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CIVIC 5D	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CIVIC 5D	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CIVIC 5D	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CIVIC 5D	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CIVIC 5D	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CIVIC 5D	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CIVIC 5D	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CIVIC 5D	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CIVIC 5D	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CIVIC 5D	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CIVIC 5D	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CIVIC 5D	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CIVIC 5D	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CIVIC 5D	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CIVIC AERO.	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CIVIC AERO.	/	Four-wheel steering control system (4WS)	M52	Read codes	
CIVIC AERO.	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CIVIC AERO.	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CIVIC AERO.	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CIVIC AERO.	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CIVIC AERO.	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CIVIC AERO.	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CIVIC AERO.	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CIVIC AERO.	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CIVIC AERO.	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	Read codes	
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CIVIC AERO.	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CIVIC AERO.	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CIVIC AERO.	/	Automatic shift control system (A/T)	M3B	Read codes	
CIVIC AERO.	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CIVIC AERO.	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CIVIC AERO.	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CIVIC AERO.	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CIVIC AERO.	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CIVIC AERO.	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CIVIC AERO.	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CIVIC AERO.	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CIVIC AERO.	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CIVIC AERO.	/	Automatic shift control system (A/T)	M3C	Read codes	
CIVIC AERO.	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Read codes	
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Erase Codes	
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Read Live Data	
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B

CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC AERO.	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CIVIC AERO.	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CIVIC AERO.	/	Automatic shift control system (A/T)	M82	Read codes	
CIVIC AERO.	/	Automatic shift control system (A/T)	M82	Erase Codes	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
CIVIC AERO.	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CIVIC AERO.	/	Active Engine Control Support System (ACM)	M06	Read codes	
CIVIC AERO.	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
CIVIC AERO.	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CIVIC AERO.	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
CIVIC AERO.	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
CIVIC AERO.	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CIVIC AERO.	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CIVIC AERO.	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CIVIC AERO.	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CIVIC AERO.	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CIVIC AERO.	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
CIVIC AERO.	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CIVIC AERO.	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
CIVIC AERO.	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
CIVIC AERO.	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
CIVIC AERO.	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
CIVIC AERO.	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
CIVIC AERO.	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
CIVIC AERO.	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
CIVIC AERO.	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
CIVIC AERO.	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
CIVIC AERO.	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
CIVIC AERO.	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
CIVIC AERO.	/	Transmission Control System (AT)	M18	Read ECU Information	
CIVIC AERO.	/	Transmission Control System (AT)	M18	Read codes	
CIVIC AERO.	/	Transmission Control System (AT)	M18	Erase Codes	
CIVIC AERO.	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
CIVIC AERO.	/	Transmission Control System (AT)	M18	Read Live Data	
CIVIC AERO.	/	Transmission Control System (AT)	M18	Adjustment	
CIVIC AERO.	/	Active Torque Converter Control System (ATTTS)	M0E	Read ECU Information	
CIVIC AERO.	/	Active Torque Converter Control System (ATTTS)	M0E	Read codes	
CIVIC AERO.	/	Active Torque Converter Control System (ATTTS)	M0E	Erase Codes	
CIVIC AERO.	/	Active Torque Converter Control System (ATTTS)	M0E	Read Freeze Frame Data	
CIVIC AERO.	/	Active Torque Converter Control System (ATTTS)	M0E	Read Live Data	
CIVIC AERO.	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
CIVIC AERO.	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	STEERING ANGLE
CIVIC AERO.	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CIVIC AERO.	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ALL SENSORS
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year



CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CIVIC AERO.	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CIVIC AERO.	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CIVIC AERO.	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
CIVIC AERO.	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
CIVIC AERO.	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CIVIC AERO.	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CIVIC AERO.	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
CIVIC AERO.	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
CIVIC AERO.	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
CIVIC AERO.	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
CIVIC AERO.	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
CIVIC AERO.	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CIVIC AERO.	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CIVIC AERO.	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CIVIC AERO.	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CIVIC AERO.	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CIVIC AERO.	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CIVIC AERO.	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CIVIC AERO.	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CIVIC AERO.	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CIVIC AERO.	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CIVIC AERO.	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CIVIC AERO.	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CIVIC AERO.	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CIVIC AERO.	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	

CIVIC AERO.	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CIVIC AERO.	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CIVIC AERO.	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CIVIC AERO.	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CIVIC AERO.	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CIVIC AERO.	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CIVIC AERO.	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CIVIC AERO.	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CIVIC AERO.	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CIVIC AERO.	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CIVIC AERO.	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CIVIC AERO.	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CIVIC AERO.	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CIVIC AERO.	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CIVIC AERO.	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CIVIC AERO.	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CIVIC AERO.	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CIVIC AERO.	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Security	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CIVIC AERO.	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CIVIC AERO.	/	BODY ELECTRICAL/Security	MFF	History Data	
CIVIC AERO.	/	BODY ELECTRICAL/Security	MFF	History Clear	
CIVIC AERO.	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CIVIC AERO.	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CIVIC AERO.	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC AERO.	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CIVIC AERO.	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC AERO.	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	

CIVIC AERO.	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CIVIC AERO.	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CIVIC AERO.	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CIVIC AERO.	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CIVIC AERO.	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CIVIC AERO.	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CIVIC AERO.	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CIVIC AERO.	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CIVIC AERO.	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CIVIC AERO.	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CIVIC AERO.	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CIVIC AERO.	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CIVIC AERO.	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CIVIC AERO.	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CIVIC AERO.	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CIVIC AERO.	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CIVIC AERO.	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CIVIC AERO.	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CIVIC AERO.	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CIVIC AERO.	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CIVIC AERO.	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CIVIC AERO.	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CIVIC AERO.	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CIVIC AERO.	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CIVIC AERO.	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Read ECU Information	
CIVIC AERO.	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Read codes	
CIVIC AERO.	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Erase Codes	
CIVIC AERO.	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Read Freeze Frame Data	
CIVIC AERO.	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Read Live Data	
CIVIC AERO.	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CIVIC AERO.	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
CIVIC AERO.	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
CIVIC AERO.	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
CIVIC AERO.	/	DBW	M34	Read ECU Information	
CIVIC AERO.	/	DBW	M34	Read codes	
CIVIC AERO.	/	DBW	M34	Erase Codes	
CIVIC AERO.	/	DBW	M34	Read Freeze Frame Data	
CIVIC AERO.	/	DBW	M34	Read Live Data	
CIVIC AERO.	/	DBW	M34	Inspection	Idle Speed Adjust
CIVIC AERO.	/	DBW	M34	Inspection	Throttle Test
CIVIC AERO.	/	DBW	M34	ECM Reset	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	

CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CIVIC AERO.	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CIVIC AERO.	/	Capacitor Control System (EDLC)	M12	Read codes	
CIVIC AERO.	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CIVIC AERO.	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CIVIC AERO.	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CIVIC AERO.	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CIVIC AERO.	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CIVIC AERO.	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CIVIC AERO.	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CIVIC AERO.	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CIVIC AERO.	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CIVIC AERO.	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CIVIC AERO.	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CIVIC AERO.	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CIVIC AERO.	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CIVIC AERO.	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CIVIC AERO.	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CIVIC AERO.	/	Electric Powertrain / IMA	M66	Read ECU Information	
CIVIC AERO.	/	Electric Powertrain / IMA	M66	Read codes	
CIVIC AERO.	/	Electric Powertrain / IMA	M66	Erase Codes	
CIVIC AERO.	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CIVIC AERO.	/	Electric Powertrain / IMA	M66	Read Live Data	
CIVIC AERO.	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CIVIC AERO.	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CIVIC AERO.	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CIVIC AERO.	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CIVIC AERO.	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CIVIC AERO.	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CIVIC AERO.	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CIVIC AERO.	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CIVIC AERO.	/	Electronic Pretensioner Control System (EPSCS)	M41	Read ECU Information	
CIVIC AERO.	/	Electronic Pretensioner Control System (EPSCS)	M41	Read codes	
CIVIC AERO.	/	Electronic Pretensioner Control System (EPSCS)	M41	Erase Codes	
CIVIC AERO.	/	Electronic Pretensioner Control System (EPSCS)	M41	Read Live Data	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	

CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CIVIC AERO.	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CIVIC AERO.	/	New energy battery (EV)	M44	Read ECU Information	
CIVIC AERO.	/	New energy battery (EV)	M44	Read codes	
CIVIC AERO.	/	New energy battery (EV)	M44	Erase Codes	
CIVIC AERO.	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CIVIC AERO.	/	New energy battery (EV)	M44	Read Live Data	
CIVIC AERO.	/	New energy battery (EV)	M44	Inspection	
CIVIC AERO.	/	New energy battery (EV)	M44	Adjustment	
CIVIC AERO.	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CIVIC AERO.	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CIVIC AERO.	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CIVIC AERO.	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CIVIC AERO.	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CIVIC AERO.	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CIVIC AERO.	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CIVIC AERO.	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CIVIC AERO.	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CIVIC AERO.	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CIVIC AERO.	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CIVIC AERO.	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CIVIC AERO.	/	FCW LDW	M4E	Read ECU Information	
CIVIC AERO.	/	FCW LDW	M4E	Read codes	
CIVIC AERO.	/	FCW LDW	M4E	Erase Codes	
CIVIC AERO.	/	FCW LDW	M4E	Read Live Data	
CIVIC AERO.	/	FCW LDW	M4E	Function Test	FCW Drive
CIVIC AERO.	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CIVIC AERO.	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CIVIC AERO.	/	FCW LDW	M4E	Function Test	Indicator Drive
CIVIC AERO.	/	FCW LDW	M4E	Adjustment	
CIVIC AERO.	/	Instrument Display System (GAUGE)	M2C	Read codes	
CIVIC AERO.	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CIVIC AERO.	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Read codes	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Read codes	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Read codes	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Read codes	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid

CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CIVIC AERO.	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CIVIC AERO.	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CIVIC AERO.	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CIVIC AERO.	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CIVIC AERO.	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CIVIC AERO.	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CIVIC AERO.	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CIVIC AERO.	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CIVIC AERO.	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CIVIC AERO.	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CIVIC AERO.	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CIVIC AERO.	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CIVIC AERO.	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CIVIC AERO.	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CIVIC AERO.	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CIVIC AERO.	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CIVIC AERO.	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CIVIC AERO.	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CIVIC AERO.	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CIVIC AERO.	/	IMA	M63	Read ECU Information	
CIVIC AERO.	/	IMA	M63	Read codes	
CIVIC AERO.	/	IMA	M63	Erase Codes	
CIVIC AERO.	/	IMA	M63	Read Freeze Frame Data	
CIVIC AERO.	/	IMA	M63	Read Live Data	
CIVIC AERO.	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CIVIC AERO.	/	IMA	M63	Adjustment	SOC PRESET
CIVIC AERO.	/	IMA	M64	Read ECU Information	
CIVIC AERO.	/	IMA	M64	Read codes	
CIVIC AERO.	/	IMA	M64	Erase Codes	
CIVIC AERO.	/	IMA	M64	Read Freeze Frame Data	
CIVIC AERO.	/	IMA	M64	Read Live Data	
CIVIC AERO.	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CIVIC AERO.	/	IMA	M64	Adjustment	SOC PRESET
CIVIC AERO.	/	IMA	M65	Read ECU Information	
CIVIC AERO.	/	IMA	M65	Read codes	
CIVIC AERO.	/	IMA	M65	Erase Codes	
CIVIC AERO.	/	IMA	M65	Read Freeze Frame Data	
CIVIC AERO.	/	IMA	M65	Read Live Data	
CIVIC AERO.	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CIVIC AERO.	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CIVIC AERO.	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CIVIC AERO.	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CIVIC AERO.	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CIVIC AERO.	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CIVIC AERO.	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CIVIC AERO.	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CIVIC AERO.	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CIVIC AERO.	/	Night Vision System (INVS)	0XB1	Read codes	
CIVIC AERO.	/	Night Vision System (INVS)	0XB1	Erase Codes	
CIVIC AERO.	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CIVIC AERO.	/	Night Vision System (INVS)	0XB1	Read Live Data	
CIVIC AERO.	/	Night Vision System (INVS)	0XB1	Adjustment	
CIVIC AERO.	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CIVIC AERO.	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CIVIC AERO.	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CIVIC AERO.	/	i-SHIFT	0XB0	Read ECU Information	
CIVIC AERO.	/	i-SHIFT	0XB0	Read codes	
CIVIC AERO.	/	i-SHIFT	0XB0	Erase Codes	
CIVIC AERO.	/	i-SHIFT	0XB0	Read Live Data	
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Read codes	
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Self Check	
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	History Data	
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving

CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CIVIC AERO.	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CIVIC AERO.	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Registration	
CIVIC AERO.	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CIVIC AERO.	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CIVIC AERO.	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CIVIC AERO.	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CIVIC AERO.	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CIVIC AERO.	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CIVIC AERO.	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CIVIC AERO.	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CIVIC AERO.	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CIVIC AERO.	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CIVIC AERO.	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CIVIC AERO.	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CIVIC AERO.	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CIVIC AERO.	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CIVIC AERO.	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CIVIC AERO.	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CIVIC AERO.	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CIVIC AERO.	/	Management ECU Module (ME)	M74	Read ECU Information	
CIVIC AERO.	/	Management ECU Module (ME)	M74	Read codes	
CIVIC AERO.	/	Management ECU Module (ME)	M74	Erase Codes	
CIVIC AERO.	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CIVIC AERO.	/	Management ECU Module (ME)	M74	Read Live Data	
CIVIC AERO.	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CIVIC AERO.	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CIVIC AERO.	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CIVIC AERO.	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CIVIC AERO.	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CIVIC AERO.	/	Multi-view camera system (MVCS)	M7A	Read codes	
CIVIC AERO.	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CIVIC AERO.	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CIVIC AERO.	/	Multi-view camera system (MVCS)	M7A	Customization	
CIVIC AERO.	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CIVIC AERO.	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CIVIC AERO.	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CIVIC AERO.	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CIVIC AERO.	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CIVIC AERO.	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CIVIC AERO.	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CIVIC AERO.	/	Power Control Unit (PCU)	M83	Read ECU Information	
CIVIC AERO.	/	Power Control Unit (PCU)	M83	Read codes	
CIVIC AERO.	/	Power Control Unit (PCU)	M83	Erase Codes	
CIVIC AERO.	/	Power Control Unit (PCU)	M83	Read Live Data	
CIVIC AERO.	/	Power Control Unit (PCU)	M83	Self Check	
CIVIC AERO.	/	Power Control Unit (PCU)	M83	History Data	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Read codes	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN

CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	Read codes	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Read codes	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CIVIC AERO.	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CIVIC AERO.	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
CIVIC AERO.	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
CIVIC AERO.	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
CIVIC AERO.	/	PSR	M27	Read ECU Information	
CIVIC AERO.	/	PSR	M27	Read codes	
CIVIC AERO.	/	PSR	M27	Erase Codes	
CIVIC AERO.	/	PSR	M27	Read Live Data	
CIVIC AERO.	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CIVIC AERO.	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CIVIC AERO.	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CIVIC AERO.	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CIVIC AERO.	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CIVIC AERO.	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CIVIC AERO.	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CIVIC AERO.	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CIVIC AERO.	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CIVIC AERO.	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CIVIC AERO.	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CIVIC AERO.	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CIVIC AERO.	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CIVIC AERO.	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CIVIC AERO.	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CIVIC AERO.	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CIVIC AERO.	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CIVIC AERO.	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CIVIC AERO.	/	Remote starter (RS)	M90	System Check	
CIVIC AERO.	/	Remote starter (RS)	M90	HISTORY	
CIVIC AERO.	/	Remote starter (RS)	M90	Registration	
CIVIC AERO.	/	Seat load cell (SWS)	M6F	Read ECU Information	
CIVIC AERO.	/	Seat load cell (SWS)	M6F	Read codes	
CIVIC AERO.	/	Seat load cell (SWS)	M6F	Erase Codes	
CIVIC AERO.	/	Seat load cell (SWS)	M6F	Read Live Data	
CIVIC AERO.	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK



CIVIC AERO.	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CIVIC AERO.	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CIVIC AERO.	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
CIVIC AERO.	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CIVIC AERO.	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CIVIC AERO.	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CIVIC AERO.	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CIVIC AERO.	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CIVIC AERO.	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CIVIC AERO.	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CIVIC AERO.	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CIVIC AERO.	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CIVIC AERO.	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CIVIC AERO.	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CIVIC AERO.	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CIVIC AERO.	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CIVIC AERO.	/	Airbag Control System (SRS)	M9F	Read codes	
CIVIC AERO.	/	Airbag Control System (SRS)	M9F	Erase Codes	
CIVIC AERO.	/	Airbag Control System (SRS)	M9F	Read Live Data	
CIVIC AERO.	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CIVIC AERO.	/	Airbag Control System (SRS)	MA0	Read codes	
CIVIC AERO.	/	Airbag Control System (SRS)	MA0	Erase Codes	
CIVIC AERO.	/	Airbag Control System (SRS)	MA0	Read Live Data	
CIVIC AERO.	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CIVIC AERO.	/	Airbag Control System (SRS)	MA1	Read codes	
CIVIC AERO.	/	Airbag Control System (SRS)	MA1	Erase Codes	
CIVIC AERO.	/	Airbag Control System (SRS)	MA1	Read Live Data	
CIVIC AERO.	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CIVIC AERO.	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CIVIC AERO.	/	Airbag Control System (SRS)	M2A	Read codes	
CIVIC AERO.	/	Airbag Control System (SRS)	M2A	Erase Codes	
CIVIC AERO.	/	Airbag Control System (SRS)	M2A	Read Live Data	
CIVIC AERO.	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CIVIC AERO.	/	Airbag Control System (SRS)	M9C	Read codes	
CIVIC AERO.	/	Airbag Control System (SRS)	M9C	Erase Codes	
CIVIC AERO.	/	Airbag Control System (SRS)	M9C	Read Live Data	
CIVIC AERO.	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CIVIC AERO.	/	Airbag Control System (SRS)	M9D	Read codes	
CIVIC AERO.	/	Airbag Control System (SRS)	M9D	Erase Codes	
CIVIC AERO.	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CIVIC AERO.	/	Airbag Control System (SRS)	M9D	Read Live Data	
CIVIC AERO.	/	Airbag Control System (SRS)	M9D	Parameter Information	
CIVIC AERO.	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CIVIC AERO.	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CIVIC AERO.	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CIVIC AERO.	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CIVIC AERO.	/	Airbag Control System (SRS)	M9D	Function Test	
CIVIC AERO.	/	Airbag Control System (SRS)	M9D	System Information	
CIVIC AERO.	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CIVIC AERO.	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CIVIC AERO.	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CIVIC AERO.	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CIVIC AERO.	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CIVIC AERO.	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CIVIC AERO.	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CIVIC AERO.	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CIVIC AERO.	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CIVIC AERO.	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	

CIVIC AERO.	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CIVIC AERO.	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CIVIC AERO.	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CIVIC AERO.	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CIVIC AERO.	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CIVIC AERO.	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CIVIC AERO.	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CIVIC AERO.	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CIVIC AERO.	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CIVIC COUPE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CIVIC COUPE	/	Four-wheel steering control system (4WS)	M52	Read codes	
CIVIC COUPE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CIVIC COUPE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CIVIC COUPE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CIVIC COUPE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CIVIC COUPE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CIVIC COUPE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CIVIC COUPE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CIVIC COUPE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CIVIC COUPE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	Read codes	
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CIVIC COUPE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CIVIC COUPE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CIVIC COUPE	/	Automatic shift control system (A/T)	M3B	Read codes	
CIVIC COUPE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CIVIC COUPE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CIVIC COUPE	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CIVIC COUPE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CIVIC COUPE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CIVIC COUPE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CIVIC COUPE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CIVIC COUPE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CIVIC COUPE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CIVIC COUPE	/	Automatic shift control system (A/T)	M3C	Read codes	
CIVIC COUPE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Read codes	
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Erase Codes	
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Read Live Data	
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC COUPE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CIVIC COUPE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CIVIC COUPE	/	Automatic shift control system (A/T)	M82	Read codes	
CIVIC COUPE	/	Automatic shift control system (A/T)	M82	Erase Codes	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
CIVIC COUPE	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CIVIC COUPE	/	Active Engine Control Support System (ACM)	M06	Read codes	
CIVIC COUPE	/	Active Engine Control Support System (ACM)	M06	Erase Codes	

CIVIC COUPE	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CIVIC COUPE	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
CIVIC COUPE	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
CIVIC COUPE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CIVIC COUPE	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CIVIC COUPE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CIVIC COUPE	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CIVIC COUPE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CIVIC COUPE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
CIVIC COUPE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CIVIC COUPE	/	Active / Automatic Shock Absorber Control System (A MOD)		Read ECU Information	
CIVIC COUPE	/	Active / Automatic Shock Absorber Control System (A MOD)		Read codes	
CIVIC COUPE	/	Active / Automatic Shock Absorber Control System (A MOD)		Erase Codes	
CIVIC COUPE	/	Active / Automatic Shock Absorber Control System (A MOD)		Read Freeze Frame Data	
CIVIC COUPE	/	Active / Automatic Shock Absorber Control System (A MOD)		Read Live Data	
CIVIC COUPE	/	Active / Automatic Shock Absorber Control System (A MOD)		Function Test	Damper Force Operation Test
CIVIC COUPE	/	Active / Automatic Shock Absorber Control System (A MOD)		Adjustment	Damper Stroke Calibration
CIVIC COUPE	/	Active / Automatic Shock Absorber Control System (A M1A)		Read codes	
CIVIC COUPE	/	Active / Automatic Shock Absorber Control System (A M1A)		Erase Codes	
CIVIC COUPE	/	Active / Automatic Shock Absorber Control System (A M1A)		Read Live Data	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Read codes	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Erase Codes	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Read Freeze Frame Data	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Read Live Data	
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	ACC Brake (Brake Actuator)
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	CMBS Brake
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Brake Light (ACC Relay)
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Indicator Light
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Information Display
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Alarm Test
CIVIC COUPE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Adjustment	Radar aiming
CIVIC COUPE	/	Transmission Control System (AT)	M18	Read ECU Information	
CIVIC COUPE	/	Transmission Control System (AT)	M18	Read codes	
CIVIC COUPE	/	Transmission Control System (AT)	M18	Erase Codes	
CIVIC COUPE	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
CIVIC COUPE	/	Transmission Control System (AT)	M18	Read Live Data	
CIVIC COUPE	/	Transmission Control System (AT)	M18	Adjustment	
CIVIC COUPE	/	Active Torque Converter Control System (ATTTS)	M0E	Read ECU Information	
CIVIC COUPE	/	Active Torque Converter Control System (ATTTS)	M0E	Read codes	
CIVIC COUPE	/	Active Torque Converter Control System (ATTTS)	M0E	Erase Codes	
CIVIC COUPE	/	Active Torque Converter Control System (ATTTS)	M0E	Read Freeze Frame Data	
CIVIC COUPE	/	Active Torque Converter Control System (ATTTS)	M0E	Read Live Data	
CIVIC COUPE	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
CIVIC COUPE	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	STEERING ANGLE
CIVIC COUPE	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CIVIC COUPE	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ALL SENSORS
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CIVIC COUPE	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CIVIC COUPE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CIVIC COUPE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Function Test	Oncoming Vehicle Detection
CIVIC COUPE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Function Test	Preceding Vehicle Detection
CIVIC COUPE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CIVIC COUPE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CIVIC COUPE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Reset Operation
CIVIC COUPE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Returning Operation
CIVIC COUPE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Automatic Returning Distance
CIVIC COUPE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Manual Returning Time
CIVIC COUPE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Reset to default
CIVIC COUPE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CIVIC COUPE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CIVIC COUPE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CIVIC COUPE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door

CIVIC COUPE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CIVIC COUPE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CIVIC COUPE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CIVIC COUPE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CIVIC COUPE	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CIVIC COUPE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CIVIC COUPE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CIVIC COUPE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CIVIC COUPE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CIVIC COUPE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CIVIC COUPE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CIVIC COUPE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CIVIC COUPE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CIVIC COUPE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CIVIC COUPE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator

CIVIC COUPE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CIVIC COUPE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CIVIC COUPE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CIVIC COUPE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CIVIC COUPE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CIVIC COUPE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CIVIC COUPE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CIVIC COUPE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CIVIC COUPE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CIVIC COUPE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CIVIC COUPE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CIVIC COUPE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Security	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CIVIC COUPE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CIVIC COUPE	/	BODY ELECTRICAL/Security	MFF	History Data	
CIVIC COUPE	/	BODY ELECTRICAL/Security	MFF	History Clear	
CIVIC COUPE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CIVIC COUPE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CIVIC COUPE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC COUPE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CIVIC COUPE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC COUPE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CIVIC COUPE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CIVIC COUPE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CIVIC COUPE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CIVIC COUPE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CIVIC COUPE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CIVIC COUPE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CIVIC COUPE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CIVIC COUPE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CIVIC COUPE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CIVIC COUPE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CIVIC COUPE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CIVIC COUPE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CIVIC COUPE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CIVIC COUPE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CIVIC COUPE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CIVIC COUPE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	

CIVIC COUPE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CIVIC COUPE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CIVIC COUPE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CIVIC COUPE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CIVIC COUPE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CIVIC COUPE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CIVIC COUPE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CIVIC COUPE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read ECU Information	
CIVIC COUPE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read codes	
CIVIC COUPE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Erase Codes	
CIVIC COUPE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Freeze Frame Data	
CIVIC COUPE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Live Data	
CIVIC COUPE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CIVIC COUPE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	RADAR AIMING
CIVIC COUPE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	CMBS Brake
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		ECMPCM Reset	
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
CIVIC COUPE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
CIVIC COUPE	/	DBW	M34	Read ECU Information	
CIVIC COUPE	/	DBW	M34	Read codes	
CIVIC COUPE	/	DBW	M34	Erase Codes	
CIVIC COUPE	/	DBW	M34	Read Freeze Frame Data	
CIVIC COUPE	/	DBW	M34	Read Live Data	
CIVIC COUPE	/	DBW	M34	Inspection	Idle Speed Adjust
CIVIC COUPE	/	DBW	M34	Inspection	Throttle Test
CIVIC COUPE	/	DBW	M34	ECM Reset	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Read codes	

CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CIVIC COUPE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CIVIC COUPE	/	Capacitor Control System (EDLC)	M12	Read codes	
CIVIC COUPE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CIVIC COUPE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CIVIC COUPE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CIVIC COUPE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CIVIC COUPE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CIVIC COUPE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CIVIC COUPE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CIVIC COUPE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CIVIC COUPE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CIVIC COUPE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CIVIC COUPE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CIVIC COUPE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CIVIC COUPE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CIVIC COUPE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CIVIC COUPE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CIVIC COUPE	/	Electric Powertrain / IMA	M66	Read ECU Information	
CIVIC COUPE	/	Electric Powertrain / IMA	M66	Read codes	
CIVIC COUPE	/	Electric Powertrain / IMA	M66	Erase Codes	
CIVIC COUPE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CIVIC COUPE	/	Electric Powertrain / IMA	M66	Read Live Data	
CIVIC COUPE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CIVIC COUPE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CIVIC COUPE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CIVIC COUPE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CIVIC COUPE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CIVIC COUPE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CIVIC COUPE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CIVIC COUPE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CIVIC COUPE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CIVIC COUPE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CIVIC COUPE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CIVIC COUPE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CIVIC COUPE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CIVIC COUPE	/	New energy battery (EV)	M44	Read ECU Information	
CIVIC COUPE	/	New energy battery (EV)	M44	Read codes	
CIVIC COUPE	/	New energy battery (EV)	M44	Erase Codes	
CIVIC COUPE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CIVIC COUPE	/	New energy battery (EV)	M44	Read Live Data	
CIVIC COUPE	/	New energy battery (EV)	M44	Inspection	
CIVIC COUPE	/	New energy battery (EV)	M44	Adjustment	
CIVIC COUPE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CIVIC COUPE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CIVIC COUPE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CIVIC COUPE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CIVIC COUPE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CIVIC COUPE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CIVIC COUPE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CIVIC COUPE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CIVIC COUPE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CIVIC COUPE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CIVIC COUPE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CIVIC COUPE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1

CIVIC COUPE	/	FCW LDW	M4E	Read ECU Information	
CIVIC COUPE	/	FCW LDW	M4E	Read codes	
CIVIC COUPE	/	FCW LDW	M4E	Erase Codes	
CIVIC COUPE	/	FCW LDW	M4E	Read Live Data	
CIVIC COUPE	/	FCW LDW	M4E	Function Test	FCW Drive
CIVIC COUPE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CIVIC COUPE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CIVIC COUPE	/	FCW LDW	M4E	Function Test	Indicator Drive
CIVIC COUPE	/	FCW LDW	M4E	Adjustment	
CIVIC COUPE	/	Instrument Display System (GAUGE)	M2C	Read codes	
CIVIC COUPE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CIVIC COUPE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Read codes	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Read codes	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Read codes	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Read codes	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CIVIC COUPE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CIVIC COUPE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CIVIC COUPE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CIVIC COUPE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CIVIC COUPE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CIVIC COUPE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CIVIC COUPE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CIVIC COUPE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CIVIC COUPE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CIVIC COUPE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CIVIC COUPE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CIVIC COUPE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CIVIC COUPE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CIVIC COUPE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CIVIC COUPE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CIVIC COUPE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CIVIC COUPE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CIVIC COUPE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CIVIC COUPE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CIVIC COUPE	/	IMA	M63	Read ECU Information	
CIVIC COUPE	/	IMA	M63	Read codes	
CIVIC COUPE	/	IMA	M63	Erase Codes	



CIVIC COUPE	/	IMA	M63	Read Freeze Frame Data	
CIVIC COUPE	/	IMA	M63	Read Live Data	
CIVIC COUPE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CIVIC COUPE	/	IMA	M63	Adjustment	SOC PRESET
CIVIC COUPE	/	IMA	M64	Read ECU Information	
CIVIC COUPE	/	IMA	M64	Read codes	
CIVIC COUPE	/	IMA	M64	Erase Codes	
CIVIC COUPE	/	IMA	M64	Read Freeze Frame Data	
CIVIC COUPE	/	IMA	M64	Read Live Data	
CIVIC COUPE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CIVIC COUPE	/	IMA	M64	Adjustment	SOC PRESET
CIVIC COUPE	/	IMA	M65	Read ECU Information	
CIVIC COUPE	/	IMA	M65	Read codes	
CIVIC COUPE	/	IMA	M65	Erase Codes	
CIVIC COUPE	/	IMA	M65	Read Freeze Frame Data	
CIVIC COUPE	/	IMA	M65	Read Live Data	
CIVIC COUPE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CIVIC COUPE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CIVIC COUPE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CIVIC COUPE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CIVIC COUPE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CIVIC COUPE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CIVIC COUPE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CIVIC COUPE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CIVIC COUPE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CIVIC COUPE	/	Night Vision System (INVS)	0XB1	Read codes	
CIVIC COUPE	/	Night Vision System (INVS)	0XB1	Erase Codes	
CIVIC COUPE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CIVIC COUPE	/	Night Vision System (INVS)	0XB1	Read Live Data	
CIVIC COUPE	/	Night Vision System (INVS)	0XB1	Adjustment	
CIVIC COUPE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CIVIC COUPE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CIVIC COUPE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CIVIC COUPE	/	i-SHIFT	0XB0	Read ECU Information	
CIVIC COUPE	/	i-SHIFT	0XB0	Read codes	
CIVIC COUPE	/	i-SHIFT	0XB0	Erase Codes	
CIVIC COUPE	/	i-SHIFT	0XB0	Read Live Data	
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Read codes	
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Self Check	
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	History Data	
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving

CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CIVIC COUPE	/	Keyless Entry Control System (KAS)	M99	Registration	
CIVIC COUPE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CIVIC COUPE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CIVIC COUPE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CIVIC COUPE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CIVIC COUPE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CIVIC COUPE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CIVIC COUPE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CIVIC COUPE	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CIVIC COUPE	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CIVIC COUPE	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CIVIC COUPE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CIVIC COUPE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CIVIC COUPE	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CIVIC COUPE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CIVIC COUPE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CIVIC COUPE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CIVIC COUPE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CIVIC COUPE	/	Management ECU Module (ME)	M74	Read ECU Information	
CIVIC COUPE	/	Management ECU Module (ME)	M74	Read codes	
CIVIC COUPE	/	Management ECU Module (ME)	M74	Erase Codes	
CIVIC COUPE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CIVIC COUPE	/	Management ECU Module (ME)	M74	Read Live Data	
CIVIC COUPE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CIVIC COUPE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CIVIC COUPE	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CIVIC COUPE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CIVIC COUPE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CIVIC COUPE	/	Multi-view camera system (MVCS)	M7A	Read codes	
CIVIC COUPE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CIVIC COUPE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CIVIC COUPE	/	Multi-view camera system (MVCS)	M7A	Customization	
CIVIC COUPE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CIVIC COUPE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CIVIC COUPE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CIVIC COUPE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CIVIC COUPE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CIVIC COUPE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CIVIC COUPE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CIVIC COUPE	/	Power Control Unit (PCU)	M83	Read ECU Information	
CIVIC COUPE	/	Power Control Unit (PCU)	M83	Read codes	
CIVIC COUPE	/	Power Control Unit (PCU)	M83	Erase Codes	
CIVIC COUPE	/	Power Control Unit (PCU)	M83	Read Live Data	
CIVIC COUPE	/	Power Control Unit (PCU)	M83	Self Check	
CIVIC COUPE	/	Power Control Unit (PCU)	M83	History Data	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Read codes	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	Read codes	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Read codes	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	

CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CIVIC COUPE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CIVIC COUPE	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
CIVIC COUPE	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
CIVIC COUPE	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
CIVIC COUPE	/	PSR	M27	Read ECU Information	
CIVIC COUPE	/	PSR	M27	Read codes	
CIVIC COUPE	/	PSR	M27	Erase Codes	
CIVIC COUPE	/	PSR	M27	Read Live Data	
CIVIC COUPE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CIVIC COUPE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CIVIC COUPE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CIVIC COUPE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CIVIC COUPE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CIVIC COUPE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CIVIC COUPE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CIVIC COUPE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CIVIC COUPE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CIVIC COUPE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CIVIC COUPE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CIVIC COUPE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CIVIC COUPE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CIVIC COUPE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CIVIC COUPE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CIVIC COUPE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CIVIC COUPE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CIVIC COUPE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CIVIC COUPE	/	Remote starter (RS)	M90	System Check	
CIVIC COUPE	/	Remote starter (RS)	M90	HISTORY	
CIVIC COUPE	/	Remote starter (RS)	M90	Registration	
CIVIC COUPE	/	Seat load cell (SWS)	M6F	Read ECU Information	
CIVIC COUPE	/	Seat load cell (SWS)	M6F	Read codes	
CIVIC COUPE	/	Seat load cell (SWS)	M6F	Erase Codes	
CIVIC COUPE	/	Seat load cell (SWS)	M6F	Read Live Data	
CIVIC COUPE	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CIVIC COUPE	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CIVIC COUPE	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CIVIC COUPE	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
CIVIC COUPE	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CIVIC COUPE	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CIVIC COUPE	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CIVIC COUPE	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CIVIC COUPE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CIVIC COUPE	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	

CIVIC COUPE	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CIVIC COUPE	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CIVIC COUPE	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CIVIC COUPE	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CIVIC COUPE	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CIVIC COUPE	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CIVIC COUPE	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CIVIC COUPE	/	Airbag Control System (SRS)	M9F	Read codes	
CIVIC COUPE	/	Airbag Control System (SRS)	M9F	Erase Codes	
CIVIC COUPE	/	Airbag Control System (SRS)	M9F	Read Live Data	
CIVIC COUPE	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CIVIC COUPE	/	Airbag Control System (SRS)	MA0	Read codes	
CIVIC COUPE	/	Airbag Control System (SRS)	MA0	Erase Codes	
CIVIC COUPE	/	Airbag Control System (SRS)	MA0	Read Live Data	
CIVIC COUPE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CIVIC COUPE	/	Airbag Control System (SRS)	MA1	Read codes	
CIVIC COUPE	/	Airbag Control System (SRS)	MA1	Erase Codes	
CIVIC COUPE	/	Airbag Control System (SRS)	MA1	Read Live Data	
CIVIC COUPE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CIVIC COUPE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CIVIC COUPE	/	Airbag Control System (SRS)	M2A	Read codes	
CIVIC COUPE	/	Airbag Control System (SRS)	M2A	Erase Codes	
CIVIC COUPE	/	Airbag Control System (SRS)	M2A	Read Live Data	
CIVIC COUPE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CIVIC COUPE	/	Airbag Control System (SRS)	M9C	Read codes	
CIVIC COUPE	/	Airbag Control System (SRS)	M9C	Erase Codes	
CIVIC COUPE	/	Airbag Control System (SRS)	M9C	Read Live Data	
CIVIC COUPE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CIVIC COUPE	/	Airbag Control System (SRS)	M9D	Read codes	
CIVIC COUPE	/	Airbag Control System (SRS)	M9D	Erase Codes	
CIVIC COUPE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CIVIC COUPE	/	Airbag Control System (SRS)	M9D	Read Live Data	
CIVIC COUPE	/	Airbag Control System (SRS)	M9D	Parameter Information	
CIVIC COUPE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CIVIC COUPE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CIVIC COUPE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CIVIC COUPE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CIVIC COUPE	/	Airbag Control System (SRS)	M9D	Function Test	
CIVIC COUPE	/	Airbag Control System (SRS)	M9D	System Information	
CIVIC COUPE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CIVIC COUPE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CIVIC COUPE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CIVIC COUPE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CIVIC COUPE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CIVIC COUPE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CIVIC COUPE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CIVIC COUPE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CIVIC COUPE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CIVIC COUPE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CIVIC COUPE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CIVIC COUPE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CIVIC COUPE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CIVIC COUPE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CIVIC COUPE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CIVIC COUPE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CIVIC COUPE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CIVIC COUPE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CIVIC COUPE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CIVIC DIESEL	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CIVIC DIESEL	/	Four-wheel steering control system (4WS)	M52	Read codes	
CIVIC DIESEL	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CIVIC DIESEL	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CIVIC DIESEL	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CIVIC DIESEL	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CIVIC DIESEL	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CIVIC DIESEL	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CIVIC DIESEL	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CIVIC DIESEL	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CIVIC DIESEL	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	Read codes	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control

CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CIVIC DIESEL	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3B	Read codes	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3C	Read codes	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Read codes	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Erase Codes	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Read Live Data	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CIVIC DIESEL	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M82	Read codes	
CIVIC DIESEL	/	Automatic shift control system (A/T)	M82	Erase Codes	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
CIVIC DIESEL	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CIVIC DIESEL	/	Active Engine Control Support System (ACM)	M06	Read codes	
CIVIC DIESEL	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
CIVIC DIESEL	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CIVIC DIESEL	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
CIVIC DIESEL	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
CIVIC DIESEL	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CIVIC DIESEL	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CIVIC DIESEL	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CIVIC DIESEL	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CIVIC DIESEL	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CIVIC DIESEL	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
CIVIC DIESEL	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CIVIC DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
CIVIC DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
CIVIC DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
CIVIC DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
CIVIC DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
CIVIC DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
CIVIC DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
CIVIC DIESEL	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
CIVIC DIESEL	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
CIVIC DIESEL	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
CIVIC DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
CIVIC DIESEL	/	Transmission Control System (AT)	M18	Read ECU Information	

CIVIC DIESEL	/	Transmission Control System (AT)	M18	Read codes	
CIVIC DIESEL	/	Transmission Control System (AT)	M18	Erase Codes	
CIVIC DIESEL	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
CIVIC DIESEL	/	Transmission Control System (AT)	M18	Read Live Data	
CIVIC DIESEL	/	Transmission Control System (AT)	M18	Adjustment	
CIVIC DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
CIVIC DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
CIVIC DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
CIVIC DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
CIVIC DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
CIVIC DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CIVIC DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
CIVIC DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CIVIC DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CIVIC DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CIVIC DIESEL	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CIVIC DIESEL	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
CIVIC DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
CIVIC DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CIVIC DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CIVIC DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
CIVIC DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
CIVIC DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
CIVIC DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
CIVIC DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
CIVIC DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CIVIC DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CIVIC DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CIVIC DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CIVIC DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CIVIC DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CIVIC DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CIVIC DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CIVIC DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CIVIC DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CIVIC DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator

CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CIVIC DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CIVIC DIESEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CIVIC DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CIVIC DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CIVIC DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CIVIC DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CIVIC DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CIVIC DIESEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CIVIC DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CIVIC DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CIVIC DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CIVIC DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CIVIC DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CIVIC DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CIVIC DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CIVIC DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CIVIC DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CIVIC DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side

CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CIVIC DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CIVIC DIESEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Security	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CIVIC DIESEL	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CIVIC DIESEL	/	BODY ELECTRICAL/Security	MFF	History Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Security	MFF	History Clear	
CIVIC DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CIVIC DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CIVIC DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CIVIC DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC DIESEL	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CIVIC DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CIVIC DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CIVIC DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CIVIC DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CIVIC DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CIVIC DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CIVIC DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CIVIC DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CIVIC DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CIVIC DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CIVIC DIESEL	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CIVIC DIESEL	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CIVIC DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CIVIC DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CIVIC DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CIVIC DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CIVIC DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CIVIC DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CIVIC DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read ECU Information	
CIVIC DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read codes	
CIVIC DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Erase Codes	
CIVIC DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Freeze Frame Data	
CIVIC DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Live Data	
CIVIC DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
CIVIC DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	RADAR AIMING
CIVIC DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	CMBS Brake
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)



CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	Read codes	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	ECM/PCM Reset	
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
CIVIC DIESEL	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
CIVIC DIESEL	/	DBW M34	Read ECU Information	
CIVIC DIESEL	/	DBW M34	Read codes	
CIVIC DIESEL	/	DBW M34	Erase Codes	
CIVIC DIESEL	/	DBW M34	Read Freeze Frame Data	
CIVIC DIESEL	/	DBW M34	Read Live Data	
CIVIC DIESEL	/	DBW M34	Inspection	Idle Speed Adjust
CIVIC DIESEL	/	DBW M34	Inspection	Throttle Test
CIVIC DIESEL	/	DBW M34	ECM Reset	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M37	Read codes	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Read codes	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
CIVIC DIESEL	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
CIVIC DIESEL	/	Capacitor Control System (EDLC) M12	Read codes	
CIVIC DIESEL	/	Capacitor Control System (EDLC) M12	Erase Codes	
CIVIC DIESEL	/	Capacitor Control System (EDLC) M12	Read Live Data	
CIVIC DIESEL	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge and Charge Test
CIVIC DIESEL	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge for Removal or Disposal
CIVIC DIESEL	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Usage History Clear
CIVIC DIESEL	/	Electronic Brake Control System (EPB) M1F	Read codes	
CIVIC DIESEL	/	Electronic Brake Control System (EPB) M1F	Erase Codes	
CIVIC DIESEL	/	Electronic Brake Control System (EPB) M1F	Read Live Data	
CIVIC DIESEL	/	Electronic Brake Control System (EPB) M1F	Adjustment	Sensor Calibration
CIVIC DIESEL	/	Electronic Brake Control System (EPB) M1F	Adjustment	Brake Pad Maintenance Mode
CIVIC DIESEL	/	Electronic Brake Control System (EPB) M3E	Read ECU Information	
CIVIC DIESEL	/	Electronic Brake Control System (EPB) M3E	Read codes	
CIVIC DIESEL	/	Electronic Brake Control System (EPB) M3E	Erase Codes	
CIVIC DIESEL	/	Electronic Brake Control System (EPB) M3E	Read Live Data	
CIVIC DIESEL	/	Electronic Brake Control System (EPB) M3E	Adjustment	Sensor Calibration

CIVIC DIESEL	/	Electric Powertrain / IMA	M66	Read ECU Information	
CIVIC DIESEL	/	Electric Powertrain / IMA	M66	Read codes	
CIVIC DIESEL	/	Electric Powertrain / IMA	M66	Erase Codes	
CIVIC DIESEL	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CIVIC DIESEL	/	Electric Powertrain / IMA	M66	Read Live Data	
CIVIC DIESEL	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CIVIC DIESEL	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CIVIC DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CIVIC DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CIVIC DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CIVIC DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CIVIC DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CIVIC DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CIVIC DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CIVIC DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CIVIC DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CIVIC DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CIVIC DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CIVIC DIESEL	/	New energy battery (EV)	M44	Read ECU Information	
CIVIC DIESEL	/	New energy battery (EV)	M44	Read codes	
CIVIC DIESEL	/	New energy battery (EV)	M44	Erase Codes	
CIVIC DIESEL	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CIVIC DIESEL	/	New energy battery (EV)	M44	Read Live Data	
CIVIC DIESEL	/	New energy battery (EV)	M44	Inspection	
CIVIC DIESEL	/	New energy battery (EV)	M44	Adjustment	
CIVIC DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CIVIC DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CIVIC DIESEL	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CIVIC DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CIVIC DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CIVIC DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CIVIC DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CIVIC DIESEL	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CIVIC DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CIVIC DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CIVIC DIESEL	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CIVIC DIESEL	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CIVIC DIESEL	/	FCW LDW	M4E	Read ECU Information	
CIVIC DIESEL	/	FCW LDW	M4E	Read codes	
CIVIC DIESEL	/	FCW LDW	M4E	Erase Codes	
CIVIC DIESEL	/	FCW LDW	M4E	Read Live Data	
CIVIC DIESEL	/	FCW LDW	M4E	Function Test	FCW Drive
CIVIC DIESEL	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CIVIC DIESEL	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CIVIC DIESEL	/	FCW LDW	M4E	Function Test	Indicator Drive
CIVIC DIESEL	/	FCW LDW	M4E	Adjustment	
CIVIC DIESEL	/	Instrument Display System (GAUGE)	M2C	Read codes	
CIVIC DIESEL	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CIVIC DIESEL	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Read codes	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Read codes	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid

CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Read codes	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Read codes	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CIVIC DIESEL	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CIVIC DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CIVIC DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CIVIC DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CIVIC DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CIVIC DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CIVIC DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CIVIC DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CIVIC DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CIVIC DIESEL	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CIVIC DIESEL	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CIVIC DIESEL	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CIVIC DIESEL	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CIVIC DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CIVIC DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CIVIC DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CIVIC DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CIVIC DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CIVIC DIESEL	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CIVIC DIESEL	/	IMA	M63	Read ECU Information	
CIVIC DIESEL	/	IMA	M63	Read codes	
CIVIC DIESEL	/	IMA	M63	Erase Codes	
CIVIC DIESEL	/	IMA	M63	Read Freeze Frame Data	
CIVIC DIESEL	/	IMA	M63	Read Live Data	
CIVIC DIESEL	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CIVIC DIESEL	/	IMA	M63	Adjustment	SOC PRESET
CIVIC DIESEL	/	IMA	M64	Read ECU Information	
CIVIC DIESEL	/	IMA	M64	Read codes	
CIVIC DIESEL	/	IMA	M64	Erase Codes	
CIVIC DIESEL	/	IMA	M64	Read Freeze Frame Data	
CIVIC DIESEL	/	IMA	M64	Read Live Data	
CIVIC DIESEL	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CIVIC DIESEL	/	IMA	M64	Adjustment	SOC PRESET
CIVIC DIESEL	/	IMA	M65	Read ECU Information	
CIVIC DIESEL	/	IMA	M65	Read codes	
CIVIC DIESEL	/	IMA	M65	Erase Codes	
CIVIC DIESEL	/	IMA	M65	Read Freeze Frame Data	
CIVIC DIESEL	/	IMA	M65	Read Live Data	
CIVIC DIESEL	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CIVIC DIESEL	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CIVIC DIESEL	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CIVIC DIESEL	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CIVIC DIESEL	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CIVIC DIESEL	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CIVIC DIESEL	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CIVIC DIESEL	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CIVIC DIESEL	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CIVIC DIESEL	/	Night Vision System (INVS)	0XB1	Read codes	
CIVIC DIESEL	/	Night Vision System (INVS)	0XB1	Erase Codes	
CIVIC DIESEL	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CIVIC DIESEL	/	Night Vision System (INVS)	0XB1	Read Live Data	
CIVIC DIESEL	/	Night Vision System (INVS)	0XB1	Adjustment	
CIVIC DIESEL	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CIVIC DIESEL	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test

CIVIC DIESEL	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CIVIC DIESEL	/	i-SHIFT	0XB0	Read ECU Information	
CIVIC DIESEL	/	i-SHIFT	0XB0	Read codes	
CIVIC DIESEL	/	i-SHIFT	0XB0	Erase Codes	
CIVIC DIESEL	/	i-SHIFT	0XB0	Read Live Data	
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Read codes	
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Self Check	
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	History Data	
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CIVIC DIESEL	/	Keyless Entry Control System (KAS)	M99	Registration	
CIVIC DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CIVIC DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CIVIC DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CIVIC DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CIVIC DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CIVIC DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CIVIC DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CIVIC DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CIVIC DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CIVIC DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CIVIC DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CIVIC DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CIVIC DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CIVIC DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CIVIC DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CIVIC DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CIVIC DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CIVIC DIESEL	/	Management ECU Module (ME)	M74	Read ECU Information	
CIVIC DIESEL	/	Management ECU Module (ME)	M74	Read codes	
CIVIC DIESEL	/	Management ECU Module (ME)	M74	Erase Codes	
CIVIC DIESEL	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CIVIC DIESEL	/	Management ECU Module (ME)	M74	Read Live Data	
CIVIC DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CIVIC DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CIVIC DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CIVIC DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CIVIC DIESEL	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CIVIC DIESEL	/	Multi-view camera system (MVCS)	M7A	Read codes	
CIVIC DIESEL	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CIVIC DIESEL	/	Multi-view camera system (MVCS)	M7A	Read Live Data	

CIVIC DIESEL	/	Multi-view camera system (MVCS)	M7A	Customization	
CIVIC DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CIVIC DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CIVIC DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CIVIC DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CIVIC DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CIVIC DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CIVIC DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CIVIC DIESEL	/	Power Control Unit (PCU)	M83	Read ECU Information	
CIVIC DIESEL	/	Power Control Unit (PCU)	M83	Read codes	
CIVIC DIESEL	/	Power Control Unit (PCU)	M83	Erase Codes	
CIVIC DIESEL	/	Power Control Unit (PCU)	M83	Read Live Data	
CIVIC DIESEL	/	Power Control Unit (PCU)	M83	Self Check	
CIVIC DIESEL	/	Power Control Unit (PCU)	M83	History Data	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Read codes	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	Read codes	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Read codes	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CIVIC DIESEL	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CIVIC DIESEL	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
CIVIC DIESEL	/	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
CIVIC DIESEL	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	
CIVIC DIESEL	/	PSR	M27	Read ECU Information	

CIVIC DIESEL	/	PSR	M27	Read codes	
CIVIC DIESEL	/	PSR	M27	Erase Codes	
CIVIC DIESEL	/	PSR	M27	Read Live Data	
CIVIC DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CIVIC DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CIVIC DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CIVIC DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CIVIC DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CIVIC DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CIVIC DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CIVIC DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CIVIC DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CIVIC DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CIVIC DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CIVIC DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CIVIC DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CIVIC DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CIVIC DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CIVIC DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CIVIC DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CIVIC DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CIVIC DIESEL	/	Remote starter (RS)	M90	System Check	
CIVIC DIESEL	/	Remote starter (RS)	M90	HISTORY	
CIVIC DIESEL	/	Remote starter (RS)	M90	Registration	
CIVIC DIESEL	/	Seat load cell (SWS)	M6F	Read ECU Information	
CIVIC DIESEL	/	Seat load cell (SWS)	M6F	Read codes	
CIVIC DIESEL	/	Seat load cell (SWS)	M6F	Erase Codes	
CIVIC DIESEL	/	Seat load cell (SWS)	M6F	Read Live Data	
CIVIC DIESEL	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CIVIC DIESEL	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CIVIC DIESEL	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CIVIC DIESEL	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
CIVIC DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CIVIC DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CIVIC DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CIVIC DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CIVIC DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CIVIC DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CIVIC DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CIVIC DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CIVIC DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CIVIC DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CIVIC DIESEL	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CIVIC DIESEL	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9F	Read codes	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9F	Erase Codes	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9F	Read Live Data	
CIVIC DIESEL	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CIVIC DIESEL	/	Airbag Control System (SRS)	MA0	Read codes	
CIVIC DIESEL	/	Airbag Control System (SRS)	MA0	Erase Codes	
CIVIC DIESEL	/	Airbag Control System (SRS)	MA0	Read Live Data	
CIVIC DIESEL	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CIVIC DIESEL	/	Airbag Control System (SRS)	MA1	Read codes	
CIVIC DIESEL	/	Airbag Control System (SRS)	MA1	Erase Codes	
CIVIC DIESEL	/	Airbag Control System (SRS)	MA1	Read Live Data	
CIVIC DIESEL	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CIVIC DIESEL	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CIVIC DIESEL	/	Airbag Control System (SRS)	M2A	Read codes	
CIVIC DIESEL	/	Airbag Control System (SRS)	M2A	Erase Codes	
CIVIC DIESEL	/	Airbag Control System (SRS)	M2A	Read Live Data	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9C	Read codes	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9C	Erase Codes	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9C	Read Live Data	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9D	Read codes	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9D	Erase Codes	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9D	Read Live Data	

CIVIC DIESEL	/	Airbag Control System (SRS)	M9D	Parameter Information	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CIVIC DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CIVIC DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CIVIC DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CIVIC DIESEL	/	Airbag Control System (SRS)	M9D	Function Test	
CIVIC DIESEL	/	Airbag Control System (SRS)	M9D	System Information	
CIVIC DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CIVIC DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CIVIC DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CIVIC DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CIVIC DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CIVIC DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CIVIC DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CIVIC DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CIVIC DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CIVIC DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CIVIC DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CIVIC DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CIVIC DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CIVIC DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CIVIC DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CIVIC DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CIVIC DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CIVIC DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CIVIC DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CIVIC GX	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CIVIC GX	/	Four-wheel steering control system (4WS)	M52	Read codes	
CIVIC GX	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CIVIC GX	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CIVIC GX	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CIVIC GX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CIVIC GX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CIVIC GX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CIVIC GX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CIVIC GX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CIVIC GX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CIVIC GX	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CIVIC GX	/	Automatic shift control system (A/T)	M1E	Read codes	
CIVIC GX	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CIVIC GX	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CIVIC GX	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CIVIC GX	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CIVIC GX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CIVIC GX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC GX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC GX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC GX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC GX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC GX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CIVIC GX	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CIVIC GX	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CIVIC GX	/	Automatic shift control system (A/T)	M3B	Read codes	
CIVIC GX	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CIVIC GX	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CIVIC GX	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CIVIC GX	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CIVIC GX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CIVIC GX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CIVIC GX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CIVIC GX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CIVIC GX	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CIVIC GX	/	Automatic shift control system (A/T)	M3C	Read codes	
CIVIC GX	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CIVIC GX	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CIVIC GX	/	Automatic shift control system (A/T)	M81	Read codes	
CIVIC GX	/	Automatic shift control system (A/T)	M81	Erase Codes	
CIVIC GX	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CIVIC GX	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CIVIC GX	/	Automatic shift control system (A/T)	M81	Read Live Data	
CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test

CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC GX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CIVIC GX	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CIVIC GX	/	Automatic shift control system (A/T)	M82	Read codes	
CIVIC GX	/	Automatic shift control system (A/T)	M82	Erase Codes	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
CIVIC GX	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CIVIC GX	/	Active Engine Control Support System (ACM)	M06	Read codes	
CIVIC GX	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
CIVIC GX	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CIVIC GX	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
CIVIC GX	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
CIVIC GX	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CIVIC GX	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CIVIC GX	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CIVIC GX	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CIVIC GX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CIVIC GX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
CIVIC GX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CIVIC GX	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
CIVIC GX	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
CIVIC GX	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
CIVIC GX	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
CIVIC GX	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
CIVIC GX	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
CIVIC GX	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
CIVIC GX	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
CIVIC GX	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
CIVIC GX	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
CIVIC GX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
CIVIC GX	/	Transmission Control System (AT)	M18	Read ECU Information	
CIVIC GX	/	Transmission Control System (AT)	M18	Read codes	
CIVIC GX	/	Transmission Control System (AT)	M18	Erase Codes	
CIVIC GX	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
CIVIC GX	/	Transmission Control System (AT)	M18	Read Live Data	
CIVIC GX	/	Transmission Control System (AT)	M18	Adjustment	
CIVIC GX	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
CIVIC GX	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
CIVIC GX	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
CIVIC GX	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
CIVIC GX	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
CIVIC GX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CIVIC GX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
CIVIC GX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CIVIC GX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CIVIC GX	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CIVIC GX	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	



CIVIC GX	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CIVIC GX	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Function Test	Oncoming Vehicle Detection
CIVIC GX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Function Test	Preceding Vehicle Detection
CIVIC GX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CIVIC GX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CIVIC GX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Reset Operation
CIVIC GX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Returning Operation
CIVIC GX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Automatic Returning Distance
CIVIC GX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Manual Returning Time
CIVIC GX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Reset to default
CIVIC GX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CIVIC GX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CIVIC GX	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CIVIC GX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CIVIC GX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CIVIC GX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CIVIC GX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CIVIC GX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CIVIC GX	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CIVIC GX	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CIVIC GX	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CIVIC GX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CIVIC GX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CIVIC GX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CIVIC GX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	

CIVIC GX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CIVIC GX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CIVIC GX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CIVIC GX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CIVIC GX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CIVIC GX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CIVIC GX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CIVIC GX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CIVIC GX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CIVIC GX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CIVIC GX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CIVIC GX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CIVIC GX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CIVIC GX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CIVIC GX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CIVIC GX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CIVIC GX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Security	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CIVIC GX	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CIVIC GX	/	BODY ELECTRICAL/Security	MFF	History Data	
CIVIC GX	/	BODY ELECTRICAL/Security	MFF	History Clear	
CIVIC GX	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CIVIC GX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CIVIC GX	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC GX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CIVIC GX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC GX	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	

CIVIC GX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CIVIC GX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CIVIC GX	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CIVIC GX	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CIVIC GX	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CIVIC GX	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CIVIC GX	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CIVIC GX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CIVIC GX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CIVIC GX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CIVIC GX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CIVIC GX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CIVIC GX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CIVIC GX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CIVIC GX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CIVIC GX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CIVIC GX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CIVIC GX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CIVIC GX	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CIVIC GX	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CIVIC GX	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CIVIC GX	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CIVIC GX	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CIVIC GX	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CIVIC GX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
CIVIC GX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
CIVIC GX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
CIVIC GX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
CIVIC GX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
CIVIC GX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CIVIC GX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
CIVIC GX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
CIVIC GX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
CIVIC GX	/	DBW	M34	Read ECU Information	
CIVIC GX	/	DBW	M34	Read codes	
CIVIC GX	/	DBW	M34	Erase Codes	
CIVIC GX	/	DBW	M34	Read Freeze Frame Data	
CIVIC GX	/	DBW	M34	Read Live Data	
CIVIC GX	/	DBW	M34	Inspection	Idle Speed Adjust
CIVIC GX	/	DBW	M34	Inspection	Throttle Test
CIVIC GX	/	DBW	M34	ECM Reset	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST

CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	ISV Forced Learning
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CIVIC GX	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CIVIC GX	/	Capacitor Control System (EDLC)	M12	Read codes	
CIVIC GX	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CIVIC GX	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CIVIC GX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CIVIC GX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CIVIC GX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CIVIC GX	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CIVIC GX	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CIVIC GX	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CIVIC GX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CIVIC GX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CIVIC GX	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CIVIC GX	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CIVIC GX	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CIVIC GX	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CIVIC GX	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CIVIC GX	/	Electric Powertrain / IMA	M66	Read ECU Information	
CIVIC GX	/	Electric Powertrain / IMA	M66	Read codes	
CIVIC GX	/	Electric Powertrain / IMA	M66	Erase Codes	
CIVIC GX	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CIVIC GX	/	Electric Powertrain / IMA	M66	Read Live Data	
CIVIC GX	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CIVIC GX	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CIVIC GX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CIVIC GX	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CIVIC GX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CIVIC GX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CIVIC GX	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CIVIC GX	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CIVIC GX	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CIVIC GX	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CIVIC GX	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CIVIC GX	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change

CIVIC GX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CIVIC GX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CIVIC GX	/	New energy battery (EV)	M44	Read ECU Information	
CIVIC GX	/	New energy battery (EV)	M44	Read codes	
CIVIC GX	/	New energy battery (EV)	M44	Erase Codes	
CIVIC GX	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CIVIC GX	/	New energy battery (EV)	M44	Read Live Data	
CIVIC GX	/	New energy battery (EV)	M44	Inspection	
CIVIC GX	/	New energy battery (EV)	M44	Adjustment	
CIVIC GX	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CIVIC GX	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CIVIC GX	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CIVIC GX	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CIVIC GX	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CIVIC GX	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CIVIC GX	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CIVIC GX	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CIVIC GX	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CIVIC GX	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CIVIC GX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CIVIC GX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CIVIC GX	/	FCW LDW	M4E	Read ECU Information	
CIVIC GX	/	FCW LDW	M4E	Read codes	
CIVIC GX	/	FCW LDW	M4E	Erase Codes	
CIVIC GX	/	FCW LDW	M4E	Read Live Data	
CIVIC GX	/	FCW LDW	M4E	Function Test	FCW Drive
CIVIC GX	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CIVIC GX	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CIVIC GX	/	FCW LDW	M4E	Function Test	Indicator Drive
CIVIC GX	/	FCW LDW	M4E	Adjustment	
CIVIC GX	/	Instrument Display System (GAUGE)	M2C	Read codes	
CIVIC GX	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CIVIC GX	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Read codes	
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Read codes	
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Read codes	
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CIVIC GX	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Read codes	
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid

CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CIVIC GX	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CIVIC GX	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CIVIC GX	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CIVIC GX	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CIVIC GX	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CIVIC GX	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CIVIC GX	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CIVIC GX	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CIVIC GX	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CIVIC GX	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CIVIC GX	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CIVIC GX	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CIVIC GX	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CIVIC GX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CIVIC GX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CIVIC GX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CIVIC GX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CIVIC GX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CIVIC GX	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CIVIC GX	/	IMA	M63	Read ECU Information	
CIVIC GX	/	IMA	M63	Read codes	
CIVIC GX	/	IMA	M63	Erase Codes	
CIVIC GX	/	IMA	M63	Read Freeze Frame Data	
CIVIC GX	/	IMA	M63	Read Live Data	
CIVIC GX	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CIVIC GX	/	IMA	M63	Adjustment	SOC PRESET
CIVIC GX	/	IMA	M64	Read ECU Information	
CIVIC GX	/	IMA	M64	Read codes	
CIVIC GX	/	IMA	M64	Erase Codes	
CIVIC GX	/	IMA	M64	Read Freeze Frame Data	
CIVIC GX	/	IMA	M64	Read Live Data	
CIVIC GX	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CIVIC GX	/	IMA	M64	Adjustment	SOC PRESET
CIVIC GX	/	IMA	M65	Read ECU Information	
CIVIC GX	/	IMA	M65	Read codes	
CIVIC GX	/	IMA	M65	Erase Codes	
CIVIC GX	/	IMA	M65	Read Freeze Frame Data	
CIVIC GX	/	IMA	M65	Read Live Data	
CIVIC GX	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CIVIC GX	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CIVIC GX	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CIVIC GX	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CIVIC GX	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CIVIC GX	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CIVIC GX	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CIVIC GX	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CIVIC GX	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CIVIC GX	/	Night Vision System (INVS)	0XB1	Read codes	
CIVIC GX	/	Night Vision System (INVS)	0XB1	Erase Codes	
CIVIC GX	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CIVIC GX	/	Night Vision System (INVS)	0XB1	Read Live Data	
CIVIC GX	/	Night Vision System (INVS)	0XB1	Adjustment	
CIVIC GX	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CIVIC GX	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CIVIC GX	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CIVIC GX	/	i-SHIFT	0XB0	Read ECU Information	
CIVIC GX	/	i-SHIFT	0XB0	Read codes	
CIVIC GX	/	i-SHIFT	0XB0	Erase Codes	
CIVIC GX	/	i-SHIFT	0XB0	Read Live Data	
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Read codes	
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Self Check	
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	History Data	
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMODC Terminal) Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving

CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CIVIC GX	/	Keyless Entry Control System (KAS)	M99	Registration	
CIVIC GX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CIVIC GX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CIVIC GX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CIVIC GX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CIVIC GX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CIVIC GX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CIVIC GX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CIVIC GX	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CIVIC GX	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CIVIC GX	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CIVIC GX	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CIVIC GX	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CIVIC GX	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CIVIC GX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CIVIC GX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CIVIC GX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CIVIC GX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CIVIC GX	/	Management ECU Module (ME)	M74	Read ECU Information	
CIVIC GX	/	Management ECU Module (ME)	M74	Read codes	
CIVIC GX	/	Management ECU Module (ME)	M74	Erase Codes	
CIVIC GX	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CIVIC GX	/	Management ECU Module (ME)	M74	Read Live Data	
CIVIC GX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CIVIC GX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CIVIC GX	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CIVIC GX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CIVIC GX	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CIVIC GX	/	Multi-view camera system (MVCS)	M7A	Read codes	
CIVIC GX	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CIVIC GX	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CIVIC GX	/	Multi-view camera system (MVCS)	M7A	Customization	
CIVIC GX	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CIVIC GX	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CIVIC GX	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CIVIC GX	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CIVIC GX	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CIVIC GX	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CIVIC GX	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CIVIC GX	/	Power Control Unit (PCU)	M83	Read ECU Information	
CIVIC GX	/	Power Control Unit (PCU)	M83	Read codes	
CIVIC GX	/	Power Control Unit (PCU)	M83	Erase Codes	
CIVIC GX	/	Power Control Unit (PCU)	M83	Read Live Data	
CIVIC GX	/	Power Control Unit (PCU)	M83	Self Check	
CIVIC GX	/	Power Control Unit (PCU)	M83	History Data	
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Read codes	
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CIVIC GX	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF

CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CIVIC GX	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CIVIC GX	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CIVIC GX	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CIVIC GX	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CIVIC GX	/	Engine Control System (PGM-FI)	M50	Read codes	
CIVIC GX	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CIVIC GX	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CIVIC GX	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CIVIC GX	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CIVIC GX	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CIVIC GX	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CIVIC GX	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CIVIC GX	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CIVIC GX	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CIVIC GX	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Read codes	
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CIVIC GX	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CIVIC GX	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CIVIC GX	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CIVIC GX	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CIVIC GX	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
CIVIC GX	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
CIVIC GX	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
CIVIC GX	/	PSR	M27	Read ECU Information	
CIVIC GX	/	PSR	M27	Read codes	
CIVIC GX	/	PSR	M27	Erase Codes	
CIVIC GX	/	PSR	M27	Read Live Data	
CIVIC GX	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CIVIC GX	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CIVIC GX	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CIVIC GX	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CIVIC GX	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CIVIC GX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CIVIC GX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CIVIC GX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CIVIC GX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CIVIC GX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CIVIC GX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CIVIC GX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CIVIC GX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CIVIC GX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CIVIC GX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CIVIC GX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CIVIC GX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CIVIC GX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CIVIC GX	/	Remote starter (RS)	M90	System Check	
CIVIC GX	/	Remote starter (RS)	M90	HISTORY	
CIVIC GX	/	Remote starter (RS)	M90	Registration	
CIVIC GX	/	Seat load cell (SWS)	M6F	Read ECU Information	
CIVIC GX	/	Seat load cell (SWS)	M6F	Read codes	
CIVIC GX	/	Seat load cell (SWS)	M6F	Erase Codes	
CIVIC GX	/	Seat load cell (SWS)	M6F	Read Live Data	
CIVIC GX	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CIVIC GX	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CIVIC GX	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CIVIC GX	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)



CIVIC GX	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CIVIC GX	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CIVIC GX	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CIVIC GX	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CIVIC GX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CIVIC GX	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CIVIC GX	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CIVIC GX	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CIVIC GX	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CIVIC GX	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CIVIC GX	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CIVIC GX	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CIVIC GX	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CIVIC GX	/	Airbag Control System (SRS)	M9F	Read codes	
CIVIC GX	/	Airbag Control System (SRS)	M9F	Erase Codes	
CIVIC GX	/	Airbag Control System (SRS)	M9F	Read Live Data	
CIVIC GX	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CIVIC GX	/	Airbag Control System (SRS)	MA0	Read codes	
CIVIC GX	/	Airbag Control System (SRS)	MA0	Erase Codes	
CIVIC GX	/	Airbag Control System (SRS)	MA0	Read Live Data	
CIVIC GX	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CIVIC GX	/	Airbag Control System (SRS)	MA1	Read codes	
CIVIC GX	/	Airbag Control System (SRS)	MA1	Erase Codes	
CIVIC GX	/	Airbag Control System (SRS)	MA1	Read Live Data	
CIVIC GX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CIVIC GX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CIVIC GX	/	Airbag Control System (SRS)	M2A	Read codes	
CIVIC GX	/	Airbag Control System (SRS)	M2A	Erase Codes	
CIVIC GX	/	Airbag Control System (SRS)	M2A	Read Live Data	
CIVIC GX	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CIVIC GX	/	Airbag Control System (SRS)	M9C	Read codes	
CIVIC GX	/	Airbag Control System (SRS)	M9C	Erase Codes	
CIVIC GX	/	Airbag Control System (SRS)	M9C	Read Live Data	
CIVIC GX	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CIVIC GX	/	Airbag Control System (SRS)	M9D	Read codes	
CIVIC GX	/	Airbag Control System (SRS)	M9D	Erase Codes	
CIVIC GX	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CIVIC GX	/	Airbag Control System (SRS)	M9D	Read Live Data	
CIVIC GX	/	Airbag Control System (SRS)	M9D	Parameter Information	
CIVIC GX	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CIVIC GX	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CIVIC GX	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CIVIC GX	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CIVIC GX	/	Airbag Control System (SRS)	M9D	Function Test	
CIVIC GX	/	Airbag Control System (SRS)	M9D	System Information	
CIVIC GX	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CIVIC GX	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CIVIC GX	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CIVIC GX	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CIVIC GX	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CIVIC GX	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CIVIC GX	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CIVIC GX	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CIVIC GX	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CIVIC GX	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CIVIC GX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CIVIC GX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CIVIC GX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	

CIVIC GX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CIVIC GX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CIVIC GX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CIVIC GX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CIVIC GX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CIVIC GX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CIVIC HYBRID	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CIVIC HYBRID	/	Four-wheel steering control system (4WS)	M52	Read codes	
CIVIC HYBRID	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CIVIC HYBRID	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CIVIC HYBRID	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CIVIC HYBRID	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CIVIC HYBRID	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CIVIC HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CIVIC HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CIVIC HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CIVIC HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	Read codes	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CIVIC HYBRID	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3B	Read codes	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3C	Read codes	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Read codes	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Erase Codes	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Read Live Data	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CIVIC HYBRID	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M82	Read codes	
CIVIC HYBRID	/	Automatic shift control system (A/T)	M82	Erase Codes	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read ECU Information	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read codes	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Erase Codes	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read Freeze Frame Data	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read Live Data	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	Throttle Opening Angle Test
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	BRAKE BOOSTER 1
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	BRAKE BOOSTER 2
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	LIGHT CHECK
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	BUZZER CHECK
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Read ECU Information	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Read codes	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Erase Codes	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Read Freeze Frame Data	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Read Live Data	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Adjustment	RADAR AIMING
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Function Test	BRAKE ACTUATOR 3
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Function Test	ACC relay malfunction.
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Function Test	INDICATOR LIGHT
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Function Test	INFORMATION DISPLAY
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Function Test	ALARM BUZZER
CIVIC HYBRID	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CIVIC HYBRID	/	Active Engine Control Support System (ACM)	M06	Read codes	
CIVIC HYBRID	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
CIVIC HYBRID	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CIVIC HYBRID	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
CIVIC HYBRID	/	Active Engine Control Support System (ACM)	M06	ACM Reset	

CIVIC HYBRID	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CIVIC HYBRID	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CIVIC HYBRID	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CIVIC HYBRID	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CIVIC HYBRID	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CIVIC HYBRID	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
CIVIC HYBRID	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CIVIC HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD)		Read ECU Information	
CIVIC HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD)		Read codes	
CIVIC HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD)		Erase Codes	
CIVIC HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD)		Read Freeze Frame Data	
CIVIC HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD)		Read Live Data	
CIVIC HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD)		Function Test	Damper Force Operation Test
CIVIC HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD)		Adjustment	Damper Stroke Calibration
CIVIC HYBRID	/	Active / Automatic Shock Absorber Control System (A M1A)		Read codes	
CIVIC HYBRID	/	Active / Automatic Shock Absorber Control System (A M1A)		Erase Codes	
CIVIC HYBRID	/	Active / Automatic Shock Absorber Control System (A M1A)		Read Live Data	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Read codes	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Erase Codes	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Read Freeze Frame Data	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Read Live Data	
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	ACC Brake (Brake Actuator)
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	CMBS Brake
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Brake Light (ACC Relay)
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Indicator Light
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Information Display
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Alarm Test
CIVIC HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Adjustment	Radar aiming
CIVIC HYBRID	/	Transmission Control System (AT)	M18	Read ECU Information	
CIVIC HYBRID	/	Transmission Control System (AT)	M18	Read codes	
CIVIC HYBRID	/	Transmission Control System (AT)	M18	Erase Codes	
CIVIC HYBRID	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
CIVIC HYBRID	/	Transmission Control System (AT)	M18	Read Live Data	
CIVIC HYBRID	/	Transmission Control System (AT)	M18	Adjustment	
CIVIC HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
CIVIC HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
CIVIC HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
CIVIC HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
CIVIC HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
CIVIC HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CIVIC HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
CIVIC HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CIVIC HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CIVIC HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CIVIC HYBRID	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CIVIC HYBRID	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Function Test	Oncoming Vehicle Detection
CIVIC HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Function Test	Preceding Vehicle Detection
CIVIC HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CIVIC HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CIVIC HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Reset Operation
CIVIC HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Returning Operation
CIVIC HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Automatic Returning Distance
CIVIC HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Manual Returning Time
CIVIC HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Reset to default
CIVIC HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CIVIC HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CIVIC HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CIVIC HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CIVIC HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CIVIC HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CIVIC HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door

CIVIC HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CIVIC HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CIVIC HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CIVIC HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CIVIC HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CIVIC HYBRID	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CIVIC HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CIVIC HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CIVIC HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CIVIC HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CIVIC HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CIVIC HYBRID	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CIVIC HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CIVIC HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CIVIC HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor

CIVIC HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CIVIC HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CIVIC HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CIVIC HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CIVIC HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CIVIC HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CIVIC HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CIVIC HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CIVIC HYBRID	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Security	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CIVIC HYBRID	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CIVIC HYBRID	/	BODY ELECTRICAL/Security	MFF	History Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Security	MFF	History Clear	
CIVIC HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CIVIC HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CIVIC HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CIVIC HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC HYBRID	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CIVIC HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CIVIC HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CIVIC HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CIVIC HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CIVIC HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CIVIC HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CIVIC HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CIVIC HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CIVIC HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CIVIC HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CIVIC HYBRID	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CIVIC HYBRID	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CIVIC HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CIVIC HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Read codes	

CIVIC HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CIVIC HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CIVIC HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CIVIC HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CIVIC HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read ECU Information	
CIVIC HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read codes	
CIVIC HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Erase Codes	
CIVIC HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Freeze Frame Data	
CIVIC HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Live Data	
CIVIC HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	CMBS (CMS) ACTIVATION HISTORY	
CIVIC HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	RADAR AIMING
CIVIC HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	CMBS Brake
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
CIVIC HYBRID	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
CIVIC HYBRID	/	DBW	M34	Read ECU Information	
CIVIC HYBRID	/	DBW	M34	Read codes	
CIVIC HYBRID	/	DBW	M34	Erase Codes	
CIVIC HYBRID	/	DBW	M34	Read Freeze Frame Data	
CIVIC HYBRID	/	DBW	M34	Read Live Data	
CIVIC HYBRID	/	DBW	M34	Inspection	Idle Speed Adjust
CIVIC HYBRID	/	DBW	M34	Inspection	Throttle Test
CIVIC HYBRID	/	DBW	M34	ECM Reset	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	

CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CIVIC HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CIVIC HYBRID	/	Capacitor Control System (EDLC)	M12	Read codes	
CIVIC HYBRID	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CIVIC HYBRID	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CIVIC HYBRID	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CIVIC HYBRID	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CIVIC HYBRID	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CIVIC HYBRID	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CIVIC HYBRID	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CIVIC HYBRID	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CIVIC HYBRID	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CIVIC HYBRID	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CIVIC HYBRID	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CIVIC HYBRID	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CIVIC HYBRID	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CIVIC HYBRID	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CIVIC HYBRID	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CIVIC HYBRID	/	Electric Powertrain / IMA	M66	Read ECU Information	
CIVIC HYBRID	/	Electric Powertrain / IMA	M66	Read codes	
CIVIC HYBRID	/	Electric Powertrain / IMA	M66	Erase Codes	
CIVIC HYBRID	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CIVIC HYBRID	/	Electric Powertrain / IMA	M66	Read Live Data	
CIVIC HYBRID	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CIVIC HYBRID	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CIVIC HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CIVIC HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CIVIC HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CIVIC HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CIVIC HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CIVIC HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CIVIC HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CIVIC HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CIVIC HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CIVIC HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CIVIC HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CIVIC HYBRID	/	New energy battery (EV)	M44	Read ECU Information	
CIVIC HYBRID	/	New energy battery (EV)	M44	Read codes	
CIVIC HYBRID	/	New energy battery (EV)	M44	Erase Codes	
CIVIC HYBRID	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CIVIC HYBRID	/	New energy battery (EV)	M44	Read Live Data	
CIVIC HYBRID	/	New energy battery (EV)	M44	Inspection	
CIVIC HYBRID	/	New energy battery (EV)	M44	Adjustment	
CIVIC HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CIVIC HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CIVIC HYBRID	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CIVIC HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CIVIC HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CIVIC HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CIVIC HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CIVIC HYBRID	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CIVIC HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CIVIC HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CIVIC HYBRID	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CIVIC HYBRID	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CIVIC HYBRID	/	FCW LDW	M4E	Read ECU Information	
CIVIC HYBRID	/	FCW LDW	M4E	Read codes	
CIVIC HYBRID	/	FCW LDW	M4E	Erase Codes	

CIVIC HYBRID	/	FCW LDW	M4E	Read Live Data	
CIVIC HYBRID	/	FCW LDW	M4E	Function Test	FCW Drive
CIVIC HYBRID	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CIVIC HYBRID	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CIVIC HYBRID	/	FCW LDW	M4E	Function Test	Indicator Drive
CIVIC HYBRID	/	FCW LDW	M4E	Adjustment	
CIVIC HYBRID	/	Instrument Display System (GAUGE)	M2C	Read codes	
CIVIC HYBRID	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CIVIC HYBRID	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Read codes	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Read codes	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Read codes	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Read codes	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CIVIC HYBRID	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CIVIC HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CIVIC HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CIVIC HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CIVIC HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CIVIC HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CIVIC HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CIVIC HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CIVIC HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CIVIC HYBRID	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CIVIC HYBRID	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CIVIC HYBRID	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CIVIC HYBRID	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CIVIC HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CIVIC HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CIVIC HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CIVIC HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CIVIC HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CIVIC HYBRID	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CIVIC HYBRID	/	IMA	M63	Read ECU Information	
CIVIC HYBRID	/	IMA	M63	Read codes	
CIVIC HYBRID	/	IMA	M63	Erase Codes	
CIVIC HYBRID	/	IMA	M63	Read Freeze Frame Data	
CIVIC HYBRID	/	IMA	M63	Read Live Data	
CIVIC HYBRID	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE



CIVIC HYBRID	/	IMA	M63	Adjustment	SOC PRESET
CIVIC HYBRID	/	IMA	M64	Read ECU Information	
CIVIC HYBRID	/	IMA	M64	Read codes	
CIVIC HYBRID	/	IMA	M64	Erase Codes	
CIVIC HYBRID	/	IMA	M64	Read Freeze Frame Data	
CIVIC HYBRID	/	IMA	M64	Read Live Data	
CIVIC HYBRID	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CIVIC HYBRID	/	IMA	M64	Adjustment	SOC PRESET
CIVIC HYBRID	/	IMA	M65	Read ECU Information	
CIVIC HYBRID	/	IMA	M65	Read codes	
CIVIC HYBRID	/	IMA	M65	Erase Codes	
CIVIC HYBRID	/	IMA	M65	Read Freeze Frame Data	
CIVIC HYBRID	/	IMA	M65	Read Live Data	
CIVIC HYBRID	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CIVIC HYBRID	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CIVIC HYBRID	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CIVIC HYBRID	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CIVIC HYBRID	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CIVIC HYBRID	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CIVIC HYBRID	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CIVIC HYBRID	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CIVIC HYBRID	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CIVIC HYBRID	/	Night Vision System (INVS)	0XB1	Read codes	
CIVIC HYBRID	/	Night Vision System (INVS)	0XB1	Erase Codes	
CIVIC HYBRID	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CIVIC HYBRID	/	Night Vision System (INVS)	0XB1	Read Live Data	
CIVIC HYBRID	/	Night Vision System (INVS)	0XB1	Adjustment	
CIVIC HYBRID	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CIVIC HYBRID	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CIVIC HYBRID	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CIVIC HYBRID	/	i-SHIFT	0XB0	Read ECU Information	
CIVIC HYBRID	/	i-SHIFT	0XB0	Read codes	
CIVIC HYBRID	/	i-SHIFT	0XB0	Erase Codes	
CIVIC HYBRID	/	i-SHIFT	0XB0	Read Live Data	
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Read codes	
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Self Check	
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	History Data	
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CIVIC HYBRID	/	Keyless Entry Control System (KAS)	M99	Registration	
CIVIC HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	

CIVIC HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Read codes	
CIVIC HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Erase Codes	
CIVIC HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Read Freeze Frame Data	
CIVIC HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Read Live Data	
CIVIC HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	STATIC CAMERA AIMING
CIVIC HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	VIDEO OUTPUT
CIVIC HYBRID	/	Electronically assisted lane keeping control system (Lk) M71	Read ECU Information	
CIVIC HYBRID	/	Electronically assisted lane keeping control system (Lk) M71	Read codes	
CIVIC HYBRID	/	Electronically assisted lane keeping control system (Lk) M71	Erase Codes	
CIVIC HYBRID	/	Electronically assisted lane keeping control system (Lk) M71	Read Freeze Frame Data	
CIVIC HYBRID	/	Electronically assisted lane keeping control system (Lk) M71	Read Live Data	
CIVIC HYBRID	/	Electronically assisted lane keeping control system (Lk) M71	Adjustment	STEERING REWRITE
CIVIC HYBRID	/	Electronically assisted lane keeping control system (Lk) M71	Customize	LDW OFFSET
CIVIC HYBRID	/	Electronically assisted lane keeping control system (Lk) M71	Customize	GAIN ADJUST
CIVIC HYBRID	/	Electronically assisted lane keeping control system (Lk) M71	Customize	DRIVING WILL
CIVIC HYBRID	/	Electronically assisted lane keeping control system (Lk) M71	Customize	CONTROL DELAY
CIVIC HYBRID	/	Management ECU Module (ME) M74	Read ECU Information	
CIVIC HYBRID	/	Management ECU Module (ME) M74	Read codes	
CIVIC HYBRID	/	Management ECU Module (ME) M74	Erase Codes	
CIVIC HYBRID	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
CIVIC HYBRID	/	Management ECU Module (ME) M74	Read Live Data	
CIVIC HYBRID	/	Multi-view camera and parking assist system (MVC/P) M26	Read ECU Information	
CIVIC HYBRID	/	Multi-view camera and parking assist system (MVC/P) M26	Read codes	
CIVIC HYBRID	/	Multi-view camera and parking assist system (MVC/P) M26	Erase Codes	
CIVIC HYBRID	/	Multi-view camera and parking assist system (MVC/P) M26	Read Live Data	
CIVIC HYBRID	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
CIVIC HYBRID	/	Multi-view camera system (MVCS) M7A	Read codes	
CIVIC HYBRID	/	Multi-view camera system (MVCS) M7A	Erase Codes	
CIVIC HYBRID	/	Multi-view camera system (MVCS) M7A	Read Live Data	
CIVIC HYBRID	/	Multi-view camera system (MVCS) M7A	Customization	
CIVIC HYBRID	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
CIVIC HYBRID	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
CIVIC HYBRID	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
CIVIC HYBRID	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
CIVIC HYBRID	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
CIVIC HYBRID	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
CIVIC HYBRID	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
CIVIC HYBRID	/	Power Control Unit (PCU) M83	Read ECU Information	
CIVIC HYBRID	/	Power Control Unit (PCU) M83	Read codes	
CIVIC HYBRID	/	Power Control Unit (PCU) M83	Erase Codes	
CIVIC HYBRID	/	Power Control Unit (PCU) M83	Read Live Data	
CIVIC HYBRID	/	Power Control Unit (PCU) M83	Self Check	
CIVIC HYBRID	/	Power Control Unit (PCU) M83	History Data	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Read ECU Information	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Read codes	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Erase Codes	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Readiness Codes	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Read Live Data	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	VIN CHECK	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M50	Read ECU Information	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M50	Read codes	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M50	Erase Codes	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M50	Readiness Codes	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M50	Read Live Data	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
CIVIC HYBRID	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
CIVIC HYBRID	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
CIVIC HYBRID	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI) M50	VIN CHECK	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M86	Replace ECM/PCM	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M86	Read ECU Information	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M86	Read codes	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M86	Erase Codes	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M86	Readiness Codes	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
CIVIC HYBRID	/	Engine Control System (PGM-FI) M86	Read Live Data	

CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CIVIC HYBRID	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CIVIC HYBRID	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
CIVIC HYBRID	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
CIVIC HYBRID	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
CIVIC HYBRID	/	PSR	M27	Read ECU Information	
CIVIC HYBRID	/	PSR	M27	Read codes	
CIVIC HYBRID	/	PSR	M27	Erase Codes	
CIVIC HYBRID	/	PSR	M27	Read Live Data	
CIVIC HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CIVIC HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CIVIC HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CIVIC HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CIVIC HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CIVIC HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CIVIC HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CIVIC HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CIVIC HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CIVIC HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CIVIC HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CIVIC HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CIVIC HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CIVIC HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CIVIC HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CIVIC HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CIVIC HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CIVIC HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CIVIC HYBRID	/	Remote starter (RS)	M90	System Check	
CIVIC HYBRID	/	Remote starter (RS)	M90	HISTORY	
CIVIC HYBRID	/	Remote starter (RS)	M90	Registration	
CIVIC HYBRID	/	Seat load cell (SWS)	M6F	Read ECU Information	
CIVIC HYBRID	/	Seat load cell (SWS)	M6F	Read codes	
CIVIC HYBRID	/	Seat load cell (SWS)	M6F	Erase Codes	
CIVIC HYBRID	/	Seat load cell (SWS)	M6F	Read Live Data	
CIVIC HYBRID	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CIVIC HYBRID	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CIVIC HYBRID	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CIVIC HYBRID	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
CIVIC HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CIVIC HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CIVIC HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CIVIC HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CIVIC HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CIVIC HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CIVIC HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CIVIC HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CIVIC HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	

CIVIC HYBRID /	Groove track drive unit (SLOT ECU)	M98	Self Check	
CIVIC HYBRID /	Groove track drive unit (SLOT ECU)	M98	History Data	
CIVIC HYBRID /	Groove track drive unit (SLOT ECU)	M98	System Information	
CIVIC HYBRID /	Airbag Control System (SRS)	M9F	Read ECU Information	
CIVIC HYBRID /	Airbag Control System (SRS)	M9F	Read codes	
CIVIC HYBRID /	Airbag Control System (SRS)	M9F	Erase Codes	
CIVIC HYBRID /	Airbag Control System (SRS)	M9F	Read Live Data	
CIVIC HYBRID /	Airbag Control System (SRS)	MA0	Read ECU Information	
CIVIC HYBRID /	Airbag Control System (SRS)	MA0	Read codes	
CIVIC HYBRID /	Airbag Control System (SRS)	MA0	Erase Codes	
CIVIC HYBRID /	Airbag Control System (SRS)	MA0	Read Live Data	
CIVIC HYBRID /	Airbag Control System (SRS)	MA1	Read ECU Information	
CIVIC HYBRID /	Airbag Control System (SRS)	MA1	Read codes	
CIVIC HYBRID /	Airbag Control System (SRS)	MA1	Erase Codes	
CIVIC HYBRID /	Airbag Control System (SRS)	MA1	Read Live Data	
CIVIC HYBRID /	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CIVIC HYBRID /	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CIVIC HYBRID /	Airbag Control System (SRS)	M2A	Read codes	
CIVIC HYBRID /	Airbag Control System (SRS)	M2A	Erase Codes	
CIVIC HYBRID /	Airbag Control System (SRS)	M2A	Read Live Data	
CIVIC HYBRID /	Airbag Control System (SRS)	M9C	Read ECU Information	
CIVIC HYBRID /	Airbag Control System (SRS)	M9C	Read codes	
CIVIC HYBRID /	Airbag Control System (SRS)	M9C	Erase Codes	
CIVIC HYBRID /	Airbag Control System (SRS)	M9C	Read Live Data	
CIVIC HYBRID /	Airbag Control System (SRS)	M9D	Read ECU Information	
CIVIC HYBRID /	Airbag Control System (SRS)	M9D	Read codes	
CIVIC HYBRID /	Airbag Control System (SRS)	M9D	Erase Codes	
CIVIC HYBRID /	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CIVIC HYBRID /	Airbag Control System (SRS)	M9D	Read Live Data	
CIVIC HYBRID /	Airbag Control System (SRS)	M9D	Parameter Information	
CIVIC HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CIVIC HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CIVIC HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CIVIC HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CIVIC HYBRID /	Airbag Control System (SRS)	M9D	Function Test	
CIVIC HYBRID /	Airbag Control System (SRS)	M9D	System Information	
CIVIC HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CIVIC HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CIVIC HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CIVIC HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CIVIC HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CIVIC HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CIVIC HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CIVIC HYBRID /	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CIVIC HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CIVIC HYBRID /	Variable Valve Timing Control System (SVT)	MA2	System Information	
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CIVIC HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CIVIC HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CIVIC HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CIVIC HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CIVIC HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CIVIC HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CIVIC HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CIVIC HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CIVIC HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CIVIC WGN DIESEL /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CIVIC WGN DIESEL /	Four-wheel steering control system (4WS)	M52	Read codes	
CIVIC WGN DIESEL /	Four-wheel steering control system (4WS)	M52	Erase Codes	
CIVIC WGN DIESEL /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Four-wheel steering control system (4WS)	M52	Read Live Data	
CIVIC WGN DIESEL /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CIVIC WGN DIESEL /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CIVIC WGN DIESEL /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CIVIC WGN DIESEL /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CIVIC WGN DIESEL /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CIVIC WGN DIESEL /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	Read ECU Information	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	Read codes	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	Erase Codes	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	Read Live Data	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3B	Read ECU Information	

CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3B	Read codes	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3B	Erase Codes	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3B	ECMPCMC Reset	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3B	Read Live Data	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3C	Read ECU Information	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3C	Read codes	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M3C	Erase Codes	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Read ECU Information	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Read codes	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Erase Codes	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	ECMPCMC Reset	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Read Live Data	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M82	Read ECU Information	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M82	Read codes	
CIVIC WGN DIESEL /	Automatic shift control system (A/T)	M82	Erase Codes	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
CIVIC WGN DIESEL /	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CIVIC WGN DIESEL /	Active Engine Control Support System (ACM)	M06	Read codes	
CIVIC WGN DIESEL /	Active Engine Control Support System (ACM)	M06	Erase Codes	
CIVIC WGN DIESEL /	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Active Engine Control Support System (ACM)	M06	Read Live Data	
CIVIC WGN DIESEL /	Active Engine Control Support System (ACM)	M06	ACM Reset	
CIVIC WGN DIESEL /	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CIVIC WGN DIESEL /	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CIVIC WGN DIESEL /	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CIVIC WGN DIESEL /	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CIVIC WGN DIESEL /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CIVIC WGN DIESEL /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
CIVIC WGN DIESEL /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CIVIC WGN DIESEL /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read ECU Information	
CIVIC WGN DIESEL /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read codes	
CIVIC WGN DIESEL /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Erase Codes	
CIVIC WGN DIESEL /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Live Data	
CIVIC WGN DIESEL /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Function Test	Damper Force Operation Test
CIVIC WGN DIESEL /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Adjustment	Damper Stroke Calibration
CIVIC WGN DIESEL /	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
CIVIC WGN DIESEL /	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
CIVIC WGN DIESEL /	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
CIVIC WGN DIESEL /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
CIVIC WGN DIESEL /	Transmission Control System (AT)	M18	Read ECU Information	
CIVIC WGN DIESEL /	Transmission Control System (AT)	M18	Read codes	
CIVIC WGN DIESEL /	Transmission Control System (AT)	M18	Erase Codes	
CIVIC WGN DIESEL /	Transmission Control System (AT)	M18	Read Freeze Frame Data	

CIVIC WGN DIESEL /	Transmission Control System (AT)	M18	Read Live Data	
CIVIC WGN DIESEL /	Transmission Control System (AT)	M18	Adjustment	
CIVIC WGN DIESEL /	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
CIVIC WGN DIESEL /	Active Torque Converter Control System (ATTS)	M0E	Read codes	
CIVIC WGN DIESEL /	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
CIVIC WGN DIESEL /	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
CIVIC WGN DIESEL /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CIVIC WGN DIESEL /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
CIVIC WGN DIESEL /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CIVIC WGN DIESEL /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CIVIC WGN DIESEL /	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CIVIC WGN DIESEL /	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CIVIC WGN DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CIVIC WGN DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CIVIC WGN DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CIVIC WGN DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CIVIC WGN DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CIVIC WGN DIESEL /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CIVIC WGN DIESEL /	BODY ELECTRICAL/e-Call	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CIVIC WGN DIESEL /	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter

CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CIVIC WGN DIESEL /	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CIVIC WGN DIESEL /	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CIVIC WGN DIESEL /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CIVIC WGN DIESEL /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CIVIC WGN DIESEL /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CIVIC WGN DIESEL /	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CIVIC WGN DIESEL /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CIVIC WGN DIESEL /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear

CIVIC WGN DIESEL /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Security	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Security	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Security	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CIVIC WGN DIESEL /	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CIVIC WGN DIESEL /	BODY ELECTRICAL/Security	MFF	History Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Security	MFF	History Clear	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Telematics	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CIVIC WGN DIESEL /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CIVIC WGN DIESEL /	BODY ELECTRICAL/Wiper	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC WGN DIESEL /	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CIVIC WGN DIESEL /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CIVIC WGN DIESEL /	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP Security	MFF	History Data	
CIVIC WGN DIESEL /	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CIVIC WGN DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CIVIC WGN DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CIVIC WGN DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CIVIC WGN DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CIVIC WGN DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CIVIC WGN DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CIVIC WGN DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CIVIC WGN DIESEL /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CIVIC WGN DIESEL /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CIVIC WGN DIESEL /	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CIVIC WGN DIESEL /	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CIVIC WGN DIESEL /	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CIVIC WGN DIESEL /	Urban Active Brake Control System (CBAS)	M32	Read codes	
CIVIC WGN DIESEL /	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CIVIC WGN DIESEL /	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CIVIC WGN DIESEL /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CIVIC WGN DIESEL /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CIVIC WGN DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Read ECU Information	
CIVIC WGN DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Read codes	
CIVIC WGN DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Erase Codes	
CIVIC WGN DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Read Freeze Frame Data	
CIVIC WGN DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Read Live Data	
CIVIC WGN DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
CIVIC WGN DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Miscellaneous Test	RADAR AIMING
CIVIC WGN DIESEL /	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Miscellaneous Test	CMBS Brake
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Read codes	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	



CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		ECM/PCM Reset	
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
CIVIC WGN DIESEL /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
CIVIC WGN DIESEL /	DBW	M34	Read ECU Information	
CIVIC WGN DIESEL /	DBW	M34	Read codes	
CIVIC WGN DIESEL /	DBW	M34	Erase Codes	
CIVIC WGN DIESEL /	DBW	M34	Read Freeze Frame Data	
CIVIC WGN DIESEL /	DBW	M34	Read Live Data	
CIVIC WGN DIESEL /	DBW	M34	Inspection	Idle Speed Adjust
CIVIC WGN DIESEL /	DBW	M34	Inspection	Throttle Test
CIVIC WGN DIESEL /	DBW	M34	ECM Reset	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M37	Read codes	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Read codes	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CIVIC WGN DIESEL /	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CIVIC WGN DIESEL /	Capacitor Control System (EDLC)	M12	Read codes	
CIVIC WGN DIESEL /	Capacitor Control System (EDLC)	M12	Erase Codes	
CIVIC WGN DIESEL /	Capacitor Control System (EDLC)	M12	Read Live Data	
CIVIC WGN DIESEL /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CIVIC WGN DIESEL /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CIVIC WGN DIESEL /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CIVIC WGN DIESEL /	Electronic Brake Control System (EPB)	M1F	Read codes	
CIVIC WGN DIESEL /	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CIVIC WGN DIESEL /	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CIVIC WGN DIESEL /	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CIVIC WGN DIESEL /	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CIVIC WGN DIESEL /	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CIVIC WGN DIESEL /	Electronic Brake Control System (EPB)	M3E	Read codes	
CIVIC WGN DIESEL /	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CIVIC WGN DIESEL /	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CIVIC WGN DIESEL /	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CIVIC WGN DIESEL /	Electric Powertrain / IMA	M66	Read ECU Information	
CIVIC WGN DIESEL /	Electric Powertrain / IMA	M66	Read codes	
CIVIC WGN DIESEL /	Electric Powertrain / IMA	M66	Erase Codes	

CIVIC WGN DIESEL /	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Electric Powertrain / IMA	M66	Read Live Data	
CIVIC WGN DIESEL /	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CIVIC WGN DIESEL /	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CIVIC WGN DIESEL /	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CIVIC WGN DIESEL /	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CIVIC WGN DIESEL /	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CIVIC WGN DIESEL /	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CIVIC WGN DIESEL /	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CIVIC WGN DIESEL /	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CIVIC WGN DIESEL /	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CIVIC WGN DIESEL /	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CIVIC WGN DIESEL /	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M20	Read codes	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CIVIC WGN DIESEL /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CIVIC WGN DIESEL /	New energy battery (EV)	M44	Read ECU Information	
CIVIC WGN DIESEL /	New energy battery (EV)	M44	Read codes	
CIVIC WGN DIESEL /	New energy battery (EV)	M44	Erase Codes	
CIVIC WGN DIESEL /	New energy battery (EV)	M44	Read Freeze Frame Data	
CIVIC WGN DIESEL /	New energy battery (EV)	M44	Read Live Data	
CIVIC WGN DIESEL /	New energy battery (EV)	M44	Inspection	
CIVIC WGN DIESEL /	New energy battery (EV)	M44	Adjustment	
CIVIC WGN DIESEL /	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CIVIC WGN DIESEL /	Electronic vacuum pump (EVPS)	M21	Read codes	
CIVIC WGN DIESEL /	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CIVIC WGN DIESEL /	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CIVIC WGN DIESEL /	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CIVIC WGN DIESEL /	Electronic vacuum pump (EVPS)	M22	Read codes	
CIVIC WGN DIESEL /	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CIVIC WGN DIESEL /	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CIVIC WGN DIESEL /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CIVIC WGN DIESEL /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CIVIC WGN DIESEL /	FCW LDW	M4E	Read ECU Information	
CIVIC WGN DIESEL /	FCW LDW	M4E	Read codes	
CIVIC WGN DIESEL /	FCW LDW	M4E	Erase Codes	
CIVIC WGN DIESEL /	FCW LDW	M4E	Read Live Data	
CIVIC WGN DIESEL /	FCW LDW	M4E	Function Test	FCW Drive
CIVIC WGN DIESEL /	FCW LDW	M4E	Function Test	Left side lane departure warning
CIVIC WGN DIESEL /	FCW LDW	M4E	Function Test	Right side lane departure warning
CIVIC WGN DIESEL /	FCW LDW	M4E	Function Test	Indicator Drive
CIVIC WGN DIESEL /	FCW LDW	M4E	Adjustment	
CIVIC WGN DIESEL /	Instrument Display System (GAUGE)	M2C	Read codes	
CIVIC WGN DIESEL /	Instrument Display System (GAUGE)	M2C	Erase Codes	
CIVIC WGN DIESEL /	Instrument Display System (GAUGE)	M2C	Read Live Data	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Read codes	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Erase Codes	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Read Live Data	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Read codes	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Erase Codes	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Read Live Data	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid

CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Read codes	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Erase Codes	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Read Live Data	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Pulser Test	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Read codes	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Erase Codes	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Read Live Data	
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CIVIC WGN DIESEL /	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CIVIC WGN DIESEL /	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CIVIC WGN DIESEL /	Intelligent Parking Control System (SPS)	M9B	Read codes	
CIVIC WGN DIESEL /	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CIVIC WGN DIESEL /	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CIVIC WGN DIESEL /	Intelligent Parking Control System (SPS)	M9B	Customize	
CIVIC WGN DIESEL /	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CIVIC WGN DIESEL /	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CIVIC WGN DIESEL /	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CIVIC WGN DIESEL /	Hydraulic booster control system (HBS)	M5F	Read codes	
CIVIC WGN DIESEL /	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CIVIC WGN DIESEL /	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CIVIC WGN DIESEL /	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CIVIC WGN DIESEL /	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CIVIC WGN DIESEL /	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CIVIC WGN DIESEL /	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CIVIC WGN DIESEL /	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CIVIC WGN DIESEL /	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CIVIC WGN DIESEL /	IMA	M63	Read ECU Information	
CIVIC WGN DIESEL /	IMA	M63	Read codes	
CIVIC WGN DIESEL /	IMA	M63	Erase Codes	
CIVIC WGN DIESEL /	IMA	M63	Read Freeze Frame Data	
CIVIC WGN DIESEL /	IMA	M63	Read Live Data	
CIVIC WGN DIESEL /	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CIVIC WGN DIESEL /	IMA	M63	Adjustment	SOC PRESET
CIVIC WGN DIESEL /	IMA	M64	Read ECU Information	
CIVIC WGN DIESEL /	IMA	M64	Read codes	
CIVIC WGN DIESEL /	IMA	M64	Erase Codes	
CIVIC WGN DIESEL /	IMA	M64	Read Freeze Frame Data	
CIVIC WGN DIESEL /	IMA	M64	Read Live Data	
CIVIC WGN DIESEL /	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CIVIC WGN DIESEL /	IMA	M64	Adjustment	SOC PRESET
CIVIC WGN DIESEL /	IMA	M65	Read ECU Information	
CIVIC WGN DIESEL /	IMA	M65	Read codes	
CIVIC WGN DIESEL /	IMA	M65	Erase Codes	
CIVIC WGN DIESEL /	IMA	M65	Read Freeze Frame Data	
CIVIC WGN DIESEL /	IMA	M65	Read Live Data	
CIVIC WGN DIESEL /	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CIVIC WGN DIESEL /	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CIVIC WGN DIESEL /	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CIVIC WGN DIESEL /	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CIVIC WGN DIESEL /	Intake Sounder Control System (ISC)	M6D	Read codes	
CIVIC WGN DIESEL /	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CIVIC WGN DIESEL /	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CIVIC WGN DIESEL /	Night Vision System (INVS)	0XB1	Read ECU Information	
CIVIC WGN DIESEL /	Night Vision System (INVS)	0XB1	Read codes	
CIVIC WGN DIESEL /	Night Vision System (INVS)	0XB1	Erase Codes	
CIVIC WGN DIESEL /	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Night Vision System (INVS)	0XB1	Read Live Data	
CIVIC WGN DIESEL /	Night Vision System (INVS)	0XB1	Adjustment	
CIVIC WGN DIESEL /	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CIVIC WGN DIESEL /	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CIVIC WGN DIESEL /	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CIVIC WGN DIESEL /	i-SHIFT	0XB0	Read ECU Information	
CIVIC WGN DIESEL /	i-SHIFT	0XB0	Read codes	

CIVIC WGN DIESEL /	i-SHIFT	0X80	Erase Codes	
CIVIC WGN DIESEL /	i-SHIFT	0X80	Read Live Data	
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Read codes	
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Erase Codes	
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Read Live Data	
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Self Check	
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	History Data	
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CIVIC WGN DIESEL /	Keyless Entry Control System (KAS)	M99	Registration	
CIVIC WGN DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CIVIC WGN DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CIVIC WGN DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CIVIC WGN DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CIVIC WGN DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CIVIC WGN DIESEL /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CIVIC WGN DIESEL /	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
CIVIC WGN DIESEL /	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
CIVIC WGN DIESEL /	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
CIVIC WGN DIESEL /	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
CIVIC WGN DIESEL /	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
CIVIC WGN DIESEL /	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
CIVIC WGN DIESEL /	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
CIVIC WGN DIESEL /	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
CIVIC WGN DIESEL /	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
CIVIC WGN DIESEL /	Management ECU Module (ME)	M74	Read ECU Information	
CIVIC WGN DIESEL /	Management ECU Module (ME)	M74	Read codes	
CIVIC WGN DIESEL /	Management ECU Module (ME)	M74	Erase Codes	
CIVIC WGN DIESEL /	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Management ECU Module (ME)	M74	Read Live Data	
CIVIC WGN DIESEL /	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CIVIC WGN DIESEL /	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CIVIC WGN DIESEL /	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CIVIC WGN DIESEL /	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CIVIC WGN DIESEL /	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CIVIC WGN DIESEL /	Multi-view camera system (MVCS)	M7A	Read codes	
CIVIC WGN DIESEL /	Multi-view camera system (MVCS)	M7A	Erase Codes	
CIVIC WGN DIESEL /	Multi-view camera system (MVCS)	M7A	Read Live Data	
CIVIC WGN DIESEL /	Multi-view camera system (MVCS)	M7A	Customization	
CIVIC WGN DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CIVIC WGN DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	LED Light

CIVIC WGN DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CIVIC WGN DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CIVIC WGN DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CIVIC WGN DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CIVIC WGN DIESEL /	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CIVIC WGN DIESEL /	Power Control Unit (PCU)	M83	Read ECU Information	
CIVIC WGN DIESEL /	Power Control Unit (PCU)	M83	Read codes	
CIVIC WGN DIESEL /	Power Control Unit (PCU)	M83	Erase Codes	
CIVIC WGN DIESEL /	Power Control Unit (PCU)	M83	Read Live Data	
CIVIC WGN DIESEL /	Power Control Unit (PCU)	M83	Self Check	
CIVIC WGN DIESEL /	Power Control Unit (PCU)	M83	History Data	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Read ECU Information	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Read codes	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Erase Codes	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Readiness Codes	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Read Live Data	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	VIN CHECK	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	Read ECU Information	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	Read codes	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	Erase Codes	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	Readiness Codes	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	Read Live Data	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	VIN CHECK	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Read ECU Information	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Read codes	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Erase Codes	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Readiness Codes	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Read Live Data	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	ACM
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	VIN CHECK	
CIVIC WGN DIESEL /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CIVIC WGN DIESEL /	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
CIVIC WGN DIESEL /	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
CIVIC WGN DIESEL /	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
CIVIC WGN DIESEL /	PSR	M27	Read ECU Information	
CIVIC WGN DIESEL /	PSR	M27	Read codes	
CIVIC WGN DIESEL /	PSR	M27	Erase Codes	
CIVIC WGN DIESEL /	PSR	M27	Read Live Data	

CIVIC WGN DIESEL /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CIVIC WGN DIESEL /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CIVIC WGN DIESEL /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CIVIC WGN DIESEL /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CIVIC WGN DIESEL /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CIVIC WGN DIESEL /	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CIVIC WGN DIESEL /	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CIVIC WGN DIESEL /	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CIVIC WGN DIESEL /	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CIVIC WGN DIESEL /	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CIVIC WGN DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CIVIC WGN DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CIVIC WGN DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CIVIC WGN DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CIVIC WGN DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CIVIC WGN DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CIVIC WGN DIESEL /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CIVIC WGN DIESEL /	Remote starter (RS)	M90	System Check	
CIVIC WGN DIESEL /	Remote starter (RS)	M90	HISTORY	
CIVIC WGN DIESEL /	Remote starter (RS)	M90	Registration	
CIVIC WGN DIESEL /	Seat load cell (SWS)	M6F	Read ECU Information	
CIVIC WGN DIESEL /	Seat load cell (SWS)	M6F	Read codes	
CIVIC WGN DIESEL /	Seat load cell (SWS)	M6F	Erase Codes	
CIVIC WGN DIESEL /	Seat load cell (SWS)	M6F	Read Live Data	
CIVIC WGN DIESEL /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CIVIC WGN DIESEL /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CIVIC WGN DIESEL /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CIVIC WGN DIESEL /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
CIVIC WGN DIESEL /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CIVIC WGN DIESEL /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CIVIC WGN DIESEL /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CIVIC WGN DIESEL /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CIVIC WGN DIESEL /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CIVIC WGN DIESEL /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CIVIC WGN DIESEL /	Groove track drive unit (SLOT ECU)	M98	Read codes	
CIVIC WGN DIESEL /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CIVIC WGN DIESEL /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CIVIC WGN DIESEL /	Groove track drive unit (SLOT ECU)	M98	Self Check	
CIVIC WGN DIESEL /	Groove track drive unit (SLOT ECU)	M98	History Data	
CIVIC WGN DIESEL /	Groove track drive unit (SLOT ECU)	M98	System Information	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9F	Read ECU Information	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9F	Read codes	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9F	Erase Codes	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9F	Read Live Data	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	MA0	Read ECU Information	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	MA0	Read codes	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	MA0	Erase Codes	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	MA0	Read Live Data	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	MA1	Read ECU Information	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	MA1	Read codes	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	MA1	Erase Codes	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	MA1	Read Live Data	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CIVIC WGN DIESEL /	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M2A	Read codes	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M2A	Erase Codes	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M2A	Read Live Data	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9C	Read ECU Information	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9C	Read codes	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9C	Erase Codes	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9C	Read Live Data	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9D	Read ECU Information	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9D	Read codes	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9D	Erase Codes	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9D	Read Live Data	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9D	Parameter Information	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization

CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9D	Function Test	
CIVIC WGN DIESEL /	Airbag Control System (SRS)	M9D	System Information	
CIVIC WGN DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CIVIC WGN DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CIVIC WGN DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CIVIC WGN DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CIVIC WGN DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CIVIC WGN DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CIVIC WGN DIESEL /	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CIVIC WGN DIESEL /	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CIVIC WGN DIESEL /	Variable Valve Timing Control System (SVT)	MA2	System Information	
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CIVIC WGN DIESEL /	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CIVIC WGN DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CIVIC WGN DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CIVIC WGN DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CIVIC WGN DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CIVIC WGN DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CIVIC WGN DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CIVIC WGN DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CIVIC WGN DIESEL /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CLARITY /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CLARITY /	Four-wheel steering control system (4WS)	M52	Read codes	
CLARITY /	Four-wheel steering control system (4WS)	M52	Erase Codes	
CLARITY /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CLARITY /	Four-wheel steering control system (4WS)	M52	Read Live Data	
CLARITY /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CLARITY /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CLARITY /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CLARITY /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CLARITY /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CLARITY /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CLARITY /	Automatic shift control system (A/T)	M1E	Read ECU Information	
CLARITY /	Automatic shift control system (A/T)	M1E	Read codes	
CLARITY /	Automatic shift control system (A/T)	M1E	Erase Codes	
CLARITY /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CLARITY /	Automatic shift control system (A/T)	M1E	Read Live Data	
CLARITY /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CLARITY /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CLARITY /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CLARITY /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CLARITY /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CLARITY /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CLARITY /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CLARITY /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CLARITY /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CLARITY /	Automatic shift control system (A/T)	M3B	Read ECU Information	
CLARITY /	Automatic shift control system (A/T)	M3B	Read codes	
CLARITY /	Automatic shift control system (A/T)	M3B	Erase Codes	
CLARITY /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CLARITY /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CLARITY /	Automatic shift control system (A/T)	M3B	Read Live Data	
CLARITY /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CLARITY /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CLARITY /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CLARITY /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CLARITY /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid D
CLARITY /	Automatic shift control system (A/T)	M3C	Read ECU Information	
CLARITY /	Automatic shift control system (A/T)	M3C	Read codes	
CLARITY /	Automatic shift control system (A/T)	M3C	Erase Codes	
CLARITY /	Automatic shift control system (A/T)	M81	Read ECU Information	
CLARITY /	Automatic shift control system (A/T)	M81	Read codes	
CLARITY /	Automatic shift control system (A/T)	M81	Erase Codes	
CLARITY /	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CLARITY /	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CLARITY /	Automatic shift control system (A/T)	M81	Read Live Data	
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CLARITY /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CLARITY /	Automatic shift control system (A/T)	M82	Read ECU Information	

CLARITY	/	Automatic shift control system (A/T)	M82	Read codes	
CLARITY	/	Automatic shift control system (A/T)	M82	Erase Codes	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
CLARITY	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CLARITY	/	Active Engine Control Support System (ACM)	M06	Read codes	
CLARITY	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
CLARITY	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CLARITY	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
CLARITY	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
CLARITY	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CLARITY	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CLARITY	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CLARITY	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CLARITY	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CLARITY	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
CLARITY	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CLARITY	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
CLARITY	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
CLARITY	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
CLARITY	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
CLARITY	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
CLARITY	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
CLARITY	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
CLARITY	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
CLARITY	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
CLARITY	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
CLARITY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
CLARITY	/	Transmission Control System (AT)	M18	Read ECU Information	
CLARITY	/	Transmission Control System (AT)	M18	Read codes	
CLARITY	/	Transmission Control System (AT)	M18	Erase Codes	
CLARITY	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
CLARITY	/	Transmission Control System (AT)	M18	Read Live Data	
CLARITY	/	Transmission Control System (AT)	M18	Adjustment	
CLARITY	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
CLARITY	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
CLARITY	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
CLARITY	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
CLARITY	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
CLARITY	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CLARITY	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
CLARITY	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CLARITY	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CLARITY	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CLARITY	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	



CLARITY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CLARITY	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
CLARITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
CLARITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CLARITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CLARITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
CLARITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
CLARITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
CLARITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
CLARITY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
CLARITY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CLARITY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CLARITY	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CLARITY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CLARITY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CLARITY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CLARITY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CLARITY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CLARITY	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CLARITY	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CLARITY	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CLARITY	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CLARITY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CLARITY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CLARITY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	

CLARITY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CLARITY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CLARITY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CLARITY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CLARITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CLARITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CLARITY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CLARITY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CLARITY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CLARITY	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CLARITY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CLARITY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CLARITY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CLARITY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CLARITY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CLARITY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Security	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CLARITY	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CLARITY	/	BODY ELECTRICAL/Security	MFF	History Data	
CLARITY	/	BODY ELECTRICAL/Security	MFF	History Clear	
CLARITY	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CLARITY	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CLARITY	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CLARITY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CLARITY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CLARITY	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CLARITY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CLARITY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CLARITY	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	

CLARITY	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CLARITY	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CLARITY	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CLARITY	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CLARITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CLARITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CLARITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CLARITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CLARITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CLARITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CLARITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CLARITY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CLARITY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CLARITY	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CLARITY	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CLARITY	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CLARITY	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CLARITY	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CLARITY	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CLARITY	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CLARITY	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CLARITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
CLARITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
CLARITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
CLARITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
CLARITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
CLARITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CLARITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
CLARITY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
CLARITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
CLARITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
CLARITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
CLARITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
CLARITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
CLARITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
CLARITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
CLARITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
CLARITY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
CLARITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
CLARITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
CLARITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
CLARITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
CLARITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
CLARITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
CLARITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
CLARITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
CLARITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
CLARITY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
CLARITY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
CLARITY	/	DBW	M34	Read ECU Information	
CLARITY	/	DBW	M34	Read codes	
CLARITY	/	DBW	M34	Erase Codes	
CLARITY	/	DBW	M34	Read Freeze Frame Data	
CLARITY	/	DBW	M34	Read Live Data	
CLARITY	/	DBW	M34	Inspection	Idle Speed Adjust
CLARITY	/	DBW	M34	Inspection	Throttle Test
CLARITY	/	DBW	M34	ECM Reset	
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off

CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CLARITY	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CLARITY	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CLARITY	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CLARITY	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CLARITY	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CLARITY	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CLARITY	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CLARITY	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CLARITY	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CLARITY	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CLARITY	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CLARITY	/	Capacitor Control System (EDLC)	M12	Read codes	
CLARITY	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CLARITY	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CLARITY	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CLARITY	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CLARITY	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CLARITY	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CLARITY	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CLARITY	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CLARITY	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CLARITY	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CLARITY	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CLARITY	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CLARITY	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CLARITY	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CLARITY	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CLARITY	/	Electric Powertrain / IMA	M66	Read ECU Information	
CLARITY	/	Electric Powertrain / IMA	M66	Read codes	
CLARITY	/	Electric Powertrain / IMA	M66	Erase Codes	
CLARITY	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CLARITY	/	Electric Powertrain / IMA	M66	Read Live Data	
CLARITY	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CLARITY	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CLARITY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CLARITY	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CLARITY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CLARITY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CLARITY	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CLARITY	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CLARITY	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CLARITY	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CLARITY	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CLARITY	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CLARITY	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CLARITY	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CLARITY	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CLARITY	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CLARITY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CLARITY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CLARITY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CLARITY	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CLARITY	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CLARITY	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CLARITY	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CLARITY	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CLARITY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CLARITY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CLARITY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CLARITY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CLARITY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CLARITY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum

CLARITY	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CLARITY	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CLARITY	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CLARITY	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CLARITY	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CLARITY	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CLARITY	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CLARITY	/	New energy battery (EV)	M44	Read ECU Information	
CLARITY	/	New energy battery (EV)	M44	Read codes	
CLARITY	/	New energy battery (EV)	M44	Erase Codes	
CLARITY	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CLARITY	/	New energy battery (EV)	M44	Read Live Data	
CLARITY	/	New energy battery (EV)	M44	Inspection	
CLARITY	/	New energy battery (EV)	M44	Adjustment	
CLARITY	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CLARITY	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CLARITY	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CLARITY	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CLARITY	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CLARITY	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CLARITY	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CLARITY	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CLARITY	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CLARITY	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CLARITY	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CLARITY	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CLARITY	/	FCW LDW	M4E	Read ECU Information	
CLARITY	/	FCW LDW	M4E	Read codes	
CLARITY	/	FCW LDW	M4E	Erase Codes	
CLARITY	/	FCW LDW	M4E	Read Live Data	
CLARITY	/	FCW LDW	M4E	Function Test	FCW Drive
CLARITY	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CLARITY	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CLARITY	/	FCW LDW	M4E	Function Test	Indicator Drive
CLARITY	/	FCW LDW	M4E	Adjustment	
CLARITY	/	Instrument Display System (GAUGE)	M2C	Read codes	
CLARITY	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CLARITY	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CLARITY	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CLARITY	/	Anti-lock brake control system (ABS)	M01	Read codes	
CLARITY	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CLARITY	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CLARITY	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CLARITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CLARITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CLARITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CLARITY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CLARITY	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CLARITY	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CLARITY	/	Anti-lock brake control system (ABS)	M02	Read codes	
CLARITY	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CLARITY	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CLARITY	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CLARITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CLARITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CLARITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CLARITY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CLARITY	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CLARITY	/	Anti-lock brake control system (ABS)	M03	Read codes	
CLARITY	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CLARITY	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CLARITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CLARITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CLARITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CLARITY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CLARITY	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CLARITY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CLARITY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CLARITY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CLARITY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CLARITY	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CLARITY	/	Anti-lock brake control system (ABS)	M19	Read codes	
CLARITY	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CLARITY	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CLARITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CLARITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CLARITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CLARITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA

CLARITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CLARITY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CLARITY	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CLARITY	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CLARITY	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CLARITY	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CLARITY	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CLARITY	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CLARITY	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CLARITY	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CLARITY	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CLARITY	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CLARITY	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CLARITY	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CLARITY	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CLARITY	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CLARITY	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CLARITY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CLARITY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CLARITY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CLARITY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CLARITY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CLARITY	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CLARITY	/	IMA	M63	Read ECU Information	
CLARITY	/	IMA	M63	Read codes	
CLARITY	/	IMA	M63	Erase Codes	
CLARITY	/	IMA	M63	Read Freeze Frame Data	
CLARITY	/	IMA	M63	Read Live Data	
CLARITY	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CLARITY	/	IMA	M63	Adjustment	SOC PRESET
CLARITY	/	IMA	M64	Read ECU Information	
CLARITY	/	IMA	M64	Read codes	
CLARITY	/	IMA	M64	Erase Codes	
CLARITY	/	IMA	M64	Read Freeze Frame Data	
CLARITY	/	IMA	M64	Read Live Data	
CLARITY	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CLARITY	/	IMA	M64	Adjustment	SOC PRESET
CLARITY	/	IMA	M65	Read ECU Information	
CLARITY	/	IMA	M65	Read codes	
CLARITY	/	IMA	M65	Erase Codes	
CLARITY	/	IMA	M65	Read Freeze Frame Data	
CLARITY	/	IMA	M65	Read Live Data	
CLARITY	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CLARITY	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CLARITY	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CLARITY	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CLARITY	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CLARITY	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CLARITY	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CLARITY	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CLARITY	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CLARITY	/	Night Vision System (INVS)	0XB1	Read codes	
CLARITY	/	Night Vision System (INVS)	0XB1	Erase Codes	
CLARITY	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CLARITY	/	Night Vision System (INVS)	0XB1	Read Live Data	
CLARITY	/	Night Vision System (INVS)	0XB1	Adjustment	
CLARITY	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CLARITY	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CLARITY	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CLARITY	/	i-SHIFT	0XB0	Read ECU Information	
CLARITY	/	i-SHIFT	0XB0	Read codes	
CLARITY	/	i-SHIFT	0XB0	Erase Codes	
CLARITY	/	i-SHIFT	0XB0	Read Live Data	
CLARITY	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CLARITY	/	Keyless Entry Control System (KAS)	M99	Read codes	
CLARITY	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CLARITY	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CLARITY	/	Keyless Entry Control System (KAS)	M99	Self Check	
CLARITY	/	Keyless Entry Control System (KAS)	M99	History Data	
CLARITY	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving

CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CLARITY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CLARITY	/	Keyless Entry Control System (KAS)	M99	Registration	
CLARITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CLARITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CLARITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CLARITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CLARITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CLARITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CLARITY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CLARITY	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CLARITY	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CLARITY	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CLARITY	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CLARITY	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CLARITY	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CLARITY	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CLARITY	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CLARITY	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CLARITY	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CLARITY	/	Management ECU Module (ME)	M74	Read ECU Information	
CLARITY	/	Management ECU Module (ME)	M74	Read codes	
CLARITY	/	Management ECU Module (ME)	M74	Erase Codes	
CLARITY	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CLARITY	/	Management ECU Module (ME)	M74	Read Live Data	
CLARITY	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CLARITY	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CLARITY	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CLARITY	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CLARITY	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CLARITY	/	Multi-view camera system (MVCS)	M7A	Read codes	
CLARITY	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CLARITY	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CLARITY	/	Multi-view camera system (MVCS)	M7A	Customization	
CLARITY	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CLARITY	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CLARITY	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CLARITY	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CLARITY	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CLARITY	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CLARITY	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CLARITY	/	Power Control Unit (PCU)	M83	Read ECU Information	
CLARITY	/	Power Control Unit (PCU)	M83	Read codes	
CLARITY	/	Power Control Unit (PCU)	M83	Erase Codes	
CLARITY	/	Power Control Unit (PCU)	M83	Read Live Data	
CLARITY	/	Power Control Unit (PCU)	M83	Self Check	
CLARITY	/	Power Control Unit (PCU)	M83	History Data	
CLARITY	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CLARITY	/	Engine Control System (PGM-FI)	M23	Read codes	
CLARITY	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CLARITY	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CLARITY	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CLARITY	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CLARITY	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CLARITY	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY

CLARITY /	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CLARITY /	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CLARITY /	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CLARITY /	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CLARITY /	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CLARITY /	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CLARITY /	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CLARITY /	Engine Control System (PGM-FI)	M23	VIN CHECK	
CLARITY /	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CLARITY /	Engine Control System (PGM-FI)	M50	Read ECU Information	
CLARITY /	Engine Control System (PGM-FI)	M50	Read codes	
CLARITY /	Engine Control System (PGM-FI)	M50	Erase Codes	
CLARITY /	Engine Control System (PGM-FI)	M50	Readiness Codes	
CLARITY /	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CLARITY /	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CLARITY /	Engine Control System (PGM-FI)	M50	Read Live Data	
CLARITY /	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CLARITY /	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CLARITY /	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CLARITY /	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CLARITY /	Engine Control System (PGM-FI)	M50	VIN CHECK	
CLARITY /	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CLARITY /	Engine Control System (PGM-FI)	M86	Read ECU Information	
CLARITY /	Engine Control System (PGM-FI)	M86	Read codes	
CLARITY /	Engine Control System (PGM-FI)	M86	Erase Codes	
CLARITY /	Engine Control System (PGM-FI)	M86	Readiness Codes	
CLARITY /	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CLARITY /	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CLARITY /	Engine Control System (PGM-FI)	M86	Read Live Data	
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	ACM
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CLARITY /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CLARITY /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CLARITY /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CLARITY /	Engine Control System (PGM-FI)	M86	VIN CHECK	
CLARITY /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CLARITY /	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
CLARITY /	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
CLARITY /	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
CLARITY /	PSR	M27	Read ECU Information	
CLARITY /	PSR	M27	Read codes	
CLARITY /	PSR	M27	Erase Codes	
CLARITY /	PSR	M27	Read Live Data	
CLARITY /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CLARITY /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CLARITY /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CLARITY /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CLARITY /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CLARITY /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
CLARITY /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
CLARITY /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
CLARITY /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
CLARITY /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
CLARITY /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
CLARITY /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CLARITY /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CLARITY /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CLARITY /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CLARITY /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CLARITY /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CLARITY /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CLARITY /	Remote starter (RS)	M90	System Check	
CLARITY /	Remote starter (RS)	M90	HISTORY	
CLARITY /	Remote starter (RS)	M90	Registration	
CLARITY /	Seat load cell (SWS)	M6F	Read ECU Information	
CLARITY /	Seat load cell (SWS)	M6F	Read codes	
CLARITY /	Seat load cell (SWS)	M6F	Erase Codes	
CLARITY /	Seat load cell (SWS)	M6F	Read Live Data	
CLARITY /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CLARITY /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CLARITY /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CLARITY /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
CLARITY /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CLARITY /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CLARITY /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization



CLARITY	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CLARITY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CLARITY	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CLARITY	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CLARITY	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CLARITY	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CLARITY	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CLARITY	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CLARITY	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CLARITY	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CLARITY	/	Airbag Control System (SRS)	M9F	Read codes	
CLARITY	/	Airbag Control System (SRS)	M9F	Erase Codes	
CLARITY	/	Airbag Control System (SRS)	M9F	Read Live Data	
CLARITY	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CLARITY	/	Airbag Control System (SRS)	MA0	Read codes	
CLARITY	/	Airbag Control System (SRS)	MA0	Erase Codes	
CLARITY	/	Airbag Control System (SRS)	MA0	Read Live Data	
CLARITY	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CLARITY	/	Airbag Control System (SRS)	MA1	Read codes	
CLARITY	/	Airbag Control System (SRS)	MA1	Erase Codes	
CLARITY	/	Airbag Control System (SRS)	MA1	Read Live Data	
CLARITY	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CLARITY	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CLARITY	/	Airbag Control System (SRS)	M2A	Read codes	
CLARITY	/	Airbag Control System (SRS)	M2A	Erase Codes	
CLARITY	/	Airbag Control System (SRS)	M2A	Read Live Data	
CLARITY	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CLARITY	/	Airbag Control System (SRS)	M9C	Read codes	
CLARITY	/	Airbag Control System (SRS)	M9C	Erase Codes	
CLARITY	/	Airbag Control System (SRS)	M9C	Read Live Data	
CLARITY	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CLARITY	/	Airbag Control System (SRS)	M9D	Read codes	
CLARITY	/	Airbag Control System (SRS)	M9D	Erase Codes	
CLARITY	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CLARITY	/	Airbag Control System (SRS)	M9D	Read Live Data	
CLARITY	/	Airbag Control System (SRS)	M9D	Parameter Information	
CLARITY	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CLARITY	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CLARITY	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CLARITY	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CLARITY	/	Airbag Control System (SRS)	M9D	Function Test	
CLARITY	/	Airbag Control System (SRS)	M9D	System Information	
CLARITY	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CLARITY	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CLARITY	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CLARITY	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CLARITY	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CLARITY	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CLARITY	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CLARITY	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CLARITY	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CLARITY	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CLARITY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CLARITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CLARITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CLARITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CLARITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CLARITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	

CLARITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CLARITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CLARITY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CR-V	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CR-V	/	Four-wheel steering control system (4WS)	M52	Read codes	
CR-V	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CR-V	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CR-V	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CR-V	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CR-V	/	Automatic shift control system (A/T)	M1E	Read codes	
CR-V	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CR-V	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CR-V	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CR-V	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CR-V	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CR-V	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CR-V	/	Automatic shift control system (A/T)	M3B	Read codes	
CR-V	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CR-V	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CR-V	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CR-V	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CR-V	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CR-V	/	Automatic shift control system (A/T)	M3C	Read codes	
CR-V	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CR-V	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CR-V	/	Automatic shift control system (A/T)	M81	Read codes	
CR-V	/	Automatic shift control system (A/T)	M81	Erase Codes	
CR-V	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CR-V	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CR-V	/	Automatic shift control system (A/T)	M81	Read Live Data	
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CR-V	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CR-V	/	Automatic shift control system (A/T)	M82	Read codes	
CR-V	/	Automatic shift control system (A/T)	M82	Erase Codes	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
CR-V	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CR-V	/	Active Engine Control Support System (ACM)	M06	Read codes	
CR-V	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
CR-V	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CR-V	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
CR-V	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
CR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF

CR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
CR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
CR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
CR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
CR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
CR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
CR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
CR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
CR-V	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
CR-V	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
CR-V	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
CR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
CR-V	/	Transmission Control System (AT)	M18	Read ECU Information	
CR-V	/	Transmission Control System (AT)	M18	Read codes	
CR-V	/	Transmission Control System (AT)	M18	Erase Codes	
CR-V	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
CR-V	/	Transmission Control System (AT)	M18	Read Live Data	
CR-V	/	Transmission Control System (AT)	M18	Adjustment	
CR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
CR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
CR-V	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
CR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
CR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
CR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
CR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CR-V	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CR-V	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
CR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
CR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
CR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
CR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
CR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
CR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
CR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CR-V	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	

CR-V	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CR-V	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	

CR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Security	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CR-V	/	BODY ELECTRICAL/Security	MFF	History Data	
CR-V	/	BODY ELECTRICAL/Security	MFF	History Clear	
CR-V	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CR-V	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CR-V	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CR-V	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CR-V	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CR-V	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CR-V	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CR-V	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive

CR-V	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CR-V	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read ECU Information	
CR-V	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read codes	
CR-V	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Erase Codes	
CR-V	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Freeze Frame Data	
CR-V	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Live Data	
CR-V	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	CMBS (CMS) ACTIVATION HISTORY	
CR-V	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	RADAR AIMING
CR-V	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	CMBS Brake
CR-V	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
CR-V	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
CR-V	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
CR-V	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
CR-V	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
CR-V	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
CR-V	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
CR-V	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
CR-V	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
CR-V	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
CR-V	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
CR-V	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
CR-V	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
CR-V	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
CR-V	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
CR-V	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
CR-V	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
CR-V	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
CR-V	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
CR-V	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
CR-V	/	DBW	M34	Read ECU Information	
CR-V	/	DBW	M34	Read codes	
CR-V	/	DBW	M34	Erase Codes	
CR-V	/	DBW	M34	Read Freeze Frame Data	
CR-V	/	DBW	M34	Read Live Data	
CR-V	/	DBW	M34	Inspection	Idle Speed Adjust
CR-V	/	DBW	M34	Inspection	Throttle Test
CR-V	/	DBW	M34	ECM Reset	
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CR-V	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CR-V	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CR-V	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CR-V	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CR-V	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CR-V	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CR-V	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CR-V	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CR-V	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CR-V	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CR-V	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test

CR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CR-V	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CR-V	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CR-V	/	Capacitor Control System (EDLC)	M12	Read codes	
CR-V	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CR-V	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CR-V	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CR-V	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CR-V	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CR-V	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CR-V	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CR-V	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CR-V	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CR-V	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CR-V	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CR-V	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CR-V	/	Electric Powertrain / IMA	M66	Read ECU Information	
CR-V	/	Electric Powertrain / IMA	M66	Read codes	
CR-V	/	Electric Powertrain / IMA	M66	Erase Codes	
CR-V	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CR-V	/	Electric Powertrain / IMA	M66	Read Live Data	
CR-V	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CR-V	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CR-V	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CR-V	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CR-V	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CR-V	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CR-V	/	New energy battery (EV)	M44	Read ECU Information	
CR-V	/	New energy battery (EV)	M44	Read codes	
CR-V	/	New energy battery (EV)	M44	Erase Codes	
CR-V	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CR-V	/	New energy battery (EV)	M44	Read Live Data	
CR-V	/	New energy battery (EV)	M44	Inspection	
CR-V	/	New energy battery (EV)	M44	Adjustment	
CR-V	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CR-V	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CR-V	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CR-V	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CR-V	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CR-V	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CR-V	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CR-V	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CR-V	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CR-V	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CR-V	/	FCW LDW	M4E	Read ECU Information	
CR-V	/	FCW LDW	M4E	Read codes	
CR-V	/	FCW LDW	M4E	Erase Codes	
CR-V	/	FCW LDW	M4E	Read Live Data	
CR-V	/	FCW LDW	M4E	Function Test	FCW Drive
CR-V	/	FCW LDW	M4E	Function Test	Left side lane departure warning

CR-V	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CR-V	/	FCW LDW	M4E	Function Test	Indicator Drive
CR-V	/	FCW LDW	M4E	Adjustment	
CR-V	/	Instrument Display System (GAUGE)	M2C	Read codes	
CR-V	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CR-V	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CR-V	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CR-V	/	Anti-lock brake control system (ABS)	M01	Read codes	
CR-V	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CR-V	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CR-V	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CR-V	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CR-V	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CR-V	/	Anti-lock brake control system (ABS)	M02	Read codes	
CR-V	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CR-V	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CR-V	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CR-V	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CR-V	/	Anti-lock brake control system (ABS)	M03	Read codes	
CR-V	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CR-V	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CR-V	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CR-V	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CR-V	/	Anti-lock brake control system (ABS)	M19	Read codes	
CR-V	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CR-V	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CR-V	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CR-V	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CR-V	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CR-V	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CR-V	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CR-V	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CR-V	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CR-V	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CR-V	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CR-V	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CR-V	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CR-V	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CR-V	/	IMA	M63	Read ECU Information	
CR-V	/	IMA	M63	Read codes	
CR-V	/	IMA	M63	Erase Codes	
CR-V	/	IMA	M63	Read Freeze Frame Data	
CR-V	/	IMA	M63	Read Live Data	
CR-V	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CR-V	/	IMA	M63	Adjustment	SOC PRESET
CR-V	/	IMA	M64	Read ECU Information	
CR-V	/	IMA	M64	Read codes	



CR-V	/	IMA	M64	Erase Codes	
CR-V	/	IMA	M64	Read Freeze Frame Data	
CR-V	/	IMA	M64	Read Live Data	
CR-V	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CR-V	/	IMA	M64	Adjustment	SOC PRESET
CR-V	/	IMA	M65	Read ECU Information	
CR-V	/	IMA	M65	Read codes	
CR-V	/	IMA	M65	Erase Codes	
CR-V	/	IMA	M65	Read Freeze Frame Data	
CR-V	/	IMA	M65	Read Live Data	
CR-V	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CR-V	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CR-V	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CR-V	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CR-V	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CR-V	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CR-V	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CR-V	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CR-V	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CR-V	/	Night Vision System (INVS)	0XB1	Read codes	
CR-V	/	Night Vision System (INVS)	0XB1	Erase Codes	
CR-V	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CR-V	/	Night Vision System (INVS)	0XB1	Read Live Data	
CR-V	/	Night Vision System (INVS)	0XB1	Adjustment	
CR-V	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CR-V	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CR-V	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CR-V	/	i-SHIFT	0XB0	Read ECU Information	
CR-V	/	i-SHIFT	0XB0	Read codes	
CR-V	/	i-SHIFT	0XB0	Erase Codes	
CR-V	/	i-SHIFT	0XB0	Read Live Data	
CR-V	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CR-V	/	Keyless Entry Control System (KAS)	M99	Read codes	
CR-V	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CR-V	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CR-V	/	Keyless Entry Control System (KAS)	M99	Self Check	
CR-V	/	Keyless Entry Control System (KAS)	M99	History Data	
CR-V	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CR-V	/	Keyless Entry Control System (KAS)	M99	Registration	
CR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	

CR-V	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Read Live Data	
CR-V	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	STATIC CAMERA AIMING
CR-V	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	VIDEO OUTPUT
CR-V	/	Electronically assisted lane keeping control system (Lk) M71	Read ECU Information	
CR-V	/	Electronically assisted lane keeping control system (Lk) M71	Read codes	
CR-V	/	Electronically assisted lane keeping control system (Lk) M71	Erase Codes	
CR-V	/	Electronically assisted lane keeping control system (Lk) M71	Read Freeze Frame Data	
CR-V	/	Electronically assisted lane keeping control system (Lk) M71	Read Live Data	
CR-V	/	Electronically assisted lane keeping control system (Lk) M71	Adjustment	STEERING REWRITE
CR-V	/	Electronically assisted lane keeping control system (Lk) M71	Customize	LDW OFFSET
CR-V	/	Electronically assisted lane keeping control system (Lk) M71	Customize	GAIN ADJUST
CR-V	/	Electronically assisted lane keeping control system (Lk) M71	Customize	DRIVING WILL
CR-V	/	Electronically assisted lane keeping control system (Lk) M71	Customize	CONTROL DELAY
CR-V	/	Management ECU Module (ME) M74	Read ECU Information	
CR-V	/	Management ECU Module (ME) M74	Read codes	
CR-V	/	Management ECU Module (ME) M74	Erase Codes	
CR-V	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
CR-V	/	Management ECU Module (ME) M74	Read Live Data	
CR-V	/	Multi-view camera and parking assist system (MVC/P) M26	Read ECU Information	
CR-V	/	Multi-view camera and parking assist system (MVC/P) M26	Read codes	
CR-V	/	Multi-view camera and parking assist system (MVC/P) M26	Erase Codes	
CR-V	/	Multi-view camera and parking assist system (MVC/P) M26	Read Live Data	
CR-V	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
CR-V	/	Multi-view camera system (MVCS) M7A	Read codes	
CR-V	/	Multi-view camera system (MVCS) M7A	Erase Codes	
CR-V	/	Multi-view camera system (MVCS) M7A	Read Live Data	
CR-V	/	Multi-view camera system (MVCS) M7A	Customization	
CR-V	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
CR-V	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
CR-V	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
CR-V	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
CR-V	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
CR-V	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
CR-V	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
CR-V	/	Power Control Unit (PCU) M83	Read ECU Information	
CR-V	/	Power Control Unit (PCU) M83	Read codes	
CR-V	/	Power Control Unit (PCU) M83	Erase Codes	
CR-V	/	Power Control Unit (PCU) M83	Read Live Data	
CR-V	/	Power Control Unit (PCU) M83	Self Check	
CR-V	/	Power Control Unit (PCU) M83	History Data	
CR-V	/	Engine Control System (PGM-FI) M23	Read ECU Information	
CR-V	/	Engine Control System (PGM-FI) M23	Read codes	
CR-V	/	Engine Control System (PGM-FI) M23	Erase Codes	
CR-V	/	Engine Control System (PGM-FI) M23	Readiness Codes	
CR-V	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
CR-V	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
CR-V	/	Engine Control System (PGM-FI) M23	Read Live Data	
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CR-V	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CR-V	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
CR-V	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CR-V	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
CR-V	/	Engine Control System (PGM-FI) M23	VIN CHECK	
CR-V	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
CR-V	/	Engine Control System (PGM-FI) M50	Read ECU Information	
CR-V	/	Engine Control System (PGM-FI) M50	Read codes	
CR-V	/	Engine Control System (PGM-FI) M50	Erase Codes	
CR-V	/	Engine Control System (PGM-FI) M50	Readiness Codes	
CR-V	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
CR-V	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
CR-V	/	Engine Control System (PGM-FI) M50	Read Live Data	
CR-V	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
CR-V	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
CR-V	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
CR-V	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
CR-V	/	Engine Control System (PGM-FI) M50	VIN CHECK	
CR-V	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
CR-V	/	Engine Control System (PGM-FI) M86	Read ECU Information	
CR-V	/	Engine Control System (PGM-FI) M86	Read codes	
CR-V	/	Engine Control System (PGM-FI) M86	Erase Codes	
CR-V	/	Engine Control System (PGM-FI) M86	Readiness Codes	
CR-V	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
CR-V	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
CR-V	/	Engine Control System (PGM-FI) M86	Read Live Data	
CR-V	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
CR-V	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
CR-V	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST

CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CR-V	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CR-V	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CR-V	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CR-V	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CR-V	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
CR-V	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
CR-V	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
CR-V	/	PSR	M27	Read ECU Information	
CR-V	/	PSR	M27	Read codes	
CR-V	/	PSR	M27	Erase Codes	
CR-V	/	PSR	M27	Read Live Data	
CR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CR-V	/	Remote starter (RS)	M90	System Check	
CR-V	/	Remote starter (RS)	M90	HISTORY	
CR-V	/	Remote starter (RS)	M90	Registration	
CR-V	/	Seat load cell (SWS)	M6F	Read ECU Information	
CR-V	/	Seat load cell (SWS)	M6F	Read codes	
CR-V	/	Seat load cell (SWS)	M6F	Erase Codes	
CR-V	/	Seat load cell (SWS)	M6F	Read Live Data	
CR-V	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CR-V	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CR-V	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CR-V	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
CR-V	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CR-V	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CR-V	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CR-V	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CR-V	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CR-V	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CR-V	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CR-V	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CR-V	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CR-V	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CR-V	/	Groove track drive unit (SLOT ECU)	M98	System Information	

CR-V	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CR-V	/	Airbag Control System (SRS)	M9F	Read codes	
CR-V	/	Airbag Control System (SRS)	M9F	Erase Codes	
CR-V	/	Airbag Control System (SRS)	M9F	Read Live Data	
CR-V	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CR-V	/	Airbag Control System (SRS)	MA0	Read codes	
CR-V	/	Airbag Control System (SRS)	MA0	Erase Codes	
CR-V	/	Airbag Control System (SRS)	MA0	Read Live Data	
CR-V	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CR-V	/	Airbag Control System (SRS)	MA1	Read codes	
CR-V	/	Airbag Control System (SRS)	MA1	Erase Codes	
CR-V	/	Airbag Control System (SRS)	MA1	Read Live Data	
CR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CR-V	/	Airbag Control System (SRS)	M2A	Read codes	
CR-V	/	Airbag Control System (SRS)	M2A	Erase Codes	
CR-V	/	Airbag Control System (SRS)	M2A	Read Live Data	
CR-V	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CR-V	/	Airbag Control System (SRS)	M9C	Read codes	
CR-V	/	Airbag Control System (SRS)	M9C	Erase Codes	
CR-V	/	Airbag Control System (SRS)	M9C	Read Live Data	
CR-V	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CR-V	/	Airbag Control System (SRS)	M9D	Read codes	
CR-V	/	Airbag Control System (SRS)	M9D	Erase Codes	
CR-V	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CR-V	/	Airbag Control System (SRS)	M9D	Read Live Data	
CR-V	/	Airbag Control System (SRS)	M9D	Parameter Information	
CR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CR-V	/	Airbag Control System (SRS)	M9D	Function Test	
CR-V	/	Airbag Control System (SRS)	M9D	System Information	
CR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CR-V	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CR-V	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CR-V	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CR-V	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CR-V	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CR-V	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CR-V DIESEL	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CR-V DIESEL	/	Four-wheel steering control system (4WS)	M52	Read codes	
CR-V DIESEL	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CR-V DIESEL	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CR-V DIESEL	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CR-V DIESEL	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CR-V DIESEL	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CR-V DIESEL	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CR-V DIESEL	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CR-V DIESEL	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CR-V DIESEL	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	Read codes	
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CR-V DIESEL	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CR-V DIESEL	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CR-V DIESEL	/	Automatic shift control system (A/T)	M3B	Read codes	
CR-V DIESEL	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CR-V DIESEL	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	

CR-V DIESEL	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CR-V DIESEL	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CR-V DIESEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CR-V DIESEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CR-V DIESEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CR-V DIESEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CR-V DIESEL	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CR-V DIESEL	/	Automatic shift control system (A/T)	M3C	Read codes	
CR-V DIESEL	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Read codes	
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Erase Codes	
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Read Live Data	
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CR-V DIESEL	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CR-V DIESEL	/	Automatic shift control system (A/T)	M82	Read codes	
CR-V DIESEL	/	Automatic shift control system (A/T)	M82	Erase Codes	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
CR-V DIESEL	/	Active Engine Control Support System (ACM) M06	M06	Read ECU Information	
CR-V DIESEL	/	Active Engine Control Support System (ACM) M06	M06	Read codes	
CR-V DIESEL	/	Active Engine Control Support System (ACM) M06	M06	Erase Codes	
CR-V DIESEL	/	Active Engine Control Support System (ACM) M06	M06	Read Freeze Frame Data	
CR-V DIESEL	/	Active Engine Control Support System (ACM) M06	M06	Read Live Data	
CR-V DIESEL	/	Active Engine Control Support System (ACM) M06	M06	ACM Reset	
CR-V DIESEL	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Front ACM Solenoid ON/OFF
CR-V DIESEL	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Rear ACM Solenoid ON/OFF
CR-V DIESEL	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CR-V DIESEL	/	Active Engine Control Support System (ACM) M06	M06	Inspection	ACM Test
CR-V DIESEL	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Read codes	
CR-V DIESEL	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Erase Codes	
CR-V DIESEL	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Read Live Data	
CR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
CR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
CR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
CR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
CR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
CR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
CR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
CR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
CR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
CR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
CR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
CR-V DIESEL	/	Transmission Control System (AT) M18	M18	Read ECU Information	
CR-V DIESEL	/	Transmission Control System (AT) M18	M18	Read codes	
CR-V DIESEL	/	Transmission Control System (AT) M18	M18	Erase Codes	
CR-V DIESEL	/	Transmission Control System (AT) M18	M18	Read Freeze Frame Data	
CR-V DIESEL	/	Transmission Control System (AT) M18	M18	Read Live Data	
CR-V DIESEL	/	Transmission Control System (AT) M18	M18	Adjustment	
CR-V DIESEL	/	Active Torque Converter Control System (ATTS) M0E	M0E	Read ECU Information	

CR-V DIESEL	/	Active Torque Converter Control System (ATTS)	MOE	Read codes	
CR-V DIESEL	/	Active Torque Converter Control System (ATTS)	MOE	Erase Codes	
CR-V DIESEL	/	Active Torque Converter Control System (ATTS)	MOE	Read Freeze Frame Data	
CR-V DIESEL	/	Active Torque Converter Control System (ATTS)	MOE	Read Live Data	
CR-V DIESEL	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CR-V DIESEL	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	STEERING ANGLE
CR-V DIESEL	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CR-V DIESEL	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ALL SENSORS
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CR-V DIESEL	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CR-V DIESEL	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
CR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
CR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
CR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
CR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
CR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
CR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
CR-V DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CR-V DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CR-V DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CR-V DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CR-V DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)

CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CR-V DIESEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CR-V DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CR-V DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CR-V DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CR-V DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CR-V DIESEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CR-V DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CR-V DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CR-V DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CR-V DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CR-V DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CR-V DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CR-V DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CR-V DIESEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	

CR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	History Data	
CR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	History Clear	
CR-V DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CR-V DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CR-V DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CR-V DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CR-V DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CR-V DIESEL	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CR-V DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CR-V DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CR-V DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CR-V DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CR-V DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CR-V DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CR-V DIESEL	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CR-V DIESEL	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CR-V DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CR-V DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CR-V DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CR-V DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CR-V DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CR-V DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read ECU Information	
CR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read codes	
CR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Erase Codes	
CR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read Freeze Frame Data	
CR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read Live Data	
CR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
CR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Miscellaneous Test	RADAR AIMING
CR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Miscellaneous Test	CMBS Brake
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	



CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data		
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	ECMPCM Reset		
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B	
CR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P	
CR-V DIESEL	/	DBW	M34	Read ECU Information	
CR-V DIESEL	/	DBW	M34	Read codes	
CR-V DIESEL	/	DBW	M34	Erase Codes	
CR-V DIESEL	/	DBW	M34	Read Freeze Frame Data	
CR-V DIESEL	/	DBW	M34	Read Live Data	
CR-V DIESEL	/	DBW	M34	Inspection	Idle Speed Adjust
CR-V DIESEL	/	DBW	M34	Inspection	Throttle Test
CR-V DIESEL	/	DBW	M34	ECM Reset	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CR-V DIESEL	/	Capacitor Control System (EDLC)	M12	Read codes	
CR-V DIESEL	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CR-V DIESEL	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CR-V DIESEL	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CR-V DIESEL	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CR-V DIESEL	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CR-V DIESEL	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CR-V DIESEL	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CR-V DIESEL	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CR-V DIESEL	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CR-V DIESEL	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CR-V DIESEL	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CR-V DIESEL	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CR-V DIESEL	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CR-V DIESEL	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CR-V DIESEL	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CR-V DIESEL	/	Electric Powertrain / IMA	M66	Read ECU Information	
CR-V DIESEL	/	Electric Powertrain / IMA	M66	Read codes	
CR-V DIESEL	/	Electric Powertrain / IMA	M66	Erase Codes	
CR-V DIESEL	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CR-V DIESEL	/	Electric Powertrain / IMA	M66	Read Live Data	
CR-V DIESEL	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST

CR-V DIESEL	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CR-V DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CR-V DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CR-V DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CR-V DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CR-V DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CR-V DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CR-V DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CR-V DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CR-V DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CR-V DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CR-V DIESEL	/	New energy battery (EV)	M44	Read ECU Information	
CR-V DIESEL	/	New energy battery (EV)	M44	Read codes	
CR-V DIESEL	/	New energy battery (EV)	M44	Erase Codes	
CR-V DIESEL	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CR-V DIESEL	/	New energy battery (EV)	M44	Read Live Data	
CR-V DIESEL	/	New energy battery (EV)	M44	Inspection	
CR-V DIESEL	/	New energy battery (EV)	M44	Adjustment	
CR-V DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CR-V DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CR-V DIESEL	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CR-V DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CR-V DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CR-V DIESEL	/	FCW LDW	M4E	Read ECU Information	
CR-V DIESEL	/	FCW LDW	M4E	Read codes	
CR-V DIESEL	/	FCW LDW	M4E	Erase Codes	
CR-V DIESEL	/	FCW LDW	M4E	Read Live Data	
CR-V DIESEL	/	FCW LDW	M4E	Function Test	FCW Drive
CR-V DIESEL	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CR-V DIESEL	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CR-V DIESEL	/	FCW LDW	M4E	Function Test	Indicator Drive
CR-V DIESEL	/	FCW LDW	M4E	Adjustment	
CR-V DIESEL	/	Instrument Display System (GAUGE)	M2C	Read codes	
CR-V DIESEL	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CR-V DIESEL	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Read codes	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Read codes	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA

CR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Read codes	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Read codes	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CR-V DIESEL	/	IMA	M63	Read ECU Information	
CR-V DIESEL	/	IMA	M63	Read codes	
CR-V DIESEL	/	IMA	M63	Erase Codes	
CR-V DIESEL	/	IMA	M63	Read Freeze Frame Data	
CR-V DIESEL	/	IMA	M63	Read Live Data	
CR-V DIESEL	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CR-V DIESEL	/	IMA	M63	Adjustment	SOC PRESET
CR-V DIESEL	/	IMA	M64	Read ECU Information	
CR-V DIESEL	/	IMA	M64	Read codes	
CR-V DIESEL	/	IMA	M64	Erase Codes	
CR-V DIESEL	/	IMA	M64	Read Freeze Frame Data	
CR-V DIESEL	/	IMA	M64	Read Live Data	
CR-V DIESEL	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CR-V DIESEL	/	IMA	M64	Adjustment	SOC PRESET
CR-V DIESEL	/	IMA	M65	Read ECU Information	
CR-V DIESEL	/	IMA	M65	Read codes	
CR-V DIESEL	/	IMA	M65	Erase Codes	
CR-V DIESEL	/	IMA	M65	Read Freeze Frame Data	
CR-V DIESEL	/	IMA	M65	Read Live Data	
CR-V DIESEL	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CR-V DIESEL	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CR-V DIESEL	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CR-V DIESEL	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CR-V DIESEL	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CR-V DIESEL	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CR-V DIESEL	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CR-V DIESEL	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CR-V DIESEL	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CR-V DIESEL	/	Night Vision System (INVS)	0XB1	Read codes	
CR-V DIESEL	/	Night Vision System (INVS)	0XB1	Erase Codes	
CR-V DIESEL	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CR-V DIESEL	/	Night Vision System (INVS)	0XB1	Read Live Data	
CR-V DIESEL	/	Night Vision System (INVS)	0XB1	Adjustment	
CR-V DIESEL	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CR-V DIESEL	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CR-V DIESEL	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CR-V DIESEL	/	i-SHIFT	0XB0	Read ECU Information	
CR-V DIESEL	/	i-SHIFT	0XB0	Read codes	
CR-V DIESEL	/	i-SHIFT	0XB0	Erase Codes	
CR-V DIESEL	/	i-SHIFT	0XB0	Read Live Data	
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	

CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Read codes	
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Self Check	
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	History Data	
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCONT Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Registration	
CR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CR-V DIESEL	/	Management ECU Module (ME)	M74	Read ECU Information	
CR-V DIESEL	/	Management ECU Module (ME)	M74	Read codes	
CR-V DIESEL	/	Management ECU Module (ME)	M74	Erase Codes	
CR-V DIESEL	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CR-V DIESEL	/	Management ECU Module (ME)	M74	Read Live Data	
CR-V DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CR-V DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CR-V DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CR-V DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Read codes	
CR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Customization	
CR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image

CR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CR-V DIESEL	/	Power Control Unit (PCU)	M83	Read ECU Information	
CR-V DIESEL	/	Power Control Unit (PCU)	M83	Read codes	
CR-V DIESEL	/	Power Control Unit (PCU)	M83	Erase Codes	
CR-V DIESEL	/	Power Control Unit (PCU)	M83	Read Live Data	
CR-V DIESEL	/	Power Control Unit (PCU)	M83	Self Check	
CR-V DIESEL	/	Power Control Unit (PCU)	M83	History Data	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Read codes	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Read codes	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Read codes	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CR-V DIESEL	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
CR-V DIESEL	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
CR-V DIESEL	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
CR-V DIESEL	/	PSR	M27	Read ECU Information	
CR-V DIESEL	/	PSR	M27	Read codes	
CR-V DIESEL	/	PSR	M27	Erase Codes	
CR-V DIESEL	/	PSR	M27	Read Live Data	
CR-V DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CR-V DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CR-V DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	

CR-V DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CR-V DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CR-V DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CR-V DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CR-V DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CR-V DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CR-V DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CR-V DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CR-V DIESEL	/	Remote starter (RS)	M90	System Check	
CR-V DIESEL	/	Remote starter (RS)	M90	HISTORY	
CR-V DIESEL	/	Remote starter (RS)	M90	Registration	
CR-V DIESEL	/	Seat load cell (SWS)	M6F	Read ECU Information	
CR-V DIESEL	/	Seat load cell (SWS)	M6F	Read codes	
CR-V DIESEL	/	Seat load cell (SWS)	M6F	Erase Codes	
CR-V DIESEL	/	Seat load cell (SWS)	M6F	Read Live Data	
CR-V DIESEL	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CR-V DIESEL	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CR-V DIESEL	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CR-V DIESEL	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
CR-V DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CR-V DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CR-V DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CR-V DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CR-V DIESEL	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CR-V DIESEL	/	Airbag Control System (SRS)	M9F	Read codes	
CR-V DIESEL	/	Airbag Control System (SRS)	M9F	Erase Codes	
CR-V DIESEL	/	Airbag Control System (SRS)	M9F	Read Live Data	
CR-V DIESEL	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CR-V DIESEL	/	Airbag Control System (SRS)	MA0	Read codes	
CR-V DIESEL	/	Airbag Control System (SRS)	MA0	Erase Codes	
CR-V DIESEL	/	Airbag Control System (SRS)	MA0	Read Live Data	
CR-V DIESEL	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CR-V DIESEL	/	Airbag Control System (SRS)	MA1	Read codes	
CR-V DIESEL	/	Airbag Control System (SRS)	MA1	Erase Codes	
CR-V DIESEL	/	Airbag Control System (SRS)	MA1	Read Live Data	
CR-V DIESEL	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CR-V DIESEL	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CR-V DIESEL	/	Airbag Control System (SRS)	M2A	Read codes	
CR-V DIESEL	/	Airbag Control System (SRS)	M2A	Erase Codes	
CR-V DIESEL	/	Airbag Control System (SRS)	M2A	Read Live Data	
CR-V DIESEL	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CR-V DIESEL	/	Airbag Control System (SRS)	M9C	Read codes	
CR-V DIESEL	/	Airbag Control System (SRS)	M9C	Erase Codes	
CR-V DIESEL	/	Airbag Control System (SRS)	M9C	Read Live Data	
CR-V DIESEL	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CR-V DIESEL	/	Airbag Control System (SRS)	M9D	Read codes	
CR-V DIESEL	/	Airbag Control System (SRS)	M9D	Erase Codes	
CR-V DIESEL	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CR-V DIESEL	/	Airbag Control System (SRS)	M9D	Read Live Data	
CR-V DIESEL	/	Airbag Control System (SRS)	M9D	Parameter Information	
CR-V DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CR-V DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CR-V DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CR-V DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CR-V DIESEL	/	Airbag Control System (SRS)	M9D	Function Test	

CR-V DIESEL	/	Airbag Control System (SRS)	M9D	System Information	
CR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CR-X	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CR-X	/	Four-wheel steering control system (4WS)	M52	Read codes	
CR-X	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CR-X	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CR-X	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CR-X	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CR-X	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CR-X	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CR-X	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CR-X	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CR-X	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CR-X	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CR-X	/	Automatic shift control system (A/T)	M1E	Read codes	
CR-X	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CR-X	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CR-X	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CR-X	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CR-X	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CR-X	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CR-X	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CR-X	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CR-X	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CR-X	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CR-X	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CR-X	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CR-X	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CR-X	/	Automatic shift control system (A/T)	M3B	Read codes	
CR-X	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CR-X	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CR-X	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CR-X	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CR-X	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CR-X	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CR-X	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CR-X	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CR-X	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CR-X	/	Automatic shift control system (A/T)	M3C	Read codes	
CR-X	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CR-X	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CR-X	/	Automatic shift control system (A/T)	M81	Read codes	
CR-X	/	Automatic shift control system (A/T)	M81	Erase Codes	
CR-X	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CR-X	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CR-X	/	Automatic shift control system (A/T)	M81	Read Live Data	
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CR-X	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CR-X	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CR-X	/	Automatic shift control system (A/T)	M82	Read codes	
CR-X	/	Automatic shift control system (A/T)	M82	Erase Codes	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	

CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Read codes	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Erase Codes	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Read Freeze Frame Data	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Read Live Data	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	Throttle Opening Angle Test
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 1
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 2
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	LIGHT CHECK
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
CR-X	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
CR-X	/	Active Engine Control Support System (ACM) M06	Read codes	
CR-X	/	Active Engine Control Support System (ACM) M06	Erase Codes	
CR-X	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
CR-X	/	Active Engine Control Support System (ACM) M06	Read Live Data	
CR-X	/	Active Engine Control Support System (ACM) M06	ACM Reset	
CR-X	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
CR-X	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
CR-X	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CR-X	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
CR-X	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
CR-X	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
CR-X	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
CR-X	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
CR-X	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
CR-X	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
CR-X	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
CR-X	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
CR-X	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
CR-X	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
CR-X	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
CR-X	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
CR-X	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
CR-X	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
CR-X	/	Transmission Control System (AT) M18	Read ECU Information	
CR-X	/	Transmission Control System (AT) M18	Read codes	
CR-X	/	Transmission Control System (AT) M18	Erase Codes	
CR-X	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
CR-X	/	Transmission Control System (AT) M18	Read Live Data	
CR-X	/	Transmission Control System (AT) M18	Adjustment	
CR-X	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
CR-X	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
CR-X	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
CR-X	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
CR-X	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
CR-X	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CR-X	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
CR-X	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CR-X	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
CR-X	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
CR-X	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
CR-X	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	



CR-X	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
CR-X	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
CR-X	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CR-X	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CR-X	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
CR-X	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
CR-X	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
CR-X	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
CR-X	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
CR-X	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CR-X	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CR-X	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CR-X	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CR-X	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CR-X	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CR-X	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CR-X	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CR-X	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CR-X	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CR-X	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CR-X	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CR-X	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CR-X	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CR-X	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CR-X	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CR-X	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Read codes	

CR-X	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CR-X	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CR-X	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CR-X	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CR-X	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CR-X	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CR-X	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CR-X	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CR-X	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CR-X	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CR-X	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CR-X	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CR-X	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CR-X	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CR-X	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Security	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CR-X	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CR-X	/	BODY ELECTRICAL/Security	MFF	History Data	
CR-X	/	BODY ELECTRICAL/Security	MFF	History Clear	
CR-X	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CR-X	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CR-X	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CR-X	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CR-X	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CR-X	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CR-X	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CR-X	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CR-X	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CR-X	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CR-X	/	BODY ELECTRICAL/YOP Security	MFF	History Data	

CR-X	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CR-X	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CR-X	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CR-X	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CR-X	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CR-X	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CR-X	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CR-X	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CR-X	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CR-X	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CR-X	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CR-X	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CR-X	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CR-X	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CR-X	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CR-X	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CR-X	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CR-X	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CR-X	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
CR-X	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
CR-X	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
CR-X	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
CR-X	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
CR-X	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CR-X	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
CR-X	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
CR-X	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
CR-X	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
CR-X	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
CR-X	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
CR-X	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
CR-X	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
CR-X	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
CR-X	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
CR-X	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
CR-X	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
CR-X	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
CR-X	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
CR-X	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
CR-X	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
CR-X	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
CR-X	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
CR-X	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
CR-X	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
CR-X	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
CR-X	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
CR-X	/	DBW	M34	Read ECU Information	
CR-X	/	DBW	M34	Read codes	
CR-X	/	DBW	M34	Erase Codes	
CR-X	/	DBW	M34	Read Freeze Frame Data	
CR-X	/	DBW	M34	Read Live Data	
CR-X	/	DBW	M34	Inspection	Idle Speed Adjust
CR-X	/	DBW	M34	Inspection	Throttle Test
CR-X	/	DBW	M34	ECM Reset	
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test

CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CR-X	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CR-X	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CR-X	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CR-X	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CR-X	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CR-X	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CR-X	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CR-X	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CR-X	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CR-X	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CR-X	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CR-X	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CR-X	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CR-X	/	Capacitor Control System (EDLC)	M12	Read codes	
CR-X	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CR-X	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CR-X	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CR-X	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CR-X	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CR-X	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CR-X	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CR-X	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CR-X	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CR-X	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CR-X	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CR-X	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CR-X	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CR-X	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CR-X	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CR-X	/	Electric Powertrain / IMA	M66	Read ECU Information	
CR-X	/	Electric Powertrain / IMA	M66	Read codes	
CR-X	/	Electric Powertrain / IMA	M66	Erase Codes	
CR-X	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CR-X	/	Electric Powertrain / IMA	M66	Read Live Data	
CR-X	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CR-X	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CR-X	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CR-X	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CR-X	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CR-X	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CR-X	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CR-X	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CR-X	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CR-X	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CR-X	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CR-X	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CR-X	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CR-X	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CR-X	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CR-X	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CR-X	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CR-X	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CR-X	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CR-X	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CR-X	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CR-X	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CR-X	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CR-X	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CR-X	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CR-X	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CR-X	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CR-X	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CR-X	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CR-X	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CR-X	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CR-X	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CR-X	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	

CR-X	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CR-X	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CR-X	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CR-X	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CR-X	/	New energy battery (EV)	M44	Read ECU Information	
CR-X	/	New energy battery (EV)	M44	Read codes	
CR-X	/	New energy battery (EV)	M44	Erase Codes	
CR-X	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CR-X	/	New energy battery (EV)	M44	Read Live Data	
CR-X	/	New energy battery (EV)	M44	Inspection	
CR-X	/	New energy battery (EV)	M44	Adjustment	
CR-X	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CR-X	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CR-X	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CR-X	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CR-X	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CR-X	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CR-X	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CR-X	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CR-X	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CR-X	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CR-X	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CR-X	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CR-X	/	FCW LDW	M4E	Read ECU Information	
CR-X	/	FCW LDW	M4E	Read codes	
CR-X	/	FCW LDW	M4E	Erase Codes	
CR-X	/	FCW LDW	M4E	Read Live Data	
CR-X	/	FCW LDW	M4E	Function Test	FCW Drive
CR-X	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CR-X	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CR-X	/	FCW LDW	M4E	Function Test	Indicator Drive
CR-X	/	FCW LDW	M4E	Adjustment	
CR-X	/	Instrument Display System (GAUGE)	M2C	Read codes	
CR-X	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CR-X	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CR-X	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CR-X	/	Anti-lock brake control system (ABS)	M01	Read codes	
CR-X	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CR-X	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CR-X	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CR-X	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CR-X	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CR-X	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CR-X	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CR-X	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CR-X	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CR-X	/	Anti-lock brake control system (ABS)	M02	Read codes	
CR-X	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CR-X	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CR-X	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CR-X	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CR-X	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CR-X	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CR-X	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CR-X	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CR-X	/	Anti-lock brake control system (ABS)	M03	Read codes	
CR-X	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CR-X	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CR-X	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CR-X	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CR-X	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CR-X	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CR-X	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CR-X	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CR-X	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CR-X	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CR-X	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CR-X	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CR-X	/	Anti-lock brake control system (ABS)	M19	Read codes	
CR-X	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CR-X	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CR-X	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CR-X	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CR-X	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CR-X	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CR-X	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CR-X	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CR-X	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor

CR-X	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CR-X	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CR-X	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CR-X	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CR-X	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CR-X	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CR-X	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CR-X	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CR-X	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CR-X	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CR-X	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CR-X	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CR-X	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CR-X	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CR-X	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CR-X	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CR-X	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CR-X	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CR-X	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CR-X	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CR-X	/	IMA	M63	Read ECU Information	
CR-X	/	IMA	M63	Read codes	
CR-X	/	IMA	M63	Erase Codes	
CR-X	/	IMA	M63	Read Freeze Frame Data	
CR-X	/	IMA	M63	Read Live Data	
CR-X	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CR-X	/	IMA	M63	Adjustment	SOC PRESET
CR-X	/	IMA	M64	Read ECU Information	
CR-X	/	IMA	M64	Read codes	
CR-X	/	IMA	M64	Erase Codes	
CR-X	/	IMA	M64	Read Freeze Frame Data	
CR-X	/	IMA	M64	Read Live Data	
CR-X	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CR-X	/	IMA	M64	Adjustment	SOC PRESET
CR-X	/	IMA	M65	Read ECU Information	
CR-X	/	IMA	M65	Read codes	
CR-X	/	IMA	M65	Erase Codes	
CR-X	/	IMA	M65	Read Freeze Frame Data	
CR-X	/	IMA	M65	Read Live Data	
CR-X	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CR-X	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CR-X	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CR-X	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CR-X	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CR-X	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CR-X	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CR-X	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CR-X	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CR-X	/	Night Vision System (INVS)	0XB1	Read codes	
CR-X	/	Night Vision System (INVS)	0XB1	Erase Codes	
CR-X	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CR-X	/	Night Vision System (INVS)	0XB1	Read Live Data	
CR-X	/	Night Vision System (INVS)	0XB1	Adjustment	
CR-X	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CR-X	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CR-X	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CR-X	/	i-SHIFT	0XB0	Read ECU Information	
CR-X	/	i-SHIFT	0XB0	Read codes	
CR-X	/	i-SHIFT	0XB0	Erase Codes	
CR-X	/	i-SHIFT	0XB0	Read Live Data	
CR-X	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CR-X	/	Keyless Entry Control System (KAS)	M99	Read codes	
CR-X	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CR-X	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CR-X	/	Keyless Entry Control System (KAS)	M99	Self Check	
CR-X	/	Keyless Entry Control System (KAS)	M99	History Data	
CR-X	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving

CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CR-X	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CR-X	/	Keyless Entry Control System (KAS)	M99	Registration	
CR-X	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CR-X	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CR-X	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CR-X	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CR-X	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CR-X	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CR-X	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CR-X	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
CR-X	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
CR-X	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
CR-X	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
CR-X	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
CR-X	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
CR-X	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
CR-X	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
CR-X	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
CR-X	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
CR-X	/	Management ECU Module (ME)	M74	Read ECU Information	
CR-X	/	Management ECU Module (ME)	M74	Read codes	
CR-X	/	Management ECU Module (ME)	M74	Erase Codes	
CR-X	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CR-X	/	Management ECU Module (ME)	M74	Read Live Data	
CR-X	/	Multi-view camera and parking assist system (MVC/P) M26	M26	Read ECU Information	
CR-X	/	Multi-view camera and parking assist system (MVC/P) M26	M26	Read codes	
CR-X	/	Multi-view camera and parking assist system (MVC/P) M26	M26	Erase Codes	
CR-X	/	Multi-view camera and parking assist system (MVC/P) M26	M26	Read Live Data	
CR-X	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CR-X	/	Multi-view camera system (MVCS)	M7A	Read codes	
CR-X	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CR-X	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CR-X	/	Multi-view camera system (MVCS)	M7A	Customization	
CR-X	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CR-X	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CR-X	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CR-X	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CR-X	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CR-X	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CR-X	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CR-X	/	Power Control Unit (PCU)	M83	Read ECU Information	
CR-X	/	Power Control Unit (PCU)	M83	Read codes	
CR-X	/	Power Control Unit (PCU)	M83	Erase Codes	
CR-X	/	Power Control Unit (PCU)	M83	Read Live Data	
CR-X	/	Power Control Unit (PCU)	M83	Self Check	
CR-X	/	Power Control Unit (PCU)	M83	History Data	
CR-X	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CR-X	/	Engine Control System (PGM-FI)	M23	Read codes	
CR-X	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CR-X	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CR-X	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CR-X	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CR-X	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST

CR-X	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CR-X	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CR-X	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CR-X	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CR-X	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CR-X	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CR-X	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CR-X	/	Engine Control System (PGM-FI)	M50	Read codes	
CR-X	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CR-X	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CR-X	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CR-X	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CR-X	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CR-X	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CR-X	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CR-X	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CR-X	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CR-X	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CR-X	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CR-X	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CR-X	/	Engine Control System (PGM-FI)	M86	Read codes	
CR-X	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CR-X	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CR-X	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CR-X	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CR-X	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CR-X	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CR-X	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CR-X	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CR-X	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CR-X	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CR-X	/	Four-wheel precision steering control system (PAWSC) M96	M96	Read codes	
CR-X	/	Four-wheel precision steering control system (PAWSC) M96	M96	Erase Codes	
CR-X	/	Four-wheel precision steering control system (PAWSC) M96	M96	Read Live Data	
CR-X	/	PSR	M27	Read ECU Information	
CR-X	/	PSR	M27	Read codes	
CR-X	/	PSR	M27	Erase Codes	
CR-X	/	PSR	M27	Read Live Data	
CR-X	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CR-X	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CR-X	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CR-X	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CR-X	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CR-X	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
CR-X	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
CR-X	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
CR-X	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
CR-X	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
CR-X	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
CR-X	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CR-X	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CR-X	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CR-X	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CR-X	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CR-X	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CR-X	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CR-X	/	Remote starter (RS)	M90	System Check	
CR-X	/	Remote starter (RS)	M90	HISTORY	
CR-X	/	Remote starter (RS)	M90	Registration	
CR-X	/	Seat load cell (SWS)	M6F	Read ECU Information	
CR-X	/	Seat load cell (SWS)	M6F	Read codes	
CR-X	/	Seat load cell (SWS)	M6F	Erase Codes	
CR-X	/	Seat load cell (SWS)	M6F	Read Live Data	
CR-X	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CR-X	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CR-X	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CR-X	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
CR-X	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CR-X	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CR-X	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CR-X	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	



CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CR-X	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CR-X	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CR-X	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CR-X	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CR-X	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CR-X	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CR-X	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CR-X	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CR-X	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CR-X	/	Airbag Control System (SRS)	M9F	Read codes	
CR-X	/	Airbag Control System (SRS)	M9F	Erase Codes	
CR-X	/	Airbag Control System (SRS)	M9F	Read Live Data	
CR-X	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CR-X	/	Airbag Control System (SRS)	MA0	Read codes	
CR-X	/	Airbag Control System (SRS)	MA0	Erase Codes	
CR-X	/	Airbag Control System (SRS)	MA0	Read Live Data	
CR-X	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CR-X	/	Airbag Control System (SRS)	MA1	Read codes	
CR-X	/	Airbag Control System (SRS)	MA1	Erase Codes	
CR-X	/	Airbag Control System (SRS)	MA1	Read Live Data	
CR-X	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CR-X	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CR-X	/	Airbag Control System (SRS)	M2A	Read codes	
CR-X	/	Airbag Control System (SRS)	M2A	Erase Codes	
CR-X	/	Airbag Control System (SRS)	M2A	Read Live Data	
CR-X	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CR-X	/	Airbag Control System (SRS)	M9C	Read codes	
CR-X	/	Airbag Control System (SRS)	M9C	Erase Codes	
CR-X	/	Airbag Control System (SRS)	M9C	Read Live Data	
CR-X	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CR-X	/	Airbag Control System (SRS)	M9D	Read codes	
CR-X	/	Airbag Control System (SRS)	M9D	Erase Codes	
CR-X	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CR-X	/	Airbag Control System (SRS)	M9D	Read Live Data	
CR-X	/	Airbag Control System (SRS)	M9D	Parameter Information	
CR-X	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CR-X	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CR-X	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CR-X	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CR-X	/	Airbag Control System (SRS)	M9D	Function Test	
CR-X	/	Airbag Control System (SRS)	M9D	System Information	
CR-X	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CR-X	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CR-X	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CR-X	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CR-X	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CR-X	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CR-X	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CR-X	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CR-X	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CR-X	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CR-X	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CR-X	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CR-X	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CR-X	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CR-X	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CR-X	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CR-X	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CR-X	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CR-X	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test

CR-X delSol	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CR-X delSol	/	Four-wheel steering control system (4WS)	M52	Read codes	
CR-X delSol	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CR-X delSol	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CR-X delSol	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CR-X delSol	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CR-X delSol	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CR-X delSol	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CR-X delSol	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CR-X delSol	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CR-X delSol	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CR-X delSol	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CR-X delSol	/	Automatic shift control system (A/T)	M1E	Read codes	
CR-X delSol	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CR-X delSol	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CR-X delSol	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CR-X delSol	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CR-X delSol	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CR-X delSol	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CR-X delSol	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CR-X delSol	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CR-X delSol	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CR-X delSol	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CR-X delSol	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CR-X delSol	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CR-X delSol	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CR-X delSol	/	Automatic shift control system (A/T)	M3B	Read codes	
CR-X delSol	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CR-X delSol	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CR-X delSol	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CR-X delSol	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CR-X delSol	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CR-X delSol	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CR-X delSol	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CR-X delSol	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CR-X delSol	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CR-X delSol	/	Automatic shift control system (A/T)	M3C	Read codes	
CR-X delSol	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CR-X delSol	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CR-X delSol	/	Automatic shift control system (A/T)	M81	Read codes	
CR-X delSol	/	Automatic shift control system (A/T)	M81	Erase Codes	
CR-X delSol	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CR-X delSol	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CR-X delSol	/	Automatic shift control system (A/T)	M81	Read Live Data	
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CR-X delSol	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CR-X delSol	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CR-X delSol	/	Automatic shift control system (A/T)	M82	Read codes	
CR-X delSol	/	Automatic shift control system (A/T)	M82	Erase Codes	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
CR-X delSol	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CR-X delSol	/	Active Engine Control Support System (ACM)	M06	Read codes	
CR-X delSol	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
CR-X delSol	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CR-X delSol	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
CR-X delSol	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
CR-X delSol	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CR-X delSol	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CR-X delSol	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CR-X delSol	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CR-X delSol	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CR-X delSol	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	

CR-X delSol	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CR-X delSol	/	Active / Automatic Shock Absorber Control System (A	MOD	Read ECU Information	
CR-X delSol	/	Active / Automatic Shock Absorber Control System (A	MOD	Read codes	
CR-X delSol	/	Active / Automatic Shock Absorber Control System (A	MOD	Erase Codes	
CR-X delSol	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Freeze Frame Data	
CR-X delSol	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Live Data	
CR-X delSol	/	Active / Automatic Shock Absorber Control System (A	MOD	Function Test	Damper Force Operation Test
CR-X delSol	/	Active / Automatic Shock Absorber Control System (A	MOD	Adjustment	Damper Stroke Calibration
CR-X delSol	/	Active / Automatic Shock Absorber Control System (A	M1A	Read codes	
CR-X delSol	/	Active / Automatic Shock Absorber Control System (A	M1A	Erase Codes	
CR-X delSol	/	Active / Automatic Shock Absorber Control System (A	M1A	Read Live Data	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read codes	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Erase Codes	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Freeze Frame Data	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Live Data	
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	ACC Brake (Brake Actuator)
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	CMBS Brake
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Brake Light (ACC Relay)
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Indicator Light
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Information Display
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Alarm Test
CR-X delSol	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Adjustment	Radar aiming
CR-X delSol	/	Transmission Control System (AT)	M18	Read ECU Information	
CR-X delSol	/	Transmission Control System (AT)	M18	Read codes	
CR-X delSol	/	Transmission Control System (AT)	M18	Erase Codes	
CR-X delSol	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
CR-X delSol	/	Transmission Control System (AT)	M18	Read Live Data	
CR-X delSol	/	Transmission Control System (AT)	M18	Adjustment	
CR-X delSol	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
CR-X delSol	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
CR-X delSol	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
CR-X delSol	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
CR-X delSol	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
CR-X delSol	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CR-X delSol	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
CR-X delSol	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CR-X delSol	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CR-X delSol	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CR-X delSol	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CR-X delSol	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
CR-X delSol	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
CR-X delSol	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CR-X delSol	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CR-X delSol	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
CR-X delSol	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
CR-X delSol	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
CR-X delSol	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
CR-X delSol	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
CR-X delSol	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CR-X delSol	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CR-X delSol	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CR-X delSol	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CR-X delSol	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CR-X delSol	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CR-X delSol	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CR-X delSol	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CR-X delSol	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CR-X delSol	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	

CR-X delSol	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CR-X delSol	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CR-X delSol	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CR-X delSol	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CR-X delSol	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CR-X delSol	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CR-X delSol	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CR-X delSol	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CR-X delSol	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CR-X delSol	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CR-X delSol	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CR-X delSol	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CR-X delSol	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CR-X delSol	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CR-X delSol	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CR-X delSol	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	

CR-X delSol	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CR-X delSol	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CR-X delSol	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CR-X delSol	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CR-X delSol	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CR-X delSol	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CR-X delSol	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Security	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CR-X delSol	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CR-X delSol	/	BODY ELECTRICAL/Security	MFF	History Data	
CR-X delSol	/	BODY ELECTRICAL/Security	MFF	History Clear	
CR-X delSol	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CR-X delSol	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CR-X delSol	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CR-X delSol	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CR-X delSol	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CR-X delSol	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CR-X delSol	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CR-X delSol	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CR-X delSol	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CR-X delSol	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CR-X delSol	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CR-X delSol	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CR-X delSol	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CR-X delSol	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CR-X delSol	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CR-X delSol	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CR-X delSol	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CR-X delSol	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CR-X delSol	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CR-X delSol	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CR-X delSol	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CR-X delSol	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CR-X delSol	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CR-X delSol	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CR-X delSol	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CR-X delSol	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CR-X delSol	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CR-X delSol	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CR-X delSol	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CR-X delSol	/	Collision Mitigation Brake Control System (CMBS/CM: M2E	M2E	Read ECU Information	
CR-X delSol	/	Collision Mitigation Brake Control System (CMBS/CM: M2E	M2E	Read codes	

CR-X delSol	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Erase Codes	
CR-X delSol	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read Freeze Frame Data	
CR-X delSol	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read Live Data	
CR-X delSol	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	CMBS (CMS) ACTIVATION HISTORY	
CR-X delSol	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Miscellaneous Test	RADAR AIMING
CR-X delSol	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Miscellaneous Test	CMBS Brake
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M1B	Read ECU Information	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M1B	Read codes	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M1B	Erase Codes	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M1B	Read Freeze Frame Data	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M1B	Read Live Data	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M1B	ECMPCM Reset	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Lock Solenoid Test
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Solenoid Tests
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Electrical Oil Pump Activation
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M33	Read ECU Information	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M33	Read codes	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M33	Erase Codes	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M33	Read Freeze Frame Data	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M33	Read Live Data	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M33	ECMPCM Reset	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	Read codes	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	ECMPCM Reset	
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
CR-X delSol	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
CR-X delSol	/	DBW M34	Read ECU Information	
CR-X delSol	/	DBW M34	Read codes	
CR-X delSol	/	DBW M34	Erase Codes	
CR-X delSol	/	DBW M34	Read Freeze Frame Data	
CR-X delSol	/	DBW M34	Read Live Data	
CR-X delSol	/	DBW M34	Inspection	Idle Speed Adjust
CR-X delSol	/	DBW M34	Inspection	Throttle Test
CR-X delSol	/	DBW M34	ECM Reset	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M37	Read codes	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
CR-X delSol	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
CR-X delSol	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M85	Read codes	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
CR-X delSol	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
CR-X delSol	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
CR-X delSol	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
CR-X delSol	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
CR-X delSol	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off

CR-X delSol	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CR-X delSol	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CR-X delSol	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CR-X delSol	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CR-X delSol	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CR-X delSol	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CR-X delSol	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CR-X delSol	/	Capacitor Control System (EDLC)	M12	Read codes	
CR-X delSol	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CR-X delSol	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CR-X delSol	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CR-X delSol	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CR-X delSol	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CR-X delSol	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CR-X delSol	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CR-X delSol	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CR-X delSol	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CR-X delSol	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CR-X delSol	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CR-X delSol	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CR-X delSol	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CR-X delSol	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CR-X delSol	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CR-X delSol	/	Electric Powertrain / IMA	M66	Read ECU Information	
CR-X delSol	/	Electric Powertrain / IMA	M66	Read codes	
CR-X delSol	/	Electric Powertrain / IMA	M66	Erase Codes	
CR-X delSol	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CR-X delSol	/	Electric Powertrain / IMA	M66	Read Live Data	
CR-X delSol	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CR-X delSol	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CR-X delSol	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CR-X delSol	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CR-X delSol	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CR-X delSol	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CR-X delSol	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CR-X delSol	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CR-X delSol	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CR-X delSol	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CR-X delSol	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CR-X delSol	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CR-X delSol	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CR-X delSol	/	New energy battery (EV)	M44	Read ECU Information	
CR-X delSol	/	New energy battery (EV)	M44	Read codes	
CR-X delSol	/	New energy battery (EV)	M44	Erase Codes	
CR-X delSol	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CR-X delSol	/	New energy battery (EV)	M44	Read Live Data	
CR-X delSol	/	New energy battery (EV)	M44	Inspection	
CR-X delSol	/	New energy battery (EV)	M44	Adjustment	
CR-X delSol	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CR-X delSol	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CR-X delSol	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CR-X delSol	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CR-X delSol	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CR-X delSol	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CR-X delSol	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CR-X delSol	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CR-X delSol	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CR-X delSol	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CR-X delSol	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CR-X delSol	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CR-X delSol	/	FCW LDW	M4E	Read ECU Information	
CR-X delSol	/	FCW LDW	M4E	Read codes	
CR-X delSol	/	FCW LDW	M4E	Erase Codes	
CR-X delSol	/	FCW LDW	M4E	Read Live Data	
CR-X delSol	/	FCW LDW	M4E	Function Test	FCW Drive
CR-X delSol	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CR-X delSol	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CR-X delSol	/	FCW LDW	M4E	Function Test	Indicator Drive
CR-X delSol	/	FCW LDW	M4E	Adjustment	

CR-X delSol	/	Instrument Display System (GAUGE)	M2C	Read codes	
CR-X delSol	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CR-X delSol	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Read codes	
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Read codes	
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Read codes	
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CR-X delSol	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Read codes	
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CR-X delSol	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CR-X delSol	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CR-X delSol	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CR-X delSol	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CR-X delSol	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CR-X delSol	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CR-X delSol	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CR-X delSol	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CR-X delSol	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CR-X delSol	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CR-X delSol	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CR-X delSol	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CR-X delSol	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CR-X delSol	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CR-X delSol	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CR-X delSol	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CR-X delSol	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CR-X delSol	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CR-X delSol	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CR-X delSol	/	IMA	M63	Read ECU Information	
CR-X delSol	/	IMA	M63	Read codes	
CR-X delSol	/	IMA	M63	Erase Codes	
CR-X delSol	/	IMA	M63	Read Freeze Frame Data	
CR-X delSol	/	IMA	M63	Read Live Data	
CR-X delSol	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CR-X delSol	/	IMA	M63	Adjustment	SOC PRESET
CR-X delSol	/	IMA	M64	Read ECU Information	
CR-X delSol	/	IMA	M64	Read codes	
CR-X delSol	/	IMA	M64	Erase Codes	
CR-X delSol	/	IMA	M64	Read Freeze Frame Data	
CR-X delSol	/	IMA	M64	Read Live Data	



CR-X delSol	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CR-X delSol	/	IMA	M64	Adjustment	SOC PRESET
CR-X delSol	/	IMA	M65	Read ECU Information	
CR-X delSol	/	IMA	M65	Read codes	
CR-X delSol	/	IMA	M65	Erase Codes	
CR-X delSol	/	IMA	M65	Read Freeze Frame Data	
CR-X delSol	/	IMA	M65	Read Live Data	
CR-X delSol	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CR-X delSol	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CR-X delSol	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CR-X delSol	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CR-X delSol	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CR-X delSol	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CR-X delSol	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CR-X delSol	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CR-X delSol	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CR-X delSol	/	Night Vision System (INVS)	0XB1	Read codes	
CR-X delSol	/	Night Vision System (INVS)	0XB1	Erase Codes	
CR-X delSol	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CR-X delSol	/	Night Vision System (INVS)	0XB1	Read Live Data	
CR-X delSol	/	Night Vision System (INVS)	0XB1	Adjustment	
CR-X delSol	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CR-X delSol	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CR-X delSol	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CR-X delSol	/	i-SHIFT	0XB0	Read ECU Information	
CR-X delSol	/	i-SHIFT	0XB0	Read codes	
CR-X delSol	/	i-SHIFT	0XB0	Erase Codes	
CR-X delSol	/	i-SHIFT	0XB0	Read Live Data	
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Read codes	
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Self Check	
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	History Data	
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC terminal) Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CR-X delSol	/	Keyless Entry Control System (KAS)	M99	Registration	
CR-X delSol	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CR-X delSol	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CR-X delSol	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CR-X delSol	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CR-X delSol	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CR-X delSol	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CR-X delSol	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT

CR-X delSol	/	Electronically assisted lane keeping control system (Lk M71	Read ECU Information	
CR-X delSol	/	Electronically assisted lane keeping control system (Lk M71	Read codes	
CR-X delSol	/	Electronically assisted lane keeping control system (Lk M71	Erase Codes	
CR-X delSol	/	Electronically assisted lane keeping control system (Lk M71	Read Freeze Frame Data	
CR-X delSol	/	Electronically assisted lane keeping control system (Lk M71	Read Live Data	
CR-X delSol	/	Electronically assisted lane keeping control system (Lk M71	Adjustment	STEERING REWRITE
CR-X delSol	/	Electronically assisted lane keeping control system (Lk M71	Customize	LDW OFFSET
CR-X delSol	/	Electronically assisted lane keeping control system (Lk M71	Customize	GAIN ADJUST
CR-X delSol	/	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
CR-X delSol	/	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
CR-X delSol	/	Management ECU Module (ME) M74	Read ECU Information	
CR-X delSol	/	Management ECU Module (ME) M74	Read codes	
CR-X delSol	/	Management ECU Module (ME) M74	Erase Codes	
CR-X delSol	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
CR-X delSol	/	Management ECU Module (ME) M74	Read Live Data	
CR-X delSol	/	Multi-view camera and parking assist system (MVC/P, M26	Read ECU Information	
CR-X delSol	/	Multi-view camera and parking assist system (MVC/P, M26	Read codes	
CR-X delSol	/	Multi-view camera and parking assist system (MVC/P, M26	Erase Codes	
CR-X delSol	/	Multi-view camera and parking assist system (MVC/P, M26	Read Live Data	
CR-X delSol	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
CR-X delSol	/	Multi-view camera system (MVCS) M7A	Read codes	
CR-X delSol	/	Multi-view camera system (MVCS) M7A	Erase Codes	
CR-X delSol	/	Multi-view camera system (MVCS) M7A	Read Live Data	
CR-X delSol	/	Multi-view camera system (MVCS) M7A	Customization	
CR-X delSol	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
CR-X delSol	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
CR-X delSol	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
CR-X delSol	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
CR-X delSol	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
CR-X delSol	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
CR-X delSol	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
CR-X delSol	/	Power Control Unit (PCU) M83	Read ECU Information	
CR-X delSol	/	Power Control Unit (PCU) M83	Read codes	
CR-X delSol	/	Power Control Unit (PCU) M83	Erase Codes	
CR-X delSol	/	Power Control Unit (PCU) M83	Read Live Data	
CR-X delSol	/	Power Control Unit (PCU) M83	Self Check	
CR-X delSol	/	Power Control Unit (PCU) M83	History Data	
CR-X delSol	/	Engine Control System (PGM-FI) M23	Read ECU Information	
CR-X delSol	/	Engine Control System (PGM-FI) M23	Read codes	
CR-X delSol	/	Engine Control System (PGM-FI) M23	Erase Codes	
CR-X delSol	/	Engine Control System (PGM-FI) M23	Readiness Codes	
CR-X delSol	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
CR-X delSol	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
CR-X delSol	/	Engine Control System (PGM-FI) M23	Read Live Data	
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CR-X delSol	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CR-X delSol	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
CR-X delSol	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CR-X delSol	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
CR-X delSol	/	Engine Control System (PGM-FI) M23	VIN CHECK	
CR-X delSol	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
CR-X delSol	/	Engine Control System (PGM-FI) M50	Read ECU Information	
CR-X delSol	/	Engine Control System (PGM-FI) M50	Read codes	
CR-X delSol	/	Engine Control System (PGM-FI) M50	Erase Codes	
CR-X delSol	/	Engine Control System (PGM-FI) M50	Readiness Codes	
CR-X delSol	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
CR-X delSol	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
CR-X delSol	/	Engine Control System (PGM-FI) M50	Read Live Data	
CR-X delSol	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
CR-X delSol	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
CR-X delSol	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
CR-X delSol	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
CR-X delSol	/	Engine Control System (PGM-FI) M50	VIN CHECK	
CR-X delSol	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
CR-X delSol	/	Engine Control System (PGM-FI) M86	Read ECU Information	
CR-X delSol	/	Engine Control System (PGM-FI) M86	Read codes	
CR-X delSol	/	Engine Control System (PGM-FI) M86	Erase Codes	
CR-X delSol	/	Engine Control System (PGM-FI) M86	Readiness Codes	
CR-X delSol	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
CR-X delSol	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
CR-X delSol	/	Engine Control System (PGM-FI) M86	Read Live Data	
CR-X delSol	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
CR-X delSol	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
CR-X delSol	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
CR-X delSol	/	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
CR-X delSol	/	Engine Control System (PGM-FI) M86	Inspection	EGR TEST
CR-X delSol	/	Engine Control System (PGM-FI) M86	Inspection	VTEC TEST

CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CR-X delSol	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CR-X delSol	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CR-X delSol	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CR-X delSol	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
CR-X delSol	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
CR-X delSol	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
CR-X delSol	/	PSR	M27	Read ECU Information	
CR-X delSol	/	PSR	M27	Read codes	
CR-X delSol	/	PSR	M27	Erase Codes	
CR-X delSol	/	PSR	M27	Read Live Data	
CR-X delSol	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CR-X delSol	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CR-X delSol	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CR-X delSol	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CR-X delSol	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CR-X delSol	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CR-X delSol	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CR-X delSol	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CR-X delSol	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CR-X delSol	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CR-X delSol	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CR-X delSol	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CR-X delSol	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CR-X delSol	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CR-X delSol	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CR-X delSol	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CR-X delSol	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CR-X delSol	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CR-X delSol	/	Remote starter (RS)	M90	System Check	
CR-X delSol	/	Remote starter (RS)	M90	HISTORY	
CR-X delSol	/	Remote starter (RS)	M90	Registration	
CR-X delSol	/	Seat load cell (SWS)	M6F	Read ECU Information	
CR-X delSol	/	Seat load cell (SWS)	M6F	Read codes	
CR-X delSol	/	Seat load cell (SWS)	M6F	Erase Codes	
CR-X delSol	/	Seat load cell (SWS)	M6F	Read Live Data	
CR-X delSol	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CR-X delSol	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CR-X delSol	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CR-X delSol	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
CR-X delSol	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CR-X delSol	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CR-X delSol	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CR-X delSol	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CR-X delSol	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CR-X delSol	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CR-X delSol	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CR-X delSol	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CR-X delSol	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CR-X delSol	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CR-X delSol	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CR-X delSol	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CR-X delSol	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CR-X delSol	/	Airbag Control System (SRS)	M9F	Read codes	
CR-X delSol	/	Airbag Control System (SRS)	M9F	Erase Codes	

CR-X delSol	/	Airbag Control System (SRS)	M9F	Read Live Data	
CR-X delSol	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CR-X delSol	/	Airbag Control System (SRS)	MA0	Read codes	
CR-X delSol	/	Airbag Control System (SRS)	MA0	Erase Codes	
CR-X delSol	/	Airbag Control System (SRS)	MA0	Read Live Data	
CR-X delSol	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CR-X delSol	/	Airbag Control System (SRS)	MA1	Read codes	
CR-X delSol	/	Airbag Control System (SRS)	MA1	Erase Codes	
CR-X delSol	/	Airbag Control System (SRS)	MA1	Read Live Data	
CR-X delSol	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CR-X delSol	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CR-X delSol	/	Airbag Control System (SRS)	M2A	Read codes	
CR-X delSol	/	Airbag Control System (SRS)	M2A	Erase Codes	
CR-X delSol	/	Airbag Control System (SRS)	M2A	Read Live Data	
CR-X delSol	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CR-X delSol	/	Airbag Control System (SRS)	M9C	Read codes	
CR-X delSol	/	Airbag Control System (SRS)	M9C	Erase Codes	
CR-X delSol	/	Airbag Control System (SRS)	M9C	Read Live Data	
CR-X delSol	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CR-X delSol	/	Airbag Control System (SRS)	M9D	Read codes	
CR-X delSol	/	Airbag Control System (SRS)	M9D	Erase Codes	
CR-X delSol	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CR-X delSol	/	Airbag Control System (SRS)	M9D	Read Live Data	
CR-X delSol	/	Airbag Control System (SRS)	M9D	Parameter Information	
CR-X delSol	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CR-X delSol	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CR-X delSol	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CR-X delSol	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CR-X delSol	/	Airbag Control System (SRS)	M9D	Function Test	
CR-X delSol	/	Airbag Control System (SRS)	M9D	System Information	
CR-X delSol	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CR-X delSol	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CR-X delSol	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CR-X delSol	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CR-X delSol	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CR-X delSol	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CR-X delSol	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CR-X delSol	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CR-X delSol	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CR-X delSol	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CR-X delSol	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CR-X delSol	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CR-X delSol	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CR-X delSol	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CR-X delSol	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CR-X delSol	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CR-X delSol	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CR-X delSol	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CR-X delSol	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CR-Z	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CR-Z	/	Four-wheel steering control system (4WS)	M52	Read codes	
CR-Z	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CR-Z	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CR-Z	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CR-Z	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CR-Z	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CR-Z	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CR-Z	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CR-Z	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CR-Z	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CR-Z	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CR-Z	/	Automatic shift control system (A/T)	M1E	Read codes	
CR-Z	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CR-Z	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CR-Z	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CR-Z	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CR-Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CR-Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CR-Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CR-Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CR-Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CR-Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CR-Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CR-Z	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CR-Z	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CR-Z	/	Automatic shift control system (A/T)	M3B	Read codes	
CR-Z	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CR-Z	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CR-Z	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CR-Z	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CR-Z	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test

CR-Z	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CR-Z	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CR-Z	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CR-Z	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CR-Z	/	Automatic shift control system (A/T)	M3C	Read codes	
CR-Z	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CR-Z	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CR-Z	/	Automatic shift control system (A/T)	M81	Read codes	
CR-Z	/	Automatic shift control system (A/T)	M81	Erase Codes	
CR-Z	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CR-Z	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CR-Z	/	Automatic shift control system (A/T)	M81	Read Live Data	
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CR-Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CR-Z	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CR-Z	/	Automatic shift control system (A/T)	M82	Read codes	
CR-Z	/	Automatic shift control system (A/T)	M82	Erase Codes	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
CR-Z	/	Active Engine Control Support System (ACM) M06	M06	Read ECU Information	
CR-Z	/	Active Engine Control Support System (ACM) M06	M06	Read codes	
CR-Z	/	Active Engine Control Support System (ACM) M06	M06	Erase Codes	
CR-Z	/	Active Engine Control Support System (ACM) M06	M06	Read Freeze Frame Data	
CR-Z	/	Active Engine Control Support System (ACM) M06	M06	Read Live Data	
CR-Z	/	Active Engine Control Support System (ACM) M06	M06	ACM Reset	
CR-Z	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Front ACM Solenoid ON/OFF
CR-Z	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Rear ACM Solenoid ON/OFF
CR-Z	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CR-Z	/	Active Engine Control Support System (ACM) M06	M06	Inspection	ACM Test
CR-Z	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Read codes	
CR-Z	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Erase Codes	
CR-Z	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Read Live Data	
CR-Z	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
CR-Z	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
CR-Z	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
CR-Z	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
CR-Z	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
CR-Z	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
CR-Z	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
CR-Z	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
CR-Z	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
CR-Z	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
CR-Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
CR-Z	/	Transmission Control System (AT) M18	M18	Read ECU Information	
CR-Z	/	Transmission Control System (AT) M18	M18	Read codes	
CR-Z	/	Transmission Control System (AT) M18	M18	Erase Codes	
CR-Z	/	Transmission Control System (AT) M18	M18	Read Freeze Frame Data	
CR-Z	/	Transmission Control System (AT) M18	M18	Read Live Data	
CR-Z	/	Transmission Control System (AT) M18	M18	Adjustment	
CR-Z	/	Active Torque Converter Control System (ATTTS) M0E	M0E	Read ECU Information	
CR-Z	/	Active Torque Converter Control System (ATTTS) M0E	M0E	Read codes	
CR-Z	/	Active Torque Converter Control System (ATTTS) M0E	M0E	Erase Codes	
CR-Z	/	Active Torque Converter Control System (ATTTS) M0E	M0E	Read Freeze Frame Data	

CR-Z	/	Active Torque Converter Control System (ATTS)	MOE	Read Live Data	
CR-Z	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CR-Z	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	STEERING ANGLE
CR-Z	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CR-Z	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ALL SENSORS
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CR-Z	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CR-Z	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CR-Z	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
CR-Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
CR-Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CR-Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CR-Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
CR-Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
CR-Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
CR-Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
CR-Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
CR-Z	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CR-Z	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CR-Z	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CR-Z	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CR-Z	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CR-Z	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CR-Z	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CR-Z	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CR-Z	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CR-Z	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CR-Z	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)

CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CR-Z	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CR-Z	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CR-Z	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CR-Z	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CR-Z	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CR-Z	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CR-Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CR-Z	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CR-Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CR-Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CR-Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CR-Z	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CR-Z	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CR-Z	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CR-Z	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CR-Z	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CR-Z	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CR-Z	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CR-Z	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CR-Z	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Security	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Security	MFF	Read Live Data	

CR-Z	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CR-Z	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CR-Z	/	BODY ELECTRICAL/Security	MFF	History Data	
CR-Z	/	BODY ELECTRICAL/Security	MFF	History Clear	
CR-Z	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CR-Z	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CR-Z	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CR-Z	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CR-Z	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CR-Z	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CR-Z	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CR-Z	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CR-Z	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CR-Z	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CR-Z	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CR-Z	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CR-Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CR-Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CR-Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CR-Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CR-Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CR-Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CR-Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CR-Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CR-Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CR-Z	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CR-Z	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CR-Z	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CR-Z	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CR-Z	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CR-Z	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CR-Z	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CR-Z	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CR-Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
CR-Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
CR-Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
CR-Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
CR-Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
CR-Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CR-Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
CR-Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
CR-Z	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
CR-Z	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
CR-Z	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
CR-Z	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
CR-Z	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
CR-Z	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
CR-Z	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
CR-Z	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
CR-Z	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
CR-Z	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
CR-Z	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
CR-Z	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
CR-Z	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
CR-Z	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
CR-Z	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
CR-Z	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
CR-Z	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
CR-Z	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
CR-Z	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
CR-Z	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
CR-Z	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
CR-Z	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
CR-Z	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
CR-Z	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
CR-Z	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
CR-Z	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid



CR-Z	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)	
CR-Z	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)	
CR-Z	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn	
CR-Z	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A	
CR-Z	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B	
CR-Z	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P	
CR-Z	/	DBW	M34	Read ECU Information	
CR-Z	/	DBW	M34	Read codes	
CR-Z	/	DBW	M34	Erase Codes	
CR-Z	/	DBW	M34	Read Freeze Frame Data	
CR-Z	/	DBW	M34	Read Live Data	
CR-Z	/	DBW	M34	Inspection	Idle Speed Adjust
CR-Z	/	DBW	M34	Inspection	Throttle Test
CR-Z	/	DBW	M34	ECM Reset	
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CR-Z	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CR-Z	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CR-Z	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CR-Z	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CR-Z	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CR-Z	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CR-Z	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CR-Z	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CR-Z	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CR-Z	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CR-Z	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CR-Z	/	Capacitor Control System (EDLC)	M12	Read codes	
CR-Z	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CR-Z	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CR-Z	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CR-Z	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CR-Z	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CR-Z	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CR-Z	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CR-Z	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CR-Z	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CR-Z	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CR-Z	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CR-Z	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CR-Z	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CR-Z	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CR-Z	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CR-Z	/	Electric Powertrain / IMA	M66	Read ECU Information	
CR-Z	/	Electric Powertrain / IMA	M66	Read codes	
CR-Z	/	Electric Powertrain / IMA	M66	Erase Codes	
CR-Z	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CR-Z	/	Electric Powertrain / IMA	M66	Read Live Data	
CR-Z	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CR-Z	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CR-Z	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CR-Z	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	

CR-Z	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CR-Z	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CR-Z	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CR-Z	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CR-Z	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CR-Z	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CR-Z	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CR-Z	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CR-Z	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CR-Z	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CR-Z	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CR-Z	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CR-Z	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CR-Z	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CR-Z	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CR-Z	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CR-Z	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CR-Z	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CR-Z	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CR-Z	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CR-Z	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CR-Z	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CR-Z	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CR-Z	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CR-Z	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CR-Z	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CR-Z	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CR-Z	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CR-Z	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CR-Z	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CR-Z	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CR-Z	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CR-Z	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CR-Z	/	New energy battery (EV)	M44	Read ECU Information	
CR-Z	/	New energy battery (EV)	M44	Read codes	
CR-Z	/	New energy battery (EV)	M44	Erase Codes	
CR-Z	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CR-Z	/	New energy battery (EV)	M44	Read Live Data	
CR-Z	/	New energy battery (EV)	M44	Inspection	
CR-Z	/	New energy battery (EV)	M44	Adjustment	
CR-Z	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CR-Z	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CR-Z	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CR-Z	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CR-Z	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CR-Z	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CR-Z	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CR-Z	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CR-Z	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CR-Z	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CR-Z	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CR-Z	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CR-Z	/	FCW LDW	M4E	Read ECU Information	
CR-Z	/	FCW LDW	M4E	Read codes	
CR-Z	/	FCW LDW	M4E	Erase Codes	
CR-Z	/	FCW LDW	M4E	Read Live Data	
CR-Z	/	FCW LDW	M4E	Function Test	FCW Drive
CR-Z	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CR-Z	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CR-Z	/	FCW LDW	M4E	Function Test	Indicator Drive
CR-Z	/	FCW LDW	M4E	Adjustment	
CR-Z	/	Instrument Display System (GAUGE)	M2C	Read codes	
CR-Z	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CR-Z	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CR-Z	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CR-Z	/	Anti-lock brake control system (ABS)	M01	Read codes	
CR-Z	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CR-Z	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CR-Z	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CR-Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CR-Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CR-Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CR-Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CR-Z	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CR-Z	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CR-Z	/	Anti-lock brake control system (ABS)	M02	Read codes	
CR-Z	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CR-Z	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CR-Z	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CR-Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CR-Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CR-Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CR-Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CR-Z	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CR-Z	/	Anti-lock brake control system (ABS)	M03	Read codes	

CR-Z	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CR-Z	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CR-Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CR-Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CR-Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CR-Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CR-Z	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CR-Z	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CR-Z	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CR-Z	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CR-Z	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CR-Z	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CR-Z	/	Anti-lock brake control system (ABS)	M19	Read codes	
CR-Z	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CR-Z	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CR-Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CR-Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CR-Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CR-Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CR-Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CR-Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CR-Z	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CR-Z	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CR-Z	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CR-Z	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CR-Z	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CR-Z	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CR-Z	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CR-Z	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CR-Z	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CR-Z	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CR-Z	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CR-Z	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CR-Z	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CR-Z	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CR-Z	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CR-Z	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CR-Z	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CR-Z	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CR-Z	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CR-Z	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CR-Z	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CR-Z	/	IMA	M63	Read ECU Information	
CR-Z	/	IMA	M63	Read codes	
CR-Z	/	IMA	M63	Erase Codes	
CR-Z	/	IMA	M63	Read Freeze Frame Data	
CR-Z	/	IMA	M63	Read Live Data	
CR-Z	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CR-Z	/	IMA	M63	Adjustment	SOC PRESET
CR-Z	/	IMA	M64	Read ECU Information	
CR-Z	/	IMA	M64	Read codes	
CR-Z	/	IMA	M64	Erase Codes	
CR-Z	/	IMA	M64	Read Freeze Frame Data	
CR-Z	/	IMA	M64	Read Live Data	
CR-Z	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CR-Z	/	IMA	M64	Adjustment	SOC PRESET
CR-Z	/	IMA	M65	Read ECU Information	
CR-Z	/	IMA	M65	Read codes	
CR-Z	/	IMA	M65	Erase Codes	
CR-Z	/	IMA	M65	Read Freeze Frame Data	
CR-Z	/	IMA	M65	Read Live Data	
CR-Z	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CR-Z	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CR-Z	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CR-Z	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CR-Z	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CR-Z	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CR-Z	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CR-Z	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CR-Z	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CR-Z	/	Night Vision System (INVS)	0XB1	Read codes	
CR-Z	/	Night Vision System (INVS)	0XB1	Erase Codes	
CR-Z	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CR-Z	/	Night Vision System (INVS)	0XB1	Read Live Data	
CR-Z	/	Night Vision System (INVS)	0XB1	Adjustment	
CR-Z	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CR-Z	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CR-Z	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CR-Z	/	i-SHIFT	0XB0	Read ECU Information	
CR-Z	/	i-SHIFT	0XB0	Read codes	
CR-Z	/	i-SHIFT	0XB0	Erase Codes	
CR-Z	/	i-SHIFT	0XB0	Read Live Data	
CR-Z	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CR-Z	/	Keyless Entry Control System (KAS)	M99	Read codes	
CR-Z	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CR-Z	/	Keyless Entry Control System (KAS)	M99	Read Live Data	

CR-Z	/	Keyless Entry Control System (KAS)	M99	Self Check	
CR-Z	/	Keyless Entry Control System (KAS)	M99	History Data	
CR-Z	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CR-Z	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CR-Z	/	Keyless Entry Control System (KAS)	M99	Registration	
CR-Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CR-Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CR-Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CR-Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CR-Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CR-Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CR-Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CR-Z	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CR-Z	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CR-Z	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CR-Z	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CR-Z	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CR-Z	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CR-Z	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CR-Z	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CR-Z	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CR-Z	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CR-Z	/	Management ECU Module (ME)	M74	Read ECU Information	
CR-Z	/	Management ECU Module (ME)	M74	Read codes	
CR-Z	/	Management ECU Module (ME)	M74	Erase Codes	
CR-Z	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CR-Z	/	Management ECU Module (ME)	M74	Read Live Data	
CR-Z	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CR-Z	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CR-Z	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CR-Z	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CR-Z	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CR-Z	/	Multi-view camera system (MVCS)	M7A	Read codes	
CR-Z	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CR-Z	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CR-Z	/	Multi-view camera system (MVCS)	M7A	Customization	
CR-Z	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CR-Z	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CR-Z	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CR-Z	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CR-Z	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CR-Z	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CR-Z	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CR-Z	/	Power Control Unit (PCU)	M83	Read ECU Information	

CR-Z	/	Power Control Unit (PCU)	M83	Read codes	
CR-Z	/	Power Control Unit (PCU)	M83	Erase Codes	
CR-Z	/	Power Control Unit (PCU)	M83	Read Live Data	
CR-Z	/	Power Control Unit (PCU)	M83	Self Check	
CR-Z	/	Power Control Unit (PCU)	M83	History Data	
CR-Z	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CR-Z	/	Engine Control System (PGM-FI)	M23	Read codes	
CR-Z	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CR-Z	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CR-Z	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CR-Z	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CR-Z	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CR-Z	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CR-Z	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CR-Z	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CR-Z	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CR-Z	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CR-Z	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CR-Z	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CR-Z	/	Engine Control System (PGM-FI)	M50	Read codes	
CR-Z	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CR-Z	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CR-Z	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CR-Z	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CR-Z	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CR-Z	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CR-Z	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CR-Z	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CR-Z	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CR-Z	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CR-Z	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CR-Z	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CR-Z	/	Engine Control System (PGM-FI)	M86	Read codes	
CR-Z	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CR-Z	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CR-Z	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CR-Z	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CR-Z	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CR-Z	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CR-Z	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CR-Z	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CR-Z	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CR-Z	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CR-Z	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
CR-Z	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
CR-Z	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
CR-Z	/	PSR	M27	Read ECU Information	
CR-Z	/	PSR	M27	Read codes	
CR-Z	/	PSR	M27	Erase Codes	
CR-Z	/	PSR	M27	Read Live Data	
CR-Z	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CR-Z	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CR-Z	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CR-Z	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CR-Z	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CR-Z	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	

CR-Z	/	Real-time four-wheel drive / intelligent control drive s M3A	Erase Codes	
CR-Z	/	Real-time four-wheel drive / intelligent control drive s M3A	Read Freeze Frame Data	
CR-Z	/	Real-time four-wheel drive / intelligent control drive s M3A	Read Live Data	
CR-Z	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	E-DPS Control Module Replacement
CR-Z	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	Longitudinal G Sensor Learning
CR-Z	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read ECU Information	
CR-Z	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read codes	
CR-Z	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Erase Codes	
CR-Z	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read Live Data	
CR-Z	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Adjustment	
CR-Z	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test	Monitor and Alarm
CR-Z	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test	Display Rear Camera output image
CR-Z	/	Remote starter (RS) M90	System Check	
CR-Z	/	Remote starter (RS) M90	HISTORY	
CR-Z	/	Remote starter (RS) M90	Registration	
CR-Z	/	Seat load cell (SWS) M6F	Read ECU Information	
CR-Z	/	Seat load cell (SWS) M6F	Read codes	
CR-Z	/	Seat load cell (SWS) M6F	Erase Codes	
CR-Z	/	Seat load cell (SWS) M6F	Read Live Data	
CR-Z	/	Seat load cell (SWS) M6F	System Check	SWS DTC CHECK
CR-Z	/	Seat load cell (SWS) M6F	System Check	Seat Output Check
CR-Z	/	Seat load cell (SWS) M6F	System Check	AFTER A VEHICLE COLLISION
CR-Z	/	Seat load cell (SWS) M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
CR-Z	/	Seat load cell (SWS) M6F	Adjustment	ODS Unit Initialization
CR-Z	/	Seat load cell (SWS) M6F	Adjustment	OPDS Initialization
CR-Z	/	Seat load cell (SWS) M6F	Adjustment	SWS Initialization
CR-Z	/	Seat load cell (SWS) M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M29	Read ECU Information	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M29	Read codes	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M29	Erase Codes	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M29	Readiness Codes	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M29	Read Freeze Frame Data	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M29	ECM/PCM Reset	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M29	Read Live Data	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M29	Inspection	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M29	Adjustment	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M29	VIN CHECK	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M29	Replace ECM/PCM	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Read ECU Information	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Read codes	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Erase Codes	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Read Freeze Frame Data	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Read Live Data	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Differential Torque	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CR-Z	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M ALL Sensor	
CR-Z	/	Groove track drive unit (SLOT ECU) M98	Read ECU Information	
CR-Z	/	Groove track drive unit (SLOT ECU) M98	Read codes	
CR-Z	/	Groove track drive unit (SLOT ECU) M98	Erase Codes	
CR-Z	/	Groove track drive unit (SLOT ECU) M98	Read Live Data	
CR-Z	/	Groove track drive unit (SLOT ECU) M98	Self Check	
CR-Z	/	Groove track drive unit (SLOT ECU) M98	History Data	
CR-Z	/	Groove track drive unit (SLOT ECU) M98	System Information	
CR-Z	/	Airbag Control System (SRS) M9F	Read ECU Information	
CR-Z	/	Airbag Control System (SRS) M9F	Read codes	
CR-Z	/	Airbag Control System (SRS) M9F	Erase Codes	
CR-Z	/	Airbag Control System (SRS) M9F	Read Live Data	
CR-Z	/	Airbag Control System (SRS) MA0	Read ECU Information	
CR-Z	/	Airbag Control System (SRS) MA0	Read codes	
CR-Z	/	Airbag Control System (SRS) MA0	Erase Codes	
CR-Z	/	Airbag Control System (SRS) MA0	Read Live Data	
CR-Z	/	Airbag Control System (SRS) MA1	Read ECU Information	
CR-Z	/	Airbag Control System (SRS) MA1	Read codes	
CR-Z	/	Airbag Control System (SRS) MA1	Erase Codes	
CR-Z	/	Airbag Control System (SRS) MA1	Read Live Data	
CR-Z	/	Airbag Control System (SRS) MA1	Miscellaneous Test	OPDS Initialization
CR-Z	/	Airbag Control System (SRS) MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CR-Z	/	Airbag Control System (SRS) M2A	Read codes	
CR-Z	/	Airbag Control System (SRS) M2A	Erase Codes	
CR-Z	/	Airbag Control System (SRS) M2A	Read Live Data	
CR-Z	/	Airbag Control System (SRS) M9C	Read ECU Information	
CR-Z	/	Airbag Control System (SRS) M9C	Read codes	
CR-Z	/	Airbag Control System (SRS) M9C	Erase Codes	
CR-Z	/	Airbag Control System (SRS) M9C	Read Live Data	
CR-Z	/	Airbag Control System (SRS) M9D	Read ECU Information	
CR-Z	/	Airbag Control System (SRS) M9D	Read codes	
CR-Z	/	Airbag Control System (SRS) M9D	Erase Codes	
CR-Z	/	Airbag Control System (SRS) M9D	Read Freeze Frame Data	
CR-Z	/	Airbag Control System (SRS) M9D	Read Live Data	
CR-Z	/	Airbag Control System (SRS) M9D	Parameter Information	
CR-Z	/	Airbag Control System (SRS) M9D	CALIBRATION	ODS Unit Initialization
CR-Z	/	Airbag Control System (SRS) M9D	CALIBRATION	OPDS Initialization
CR-Z	/	Airbag Control System (SRS) M9D	CALIBRATION	SWS Initialization
CR-Z	/	Airbag Control System (SRS) M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CR-Z	/	Airbag Control System (SRS) M9D	Function Test	
CR-Z	/	Airbag Control System (SRS) M9D	System Information	
CR-Z	/	Variable Valve Timing Control System (SVT) MA2	Read ECU Information	
CR-Z	/	Variable Valve Timing Control System (SVT) MA2	Read codes	

CR-Z	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CR-Z	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CR-Z	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CR-Z	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CR-Z	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CR-Z	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CR-Z	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CR-Z	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CR-Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CR-Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CR-Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CR-Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CR-Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CR-Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CR-Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CR-Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CR-Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CR-Z HPDSC	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CR-Z HPDSC	/	Four-wheel steering control system (4WS)	M52	Read codes	
CR-Z HPDSC	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CR-Z HPDSC	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CR-Z HPDSC	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CR-Z HPDSC	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CR-Z HPDSC	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CR-Z HPDSC	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CR-Z HPDSC	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CR-Z HPDSC	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CR-Z HPDSC	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	Read codes	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CR-Z HPDSC	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3B	Read codes	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3C	Read codes	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Read codes	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Erase Codes	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Read Live Data	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CR-Z HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CR-Z HPDSC	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M82	Read codes	
CR-Z HPDSC	/	Automatic shift control system (A/T)	M82	Erase Codes	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read ECU Information	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read codes	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Erase Codes	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read Freeze Frame Data	

CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Read Live Data	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	Throttle Opening Angle Test
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 1
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 2
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	LIGHT CHECK
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
CR-Z HPDSC	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
CR-Z HPDSC	/	Active Engine Control Support System (ACM) M06	Read codes	
CR-Z HPDSC	/	Active Engine Control Support System (ACM) M06	Erase Codes	
CR-Z HPDSC	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
CR-Z HPDSC	/	Active Engine Control Support System (ACM) M06	Read Live Data	
CR-Z HPDSC	/	Active Engine Control Support System (ACM) M06	ACM Reset	
CR-Z HPDSC	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
CR-Z HPDSC	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
CR-Z HPDSC	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CR-Z HPDSC	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
CR-Z HPDSC	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
CR-Z HPDSC	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
CR-Z HPDSC	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
CR-Z HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
CR-Z HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
CR-Z HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
CR-Z HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
CR-Z HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
CR-Z HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
CR-Z HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
CR-Z HPDSC	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
CR-Z HPDSC	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
CR-Z HPDSC	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
CR-Z HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
CR-Z HPDSC	/	Transmission Control System (AT) M18	Read ECU Information	
CR-Z HPDSC	/	Transmission Control System (AT) M18	Read codes	
CR-Z HPDSC	/	Transmission Control System (AT) M18	Erase Codes	
CR-Z HPDSC	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
CR-Z HPDSC	/	Transmission Control System (AT) M18	Read Live Data	
CR-Z HPDSC	/	Transmission Control System (AT) M18	Adjustment	
CR-Z HPDSC	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
CR-Z HPDSC	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
CR-Z HPDSC	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
CR-Z HPDSC	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
CR-Z HPDSC	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
CR-Z HPDSC	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CR-Z HPDSC	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
CR-Z HPDSC	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CR-Z HPDSC	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
CR-Z HPDSC	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
CR-Z HPDSC	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
CR-Z HPDSC	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	



CR-Z HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Function Test	Oncoming Vehicle Detection
CR-Z HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Function Test	Preceding Vehicle Detection
CR-Z HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CR-Z HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CR-Z HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Reset Operation
CR-Z HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Returning Operation
CR-Z HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Automatic Returning Distance
CR-Z HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Manual Returning Time
CR-Z HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Reset to default
CR-Z HPDSC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CR-Z HPDSC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CR-Z HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CR-Z HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CR-Z HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CR-Z HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CR-Z HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CR-Z HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CR-Z HPDSC	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CR-Z HPDSC	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CR-Z HPDSC	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CR-Z HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CR-Z HPDSC	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CR-Z HPDSC	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CR-Z HPDSC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CR-Z HPDSC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CR-Z HPDSC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command

CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CR-Z HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CR-Z HPDSC	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CR-Z HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CR-Z HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CR-Z HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CR-Z HPDSC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CR-Z HPDSC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CR-Z HPDSC	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CR-Z HPDSC	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CR-Z HPDSC	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CR-Z HPDSC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CR-Z HPDSC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CR-Z HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CR-Z HPDSC	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Security	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CR-Z HPDSC	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CR-Z HPDSC	/	BODY ELECTRICAL/Security	MFF	History Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Security	MFF	History Clear	
CR-Z HPDSC	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CR-Z HPDSC	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CR-Z HPDSC	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CR-Z HPDSC	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CR-Z HPDSC	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CR-Z HPDSC	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CR-Z HPDSC	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CR-Z HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CR-Z HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	

CR-Z HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CR-Z HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CR-Z HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CR-Z HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CR-Z HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CR-Z HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CR-Z HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CR-Z HPDSC	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CR-Z HPDSC	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CR-Z HPDSC	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CR-Z HPDSC	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CR-Z HPDSC	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CR-Z HPDSC	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CR-Z HPDSC	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CR-Z HPDSC	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CR-Z HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read ECU Information	
CR-Z HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read codes	
CR-Z HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Erase Codes	
CR-Z HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Freeze Frame Data	
CR-Z HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Live Data	
CR-Z HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CR-Z HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	RADAR AIMING
CR-Z HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	CMBS Brake
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
CR-Z HPDSC	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
CR-Z HPDSC	/	DBW	M34	Read ECU Information	
CR-Z HPDSC	/	DBW	M34	Read codes	
CR-Z HPDSC	/	DBW	M34	Erase Codes	
CR-Z HPDSC	/	DBW	M34	Read Freeze Frame Data	
CR-Z HPDSC	/	DBW	M34	Read Live Data	
CR-Z HPDSC	/	DBW	M34	Inspection	Idle Speed Adjust
CR-Z HPDSC	/	DBW	M34	Inspection	Throttle Test
CR-Z HPDSC	/	DBW	M34	ECM Reset	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status

CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CR-Z HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CR-Z HPDSC	/	Capacitor Control System (EDLC)	M12	Read codes	
CR-Z HPDSC	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CR-Z HPDSC	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CR-Z HPDSC	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CR-Z HPDSC	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CR-Z HPDSC	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CR-Z HPDSC	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CR-Z HPDSC	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CR-Z HPDSC	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CR-Z HPDSC	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CR-Z HPDSC	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CR-Z HPDSC	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CR-Z HPDSC	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CR-Z HPDSC	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CR-Z HPDSC	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CR-Z HPDSC	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CR-Z HPDSC	/	Electric Powertrain / IMA	M66	Read ECU Information	
CR-Z HPDSC	/	Electric Powertrain / IMA	M66	Read codes	
CR-Z HPDSC	/	Electric Powertrain / IMA	M66	Erase Codes	
CR-Z HPDSC	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CR-Z HPDSC	/	Electric Powertrain / IMA	M66	Read Live Data	
CR-Z HPDSC	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CR-Z HPDSC	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CR-Z HPDSC	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CR-Z HPDSC	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CR-Z HPDSC	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CR-Z HPDSC	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CR-Z HPDSC	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CR-Z HPDSC	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CR-Z HPDSC	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CR-Z HPDSC	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CR-Z HPDSC	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CR-Z HPDSC	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn

CR-Z HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CR-Z HPDSC	/	New energy battery (EV)	M44	Read ECU Information	
CR-Z HPDSC	/	New energy battery (EV)	M44	Read codes	
CR-Z HPDSC	/	New energy battery (EV)	M44	Erase Codes	
CR-Z HPDSC	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CR-Z HPDSC	/	New energy battery (EV)	M44	Read Live Data	
CR-Z HPDSC	/	New energy battery (EV)	M44	Inspection	
CR-Z HPDSC	/	New energy battery (EV)	M44	Adjustment	
CR-Z HPDSC	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CR-Z HPDSC	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CR-Z HPDSC	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CR-Z HPDSC	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CR-Z HPDSC	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CR-Z HPDSC	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CR-Z HPDSC	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CR-Z HPDSC	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CR-Z HPDSC	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CR-Z HPDSC	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CR-Z HPDSC	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CR-Z HPDSC	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CR-Z HPDSC	/	FCW LDW	M4E	Read ECU Information	
CR-Z HPDSC	/	FCW LDW	M4E	Read codes	
CR-Z HPDSC	/	FCW LDW	M4E	Erase Codes	
CR-Z HPDSC	/	FCW LDW	M4E	Read Live Data	
CR-Z HPDSC	/	FCW LDW	M4E	Function Test	FCW Drive
CR-Z HPDSC	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CR-Z HPDSC	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CR-Z HPDSC	/	FCW LDW	M4E	Function Test	Indicator Drive
CR-Z HPDSC	/	FCW LDW	M4E	Adjustment	
CR-Z HPDSC	/	Instrument Display System (GAUGE)	M2C	Read codes	
CR-Z HPDSC	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CR-Z HPDSC	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Read codes	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M02	Read codes	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Read codes	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Read codes	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CR-Z HPDSC	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CR-Z HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	

CR-Z HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CR-Z HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CR-Z HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CR-Z HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CR-Z HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CR-Z HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CR-Z HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CR-Z HPDSC	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CR-Z HPDSC	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CR-Z HPDSC	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CR-Z HPDSC	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CR-Z HPDSC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CR-Z HPDSC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CR-Z HPDSC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CR-Z HPDSC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CR-Z HPDSC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CR-Z HPDSC	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CR-Z HPDSC	/	IMA	M63	Read ECU Information	
CR-Z HPDSC	/	IMA	M63	Read codes	
CR-Z HPDSC	/	IMA	M63	Erase Codes	
CR-Z HPDSC	/	IMA	M63	Read Freeze Frame Data	
CR-Z HPDSC	/	IMA	M63	Read Live Data	
CR-Z HPDSC	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CR-Z HPDSC	/	IMA	M63	Adjustment	SOC PRESET
CR-Z HPDSC	/	IMA	M64	Read ECU Information	
CR-Z HPDSC	/	IMA	M64	Read codes	
CR-Z HPDSC	/	IMA	M64	Erase Codes	
CR-Z HPDSC	/	IMA	M64	Read Freeze Frame Data	
CR-Z HPDSC	/	IMA	M64	Read Live Data	
CR-Z HPDSC	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CR-Z HPDSC	/	IMA	M64	Adjustment	SOC PRESET
CR-Z HPDSC	/	IMA	M65	Read ECU Information	
CR-Z HPDSC	/	IMA	M65	Read codes	
CR-Z HPDSC	/	IMA	M65	Erase Codes	
CR-Z HPDSC	/	IMA	M65	Read Freeze Frame Data	
CR-Z HPDSC	/	IMA	M65	Read Live Data	
CR-Z HPDSC	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CR-Z HPDSC	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CR-Z HPDSC	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CR-Z HPDSC	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CR-Z HPDSC	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CR-Z HPDSC	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CR-Z HPDSC	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CR-Z HPDSC	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CR-Z HPDSC	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CR-Z HPDSC	/	Night Vision System (INVS)	0XB1	Read codes	
CR-Z HPDSC	/	Night Vision System (INVS)	0XB1	Erase Codes	
CR-Z HPDSC	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CR-Z HPDSC	/	Night Vision System (INVS)	0XB1	Read Live Data	
CR-Z HPDSC	/	Night Vision System (INVS)	0XB1	Adjustment	
CR-Z HPDSC	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CR-Z HPDSC	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CR-Z HPDSC	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CR-Z HPDSC	/	i-SHIFT	0XB0	Read ECU Information	
CR-Z HPDSC	/	i-SHIFT	0XB0	Read codes	
CR-Z HPDSC	/	i-SHIFT	0XB0	Erase Codes	
CR-Z HPDSC	/	i-SHIFT	0XB0	Read Live Data	
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Read codes	
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Self Check	
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	History Data	
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output

CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CR-Z HPDSC	/	Keyless Entry Control System (KAS)	M99	Registration	
CR-Z HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CR-Z HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CR-Z HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CR-Z HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CR-Z HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CR-Z HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CR-Z HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CR-Z HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CR-Z HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CR-Z HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CR-Z HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CR-Z HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CR-Z HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CR-Z HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CR-Z HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CR-Z HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CR-Z HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CR-Z HPDSC	/	Management ECU Module (ME)	M74	Read ECU Information	
CR-Z HPDSC	/	Management ECU Module (ME)	M74	Read codes	
CR-Z HPDSC	/	Management ECU Module (ME)	M74	Erase Codes	
CR-Z HPDSC	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CR-Z HPDSC	/	Management ECU Module (ME)	M74	Read Live Data	
CR-Z HPDSC	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CR-Z HPDSC	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CR-Z HPDSC	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CR-Z HPDSC	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CR-Z HPDSC	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CR-Z HPDSC	/	Multi-view camera system (MVCS)	M7A	Read codes	
CR-Z HPDSC	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CR-Z HPDSC	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CR-Z HPDSC	/	Multi-view camera system (MVCS)	M7A	Customization	
CR-Z HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CR-Z HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CR-Z HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CR-Z HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CR-Z HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CR-Z HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CR-Z HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CR-Z HPDSC	/	Power Control Unit (PCU)	M83	Read ECU Information	
CR-Z HPDSC	/	Power Control Unit (PCU)	M83	Read codes	
CR-Z HPDSC	/	Power Control Unit (PCU)	M83	Erase Codes	
CR-Z HPDSC	/	Power Control Unit (PCU)	M83	Read Live Data	
CR-Z HPDSC	/	Power Control Unit (PCU)	M83	Self Check	
CR-Z HPDSC	/	Power Control Unit (PCU)	M83	History Data	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Read codes	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data

CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	Read codes	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Read codes	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CR-Z HPDSC	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CR-Z HPDSC	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
CR-Z HPDSC	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
CR-Z HPDSC	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
CR-Z HPDSC	/	PSR	M27	Read ECU Information	
CR-Z HPDSC	/	PSR	M27	Read codes	
CR-Z HPDSC	/	PSR	M27	Erase Codes	
CR-Z HPDSC	/	PSR	M27	Read Live Data	
CR-Z HPDSC	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CR-Z HPDSC	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CR-Z HPDSC	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CR-Z HPDSC	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CR-Z HPDSC	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CR-Z HPDSC	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CR-Z HPDSC	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CR-Z HPDSC	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CR-Z HPDSC	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CR-Z HPDSC	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CR-Z HPDSC	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CR-Z HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CR-Z HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CR-Z HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CR-Z HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CR-Z HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CR-Z HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CR-Z HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CR-Z HPDSC	/	Remote starter (RS)	M90	System Check	
CR-Z HPDSC	/	Remote starter (RS)	M90	HISTORY	
CR-Z HPDSC	/	Remote starter (RS)	M90	Registration	
CR-Z HPDSC	/	Seat load cell (SWS)	M6F	Read ECU Information	
CR-Z HPDSC	/	Seat load cell (SWS)	M6F	Read codes	
CR-Z HPDSC	/	Seat load cell (SWS)	M6F	Erase Codes	
CR-Z HPDSC	/	Seat load cell (SWS)	M6F	Read Live Data	
CR-Z HPDSC	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CR-Z HPDSC	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CR-Z HPDSC	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CR-Z HPDSC	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
CR-Z HPDSC	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CR-Z HPDSC	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CR-Z HPDSC	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CR-Z HPDSC	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	



CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CR-Z HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CR-Z HPDSC	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CR-Z HPDSC	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CR-Z HPDSC	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CR-Z HPDSC	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CR-Z HPDSC	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CR-Z HPDSC	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CR-Z HPDSC	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9F	Read codes	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9F	Erase Codes	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9F	Read Live Data	
CR-Z HPDSC	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CR-Z HPDSC	/	Airbag Control System (SRS)	MA0	Read codes	
CR-Z HPDSC	/	Airbag Control System (SRS)	MA0	Erase Codes	
CR-Z HPDSC	/	Airbag Control System (SRS)	MA0	Read Live Data	
CR-Z HPDSC	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CR-Z HPDSC	/	Airbag Control System (SRS)	MA1	Read codes	
CR-Z HPDSC	/	Airbag Control System (SRS)	MA1	Erase Codes	
CR-Z HPDSC	/	Airbag Control System (SRS)	MA1	Read Live Data	
CR-Z HPDSC	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CR-Z HPDSC	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CR-Z HPDSC	/	Airbag Control System (SRS)	M2A	Read codes	
CR-Z HPDSC	/	Airbag Control System (SRS)	M2A	Erase Codes	
CR-Z HPDSC	/	Airbag Control System (SRS)	M2A	Read Live Data	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9C	Read codes	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9C	Erase Codes	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9C	Read Live Data	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9D	Read codes	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9D	Erase Codes	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9D	Read Live Data	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9D	Parameter Information	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CR-Z HPDSC	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CR-Z HPDSC	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CR-Z HPDSC	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CR-Z HPDSC	/	Airbag Control System (SRS)	M9D	Function Test	
CR-Z HPDSC	/	Airbag Control System (SRS)	M9D	System Information	
CR-Z HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CR-Z HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CR-Z HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CR-Z HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CR-Z HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CR-Z HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CR-Z HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CR-Z HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CR-Z HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CR-Z HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CR-Z HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CR-Z HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CR-Z HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CR-Z HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CR-Z HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CR-Z HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CR-Z HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CR-Z HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CR-Z HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CRIDER	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CRIDER	/	Four-wheel steering control system (4WS)	M52	Read codes	
CRIDER	/	Four-wheel steering control system (4WS)	M52	Erase Codes	

CRIDER	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CRIDER	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CRIDER	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CRIDER	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CRIDER	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CRIDER	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CRIDER	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CRIDER	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CRIDER	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CRIDER	/	Automatic shift control system (A/T)	M1E	Read codes	
CRIDER	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CRIDER	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CRIDER	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CRIDER	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CRIDER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CRIDER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CRIDER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CRIDER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CRIDER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CRIDER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CRIDER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CRIDER	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CRIDER	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CRIDER	/	Automatic shift control system (A/T)	M3B	Read codes	
CRIDER	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CRIDER	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CRIDER	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CRIDER	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CRIDER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CRIDER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CRIDER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CRIDER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CRIDER	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CRIDER	/	Automatic shift control system (A/T)	M3C	Read codes	
CRIDER	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CRIDER	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CRIDER	/	Automatic shift control system (A/T)	M81	Read codes	
CRIDER	/	Automatic shift control system (A/T)	M81	Erase Codes	
CRIDER	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CRIDER	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CRIDER	/	Automatic shift control system (A/T)	M81	Read Live Data	
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CRIDER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CRIDER	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CRIDER	/	Automatic shift control system (A/T)	M82	Read codes	
CRIDER	/	Automatic shift control system (A/T)	M82	Erase Codes	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
CRIDER	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
CRIDER	/	Active Engine Control Support System (ACM)	M06	Read codes	
CRIDER	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
CRIDER	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
CRIDER	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
CRIDER	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
CRIDER	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
CRIDER	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
CRIDER	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CRIDER	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
CRIDER	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
CRIDER	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
CRIDER	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
CRIDER	/	Active / Automatic Shock Absorber Control System (A MOD)		Read ECU Information	
CRIDER	/	Active / Automatic Shock Absorber Control System (A MOD)		Read codes	

CRIDER	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
CRIDER	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
CRIDER	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
CRIDER	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
CRIDER	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
CRIDER	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
CRIDER	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
CRIDER	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
CRIDER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
CRIDER	/	Transmission Control System (AT) M18	Read ECU Information	
CRIDER	/	Transmission Control System (AT) M18	Read codes	
CRIDER	/	Transmission Control System (AT) M18	Erase Codes	
CRIDER	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
CRIDER	/	Transmission Control System (AT) M18	Read Live Data	
CRIDER	/	Transmission Control System (AT) M18	Adjustment	
CRIDER	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
CRIDER	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
CRIDER	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
CRIDER	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
CRIDER	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
CRIDER	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CRIDER	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
CRIDER	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CRIDER	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
CRIDER	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
CRIDER	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
CRIDER	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
CRIDER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
CRIDER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CRIDER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CRIDER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
CRIDER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
CRIDER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
CRIDER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
CRIDER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
CRIDER	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
CRIDER	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
CRIDER	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
CRIDER	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
CRIDER	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
CRIDER	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
CRIDER	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
CRIDER	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
CRIDER	/	BODY ELECTRICAL/e-Call MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
CRIDER	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check

CRIDER	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CRIDER	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CRIDER	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CRIDER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CRIDER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CRIDER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CRIDER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CRIDER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CRIDER	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CRIDER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CRIDER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CRIDER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CRIDER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CRIDER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CRIDER	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor

CRIDER	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CRIDER	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CRIDER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CRIDER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CRIDER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CRIDER	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Security	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CRIDER	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CRIDER	/	BODY ELECTRICAL/Security	MFF	History Data	
CRIDER	/	BODY ELECTRICAL/Security	MFF	History Clear	
CRIDER	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CRIDER	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CRIDER	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CRIDER	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CRIDER	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CRIDER	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CRIDER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CRIDER	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CRIDER	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CRIDER	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CRIDER	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CRIDER	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CRIDER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CRIDER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CRIDER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CRIDER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CRIDER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CRIDER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CRIDER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CRIDER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CRIDER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CRIDER	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CRIDER	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CRIDER	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CRIDER	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CRIDER	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CRIDER	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CRIDER	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CRIDER	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CRIDER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
CRIDER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
CRIDER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
CRIDER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
CRIDER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	

CRIDER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	CMBS (CMS) ACTIVATION HISTORY	
CRIDER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	Miscellaneous Test	RADAR AIMING
CRIDER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	Miscellaneous Test	CMBS Brake
CRIDER	/	Promise Automatic Transmission Control System (CVT M1B	Read ECU Information	
CRIDER	/	Promise Automatic Transmission Control System (CVT M1B	Read codes	
CRIDER	/	Promise Automatic Transmission Control System (CVT M1B	Erase Codes	
CRIDER	/	Promise Automatic Transmission Control System (CVT M1B	Read Freeze Frame Data	
CRIDER	/	Promise Automatic Transmission Control System (CVT M1B	Read Live Data	
CRIDER	/	Promise Automatic Transmission Control System (CVT M1B	ECMPCM Reset	
CRIDER	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Lock Solenoid Test
CRIDER	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Solenoid Tests
CRIDER	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Electrical Oil Pump Activation
CRIDER	/	Promise Automatic Transmission Control System (CVT M33	Read ECU Information	
CRIDER	/	Promise Automatic Transmission Control System (CVT M33	Read codes	
CRIDER	/	Promise Automatic Transmission Control System (CVT M33	Erase Codes	
CRIDER	/	Promise Automatic Transmission Control System (CVT M33	Read Freeze Frame Data	
CRIDER	/	Promise Automatic Transmission Control System (CVT M33	Read Live Data	
CRIDER	/	Promise Automatic Transmission Control System (CVT M33	ECMPCM Reset	
CRIDER	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
CRIDER	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
CRIDER	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
CRIDER	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	Read codes	
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	ECMPCM Reset	
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
CRIDER	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
CRIDER	/	DBW M34	Read ECU Information	
CRIDER	/	DBW M34	Read codes	
CRIDER	/	DBW M34	Erase Codes	
CRIDER	/	DBW M34	Read Freeze Frame Data	
CRIDER	/	DBW M34	Read Live Data	
CRIDER	/	DBW M34	Inspection	Idle Speed Adjust
CRIDER	/	DBW M34	Inspection	Throttle Test
CRIDER	/	DBW M34	ECM Reset	
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
CRIDER	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
CRIDER	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
CRIDER	/	Diesel Engine Control System (DIESEL) M37	Read codes	
CRIDER	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
CRIDER	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
CRIDER	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
CRIDER	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
CRIDER	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
CRIDER	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
CRIDER	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Read codes	
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
CRIDER	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
CRIDER	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data

CRIDER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CRIDER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CRIDER	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CRIDER	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CRIDER	/	Capacitor Control System (EDLC)	M12	Read codes	
CRIDER	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CRIDER	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CRIDER	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CRIDER	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CRIDER	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CRIDER	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CRIDER	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CRIDER	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CRIDER	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CRIDER	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CRIDER	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CRIDER	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CRIDER	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CRIDER	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CRIDER	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CRIDER	/	Electric Powertrain / IMA	M66	Read ECU Information	
CRIDER	/	Electric Powertrain / IMA	M66	Read codes	
CRIDER	/	Electric Powertrain / IMA	M66	Erase Codes	
CRIDER	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CRIDER	/	Electric Powertrain / IMA	M66	Read Live Data	
CRIDER	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CRIDER	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CRIDER	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CRIDER	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CRIDER	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CRIDER	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CRIDER	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CRIDER	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CRIDER	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CRIDER	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CRIDER	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CRIDER	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CRIDER	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CRIDER	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CRIDER	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CRIDER	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CRIDER	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CRIDER	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CRIDER	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CRIDER	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CRIDER	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CRIDER	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CRIDER	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CRIDER	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CRIDER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CRIDER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CRIDER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CRIDER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CRIDER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CRIDER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CRIDER	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CRIDER	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CRIDER	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CRIDER	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CRIDER	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CRIDER	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CRIDER	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CRIDER	/	New energy battery (EV)	M44	Read ECU Information	
CRIDER	/	New energy battery (EV)	M44	Read codes	
CRIDER	/	New energy battery (EV)	M44	Erase Codes	
CRIDER	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CRIDER	/	New energy battery (EV)	M44	Read Live Data	
CRIDER	/	New energy battery (EV)	M44	Inspection	
CRIDER	/	New energy battery (EV)	M44	Adjustment	
CRIDER	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CRIDER	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CRIDER	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CRIDER	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CRIDER	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CRIDER	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CRIDER	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CRIDER	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CRIDER	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CRIDER	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CRIDER	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CRIDER	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CRIDER	/	FCW LDW	M4E	Read ECU Information	
CRIDER	/	FCW LDW	M4E	Read codes	
CRIDER	/	FCW LDW	M4E	Erase Codes	
CRIDER	/	FCW LDW	M4E	Read Live Data	
CRIDER	/	FCW LDW	M4E	Function Test	FCW Drive
CRIDER	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CRIDER	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CRIDER	/	FCW LDW	M4E	Function Test	Indicator Drive
CRIDER	/	FCW LDW	M4E	Adjustment	
CRIDER	/	Instrument Display System (GAUGE)	M2C	Read codes	
CRIDER	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CRIDER	/	Instrument Display System (GAUGE)	M2C	Read Live Data	

CRIDER	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CRIDER	/	Anti-lock brake control system (ABS)	M01	Read codes	
CRIDER	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CRIDER	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CRIDER	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CRIDER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CRIDER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CRIDER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CRIDER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CRIDER	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CRIDER	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CRIDER	/	Anti-lock brake control system (ABS)	M02	Read codes	
CRIDER	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CRIDER	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CRIDER	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CRIDER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CRIDER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CRIDER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CRIDER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CRIDER	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CRIDER	/	Anti-lock brake control system (ABS)	M03	Read codes	
CRIDER	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CRIDER	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CRIDER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CRIDER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CRIDER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CRIDER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CRIDER	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CRIDER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CRIDER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CRIDER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CRIDER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CRIDER	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CRIDER	/	Anti-lock brake control system (ABS)	M19	Read codes	
CRIDER	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CRIDER	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CRIDER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CRIDER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CRIDER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CRIDER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CRIDER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CRIDER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CRIDER	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CRIDER	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CRIDER	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CRIDER	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CRIDER	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CRIDER	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CRIDER	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CRIDER	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CRIDER	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CRIDER	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CRIDER	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CRIDER	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CRIDER	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CRIDER	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CRIDER	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CRIDER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CRIDER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CRIDER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CRIDER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CRIDER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CRIDER	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CRIDER	/	IMA	M63	Read ECU Information	
CRIDER	/	IMA	M63	Read codes	
CRIDER	/	IMA	M63	Erase Codes	
CRIDER	/	IMA	M63	Read Freeze Frame Data	
CRIDER	/	IMA	M63	Read Live Data	
CRIDER	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CRIDER	/	IMA	M63	Adjustment	SOC PRESET
CRIDER	/	IMA	M64	Read ECU Information	
CRIDER	/	IMA	M64	Read codes	
CRIDER	/	IMA	M64	Erase Codes	
CRIDER	/	IMA	M64	Read Freeze Frame Data	
CRIDER	/	IMA	M64	Read Live Data	
CRIDER	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CRIDER	/	IMA	M64	Adjustment	SOC PRESET
CRIDER	/	IMA	M65	Read ECU Information	



CRIDER	/	IMA	M65	Read codes	
CRIDER	/	IMA	M65	Erase Codes	
CRIDER	/	IMA	M65	Read Freeze Frame Data	
CRIDER	/	IMA	M65	Read Live Data	
CRIDER	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CRIDER	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CRIDER	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CRIDER	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CRIDER	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CRIDER	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CRIDER	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CRIDER	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CRIDER	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CRIDER	/	Night Vision System (INVS)	0XB1	Read codes	
CRIDER	/	Night Vision System (INVS)	0XB1	Erase Codes	
CRIDER	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CRIDER	/	Night Vision System (INVS)	0XB1	Read Live Data	
CRIDER	/	Night Vision System (INVS)	0XB1	Adjustment	
CRIDER	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CRIDER	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CRIDER	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CRIDER	/	i-SHIFT	0XB0	Read ECU Information	
CRIDER	/	i-SHIFT	0XB0	Read codes	
CRIDER	/	i-SHIFT	0XB0	Erase Codes	
CRIDER	/	i-SHIFT	0XB0	Read Live Data	
CRIDER	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CRIDER	/	Keyless Entry Control System (KAS)	M99	Read codes	
CRIDER	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CRIDER	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CRIDER	/	Keyless Entry Control System (KAS)	M99	Self Check	
CRIDER	/	Keyless Entry Control System (KAS)	M99	History Data	
CRIDER	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CRIDER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CRIDER	/	Keyless Entry Control System (KAS)	M99	Registration	
CRIDER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CRIDER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CRIDER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CRIDER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CRIDER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CRIDER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CRIDER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CRIDER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
CRIDER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
CRIDER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	

CRIDER	/	Electronically assisted lane keeping control system (Lk M71	Read Freeze Frame Data	
CRIDER	/	Electronically assisted lane keeping control system (Lk M71	Read Live Data	
CRIDER	/	Electronically assisted lane keeping control system (Lk M71	Adjustment	STEERING REWRITE
CRIDER	/	Electronically assisted lane keeping control system (Lk M71	Customize	LDW OFFSET
CRIDER	/	Electronically assisted lane keeping control system (Lk M71	Customize	GAIN ADJUST
CRIDER	/	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
CRIDER	/	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
CRIDER	/	Management ECU Module (ME) M74	Read ECU Information	
CRIDER	/	Management ECU Module (ME) M74	Read codes	
CRIDER	/	Management ECU Module (ME) M74	Erase Codes	
CRIDER	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
CRIDER	/	Management ECU Module (ME) M74	Read Live Data	
CRIDER	/	Multi-view camera and parking assist system (MVC/P, M26	Read ECU Information	
CRIDER	/	Multi-view camera and parking assist system (MVC/P, M26	Read codes	
CRIDER	/	Multi-view camera and parking assist system (MVC/P, M26	Erase Codes	
CRIDER	/	Multi-view camera and parking assist system (MVC/P, M26	Read Live Data	
CRIDER	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
CRIDER	/	Multi-view camera system (MVCS) M7A	Read codes	
CRIDER	/	Multi-view camera system (MVCS) M7A	Erase Codes	
CRIDER	/	Multi-view camera system (MVCS) M7A	Read Live Data	
CRIDER	/	Multi-view camera system (MVCS) M7A	Customization	
CRIDER	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
CRIDER	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
CRIDER	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
CRIDER	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
CRIDER	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
CRIDER	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
CRIDER	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
CRIDER	/	Power Control Unit (PCU) M83	Read ECU Information	
CRIDER	/	Power Control Unit (PCU) M83	Read codes	
CRIDER	/	Power Control Unit (PCU) M83	Erase Codes	
CRIDER	/	Power Control Unit (PCU) M83	Read Live Data	
CRIDER	/	Power Control Unit (PCU) M83	Self Check	
CRIDER	/	Power Control Unit (PCU) M83	History Data	
CRIDER	/	Engine Control System (PGM-FI) M23	Read ECU Information	
CRIDER	/	Engine Control System (PGM-FI) M23	Read codes	
CRIDER	/	Engine Control System (PGM-FI) M23	Erase Codes	
CRIDER	/	Engine Control System (PGM-FI) M23	Readiness Codes	
CRIDER	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
CRIDER	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
CRIDER	/	Engine Control System (PGM-FI) M23	Read Live Data	
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CRIDER	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CRIDER	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
CRIDER	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CRIDER	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
CRIDER	/	Engine Control System (PGM-FI) M23	VIN CHECK	
CRIDER	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
CRIDER	/	Engine Control System (PGM-FI) M50	Read ECU Information	
CRIDER	/	Engine Control System (PGM-FI) M50	Read codes	
CRIDER	/	Engine Control System (PGM-FI) M50	Erase Codes	
CRIDER	/	Engine Control System (PGM-FI) M50	Readiness Codes	
CRIDER	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
CRIDER	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
CRIDER	/	Engine Control System (PGM-FI) M50	Read Live Data	
CRIDER	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
CRIDER	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
CRIDER	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
CRIDER	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
CRIDER	/	Engine Control System (PGM-FI) M50	VIN CHECK	
CRIDER	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
CRIDER	/	Engine Control System (PGM-FI) M86	Read ECU Information	
CRIDER	/	Engine Control System (PGM-FI) M86	Read codes	
CRIDER	/	Engine Control System (PGM-FI) M86	Erase Codes	
CRIDER	/	Engine Control System (PGM-FI) M86	Readiness Codes	
CRIDER	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
CRIDER	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
CRIDER	/	Engine Control System (PGM-FI) M86	Read Live Data	
CRIDER	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
CRIDER	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
CRIDER	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
CRIDER	/	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
CRIDER	/	Engine Control System (PGM-FI) M86	Inspection	EGR TEST
CRIDER	/	Engine Control System (PGM-FI) M86	Inspection	VTEC TEST
CRIDER	/	Engine Control System (PGM-FI) M86	Inspection	IACV TEST
CRIDER	/	Engine Control System (PGM-FI) M86	Inspection	O2S TEST
CRIDER	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST

CRIDER	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CRIDER	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CRIDER	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CRIDER	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CRIDER	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CRIDER	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CRIDER	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CRIDER	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CRIDER	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CRIDER	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CRIDER	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CRIDER	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CRIDER	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CRIDER	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CRIDER	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CRIDER	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CRIDER	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
CRIDER	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
CRIDER	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
CRIDER	/	PSR	M27	Read ECU Information	
CRIDER	/	PSR	M27	Read codes	
CRIDER	/	PSR	M27	Erase Codes	
CRIDER	/	PSR	M27	Read Live Data	
CRIDER	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CRIDER	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CRIDER	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CRIDER	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CRIDER	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CRIDER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CRIDER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CRIDER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CRIDER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CRIDER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CRIDER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CRIDER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CRIDER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CRIDER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CRIDER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CRIDER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CRIDER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CRIDER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CRIDER	/	Remote starter (RS)	M90	System Check	
CRIDER	/	Remote starter (RS)	M90	HISTORY	
CRIDER	/	Remote starter (RS)	M90	Registration	
CRIDER	/	Seat load cell (SWS)	M6F	Read ECU Information	
CRIDER	/	Seat load cell (SWS)	M6F	Read codes	
CRIDER	/	Seat load cell (SWS)	M6F	Erase Codes	
CRIDER	/	Seat load cell (SWS)	M6F	Read Live Data	
CRIDER	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CRIDER	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CRIDER	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CRIDER	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
CRIDER	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CRIDER	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CRIDER	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CRIDER	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CRIDER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CRIDER	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CRIDER	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CRIDER	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CRIDER	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CRIDER	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CRIDER	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CRIDER	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CRIDER	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CRIDER	/	Airbag Control System (SRS)	M9F	Read codes	
CRIDER	/	Airbag Control System (SRS)	M9F	Erase Codes	
CRIDER	/	Airbag Control System (SRS)	M9F	Read Live Data	
CRIDER	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CRIDER	/	Airbag Control System (SRS)	MA0	Read codes	

CRIDER	/	Airbag Control System (SRS)	MA0	Erase Codes	
CRIDER	/	Airbag Control System (SRS)	MA0	Read Live Data	
CRIDER	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CRIDER	/	Airbag Control System (SRS)	MA1	Read codes	
CRIDER	/	Airbag Control System (SRS)	MA1	Erase Codes	
CRIDER	/	Airbag Control System (SRS)	MA1	Read Live Data	
CRIDER	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CRIDER	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CRIDER	/	Airbag Control System (SRS)	M2A	Read codes	
CRIDER	/	Airbag Control System (SRS)	M2A	Erase Codes	
CRIDER	/	Airbag Control System (SRS)	M2A	Read Live Data	
CRIDER	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CRIDER	/	Airbag Control System (SRS)	M9C	Read codes	
CRIDER	/	Airbag Control System (SRS)	M9C	Erase Codes	
CRIDER	/	Airbag Control System (SRS)	M9C	Read Live Data	
CRIDER	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CRIDER	/	Airbag Control System (SRS)	M9D	Read codes	
CRIDER	/	Airbag Control System (SRS)	M9D	Erase Codes	
CRIDER	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CRIDER	/	Airbag Control System (SRS)	M9D	Read Live Data	
CRIDER	/	Airbag Control System (SRS)	M9D	Parameter Information	
CRIDER	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CRIDER	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CRIDER	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CRIDER	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CRIDER	/	Airbag Control System (SRS)	M9D	Function Test	
CRIDER	/	Airbag Control System (SRS)	M9D	System Information	
CRIDER	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CRIDER	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CRIDER	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CRIDER	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CRIDER	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CRIDER	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CRIDER	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CRIDER	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CRIDER	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CRIDER	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CRIDER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CRIDER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CRIDER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CRIDER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CRIDER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CRIDER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CRIDER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CRIDER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CRIDER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CROSSROAD	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CROSSROAD	/	Four-wheel steering control system (4WS)	M52	Read codes	
CROSSROAD	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CROSSROAD	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CROSSROAD	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CROSSROAD	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CROSSROAD	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CROSSROAD	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CROSSROAD	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CROSSROAD	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CROSSROAD	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CROSSROAD	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CROSSROAD	/	Automatic shift control system (A/T)	M1E	Read codes	
CROSSROAD	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CROSSROAD	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CROSSROAD	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CROSSROAD	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CROSSROAD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CROSSROAD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CROSSROAD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CROSSROAD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CROSSROAD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CROSSROAD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CROSSROAD	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CROSSROAD	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CROSSROAD	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CROSSROAD	/	Automatic shift control system (A/T)	M3B	Read codes	
CROSSROAD	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CROSSROAD	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CROSSROAD	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CROSSROAD	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CROSSROAD	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CROSSROAD	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CROSSROAD	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CROSSROAD	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C

CROSSROAD	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CROSSROAD	/	Automatic shift control system (A/T)	M3C	Read codes	
CROSSROAD	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CROSSROAD	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CROSSROAD	/	Automatic shift control system (A/T)	M81	Read codes	
CROSSROAD	/	Automatic shift control system (A/T)	M81	Erase Codes	
CROSSROAD	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CROSSROAD	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CROSSROAD	/	Automatic shift control system (A/T)	M81	Read Live Data	
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CROSSROAD	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CROSSROAD	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CROSSROAD	/	Automatic shift control system (A/T)	M82	Read codes	
CROSSROAD	/	Automatic shift control system (A/T)	M82	Erase Codes	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
CROSSROAD	/	Active Engine Control Support System (ACM) M06	M06	Read ECU Information	
CROSSROAD	/	Active Engine Control Support System (ACM) M06	M06	Read codes	
CROSSROAD	/	Active Engine Control Support System (ACM) M06	M06	Erase Codes	
CROSSROAD	/	Active Engine Control Support System (ACM) M06	M06	Read Freeze Frame Data	
CROSSROAD	/	Active Engine Control Support System (ACM) M06	M06	Read Live Data	
CROSSROAD	/	Active Engine Control Support System (ACM) M06	M06	ACM Reset	
CROSSROAD	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Front ACM Solenoid ON/OFF
CROSSROAD	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Rear ACM Solenoid ON/OFF
CROSSROAD	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CROSSROAD	/	Active Engine Control Support System (ACM) M06	M06	Inspection	ACM Test
CROSSROAD	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Read codes	
CROSSROAD	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Erase Codes	
CROSSROAD	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Read Live Data	
CROSSROAD	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
CROSSROAD	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
CROSSROAD	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
CROSSROAD	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
CROSSROAD	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
CROSSROAD	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
CROSSROAD	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
CROSSROAD	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
CROSSROAD	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
CROSSROAD	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
CROSSROAD	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
CROSSROAD	/	Transmission Control System (AT) M18	M18	Read ECU Information	
CROSSROAD	/	Transmission Control System (AT) M18	M18	Read codes	
CROSSROAD	/	Transmission Control System (AT) M18	M18	Erase Codes	
CROSSROAD	/	Transmission Control System (AT) M18	M18	Read Freeze Frame Data	
CROSSROAD	/	Transmission Control System (AT) M18	M18	Read Live Data	
CROSSROAD	/	Transmission Control System (AT) M18	M18	Adjustment	
CROSSROAD	/	Active Torque Converter Control System (ATTs) M0E	M0E	Read ECU Information	
CROSSROAD	/	Active Torque Converter Control System (ATTs) M0E	M0E	Read codes	
CROSSROAD	/	Active Torque Converter Control System (ATTs) M0E	M0E	Erase Codes	
CROSSROAD	/	Active Torque Converter Control System (ATTs) M0E	M0E	Read Freeze Frame Data	
CROSSROAD	/	Active Torque Converter Control System (ATTs) M0E	M0E	Read Live Data	
CROSSROAD	/	Active Torque Converter Control System (ATTs) M0E	M0E	Miscellaneous Test	ATTs TEST SHORT TIME MODE
CROSSROAD	/	Active Torque Converter Control System (ATTs) M0E	M0E	Miscellaneous Test	STEERING ANGLE

CROSSROAD	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CROSSROAD	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
CROSSROAD	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
CROSSROAD	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
CROSSROAD	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
CROSSROAD	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
CROSSROAD	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CROSSROAD	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CROSSROAD	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
CROSSROAD	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
CROSSROAD	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
CROSSROAD	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
CROSSROAD	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
CROSSROAD	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CROSSROAD	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CROSSROAD	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CROSSROAD	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CROSSROAD	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CROSSROAD	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CROSSROAD	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CROSSROAD	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CROSSROAD	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CROSSROAD	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CROSSROAD	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)

CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CROSSROAD	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CROSSROAD	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CROSSROAD	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CROSSROAD	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CROSSROAD	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CROSSROAD	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CROSSROAD	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CROSSROAD	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CROSSROAD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CROSSROAD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CROSSROAD	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CROSSROAD	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CROSSROAD	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CROSSROAD	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CROSSROAD	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CROSSROAD	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CROSSROAD	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CROSSROAD	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CROSSROAD	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CROSSROAD	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Security	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CROSSROAD	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CROSSROAD	/	BODY ELECTRICAL/Security	MFF	History Data	

CROSSROAD	/	BODY ELECTRICAL/Security	MFF	History Clear	
CROSSROAD	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CROSSROAD	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CROSSROAD	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CROSSROAD	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CROSSROAD	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CROSSROAD	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CROSSROAD	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CROSSROAD	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CROSSROAD	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CROSSROAD	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CROSSROAD	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CROSSROAD	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CROSSROAD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CROSSROAD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CROSSROAD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CROSSROAD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CROSSROAD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
CROSSROAD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CROSSROAD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CROSSROAD	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CROSSROAD	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CROSSROAD	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CROSSROAD	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CROSSROAD	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CROSSROAD	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CROSSROAD	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CROSSROAD	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CROSSROAD	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CROSSROAD	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CROSSROAD	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
CROSSROAD	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
CROSSROAD	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
CROSSROAD	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
CROSSROAD	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
CROSSROAD	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
CROSSROAD	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
CROSSROAD	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn



CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B	
CROSSROAD	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P	
CROSSROAD	/	DBW	M34	Read ECU Information	
CROSSROAD	/	DBW	M34	Read codes	
CROSSROAD	/	DBW	M34	Erase Codes	
CROSSROAD	/	DBW	M34	Read Freeze Frame Data	
CROSSROAD	/	DBW	M34	Read Live Data	
CROSSROAD	/	DBW	M34	Inspection	Idle Speed Adjust
CROSSROAD	/	DBW	M34	Inspection	Throttle Test
CROSSROAD	/	DBW	M34	ECM Reset	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CROSSROAD	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CROSSROAD	/	Capacitor Control System (EDLC)	M12	Read codes	
CROSSROAD	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CROSSROAD	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CROSSROAD	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CROSSROAD	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CROSSROAD	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CROSSROAD	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CROSSROAD	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CROSSROAD	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CROSSROAD	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CROSSROAD	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CROSSROAD	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CROSSROAD	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CROSSROAD	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CROSSROAD	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CROSSROAD	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CROSSROAD	/	Electric Powertrain / IMA	M66	Read ECU Information	
CROSSROAD	/	Electric Powertrain / IMA	M66	Read codes	
CROSSROAD	/	Electric Powertrain / IMA	M66	Erase Codes	
CROSSROAD	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CROSSROAD	/	Electric Powertrain / IMA	M66	Read Live Data	
CROSSROAD	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CROSSROAD	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CROSSROAD	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CROSSROAD	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CROSSROAD	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CROSSROAD	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CROSSROAD	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION

CROSSROAD	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CROSSROAD	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CROSSROAD	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CROSSROAD	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CROSSROAD	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CROSSROAD	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CROSSROAD	/	New energy battery (EV)	M44	Read ECU Information	
CROSSROAD	/	New energy battery (EV)	M44	Read codes	
CROSSROAD	/	New energy battery (EV)	M44	Erase Codes	
CROSSROAD	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CROSSROAD	/	New energy battery (EV)	M44	Read Live Data	
CROSSROAD	/	New energy battery (EV)	M44	Inspection	
CROSSROAD	/	New energy battery (EV)	M44	Adjustment	
CROSSROAD	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CROSSROAD	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CROSSROAD	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CROSSROAD	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CROSSROAD	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CROSSROAD	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CROSSROAD	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CROSSROAD	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CROSSROAD	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CROSSROAD	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CROSSROAD	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CROSSROAD	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CROSSROAD	/	FCW LDW	M4E	Read ECU Information	
CROSSROAD	/	FCW LDW	M4E	Read codes	
CROSSROAD	/	FCW LDW	M4E	Erase Codes	
CROSSROAD	/	FCW LDW	M4E	Read Live Data	
CROSSROAD	/	FCW LDW	M4E	Function Test	FCW Drive
CROSSROAD	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CROSSROAD	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CROSSROAD	/	FCW LDW	M4E	Function Test	Indicator Drive
CROSSROAD	/	FCW LDW	M4E	Adjustment	
CROSSROAD	/	Instrument Display System (GAUGE)	M2C	Read codes	
CROSSROAD	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CROSSROAD	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Read codes	
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Read codes	
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Read codes	
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid

CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CROSSROAD	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Read codes	
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CROSSROAD	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CROSSROAD	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CROSSROAD	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CROSSROAD	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CROSSROAD	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
CROSSROAD	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CROSSROAD	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CROSSROAD	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CROSSROAD	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CROSSROAD	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CROSSROAD	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CROSSROAD	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CROSSROAD	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CROSSROAD	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CROSSROAD	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CROSSROAD	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CROSSROAD	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CROSSROAD	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CROSSROAD	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CROSSROAD	/	IMA	M63	Read ECU Information	
CROSSROAD	/	IMA	M63	Read codes	
CROSSROAD	/	IMA	M63	Erase Codes	
CROSSROAD	/	IMA	M63	Read Freeze Frame Data	
CROSSROAD	/	IMA	M63	Read Live Data	
CROSSROAD	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CROSSROAD	/	IMA	M63	Adjustment	SOC PRESET
CROSSROAD	/	IMA	M64	Read ECU Information	
CROSSROAD	/	IMA	M64	Read codes	
CROSSROAD	/	IMA	M64	Erase Codes	
CROSSROAD	/	IMA	M64	Read Freeze Frame Data	
CROSSROAD	/	IMA	M64	Read Live Data	
CROSSROAD	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CROSSROAD	/	IMA	M64	Adjustment	SOC PRESET
CROSSROAD	/	IMA	M65	Read ECU Information	
CROSSROAD	/	IMA	M65	Read codes	
CROSSROAD	/	IMA	M65	Erase Codes	
CROSSROAD	/	IMA	M65	Read Freeze Frame Data	
CROSSROAD	/	IMA	M65	Read Live Data	
CROSSROAD	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CROSSROAD	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CROSSROAD	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CROSSROAD	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CROSSROAD	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CROSSROAD	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CROSSROAD	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CROSSROAD	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CROSSROAD	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CROSSROAD	/	Night Vision System (INVS)	0XB1	Read codes	
CROSSROAD	/	Night Vision System (INVS)	0XB1	Erase Codes	
CROSSROAD	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CROSSROAD	/	Night Vision System (INVS)	0XB1	Read Live Data	
CROSSROAD	/	Night Vision System (INVS)	0XB1	Adjustment	
CROSSROAD	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CROSSROAD	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CROSSROAD	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CROSSROAD	/	i-SHIFT	0XB0	Read ECU Information	
CROSSROAD	/	i-SHIFT	0XB0	Read codes	
CROSSROAD	/	i-SHIFT	0XB0	Erase Codes	
CROSSROAD	/	i-SHIFT	0XB0	Read Live Data	
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Read codes	
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Self Check	
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	History Data	
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	

CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CROSSROAD	/	Keyless Entry Control System (KAS)	M99	Registration	
CROSSROAD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CROSSROAD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CROSSROAD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CROSSROAD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CROSSROAD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CROSSROAD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CROSSROAD	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CROSSROAD	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CROSSROAD	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CROSSROAD	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CROSSROAD	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CROSSROAD	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CROSSROAD	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CROSSROAD	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CROSSROAD	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CROSSROAD	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CROSSROAD	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CROSSROAD	/	Management ECU Module (ME)	M74	Read ECU Information	
CROSSROAD	/	Management ECU Module (ME)	M74	Read codes	
CROSSROAD	/	Management ECU Module (ME)	M74	Erase Codes	
CROSSROAD	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CROSSROAD	/	Management ECU Module (ME)	M74	Read Live Data	
CROSSROAD	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CROSSROAD	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CROSSROAD	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CROSSROAD	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CROSSROAD	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CROSSROAD	/	Multi-view camera system (MVCS)	M7A	Read codes	
CROSSROAD	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CROSSROAD	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CROSSROAD	/	Multi-view camera system (MVCS)	M7A	Customization	
CROSSROAD	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CROSSROAD	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CROSSROAD	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CROSSROAD	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CROSSROAD	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CROSSROAD	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CROSSROAD	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CROSSROAD	/	Power Control Unit (PCU)	M83	Read ECU Information	
CROSSROAD	/	Power Control Unit (PCU)	M83	Read codes	
CROSSROAD	/	Power Control Unit (PCU)	M83	Erase Codes	
CROSSROAD	/	Power Control Unit (PCU)	M83	Read Live Data	

CROSSROAD	/	Power Control Unit (PCU)	M83	Self Check	
CROSSROAD	/	Power Control Unit (PCU)	M83	History Data	
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Read codes	
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CROSSROAD	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CROSSROAD	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CROSSROAD	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CROSSROAD	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
CROSSROAD	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CROSSROAD	/	Engine Control System (PGM-FI)	M50	Read codes	
CROSSROAD	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CROSSROAD	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CROSSROAD	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CROSSROAD	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CROSSROAD	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CROSSROAD	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CROSSROAD	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CROSSROAD	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CROSSROAD	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CROSSROAD	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Read codes	
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CROSSROAD	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CROSSROAD	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CROSSROAD	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CROSSROAD	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CROSSROAD	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
CROSSROAD	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
CROSSROAD	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
CROSSROAD	/	PSR	M27	Read ECU Information	
CROSSROAD	/	PSR	M27	Read codes	
CROSSROAD	/	PSR	M27	Erase Codes	
CROSSROAD	/	PSR	M27	Read Live Data	
CROSSROAD	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CROSSROAD	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CROSSROAD	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CROSSROAD	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CROSSROAD	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CROSSROAD	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CROSSROAD	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CROSSROAD	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CROSSROAD	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	

CROSSROAD	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CROSSROAD	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CROSSROAD	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CROSSROAD	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CROSSROAD	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CROSSROAD	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CROSSROAD	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CROSSROAD	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CROSSROAD	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CROSSROAD	/	Remote starter (RS)	M90	System Check	
CROSSROAD	/	Remote starter (RS)	M90	HISTORY	
CROSSROAD	/	Remote starter (RS)	M90	Registration	
CROSSROAD	/	Seat load cell (SWS)	M6F	Read ECU Information	
CROSSROAD	/	Seat load cell (SWS)	M6F	Read codes	
CROSSROAD	/	Seat load cell (SWS)	M6F	Erase Codes	
CROSSROAD	/	Seat load cell (SWS)	M6F	Read Live Data	
CROSSROAD	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CROSSROAD	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CROSSROAD	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CROSSROAD	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
CROSSROAD	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CROSSROAD	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CROSSROAD	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CROSSROAD	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CROSSROAD	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CROSSROAD	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CROSSROAD	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CROSSROAD	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CROSSROAD	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CROSSROAD	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CROSSROAD	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CROSSROAD	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CROSSROAD	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CROSSROAD	/	Airbag Control System (SRS)	M9F	Read codes	
CROSSROAD	/	Airbag Control System (SRS)	M9F	Erase Codes	
CROSSROAD	/	Airbag Control System (SRS)	M9F	Read Live Data	
CROSSROAD	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CROSSROAD	/	Airbag Control System (SRS)	MA0	Read codes	
CROSSROAD	/	Airbag Control System (SRS)	MA0	Erase Codes	
CROSSROAD	/	Airbag Control System (SRS)	MA0	Read Live Data	
CROSSROAD	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CROSSROAD	/	Airbag Control System (SRS)	MA1	Read codes	
CROSSROAD	/	Airbag Control System (SRS)	MA1	Erase Codes	
CROSSROAD	/	Airbag Control System (SRS)	MA1	Read Live Data	
CROSSROAD	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CROSSROAD	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CROSSROAD	/	Airbag Control System (SRS)	M2A	Read codes	
CROSSROAD	/	Airbag Control System (SRS)	M2A	Erase Codes	
CROSSROAD	/	Airbag Control System (SRS)	M2A	Read Live Data	
CROSSROAD	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CROSSROAD	/	Airbag Control System (SRS)	M9C	Read codes	
CROSSROAD	/	Airbag Control System (SRS)	M9C	Erase Codes	
CROSSROAD	/	Airbag Control System (SRS)	M9C	Read Live Data	
CROSSROAD	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CROSSROAD	/	Airbag Control System (SRS)	M9D	Read codes	
CROSSROAD	/	Airbag Control System (SRS)	M9D	Erase Codes	
CROSSROAD	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CROSSROAD	/	Airbag Control System (SRS)	M9D	Read Live Data	
CROSSROAD	/	Airbag Control System (SRS)	M9D	Parameter Information	
CROSSROAD	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CROSSROAD	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CROSSROAD	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CROSSROAD	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CROSSROAD	/	Airbag Control System (SRS)	M9D	Function Test	
CROSSROAD	/	Airbag Control System (SRS)	M9D	System Information	
CROSSROAD	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CROSSROAD	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CROSSROAD	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CROSSROAD	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CROSSROAD	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	

CROSSROAD	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CROSSROAD	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CROSSROAD	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CROSSROAD	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CROSSROAD	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CROSSROAD	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CROSSROAD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CROSSROAD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CROSSROAD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CROSSROAD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CROSSROAD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CROSSROAD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CROSSROAD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CROSSROAD	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
CROSSROAD	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
CROSSTOUR	/	Four-wheel steering control system (4WS)	M52	Read codes	
CROSSTOUR	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
CROSSTOUR	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
CROSSTOUR	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
CROSSTOUR	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
CROSSTOUR	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
CROSSTOUR	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
CROSSTOUR	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
CROSSTOUR	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
CROSSTOUR	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	Read codes	
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	Erase Codes	
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	Read Live Data	
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
CROSSTOUR	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
CROSSTOUR	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
CROSSTOUR	/	Automatic shift control system (A/T)	M3B	Read codes	
CROSSTOUR	/	Automatic shift control system (A/T)	M3B	Erase Codes	
CROSSTOUR	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
CROSSTOUR	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
CROSSTOUR	/	Automatic shift control system (A/T)	M3B	Read Live Data	
CROSSTOUR	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
CROSSTOUR	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
CROSSTOUR	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
CROSSTOUR	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
CROSSTOUR	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
CROSSTOUR	/	Automatic shift control system (A/T)	M3C	Read codes	
CROSSTOUR	/	Automatic shift control system (A/T)	M3C	Erase Codes	
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Read ECU Information	
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Read codes	
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Erase Codes	
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
CROSSTOUR	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Read Live Data	
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
CROSSTOUR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
CROSSTOUR	/	Automatic shift control system (A/T)	M82	Read ECU Information	
CROSSTOUR	/	Automatic shift control system (A/T)	M82	Read codes	
CROSSTOUR	/	Automatic shift control system (A/T)	M82	Erase Codes	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read ECU Information	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read codes	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Erase Codes	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read Freeze Frame Data	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read Live Data	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	Throttle Opening Angle Test
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	BRAKE BOOSTER 1

CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 2
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	LIGHT CHECK
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
CROSSTOUR	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
CROSSTOUR	/	Active Engine Control Support System (ACM) M06	Read codes	
CROSSTOUR	/	Active Engine Control Support System (ACM) M06	Erase Codes	
CROSSTOUR	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
CROSSTOUR	/	Active Engine Control Support System (ACM) M06	Read Live Data	
CROSSTOUR	/	Active Engine Control Support System (ACM) M06	ACM Reset	
CROSSTOUR	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
CROSSTOUR	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
CROSSTOUR	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
CROSSTOUR	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
CROSSTOUR	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
CROSSTOUR	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
CROSSTOUR	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
CROSSTOUR	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
CROSSTOUR	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
CROSSTOUR	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
CROSSTOUR	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
CROSSTOUR	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
CROSSTOUR	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
CROSSTOUR	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
CROSSTOUR	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
CROSSTOUR	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
CROSSTOUR	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
CROSSTOUR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
CROSSTOUR	/	Transmission Control System (AT) M18	Read ECU Information	
CROSSTOUR	/	Transmission Control System (AT) M18	Read codes	
CROSSTOUR	/	Transmission Control System (AT) M18	Erase Codes	
CROSSTOUR	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
CROSSTOUR	/	Transmission Control System (AT) M18	Read Live Data	
CROSSTOUR	/	Transmission Control System (AT) M18	Adjustment	
CROSSTOUR	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
CROSSTOUR	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
CROSSTOUR	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
CROSSTOUR	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
CROSSTOUR	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
CROSSTOUR	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
CROSSTOUR	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
CROSSTOUR	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
CROSSTOUR	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
CROSSTOUR	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
CROSSTOUR	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
CROSSTOUR	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
CROSSTOUR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection



CROSSTOUR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
CROSSTOUR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
CROSSTOUR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Reset Operation
CROSSTOUR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Returning Operation
CROSSTOUR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Automatic Returning Distance
CROSSTOUR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Manual Returning Time
CROSSTOUR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Reset to default
CROSSTOUR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
CROSSTOUR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
CROSSTOUR	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
CROSSTOUR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
CROSSTOUR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
CROSSTOUR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
CROSSTOUR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
CROSSTOUR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
CROSSTOUR	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
CROSSTOUR	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
CROSSTOUR	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
CROSSTOUR	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
CROSSTOUR	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
CROSSTOUR	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
CROSSTOUR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
CROSSTOUR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
CROSSTOUR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command

CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
CROSSTOUR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
CROSSTOUR	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
CROSSTOUR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
CROSSTOUR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
CROSSTOUR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
CROSSTOUR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
CROSSTOUR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
CROSSTOUR	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
CROSSTOUR	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
CROSSTOUR	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
CROSSTOUR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
CROSSTOUR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
CROSSTOUR	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
CROSSTOUR	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Security	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
CROSSTOUR	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
CROSSTOUR	/	BODY ELECTRICAL/Security	MFF	History Data	
CROSSTOUR	/	BODY ELECTRICAL/Security	MFF	History Clear	
CROSSTOUR	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
CROSSTOUR	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
CROSSTOUR	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CROSSTOUR	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
CROSSTOUR	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
CROSSTOUR	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
CROSSTOUR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
CROSSTOUR	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
CROSSTOUR	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
CROSSTOUR	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
CROSSTOUR	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
CROSSTOUR	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
CROSSTOUR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
CROSSTOUR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
CROSSTOUR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
CROSSTOUR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
CROSSTOUR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid

CROSSTOUR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
CROSSTOUR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
CROSSTOUR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
CROSSTOUR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
CROSSTOUR	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
CROSSTOUR	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
CROSSTOUR	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
CROSSTOUR	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
CROSSTOUR	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
CROSSTOUR	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
CROSSTOUR	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
CROSSTOUR	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
CROSSTOUR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read ECU Information	
CROSSTOUR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read codes	
CROSSTOUR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Erase Codes	
CROSSTOUR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read Freeze Frame Data	
CROSSTOUR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read Live Data	
CROSSTOUR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	CMBS (CMS) ACTIVATION HISTORY	
CROSSTOUR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Miscellaneous Test	RADAR AIMING
CROSSTOUR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Miscellaneous Test	CMBS Brake
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
CROSSTOUR	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
CROSSTOUR	/	DBW	M34	Read ECU Information	
CROSSTOUR	/	DBW	M34	Read codes	
CROSSTOUR	/	DBW	M34	Erase Codes	
CROSSTOUR	/	DBW	M34	Read Freeze Frame Data	
CROSSTOUR	/	DBW	M34	Read Live Data	
CROSSTOUR	/	DBW	M34	Inspection	Idle Speed Adjust
CROSSTOUR	/	DBW	M34	Inspection	Throttle Test
CROSSTOUR	/	DBW	M34	ECM Reset	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn

CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
CROSSTOUR	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
CROSSTOUR	/	Capacitor Control System (EDLC)	M12	Read codes	
CROSSTOUR	/	Capacitor Control System (EDLC)	M12	Erase Codes	
CROSSTOUR	/	Capacitor Control System (EDLC)	M12	Read Live Data	
CROSSTOUR	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
CROSSTOUR	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
CROSSTOUR	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
CROSSTOUR	/	Electronic Brake Control System (EPB)	M1F	Read codes	
CROSSTOUR	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
CROSSTOUR	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
CROSSTOUR	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
CROSSTOUR	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
CROSSTOUR	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
CROSSTOUR	/	Electronic Brake Control System (EPB)	M3E	Read codes	
CROSSTOUR	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
CROSSTOUR	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
CROSSTOUR	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
CROSSTOUR	/	Electric Powertrain / IMA	M66	Read ECU Information	
CROSSTOUR	/	Electric Powertrain / IMA	M66	Read codes	
CROSSTOUR	/	Electric Powertrain / IMA	M66	Erase Codes	
CROSSTOUR	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
CROSSTOUR	/	Electric Powertrain / IMA	M66	Read Live Data	
CROSSTOUR	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
CROSSTOUR	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
CROSSTOUR	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
CROSSTOUR	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
CROSSTOUR	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
CROSSTOUR	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
CROSSTOUR	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
CROSSTOUR	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
CROSSTOUR	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
CROSSTOUR	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
CROSSTOUR	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
CROSSTOUR	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
CROSSTOUR	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
CROSSTOUR	/	New energy battery (EV)	M44	Read ECU Information	
CROSSTOUR	/	New energy battery (EV)	M44	Read codes	

CROSSTOUR	/	New energy battery (EV)	M44	Erase Codes	
CROSSTOUR	/	New energy battery (EV)	M44	Read Freeze Frame Data	
CROSSTOUR	/	New energy battery (EV)	M44	Read Live Data	
CROSSTOUR	/	New energy battery (EV)	M44	Inspection	
CROSSTOUR	/	New energy battery (EV)	M44	Adjustment	
CROSSTOUR	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
CROSSTOUR	/	Electronic vacuum pump (EVPS)	M21	Read codes	
CROSSTOUR	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
CROSSTOUR	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
CROSSTOUR	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
CROSSTOUR	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
CROSSTOUR	/	Electronic vacuum pump (EVPS)	M22	Read codes	
CROSSTOUR	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
CROSSTOUR	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
CROSSTOUR	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
CROSSTOUR	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
CROSSTOUR	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
CROSSTOUR	/	FCW LDW	M4E	Read ECU Information	
CROSSTOUR	/	FCW LDW	M4E	Read codes	
CROSSTOUR	/	FCW LDW	M4E	Erase Codes	
CROSSTOUR	/	FCW LDW	M4E	Read Live Data	
CROSSTOUR	/	FCW LDW	M4E	Function Test	FCW Drive
CROSSTOUR	/	FCW LDW	M4E	Function Test	Left side lane departure warning
CROSSTOUR	/	FCW LDW	M4E	Function Test	Right side lane departure warning
CROSSTOUR	/	FCW LDW	M4E	Function Test	Indicator Drive
CROSSTOUR	/	FCW LDW	M4E	Adjustment	
CROSSTOUR	/	Instrument Display System (GAUGE)	M2C	Read codes	
CROSSTOUR	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
CROSSTOUR	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Read codes	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Read codes	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Read codes	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
CROSSTOUR	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Read codes	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
CROSSTOUR	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
CROSSTOUR	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
CROSSTOUR	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
CROSSTOUR	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
CROSSTOUR	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	

CROSSTOUR	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
CROSSTOUR	/	Intelligent Parking Control System (SPS)	M9B	Customize	
CROSSTOUR	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
CROSSTOUR	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
CROSSTOUR	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
CROSSTOUR	/	Hydraulic booster control system (HBS)	M5F	Read codes	
CROSSTOUR	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
CROSSTOUR	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
CROSSTOUR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
CROSSTOUR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
CROSSTOUR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
CROSSTOUR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
CROSSTOUR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
CROSSTOUR	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
CROSSTOUR	/	IMA	M63	Read ECU Information	
CROSSTOUR	/	IMA	M63	Read codes	
CROSSTOUR	/	IMA	M63	Erase Codes	
CROSSTOUR	/	IMA	M63	Read Freeze Frame Data	
CROSSTOUR	/	IMA	M63	Read Live Data	
CROSSTOUR	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
CROSSTOUR	/	IMA	M63	Adjustment	SOC PRESET
CROSSTOUR	/	IMA	M64	Read ECU Information	
CROSSTOUR	/	IMA	M64	Read codes	
CROSSTOUR	/	IMA	M64	Erase Codes	
CROSSTOUR	/	IMA	M64	Read Freeze Frame Data	
CROSSTOUR	/	IMA	M64	Read Live Data	
CROSSTOUR	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
CROSSTOUR	/	IMA	M64	Adjustment	SOC PRESET
CROSSTOUR	/	IMA	M65	Read ECU Information	
CROSSTOUR	/	IMA	M65	Read codes	
CROSSTOUR	/	IMA	M65	Erase Codes	
CROSSTOUR	/	IMA	M65	Read Freeze Frame Data	
CROSSTOUR	/	IMA	M65	Read Live Data	
CROSSTOUR	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
CROSSTOUR	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
CROSSTOUR	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
CROSSTOUR	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
CROSSTOUR	/	Intake Sounder Control System (ISC)	M6D	Read codes	
CROSSTOUR	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
CROSSTOUR	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
CROSSTOUR	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
CROSSTOUR	/	Night Vision System (INVS)	0XB1	Read ECU Information	
CROSSTOUR	/	Night Vision System (INVS)	0XB1	Read codes	
CROSSTOUR	/	Night Vision System (INVS)	0XB1	Erase Codes	
CROSSTOUR	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
CROSSTOUR	/	Night Vision System (INVS)	0XB1	Read Live Data	
CROSSTOUR	/	Night Vision System (INVS)	0XB1	Adjustment	
CROSSTOUR	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
CROSSTOUR	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
CROSSTOUR	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
CROSSTOUR	/	i-SHIFT	0XB0	Read ECU Information	
CROSSTOUR	/	i-SHIFT	0XB0	Read codes	
CROSSTOUR	/	i-SHIFT	0XB0	Erase Codes	
CROSSTOUR	/	i-SHIFT	0XB0	Read Live Data	
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Read codes	
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Self Check	
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	History Data	
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output

CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
CROSSTOUR	/	Keyless Entry Control System (KAS)	M99	Registration	
CROSSTOUR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
CROSSTOUR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
CROSSTOUR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
CROSSTOUR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
CROSSTOUR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
CROSSTOUR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
CROSSTOUR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
CROSSTOUR	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
CROSSTOUR	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
CROSSTOUR	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
CROSSTOUR	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
CROSSTOUR	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
CROSSTOUR	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
CROSSTOUR	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
CROSSTOUR	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
CROSSTOUR	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
CROSSTOUR	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
CROSSTOUR	/	Management ECU Module (ME)	M74	Read ECU Information	
CROSSTOUR	/	Management ECU Module (ME)	M74	Read codes	
CROSSTOUR	/	Management ECU Module (ME)	M74	Erase Codes	
CROSSTOUR	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
CROSSTOUR	/	Management ECU Module (ME)	M74	Read Live Data	
CROSSTOUR	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
CROSSTOUR	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
CROSSTOUR	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
CROSSTOUR	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
CROSSTOUR	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
CROSSTOUR	/	Multi-view camera system (MVCS)	M7A	Read codes	
CROSSTOUR	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
CROSSTOUR	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
CROSSTOUR	/	Multi-view camera system (MVCS)	M7A	Customization	
CROSSTOUR	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
CROSSTOUR	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
CROSSTOUR	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
CROSSTOUR	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
CROSSTOUR	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
CROSSTOUR	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
CROSSTOUR	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
CROSSTOUR	/	Power Control Unit (PCU)	M83	Read ECU Information	
CROSSTOUR	/	Power Control Unit (PCU)	M83	Read codes	
CROSSTOUR	/	Power Control Unit (PCU)	M83	Erase Codes	
CROSSTOUR	/	Power Control Unit (PCU)	M83	Read Live Data	
CROSSTOUR	/	Power Control Unit (PCU)	M83	Self Check	
CROSSTOUR	/	Power Control Unit (PCU)	M83	History Data	
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Read codes	
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Erase Codes	
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Read Live Data	
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
CROSSTOUR	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	

CROSSTOUR	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
CROSSTOUR	/	Engine Control System (PGM-FI)	M50	Read codes	
CROSSTOUR	/	Engine Control System (PGM-FI)	M50	Erase Codes	
CROSSTOUR	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
CROSSTOUR	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
CROSSTOUR	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
CROSSTOUR	/	Engine Control System (PGM-FI)	M50	Read Live Data	
CROSSTOUR	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
CROSSTOUR	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
CROSSTOUR	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
CROSSTOUR	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
CROSSTOUR	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Read codes	
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Erase Codes	
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Read Live Data	
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
CROSSTOUR	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
CROSSTOUR	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
CROSSTOUR	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
CROSSTOUR	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
CROSSTOUR	/	PSR	M27	Read ECU Information	
CROSSTOUR	/	PSR	M27	Read codes	
CROSSTOUR	/	PSR	M27	Erase Codes	
CROSSTOUR	/	PSR	M27	Read Live Data	
CROSSTOUR	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
CROSSTOUR	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
CROSSTOUR	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
CROSSTOUR	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
CROSSTOUR	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
CROSSTOUR	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
CROSSTOUR	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
CROSSTOUR	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
CROSSTOUR	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
CROSSTOUR	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
CROSSTOUR	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
CROSSTOUR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
CROSSTOUR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
CROSSTOUR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
CROSSTOUR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
CROSSTOUR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
CROSSTOUR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
CROSSTOUR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
CROSSTOUR	/	Remote starter (RS)	M90	System Check	
CROSSTOUR	/	Remote starter (RS)	M90	HISTORY	
CROSSTOUR	/	Remote starter (RS)	M90	Registration	
CROSSTOUR	/	Seat load cell (SWS)	M6F	Read ECU Information	
CROSSTOUR	/	Seat load cell (SWS)	M6F	Read codes	
CROSSTOUR	/	Seat load cell (SWS)	M6F	Erase Codes	
CROSSTOUR	/	Seat load cell (SWS)	M6F	Read Live Data	
CROSSTOUR	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
CROSSTOUR	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
CROSSTOUR	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
CROSSTOUR	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
CROSSTOUR	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
CROSSTOUR	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
CROSSTOUR	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
CROSSTOUR	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	



CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
CROSSTOUR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
CROSSTOUR	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
CROSSTOUR	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
CROSSTOUR	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
CROSSTOUR	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
CROSSTOUR	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
CROSSTOUR	/	Groove track drive unit (SLOT ECU)	M98	History Data	
CROSSTOUR	/	Groove track drive unit (SLOT ECU)	M98	System Information	
CROSSTOUR	/	Airbag Control System (SRS)	M9F	Read ECU Information	
CROSSTOUR	/	Airbag Control System (SRS)	M9F	Read codes	
CROSSTOUR	/	Airbag Control System (SRS)	M9F	Erase Codes	
CROSSTOUR	/	Airbag Control System (SRS)	M9F	Read Live Data	
CROSSTOUR	/	Airbag Control System (SRS)	MA0	Read ECU Information	
CROSSTOUR	/	Airbag Control System (SRS)	MA0	Read codes	
CROSSTOUR	/	Airbag Control System (SRS)	MA0	Erase Codes	
CROSSTOUR	/	Airbag Control System (SRS)	MA0	Read Live Data	
CROSSTOUR	/	Airbag Control System (SRS)	MA1	Read ECU Information	
CROSSTOUR	/	Airbag Control System (SRS)	MA1	Read codes	
CROSSTOUR	/	Airbag Control System (SRS)	MA1	Erase Codes	
CROSSTOUR	/	Airbag Control System (SRS)	MA1	Read Live Data	
CROSSTOUR	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
CROSSTOUR	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
CROSSTOUR	/	Airbag Control System (SRS)	M2A	Read codes	
CROSSTOUR	/	Airbag Control System (SRS)	M2A	Erase Codes	
CROSSTOUR	/	Airbag Control System (SRS)	M2A	Read Live Data	
CROSSTOUR	/	Airbag Control System (SRS)	M9C	Read ECU Information	
CROSSTOUR	/	Airbag Control System (SRS)	M9C	Read codes	
CROSSTOUR	/	Airbag Control System (SRS)	M9C	Erase Codes	
CROSSTOUR	/	Airbag Control System (SRS)	M9C	Read Live Data	
CROSSTOUR	/	Airbag Control System (SRS)	M9D	Read ECU Information	
CROSSTOUR	/	Airbag Control System (SRS)	M9D	Read codes	
CROSSTOUR	/	Airbag Control System (SRS)	M9D	Erase Codes	
CROSSTOUR	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
CROSSTOUR	/	Airbag Control System (SRS)	M9D	Read Live Data	
CROSSTOUR	/	Airbag Control System (SRS)	M9D	Parameter Information	
CROSSTOUR	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
CROSSTOUR	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
CROSSTOUR	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
CROSSTOUR	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
CROSSTOUR	/	Airbag Control System (SRS)	M9D	Function Test	
CROSSTOUR	/	Airbag Control System (SRS)	M9D	System Information	
CROSSTOUR	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
CROSSTOUR	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
CROSSTOUR	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
CROSSTOUR	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
CROSSTOUR	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
CROSSTOUR	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
CROSSTOUR	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
CROSSTOUR	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
CROSSTOUR	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
CROSSTOUR	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
CROSSTOUR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
CROSSTOUR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
CROSSTOUR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
CROSSTOUR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
CROSSTOUR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
CROSSTOUR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
CROSSTOUR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
CROSSTOUR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
CROSSTOUR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
Civic Flex	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
Civic Flex	/	Four-wheel steering control system (4WS)	M52	Read codes	
Civic Flex	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
Civic Flex	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
Civic Flex	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
Civic Flex	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING

Civic Flex	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
Civic Flex	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
Civic Flex	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
Civic Flex	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
Civic Flex	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
Civic Flex	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
Civic Flex	/	Automatic shift control system (A/T)	M1E	Read codes	
Civic Flex	/	Automatic shift control system (A/T)	M1E	Erase Codes	
Civic Flex	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
Civic Flex	/	Automatic shift control system (A/T)	M1E	Read Live Data	
Civic Flex	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
Civic Flex	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
Civic Flex	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
Civic Flex	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Civic Flex	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Civic Flex	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Civic Flex	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Civic Flex	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
Civic Flex	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
Civic Flex	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
Civic Flex	/	Automatic shift control system (A/T)	M3B	Read codes	
Civic Flex	/	Automatic shift control system (A/T)	M3B	Erase Codes	
Civic Flex	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
Civic Flex	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
Civic Flex	/	Automatic shift control system (A/T)	M3B	Read Live Data	
Civic Flex	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
Civic Flex	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
Civic Flex	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
Civic Flex	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
Civic Flex	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
Civic Flex	/	Automatic shift control system (A/T)	M3C	Read codes	
Civic Flex	/	Automatic shift control system (A/T)	M3C	Erase Codes	
Civic Flex	/	Automatic shift control system (A/T)	M81	Read ECU Information	
Civic Flex	/	Automatic shift control system (A/T)	M81	Read codes	
Civic Flex	/	Automatic shift control system (A/T)	M81	Erase Codes	
Civic Flex	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
Civic Flex	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
Civic Flex	/	Automatic shift control system (A/T)	M81	Read Live Data	
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Civic Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
Civic Flex	/	Automatic shift control system (A/T)	M82	Read ECU Information	
Civic Flex	/	Automatic shift control system (A/T)	M82	Read codes	
Civic Flex	/	Automatic shift control system (A/T)	M82	Erase Codes	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
Civic Flex	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
Civic Flex	/	Active Engine Control Support System (ACM)	M06	Read codes	
Civic Flex	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
Civic Flex	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
Civic Flex	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
Civic Flex	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
Civic Flex	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
Civic Flex	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
Civic Flex	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
Civic Flex	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
Civic Flex	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
Civic Flex	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
Civic Flex	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
Civic Flex	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read ECU Information	
Civic Flex	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read codes	
Civic Flex	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Erase Codes	
Civic Flex	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read Freeze Frame Data	
Civic Flex	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read Live Data	

Civic Flex	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
Civic Flex	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
Civic Flex	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
Civic Flex	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
Civic Flex	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
Civic Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
Civic Flex	/	Transmission Control System (AT) M18	Read ECU Information	
Civic Flex	/	Transmission Control System (AT) M18	Read codes	
Civic Flex	/	Transmission Control System (AT) M18	Erase Codes	
Civic Flex	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
Civic Flex	/	Transmission Control System (AT) M18	Read Live Data	
Civic Flex	/	Transmission Control System (AT) M18	Adjustment	
Civic Flex	/	Active Torque Converter Control System (ATTSS) M0E	Read ECU Information	
Civic Flex	/	Active Torque Converter Control System (ATTSS) M0E	Read codes	
Civic Flex	/	Active Torque Converter Control System (ATTSS) M0E	Erase Codes	
Civic Flex	/	Active Torque Converter Control System (ATTSS) M0E	Read Freeze Frame Data	
Civic Flex	/	Active Torque Converter Control System (ATTSS) M0E	Read Live Data	
Civic Flex	/	Active Torque Converter Control System (ATTSS) M0E	Miscellaneous Test	ATTSS TEST SHORT TIME MODE
Civic Flex	/	Active Torque Converter Control System (ATTSS) M0E	Miscellaneous Test	STEERING ANGLE
Civic Flex	/	Active Torque Converter Control System (ATTSS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
Civic Flex	/	Active Torque Converter Control System (ATTSS) M0E	Miscellaneous Test	ALL SENSORS
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
Civic Flex	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
Civic Flex	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
Civic Flex	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Oncoming Vehicle Detection
Civic Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Preceding Vehicle Detection
Civic Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
Civic Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
Civic Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset Operation
Civic Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Returning Operation
Civic Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Automatic Returning Distance
Civic Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Manual Returning Time
Civic Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset to default
Civic Flex	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
Civic Flex	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
Civic Flex	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
Civic Flex	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
Civic Flex	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
Civic Flex	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
Civic Flex	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
Civic Flex	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
Civic Flex	/	BODY ELECTRICAL/e-Call MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
Civic Flex	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
Civic Flex	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
Civic Flex	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	
Civic Flex	/	BODY ELECTRICAL/Gauges MFF	Read codes	

Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
Civic Flex	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
Civic Flex	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
Civic Flex	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
Civic Flex	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
Civic Flex	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
Civic Flex	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
Civic Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
Civic Flex	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
Civic Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
Civic Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
Civic Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
Civic Flex	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
Civic Flex	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
Civic Flex	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
Civic Flex	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
Civic Flex	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
Civic Flex	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	

Civic Flex	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
Civic Flex	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
Civic Flex	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
Civic Flex	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Security	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
Civic Flex	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
Civic Flex	/	BODY ELECTRICAL/Security	MFF	History Data	
Civic Flex	/	BODY ELECTRICAL/Security	MFF	History Clear	
Civic Flex	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
Civic Flex	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
Civic Flex	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Civic Flex	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
Civic Flex	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Civic Flex	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
Civic Flex	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
Civic Flex	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
Civic Flex	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
Civic Flex	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
Civic Flex	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
Civic Flex	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
Civic Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
Civic Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
Civic Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
Civic Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
Civic Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
Civic Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
Civic Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
Civic Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
Civic Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
Civic Flex	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
Civic Flex	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
Civic Flex	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
Civic Flex	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
Civic Flex	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
Civic Flex	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
Civic Flex	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
Civic Flex	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
Civic Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read ECU Information	
Civic Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read codes	
Civic Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Erase Codes	
Civic Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Freeze Frame Data	
Civic Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Live Data	
Civic Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
Civic Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	RADAR AIMING
Civic Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	CMBS Brake

Civic Flex	/	Promise Automatic Transmission Control System (CVT M1B)	Read ECU Information	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M1B)	Read codes	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M1B)	Erase Codes	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M1B)	Read Freeze Frame Data	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M1B)	Read Live Data	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M1B)	ECMPCM Reset	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Lock Solenoid Test
Civic Flex	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Solenoid Tests
Civic Flex	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Electrical Oil Pump Activation
Civic Flex	/	Promise Automatic Transmission Control System (CVT M33)	Read ECU Information	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M33)	Read codes	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M33)	Erase Codes	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M33)	Read Freeze Frame Data	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M33)	Read Live Data	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M33)	ECMPCM Reset	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid
Civic Flex	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)
Civic Flex	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)
Civic Flex	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	ECMPCM Reset	
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B
Civic Flex	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P
Civic Flex	/	DBW M34	Read ECU Information	
Civic Flex	/	DBW M34	Read codes	
Civic Flex	/	DBW M34	Erase Codes	
Civic Flex	/	DBW M34	Read Freeze Frame Data	
Civic Flex	/	DBW M34	Read Live Data	
Civic Flex	/	DBW M34	Inspection	Idle Speed Adjust
Civic Flex	/	DBW M34	Inspection	Throttle Test
Civic Flex	/	DBW M34	ECM Reset	
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
Civic Flex	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
Civic Flex	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
Civic Flex	/	Diesel Engine Control System (DIESEL) M37	Read codes	
Civic Flex	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
Civic Flex	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
Civic Flex	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
Civic Flex	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
Civic Flex	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
Civic Flex	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
Civic Flex	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Read codes	
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
Civic Flex	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	

Civic Flex	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
Civic Flex	/	Capacitor Control System (EDLC)	M12	Read codes	
Civic Flex	/	Capacitor Control System (EDLC)	M12	Erase Codes	
Civic Flex	/	Capacitor Control System (EDLC)	M12	Read Live Data	
Civic Flex	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
Civic Flex	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
Civic Flex	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
Civic Flex	/	Electronic Brake Control System (EPB)	M1F	Read codes	
Civic Flex	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
Civic Flex	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
Civic Flex	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
Civic Flex	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
Civic Flex	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
Civic Flex	/	Electronic Brake Control System (EPB)	M3E	Read codes	
Civic Flex	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
Civic Flex	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
Civic Flex	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
Civic Flex	/	Electric Powertrain / IMA	M66	Read ECU Information	
Civic Flex	/	Electric Powertrain / IMA	M66	Read codes	
Civic Flex	/	Electric Powertrain / IMA	M66	Erase Codes	
Civic Flex	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
Civic Flex	/	Electric Powertrain / IMA	M66	Read Live Data	
Civic Flex	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
Civic Flex	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
Civic Flex	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
Civic Flex	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
Civic Flex	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
Civic Flex	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
Civic Flex	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
Civic Flex	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
Civic Flex	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
Civic Flex	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
Civic Flex	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
Civic Flex	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
Civic Flex	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
Civic Flex	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
Civic Flex	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
Civic Flex	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
Civic Flex	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
Civic Flex	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
Civic Flex	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
Civic Flex	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
Civic Flex	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
Civic Flex	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
Civic Flex	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
Civic Flex	/	New energy battery (EV)	M44	Read ECU Information	
Civic Flex	/	New energy battery (EV)	M44	Read codes	
Civic Flex	/	New energy battery (EV)	M44	Erase Codes	
Civic Flex	/	New energy battery (EV)	M44	Read Freeze Frame Data	
Civic Flex	/	New energy battery (EV)	M44	Read Live Data	
Civic Flex	/	New energy battery (EV)	M44	Inspection	
Civic Flex	/	New energy battery (EV)	M44	Adjustment	
Civic Flex	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
Civic Flex	/	Electronic vacuum pump (EVPS)	M21	Read codes	
Civic Flex	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
Civic Flex	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
Civic Flex	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
Civic Flex	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
Civic Flex	/	Electronic vacuum pump (EVPS)	M22	Read codes	
Civic Flex	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
Civic Flex	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
Civic Flex	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
Civic Flex	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
Civic Flex	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
Civic Flex	/	FCW LDW	M4E	Read ECU Information	
Civic Flex	/	FCW LDW	M4E	Read codes	
Civic Flex	/	FCW LDW	M4E	Erase Codes	
Civic Flex	/	FCW LDW	M4E	Read Live Data	
Civic Flex	/	FCW LDW	M4E	Function Test	FCW Drive
Civic Flex	/	FCW LDW	M4E	Function Test	Left side lane departure warning
Civic Flex	/	FCW LDW	M4E	Function Test	Right side lane departure warning
Civic Flex	/	FCW LDW	M4E	Function Test	Indicator Drive
Civic Flex	/	FCW LDW	M4E	Adjustment	
Civic Flex	/	Instrument Display System (GAUGE)	M2C	Read codes	
Civic Flex	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
Civic Flex	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Read codes	
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Erase Codes	

Civic Flex	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Read codes	
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Read codes	
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
Civic Flex	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
Civic Flex	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Read codes	
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
Civic Flex	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
Civic Flex	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
Civic Flex	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
Civic Flex	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
Civic Flex	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
Civic Flex	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
Civic Flex	/	Intelligent Parking Control System (SPS)	M9B	Customize	
Civic Flex	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
Civic Flex	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
Civic Flex	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
Civic Flex	/	Hydraulic booster control system (HBS)	M5F	Read codes	
Civic Flex	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
Civic Flex	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
Civic Flex	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
Civic Flex	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
Civic Flex	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
Civic Flex	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
Civic Flex	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
Civic Flex	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
Civic Flex	/	IMA	M63	Read ECU Information	
Civic Flex	/	IMA	M63	Read codes	
Civic Flex	/	IMA	M63	Erase Codes	
Civic Flex	/	IMA	M63	Read Freeze Frame Data	
Civic Flex	/	IMA	M63	Read Live Data	
Civic Flex	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
Civic Flex	/	IMA	M63	Adjustment	SOC PRESET
Civic Flex	/	IMA	M64	Read ECU Information	
Civic Flex	/	IMA	M64	Read codes	
Civic Flex	/	IMA	M64	Erase Codes	
Civic Flex	/	IMA	M64	Read Freeze Frame Data	
Civic Flex	/	IMA	M64	Read Live Data	
Civic Flex	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
Civic Flex	/	IMA	M64	Adjustment	SOC PRESET
Civic Flex	/	IMA	M65	Read ECU Information	
Civic Flex	/	IMA	M65	Read codes	
Civic Flex	/	IMA	M65	Erase Codes	
Civic Flex	/	IMA	M65	Read Freeze Frame Data	



Civic Flex	/	IMA	M65	Read Live Data	
Civic Flex	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
Civic Flex	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
Civic Flex	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
Civic Flex	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
Civic Flex	/	Intake Sounder Control System (ISC)	M6D	Read codes	
Civic Flex	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
Civic Flex	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
Civic Flex	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
Civic Flex	/	Night Vision System (INVS)	0XB1	Read ECU Information	
Civic Flex	/	Night Vision System (INVS)	0XB1	Read codes	
Civic Flex	/	Night Vision System (INVS)	0XB1	Erase Codes	
Civic Flex	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
Civic Flex	/	Night Vision System (INVS)	0XB1	Read Live Data	
Civic Flex	/	Night Vision System (INVS)	0XB1	Adjustment	
Civic Flex	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
Civic Flex	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
Civic Flex	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
Civic Flex	/	i-SHIFT	0XB0	Read ECU Information	
Civic Flex	/	i-SHIFT	0XB0	Read codes	
Civic Flex	/	i-SHIFT	0XB0	Erase Codes	
Civic Flex	/	i-SHIFT	0XB0	Read Live Data	
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Read codes	
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Self Check	
Civic Flex	/	Keyless Entry Control System (KAS)	M99	History Data	
Civic Flex	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
Civic Flex	/	Keyless Entry Control System (KAS)	M99	Registration	
Civic Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
Civic Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
Civic Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
Civic Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
Civic Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
Civic Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
Civic Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
Civic Flex	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
Civic Flex	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
Civic Flex	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
Civic Flex	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
Civic Flex	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
Civic Flex	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE

Civic Flex	/	Electronically assisted lane keeping control system (Lk M71	Customize	LDW OFFSET
Civic Flex	/	Electronically assisted lane keeping control system (Lk M71	Customize	GAIN ADJUST
Civic Flex	/	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
Civic Flex	/	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
Civic Flex	/	Management ECU Module (ME) M74	Read ECU Information	
Civic Flex	/	Management ECU Module (ME) M74	Read codes	
Civic Flex	/	Management ECU Module (ME) M74	Erase Codes	
Civic Flex	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
Civic Flex	/	Management ECU Module (ME) M74	Read Live Data	
Civic Flex	/	Multi-view camera and parking assist system (MVC/P) M26	Read ECU Information	
Civic Flex	/	Multi-view camera and parking assist system (MVC/P) M26	Read codes	
Civic Flex	/	Multi-view camera and parking assist system (MVC/P) M26	Erase Codes	
Civic Flex	/	Multi-view camera and parking assist system (MVC/P) M26	Read Live Data	
Civic Flex	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
Civic Flex	/	Multi-view camera system (MVCS) M7A	Read codes	
Civic Flex	/	Multi-view camera system (MVCS) M7A	Erase Codes	
Civic Flex	/	Multi-view camera system (MVCS) M7A	Read Live Data	
Civic Flex	/	Multi-view camera system (MVCS) M7A	Customization	
Civic Flex	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
Civic Flex	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
Civic Flex	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
Civic Flex	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
Civic Flex	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
Civic Flex	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
Civic Flex	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
Civic Flex	/	Power Control Unit (PCU) M83	Read ECU Information	
Civic Flex	/	Power Control Unit (PCU) M83	Read codes	
Civic Flex	/	Power Control Unit (PCU) M83	Erase Codes	
Civic Flex	/	Power Control Unit (PCU) M83	Read Live Data	
Civic Flex	/	Power Control Unit (PCU) M83	Self Check	
Civic Flex	/	Power Control Unit (PCU) M83	History Data	
Civic Flex	/	Engine Control System (PGM-FI) M23	Read ECU Information	
Civic Flex	/	Engine Control System (PGM-FI) M23	Read codes	
Civic Flex	/	Engine Control System (PGM-FI) M23	Erase Codes	
Civic Flex	/	Engine Control System (PGM-FI) M23	Readiness Codes	
Civic Flex	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
Civic Flex	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
Civic Flex	/	Engine Control System (PGM-FI) M23	Read Live Data	
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
Civic Flex	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
Civic Flex	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
Civic Flex	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
Civic Flex	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
Civic Flex	/	Engine Control System (PGM-FI) M23	VIN CHECK	
Civic Flex	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
Civic Flex	/	Engine Control System (PGM-FI) M50	Read ECU Information	
Civic Flex	/	Engine Control System (PGM-FI) M50	Read codes	
Civic Flex	/	Engine Control System (PGM-FI) M50	Erase Codes	
Civic Flex	/	Engine Control System (PGM-FI) M50	Readiness Codes	
Civic Flex	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
Civic Flex	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
Civic Flex	/	Engine Control System (PGM-FI) M50	Read Live Data	
Civic Flex	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
Civic Flex	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
Civic Flex	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
Civic Flex	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
Civic Flex	/	Engine Control System (PGM-FI) M50	VIN CHECK	
Civic Flex	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
Civic Flex	/	Engine Control System (PGM-FI) M86	Read ECU Information	
Civic Flex	/	Engine Control System (PGM-FI) M86	Read codes	
Civic Flex	/	Engine Control System (PGM-FI) M86	Erase Codes	
Civic Flex	/	Engine Control System (PGM-FI) M86	Readiness Codes	
Civic Flex	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
Civic Flex	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
Civic Flex	/	Engine Control System (PGM-FI) M86	Read Live Data	
Civic Flex	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
Civic Flex	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
Civic Flex	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
Civic Flex	/	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
Civic Flex	/	Engine Control System (PGM-FI) M86	Inspection	EGR TEST
Civic Flex	/	Engine Control System (PGM-FI) M86	Inspection	VTEC TEST
Civic Flex	/	Engine Control System (PGM-FI) M86	Inspection	IACV TEST
Civic Flex	/	Engine Control System (PGM-FI) M86	Inspection	O2S TEST
Civic Flex	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
Civic Flex	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
Civic Flex	/	Engine Control System (PGM-FI) M86	Inspection	RADIATOR FAN
Civic Flex	/	Engine Control System (PGM-FI) M86	Inspection	A/C CLUTCH

Civic Flex	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
Civic Flex	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
Civic Flex	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
Civic Flex	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
Civic Flex	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
Civic Flex	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
Civic Flex	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
Civic Flex	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
Civic Flex	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
Civic Flex	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
Civic Flex	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
Civic Flex	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
Civic Flex	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
Civic Flex	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
Civic Flex	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
Civic Flex	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
Civic Flex	/	PSR	M27	Read ECU Information	
Civic Flex	/	PSR	M27	Read codes	
Civic Flex	/	PSR	M27	Erase Codes	
Civic Flex	/	PSR	M27	Read Live Data	
Civic Flex	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
Civic Flex	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
Civic Flex	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
Civic Flex	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
Civic Flex	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
Civic Flex	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
Civic Flex	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
Civic Flex	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
Civic Flex	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
Civic Flex	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
Civic Flex	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
Civic Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
Civic Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
Civic Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
Civic Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
Civic Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
Civic Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
Civic Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
Civic Flex	/	Remote starter (RS)	M90	System Check	
Civic Flex	/	Remote starter (RS)	M90	HISTORY	
Civic Flex	/	Remote starter (RS)	M90	Registration	
Civic Flex	/	Seat load cell (SWS)	M6F	Read ECU Information	
Civic Flex	/	Seat load cell (SWS)	M6F	Read codes	
Civic Flex	/	Seat load cell (SWS)	M6F	Erase Codes	
Civic Flex	/	Seat load cell (SWS)	M6F	Read Live Data	
Civic Flex	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
Civic Flex	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
Civic Flex	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
Civic Flex	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
Civic Flex	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
Civic Flex	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
Civic Flex	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
Civic Flex	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
Civic Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M All Sensor	
Civic Flex	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
Civic Flex	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
Civic Flex	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
Civic Flex	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
Civic Flex	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
Civic Flex	/	Groove track drive unit (SLOT ECU)	M98	History Data	
Civic Flex	/	Groove track drive unit (SLOT ECU)	M98	System Information	
Civic Flex	/	Airbag Control System (SRS)	M9F	Read ECU Information	
Civic Flex	/	Airbag Control System (SRS)	M9F	Read codes	
Civic Flex	/	Airbag Control System (SRS)	M9F	Erase Codes	
Civic Flex	/	Airbag Control System (SRS)	M9F	Read Live Data	
Civic Flex	/	Airbag Control System (SRS)	MA0	Read ECU Information	
Civic Flex	/	Airbag Control System (SRS)	MA0	Read codes	
Civic Flex	/	Airbag Control System (SRS)	MA0	Erase Codes	
Civic Flex	/	Airbag Control System (SRS)	MA0	Read Live Data	
Civic Flex	/	Airbag Control System (SRS)	MA1	Read ECU Information	

Civic Flex	/	Airbag Control System (SRS)	MA1	Read codes	
Civic Flex	/	Airbag Control System (SRS)	MA1	Erase Codes	
Civic Flex	/	Airbag Control System (SRS)	MA1	Read Live Data	
Civic Flex	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
Civic Flex	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
Civic Flex	/	Airbag Control System (SRS)	M2A	Read codes	
Civic Flex	/	Airbag Control System (SRS)	M2A	Erase Codes	
Civic Flex	/	Airbag Control System (SRS)	M2A	Read Live Data	
Civic Flex	/	Airbag Control System (SRS)	M9C	Read ECU Information	
Civic Flex	/	Airbag Control System (SRS)	M9C	Read codes	
Civic Flex	/	Airbag Control System (SRS)	M9C	Erase Codes	
Civic Flex	/	Airbag Control System (SRS)	M9C	Read Live Data	
Civic Flex	/	Airbag Control System (SRS)	M9D	Read ECU Information	
Civic Flex	/	Airbag Control System (SRS)	M9D	Read codes	
Civic Flex	/	Airbag Control System (SRS)	M9D	Erase Codes	
Civic Flex	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
Civic Flex	/	Airbag Control System (SRS)	M9D	Read Live Data	
Civic Flex	/	Airbag Control System (SRS)	M9D	Parameter Information	
Civic Flex	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
Civic Flex	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
Civic Flex	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
Civic Flex	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
Civic Flex	/	Airbag Control System (SRS)	M9D	Function Test	
Civic Flex	/	Airbag Control System (SRS)	M9D	System Information	
Civic Flex	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
Civic Flex	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
Civic Flex	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
Civic Flex	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
Civic Flex	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
Civic Flex	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
Civic Flex	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
Civic Flex	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
Civic Flex	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
Civic Flex	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
Civic Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
Civic Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
Civic Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
Civic Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
Civic Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
Civic Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
Civic Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
Civic Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
Civic Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
Civic HPDSC	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
Civic HPDSC	/	Four-wheel steering control system (4WS)	M52	Read codes	
Civic HPDSC	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
Civic HPDSC	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
Civic HPDSC	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
Civic HPDSC	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
Civic HPDSC	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
Civic HPDSC	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
Civic HPDSC	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
Civic HPDSC	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
Civic HPDSC	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	Read codes	
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	Erase Codes	
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	Read Live Data	
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
Civic HPDSC	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
Civic HPDSC	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
Civic HPDSC	/	Automatic shift control system (A/T)	M3B	Read codes	
Civic HPDSC	/	Automatic shift control system (A/T)	M3B	Erase Codes	
Civic HPDSC	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
Civic HPDSC	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
Civic HPDSC	/	Automatic shift control system (A/T)	M3B	Read Live Data	
Civic HPDSC	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
Civic HPDSC	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
Civic HPDSC	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
Civic HPDSC	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
Civic HPDSC	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
Civic HPDSC	/	Automatic shift control system (A/T)	M3C	Read codes	
Civic HPDSC	/	Automatic shift control system (A/T)	M3C	Erase Codes	

Civic HPDSC	/	Automatic shift control system (A/T)	M81	Read ECU Information	
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Read codes	
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Erase Codes	
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
Civic HPDSC	/	Automatic shift control system (A/T)	M81	ECMPCMC Reset	
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Read Live Data	
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Civic HPDSC	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
Civic HPDSC	/	Automatic shift control system (A/T)	M82	Read ECU Information	
Civic HPDSC	/	Automatic shift control system (A/T)	M82	Read codes	
Civic HPDSC	/	Automatic shift control system (A/T)	M82	Erase Codes	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
Civic HPDSC	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
Civic HPDSC	/	Active Engine Control Support System (ACM)	M06	Read codes	
Civic HPDSC	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
Civic HPDSC	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
Civic HPDSC	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
Civic HPDSC	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
Civic HPDSC	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
Civic HPDSC	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
Civic HPDSC	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
Civic HPDSC	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
Civic HPDSC	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
Civic HPDSC	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
Civic HPDSC	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
Civic HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read ECU Information	
Civic HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read codes	
Civic HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Erase Codes	
Civic HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read Freeze Frame Data	
Civic HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read Live Data	
Civic HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Function Test	Damper Force Operation Test
Civic HPDSC	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Adjustment	Damper Stroke Calibration
Civic HPDSC	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
Civic HPDSC	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
Civic HPDSC	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
Civic HPDSC	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
Civic HPDSC	/	Transmission Control System (AT)	M18	Read ECU Information	
Civic HPDSC	/	Transmission Control System (AT)	M18	Read codes	
Civic HPDSC	/	Transmission Control System (AT)	M18	Erase Codes	
Civic HPDSC	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
Civic HPDSC	/	Transmission Control System (AT)	M18	Read Live Data	
Civic HPDSC	/	Transmission Control System (AT)	M18	Adjustment	
Civic HPDSC	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
Civic HPDSC	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
Civic HPDSC	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
Civic HPDSC	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
Civic HPDSC	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
Civic HPDSC	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
Civic HPDSC	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
Civic HPDSC	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
Civic HPDSC	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	

Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
Civic HPDSC	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
Civic HPDSC	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
Civic HPDSC	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
Civic HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
Civic HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
Civic HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
Civic HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
Civic HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
Civic HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
Civic HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
Civic HPDSC	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
Civic HPDSC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
Civic HPDSC	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
Civic HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
Civic HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
Civic HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
Civic HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
Civic HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
Civic HPDSC	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
Civic HPDSC	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
Civic HPDSC	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
Civic HPDSC	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime

Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
Civic HPDSC	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
Civic HPDSC	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
Civic HPDSC	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
Civic HPDSC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
Civic HPDSC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
Civic HPDSC	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
Civic HPDSC	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
Civic HPDSC	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
Civic HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
Civic HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
Civic HPDSC	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
Civic HPDSC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
Civic HPDSC	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
Civic HPDSC	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
Civic HPDSC	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
Civic HPDSC	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
Civic HPDSC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
Civic HPDSC	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
Civic HPDSC	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
Civic HPDSC	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Security	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
Civic HPDSC	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
Civic HPDSC	/	BODY ELECTRICAL/Security	MFF	History Data	
Civic HPDSC	/	BODY ELECTRICAL/Security	MFF	History Clear	
Civic HPDSC	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	

Civic HPDSC	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
Civic HPDSC	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
Civic HPDSC	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Civic HPDSC	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
Civic HPDSC	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Civic HPDSC	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
Civic HPDSC	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
Civic HPDSC	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
Civic HPDSC	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
Civic HPDSC	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
Civic HPDSC	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
Civic HPDSC	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
Civic HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
Civic HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
Civic HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
Civic HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
Civic HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
Civic HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
Civic HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
Civic HPDSC	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
Civic HPDSC	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
Civic HPDSC	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
Civic HPDSC	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
Civic HPDSC	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
Civic HPDSC	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
Civic HPDSC	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
Civic HPDSC	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
Civic HPDSC	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
Civic HPDSC	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
Civic HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read ECU Information	
Civic HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read codes	
Civic HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Erase Codes	
Civic HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Freeze Frame Data	
Civic HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Live Data	
Civic HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	CMBS (CMS) ACTIVATION HISTORY	
Civic HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	RADAR AIMING
Civic HPDSC	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	CMBS Brake
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read ECU Information	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read codes	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Erase Codes	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Freeze Frame Data	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Live Data	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M1B	M1B	ECMPCM Reset	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Lock Solenoid Test
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Solenoid Tests
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Electrical Oil Pump Activation
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M33	M33	Read ECU Information	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M33	M33	Read codes	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M33	M33	Erase Codes	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Freeze Frame Data	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Live Data	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M33	M33	ECMPCM Reset	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Inhibitor Solenoid
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid A (LF)
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid B (RF)
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Start Clutch Feedback Learn
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read ECU Information	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read codes	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Erase Codes	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Freeze Frame Data	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Live Data	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	ECMPCM Reset	
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Inhibitor Solenoid
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid A (LF)
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid B (RF)
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Start Clutch Feedback Learn
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve A
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve B
Civic HPDSC	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve O/P



Civic HPDSC	/	DBW	M34	Read ECU Information	
Civic HPDSC	/	DBW	M34	Read codes	
Civic HPDSC	/	DBW	M34	Erase Codes	
Civic HPDSC	/	DBW	M34	Read Freeze Frame Data	
Civic HPDSC	/	DBW	M34	Read Live Data	
Civic HPDSC	/	DBW	M34	Inspection	Idle Speed Adjust
Civic HPDSC	/	DBW	M34	Inspection	Throttle Test
Civic HPDSC	/	DBW	M34	ECM Reset	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
Civic HPDSC	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
Civic HPDSC	/	Capacitor Control System (EDLC)	M12	Read codes	
Civic HPDSC	/	Capacitor Control System (EDLC)	M12	Erase Codes	
Civic HPDSC	/	Capacitor Control System (EDLC)	M12	Read Live Data	
Civic HPDSC	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
Civic HPDSC	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
Civic HPDSC	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
Civic HPDSC	/	Electronic Brake Control System (EPB)	M1F	Read codes	
Civic HPDSC	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
Civic HPDSC	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
Civic HPDSC	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
Civic HPDSC	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
Civic HPDSC	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
Civic HPDSC	/	Electronic Brake Control System (EPB)	M3E	Read codes	
Civic HPDSC	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
Civic HPDSC	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
Civic HPDSC	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
Civic HPDSC	/	Electric Powertrain / IMA	M66	Read ECU Information	
Civic HPDSC	/	Electric Powertrain / IMA	M66	Read codes	
Civic HPDSC	/	Electric Powertrain / IMA	M66	Erase Codes	
Civic HPDSC	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
Civic HPDSC	/	Electric Powertrain / IMA	M66	Read Live Data	
Civic HPDSC	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
Civic HPDSC	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
Civic HPDSC	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
Civic HPDSC	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
Civic HPDSC	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
Civic HPDSC	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
Civic HPDSC	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
Civic HPDSC	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
Civic HPDSC	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
Civic HPDSC	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	

Civic HPDSC	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
Civic HPDSC	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
Civic HPDSC	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
Civic HPDSC	/	New energy battery (EV)	M44	Read ECU Information	
Civic HPDSC	/	New energy battery (EV)	M44	Read codes	
Civic HPDSC	/	New energy battery (EV)	M44	Erase Codes	
Civic HPDSC	/	New energy battery (EV)	M44	Read Freeze Frame Data	
Civic HPDSC	/	New energy battery (EV)	M44	Read Live Data	
Civic HPDSC	/	New energy battery (EV)	M44	Inspection	
Civic HPDSC	/	New energy battery (EV)	M44	Adjustment	
Civic HPDSC	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
Civic HPDSC	/	Electronic vacuum pump (EVPS)	M21	Read codes	
Civic HPDSC	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
Civic HPDSC	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
Civic HPDSC	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
Civic HPDSC	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
Civic HPDSC	/	Electronic vacuum pump (EVPS)	M22	Read codes	
Civic HPDSC	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
Civic HPDSC	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
Civic HPDSC	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
Civic HPDSC	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
Civic HPDSC	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
Civic HPDSC	/	FCW LDW	M4E	Read ECU Information	
Civic HPDSC	/	FCW LDW	M4E	Read codes	
Civic HPDSC	/	FCW LDW	M4E	Erase Codes	
Civic HPDSC	/	FCW LDW	M4E	Read Live Data	
Civic HPDSC	/	FCW LDW	M4E	Function Test	FCW Drive
Civic HPDSC	/	FCW LDW	M4E	Function Test	Left side lane departure warning
Civic HPDSC	/	FCW LDW	M4E	Function Test	Right side lane departure warning
Civic HPDSC	/	FCW LDW	M4E	Function Test	Indicator Drive
Civic HPDSC	/	FCW LDW	M4E	Adjustment	
Civic HPDSC	/	Instrument Display System (GAUGE)	M2C	Read codes	
Civic HPDSC	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
Civic HPDSC	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Read codes	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Read codes	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Read codes	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid

Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
Civic HPDSC	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Read codes	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
Civic HPDSC	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
Civic HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
Civic HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
Civic HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
Civic HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
Civic HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
Civic HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Customize	
Civic HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
Civic HPDSC	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
Civic HPDSC	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
Civic HPDSC	/	Hydraulic booster control system (HBS)	M5F	Read codes	
Civic HPDSC	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
Civic HPDSC	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
Civic HPDSC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
Civic HPDSC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
Civic HPDSC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
Civic HPDSC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
Civic HPDSC	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
Civic HPDSC	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
Civic HPDSC	/	IMA	M63	Read ECU Information	
Civic HPDSC	/	IMA	M63	Read codes	
Civic HPDSC	/	IMA	M63	Erase Codes	
Civic HPDSC	/	IMA	M63	Read Freeze Frame Data	
Civic HPDSC	/	IMA	M63	Read Live Data	
Civic HPDSC	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
Civic HPDSC	/	IMA	M63	Adjustment	SOC PRESET
Civic HPDSC	/	IMA	M64	Read ECU Information	
Civic HPDSC	/	IMA	M64	Read codes	
Civic HPDSC	/	IMA	M64	Erase Codes	
Civic HPDSC	/	IMA	M64	Read Freeze Frame Data	
Civic HPDSC	/	IMA	M64	Read Live Data	
Civic HPDSC	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
Civic HPDSC	/	IMA	M64	Adjustment	SOC PRESET
Civic HPDSC	/	IMA	M65	Read ECU Information	
Civic HPDSC	/	IMA	M65	Read codes	
Civic HPDSC	/	IMA	M65	Erase Codes	
Civic HPDSC	/	IMA	M65	Read Freeze Frame Data	
Civic HPDSC	/	IMA	M65	Read Live Data	
Civic HPDSC	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
Civic HPDSC	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
Civic HPDSC	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
Civic HPDSC	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
Civic HPDSC	/	Intake Sounder Control System (ISC)	M6D	Read codes	
Civic HPDSC	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
Civic HPDSC	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
Civic HPDSC	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
Civic HPDSC	/	Night Vision System (INVS)	0XB1	Read ECU Information	
Civic HPDSC	/	Night Vision System (INVS)	0XB1	Read codes	
Civic HPDSC	/	Night Vision System (INVS)	0XB1	Erase Codes	
Civic HPDSC	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
Civic HPDSC	/	Night Vision System (INVS)	0XB1	Read Live Data	
Civic HPDSC	/	Night Vision System (INVS)	0XB1	Adjustment	
Civic HPDSC	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
Civic HPDSC	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
Civic HPDSC	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
Civic HPDSC	/	i-SHIFT	0XB0	Read ECU Information	
Civic HPDSC	/	i-SHIFT	0XB0	Read codes	
Civic HPDSC	/	i-SHIFT	0XB0	Erase Codes	
Civic HPDSC	/	i-SHIFT	0XB0	Read Live Data	
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Read codes	
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Self Check	
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	History Data	
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication

Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
Civic HPDSC	/	Keyless Entry Control System (KAS)	M99	Registration	
Civic HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
Civic HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
Civic HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
Civic HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
Civic HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
Civic HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
Civic HPDSC	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
Civic HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
Civic HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
Civic HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
Civic HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
Civic HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
Civic HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
Civic HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
Civic HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
Civic HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
Civic HPDSC	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
Civic HPDSC	/	Management ECU Module (ME)	M74	Read ECU Information	
Civic HPDSC	/	Management ECU Module (ME)	M74	Read codes	
Civic HPDSC	/	Management ECU Module (ME)	M74	Erase Codes	
Civic HPDSC	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
Civic HPDSC	/	Management ECU Module (ME)	M74	Read Live Data	
Civic HPDSC	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
Civic HPDSC	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
Civic HPDSC	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
Civic HPDSC	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
Civic HPDSC	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
Civic HPDSC	/	Multi-view camera system (MVCS)	M7A	Read codes	
Civic HPDSC	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
Civic HPDSC	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
Civic HPDSC	/	Multi-view camera system (MVCS)	M7A	Customization	
Civic HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
Civic HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
Civic HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
Civic HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
Civic HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
Civic HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
Civic HPDSC	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
Civic HPDSC	/	Power Control Unit (PCU)	M83	Read ECU Information	
Civic HPDSC	/	Power Control Unit (PCU)	M83	Read codes	
Civic HPDSC	/	Power Control Unit (PCU)	M83	Erase Codes	
Civic HPDSC	/	Power Control Unit (PCU)	M83	Read Live Data	
Civic HPDSC	/	Power Control Unit (PCU)	M83	Self Check	
Civic HPDSC	/	Power Control Unit (PCU)	M83	History Data	
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Read ECU Information	

Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Read codes	
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Erase Codes	
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Read Live Data	
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
Civic HPDSC	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	Read codes	
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	Erase Codes	
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	Read Live Data	
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
Civic HPDSC	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Read codes	
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Erase Codes	
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Read Live Data	
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
Civic HPDSC	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
Civic HPDSC	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
Civic HPDSC	/	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
Civic HPDSC	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	
Civic HPDSC	/	PSR	M27	Read ECU Information	
Civic HPDSC	/	PSR	M27	Read codes	
Civic HPDSC	/	PSR	M27	Erase Codes	
Civic HPDSC	/	PSR	M27	Read Live Data	
Civic HPDSC	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
Civic HPDSC	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
Civic HPDSC	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
Civic HPDSC	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
Civic HPDSC	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
Civic HPDSC	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
Civic HPDSC	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
Civic HPDSC	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
Civic HPDSC	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
Civic HPDSC	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
Civic HPDSC	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
Civic HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	

Civic HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
Civic HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
Civic HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
Civic HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
Civic HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
Civic HPDSC	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
Civic HPDSC	/	Remote starter (RS)	M90	System Check	
Civic HPDSC	/	Remote starter (RS)	M90	HISTORY	
Civic HPDSC	/	Remote starter (RS)	M90	Registration	
Civic HPDSC	/	Seat load cell (SWS)	M6F	Read ECU Information	
Civic HPDSC	/	Seat load cell (SWS)	M6F	Read codes	
Civic HPDSC	/	Seat load cell (SWS)	M6F	Erase Codes	
Civic HPDSC	/	Seat load cell (SWS)	M6F	Read Live Data	
Civic HPDSC	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
Civic HPDSC	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
Civic HPDSC	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
Civic HPDSC	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
Civic HPDSC	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
Civic HPDSC	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
Civic HPDSC	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
Civic HPDSC	/	Seat load cell (SWS)	M6F	Adjustment	E-Pre-tensioner For CMBS (CMS)
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
Civic HPDSC	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
Civic HPDSC	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
Civic HPDSC	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
Civic HPDSC	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
Civic HPDSC	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
Civic HPDSC	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
Civic HPDSC	/	Groove track drive unit (SLOT ECU)	M98	History Data	
Civic HPDSC	/	Groove track drive unit (SLOT ECU)	M98	System Information	
Civic HPDSC	/	Airbag Control System (SRS)	M9F	Read ECU Information	
Civic HPDSC	/	Airbag Control System (SRS)	M9F	Read codes	
Civic HPDSC	/	Airbag Control System (SRS)	M9F	Erase Codes	
Civic HPDSC	/	Airbag Control System (SRS)	M9F	Read Live Data	
Civic HPDSC	/	Airbag Control System (SRS)	MA0	Read ECU Information	
Civic HPDSC	/	Airbag Control System (SRS)	MA0	Read codes	
Civic HPDSC	/	Airbag Control System (SRS)	MA0	Erase Codes	
Civic HPDSC	/	Airbag Control System (SRS)	MA0	Read Live Data	
Civic HPDSC	/	Airbag Control System (SRS)	MA1	Read ECU Information	
Civic HPDSC	/	Airbag Control System (SRS)	MA1	Read codes	
Civic HPDSC	/	Airbag Control System (SRS)	MA1	Erase Codes	
Civic HPDSC	/	Airbag Control System (SRS)	MA1	Read Live Data	
Civic HPDSC	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
Civic HPDSC	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
Civic HPDSC	/	Airbag Control System (SRS)	M2A	Read codes	
Civic HPDSC	/	Airbag Control System (SRS)	M2A	Erase Codes	
Civic HPDSC	/	Airbag Control System (SRS)	M2A	Read Live Data	
Civic HPDSC	/	Airbag Control System (SRS)	M9C	Read ECU Information	
Civic HPDSC	/	Airbag Control System (SRS)	M9C	Read codes	
Civic HPDSC	/	Airbag Control System (SRS)	M9C	Erase Codes	
Civic HPDSC	/	Airbag Control System (SRS)	M9C	Read Live Data	
Civic HPDSC	/	Airbag Control System (SRS)	M9D	Read ECU Information	
Civic HPDSC	/	Airbag Control System (SRS)	M9D	Read codes	
Civic HPDSC	/	Airbag Control System (SRS)	M9D	Erase Codes	
Civic HPDSC	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
Civic HPDSC	/	Airbag Control System (SRS)	M9D	Read Live Data	
Civic HPDSC	/	Airbag Control System (SRS)	M9D	Parameter Information	
Civic HPDSC	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
Civic HPDSC	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
Civic HPDSC	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
Civic HPDSC	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pre-tensioner For CMBS (CMS)
Civic HPDSC	/	Airbag Control System (SRS)	M9D	Function Test	
Civic HPDSC	/	Airbag Control System (SRS)	M9D	System Information	
Civic HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
Civic HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
Civic HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
Civic HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
Civic HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
Civic HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
Civic HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
Civic HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	

Civic HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
Civic HPDSC	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
Civic HPDSC	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
Civic HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
Civic HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
Civic HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
Civic HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
Civic HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
Civic HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
Civic HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
Civic HPDSC	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
Civic Tourer	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
Civic Tourer	/	Four-wheel steering control system (4WS)	M52	Read codes	
Civic Tourer	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
Civic Tourer	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
Civic Tourer	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
Civic Tourer	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
Civic Tourer	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
Civic Tourer	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
Civic Tourer	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
Civic Tourer	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
Civic Tourer	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
Civic Tourer	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
Civic Tourer	/	Automatic shift control system (A/T)	M1E	Read codes	
Civic Tourer	/	Automatic shift control system (A/T)	M1E	Erase Codes	
Civic Tourer	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
Civic Tourer	/	Automatic shift control system (A/T)	M1E	Read Live Data	
Civic Tourer	/	Automatic shift control system (A/T)	M1E	ECMPCMC Reset	
Civic Tourer	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
Civic Tourer	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
Civic Tourer	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Civic Tourer	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Civic Tourer	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Civic Tourer	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Civic Tourer	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
Civic Tourer	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
Civic Tourer	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
Civic Tourer	/	Automatic shift control system (A/T)	M3B	Read codes	
Civic Tourer	/	Automatic shift control system (A/T)	M3B	Erase Codes	
Civic Tourer	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
Civic Tourer	/	Automatic shift control system (A/T)	M3B	ECMPCMC Reset	
Civic Tourer	/	Automatic shift control system (A/T)	M3B	Read Live Data	
Civic Tourer	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
Civic Tourer	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
Civic Tourer	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
Civic Tourer	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
Civic Tourer	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
Civic Tourer	/	Automatic shift control system (A/T)	M3C	Read codes	
Civic Tourer	/	Automatic shift control system (A/T)	M3C	Erase Codes	
Civic Tourer	/	Automatic shift control system (A/T)	M81	Read ECU Information	
Civic Tourer	/	Automatic shift control system (A/T)	M81	Read codes	
Civic Tourer	/	Automatic shift control system (A/T)	M81	Erase Codes	
Civic Tourer	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
Civic Tourer	/	Automatic shift control system (A/T)	M81	ECMPCMC Reset	
Civic Tourer	/	Automatic shift control system (A/T)	M81	Read Live Data	
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Civic Tourer	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
Civic Tourer	/	Automatic shift control system (A/T)	M82	Read ECU Information	
Civic Tourer	/	Automatic shift control system (A/T)	M82	Read codes	
Civic Tourer	/	Automatic shift control system (A/T)	M82	Erase Codes	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK

Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
Civic Tourer	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
Civic Tourer	/	Active Engine Control Support System (ACM) M06	Read codes	
Civic Tourer	/	Active Engine Control Support System (ACM) M06	Erase Codes	
Civic Tourer	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
Civic Tourer	/	Active Engine Control Support System (ACM) M06	Read Live Data	
Civic Tourer	/	Active Engine Control Support System (ACM) M06	ACM Reset	
Civic Tourer	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
Civic Tourer	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
Civic Tourer	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
Civic Tourer	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
Civic Tourer	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
Civic Tourer	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
Civic Tourer	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
Civic Tourer	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
Civic Tourer	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
Civic Tourer	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
Civic Tourer	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
Civic Tourer	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
Civic Tourer	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
Civic Tourer	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
Civic Tourer	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
Civic Tourer	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
Civic Tourer	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
Civic Tourer	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
Civic Tourer	/	Transmission Control System (AT) M18	Read ECU Information	
Civic Tourer	/	Transmission Control System (AT) M18	Read codes	
Civic Tourer	/	Transmission Control System (AT) M18	Erase Codes	
Civic Tourer	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
Civic Tourer	/	Transmission Control System (AT) M18	Read Live Data	
Civic Tourer	/	Transmission Control System (AT) M18	Adjustment	
Civic Tourer	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
Civic Tourer	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
Civic Tourer	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
Civic Tourer	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
Civic Tourer	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
Civic Tourer	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
Civic Tourer	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
Civic Tourer	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
Civic Tourer	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
Civic Tourer	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
Civic Tourer	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
Civic Tourer	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Oncoming Vehicle Detection
Civic Tourer	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Preceding Vehicle Detection
Civic Tourer	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
Civic Tourer	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
Civic Tourer	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset Operation



Civic Tourer	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
Civic Tourer	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
Civic Tourer	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
Civic Tourer	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
Civic Tourer	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
Civic Tourer	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
Civic Tourer	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
Civic Tourer	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
Civic Tourer	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
Civic Tourer	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
Civic Tourer	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
Civic Tourer	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
Civic Tourer	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
Civic Tourer	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
Civic Tourer	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
Civic Tourer	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
Civic Tourer	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
Civic Tourer	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
Civic Tourer	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
Civic Tourer	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
Civic Tourer	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light

Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
Civic Tourer	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
Civic Tourer	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
Civic Tourer	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
Civic Tourer	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
Civic Tourer	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
Civic Tourer	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
Civic Tourer	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
Civic Tourer	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
Civic Tourer	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
Civic Tourer	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
Civic Tourer	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
Civic Tourer	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
Civic Tourer	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
Civic Tourer	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Security	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
Civic Tourer	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
Civic Tourer	/	BODY ELECTRICAL/Security	MFF	History Data	
Civic Tourer	/	BODY ELECTRICAL/Security	MFF	History Clear	
Civic Tourer	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
Civic Tourer	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
Civic Tourer	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Civic Tourer	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
Civic Tourer	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Civic Tourer	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
Civic Tourer	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
Civic Tourer	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
Civic Tourer	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
Civic Tourer	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
Civic Tourer	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
Civic Tourer	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
Civic Tourer	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
Civic Tourer	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
Civic Tourer	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
Civic Tourer	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
Civic Tourer	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
Civic Tourer	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
Civic Tourer	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
Civic Tourer	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid

Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
Civic Tourer	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
Civic Tourer	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
Civic Tourer	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
Civic Tourer	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
Civic Tourer	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
Civic Tourer	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
Civic Tourer	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
Civic Tourer	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
Civic Tourer	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
Civic Tourer	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read ECU Information	
Civic Tourer	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read codes	
Civic Tourer	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Erase Codes	
Civic Tourer	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Freeze Frame Data	
Civic Tourer	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Live Data	
Civic Tourer	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	CMBS (CMS) ACTIVATION HISTORY	
Civic Tourer	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	RADAR AIMING
Civic Tourer	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	CMBS Brake
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
Civic Tourer	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
Civic Tourer	/	DBW	M34	Read ECU Information	
Civic Tourer	/	DBW	M34	Read codes	
Civic Tourer	/	DBW	M34	Erase Codes	
Civic Tourer	/	DBW	M34	Read Freeze Frame Data	
Civic Tourer	/	DBW	M34	Read Live Data	
Civic Tourer	/	DBW	M34	Inspection	Idle Speed Adjust
Civic Tourer	/	DBW	M34	Inspection	Throttle Test
Civic Tourer	/	DBW	M34	ECM Reset	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear

Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
Civic Tourer	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
Civic Tourer	/	Capacitor Control System (EDLC)	M12	Read codes	
Civic Tourer	/	Capacitor Control System (EDLC)	M12	Erase Codes	
Civic Tourer	/	Capacitor Control System (EDLC)	M12	Read Live Data	
Civic Tourer	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
Civic Tourer	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
Civic Tourer	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
Civic Tourer	/	Electronic Brake Control System (EPB)	M1F	Read codes	
Civic Tourer	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
Civic Tourer	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
Civic Tourer	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
Civic Tourer	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
Civic Tourer	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
Civic Tourer	/	Electronic Brake Control System (EPB)	M3E	Read codes	
Civic Tourer	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
Civic Tourer	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
Civic Tourer	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
Civic Tourer	/	Electric Powertrain / IMA	M66	Read ECU Information	
Civic Tourer	/	Electric Powertrain / IMA	M66	Read codes	
Civic Tourer	/	Electric Powertrain / IMA	M66	Erase Codes	
Civic Tourer	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
Civic Tourer	/	Electric Powertrain / IMA	M66	Read Live Data	
Civic Tourer	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
Civic Tourer	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
Civic Tourer	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
Civic Tourer	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
Civic Tourer	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
Civic Tourer	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
Civic Tourer	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
Civic Tourer	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
Civic Tourer	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
Civic Tourer	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
Civic Tourer	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
Civic Tourer	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M3F	Adjustment	MA-EPS Control ON/OFF
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
Civic Tourer	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
Civic Tourer	/	New energy battery (EV)	M44	Read ECU Information	
Civic Tourer	/	New energy battery (EV)	M44	Read codes	
Civic Tourer	/	New energy battery (EV)	M44	Erase Codes	
Civic Tourer	/	New energy battery (EV)	M44	Read Freeze Frame Data	
Civic Tourer	/	New energy battery (EV)	M44	Read Live Data	

Civic Tourer	/	New energy battery (EV)	M44	Inspection	
Civic Tourer	/	New energy battery (EV)	M44	Adjustment	
Civic Tourer	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
Civic Tourer	/	Electronic vacuum pump (EVPS)	M21	Read codes	
Civic Tourer	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
Civic Tourer	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
Civic Tourer	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
Civic Tourer	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
Civic Tourer	/	Electronic vacuum pump (EVPS)	M22	Read codes	
Civic Tourer	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
Civic Tourer	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
Civic Tourer	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
Civic Tourer	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
Civic Tourer	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
Civic Tourer	/	FCW LDW	M4E	Read ECU Information	
Civic Tourer	/	FCW LDW	M4E	Read codes	
Civic Tourer	/	FCW LDW	M4E	Erase Codes	
Civic Tourer	/	FCW LDW	M4E	Read Live Data	
Civic Tourer	/	FCW LDW	M4E	Function Test	FCW Drive
Civic Tourer	/	FCW LDW	M4E	Function Test	Left side lane departure warning
Civic Tourer	/	FCW LDW	M4E	Function Test	Right side lane departure warning
Civic Tourer	/	FCW LDW	M4E	Function Test	Indicator Drive
Civic Tourer	/	FCW LDW	M4E	Adjustment	
Civic Tourer	/	Instrument Display System (GAUGE)	M2C	Read codes	
Civic Tourer	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
Civic Tourer	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Read codes	
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Read codes	
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Read codes	
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
Civic Tourer	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Read codes	
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
Civic Tourer	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
Civic Tourer	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
Civic Tourer	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
Civic Tourer	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
Civic Tourer	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
Civic Tourer	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
Civic Tourer	/	Intelligent Parking Control System (SPS)	M9B	Customize	
Civic Tourer	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	

Civic Tourer	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
Civic Tourer	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
Civic Tourer	/	Hydraulic booster control system (HBS)	M5F	Read codes	
Civic Tourer	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
Civic Tourer	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
Civic Tourer	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
Civic Tourer	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
Civic Tourer	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
Civic Tourer	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
Civic Tourer	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
Civic Tourer	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
Civic Tourer	/	IMA	M63	Read ECU Information	
Civic Tourer	/	IMA	M63	Read codes	
Civic Tourer	/	IMA	M63	Erase Codes	
Civic Tourer	/	IMA	M63	Read Freeze Frame Data	
Civic Tourer	/	IMA	M63	Read Live Data	
Civic Tourer	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
Civic Tourer	/	IMA	M63	Adjustment	SOC PRESET
Civic Tourer	/	IMA	M64	Read ECU Information	
Civic Tourer	/	IMA	M64	Read codes	
Civic Tourer	/	IMA	M64	Erase Codes	
Civic Tourer	/	IMA	M64	Read Freeze Frame Data	
Civic Tourer	/	IMA	M64	Read Live Data	
Civic Tourer	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
Civic Tourer	/	IMA	M64	Adjustment	SOC PRESET
Civic Tourer	/	IMA	M65	Read ECU Information	
Civic Tourer	/	IMA	M65	Read codes	
Civic Tourer	/	IMA	M65	Erase Codes	
Civic Tourer	/	IMA	M65	Read Freeze Frame Data	
Civic Tourer	/	IMA	M65	Read Live Data	
Civic Tourer	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
Civic Tourer	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
Civic Tourer	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
Civic Tourer	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
Civic Tourer	/	Intake Sounder Control System (ISC)	M6D	Read codes	
Civic Tourer	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
Civic Tourer	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
Civic Tourer	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
Civic Tourer	/	Night Vision System (INVS)	0XB1	Read ECU Information	
Civic Tourer	/	Night Vision System (INVS)	0XB1	Read codes	
Civic Tourer	/	Night Vision System (INVS)	0XB1	Erase Codes	
Civic Tourer	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
Civic Tourer	/	Night Vision System (INVS)	0XB1	Read Live Data	
Civic Tourer	/	Night Vision System (INVS)	0XB1	Adjustment	
Civic Tourer	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
Civic Tourer	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
Civic Tourer	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
Civic Tourer	/	i-SHIFT	0XB0	Read ECU Information	
Civic Tourer	/	i-SHIFT	0XB0	Read codes	
Civic Tourer	/	i-SHIFT	0XB0	Erase Codes	
Civic Tourer	/	i-SHIFT	0XB0	Read Live Data	
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Read codes	
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Self Check	
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	History Data	
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output

Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
Civic Tourer	/	Keyless Entry Control System (KAS)	M99	Registration	
Civic Tourer	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
Civic Tourer	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
Civic Tourer	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
Civic Tourer	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
Civic Tourer	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
Civic Tourer	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
Civic Tourer	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
Civic Tourer	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
Civic Tourer	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
Civic Tourer	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
Civic Tourer	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
Civic Tourer	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
Civic Tourer	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
Civic Tourer	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
Civic Tourer	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
Civic Tourer	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
Civic Tourer	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
Civic Tourer	/	Management ECU Module (ME)	M74	Read ECU Information	
Civic Tourer	/	Management ECU Module (ME)	M74	Read codes	
Civic Tourer	/	Management ECU Module (ME)	M74	Erase Codes	
Civic Tourer	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
Civic Tourer	/	Management ECU Module (ME)	M74	Read Live Data	
Civic Tourer	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
Civic Tourer	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
Civic Tourer	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
Civic Tourer	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
Civic Tourer	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
Civic Tourer	/	Multi-view camera system (MVCS)	M7A	Read codes	
Civic Tourer	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
Civic Tourer	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
Civic Tourer	/	Multi-view camera system (MVCS)	M7A	Customization	
Civic Tourer	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
Civic Tourer	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
Civic Tourer	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
Civic Tourer	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
Civic Tourer	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
Civic Tourer	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
Civic Tourer	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
Civic Tourer	/	Power Control Unit (PCU)	M83	Read ECU Information	
Civic Tourer	/	Power Control Unit (PCU)	M83	Read codes	
Civic Tourer	/	Power Control Unit (PCU)	M83	Erase Codes	
Civic Tourer	/	Power Control Unit (PCU)	M83	Read Live Data	
Civic Tourer	/	Power Control Unit (PCU)	M83	Self Check	
Civic Tourer	/	Power Control Unit (PCU)	M83	History Data	
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Read codes	
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Erase Codes	
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
Civic Tourer	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Read Live Data	
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
Civic Tourer	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
Civic Tourer	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
Civic Tourer	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
Civic Tourer	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
Civic Tourer	/	Engine Control System (PGM-FI)	M50	Read codes	
Civic Tourer	/	Engine Control System (PGM-FI)	M50	Erase Codes	

Civic Tourer	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
Civic Tourer	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
Civic Tourer	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
Civic Tourer	/	Engine Control System (PGM-FI)	M50	Read Live Data	
Civic Tourer	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
Civic Tourer	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
Civic Tourer	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC Low V/T CHECK
Civic Tourer	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
Civic Tourer	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Read codes	
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Erase Codes	
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
Civic Tourer	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Read Live Data	
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
Civic Tourer	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
Civic Tourer	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
Civic Tourer	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
Civic Tourer	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
Civic Tourer	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
Civic Tourer	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
Civic Tourer	/	PSR	M27	Read ECU Information	
Civic Tourer	/	PSR	M27	Read codes	
Civic Tourer	/	PSR	M27	Erase Codes	
Civic Tourer	/	PSR	M27	Read Live Data	
Civic Tourer	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
Civic Tourer	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
Civic Tourer	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
Civic Tourer	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
Civic Tourer	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
Civic Tourer	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
Civic Tourer	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
Civic Tourer	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
Civic Tourer	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
Civic Tourer	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
Civic Tourer	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
Civic Tourer	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
Civic Tourer	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
Civic Tourer	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
Civic Tourer	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
Civic Tourer	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
Civic Tourer	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
Civic Tourer	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
Civic Tourer	/	Remote starter (RS)	M90	System Check	
Civic Tourer	/	Remote starter (RS)	M90	HISTORY	
Civic Tourer	/	Remote starter (RS)	M90	Registration	
Civic Tourer	/	Seat load cell (SWS)	M6F	Read ECU Information	
Civic Tourer	/	Seat load cell (SWS)	M6F	Read codes	
Civic Tourer	/	Seat load cell (SWS)	M6F	Erase Codes	
Civic Tourer	/	Seat load cell (SWS)	M6F	Read Live Data	
Civic Tourer	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
Civic Tourer	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
Civic Tourer	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
Civic Tourer	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
Civic Tourer	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
Civic Tourer	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
Civic Tourer	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
Civic Tourer	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	



Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
Civic Tourer	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
Civic Tourer	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
Civic Tourer	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
Civic Tourer	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
Civic Tourer	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
Civic Tourer	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
Civic Tourer	/	Groove track drive unit (SLOT ECU)	M98	History Data	
Civic Tourer	/	Groove track drive unit (SLOT ECU)	M98	System Information	
Civic Tourer	/	Airbag Control System (SRS)	M9F	Read ECU Information	
Civic Tourer	/	Airbag Control System (SRS)	M9F	Read codes	
Civic Tourer	/	Airbag Control System (SRS)	M9F	Erase Codes	
Civic Tourer	/	Airbag Control System (SRS)	M9F	Read Live Data	
Civic Tourer	/	Airbag Control System (SRS)	MA0	Read ECU Information	
Civic Tourer	/	Airbag Control System (SRS)	MA0	Read codes	
Civic Tourer	/	Airbag Control System (SRS)	MA0	Erase Codes	
Civic Tourer	/	Airbag Control System (SRS)	MA0	Read Live Data	
Civic Tourer	/	Airbag Control System (SRS)	MA1	Read ECU Information	
Civic Tourer	/	Airbag Control System (SRS)	MA1	Read codes	
Civic Tourer	/	Airbag Control System (SRS)	MA1	Erase Codes	
Civic Tourer	/	Airbag Control System (SRS)	MA1	Read Live Data	
Civic Tourer	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
Civic Tourer	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
Civic Tourer	/	Airbag Control System (SRS)	M2A	Read codes	
Civic Tourer	/	Airbag Control System (SRS)	M2A	Erase Codes	
Civic Tourer	/	Airbag Control System (SRS)	M2A	Read Live Data	
Civic Tourer	/	Airbag Control System (SRS)	M9C	Read ECU Information	
Civic Tourer	/	Airbag Control System (SRS)	M9C	Read codes	
Civic Tourer	/	Airbag Control System (SRS)	M9C	Erase Codes	
Civic Tourer	/	Airbag Control System (SRS)	M9C	Read Live Data	
Civic Tourer	/	Airbag Control System (SRS)	M9D	Read ECU Information	
Civic Tourer	/	Airbag Control System (SRS)	M9D	Read codes	
Civic Tourer	/	Airbag Control System (SRS)	M9D	Erase Codes	
Civic Tourer	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
Civic Tourer	/	Airbag Control System (SRS)	M9D	Read Live Data	
Civic Tourer	/	Airbag Control System (SRS)	M9D	Parameter Information	
Civic Tourer	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
Civic Tourer	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
Civic Tourer	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
Civic Tourer	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
Civic Tourer	/	Airbag Control System (SRS)	M9D	Function Test	
Civic Tourer	/	Airbag Control System (SRS)	M9D	System Information	
Civic Tourer	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
Civic Tourer	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
Civic Tourer	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
Civic Tourer	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
Civic Tourer	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
Civic Tourer	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
Civic Tourer	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
Civic Tourer	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
Civic Tourer	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
Civic Tourer	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
Civic Tourer	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
Civic Tourer	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
Civic Tourer	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
Civic Tourer	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
Civic Tourer	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
Civic Tourer	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
Civic Tourer	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
Civic Tourer	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
Civic Tourer	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
DOMANI	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
DOMANI	/	Four-wheel steering control system (4WS)	M52	Read codes	
DOMANI	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
DOMANI	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
DOMANI	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
DOMANI	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
DOMANI	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
DOMANI	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
DOMANI	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK

DOMANI	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
DOMANI	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
DOMANI	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
DOMANI	/	Automatic shift control system (A/T)	M1E	Read codes	
DOMANI	/	Automatic shift control system (A/T)	M1E	Erase Codes	
DOMANI	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
DOMANI	/	Automatic shift control system (A/T)	M1E	Read Live Data	
DOMANI	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
DOMANI	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
DOMANI	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
DOMANI	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
DOMANI	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
DOMANI	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
DOMANI	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
DOMANI	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
DOMANI	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
DOMANI	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
DOMANI	/	Automatic shift control system (A/T)	M3B	Read codes	
DOMANI	/	Automatic shift control system (A/T)	M3B	Erase Codes	
DOMANI	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
DOMANI	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
DOMANI	/	Automatic shift control system (A/T)	M3B	Read Live Data	
DOMANI	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
DOMANI	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
DOMANI	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
DOMANI	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
DOMANI	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
DOMANI	/	Automatic shift control system (A/T)	M3C	Read codes	
DOMANI	/	Automatic shift control system (A/T)	M3C	Erase Codes	
DOMANI	/	Automatic shift control system (A/T)	M81	Read ECU Information	
DOMANI	/	Automatic shift control system (A/T)	M81	Read codes	
DOMANI	/	Automatic shift control system (A/T)	M81	Erase Codes	
DOMANI	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
DOMANI	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
DOMANI	/	Automatic shift control system (A/T)	M81	Read Live Data	
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
DOMANI	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
DOMANI	/	Automatic shift control system (A/T)	M82	Read ECU Information	
DOMANI	/	Automatic shift control system (A/T)	M82	Read codes	
DOMANI	/	Automatic shift control system (A/T)	M82	Erase Codes	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
DOMANI	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
DOMANI	/	Active Engine Control Support System (ACM)	M06	Read codes	
DOMANI	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
DOMANI	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
DOMANI	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
DOMANI	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
DOMANI	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
DOMANI	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
DOMANI	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
DOMANI	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
DOMANI	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
DOMANI	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
DOMANI	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
DOMANI	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read ECU Information	
DOMANI	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read codes	
DOMANI	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Erase Codes	
DOMANI	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read Freeze Frame Data	
DOMANI	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read Live Data	
DOMANI	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Function Test	Damper Force Operation Test
DOMANI	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Adjustment	Damper Stroke Calibration
DOMANI	/	Active / Automatic Shock Absorber Control System (A M1A)	M10	Read codes	

DOMANI	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
DOMANI	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
DOMANI	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
DOMANI	/	Transmission Control System (AT) M18	Read ECU Information	
DOMANI	/	Transmission Control System (AT) M18	Read codes	
DOMANI	/	Transmission Control System (AT) M18	Erase Codes	
DOMANI	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
DOMANI	/	Transmission Control System (AT) M18	Read Live Data	
DOMANI	/	Transmission Control System (AT) M18	Adjustment	
DOMANI	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
DOMANI	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
DOMANI	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
DOMANI	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
DOMANI	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
DOMANI	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
DOMANI	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
DOMANI	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
DOMANI	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
DOMANI	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
DOMANI	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
DOMANI	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
DOMANI	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
DOMANI	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
DOMANI	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
DOMANI	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
DOMANI	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
DOMANI	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
DOMANI	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
DOMANI	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
DOMANI	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
DOMANI	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
DOMANI	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
DOMANI	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
DOMANI	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
DOMANI	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
DOMANI	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
DOMANI	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
DOMANI	/	BODY ELECTRICAL/e-Call MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
DOMANI	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
DOMANI	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
DOMANI	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	
DOMANI	/	BODY ELECTRICAL/Gauges MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Gauges MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Gauges MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Gauges MFF	Function Test	Speedometer

DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
DOMANI	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
DOMANI	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
DOMANI	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
DOMANI	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
DOMANI	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
DOMANI	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
DOMANI	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
DOMANI	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
DOMANI	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
DOMANI	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
DOMANI	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
DOMANI	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
DOMANI	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
DOMANI	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
DOMANI	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
DOMANI	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
DOMANI	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch

DOMANI	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
DOMANI	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
DOMANI	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Security	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
DOMANI	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
DOMANI	/	BODY ELECTRICAL/Security	MFF	History Data	
DOMANI	/	BODY ELECTRICAL/Security	MFF	History Clear	
DOMANI	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
DOMANI	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
DOMANI	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
DOMANI	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
DOMANI	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
DOMANI	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
DOMANI	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
DOMANI	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
DOMANI	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
DOMANI	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
DOMANI	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
DOMANI	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
DOMANI	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
DOMANI	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
DOMANI	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
DOMANI	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
DOMANI	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
DOMANI	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
DOMANI	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
DOMANI	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
DOMANI	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
DOMANI	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
DOMANI	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
DOMANI	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
DOMANI	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
DOMANI	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
DOMANI	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
DOMANI	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
DOMANI	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
DOMANI	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read ECU Information	
DOMANI	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read codes	
DOMANI	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Erase Codes	
DOMANI	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Freeze Frame Data	
DOMANI	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Live Data	
DOMANI	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
DOMANI	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	RADAR AIMING
DOMANI	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	CMBS Brake
DOMANI	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
DOMANI	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
DOMANI	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	

DOMANI	/	Promise Automatic Transmission Control System (CVT M1B)	Read Freeze Frame Data	
DOMANI	/	Promise Automatic Transmission Control System (CVT M1B)	Read Live Data	
DOMANI	/	Promise Automatic Transmission Control System (CVT M1B)	ECMPCMC Reset	
DOMANI	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Lock Solenoid Test
DOMANI	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Solenoid Tests
DOMANI	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Electrical Oil Pump Activation
DOMANI	/	Promise Automatic Transmission Control System (CVT M33)	Read ECU Information	
DOMANI	/	Promise Automatic Transmission Control System (CVT M33)	Read codes	
DOMANI	/	Promise Automatic Transmission Control System (CVT M33)	Erase Codes	
DOMANI	/	Promise Automatic Transmission Control System (CVT M33)	Read Freeze Frame Data	
DOMANI	/	Promise Automatic Transmission Control System (CVT M33)	Read Live Data	
DOMANI	/	Promise Automatic Transmission Control System (CVT M33)	ECMPCMC Reset	
DOMANI	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid
DOMANI	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)
DOMANI	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)
DOMANI	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information	
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes	
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes	
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data	
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data	
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	ECMPCMC Reset	
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B
DOMANI	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P
DOMANI	/	DBW M34	Read ECU Information	
DOMANI	/	DBW M34	Read codes	
DOMANI	/	DBW M34	Erase Codes	
DOMANI	/	DBW M34	Read Freeze Frame Data	
DOMANI	/	DBW M34	Read Live Data	
DOMANI	/	DBW M34	Inspection	Idle Speed Adjust
DOMANI	/	DBW M34	Inspection	Throttle Test
DOMANI	/	DBW M34	ECM Reset	
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
DOMANI	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
DOMANI	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
DOMANI	/	Diesel Engine Control System (DIESEL) M37	Read codes	
DOMANI	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
DOMANI	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
DOMANI	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
DOMANI	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
DOMANI	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
DOMANI	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
DOMANI	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Read codes	
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
DOMANI	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
DOMANI	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
DOMANI	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
DOMANI	/	Capacitor Control System (EDLC) M12	Read codes	
DOMANI	/	Capacitor Control System (EDLC) M12	Erase Codes	

DOMANI	/	Capacitor Control System (EDLC)	M12	Read Live Data	
DOMANI	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
DOMANI	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
DOMANI	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
DOMANI	/	Electronic Brake Control System (EPB)	M1F	Read codes	
DOMANI	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
DOMANI	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
DOMANI	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
DOMANI	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
DOMANI	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
DOMANI	/	Electronic Brake Control System (EPB)	M3E	Read codes	
DOMANI	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
DOMANI	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
DOMANI	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
DOMANI	/	Electric Powertrain / IMA	M66	Read ECU Information	
DOMANI	/	Electric Powertrain / IMA	M66	Read codes	
DOMANI	/	Electric Powertrain / IMA	M66	Erase Codes	
DOMANI	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
DOMANI	/	Electric Powertrain / IMA	M66	Read Live Data	
DOMANI	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
DOMANI	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
DOMANI	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
DOMANI	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
DOMANI	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
DOMANI	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
DOMANI	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
DOMANI	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
DOMANI	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
DOMANI	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
DOMANI	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
DOMANI	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
DOMANI	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
DOMANI	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
DOMANI	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
DOMANI	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
DOMANI	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
DOMANI	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
DOMANI	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
DOMANI	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
DOMANI	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
DOMANI	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
DOMANI	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
DOMANI	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
DOMANI	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
DOMANI	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
DOMANI	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
DOMANI	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
DOMANI	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
DOMANI	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
DOMANI	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
DOMANI	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
DOMANI	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
DOMANI	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
DOMANI	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
DOMANI	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
DOMANI	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
DOMANI	/	New energy battery (EV)	M44	Read ECU Information	
DOMANI	/	New energy battery (EV)	M44	Read codes	
DOMANI	/	New energy battery (EV)	M44	Erase Codes	
DOMANI	/	New energy battery (EV)	M44	Read Freeze Frame Data	
DOMANI	/	New energy battery (EV)	M44	Read Live Data	
DOMANI	/	New energy battery (EV)	M44	Inspection	
DOMANI	/	New energy battery (EV)	M44	Adjustment	
DOMANI	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
DOMANI	/	Electronic vacuum pump (EVPS)	M21	Read codes	
DOMANI	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
DOMANI	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
DOMANI	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
DOMANI	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
DOMANI	/	Electronic vacuum pump (EVPS)	M22	Read codes	
DOMANI	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
DOMANI	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
DOMANI	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
DOMANI	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
DOMANI	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
DOMANI	/	FCW LDW	M4E	Read ECU Information	
DOMANI	/	FCW LDW	M4E	Read codes	
DOMANI	/	FCW LDW	M4E	Erase Codes	
DOMANI	/	FCW LDW	M4E	Read Live Data	
DOMANI	/	FCW LDW	M4E	Function Test	FCW Drive
DOMANI	/	FCW LDW	M4E	Function Test	Left side lane departure warning
DOMANI	/	FCW LDW	M4E	Function Test	Right side lane departure warning
DOMANI	/	FCW LDW	M4E	Function Test	Indicator Drive
DOMANI	/	FCW LDW	M4E	Adjustment	
DOMANI	/	Instrument Display System (GAUGE)	M2C	Read codes	
DOMANI	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
DOMANI	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
DOMANI	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
DOMANI	/	Anti-lock brake control system (ABS)	M01	Read codes	
DOMANI	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
DOMANI	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
DOMANI	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
DOMANI	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid

DOMANI	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
DOMANI	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
DOMANI	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
DOMANI	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
DOMANI	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
DOMANI	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
DOMANI	/	Anti-lock brake control system (ABS)	M02	Read codes	
DOMANI	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
DOMANI	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
DOMANI	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
DOMANI	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
DOMANI	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
DOMANI	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
DOMANI	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
DOMANI	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
DOMANI	/	Anti-lock brake control system (ABS)	M03	Read codes	
DOMANI	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
DOMANI	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
DOMANI	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
DOMANI	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
DOMANI	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
DOMANI	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
DOMANI	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
DOMANI	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
DOMANI	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
DOMANI	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
DOMANI	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
DOMANI	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
DOMANI	/	Anti-lock brake control system (ABS)	M19	Read codes	
DOMANI	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
DOMANI	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
DOMANI	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
DOMANI	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
DOMANI	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
DOMANI	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
DOMANI	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
DOMANI	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
DOMANI	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
DOMANI	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
DOMANI	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
DOMANI	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
DOMANI	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
DOMANI	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
DOMANI	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
DOMANI	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
DOMANI	/	Intelligent Parking Control System (SPS)	M9B	Customize	
DOMANI	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
DOMANI	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
DOMANI	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
DOMANI	/	Hydraulic booster control system (HBS)	M5F	Read codes	
DOMANI	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
DOMANI	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
DOMANI	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
DOMANI	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
DOMANI	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
DOMANI	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
DOMANI	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
DOMANI	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
DOMANI	/	IMA	M63	Read ECU Information	
DOMANI	/	IMA	M63	Read codes	
DOMANI	/	IMA	M63	Erase Codes	
DOMANI	/	IMA	M63	Read Freeze Frame Data	
DOMANI	/	IMA	M63	Read Live Data	
DOMANI	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
DOMANI	/	IMA	M63	Adjustment	SOC PRESET
DOMANI	/	IMA	M64	Read ECU Information	
DOMANI	/	IMA	M64	Read codes	
DOMANI	/	IMA	M64	Erase Codes	
DOMANI	/	IMA	M64	Read Freeze Frame Data	
DOMANI	/	IMA	M64	Read Live Data	
DOMANI	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
DOMANI	/	IMA	M64	Adjustment	SOC PRESET
DOMANI	/	IMA	M65	Read ECU Information	
DOMANI	/	IMA	M65	Read codes	
DOMANI	/	IMA	M65	Erase Codes	
DOMANI	/	IMA	M65	Read Freeze Frame Data	
DOMANI	/	IMA	M65	Read Live Data	
DOMANI	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
DOMANI	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION



DOMANI	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
DOMANI	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
DOMANI	/	Intake Sounder Control System (ISC)	M6D	Read codes	
DOMANI	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
DOMANI	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
DOMANI	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
DOMANI	/	Night Vision System (INVS)	0XB1	Read ECU Information	
DOMANI	/	Night Vision System (INVS)	0XB1	Read codes	
DOMANI	/	Night Vision System (INVS)	0XB1	Erase Codes	
DOMANI	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
DOMANI	/	Night Vision System (INVS)	0XB1	Read Live Data	
DOMANI	/	Night Vision System (INVS)	0XB1	Adjustment	
DOMANI	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
DOMANI	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
DOMANI	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
DOMANI	/	i-SHIFT	0XB0	Read ECU Information	
DOMANI	/	i-SHIFT	0XB0	Read codes	
DOMANI	/	i-SHIFT	0XB0	Erase Codes	
DOMANI	/	i-SHIFT	0XB0	Read Live Data	
DOMANI	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
DOMANI	/	Keyless Entry Control System (KAS)	M99	Read codes	
DOMANI	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
DOMANI	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
DOMANI	/	Keyless Entry Control System (KAS)	M99	Self Check	
DOMANI	/	Keyless Entry Control System (KAS)	M99	History Data	
DOMANI	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
DOMANI	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
DOMANI	/	Keyless Entry Control System (KAS)	M99	Registration	
DOMANI	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
DOMANI	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
DOMANI	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
DOMANI	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
DOMANI	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
DOMANI	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
DOMANI	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
DOMANI	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
DOMANI	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
DOMANI	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
DOMANI	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
DOMANI	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
DOMANI	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
DOMANI	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
DOMANI	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
DOMANI	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL

DOMANI	/	Electronically assisted lane keeping control system (Lk	M71	Customize	CONTROL DELAY
DOMANI	/	Management ECU Module (ME)	M74	Read ECU Information	
DOMANI	/	Management ECU Module (ME)	M74	Read codes	
DOMANI	/	Management ECU Module (ME)	M74	Erase Codes	
DOMANI	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
DOMANI	/	Management ECU Module (ME)	M74	Read Live Data	
DOMANI	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
DOMANI	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
DOMANI	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
DOMANI	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
DOMANI	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
DOMANI	/	Multi-view camera system (MVCS)	M7A	Read codes	
DOMANI	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
DOMANI	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
DOMANI	/	Multi-view camera system (MVCS)	M7A	Customization	
DOMANI	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
DOMANI	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
DOMANI	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
DOMANI	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
DOMANI	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
DOMANI	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
DOMANI	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
DOMANI	/	Power Control Unit (PCU)	M83	Read ECU Information	
DOMANI	/	Power Control Unit (PCU)	M83	Read codes	
DOMANI	/	Power Control Unit (PCU)	M83	Erase Codes	
DOMANI	/	Power Control Unit (PCU)	M83	Read Live Data	
DOMANI	/	Power Control Unit (PCU)	M83	Self Check	
DOMANI	/	Power Control Unit (PCU)	M83	History Data	
DOMANI	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
DOMANI	/	Engine Control System (PGM-FI)	M23	Read codes	
DOMANI	/	Engine Control System (PGM-FI)	M23	Erase Codes	
DOMANI	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
DOMANI	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
DOMANI	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
DOMANI	/	Engine Control System (PGM-FI)	M23	Read Live Data	
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
DOMANI	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
DOMANI	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
DOMANI	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
DOMANI	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
DOMANI	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
DOMANI	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
DOMANI	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
DOMANI	/	Engine Control System (PGM-FI)	M50	Read codes	
DOMANI	/	Engine Control System (PGM-FI)	M50	Erase Codes	
DOMANI	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
DOMANI	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
DOMANI	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
DOMANI	/	Engine Control System (PGM-FI)	M50	Read Live Data	
DOMANI	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
DOMANI	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
DOMANI	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
DOMANI	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
DOMANI	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
DOMANI	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
DOMANI	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
DOMANI	/	Engine Control System (PGM-FI)	M86	Read codes	
DOMANI	/	Engine Control System (PGM-FI)	M86	Erase Codes	
DOMANI	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
DOMANI	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
DOMANI	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
DOMANI	/	Engine Control System (PGM-FI)	M86	Read Live Data	
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP

DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
DOMANI	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
DOMANI	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
DOMANI	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
DOMANI	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
DOMANI	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
DOMANI	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
DOMANI	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
DOMANI	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
DOMANI	/	PSR	M27	Read ECU Information	
DOMANI	/	PSR	M27	Read codes	
DOMANI	/	PSR	M27	Erase Codes	
DOMANI	/	PSR	M27	Read Live Data	
DOMANI	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
DOMANI	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
DOMANI	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
DOMANI	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
DOMANI	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
DOMANI	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
DOMANI	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
DOMANI	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
DOMANI	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
DOMANI	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
DOMANI	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
DOMANI	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
DOMANI	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
DOMANI	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
DOMANI	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
DOMANI	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
DOMANI	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
DOMANI	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
DOMANI	/	Remote starter (RS)	M90	System Check	
DOMANI	/	Remote starter (RS)	M90	HISTORY	
DOMANI	/	Remote starter (RS)	M90	Registration	
DOMANI	/	Seat load cell (SWS)	M6F	Read ECU Information	
DOMANI	/	Seat load cell (SWS)	M6F	Read codes	
DOMANI	/	Seat load cell (SWS)	M6F	Erase Codes	
DOMANI	/	Seat load cell (SWS)	M6F	Read Live Data	
DOMANI	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
DOMANI	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
DOMANI	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
DOMANI	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
DOMANI	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
DOMANI	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
DOMANI	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
DOMANI	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
DOMANI	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
DOMANI	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
DOMANI	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
DOMANI	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
DOMANI	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
DOMANI	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
DOMANI	/	Groove track drive unit (SLOT ECU)	M98	History Data	
DOMANI	/	Groove track drive unit (SLOT ECU)	M98	System Information	
DOMANI	/	Airbag Control System (SRS)	M9F	Read ECU Information	
DOMANI	/	Airbag Control System (SRS)	M9F	Read codes	
DOMANI	/	Airbag Control System (SRS)	M9F	Erase Codes	
DOMANI	/	Airbag Control System (SRS)	M9F	Read Live Data	
DOMANI	/	Airbag Control System (SRS)	MA0	Read ECU Information	
DOMANI	/	Airbag Control System (SRS)	MA0	Read codes	
DOMANI	/	Airbag Control System (SRS)	MA0	Erase Codes	
DOMANI	/	Airbag Control System (SRS)	MA0	Read Live Data	
DOMANI	/	Airbag Control System (SRS)	MA1	Read ECU Information	
DOMANI	/	Airbag Control System (SRS)	MA1	Read codes	
DOMANI	/	Airbag Control System (SRS)	MA1	Erase Codes	
DOMANI	/	Airbag Control System (SRS)	MA1	Read Live Data	

DOMANI	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
DOMANI	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
DOMANI	/	Airbag Control System (SRS)	M2A	Read codes	
DOMANI	/	Airbag Control System (SRS)	M2A	Erase Codes	
DOMANI	/	Airbag Control System (SRS)	M2A	Read Live Data	
DOMANI	/	Airbag Control System (SRS)	M9C	Read ECU Information	
DOMANI	/	Airbag Control System (SRS)	M9C	Read codes	
DOMANI	/	Airbag Control System (SRS)	M9C	Erase Codes	
DOMANI	/	Airbag Control System (SRS)	M9C	Read Live Data	
DOMANI	/	Airbag Control System (SRS)	M9D	Read ECU Information	
DOMANI	/	Airbag Control System (SRS)	M9D	Read codes	
DOMANI	/	Airbag Control System (SRS)	M9D	Erase Codes	
DOMANI	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
DOMANI	/	Airbag Control System (SRS)	M9D	Read Live Data	
DOMANI	/	Airbag Control System (SRS)	M9D	Parameter Information	
DOMANI	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
DOMANI	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
DOMANI	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
DOMANI	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
DOMANI	/	Airbag Control System (SRS)	M9D	Function Test	
DOMANI	/	Airbag Control System (SRS)	M9D	System Information	
DOMANI	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
DOMANI	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
DOMANI	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
DOMANI	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
DOMANI	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
DOMANI	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
DOMANI	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
DOMANI	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
DOMANI	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
DOMANI	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
DOMANI	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
DOMANI	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
DOMANI	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
DOMANI	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
DOMANI	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
DOMANI	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
DOMANI	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
DOMANI	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
DOMANI	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
EDIX	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
EDIX	/	Four-wheel steering control system (4WS)	M52	Read codes	
EDIX	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
EDIX	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
EDIX	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
EDIX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
EDIX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
EDIX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
EDIX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
EDIX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
EDIX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
EDIX	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
EDIX	/	Automatic shift control system (A/T)	M1E	Read codes	
EDIX	/	Automatic shift control system (A/T)	M1E	Erase Codes	
EDIX	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
EDIX	/	Automatic shift control system (A/T)	M1E	Read Live Data	
EDIX	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
EDIX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
EDIX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
EDIX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
EDIX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
EDIX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
EDIX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
EDIX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
EDIX	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
EDIX	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
EDIX	/	Automatic shift control system (A/T)	M3B	Read codes	
EDIX	/	Automatic shift control system (A/T)	M3B	Erase Codes	
EDIX	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
EDIX	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
EDIX	/	Automatic shift control system (A/T)	M3B	Read Live Data	
EDIX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
EDIX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
EDIX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
EDIX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
EDIX	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
EDIX	/	Automatic shift control system (A/T)	M3C	Read codes	
EDIX	/	Automatic shift control system (A/T)	M3C	Erase Codes	
EDIX	/	Automatic shift control system (A/T)	M81	Read ECU Information	
EDIX	/	Automatic shift control system (A/T)	M81	Read codes	
EDIX	/	Automatic shift control system (A/T)	M81	Erase Codes	

EDIX	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
EDIX	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
EDIX	/	Automatic shift control system (A/T)	M81	Read Live Data	
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
EDIX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
EDIX	/	Automatic shift control system (A/T)	M82	Read ECU Information	
EDIX	/	Automatic shift control system (A/T)	M82	Read codes	
EDIX	/	Automatic shift control system (A/T)	M82	Erase Codes	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
EDIX	/	Active Engine Control Support System (ACM) M06	M06	Read ECU Information	
EDIX	/	Active Engine Control Support System (ACM) M06	M06	Read codes	
EDIX	/	Active Engine Control Support System (ACM) M06	M06	Erase Codes	
EDIX	/	Active Engine Control Support System (ACM) M06	M06	Read Freeze Frame Data	
EDIX	/	Active Engine Control Support System (ACM) M06	M06	Read Live Data	
EDIX	/	Active Engine Control Support System (ACM) M06	M06	ACM Reset	
EDIX	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Front ACM Solenoid ON/OFF
EDIX	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Rear ACM Solenoid ON/OFF
EDIX	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
EDIX	/	Active Engine Control Support System (ACM) M06	M06	Inspection	ACM Test
EDIX	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Read codes	
EDIX	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Erase Codes	
EDIX	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Read Live Data	
EDIX	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read ECU Information	
EDIX	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read codes	
EDIX	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Erase Codes	
EDIX	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read Freeze Frame Data	
EDIX	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read Live Data	
EDIX	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Function Test	Damper Force Operation Test
EDIX	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Adjustment	Damper Stroke Calibration
EDIX	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
EDIX	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
EDIX	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
EDIX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
EDIX	/	Transmission Control System (AT) M18	M18	Read ECU Information	
EDIX	/	Transmission Control System (AT) M18	M18	Read codes	
EDIX	/	Transmission Control System (AT) M18	M18	Erase Codes	
EDIX	/	Transmission Control System (AT) M18	M18	Read Freeze Frame Data	
EDIX	/	Transmission Control System (AT) M18	M18	Read Live Data	
EDIX	/	Transmission Control System (AT) M18	M18	Adjustment	
EDIX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Read ECU Information	
EDIX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Read codes	
EDIX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Erase Codes	
EDIX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Read Freeze Frame Data	
EDIX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Read Live Data	
EDIX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
EDIX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Miscellaneous Test	STEERING ANGLE
EDIX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
EDIX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Miscellaneous Test	ALL SENSORS
EDIX	/	Driving Visual Blind Spot Information System (BSI) M14	M14	Read ECU Information	
EDIX	/	Driving Visual Blind Spot Information System (BSI) M14	M14	Read codes	
EDIX	/	Driving Visual Blind Spot Information System (BSI) M14	M14	Erase Codes	
EDIX	/	Driving Visual Blind Spot Information System (BSI) M14	M14	Read Live Data	

EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
EDIX	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
EDIX	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
EDIX	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
EDIX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
EDIX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
EDIX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
EDIX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
EDIX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
EDIX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
EDIX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
EDIX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
EDIX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
EDIX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
EDIX	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
EDIX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
EDIX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
EDIX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
EDIX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
EDIX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
EDIX	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
EDIX	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
EDIX	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function

EDIX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
EDIX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
EDIX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
EDIX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
EDIX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
EDIX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
EDIX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
EDIX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
EDIX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
EDIX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
EDIX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
EDIX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
EDIX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
EDIX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
EDIX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
EDIX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
EDIX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
EDIX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
EDIX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
EDIX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
EDIX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Security	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
EDIX	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
EDIX	/	BODY ELECTRICAL/Security	MFF	History Data	
EDIX	/	BODY ELECTRICAL/Security	MFF	History Clear	
EDIX	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
EDIX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green

EDIX	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
EDIX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
EDIX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
EDIX	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
EDIX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
EDIX	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
EDIX	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
EDIX	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
EDIX	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
EDIX	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
EDIX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
EDIX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
EDIX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
EDIX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
EDIX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
EDIX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
EDIX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
EDIX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
EDIX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
EDIX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
EDIX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
EDIX	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
EDIX	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
EDIX	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
EDIX	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
EDIX	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
EDIX	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
EDIX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
EDIX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
EDIX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
EDIX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
EDIX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
EDIX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
EDIX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
EDIX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
EDIX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
EDIX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
EDIX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
EDIX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
EDIX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
EDIX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
EDIX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
EDIX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
EDIX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
EDIX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
EDIX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
EDIX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
EDIX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
EDIX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
EDIX	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
EDIX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
EDIX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
EDIX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
EDIX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
EDIX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
EDIX	/	DBW	M34	Read ECU Information	
EDIX	/	DBW	M34	Read codes	
EDIX	/	DBW	M34	Erase Codes	



EDIX	/	DBW	M34	Read Freeze Frame Data	
EDIX	/	DBW	M34	Read Live Data	
EDIX	/	DBW	M34	Inspection	Idle Speed Adjust
EDIX	/	DBW	M34	Inspection	Throttle Test
EDIX	/	DBW	M34	ECM Reset	
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
EDIX	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
EDIX	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
EDIX	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
EDIX	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
EDIX	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
EDIX	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
EDIX	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
EDIX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
EDIX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
EDIX	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
EDIX	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
EDIX	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
EDIX	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
EDIX	/	Capacitor Control System (EDLC)	M12	Read codes	
EDIX	/	Capacitor Control System (EDLC)	M12	Erase Codes	
EDIX	/	Capacitor Control System (EDLC)	M12	Read Live Data	
EDIX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
EDIX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
EDIX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
EDIX	/	Electronic Brake Control System (EPB)	M1F	Read codes	
EDIX	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
EDIX	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
EDIX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
EDIX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
EDIX	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
EDIX	/	Electronic Brake Control System (EPB)	M3E	Read codes	
EDIX	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
EDIX	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
EDIX	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
EDIX	/	Electric Powertrain / IMA	M66	Read ECU Information	
EDIX	/	Electric Powertrain / IMA	M66	Read codes	
EDIX	/	Electric Powertrain / IMA	M66	Erase Codes	
EDIX	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
EDIX	/	Electric Powertrain / IMA	M66	Read Live Data	
EDIX	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
EDIX	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
EDIX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
EDIX	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
EDIX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
EDIX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
EDIX	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
EDIX	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
EDIX	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
EDIX	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
EDIX	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
EDIX	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
EDIX	/	Electronic Power Steering Control System (EPS)	M20	Read codes	

EDIX	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
EDIX	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
EDIX	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
EDIX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
EDIX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
EDIX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
EDIX	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
EDIX	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
EDIX	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
EDIX	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
EDIX	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
EDIX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
EDIX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
EDIX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
EDIX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
EDIX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
EDIX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
EDIX	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
EDIX	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
EDIX	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
EDIX	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
EDIX	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
EDIX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
EDIX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
EDIX	/	New energy battery (EV)	M44	Read ECU Information	
EDIX	/	New energy battery (EV)	M44	Read codes	
EDIX	/	New energy battery (EV)	M44	Erase Codes	
EDIX	/	New energy battery (EV)	M44	Read Freeze Frame Data	
EDIX	/	New energy battery (EV)	M44	Read Live Data	
EDIX	/	New energy battery (EV)	M44	Inspection	
EDIX	/	New energy battery (EV)	M44	Adjustment	
EDIX	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
EDIX	/	Electronic vacuum pump (EVPS)	M21	Read codes	
EDIX	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
EDIX	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
EDIX	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
EDIX	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
EDIX	/	Electronic vacuum pump (EVPS)	M22	Read codes	
EDIX	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
EDIX	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
EDIX	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
EDIX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
EDIX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
EDIX	/	FCW LDW	M4E	Read ECU Information	
EDIX	/	FCW LDW	M4E	Read codes	
EDIX	/	FCW LDW	M4E	Erase Codes	
EDIX	/	FCW LDW	M4E	Read Live Data	
EDIX	/	FCW LDW	M4E	Function Test	FCW Drive
EDIX	/	FCW LDW	M4E	Function Test	Left side lane departure warning
EDIX	/	FCW LDW	M4E	Function Test	Right side lane departure warning
EDIX	/	FCW LDW	M4E	Function Test	Indicator Drive
EDIX	/	FCW LDW	M4E	Adjustment	
EDIX	/	Instrument Display System (GAUGE)	M2C	Read codes	
EDIX	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
EDIX	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
EDIX	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
EDIX	/	Anti-lock brake control system (ABS)	M01	Read codes	
EDIX	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
EDIX	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
EDIX	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
EDIX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
EDIX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
EDIX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
EDIX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
EDIX	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
EDIX	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
EDIX	/	Anti-lock brake control system (ABS)	M02	Read codes	
EDIX	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
EDIX	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
EDIX	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
EDIX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
EDIX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
EDIX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
EDIX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
EDIX	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
EDIX	/	Anti-lock brake control system (ABS)	M03	Read codes	
EDIX	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
EDIX	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
EDIX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
EDIX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
EDIX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
EDIX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA

EDIX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
EDIX	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
EDIX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
EDIX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
EDIX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
EDIX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
EDIX	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
EDIX	/	Anti-lock brake control system (ABS)	M19	Read codes	
EDIX	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
EDIX	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
EDIX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
EDIX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
EDIX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
EDIX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
EDIX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
EDIX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
EDIX	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
EDIX	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
EDIX	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
EDIX	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
EDIX	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
EDIX	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
EDIX	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
EDIX	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
EDIX	/	Intelligent Parking Control System (SPS)	M9B	Customize	
EDIX	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
EDIX	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
EDIX	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
EDIX	/	Hydraulic booster control system (HBS)	M5F	Read codes	
EDIX	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
EDIX	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
EDIX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
EDIX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
EDIX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
EDIX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
EDIX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
EDIX	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
EDIX	/	IMA	M63	Read ECU Information	
EDIX	/	IMA	M63	Read codes	
EDIX	/	IMA	M63	Erase Codes	
EDIX	/	IMA	M63	Read Freeze Frame Data	
EDIX	/	IMA	M63	Read Live Data	
EDIX	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
EDIX	/	IMA	M63	Adjustment	SOC PRESET
EDIX	/	IMA	M64	Read ECU Information	
EDIX	/	IMA	M64	Read codes	
EDIX	/	IMA	M64	Erase Codes	
EDIX	/	IMA	M64	Read Freeze Frame Data	
EDIX	/	IMA	M64	Read Live Data	
EDIX	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
EDIX	/	IMA	M64	Adjustment	SOC PRESET
EDIX	/	IMA	M65	Read ECU Information	
EDIX	/	IMA	M65	Read codes	
EDIX	/	IMA	M65	Erase Codes	
EDIX	/	IMA	M65	Read Freeze Frame Data	
EDIX	/	IMA	M65	Read Live Data	
EDIX	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
EDIX	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
EDIX	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
EDIX	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
EDIX	/	Intake Sounder Control System (ISC)	M6D	Read codes	
EDIX	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
EDIX	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
EDIX	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
EDIX	/	Night Vision System (INVS)	0XB1	Read ECU Information	
EDIX	/	Night Vision System (INVS)	0XB1	Read codes	
EDIX	/	Night Vision System (INVS)	0XB1	Erase Codes	
EDIX	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
EDIX	/	Night Vision System (INVS)	0XB1	Read Live Data	
EDIX	/	Night Vision System (INVS)	0XB1	Adjustment	
EDIX	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
EDIX	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
EDIX	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
EDIX	/	i-SHIFT	0XB0	Read ECU Information	
EDIX	/	i-SHIFT	0XB0	Read codes	
EDIX	/	i-SHIFT	0XB0	Erase Codes	
EDIX	/	i-SHIFT	0XB0	Read Live Data	
EDIX	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
EDIX	/	Keyless Entry Control System (KAS)	M99	Read codes	
EDIX	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
EDIX	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
EDIX	/	Keyless Entry Control System (KAS)	M99	Self Check	
EDIX	/	Keyless Entry Control System (KAS)	M99	History Data	
EDIX	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving

EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCONT Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
EDIX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
EDIX	/	Keyless Entry Control System (KAS)	M99	Registration	
EDIX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
EDIX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
EDIX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
EDIX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
EDIX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
EDIX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
EDIX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
EDIX	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
EDIX	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
EDIX	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
EDIX	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
EDIX	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
EDIX	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
EDIX	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
EDIX	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
EDIX	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
EDIX	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
EDIX	/	Management ECU Module (ME)	M74	Read ECU Information	
EDIX	/	Management ECU Module (ME)	M74	Read codes	
EDIX	/	Management ECU Module (ME)	M74	Erase Codes	
EDIX	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
EDIX	/	Management ECU Module (ME)	M74	Read Live Data	
EDIX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
EDIX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
EDIX	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
EDIX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
EDIX	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
EDIX	/	Multi-view camera system (MVCS)	M7A	Read codes	
EDIX	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
EDIX	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
EDIX	/	Multi-view camera system (MVCS)	M7A	Customization	
EDIX	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
EDIX	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
EDIX	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
EDIX	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
EDIX	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
EDIX	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
EDIX	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
EDIX	/	Power Control Unit (PCU)	M83	Read ECU Information	
EDIX	/	Power Control Unit (PCU)	M83	Read codes	
EDIX	/	Power Control Unit (PCU)	M83	Erase Codes	
EDIX	/	Power Control Unit (PCU)	M83	Read Live Data	
EDIX	/	Power Control Unit (PCU)	M83	Self Check	
EDIX	/	Power Control Unit (PCU)	M83	History Data	
EDIX	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
EDIX	/	Engine Control System (PGM-FI)	M23	Read codes	
EDIX	/	Engine Control System (PGM-FI)	M23	Erase Codes	
EDIX	/	Engine Control System (PGM-FI)	M23	Readiness Codes	

EDIX	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
EDIX	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
EDIX	/	Engine Control System (PGM-FI)	M23	Read Live Data	
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
EDIX	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
EDIX	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
EDIX	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
EDIX	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
EDIX	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
EDIX	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
EDIX	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
EDIX	/	Engine Control System (PGM-FI)	M50	Read codes	
EDIX	/	Engine Control System (PGM-FI)	M50	Erase Codes	
EDIX	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
EDIX	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
EDIX	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
EDIX	/	Engine Control System (PGM-FI)	M50	Read Live Data	
EDIX	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
EDIX	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
EDIX	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
EDIX	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
EDIX	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
EDIX	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
EDIX	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
EDIX	/	Engine Control System (PGM-FI)	M86	Read codes	
EDIX	/	Engine Control System (PGM-FI)	M86	Erase Codes	
EDIX	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
EDIX	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
EDIX	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
EDIX	/	Engine Control System (PGM-FI)	M86	Read Live Data	
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
EDIX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
EDIX	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
EDIX	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
EDIX	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
EDIX	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
EDIX	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
EDIX	/	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
EDIX	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	
EDIX	/	PSR	M27	Read ECU Information	
EDIX	/	PSR	M27	Read codes	
EDIX	/	PSR	M27	Erase Codes	
EDIX	/	PSR	M27	Read Live Data	
EDIX	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
EDIX	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
EDIX	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
EDIX	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
EDIX	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
EDIX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
EDIX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
EDIX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
EDIX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
EDIX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
EDIX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
EDIX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
EDIX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
EDIX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
EDIX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	

EDIX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
EDIX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
EDIX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
EDIX	/	Remote starter (RS)	M90	System Check	
EDIX	/	Remote starter (RS)	M90	HISTORY	
EDIX	/	Remote starter (RS)	M90	Registration	
EDIX	/	Seat load cell (SWS)	M6F	Read ECU Information	
EDIX	/	Seat load cell (SWS)	M6F	Read codes	
EDIX	/	Seat load cell (SWS)	M6F	Erase Codes	
EDIX	/	Seat load cell (SWS)	M6F	Read Live Data	
EDIX	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
EDIX	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
EDIX	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
EDIX	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
EDIX	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
EDIX	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
EDIX	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
EDIX	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
EDIX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
EDIX	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
EDIX	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
EDIX	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
EDIX	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
EDIX	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
EDIX	/	Groove track drive unit (SLOT ECU)	M98	History Data	
EDIX	/	Groove track drive unit (SLOT ECU)	M98	System Information	
EDIX	/	Airbag Control System (SRS)	M9F	Read ECU Information	
EDIX	/	Airbag Control System (SRS)	M9F	Read codes	
EDIX	/	Airbag Control System (SRS)	M9F	Erase Codes	
EDIX	/	Airbag Control System (SRS)	M9F	Read Live Data	
EDIX	/	Airbag Control System (SRS)	MA0	Read ECU Information	
EDIX	/	Airbag Control System (SRS)	MA0	Read codes	
EDIX	/	Airbag Control System (SRS)	MA0	Erase Codes	
EDIX	/	Airbag Control System (SRS)	MA0	Read Live Data	
EDIX	/	Airbag Control System (SRS)	MA1	Read ECU Information	
EDIX	/	Airbag Control System (SRS)	MA1	Read codes	
EDIX	/	Airbag Control System (SRS)	MA1	Erase Codes	
EDIX	/	Airbag Control System (SRS)	MA1	Read Live Data	
EDIX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
EDIX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
EDIX	/	Airbag Control System (SRS)	M2A	Read codes	
EDIX	/	Airbag Control System (SRS)	M2A	Erase Codes	
EDIX	/	Airbag Control System (SRS)	M2A	Read Live Data	
EDIX	/	Airbag Control System (SRS)	M9C	Read ECU Information	
EDIX	/	Airbag Control System (SRS)	M9C	Read codes	
EDIX	/	Airbag Control System (SRS)	M9C	Erase Codes	
EDIX	/	Airbag Control System (SRS)	M9C	Read Live Data	
EDIX	/	Airbag Control System (SRS)	M9D	Read ECU Information	
EDIX	/	Airbag Control System (SRS)	M9D	Read codes	
EDIX	/	Airbag Control System (SRS)	M9D	Erase Codes	
EDIX	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
EDIX	/	Airbag Control System (SRS)	M9D	Read Live Data	
EDIX	/	Airbag Control System (SRS)	M9D	Parameter Information	
EDIX	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
EDIX	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
EDIX	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
EDIX	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
EDIX	/	Airbag Control System (SRS)	M9D	Function Test	
EDIX	/	Airbag Control System (SRS)	M9D	System Information	
EDIX	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
EDIX	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
EDIX	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
EDIX	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
EDIX	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
EDIX	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
EDIX	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
EDIX	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
EDIX	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
EDIX	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
EDIX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	

EDIX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
EDIX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
EDIX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
EDIX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
EDIX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
EDIX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
EDIX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
EDIX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
EDIX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
EDIX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
EDIX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
EDIX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
EDIX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
EDIX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
EDIX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
EDIX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
EDIX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
EDIX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
EDIX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
EDIX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
ELEMENT	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ELEMENT	/	Four-wheel steering control system (4WS)	M52	Read codes	
ELEMENT	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
ELEMENT	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ELEMENT	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
ELEMENT	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ELEMENT	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ELEMENT	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
ELEMENT	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ELEMENT	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ELEMENT	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ELEMENT	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
ELEMENT	/	Automatic shift control system (A/T)	M1E	Read codes	
ELEMENT	/	Automatic shift control system (A/T)	M1E	Erase Codes	
ELEMENT	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ELEMENT	/	Automatic shift control system (A/T)	M1E	Read Live Data	
ELEMENT	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
ELEMENT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ELEMENT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ELEMENT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ELEMENT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ELEMENT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ELEMENT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ELEMENT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ELEMENT	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
ELEMENT	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
ELEMENT	/	Automatic shift control system (A/T)	M3B	Read codes	
ELEMENT	/	Automatic shift control system (A/T)	M3B	Erase Codes	
ELEMENT	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ELEMENT	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
ELEMENT	/	Automatic shift control system (A/T)	M3B	Read Live Data	
ELEMENT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ELEMENT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ELEMENT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
ELEMENT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ELEMENT	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
ELEMENT	/	Automatic shift control system (A/T)	M3C	Read codes	
ELEMENT	/	Automatic shift control system (A/T)	M3C	Erase Codes	
ELEMENT	/	Automatic shift control system (A/T)	M81	Read ECU Information	
ELEMENT	/	Automatic shift control system (A/T)	M81	Read codes	
ELEMENT	/	Automatic shift control system (A/T)	M81	Erase Codes	
ELEMENT	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ELEMENT	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
ELEMENT	/	Automatic shift control system (A/T)	M81	Read Live Data	
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ELEMENT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
ELEMENT	/	Automatic shift control system (A/T)	M82	Read ECU Information	
ELEMENT	/	Automatic shift control system (A/T)	M82	Read codes	
ELEMENT	/	Automatic shift control system (A/T)	M82	Erase Codes	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read ECU Information	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read codes	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Erase Codes	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read Freeze Frame Data	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Read Live Data	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	Throttle Opening Angle Test
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	BRAKE BOOSTER 1
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	BRAKE BOOSTER 2
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	LIGHT CHECK
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M61	Function Test	BUZZER CHECK
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Read ECU Information	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Read codes	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC)	M62	Erase Codes	

ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
ELEMENT	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
ELEMENT	/	Active Engine Control Support System (ACM) M06	Read codes	
ELEMENT	/	Active Engine Control Support System (ACM) M06	Erase Codes	
ELEMENT	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
ELEMENT	/	Active Engine Control Support System (ACM) M06	Read Live Data	
ELEMENT	/	Active Engine Control Support System (ACM) M06	ACM Reset	
ELEMENT	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
ELEMENT	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
ELEMENT	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ELEMENT	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
ELEMENT	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
ELEMENT	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
ELEMENT	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
ELEMENT	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
ELEMENT	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
ELEMENT	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
ELEMENT	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
ELEMENT	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
ELEMENT	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
ELEMENT	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
ELEMENT	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
ELEMENT	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
ELEMENT	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
ELEMENT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
ELEMENT	/	Transmission Control System (AT) M18	Read ECU Information	
ELEMENT	/	Transmission Control System (AT) M18	Read codes	
ELEMENT	/	Transmission Control System (AT) M18	Erase Codes	
ELEMENT	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
ELEMENT	/	Transmission Control System (AT) M18	Read Live Data	
ELEMENT	/	Transmission Control System (AT) M18	Adjustment	
ELEMENT	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
ELEMENT	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
ELEMENT	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
ELEMENT	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
ELEMENT	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
ELEMENT	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
ELEMENT	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
ELEMENT	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ELEMENT	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
ELEMENT	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
ELEMENT	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
ELEMENT	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Oncoming Vehicle Detection
ELEMENT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Preceding Vehicle Detection
ELEMENT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
ELEMENT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
ELEMENT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset Operation
ELEMENT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Returning Operation
ELEMENT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Automatic Returning Distance
ELEMENT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Manual Returning Time



ELEMENT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
ELEMENT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
ELEMENT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
ELEMENT	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
ELEMENT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
ELEMENT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
ELEMENT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
ELEMENT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
ELEMENT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
ELEMENT	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
ELEMENT	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
ELEMENT	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (I1)
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ELEMENT	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ELEMENT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ELEMENT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ELEMENT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ELEMENT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ELEMENT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command

ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ELEMENT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ELEMENT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ELEMENT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ELEMENT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ELEMENT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ELEMENT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ELEMENT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
ELEMENT	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ELEMENT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ELEMENT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
ELEMENT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ELEMENT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ELEMENT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ELEMENT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Security	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ELEMENT	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
ELEMENT	/	BODY ELECTRICAL/Security	MFF	History Data	
ELEMENT	/	BODY ELECTRICAL/Security	MFF	History Clear	
ELEMENT	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ELEMENT	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ELEMENT	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ELEMENT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ELEMENT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ELEMENT	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ELEMENT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
ELEMENT	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ELEMENT	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ELEMENT	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ELEMENT	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
ELEMENT	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ELEMENT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
ELEMENT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ELEMENT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ELEMENT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
ELEMENT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ELEMENT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ELEMENT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ELEMENT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	

ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ELEMENT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ELEMENT	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ELEMENT	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ELEMENT	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ELEMENT	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
ELEMENT	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ELEMENT	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
ELEMENT	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ELEMENT	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ELEMENT	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read ECU Information	
ELEMENT	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read codes	
ELEMENT	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Erase Codes	
ELEMENT	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Freeze Frame Data	
ELEMENT	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Live Data	
ELEMENT	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	CMBS (CMS) ACTIVATION HISTORY	
ELEMENT	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	RADAR AIMING
ELEMENT	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	CMBS Brake
ELEMENT	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
ELEMENT	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
ELEMENT	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
ELEMENT	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
ELEMENT	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
ELEMENT	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
ELEMENT	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
ELEMENT	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
ELEMENT	/	DBW	M34	Read ECU Information	
ELEMENT	/	DBW	M34	Read codes	
ELEMENT	/	DBW	M34	Erase Codes	
ELEMENT	/	DBW	M34	Read Freeze Frame Data	
ELEMENT	/	DBW	M34	Read Live Data	
ELEMENT	/	DBW	M34	Inspection	Idle Speed Adjust
ELEMENT	/	DBW	M34	Inspection	Throttle Test
ELEMENT	/	DBW	M34	ECM Reset	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	

ELEMENT	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
ELEMENT	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
ELEMENT	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
ELEMENT	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
ELEMENT	/	Capacitor Control System (EDLC)	M12	Read codes	
ELEMENT	/	Capacitor Control System (EDLC)	M12	Erase Codes	
ELEMENT	/	Capacitor Control System (EDLC)	M12	Read Live Data	
ELEMENT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
ELEMENT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
ELEMENT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
ELEMENT	/	Electronic Brake Control System (EPB)	M1F	Read codes	
ELEMENT	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
ELEMENT	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
ELEMENT	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
ELEMENT	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
ELEMENT	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
ELEMENT	/	Electronic Brake Control System (EPB)	M3E	Read codes	
ELEMENT	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
ELEMENT	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
ELEMENT	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
ELEMENT	/	Electric Powertrain / IMA	M66	Read ECU Information	
ELEMENT	/	Electric Powertrain / IMA	M66	Read codes	
ELEMENT	/	Electric Powertrain / IMA	M66	Erase Codes	
ELEMENT	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
ELEMENT	/	Electric Powertrain / IMA	M66	Read Live Data	
ELEMENT	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
ELEMENT	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
ELEMENT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
ELEMENT	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ELEMENT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ELEMENT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
ELEMENT	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ELEMENT	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ELEMENT	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ELEMENT	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ELEMENT	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ELEMENT	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ELEMENT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ELEMENT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ELEMENT	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ELEMENT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ELEMENT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ELEMENT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ELEMENT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
ELEMENT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ELEMENT	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
ELEMENT	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ELEMENT	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ELEMENT	/	New energy battery (EV)	M44	Read ECU Information	
ELEMENT	/	New energy battery (EV)	M44	Read codes	
ELEMENT	/	New energy battery (EV)	M44	Erase Codes	
ELEMENT	/	New energy battery (EV)	M44	Read Freeze Frame Data	
ELEMENT	/	New energy battery (EV)	M44	Read Live Data	
ELEMENT	/	New energy battery (EV)	M44	Inspection	
ELEMENT	/	New energy battery (EV)	M44	Adjustment	
ELEMENT	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	

ELEMENT	/	Electronic vacuum pump (EVPS)	M21	Read codes	
ELEMENT	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ELEMENT	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ELEMENT	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ELEMENT	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ELEMENT	/	Electronic vacuum pump (EVPS)	M22	Read codes	
ELEMENT	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ELEMENT	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ELEMENT	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ELEMENT	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ELEMENT	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ELEMENT	/	FCW LDW	M4E	Read ECU Information	
ELEMENT	/	FCW LDW	M4E	Read codes	
ELEMENT	/	FCW LDW	M4E	Erase Codes	
ELEMENT	/	FCW LDW	M4E	Read Live Data	
ELEMENT	/	FCW LDW	M4E	Function Test	FCW Drive
ELEMENT	/	FCW LDW	M4E	Function Test	Left side lane departure warning
ELEMENT	/	FCW LDW	M4E	Function Test	Right side lane departure warning
ELEMENT	/	FCW LDW	M4E	Function Test	Indicator Drive
ELEMENT	/	FCW LDW	M4E	Adjustment	
ELEMENT	/	Instrument Display System (GAUGE)	M2C	Read codes	
ELEMENT	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
ELEMENT	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Read codes	
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Read codes	
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Read codes	
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ELEMENT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ELEMENT	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Read codes	
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ELEMENT	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
ELEMENT	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ELEMENT	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
ELEMENT	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
ELEMENT	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ELEMENT	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ELEMENT	/	Intelligent Parking Control System (SPS)	M9B	Customize	
ELEMENT	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ELEMENT	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ELEMENT	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ELEMENT	/	Hydraulic booster control system (HBS)	M5F	Read codes	

ELEMENT	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ELEMENT	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ELEMENT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ELEMENT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ELEMENT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ELEMENT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ELEMENT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ELEMENT	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ELEMENT	/	IMA	M63	Read ECU Information	
ELEMENT	/	IMA	M63	Read codes	
ELEMENT	/	IMA	M63	Erase Codes	
ELEMENT	/	IMA	M63	Read Freeze Frame Data	
ELEMENT	/	IMA	M63	Read Live Data	
ELEMENT	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ELEMENT	/	IMA	M63	Adjustment	SOC PRESET
ELEMENT	/	IMA	M64	Read ECU Information	
ELEMENT	/	IMA	M64	Read codes	
ELEMENT	/	IMA	M64	Erase Codes	
ELEMENT	/	IMA	M64	Read Freeze Frame Data	
ELEMENT	/	IMA	M64	Read Live Data	
ELEMENT	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ELEMENT	/	IMA	M64	Adjustment	SOC PRESET
ELEMENT	/	IMA	M65	Read ECU Information	
ELEMENT	/	IMA	M65	Read codes	
ELEMENT	/	IMA	M65	Erase Codes	
ELEMENT	/	IMA	M65	Read Freeze Frame Data	
ELEMENT	/	IMA	M65	Read Live Data	
ELEMENT	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
ELEMENT	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ELEMENT	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ELEMENT	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ELEMENT	/	Intake Sounder Control System (ISC)	M6D	Read codes	
ELEMENT	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ELEMENT	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ELEMENT	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ELEMENT	/	Night Vision System (INVS)	0XB1	Read ECU Information	
ELEMENT	/	Night Vision System (INVS)	0XB1	Read codes	
ELEMENT	/	Night Vision System (INVS)	0XB1	Erase Codes	
ELEMENT	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ELEMENT	/	Night Vision System (INVS)	0XB1	Read Live Data	
ELEMENT	/	Night Vision System (INVS)	0XB1	Adjustment	
ELEMENT	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ELEMENT	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ELEMENT	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ELEMENT	/	i-SHIFT	0XB0	Read ECU Information	
ELEMENT	/	i-SHIFT	0XB0	Read codes	
ELEMENT	/	i-SHIFT	0XB0	Erase Codes	
ELEMENT	/	i-SHIFT	0XB0	Read Live Data	
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Read codes	
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Self Check	
ELEMENT	/	Keyless Entry Control System (KAS)	M99	History Data	
ELEMENT	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output

ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ELEMENT	/	Keyless Entry Control System (KAS)	M99	Registration	
ELEMENT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ELEMENT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ELEMENT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
ELEMENT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
ELEMENT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
ELEMENT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
ELEMENT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
ELEMENT	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
ELEMENT	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
ELEMENT	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
ELEMENT	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
ELEMENT	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
ELEMENT	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
ELEMENT	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
ELEMENT	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
ELEMENT	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
ELEMENT	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
ELEMENT	/	Management ECU Module (ME)	M74	Read ECU Information	
ELEMENT	/	Management ECU Module (ME)	M74	Read codes	
ELEMENT	/	Management ECU Module (ME)	M74	Erase Codes	
ELEMENT	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
ELEMENT	/	Management ECU Module (ME)	M74	Read Live Data	
ELEMENT	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
ELEMENT	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
ELEMENT	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
ELEMENT	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
ELEMENT	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
ELEMENT	/	Multi-view camera system (MVCS)	M7A	Read codes	
ELEMENT	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
ELEMENT	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
ELEMENT	/	Multi-view camera system (MVCS)	M7A	Customization	
ELEMENT	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
ELEMENT	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
ELEMENT	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
ELEMENT	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
ELEMENT	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
ELEMENT	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
ELEMENT	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
ELEMENT	/	Power Control Unit (PCU)	M83	Read ECU Information	
ELEMENT	/	Power Control Unit (PCU)	M83	Read codes	
ELEMENT	/	Power Control Unit (PCU)	M83	Erase Codes	
ELEMENT	/	Power Control Unit (PCU)	M83	Read Live Data	
ELEMENT	/	Power Control Unit (PCU)	M83	Self Check	
ELEMENT	/	Power Control Unit (PCU)	M83	History Data	
ELEMENT	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
ELEMENT	/	Engine Control System (PGM-FI)	M23	Read codes	
ELEMENT	/	Engine Control System (PGM-FI)	M23	Erase Codes	
ELEMENT	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
ELEMENT	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
ELEMENT	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
ELEMENT	/	Engine Control System (PGM-FI)	M23	Read Live Data	
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ELEMENT	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ELEMENT	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
ELEMENT	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ELEMENT	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
ELEMENT	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
ELEMENT	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
ELEMENT	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
ELEMENT	/	Engine Control System (PGM-FI)	M50	Read codes	
ELEMENT	/	Engine Control System (PGM-FI)	M50	Erase Codes	
ELEMENT	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
ELEMENT	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
ELEMENT	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	

ELEMENT	/	Engine Control System (PGM-FI)	M50	Read Live Data	
ELEMENT	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
ELEMENT	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
ELEMENT	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
ELEMENT	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
ELEMENT	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
ELEMENT	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
ELEMENT	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
ELEMENT	/	Engine Control System (PGM-FI)	M86	Read codes	
ELEMENT	/	Engine Control System (PGM-FI)	M86	Erase Codes	
ELEMENT	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
ELEMENT	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
ELEMENT	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
ELEMENT	/	Engine Control System (PGM-FI)	M86	Read Live Data	
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ELEMENT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ELEMENT	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ELEMENT	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ELEMENT	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
ELEMENT	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ELEMENT	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
ELEMENT	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
ELEMENT	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
ELEMENT	/	PSR	M27	Read ECU Information	
ELEMENT	/	PSR	M27	Read codes	
ELEMENT	/	PSR	M27	Erase Codes	
ELEMENT	/	PSR	M27	Read Live Data	
ELEMENT	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ELEMENT	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
ELEMENT	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ELEMENT	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ELEMENT	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
ELEMENT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
ELEMENT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
ELEMENT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
ELEMENT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
ELEMENT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
ELEMENT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
ELEMENT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
ELEMENT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
ELEMENT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
ELEMENT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
ELEMENT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
ELEMENT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
ELEMENT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
ELEMENT	/	Remote starter (RS)	M90	System Check	
ELEMENT	/	Remote starter (RS)	M90	HISTORY	
ELEMENT	/	Remote starter (RS)	M90	Registration	
ELEMENT	/	Seat load cell (SWS)	M6F	Read ECU Information	
ELEMENT	/	Seat load cell (SWS)	M6F	Read codes	
ELEMENT	/	Seat load cell (SWS)	M6F	Erase Codes	
ELEMENT	/	Seat load cell (SWS)	M6F	Read Live Data	
ELEMENT	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
ELEMENT	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
ELEMENT	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
ELEMENT	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
ELEMENT	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
ELEMENT	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
ELEMENT	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
ELEMENT	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	



ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ELEMENT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
ELEMENT	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
ELEMENT	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
ELEMENT	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
ELEMENT	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
ELEMENT	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
ELEMENT	/	Groove track drive unit (SLOT ECU)	M98	History Data	
ELEMENT	/	Groove track drive unit (SLOT ECU)	M98	System Information	
ELEMENT	/	Airbag Control System (SRS)	M9F	Read ECU Information	
ELEMENT	/	Airbag Control System (SRS)	M9F	Read codes	
ELEMENT	/	Airbag Control System (SRS)	M9F	Erase Codes	
ELEMENT	/	Airbag Control System (SRS)	M9F	Read Live Data	
ELEMENT	/	Airbag Control System (SRS)	MA0	Read ECU Information	
ELEMENT	/	Airbag Control System (SRS)	MA0	Read codes	
ELEMENT	/	Airbag Control System (SRS)	MA0	Erase Codes	
ELEMENT	/	Airbag Control System (SRS)	MA0	Read Live Data	
ELEMENT	/	Airbag Control System (SRS)	MA1	Read ECU Information	
ELEMENT	/	Airbag Control System (SRS)	MA1	Read codes	
ELEMENT	/	Airbag Control System (SRS)	MA1	Erase Codes	
ELEMENT	/	Airbag Control System (SRS)	MA1	Read Live Data	
ELEMENT	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
ELEMENT	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ELEMENT	/	Airbag Control System (SRS)	M2A	Read codes	
ELEMENT	/	Airbag Control System (SRS)	M2A	Erase Codes	
ELEMENT	/	Airbag Control System (SRS)	M2A	Read Live Data	
ELEMENT	/	Airbag Control System (SRS)	M9C	Read ECU Information	
ELEMENT	/	Airbag Control System (SRS)	M9C	Read codes	
ELEMENT	/	Airbag Control System (SRS)	M9C	Erase Codes	
ELEMENT	/	Airbag Control System (SRS)	M9C	Read Live Data	
ELEMENT	/	Airbag Control System (SRS)	M9D	Read ECU Information	
ELEMENT	/	Airbag Control System (SRS)	M9D	Read codes	
ELEMENT	/	Airbag Control System (SRS)	M9D	Erase Codes	
ELEMENT	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
ELEMENT	/	Airbag Control System (SRS)	M9D	Read Live Data	
ELEMENT	/	Airbag Control System (SRS)	M9D	Parameter Information	
ELEMENT	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
ELEMENT	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
ELEMENT	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
ELEMENT	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
ELEMENT	/	Airbag Control System (SRS)	M9D	Function Test	
ELEMENT	/	Airbag Control System (SRS)	M9D	System Information	
ELEMENT	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
ELEMENT	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
ELEMENT	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
ELEMENT	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
ELEMENT	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ELEMENT	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ELEMENT	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ELEMENT	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ELEMENT	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ELEMENT	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ELEMENT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ELEMENT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ELEMENT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ELEMENT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ELEMENT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
ELEMENT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ELEMENT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ELEMENT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ELEMENT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
ELYSION	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ELYSION	/	Four-wheel steering control system (4WS)	M52	Read codes	
ELYSION	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
ELYSION	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ELYSION	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
ELYSION	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ELYSION	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ELYSION	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
ELYSION	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ELYSION	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ELYSION	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ELYSION	/	Automatic shift control system (A/T)	M1E	Read ECU Information	

ELYSION	/	Automatic shift control system (A/T)	M1E	Read codes	
ELYSION	/	Automatic shift control system (A/T)	M1E	Erase Codes	
ELYSION	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ELYSION	/	Automatic shift control system (A/T)	M1E	Read Live Data	
ELYSION	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
ELYSION	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ELYSION	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ELYSION	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ELYSION	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ELYSION	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ELYSION	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ELYSION	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ELYSION	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
ELYSION	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
ELYSION	/	Automatic shift control system (A/T)	M3B	Read codes	
ELYSION	/	Automatic shift control system (A/T)	M3B	Erase Codes	
ELYSION	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ELYSION	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
ELYSION	/	Automatic shift control system (A/T)	M3B	Read Live Data	
ELYSION	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ELYSION	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ELYSION	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
ELYSION	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ELYSION	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
ELYSION	/	Automatic shift control system (A/T)	M3C	Read codes	
ELYSION	/	Automatic shift control system (A/T)	M3C	Erase Codes	
ELYSION	/	Automatic shift control system (A/T)	M81	Read ECU Information	
ELYSION	/	Automatic shift control system (A/T)	M81	Read codes	
ELYSION	/	Automatic shift control system (A/T)	M81	Erase Codes	
ELYSION	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ELYSION	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
ELYSION	/	Automatic shift control system (A/T)	M81	Read Live Data	
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ELYSION	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
ELYSION	/	Automatic shift control system (A/T)	M82	Read ECU Information	
ELYSION	/	Automatic shift control system (A/T)	M82	Read codes	
ELYSION	/	Automatic shift control system (A/T)	M82	Erase Codes	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read codes	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Erase Codes	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Freeze Frame Data	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Live Data	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	Throttle Opening Angle Test
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 1
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 2
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	LIGHT CHECK
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BUZZER CHECK
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read ECU Information	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read codes	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Erase Codes	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Freeze Frame Data	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Live Data	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Adjustment	RADAR AIMING
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	BRAKE ACTUATOR 3
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ACC relay malfunction.
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INDICATOR LIGHT
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INFORMATION DISPLAY
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ALARM BUZZER
ELYSION	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
ELYSION	/	Active Engine Control Support System (ACM)	M06	Read codes	
ELYSION	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
ELYSION	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
ELYSION	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
ELYSION	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
ELYSION	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
ELYSION	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
ELYSION	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ELYSION	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
ELYSION	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
ELYSION	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
ELYSION	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
ELYSION	/	Active / Automatic Shock Absorber Control System (A	MOD	Read ECU Information	
ELYSION	/	Active / Automatic Shock Absorber Control System (A	MOD	Read codes	
ELYSION	/	Active / Automatic Shock Absorber Control System (A	MOD	Erase Codes	
ELYSION	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Freeze Frame Data	
ELYSION	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Live Data	
ELYSION	/	Active / Automatic Shock Absorber Control System (A	MOD	Function Test	Damper Force Operation Test
ELYSION	/	Active / Automatic Shock Absorber Control System (A	MOD	Adjustment	Damper Stroke Calibration
ELYSION	/	Active / Automatic Shock Absorber Control System (A	M1A	Read codes	
ELYSION	/	Active / Automatic Shock Absorber Control System (A	M1A	Erase Codes	
ELYSION	/	Active / Automatic Shock Absorber Control System (A	M1A	Read Live Data	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read codes	

ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
ELYSION	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
ELYSION	/	Transmission Control System (AT) M18	Read ECU Information	
ELYSION	/	Transmission Control System (AT) M18	Read codes	
ELYSION	/	Transmission Control System (AT) M18	Erase Codes	
ELYSION	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
ELYSION	/	Transmission Control System (AT) M18	Read Live Data	
ELYSION	/	Transmission Control System (AT) M18	Adjustment	
ELYSION	/	Active Torque Converter Control System (ATTS) MOE	Read ECU Information	
ELYSION	/	Active Torque Converter Control System (ATTS) MOE	Read codes	
ELYSION	/	Active Torque Converter Control System (ATTS) MOE	Erase Codes	
ELYSION	/	Active Torque Converter Control System (ATTS) MOE	Read Freeze Frame Data	
ELYSION	/	Active Torque Converter Control System (ATTS) MOE	Read Live Data	
ELYSION	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
ELYSION	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	STEERING ANGLE
ELYSION	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ELYSION	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	ALL SENSORS
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
ELYSION	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
ELYSION	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
ELYSION	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Oncoming Vehicle Detection
ELYSION	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Preceding Vehicle Detection
ELYSION	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
ELYSION	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
ELYSION	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset Operation
ELYSION	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Returning Operation
ELYSION	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Automatic Returning Distance
ELYSION	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Manual Returning Time
ELYSION	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset to default
ELYSION	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
ELYSION	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
ELYSION	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
ELYSION	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
ELYSION	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
ELYSION	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
ELYSION	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
ELYSION	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
ELYSION	/	BODY ELECTRICAL/e-Call MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
ELYSION	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
ELYSION	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
ELYSION	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	
ELYSION	/	BODY ELECTRICAL/Gauges MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Gauges MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Gauges MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Gauges MFF	Function Test	Speedometer
ELYSION	/	BODY ELECTRICAL/Gauges MFF	Function Test	Tachometer
ELYSION	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Activation Indicator
ELYSION	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Indicator

ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ELYSION	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ELYSION	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ELYSION	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ELYSION	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ELYSION	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ELYSION	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ELYSION	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ELYSION	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ELYSION	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ELYSION	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ELYSION	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ELYSION	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ELYSION	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
ELYSION	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ELYSION	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ELYSION	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
ELYSION	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ELYSION	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	

ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ELYSION	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ELYSION	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Security	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ELYSION	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
ELYSION	/	BODY ELECTRICAL/Security	MFF	History Data	
ELYSION	/	BODY ELECTRICAL/Security	MFF	History Clear	
ELYSION	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ELYSION	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ELYSION	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ELYSION	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ELYSION	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ELYSION	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ELYSION	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
ELYSION	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ELYSION	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ELYSION	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ELYSION	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
ELYSION	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ELYSION	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
ELYSION	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ELYSION	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ELYSION	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
ELYSION	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ELYSION	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ELYSION	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ELYSION	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ELYSION	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ELYSION	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ELYSION	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ELYSION	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ELYSION	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
ELYSION	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ELYSION	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
ELYSION	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ELYSION	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ELYSION	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
ELYSION	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
ELYSION	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
ELYSION	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
ELYSION	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
ELYSION	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
ELYSION	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
ELYSION	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
ELYSION	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
ELYSION	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
ELYSION	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
ELYSION	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
ELYSION	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
ELYSION	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	

ELYSION	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Lock Solenoid Test	
ELYSION	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Solenoid Tests	
ELYSION	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Electrical Oil Pump Activation	
ELYSION	/	Promise Automatic Transmission Control System (CVT M33	Read ECU Information		
ELYSION	/	Promise Automatic Transmission Control System (CVT M33	Read codes		
ELYSION	/	Promise Automatic Transmission Control System (CVT M33	Erase Codes		
ELYSION	/	Promise Automatic Transmission Control System (CVT M33	Read Freeze Frame Data		
ELYSION	/	Promise Automatic Transmission Control System (CVT M33	Read Live Data		
ELYSION	/	Promise Automatic Transmission Control System (CVT M33	ECM/PCM Reset		
ELYSION	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid	
ELYSION	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)	
ELYSION	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)	
ELYSION	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn	
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information		
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	Read codes		
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes		
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data		
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data		
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	ECM/PCM Reset		
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid	
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)	
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)	
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn	
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A	
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B	
ELYSION	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P	
ELYSION	/	DBW	M34	Read ECU Information	
ELYSION	/	DBW	M34	Read codes	
ELYSION	/	DBW	M34	Erase Codes	
ELYSION	/	DBW	M34	Read Freeze Frame Data	
ELYSION	/	DBW	M34	Read Live Data	
ELYSION	/	DBW	M34	Inspection	Idle Speed Adjust
ELYSION	/	DBW	M34	Inspection	Throttle Test
ELYSION	/	DBW	M34	ECM Reset	
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
ELYSION	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
ELYSION	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
ELYSION	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
ELYSION	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
ELYSION	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
ELYSION	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
ELYSION	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
ELYSION	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
ELYSION	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
ELYSION	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
ELYSION	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
ELYSION	/	Capacitor Control System (EDLC)	M12	Read codes	
ELYSION	/	Capacitor Control System (EDLC)	M12	Erase Codes	
ELYSION	/	Capacitor Control System (EDLC)	M12	Read Live Data	
ELYSION	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
ELYSION	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal

ELYSION	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
ELYSION	/	Electronic Brake Control System (EPB)	M1F	Read codes	
ELYSION	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
ELYSION	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
ELYSION	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
ELYSION	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
ELYSION	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
ELYSION	/	Electronic Brake Control System (EPB)	M3E	Read codes	
ELYSION	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
ELYSION	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
ELYSION	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
ELYSION	/	Electric Powertrain / IMA	M66	Read ECU Information	
ELYSION	/	Electric Powertrain / IMA	M66	Read codes	
ELYSION	/	Electric Powertrain / IMA	M66	Erase Codes	
ELYSION	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
ELYSION	/	Electric Powertrain / IMA	M66	Read Live Data	
ELYSION	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
ELYSION	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
ELYSION	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
ELYSION	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ELYSION	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ELYSION	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
ELYSION	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ELYSION	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ELYSION	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ELYSION	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ELYSION	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ELYSION	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ELYSION	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
ELYSION	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ELYSION	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ELYSION	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ELYSION	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ELYSION	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ELYSION	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ELYSION	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ELYSION	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ELYSION	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ELYSION	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ELYSION	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ELYSION	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ELYSION	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ELYSION	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ELYSION	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ELYSION	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
ELYSION	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ELYSION	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ELYSION	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ELYSION	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ELYSION	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ELYSION	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
ELYSION	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ELYSION	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ELYSION	/	New energy battery (EV)	M44	Read ECU Information	
ELYSION	/	New energy battery (EV)	M44	Read codes	
ELYSION	/	New energy battery (EV)	M44	Erase Codes	
ELYSION	/	New energy battery (EV)	M44	Read Freeze Frame Data	
ELYSION	/	New energy battery (EV)	M44	Read Live Data	
ELYSION	/	New energy battery (EV)	M44	Inspection	
ELYSION	/	New energy battery (EV)	M44	Adjustment	
ELYSION	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
ELYSION	/	Electronic vacuum pump (EVPS)	M21	Read codes	
ELYSION	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ELYSION	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ELYSION	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ELYSION	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ELYSION	/	Electronic vacuum pump (EVPS)	M22	Read codes	
ELYSION	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ELYSION	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ELYSION	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ELYSION	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ELYSION	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ELYSION	/	FCW LDW	M4E	Read ECU Information	
ELYSION	/	FCW LDW	M4E	Read codes	
ELYSION	/	FCW LDW	M4E	Erase Codes	
ELYSION	/	FCW LDW	M4E	Read Live Data	
ELYSION	/	FCW LDW	M4E	Function Test	FCW Drive
ELYSION	/	FCW LDW	M4E	Function Test	Left side lane departure warning
ELYSION	/	FCW LDW	M4E	Function Test	Right side lane departure warning
ELYSION	/	FCW LDW	M4E	Function Test	Indicator Drive
ELYSION	/	FCW LDW	M4E	Adjustment	
ELYSION	/	Instrument Display System (GAUGE)	M2C	Read codes	
ELYSION	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
ELYSION	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
ELYSION	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ELYSION	/	Anti-lock brake control system (ABS)	M01	Read codes	
ELYSION	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
ELYSION	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ELYSION	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
ELYSION	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid

ELYSION	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ELYSION	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ELYSION	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ELYSION	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ELYSION	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ELYSION	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ELYSION	/	Anti-lock brake control system (ABS)	M02	Read codes	
ELYSION	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
ELYSION	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ELYSION	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
ELYSION	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ELYSION	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
ELYSION	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ELYSION	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ELYSION	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
ELYSION	/	Anti-lock brake control system (ABS)	M03	Read codes	
ELYSION	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
ELYSION	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
ELYSION	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ELYSION	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ELYSION	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ELYSION	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ELYSION	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
ELYSION	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ELYSION	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ELYSION	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ELYSION	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ELYSION	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ELYSION	/	Anti-lock brake control system (ABS)	M19	Read codes	
ELYSION	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
ELYSION	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
ELYSION	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ELYSION	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ELYSION	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
ELYSION	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ELYSION	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ELYSION	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ELYSION	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ELYSION	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ELYSION	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
ELYSION	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ELYSION	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
ELYSION	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
ELYSION	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ELYSION	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ELYSION	/	Intelligent Parking Control System (SPS)	M9B	Customize	
ELYSION	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ELYSION	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ELYSION	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ELYSION	/	Hydraulic booster control system (HBS)	M5F	Read codes	
ELYSION	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ELYSION	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ELYSION	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ELYSION	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ELYSION	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ELYSION	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ELYSION	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ELYSION	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ELYSION	/	IMA	M63	Read ECU Information	
ELYSION	/	IMA	M63	Read codes	
ELYSION	/	IMA	M63	Erase Codes	
ELYSION	/	IMA	M63	Read Freeze Frame Data	
ELYSION	/	IMA	M63	Read Live Data	
ELYSION	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ELYSION	/	IMA	M63	Adjustment	SOC PRESET
ELYSION	/	IMA	M64	Read ECU Information	
ELYSION	/	IMA	M64	Read codes	
ELYSION	/	IMA	M64	Erase Codes	
ELYSION	/	IMA	M64	Read Freeze Frame Data	
ELYSION	/	IMA	M64	Read Live Data	
ELYSION	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ELYSION	/	IMA	M64	Adjustment	SOC PRESET
ELYSION	/	IMA	M65	Read ECU Information	
ELYSION	/	IMA	M65	Read codes	
ELYSION	/	IMA	M65	Erase Codes	
ELYSION	/	IMA	M65	Read Freeze Frame Data	
ELYSION	/	IMA	M65	Read Live Data	
ELYSION	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
ELYSION	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ELYSION	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ELYSION	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ELYSION	/	Intake Sounder Control System (ISC)	M6D	Read codes	



ELYSION	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ELYSION	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ELYSION	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ELYSION	/	Night Vision System (INVS)	0XB1	Read ECU Information	
ELYSION	/	Night Vision System (INVS)	0XB1	Read codes	
ELYSION	/	Night Vision System (INVS)	0XB1	Erase Codes	
ELYSION	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ELYSION	/	Night Vision System (INVS)	0XB1	Read Live Data	
ELYSION	/	Night Vision System (INVS)	0XB1	Adjustment	
ELYSION	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ELYSION	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ELYSION	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ELYSION	/	i-SHIFT	0XB0	Read ECU Information	
ELYSION	/	i-SHIFT	0XB0	Read codes	
ELYSION	/	i-SHIFT	0XB0	Erase Codes	
ELYSION	/	i-SHIFT	0XB0	Read Live Data	
ELYSION	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ELYSION	/	Keyless Entry Control System (KAS)	M99	Read codes	
ELYSION	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
ELYSION	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
ELYSION	/	Keyless Entry Control System (KAS)	M99	Self Check	
ELYSION	/	Keyless Entry Control System (KAS)	M99	History Data	
ELYSION	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ELYSION	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ELYSION	/	Keyless Entry Control System (KAS)	M99	Registration	
ELYSION	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ELYSION	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ELYSION	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
ELYSION	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
ELYSION	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
ELYSION	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
ELYSION	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
ELYSION	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
ELYSION	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
ELYSION	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
ELYSION	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
ELYSION	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
ELYSION	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
ELYSION	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
ELYSION	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
ELYSION	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
ELYSION	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
ELYSION	/	Management ECU Module (ME)	M74	Read ECU Information	
ELYSION	/	Management ECU Module (ME)	M74	Read codes	

ELYSION	/	Management ECU Module (ME)	M74	Erase Codes	
ELYSION	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
ELYSION	/	Management ECU Module (ME)	M74	Read Live Data	
ELYSION	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
ELYSION	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
ELYSION	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
ELYSION	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
ELYSION	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
ELYSION	/	Multi-view camera system (MVCS)	M7A	Read codes	
ELYSION	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
ELYSION	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
ELYSION	/	Multi-view camera system (MVCS)	M7A	Customization	
ELYSION	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
ELYSION	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
ELYSION	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
ELYSION	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
ELYSION	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
ELYSION	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
ELYSION	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
ELYSION	/	Power Control Unit (PCU)	M83	Read ECU Information	
ELYSION	/	Power Control Unit (PCU)	M83	Read codes	
ELYSION	/	Power Control Unit (PCU)	M83	Erase Codes	
ELYSION	/	Power Control Unit (PCU)	M83	Read Live Data	
ELYSION	/	Power Control Unit (PCU)	M83	Self Check	
ELYSION	/	Power Control Unit (PCU)	M83	History Data	
ELYSION	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
ELYSION	/	Engine Control System (PGM-FI)	M23	Read codes	
ELYSION	/	Engine Control System (PGM-FI)	M23	Erase Codes	
ELYSION	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
ELYSION	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
ELYSION	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
ELYSION	/	Engine Control System (PGM-FI)	M23	Read Live Data	
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ELYSION	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ELYSION	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
ELYSION	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ELYSION	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
ELYSION	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
ELYSION	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
ELYSION	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
ELYSION	/	Engine Control System (PGM-FI)	M50	Read codes	
ELYSION	/	Engine Control System (PGM-FI)	M50	Erase Codes	
ELYSION	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
ELYSION	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
ELYSION	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
ELYSION	/	Engine Control System (PGM-FI)	M50	Read Live Data	
ELYSION	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
ELYSION	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
ELYSION	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
ELYSION	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
ELYSION	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
ELYSION	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
ELYSION	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
ELYSION	/	Engine Control System (PGM-FI)	M86	Read codes	
ELYSION	/	Engine Control System (PGM-FI)	M86	Erase Codes	
ELYSION	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
ELYSION	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
ELYSION	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
ELYSION	/	Engine Control System (PGM-FI)	M86	Read Live Data	
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	ACM

ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ELYSION	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ELYSION	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ELYSION	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ELYSION	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
ELYSION	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ELYSION	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
ELYSION	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
ELYSION	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
ELYSION	/	PSR	M27	Read ECU Information	
ELYSION	/	PSR	M27	Read codes	
ELYSION	/	PSR	M27	Erase Codes	
ELYSION	/	PSR	M27	Read Live Data	
ELYSION	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ELYSION	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
ELYSION	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ELYSION	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ELYSION	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
ELYSION	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
ELYSION	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
ELYSION	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
ELYSION	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
ELYSION	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
ELYSION	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
ELYSION	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
ELYSION	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
ELYSION	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
ELYSION	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
ELYSION	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
ELYSION	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
ELYSION	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
ELYSION	/	Remote starter (RS)	M90	System Check	
ELYSION	/	Remote starter (RS)	M90	HISTORY	
ELYSION	/	Remote starter (RS)	M90	Registration	
ELYSION	/	Seat load cell (SWS)	M6F	Read ECU Information	
ELYSION	/	Seat load cell (SWS)	M6F	Read codes	
ELYSION	/	Seat load cell (SWS)	M6F	Erase Codes	
ELYSION	/	Seat load cell (SWS)	M6F	Read Live Data	
ELYSION	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
ELYSION	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
ELYSION	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
ELYSION	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
ELYSION	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
ELYSION	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
ELYSION	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
ELYSION	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ELYSION	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
ELYSION	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
ELYSION	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
ELYSION	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
ELYSION	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
ELYSION	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
ELYSION	/	Groove track drive unit (SLOT ECU)	M98	History Data	
ELYSION	/	Groove track drive unit (SLOT ECU)	M98	System Information	
ELYSION	/	Airbag Control System (SRS)	M9F	Read ECU Information	
ELYSION	/	Airbag Control System (SRS)	M9F	Read codes	
ELYSION	/	Airbag Control System (SRS)	M9F	Erase Codes	
ELYSION	/	Airbag Control System (SRS)	M9F	Read Live Data	
ELYSION	/	Airbag Control System (SRS)	MA0	Read ECU Information	
ELYSION	/	Airbag Control System (SRS)	MA0	Read codes	
ELYSION	/	Airbag Control System (SRS)	MA0	Erase Codes	
ELYSION	/	Airbag Control System (SRS)	MA0	Read Live Data	
ELYSION	/	Airbag Control System (SRS)	MA1	Read ECU Information	
ELYSION	/	Airbag Control System (SRS)	MA1	Read codes	
ELYSION	/	Airbag Control System (SRS)	MA1	Erase Codes	
ELYSION	/	Airbag Control System (SRS)	MA1	Read Live Data	
ELYSION	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
ELYSION	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ELYSION	/	Airbag Control System (SRS)	M2A	Read codes	

ELYSION	/	Airbag Control System (SRS)	M2A	Erase Codes	
ELYSION	/	Airbag Control System (SRS)	M2A	Read Live Data	
ELYSION	/	Airbag Control System (SRS)	M9C	Read ECU Information	
ELYSION	/	Airbag Control System (SRS)	M9C	Read codes	
ELYSION	/	Airbag Control System (SRS)	M9C	Erase Codes	
ELYSION	/	Airbag Control System (SRS)	M9C	Read Live Data	
ELYSION	/	Airbag Control System (SRS)	M9D	Read ECU Information	
ELYSION	/	Airbag Control System (SRS)	M9D	Read codes	
ELYSION	/	Airbag Control System (SRS)	M9D	Erase Codes	
ELYSION	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
ELYSION	/	Airbag Control System (SRS)	M9D	Read Live Data	
ELYSION	/	Airbag Control System (SRS)	M9D	Parameter Information	
ELYSION	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
ELYSION	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
ELYSION	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
ELYSION	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
ELYSION	/	Airbag Control System (SRS)	M9D	Function Test	
ELYSION	/	Airbag Control System (SRS)	M9D	System Information	
ELYSION	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
ELYSION	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
ELYSION	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
ELYSION	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
ELYSION	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ELYSION	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ELYSION	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ELYSION	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ELYSION	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ELYSION	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ELYSION	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ELYSION	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ELYSION	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ELYSION	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ELYSION	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
ELYSION	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ELYSION	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ELYSION	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ELYSION	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Read codes	
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Read codes	
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Erase Codes	
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Read Live Data	
EVERUS S1	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
EVERUS S1	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Read codes	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Erase Codes	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Read Live Data	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
EVERUS S1	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
EVERUS S1	/	Automatic shift control system (A/T)	M3C	Read codes	
EVERUS S1	/	Automatic shift control system (A/T)	M3C	Erase Codes	
EVERUS S1	/	Automatic shift control system (A/T)	M81	Read ECU Information	
EVERUS S1	/	Automatic shift control system (A/T)	M81	Read codes	
EVERUS S1	/	Automatic shift control system (A/T)	M81	Erase Codes	
EVERUS S1	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
EVERUS S1	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
EVERUS S1	/	Automatic shift control system (A/T)	M81	Read Live Data	

EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
EVERUS S1	/	Automatic shift control system (A/T)	M82	Read ECU Information	
EVERUS S1	/	Automatic shift control system (A/T)	M82	Read codes	
EVERUS S1	/	Automatic shift control system (A/T)	M82	Erase Codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
EVERUS S1	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
EVERUS S1	/	Active Engine Control Support System (ACM)	M06	Read codes	
EVERUS S1	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
EVERUS S1	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
EVERUS S1	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
EVERUS S1	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
EVERUS S1	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
EVERUS S1	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
EVERUS S1	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
EVERUS S1	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
EVERUS S1	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
EVERUS S1	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
EVERUS S1	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read ECU Information	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read codes	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Erase Codes	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Freeze Frame Data	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Live Data	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Function Test	Damper Force Operation Test
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Adjustment	Damper Stroke Calibration
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
EVERUS S1	/	Transmission Control System (AT)	M18	Read ECU Information	
EVERUS S1	/	Transmission Control System (AT)	M18	Read codes	
EVERUS S1	/	Transmission Control System (AT)	M18	Erase Codes	
EVERUS S1	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
EVERUS S1	/	Transmission Control System (AT)	M18	Read Live Data	
EVERUS S1	/	Transmission Control System (AT)	M18	Adjustment	
EVERUS S1	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
EVERUS S1	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
EVERUS S1	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
EVERUS S1	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
EVERUS S1	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
EVERUS S1	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
EVERUS S1	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
EVERUS S1	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
EVERUS S1	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON

EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
EVERUS S1	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
EVERUS S1	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
EVERUS S1	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
EVERUS S1	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
EVERUS S1	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
EVERUS S1	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
EVERUS S1	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
EVERUS S1	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	

EVERUS S1	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
EVERUS S1	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
EVERUS S1	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
EVERUS S1	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
EVERUS S1	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
EVERUS S1	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
EVERUS S1	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
EVERUS S1	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
EVERUS S1	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
EVERUS S1	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
EVERUS S1	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
EVERUS S1	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
EVERUS S1	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
EVERUS S1	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	History Data	
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	History Clear	
EVERUS S1	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
EVERUS S1	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
EVERUS S1	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	

EVERUS S1	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
EVERUS S1	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
EVERUS S1	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
EVERUS S1	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
EVERUS S1	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
EVERUS S1	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
EVERUS S1	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
EVERUS S1	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
EVERUS S1	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
EVERUS S1	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
EVERUS S1	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
EVERUS S1	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
EVERUS S1	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
EVERUS S1	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
EVERUS S1	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
EVERUS S1	/	DBW	M34	Read ECU Information	
EVERUS S1	/	DBW	M34	Read codes	
EVERUS S1	/	DBW	M34	Erase Codes	
EVERUS S1	/	DBW	M34	Read Freeze Frame Data	
EVERUS S1	/	DBW	M34	Read Live Data	
EVERUS S1	/	DBW	M34	Inspection	Idle Speed Adjust



EVERUS S1	/	DBW	M34	Inspection	Throttle Test
EVERUS S1	/	DBW	M34	ECM Reset	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	ISV Forced Learning
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
EVERUS S1	/	Capacitor Control System (EDLC)	M12	Read codes	
EVERUS S1	/	Capacitor Control System (EDLC)	M12	Erase Codes	
EVERUS S1	/	Capacitor Control System (EDLC)	M12	Read Live Data	
EVERUS S1	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
EVERUS S1	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
EVERUS S1	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
EVERUS S1	/	Electronic Brake Control System (EPB)	M1F	Read codes	
EVERUS S1	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
EVERUS S1	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
EVERUS S1	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
EVERUS S1	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
EVERUS S1	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
EVERUS S1	/	Electronic Brake Control System (EPB)	M3E	Read codes	
EVERUS S1	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
EVERUS S1	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
EVERUS S1	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
EVERUS S1	/	Electric Powertrain / IMA	M66	Read ECU Information	
EVERUS S1	/	Electric Powertrain / IMA	M66	Read codes	
EVERUS S1	/	Electric Powertrain / IMA	M66	Erase Codes	
EVERUS S1	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
EVERUS S1	/	Electric Powertrain / IMA	M66	Read Live Data	
EVERUS S1	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
EVERUS S1	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
EVERUS S1	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
EVERUS S1	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
EVERUS S1	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
EVERUS S1	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
EVERUS S1	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
EVERUS S1	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
EVERUS S1	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
EVERUS S1	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
EVERUS S1	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
EVERUS S1	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	

EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
EVERUS S1	/	New energy battery (EV)	M44	Read ECU Information	
EVERUS S1	/	New energy battery (EV)	M44	Read codes	
EVERUS S1	/	New energy battery (EV)	M44	Erase Codes	
EVERUS S1	/	New energy battery (EV)	M44	Read Freeze Frame Data	
EVERUS S1	/	New energy battery (EV)	M44	Read Live Data	
EVERUS S1	/	New energy battery (EV)	M44	Inspection	
EVERUS S1	/	New energy battery (EV)	M44	Adjustment	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M21	Read codes	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Read codes	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
EVERUS S1	/	FCW LDW	M4E	Read ECU Information	
EVERUS S1	/	FCW LDW	M4E	Read codes	
EVERUS S1	/	FCW LDW	M4E	Erase Codes	
EVERUS S1	/	FCW LDW	M4E	Read Live Data	
EVERUS S1	/	FCW LDW	M4E	Function Test	FCW Drive
EVERUS S1	/	FCW LDW	M4E	Function Test	Left side lane departure warning
EVERUS S1	/	FCW LDW	M4E	Function Test	Right side lane departure warning
EVERUS S1	/	FCW LDW	M4E	Function Test	Indicator Drive
EVERUS S1	/	FCW LDW	M4E	Adjustment	
EVERUS S1	/	Instrument Display System (GAUGE)	M2C	Read codes	
EVERUS S1	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
EVERUS S1	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Read codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Read codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Read codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser

EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Read codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Customize	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Read codes	
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
EVERUS S1	/	IMA	M63	Read ECU Information	
EVERUS S1	/	IMA	M63	Read codes	
EVERUS S1	/	IMA	M63	Erase Codes	
EVERUS S1	/	IMA	M63	Read Freeze Frame Data	
EVERUS S1	/	IMA	M63	Read Live Data	
EVERUS S1	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
EVERUS S1	/	IMA	M63	Adjustment	SOC PRESET
EVERUS S1	/	IMA	M64	Read ECU Information	
EVERUS S1	/	IMA	M64	Read codes	
EVERUS S1	/	IMA	M64	Erase Codes	
EVERUS S1	/	IMA	M64	Read Freeze Frame Data	
EVERUS S1	/	IMA	M64	Read Live Data	
EVERUS S1	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
EVERUS S1	/	IMA	M64	Adjustment	SOC PRESET
EVERUS S1	/	IMA	M65	Read ECU Information	
EVERUS S1	/	IMA	M65	Read codes	
EVERUS S1	/	IMA	M65	Erase Codes	
EVERUS S1	/	IMA	M65	Read Freeze Frame Data	
EVERUS S1	/	IMA	M65	Read Live Data	
EVERUS S1	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
EVERUS S1	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
EVERUS S1	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
EVERUS S1	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
EVERUS S1	/	Intake Sounder Control System (ISC)	M6D	Read codes	
EVERUS S1	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
EVERUS S1	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
EVERUS S1	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Read ECU Information	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Read codes	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Erase Codes	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Read Live Data	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Adjustment	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
EVERUS S1	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
EVERUS S1	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
EVERUS S1	/	i-SHIFT	0XB0	Read ECU Information	
EVERUS S1	/	i-SHIFT	0XB0	Read codes	
EVERUS S1	/	i-SHIFT	0XB0	Erase Codes	
EVERUS S1	/	i-SHIFT	0XB0	Read Live Data	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Read codes	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Self Check	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	History Data	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving

EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Registration	
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
EVERUS S1	/	Management ECU Module (ME)	M74	Read ECU Information	
EVERUS S1	/	Management ECU Module (ME)	M74	Read codes	
EVERUS S1	/	Management ECU Module (ME)	M74	Erase Codes	
EVERUS S1	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
EVERUS S1	/	Management ECU Module (ME)	M74	Read Live Data	
EVERUS S1	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
EVERUS S1	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
EVERUS S1	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
EVERUS S1	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Read codes	
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Customization	
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
EVERUS S1	/	Power Control Unit (PCU)	M83	Read ECU Information	
EVERUS S1	/	Power Control Unit (PCU)	M83	Read codes	
EVERUS S1	/	Power Control Unit (PCU)	M83	Erase Codes	
EVERUS S1	/	Power Control Unit (PCU)	M83	Read Live Data	
EVERUS S1	/	Power Control Unit (PCU)	M83	Self Check	
EVERUS S1	/	Power Control Unit (PCU)	M83	History Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Read codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Erase Codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Read Live Data	

EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
EVERUS S1	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Read codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Erase Codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Read Live Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Read codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Erase Codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Read Live Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
EVERUS S1	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
EVERUS S1	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
EVERUS S1	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
EVERUS S1	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
EVERUS S1	/	PSR	M27	Read ECU Information	
EVERUS S1	/	PSR	M27	Read codes	
EVERUS S1	/	PSR	M27	Erase Codes	
EVERUS S1	/	PSR	M27	Read Live Data	
EVERUS S1	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
EVERUS S1	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
EVERUS S1	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
EVERUS S1	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
EVERUS S1	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
EVERUS S1	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
EVERUS S1	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
EVERUS S1	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
EVERUS S1	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
EVERUS S1	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
EVERUS S1	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image

EVERUS S1	/	Remote starter (RS)	M90	System Check	
EVERUS S1	/	Remote starter (RS)	M90	HISTORY	
EVERUS S1	/	Remote starter (RS)	M90	Registration	
EVERUS S1	/	Seat load cell (SWS)	M6F	Read ECU Information	
EVERUS S1	/	Seat load cell (SWS)	M6F	Read codes	
EVERUS S1	/	Seat load cell (SWS)	M6F	Erase Codes	
EVERUS S1	/	Seat load cell (SWS)	M6F	Read Live Data	
EVERUS S1	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
EVERUS S1	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
EVERUS S1	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
EVERUS S1	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
EVERUS S1	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
EVERUS S1	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
EVERUS S1	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
EVERUS S1	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	History Data	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	System Information	
EVERUS S1	/	Airbag Control System (SRS)	M9F	Read ECU Information	
EVERUS S1	/	Airbag Control System (SRS)	M9F	Read codes	
EVERUS S1	/	Airbag Control System (SRS)	M9F	Erase Codes	
EVERUS S1	/	Airbag Control System (SRS)	M9F	Read Live Data	
EVERUS S1	/	Airbag Control System (SRS)	MA0	Read ECU Information	
EVERUS S1	/	Airbag Control System (SRS)	MA0	Read codes	
EVERUS S1	/	Airbag Control System (SRS)	MA0	Erase Codes	
EVERUS S1	/	Airbag Control System (SRS)	MA0	Read Live Data	
EVERUS S1	/	Airbag Control System (SRS)	MA1	Read ECU Information	
EVERUS S1	/	Airbag Control System (SRS)	MA1	Read codes	
EVERUS S1	/	Airbag Control System (SRS)	MA1	Erase Codes	
EVERUS S1	/	Airbag Control System (SRS)	MA1	Read Live Data	
EVERUS S1	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
EVERUS S1	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
EVERUS S1	/	Airbag Control System (SRS)	M2A	Read codes	
EVERUS S1	/	Airbag Control System (SRS)	M2A	Erase Codes	
EVERUS S1	/	Airbag Control System (SRS)	M2A	Read Live Data	
EVERUS S1	/	Airbag Control System (SRS)	M9C	Read ECU Information	
EVERUS S1	/	Airbag Control System (SRS)	M9C	Read codes	
EVERUS S1	/	Airbag Control System (SRS)	M9C	Erase Codes	
EVERUS S1	/	Airbag Control System (SRS)	M9C	Read Live Data	
EVERUS S1	/	Airbag Control System (SRS)	M9D	Read ECU Information	
EVERUS S1	/	Airbag Control System (SRS)	M9D	Read codes	
EVERUS S1	/	Airbag Control System (SRS)	M9D	Erase Codes	
EVERUS S1	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
EVERUS S1	/	Airbag Control System (SRS)	M9D	Read Live Data	
EVERUS S1	/	Airbag Control System (SRS)	M9D	Parameter Information	
EVERUS S1	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
EVERUS S1	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
EVERUS S1	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
EVERUS S1	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
EVERUS S1	/	Airbag Control System (SRS)	M9D	Function Test	
EVERUS S1	/	Airbag Control System (SRS)	M9D	System Information	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	

EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Read codes	
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
EVERUS S1	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Read codes	
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Erase Codes	
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Read Live Data	
EVERUS S1	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
EVERUS S1	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
EVERUS S1	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	Pressure Test Assistance Mode
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Read codes	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Erase Codes	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Read Live Data	
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
EVERUS S1	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
EVERUS S1	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
EVERUS S1	/	Automatic shift control system (A/T)	M3C	Read codes	
EVERUS S1	/	Automatic shift control system (A/T)	M3C	Erase Codes	
EVERUS S1	/	Automatic shift control system (A/T)	M81	Read ECU Information	
EVERUS S1	/	Automatic shift control system (A/T)	M81	Read codes	
EVERUS S1	/	Automatic shift control system (A/T)	M81	Erase Codes	
EVERUS S1	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
EVERUS S1	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
EVERUS S1	/	Automatic shift control system (A/T)	M81	Read Live Data	
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
EVERUS S1	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
EVERUS S1	/	Automatic shift control system (A/T)	M82	Read ECU Information	
EVERUS S1	/	Automatic shift control system (A/T)	M82	Read codes	
EVERUS S1	/	Automatic shift control system (A/T)	M82	Erase Codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING

EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
EVERUS S1	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
EVERUS S1	/	Active Engine Control Support System (ACM) M06	Read codes	
EVERUS S1	/	Active Engine Control Support System (ACM) M06	Erase Codes	
EVERUS S1	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
EVERUS S1	/	Active Engine Control Support System (ACM) M06	Read Live Data	
EVERUS S1	/	Active Engine Control Support System (ACM) M06	ACM Reset	
EVERUS S1	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
EVERUS S1	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
EVERUS S1	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
EVERUS S1	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
EVERUS S1	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
EVERUS S1	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
EVERUS S1	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
EVERUS S1	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
EVERUS S1	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
EVERUS S1	/	Transmission Control System (AT) M18	Read ECU Information	
EVERUS S1	/	Transmission Control System (AT) M18	Read codes	
EVERUS S1	/	Transmission Control System (AT) M18	Erase Codes	
EVERUS S1	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
EVERUS S1	/	Transmission Control System (AT) M18	Read Live Data	
EVERUS S1	/	Transmission Control System (AT) M18	Adjustment	
EVERUS S1	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
EVERUS S1	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
EVERUS S1	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
EVERUS S1	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
EVERUS S1	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
EVERUS S1	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
EVERUS S1	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
EVERUS S1	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
EVERUS S1	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
EVERUS S1	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
EVERUS S1	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
EVERUS S1	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Oncoming Vehicle Detection
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Preceding Vehicle Detection
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset Operation
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Returning Operation
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Automatic Returning Distance
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Manual Returning Time
EVERUS S1	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset to default
EVERUS S1	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	



EVERUS S1	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
EVERUS S1	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
EVERUS S1	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
EVERUS S1	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
EVERUS S1	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
EVERUS S1	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
EVERUS S1	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
EVERUS S1	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
EVERUS S1	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
EVERUS S1	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
EVERUS S1	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
EVERUS S1	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)

EVERUS S1	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
EVERUS S1	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
EVERUS S1	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
EVERUS S1	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
EVERUS S1	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
EVERUS S1	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
EVERUS S1	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
EVERUS S1	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
EVERUS S1	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
EVERUS S1	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
EVERUS S1	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
EVERUS S1	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	History Data	
EVERUS S1	/	BODY ELECTRICAL/Security	MFF	History Clear	
EVERUS S1	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
EVERUS S1	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
EVERUS S1	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
EVERUS S1	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
EVERUS S1	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
EVERUS S1	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
EVERUS S1	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
EVERUS S1	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
EVERUS S1	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
EVERUS S1	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
EVERUS S1	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
EVERUS S1	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
EVERUS S1	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid

EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
EVERUS S1	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
EVERUS S1	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
EVERUS S1	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
EVERUS S1	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
EVERUS S1	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
EVERUS S1	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
EVERUS S1	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
EVERUS S1	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
EVERUS S1	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read ECU Information	
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read codes	
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Erase Codes	
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Freeze Frame Data	
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Live Data	
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	CMBS (CMS) ACTIVATION HISTORY	
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	RADAR AIMING
EVERUS S1	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	CMBS Brake
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
EVERUS S1	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
EVERUS S1	/	DBW	M34	Read ECU Information	
EVERUS S1	/	DBW	M34	Read codes	
EVERUS S1	/	DBW	M34	Erase Codes	
EVERUS S1	/	DBW	M34	Read Freeze Frame Data	
EVERUS S1	/	DBW	M34	Read Live Data	
EVERUS S1	/	DBW	M34	Inspection	Idle Speed Adjust
EVERUS S1	/	DBW	M34	Inspection	Throttle Test
EVERUS S1	/	DBW	M34	ECM Reset	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	

EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
EVERUS S1	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
EVERUS S1	/	Capacitor Control System (EDLC)	M12	Read codes	
EVERUS S1	/	Capacitor Control System (EDLC)	M12	Erase Codes	
EVERUS S1	/	Capacitor Control System (EDLC)	M12	Read Live Data	
EVERUS S1	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
EVERUS S1	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
EVERUS S1	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
EVERUS S1	/	Electronic Brake Control System (EPB)	M1F	Read codes	
EVERUS S1	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
EVERUS S1	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
EVERUS S1	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
EVERUS S1	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
EVERUS S1	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
EVERUS S1	/	Electronic Brake Control System (EPB)	M3E	Read codes	
EVERUS S1	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
EVERUS S1	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
EVERUS S1	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
EVERUS S1	/	Electric Powertrain / IMA	M66	Read ECU Information	
EVERUS S1	/	Electric Powertrain / IMA	M66	Read codes	
EVERUS S1	/	Electric Powertrain / IMA	M66	Erase Codes	
EVERUS S1	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
EVERUS S1	/	Electric Powertrain / IMA	M66	Read Live Data	
EVERUS S1	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
EVERUS S1	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
EVERUS S1	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
EVERUS S1	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
EVERUS S1	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
EVERUS S1	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
EVERUS S1	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
EVERUS S1	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
EVERUS S1	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
EVERUS S1	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
EVERUS S1	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
EVERUS S1	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
EVERUS S1	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
EVERUS S1	/	New energy battery (EV)	M44	Read ECU Information	
EVERUS S1	/	New energy battery (EV)	M44	Read codes	
EVERUS S1	/	New energy battery (EV)	M44	Erase Codes	
EVERUS S1	/	New energy battery (EV)	M44	Read Freeze Frame Data	
EVERUS S1	/	New energy battery (EV)	M44	Read Live Data	
EVERUS S1	/	New energy battery (EV)	M44	Inspection	
EVERUS S1	/	New energy battery (EV)	M44	Adjustment	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M21	Read codes	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	

EVERUS S1	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Read codes	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
EVERUS S1	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
EVERUS S1	/	FCW LDW	M4E	Read ECU Information	
EVERUS S1	/	FCW LDW	M4E	Read codes	
EVERUS S1	/	FCW LDW	M4E	Erase Codes	
EVERUS S1	/	FCW LDW	M4E	Read Live Data	
EVERUS S1	/	FCW LDW	M4E	Function Test	FCW Drive
EVERUS S1	/	FCW LDW	M4E	Function Test	Left side lane departure warning
EVERUS S1	/	FCW LDW	M4E	Function Test	Right side lane departure warning
EVERUS S1	/	FCW LDW	M4E	Function Test	Indicator Drive
EVERUS S1	/	FCW LDW	M4E	Adjustment	
EVERUS S1	/	Instrument Display System (GAUGE)	M2C	Read codes	
EVERUS S1	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
EVERUS S1	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Read codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Read codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Read codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
EVERUS S1	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Read codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
EVERUS S1	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Customize	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
EVERUS S1	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Read codes	
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test

EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
EVERUS S1	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
EVERUS S1	/	IMA	M63	Read ECU Information	
EVERUS S1	/	IMA	M63	Read codes	
EVERUS S1	/	IMA	M63	Erase Codes	
EVERUS S1	/	IMA	M63	Read Freeze Frame Data	
EVERUS S1	/	IMA	M63	Read Live Data	
EVERUS S1	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
EVERUS S1	/	IMA	M63	Adjustment	SOC PRESET
EVERUS S1	/	IMA	M64	Read ECU Information	
EVERUS S1	/	IMA	M64	Read codes	
EVERUS S1	/	IMA	M64	Erase Codes	
EVERUS S1	/	IMA	M64	Read Freeze Frame Data	
EVERUS S1	/	IMA	M64	Read Live Data	
EVERUS S1	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
EVERUS S1	/	IMA	M64	Adjustment	SOC PRESET
EVERUS S1	/	IMA	M65	Read ECU Information	
EVERUS S1	/	IMA	M65	Read codes	
EVERUS S1	/	IMA	M65	Erase Codes	
EVERUS S1	/	IMA	M65	Read Freeze Frame Data	
EVERUS S1	/	IMA	M65	Read Live Data	
EVERUS S1	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
EVERUS S1	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
EVERUS S1	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
EVERUS S1	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
EVERUS S1	/	Intake Sounder Control System (ISC)	M6D	Read codes	
EVERUS S1	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
EVERUS S1	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
EVERUS S1	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Read ECU Information	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Read codes	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Erase Codes	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Read Live Data	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Adjustment	
EVERUS S1	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
EVERUS S1	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
EVERUS S1	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
EVERUS S1	/	i-SHIFT	0XB0	Read ECU Information	
EVERUS S1	/	i-SHIFT	0XB0	Read codes	
EVERUS S1	/	i-SHIFT	0XB0	Erase Codes	
EVERUS S1	/	i-SHIFT	0XB0	Read Live Data	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Read codes	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Self Check	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	History Data	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output

EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
EVERUS S1	/	Keyless Entry Control System (KAS)	M99	Registration	
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
EVERUS S1	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
EVERUS S1	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
EVERUS S1	/	Management ECU Module (ME)	M74	Read ECU Information	
EVERUS S1	/	Management ECU Module (ME)	M74	Read codes	
EVERUS S1	/	Management ECU Module (ME)	M74	Erase Codes	
EVERUS S1	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
EVERUS S1	/	Management ECU Module (ME)	M74	Read Live Data	
EVERUS S1	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
EVERUS S1	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
EVERUS S1	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
EVERUS S1	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Read codes	
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Customization	
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
EVERUS S1	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
EVERUS S1	/	Power Control Unit (PCU)	M83	Read ECU Information	
EVERUS S1	/	Power Control Unit (PCU)	M83	Read codes	
EVERUS S1	/	Power Control Unit (PCU)	M83	Erase Codes	
EVERUS S1	/	Power Control Unit (PCU)	M83	Read Live Data	
EVERUS S1	/	Power Control Unit (PCU)	M83	Self Check	
EVERUS S1	/	Power Control Unit (PCU)	M83	History Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Read codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Erase Codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Read Live Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
EVERUS S1	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
EVERUS S1	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Read codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Erase Codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Read Live Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test

EVERUS S1	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
EVERUS S1	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Read codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Erase Codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Read Live Data	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
EVERUS S1	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
EVERUS S1	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
EVERUS S1	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
EVERUS S1	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
EVERUS S1	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
EVERUS S1	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
EVERUS S1	/	PSR	M27	Read ECU Information	
EVERUS S1	/	PSR	M27	Read codes	
EVERUS S1	/	PSR	M27	Erase Codes	
EVERUS S1	/	PSR	M27	Read Live Data	
EVERUS S1	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
EVERUS S1	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
EVERUS S1	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
EVERUS S1	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
EVERUS S1	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
EVERUS S1	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
EVERUS S1	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
EVERUS S1	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
EVERUS S1	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
EVERUS S1	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
EVERUS S1	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
EVERUS S1	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
EVERUS S1	/	Remote starter (RS)	M90	System Check	
EVERUS S1	/	Remote starter (RS)	M90	HISTORY	
EVERUS S1	/	Remote starter (RS)	M90	Registration	
EVERUS S1	/	Seat load cell (SWS)	M6F	Read ECU Information	
EVERUS S1	/	Seat load cell (SWS)	M6F	Read codes	
EVERUS S1	/	Seat load cell (SWS)	M6F	Erase Codes	
EVERUS S1	/	Seat load cell (SWS)	M6F	Read Live Data	
EVERUS S1	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
EVERUS S1	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
EVERUS S1	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
EVERUS S1	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
EVERUS S1	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
EVERUS S1	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
EVERUS S1	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
EVERUS S1	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	



EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
EVERUS S1	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	History Data	
EVERUS S1	/	Groove track drive unit (SLOT ECU)	M98	System Information	
EVERUS S1	/	Airbag Control System (SRS)	M9F	Read ECU Information	
EVERUS S1	/	Airbag Control System (SRS)	M9F	Read codes	
EVERUS S1	/	Airbag Control System (SRS)	M9F	Erase Codes	
EVERUS S1	/	Airbag Control System (SRS)	M9F	Read Live Data	
EVERUS S1	/	Airbag Control System (SRS)	MA0	Read ECU Information	
EVERUS S1	/	Airbag Control System (SRS)	MA0	Read codes	
EVERUS S1	/	Airbag Control System (SRS)	MA0	Erase Codes	
EVERUS S1	/	Airbag Control System (SRS)	MA0	Read Live Data	
EVERUS S1	/	Airbag Control System (SRS)	MA1	Read ECU Information	
EVERUS S1	/	Airbag Control System (SRS)	MA1	Read codes	
EVERUS S1	/	Airbag Control System (SRS)	MA1	Erase Codes	
EVERUS S1	/	Airbag Control System (SRS)	MA1	Read Live Data	
EVERUS S1	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
EVERUS S1	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
EVERUS S1	/	Airbag Control System (SRS)	M2A	Read codes	
EVERUS S1	/	Airbag Control System (SRS)	M2A	Erase Codes	
EVERUS S1	/	Airbag Control System (SRS)	M2A	Read Live Data	
EVERUS S1	/	Airbag Control System (SRS)	M9C	Read ECU Information	
EVERUS S1	/	Airbag Control System (SRS)	M9C	Read codes	
EVERUS S1	/	Airbag Control System (SRS)	M9C	Erase Codes	
EVERUS S1	/	Airbag Control System (SRS)	M9C	Read Live Data	
EVERUS S1	/	Airbag Control System (SRS)	M9D	Read ECU Information	
EVERUS S1	/	Airbag Control System (SRS)	M9D	Read codes	
EVERUS S1	/	Airbag Control System (SRS)	M9D	Erase Codes	
EVERUS S1	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
EVERUS S1	/	Airbag Control System (SRS)	M9D	Read Live Data	
EVERUS S1	/	Airbag Control System (SRS)	M9D	Parameter Information	
EVERUS S1	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
EVERUS S1	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
EVERUS S1	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
EVERUS S1	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
EVERUS S1	/	Airbag Control System (SRS)	M9D	Function Test	
EVERUS S1	/	Airbag Control System (SRS)	M9D	System Information	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
EVERUS S1	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
EVERUS S1	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
EVERUS S1	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FCX	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FCX	/	Four-wheel steering control system (4WS)	M52	Read codes	
FCX	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
FCX	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FCX	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
FCX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FCX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FCX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FCX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FCX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FCX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FCX	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
FCX	/	Automatic shift control system (A/T)	M1E	Read codes	
FCX	/	Automatic shift control system (A/T)	M1E	Erase Codes	
FCX	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	

FCX	/	Automatic shift control system (A/T)	M1E	Read Live Data	
FCX	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FCX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FCX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FCX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FCX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FCX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FCX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FCX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FCX	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FCX	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
FCX	/	Automatic shift control system (A/T)	M3B	Read codes	
FCX	/	Automatic shift control system (A/T)	M3B	Erase Codes	
FCX	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FCX	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FCX	/	Automatic shift control system (A/T)	M3B	Read Live Data	
FCX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FCX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FCX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FCX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FCX	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
FCX	/	Automatic shift control system (A/T)	M3C	Read codes	
FCX	/	Automatic shift control system (A/T)	M3C	Erase Codes	
FCX	/	Automatic shift control system (A/T)	M81	Read ECU Information	
FCX	/	Automatic shift control system (A/T)	M81	Read codes	
FCX	/	Automatic shift control system (A/T)	M81	Erase Codes	
FCX	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FCX	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FCX	/	Automatic shift control system (A/T)	M81	Read Live Data	
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FCX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FCX	/	Automatic shift control system (A/T)	M82	Read ECU Information	
FCX	/	Automatic shift control system (A/T)	M82	Read codes	
FCX	/	Automatic shift control system (A/T)	M82	Erase Codes	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
FCX	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FCX	/	Active Engine Control Support System (ACM)	M06	Read codes	
FCX	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
FCX	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FCX	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
FCX	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
FCX	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FCX	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FCX	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FCX	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FCX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FCX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FCX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FCX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
FCX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
FCX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
FCX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
FCX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
FCX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
FCX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
FCX	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
FCX	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
FCX	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	

FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
FCX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
FCX	/	Transmission Control System (AT) M18	Read ECU Information	
FCX	/	Transmission Control System (AT) M18	Read codes	
FCX	/	Transmission Control System (AT) M18	Erase Codes	
FCX	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
FCX	/	Transmission Control System (AT) M18	Read Live Data	
FCX	/	Transmission Control System (AT) M18	Adjustment	
FCX	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
FCX	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
FCX	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
FCX	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
FCX	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
FCX	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FCX	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
FCX	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FCX	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
FCX	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
FCX	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
FCX	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
FCX	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
FCX	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
FCX	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read codes	
FCX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Oncoming Vehicle Detection
FCX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Preceding Vehicle Detection
FCX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FCX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FCX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset Operation
FCX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Returning Operation
FCX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Automatic Returning Distance
FCX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Manual Returning Time
FCX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset to default
FCX	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
FCX	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
FCX	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
FCX	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
FCX	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
FCX	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
FCX	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
FCX	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
FCX	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
FCX	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
FCX	/	BODY ELECTRICAL/e-Call MFF	Read codes	
FCX	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
FCX	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
FCX	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
FCX	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
FCX	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	
FCX	/	BODY ELECTRICAL/Gauges MFF	Read codes	
FCX	/	BODY ELECTRICAL/Gauges MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Gauges MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Gauges MFF	Function Test	Speedometer
FCX	/	BODY ELECTRICAL/Gauges MFF	Function Test	Tachometer
FCX	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Activation Indicator
FCX	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Indicator
FCX	/	BODY ELECTRICAL/Gauges MFF	Function Test	ABS INDICATOR
FCX	/	BODY ELECTRICAL/Gauges MFF	Function Test	EBD Indicator(Electronic Brake Display)
FCX	/	BODY ELECTRICAL/Gauges MFF	Function Test	Cruise Activation Indicator

FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FCX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FCX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FCX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FCX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FCX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FCX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FCX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FCX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FCX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FCX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FCX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FCX	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FCX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FCX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FCX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FCX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FCX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FCX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FCX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FCX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FCX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FCX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FCX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FCX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down

FCX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FCX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FCX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Security	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FCX	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FCX	/	BODY ELECTRICAL/Security	MFF	History Data	
FCX	/	BODY ELECTRICAL/Security	MFF	History Clear	
FCX	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FCX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FCX	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FCX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FCX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FCX	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FCX	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FCX	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FCX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FCX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FCX	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FCX	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FCX	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FCX	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
FCX	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FCX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FCX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FCX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FCX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FCX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FCX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FCX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FCX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FCX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FCX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FCX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FCX	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FCX	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
FCX	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FCX	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FCX	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FCX	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FCX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
FCX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
FCX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
FCX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
FCX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
FCX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
FCX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
FCX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
FCX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
FCX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
FCX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
FCX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
FCX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
FCX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
FCX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
FCX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
FCX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation

FCX	/	Promise Automatic Transmission Control System (CVT M33)	Read ECU Information		
FCX	/	Promise Automatic Transmission Control System (CVT M33)	Read codes		
FCX	/	Promise Automatic Transmission Control System (CVT M33)	Erase Codes		
FCX	/	Promise Automatic Transmission Control System (CVT M33)	Read Freeze Frame Data		
FCX	/	Promise Automatic Transmission Control System (CVT M33)	Read Live Data		
FCX	/	Promise Automatic Transmission Control System (CVT M33)	ECM/PCM Reset		
FCX	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid	
FCX	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)	
FCX	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)	
FCX	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn	
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information		
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes		
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes		
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data		
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data		
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	ECM/PCM Reset		
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid	
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)	
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)	
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn	
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A	
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B	
FCX	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P	
FCX	/	DBW	M34	Read ECU Information	
FCX	/	DBW	M34	Read codes	
FCX	/	DBW	M34	Erase Codes	
FCX	/	DBW	M34	Read Freeze Frame Data	
FCX	/	DBW	M34	Read Live Data	
FCX	/	DBW	M34	Inspection	Idle Speed Adjust
FCX	/	DBW	M34	Inspection	Throttle Test
FCX	/	DBW	M34	ECM Reset	
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FCX	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FCX	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FCX	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FCX	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FCX	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
FCX	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FCX	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FCX	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FCX	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FCX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FCX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FCX	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FCX	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FCX	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
FCX	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FCX	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FCX	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FCX	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FCX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FCX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FCX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FCX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FCX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FCX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FCX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FCX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FCX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FCX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FCX	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FCX	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FCX	/	Capacitor Control System (EDLC)	M12	Read codes	
FCX	/	Capacitor Control System (EDLC)	M12	Erase Codes	
FCX	/	Capacitor Control System (EDLC)	M12	Read Live Data	
FCX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FCX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FCX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FCX	/	Electronic Brake Control System (EPB)	M1F	Read codes	
FCX	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	

FCX	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FCX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FCX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FCX	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FCX	/	Electronic Brake Control System (EPB)	M3E	Read codes	
FCX	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FCX	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FCX	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FCX	/	Electric Powertrain / IMA	M66	Read ECU Information	
FCX	/	Electric Powertrain / IMA	M66	Read codes	
FCX	/	Electric Powertrain / IMA	M66	Erase Codes	
FCX	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FCX	/	Electric Powertrain / IMA	M66	Read Live Data	
FCX	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FCX	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FCX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FCX	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FCX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FCX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FCX	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FCX	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FCX	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FCX	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FCX	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FCX	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FCX	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FCX	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FCX	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FCX	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FCX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FCX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FCX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FCX	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FCX	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FCX	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FCX	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FCX	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FCX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FCX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FCX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FCX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FCX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FCX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FCX	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FCX	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FCX	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FCX	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FCX	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FCX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FCX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FCX	/	New energy battery (EV)	M44	Read ECU Information	
FCX	/	New energy battery (EV)	M44	Read codes	
FCX	/	New energy battery (EV)	M44	Erase Codes	
FCX	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FCX	/	New energy battery (EV)	M44	Read Live Data	
FCX	/	New energy battery (EV)	M44	Inspection	
FCX	/	New energy battery (EV)	M44	Adjustment	
FCX	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FCX	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FCX	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FCX	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FCX	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FCX	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FCX	/	Electronic vacuum pump (EVPS)	M22	Read codes	
FCX	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FCX	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FCX	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FCX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FCX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FCX	/	FCW LDW	M4E	Read ECU Information	
FCX	/	FCW LDW	M4E	Read codes	
FCX	/	FCW LDW	M4E	Erase Codes	
FCX	/	FCW LDW	M4E	Read Live Data	
FCX	/	FCW LDW	M4E	Function Test	FCW Drive
FCX	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FCX	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FCX	/	FCW LDW	M4E	Function Test	Indicator Drive
FCX	/	FCW LDW	M4E	Adjustment	
FCX	/	Instrument Display System (GAUGE)	M2C	Read codes	
FCX	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FCX	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FCX	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FCX	/	Anti-lock brake control system (ABS)	M01	Read codes	
FCX	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FCX	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FCX	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FCX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FCX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FCX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FCX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FCX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FCX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FCX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA

FCX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FCX	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FCX	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FCX	/	Anti-lock brake control system (ABS)	M02	Read codes	
FCX	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FCX	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FCX	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FCX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FCX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FCX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FCX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FCX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FCX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FCX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FCX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FCX	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FCX	/	Anti-lock brake control system (ABS)	M03	Read codes	
FCX	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
FCX	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
FCX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FCX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FCX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FCX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FCX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FCX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FCX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FCX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FCX	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
FCX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FCX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FCX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FCX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FCX	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FCX	/	Anti-lock brake control system (ABS)	M19	Read codes	
FCX	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
FCX	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
FCX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FCX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FCX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FCX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FCX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FCX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FCX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FCX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FCX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FCX	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FCX	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FCX	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FCX	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FCX	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
FCX	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FCX	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FCX	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FCX	/	Intelligent Parking Control System (SPS)	M9B	Customize	
FCX	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FCX	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FCX	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FCX	/	Hydraulic booster control system (HBS)	M5F	Read codes	
FCX	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FCX	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FCX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FCX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FCX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FCX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FCX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FCX	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FCX	/	IMA	M63	Read ECU Information	
FCX	/	IMA	M63	Read codes	
FCX	/	IMA	M63	Erase Codes	
FCX	/	IMA	M63	Read Freeze Frame Data	
FCX	/	IMA	M63	Read Live Data	
FCX	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FCX	/	IMA	M63	Adjustment	SOC PRESET
FCX	/	IMA	M64	Read ECU Information	
FCX	/	IMA	M64	Read codes	
FCX	/	IMA	M64	Erase Codes	
FCX	/	IMA	M64	Read Freeze Frame Data	
FCX	/	IMA	M64	Read Live Data	
FCX	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FCX	/	IMA	M64	Adjustment	SOC PRESET
FCX	/	IMA	M65	Read ECU Information	
FCX	/	IMA	M65	Read codes	
FCX	/	IMA	M65	Erase Codes	
FCX	/	IMA	M65	Read Freeze Frame Data	
FCX	/	IMA	M65	Read Live Data	
FCX	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FCX	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FCX	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FCX	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FCX	/	Intake Sounder Control System (ISC)	M6D	Read codes	
FCX	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FCX	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FCX	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	



FCX	/	Night Vision System (INVS)	0XB1	Read ECU Information	
FCX	/	Night Vision System (INVS)	0XB1	Read codes	
FCX	/	Night Vision System (INVS)	0XB1	Erase Codes	
FCX	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FCX	/	Night Vision System (INVS)	0XB1	Read Live Data	
FCX	/	Night Vision System (INVS)	0XB1	Adjustment	
FCX	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FCX	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FCX	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FCX	/	i-SHIFT	0XB0	Read ECU Information	
FCX	/	i-SHIFT	0XB0	Read codes	
FCX	/	i-SHIFT	0XB0	Erase Codes	
FCX	/	i-SHIFT	0XB0	Read Live Data	
FCX	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FCX	/	Keyless Entry Control System (KAS)	M99	Read codes	
FCX	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FCX	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FCX	/	Keyless Entry Control System (KAS)	M99	Self Check	
FCX	/	Keyless Entry Control System (KAS)	M99	History Data	
FCX	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FCX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FCX	/	Keyless Entry Control System (KAS)	M99	Registration	
FCX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FCX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FCX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FCX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FCX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FCX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FCX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FCX	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
FCX	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
FCX	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
FCX	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
FCX	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
FCX	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
FCX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
FCX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
FCX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
FCX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
FCX	/	Management ECU Module (ME)	M74	Read ECU Information	
FCX	/	Management ECU Module (ME)	M74	Read codes	
FCX	/	Management ECU Module (ME)	M74	Erase Codes	
FCX	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FCX	/	Management ECU Module (ME)	M74	Read Live Data	

FCX	/	Multi-view camera and parking assist system (MVC/P, M26	Read ECU Information		
FCX	/	Multi-view camera and parking assist system (MVC/P, M26	Read codes		
FCX	/	Multi-view camera and parking assist system (MVC/P, M26	Erase Codes		
FCX	/	Multi-view camera and parking assist system (MVC/P, M26	Read Live Data		
FCX	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FCX	/	Multi-view camera system (MVCS)	M7A	Read codes	
FCX	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
FCX	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
FCX	/	Multi-view camera system (MVCS)	M7A	Customization	
FCX	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FCX	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FCX	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
FCX	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FCX	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FCX	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FCX	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FCX	/	Power Control Unit (PCU)	M83	Read ECU Information	
FCX	/	Power Control Unit (PCU)	M83	Read codes	
FCX	/	Power Control Unit (PCU)	M83	Erase Codes	
FCX	/	Power Control Unit (PCU)	M83	Read Live Data	
FCX	/	Power Control Unit (PCU)	M83	Self Check	
FCX	/	Power Control Unit (PCU)	M83	History Data	
FCX	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
FCX	/	Engine Control System (PGM-FI)	M23	Read codes	
FCX	/	Engine Control System (PGM-FI)	M23	Erase Codes	
FCX	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
FCX	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FCX	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FCX	/	Engine Control System (PGM-FI)	M23	Read Live Data	
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FCX	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FCX	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FCX	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FCX	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FCX	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
FCX	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FCX	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
FCX	/	Engine Control System (PGM-FI)	M50	Read codes	
FCX	/	Engine Control System (PGM-FI)	M50	Erase Codes	
FCX	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
FCX	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FCX	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FCX	/	Engine Control System (PGM-FI)	M50	Read Live Data	
FCX	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FCX	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FCX	/	Engine Control System (PGM-FI)	M50	Inspection	VTC TEST
FCX	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FCX	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FCX	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
FCX	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FCX	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
FCX	/	Engine Control System (PGM-FI)	M86	Read codes	
FCX	/	Engine Control System (PGM-FI)	M86	Erase Codes	
FCX	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
FCX	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
FCX	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FCX	/	Engine Control System (PGM-FI)	M86	Read Live Data	
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FCX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FCX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FCX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST

FCX	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FCX	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FCX	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
FCX	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FCX	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
FCX	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
FCX	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
FCX	/	PSR	M27	Read ECU Information	
FCX	/	PSR	M27	Read codes	
FCX	/	PSR	M27	Erase Codes	
FCX	/	PSR	M27	Read Live Data	
FCX	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FCX	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FCX	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FCX	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FCX	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FCX	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
FCX	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
FCX	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
FCX	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
FCX	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
FCX	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
FCX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FCX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FCX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FCX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FCX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FCX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FCX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FCX	/	Remote starter (RS)	M90	System Check	
FCX	/	Remote starter (RS)	M90	HISTORY	
FCX	/	Remote starter (RS)	M90	Registration	
FCX	/	Seat load cell (SWS)	M6F	Read ECU Information	
FCX	/	Seat load cell (SWS)	M6F	Read codes	
FCX	/	Seat load cell (SWS)	M6F	Erase Codes	
FCX	/	Seat load cell (SWS)	M6F	Read Live Data	
FCX	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FCX	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FCX	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FCX	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
FCX	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FCX	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FCX	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FCX	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FCX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FCX	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FCX	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
FCX	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FCX	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FCX	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
FCX	/	Groove track drive unit (SLOT ECU)	M98	History Data	
FCX	/	Groove track drive unit (SLOT ECU)	M98	System Information	
FCX	/	Airbag Control System (SRS)	M9F	Read ECU Information	
FCX	/	Airbag Control System (SRS)	M9F	Read codes	
FCX	/	Airbag Control System (SRS)	M9F	Erase Codes	
FCX	/	Airbag Control System (SRS)	M9F	Read Live Data	
FCX	/	Airbag Control System (SRS)	MA0	Read ECU Information	
FCX	/	Airbag Control System (SRS)	MA0	Read codes	
FCX	/	Airbag Control System (SRS)	MA0	Erase Codes	
FCX	/	Airbag Control System (SRS)	MA0	Read Live Data	
FCX	/	Airbag Control System (SRS)	MA1	Read ECU Information	
FCX	/	Airbag Control System (SRS)	MA1	Read codes	
FCX	/	Airbag Control System (SRS)	MA1	Erase Codes	
FCX	/	Airbag Control System (SRS)	MA1	Read Live Data	
FCX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FCX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FCX	/	Airbag Control System (SRS)	M2A	Read codes	
FCX	/	Airbag Control System (SRS)	M2A	Erase Codes	
FCX	/	Airbag Control System (SRS)	M2A	Read Live Data	
FCX	/	Airbag Control System (SRS)	M9C	Read ECU Information	

FCX	/	Airbag Control System (SRS)	M9C	Read codes	
FCX	/	Airbag Control System (SRS)	M9C	Erase Codes	
FCX	/	Airbag Control System (SRS)	M9C	Read Live Data	
FCX	/	Airbag Control System (SRS)	M9D	Read ECU Information	
FCX	/	Airbag Control System (SRS)	M9D	Read codes	
FCX	/	Airbag Control System (SRS)	M9D	Erase Codes	
FCX	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FCX	/	Airbag Control System (SRS)	M9D	Read Live Data	
FCX	/	Airbag Control System (SRS)	M9D	Parameter Information	
FCX	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FCX	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FCX	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FCX	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FCX	/	Airbag Control System (SRS)	M9D	Function Test	
FCX	/	Airbag Control System (SRS)	M9D	System Information	
FCX	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FCX	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FCX	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FCX	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FCX	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FCX	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FCX	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FCX	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FCX	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FCX	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
FCX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FCX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FCX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FCX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FCX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FCX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FCX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FCX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FCX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FCX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FCX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FCX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FCX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FCX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FCX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FCX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FCX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FCX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FCX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FCX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FCX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FIT	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FIT	/	Four-wheel steering control system (4WS)	M52	Read codes	
FIT	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
FIT	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FIT	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
FIT	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FIT	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FIT	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FIT	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FIT	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FIT	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FIT	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
FIT	/	Automatic shift control system (A/T)	M1E	Read codes	
FIT	/	Automatic shift control system (A/T)	M1E	Erase Codes	
FIT	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FIT	/	Automatic shift control system (A/T)	M1E	Read Live Data	
FIT	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FIT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FIT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FIT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FIT	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FIT	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
FIT	/	Automatic shift control system (A/T)	M3B	Read codes	
FIT	/	Automatic shift control system (A/T)	M3B	Erase Codes	
FIT	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FIT	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FIT	/	Automatic shift control system (A/T)	M3B	Read Live Data	
FIT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FIT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FIT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FIT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FIT	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
FIT	/	Automatic shift control system (A/T)	M3C	Read codes	
FIT	/	Automatic shift control system (A/T)	M3C	Erase Codes	
FIT	/	Automatic shift control system (A/T)	M81	Read ECU Information	
FIT	/	Automatic shift control system (A/T)	M81	Read codes	
FIT	/	Automatic shift control system (A/T)	M81	Erase Codes	
FIT	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FIT	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FIT	/	Automatic shift control system (A/T)	M81	Read Live Data	
FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B

FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FIT	/	Automatic shift control system (A/T)	M82	Read ECU Information	
FIT	/	Automatic shift control system (A/T)	M82	Read codes	
FIT	/	Automatic shift control system (A/T)	M82	Erase Codes	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
FIT	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FIT	/	Active Engine Control Support System (ACM)	M06	Read codes	
FIT	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
FIT	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FIT	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
FIT	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
FIT	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FIT	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FIT	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FIT	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FIT	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FIT	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FIT	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FIT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read ECU Information	
FIT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read codes	
FIT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Erase Codes	
FIT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Freeze Frame Data	
FIT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Live Data	
FIT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Function Test	Damper Force Operation Test
FIT	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Adjustment	Damper Stroke Calibration
FIT	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
FIT	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
FIT	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
FIT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
FIT	/	Transmission Control System (AT)	M18	Read ECU Information	
FIT	/	Transmission Control System (AT)	M18	Read codes	
FIT	/	Transmission Control System (AT)	M18	Erase Codes	
FIT	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FIT	/	Transmission Control System (AT)	M18	Read Live Data	
FIT	/	Transmission Control System (AT)	M18	Adjustment	
FIT	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
FIT	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
FIT	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
FIT	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
FIT	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
FIT	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FIT	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
FIT	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FIT	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message

FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
FIT	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FIT	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FIT	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FIT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FIT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FIT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FIT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
FIT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
FIT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
FIT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
FIT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
FIT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FIT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FIT	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FIT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FIT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FIT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FIT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FIT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FIT	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
FIT	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FIT	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FIT	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FIT	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FIT	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FIT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FIT	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FIT	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FIT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FIT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FIT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	

FIT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FIT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FIT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FIT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FIT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FIT	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FIT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FIT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FIT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FIT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FIT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FIT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FIT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FIT	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FIT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FIT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FIT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FIT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FIT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FIT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Security	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FIT	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FIT	/	BODY ELECTRICAL/Security	MFF	History Data	
FIT	/	BODY ELECTRICAL/Security	MFF	History Clear	
FIT	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FIT	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FIT	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FIT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper

FIT	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FIT	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FIT	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FIT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FIT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FIT	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FIT	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FIT	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FIT	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
FIT	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FIT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FIT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FIT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FIT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FIT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FIT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FIT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FIT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FIT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FIT	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FIT	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FIT	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FIT	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
FIT	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FIT	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FIT	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FIT	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FIT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
FIT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
FIT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
FIT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
FIT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
FIT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
FIT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
FIT	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
FIT	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
FIT	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
FIT	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
FIT	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
FIT	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
FIT	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
FIT	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
FIT	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
FIT	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
FIT	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
FIT	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
FIT	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
FIT	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
FIT	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
FIT	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
FIT	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
FIT	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
FIT	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
FIT	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
FIT	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
FIT	/	DBW	M34	Read ECU Information	
FIT	/	DBW	M34	Read codes	
FIT	/	DBW	M34	Erase Codes	
FIT	/	DBW	M34	Read Freeze Frame Data	
FIT	/	DBW	M34	Read Live Data	
FIT	/	DBW	M34	Inspection	Idle Speed Adjust
FIT	/	DBW	M34	Inspection	Throttle Test
FIT	/	DBW	M34	ECM Reset	
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	



FIT	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FIT	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FIT	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FIT	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FIT	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FIT	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
FIT	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FIT	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FIT	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FIT	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FIT	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FIT	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FIT	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FIT	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FIT	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
FIT	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FIT	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FIT	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FIT	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FIT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FIT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FIT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FIT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FIT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FIT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FIT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FIT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FIT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FIT	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FIT	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FIT	/	Capacitor Control System (EDLC)	M12	Read codes	
FIT	/	Capacitor Control System (EDLC)	M12	Erase Codes	
FIT	/	Capacitor Control System (EDLC)	M12	Read Live Data	
FIT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FIT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FIT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FIT	/	Electronic Brake Control System (EPB)	M1F	Read codes	
FIT	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FIT	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FIT	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FIT	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FIT	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FIT	/	Electronic Brake Control System (EPB)	M3E	Read codes	
FIT	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FIT	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FIT	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FIT	/	Electric Powertrain / IMA	M66	Read ECU Information	
FIT	/	Electric Powertrain / IMA	M66	Read codes	
FIT	/	Electric Powertrain / IMA	M66	Erase Codes	
FIT	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FIT	/	Electric Powertrain / IMA	M66	Read Live Data	
FIT	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FIT	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FIT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FIT	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FIT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FIT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FIT	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FIT	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FIT	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FIT	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FIT	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FIT	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FIT	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FIT	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FIT	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FIT	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FIT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FIT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FIT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF

FIT	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FIT	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FIT	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FIT	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FIT	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FIT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FIT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FIT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FIT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FIT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FIT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FIT	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FIT	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FIT	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FIT	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FIT	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FIT	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FIT	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FIT	/	New energy battery (EV)	M44	Read ECU Information	
FIT	/	New energy battery (EV)	M44	Read codes	
FIT	/	New energy battery (EV)	M44	Erase Codes	
FIT	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FIT	/	New energy battery (EV)	M44	Read Live Data	
FIT	/	New energy battery (EV)	M44	Inspection	
FIT	/	New energy battery (EV)	M44	Adjustment	
FIT	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FIT	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FIT	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FIT	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FIT	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FIT	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FIT	/	Electronic vacuum pump (EVPS)	M22	Read codes	
FIT	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FIT	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FIT	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FIT	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FIT	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FIT	/	FCW LDW	M4E	Read ECU Information	
FIT	/	FCW LDW	M4E	Read codes	
FIT	/	FCW LDW	M4E	Erase Codes	
FIT	/	FCW LDW	M4E	Read Live Data	
FIT	/	FCW LDW	M4E	Function Test	FCW Drive
FIT	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FIT	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FIT	/	FCW LDW	M4E	Function Test	Indicator Drive
FIT	/	FCW LDW	M4E	Adjustment	
FIT	/	Instrument Display System (GAUGE)	M2C	Read codes	
FIT	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FIT	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FIT	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FIT	/	Anti-lock brake control system (ABS)	M01	Read codes	
FIT	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FIT	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FIT	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FIT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FIT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FIT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FIT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FIT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FIT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FIT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FIT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FIT	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FIT	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FIT	/	Anti-lock brake control system (ABS)	M02	Read codes	
FIT	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FIT	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FIT	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FIT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FIT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FIT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FIT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FIT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FIT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FIT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FIT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FIT	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FIT	/	Anti-lock brake control system (ABS)	M03	Read codes	
FIT	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
FIT	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
FIT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FIT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FIT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FIT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FIT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FIT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FIT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FIT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FIT	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
FIT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FIT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FIT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FIT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser

FIT	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FIT	/	Anti-lock brake control system (ABS)	M19	Read codes	
FIT	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
FIT	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
FIT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FIT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FIT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FIT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FIT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FIT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FIT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FIT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FIT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FIT	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FIT	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FIT	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FIT	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FIT	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
FIT	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FIT	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FIT	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FIT	/	Intelligent Parking Control System (SPS)	M9B	Customize	
FIT	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FIT	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FIT	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FIT	/	Hydraulic booster control system (HBS)	M5F	Read codes	
FIT	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FIT	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FIT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FIT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FIT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FIT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FIT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FIT	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FIT	/	IMA	M63	Read ECU Information	
FIT	/	IMA	M63	Read codes	
FIT	/	IMA	M63	Erase Codes	
FIT	/	IMA	M63	Read Freeze Frame Data	
FIT	/	IMA	M63	Read Live Data	
FIT	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FIT	/	IMA	M63	Adjustment	SOC PRESET
FIT	/	IMA	M64	Read ECU Information	
FIT	/	IMA	M64	Read codes	
FIT	/	IMA	M64	Erase Codes	
FIT	/	IMA	M64	Read Freeze Frame Data	
FIT	/	IMA	M64	Read Live Data	
FIT	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FIT	/	IMA	M64	Adjustment	SOC PRESET
FIT	/	IMA	M65	Read ECU Information	
FIT	/	IMA	M65	Read codes	
FIT	/	IMA	M65	Erase Codes	
FIT	/	IMA	M65	Read Freeze Frame Data	
FIT	/	IMA	M65	Read Live Data	
FIT	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FIT	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FIT	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FIT	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FIT	/	Intake Sounder Control System (ISC)	M6D	Read codes	
FIT	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FIT	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FIT	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FIT	/	Night Vision System (INVS)	0XB1	Read ECU Information	
FIT	/	Night Vision System (INVS)	0XB1	Read codes	
FIT	/	Night Vision System (INVS)	0XB1	Erase Codes	
FIT	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FIT	/	Night Vision System (INVS)	0XB1	Read Live Data	
FIT	/	Night Vision System (INVS)	0XB1	Adjustment	
FIT	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FIT	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FIT	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FIT	/	i-SHIFT	0XB0	Read ECU Information	
FIT	/	i-SHIFT	0XB0	Read codes	
FIT	/	i-SHIFT	0XB0	Erase Codes	
FIT	/	i-SHIFT	0XB0	Read Live Data	
FIT	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FIT	/	Keyless Entry Control System (KAS)	M99	Read codes	
FIT	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FIT	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FIT	/	Keyless Entry Control System (KAS)	M99	Self Check	
FIT	/	Keyless Entry Control System (KAS)	M99	History Data	
FIT	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCED Terminal) Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving

FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FIT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FIT	/	Keyless Entry Control System (KAS)	M99	Registration	
FIT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FIT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FIT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FIT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FIT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FIT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FIT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FIT	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
FIT	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
FIT	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
FIT	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
FIT	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
FIT	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
FIT	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
FIT	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
FIT	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
FIT	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
FIT	/	Management ECU Module (ME)	M74	Read ECU Information	
FIT	/	Management ECU Module (ME)	M74	Read codes	
FIT	/	Management ECU Module (ME)	M74	Erase Codes	
FIT	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FIT	/	Management ECU Module (ME)	M74	Read Live Data	
FIT	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
FIT	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
FIT	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
FIT	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
FIT	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FIT	/	Multi-view camera system (MVCS)	M7A	Read codes	
FIT	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
FIT	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
FIT	/	Multi-view camera system (MVCS)	M7A	Customization	
FIT	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FIT	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FIT	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
FIT	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FIT	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FIT	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FIT	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FIT	/	Power Control Unit (PCU)	M83	Read ECU Information	
FIT	/	Power Control Unit (PCU)	M83	Read codes	
FIT	/	Power Control Unit (PCU)	M83	Erase Codes	
FIT	/	Power Control Unit (PCU)	M83	Read Live Data	
FIT	/	Power Control Unit (PCU)	M83	Self Check	
FIT	/	Power Control Unit (PCU)	M83	History Data	
FIT	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
FIT	/	Engine Control System (PGM-FI)	M23	Read codes	
FIT	/	Engine Control System (PGM-FI)	M23	Erase Codes	
FIT	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
FIT	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FIT	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FIT	/	Engine Control System (PGM-FI)	M23	Read Live Data	
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST

FIT	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FIT	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FIT	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FIT	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FIT	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FIT	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
FIT	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FIT	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
FIT	/	Engine Control System (PGM-FI)	M50	Read codes	
FIT	/	Engine Control System (PGM-FI)	M50	Erase Codes	
FIT	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
FIT	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FIT	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FIT	/	Engine Control System (PGM-FI)	M50	Read Live Data	
FIT	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FIT	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FIT	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FIT	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FIT	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
FIT	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FIT	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
FIT	/	Engine Control System (PGM-FI)	M86	Read codes	
FIT	/	Engine Control System (PGM-FI)	M86	Erase Codes	
FIT	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
FIT	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
FIT	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FIT	/	Engine Control System (PGM-FI)	M86	Read Live Data	
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FIT	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FIT	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FIT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FIT	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FIT	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FIT	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
FIT	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FIT	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
FIT	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
FIT	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
FIT	/	PSR	M27	Read ECU Information	
FIT	/	PSR	M27	Read codes	
FIT	/	PSR	M27	Erase Codes	
FIT	/	PSR	M27	Read Live Data	
FIT	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FIT	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FIT	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FIT	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FIT	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FIT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
FIT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
FIT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
FIT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
FIT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
FIT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
FIT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FIT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FIT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FIT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FIT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FIT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FIT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FIT	/	Remote starter (RS)	M90	System Check	
FIT	/	Remote starter (RS)	M90	HISTORY	
FIT	/	Remote starter (RS)	M90	Registration	

FIT	/	Seat load cell (SWS)	M6F	Read ECU Information	
FIT	/	Seat load cell (SWS)	M6F	Read codes	
FIT	/	Seat load cell (SWS)	M6F	Erase Codes	
FIT	/	Seat load cell (SWS)	M6F	Read Live Data	
FIT	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FIT	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FIT	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FIT	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
FIT	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FIT	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FIT	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FIT	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FIT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FIT	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FIT	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
FIT	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FIT	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FIT	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
FIT	/	Groove track drive unit (SLOT ECU)	M98	History Data	
FIT	/	Groove track drive unit (SLOT ECU)	M98	System Information	
FIT	/	Airbag Control System (SRS)	M9F	Read ECU Information	
FIT	/	Airbag Control System (SRS)	M9F	Read codes	
FIT	/	Airbag Control System (SRS)	M9F	Erase Codes	
FIT	/	Airbag Control System (SRS)	M9F	Read Live Data	
FIT	/	Airbag Control System (SRS)	MA0	Read ECU Information	
FIT	/	Airbag Control System (SRS)	MA0	Read codes	
FIT	/	Airbag Control System (SRS)	MA0	Erase Codes	
FIT	/	Airbag Control System (SRS)	MA0	Read Live Data	
FIT	/	Airbag Control System (SRS)	MA1	Read ECU Information	
FIT	/	Airbag Control System (SRS)	MA1	Read codes	
FIT	/	Airbag Control System (SRS)	MA1	Erase Codes	
FIT	/	Airbag Control System (SRS)	MA1	Read Live Data	
FIT	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FIT	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FIT	/	Airbag Control System (SRS)	M2A	Read codes	
FIT	/	Airbag Control System (SRS)	M2A	Erase Codes	
FIT	/	Airbag Control System (SRS)	M2A	Read Live Data	
FIT	/	Airbag Control System (SRS)	M9C	Read ECU Information	
FIT	/	Airbag Control System (SRS)	M9C	Read codes	
FIT	/	Airbag Control System (SRS)	M9C	Erase Codes	
FIT	/	Airbag Control System (SRS)	M9C	Read Live Data	
FIT	/	Airbag Control System (SRS)	M9D	Read ECU Information	
FIT	/	Airbag Control System (SRS)	M9D	Read codes	
FIT	/	Airbag Control System (SRS)	M9D	Erase Codes	
FIT	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FIT	/	Airbag Control System (SRS)	M9D	Read Live Data	
FIT	/	Airbag Control System (SRS)	M9D	Parameter Information	
FIT	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FIT	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FIT	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FIT	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FIT	/	Airbag Control System (SRS)	M9D	Function Test	
FIT	/	Airbag Control System (SRS)	M9D	System Information	
FIT	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FIT	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FIT	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FIT	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FIT	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FIT	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FIT	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FIT	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FIT	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FIT	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
FIT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FIT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FIT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FIT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FIT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FIT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FIT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	

FIT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FIT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FIT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FIT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FIT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FIT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FIT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FIT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FIT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FIT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FIT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FIT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FIT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FIT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FIT ARIA	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FIT ARIA	/	Four-wheel steering control system (4WS)	M52	Read codes	
FIT ARIA	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
FIT ARIA	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FIT ARIA	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
FIT ARIA	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FIT ARIA	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FIT ARIA	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FIT ARIA	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FIT ARIA	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FIT ARIA	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FIT ARIA	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
FIT ARIA	/	Automatic shift control system (A/T)	M1E	Read codes	
FIT ARIA	/	Automatic shift control system (A/T)	M1E	Erase Codes	
FIT ARIA	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FIT ARIA	/	Automatic shift control system (A/T)	M1E	Read Live Data	
FIT ARIA	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FIT ARIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FIT ARIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FIT ARIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT ARIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT ARIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT ARIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT ARIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FIT ARIA	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FIT ARIA	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
FIT ARIA	/	Automatic shift control system (A/T)	M3B	Read codes	
FIT ARIA	/	Automatic shift control system (A/T)	M3B	Erase Codes	
FIT ARIA	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FIT ARIA	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FIT ARIA	/	Automatic shift control system (A/T)	M3B	Read Live Data	
FIT ARIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FIT ARIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FIT ARIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FIT ARIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FIT ARIA	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
FIT ARIA	/	Automatic shift control system (A/T)	M3C	Read codes	
FIT ARIA	/	Automatic shift control system (A/T)	M3C	Erase Codes	
FIT ARIA	/	Automatic shift control system (A/T)	M81	Read ECU Information	
FIT ARIA	/	Automatic shift control system (A/T)	M81	Read codes	
FIT ARIA	/	Automatic shift control system (A/T)	M81	Erase Codes	
FIT ARIA	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FIT ARIA	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FIT ARIA	/	Automatic shift control system (A/T)	M81	Read Live Data	
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT ARIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FIT ARIA	/	Automatic shift control system (A/T)	M82	Read ECU Information	
FIT ARIA	/	Automatic shift control system (A/T)	M82	Read codes	
FIT ARIA	/	Automatic shift control system (A/T)	M82	Erase Codes	
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
FIT ARIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT

FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
FIT ARIA /	Active Engine Control Support System (ACM) M06	Read ECU Information	
FIT ARIA /	Active Engine Control Support System (ACM) M06	Read codes	
FIT ARIA /	Active Engine Control Support System (ACM) M06	Erase Codes	
FIT ARIA /	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
FIT ARIA /	Active Engine Control Support System (ACM) M06	Read Live Data	
FIT ARIA /	Active Engine Control Support System (ACM) M06	ACM Reset	
FIT ARIA /	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
FIT ARIA /	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
FIT ARIA /	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FIT ARIA /	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
FIT ARIA /	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
FIT ARIA /	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
FIT ARIA /	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
FIT ARIA /	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
FIT ARIA /	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
FIT ARIA /	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
FIT ARIA /	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
FIT ARIA /	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
FIT ARIA /	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
FIT ARIA /	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
FIT ARIA /	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
FIT ARIA /	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
FIT ARIA /	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
FIT ARIA /	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
FIT ARIA /	Transmission Control System (AT) M18	Read ECU Information	
FIT ARIA /	Transmission Control System (AT) M18	Read codes	
FIT ARIA /	Transmission Control System (AT) M18	Erase Codes	
FIT ARIA /	Transmission Control System (AT) M18	Read Freeze Frame Data	
FIT ARIA /	Transmission Control System (AT) M18	Read Live Data	
FIT ARIA /	Transmission Control System (AT) M18	Adjustment	
FIT ARIA /	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
FIT ARIA /	Active Torque Converter Control System (ATTS) M0E	Read codes	
FIT ARIA /	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
FIT ARIA /	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
FIT ARIA /	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
FIT ARIA /	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FIT ARIA /	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
FIT ARIA /	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FIT ARIA /	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
FIT ARIA /	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
FIT ARIA /	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
FIT ARIA /	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
FIT ARIA /	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
FIT ARIA /	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
FIT ARIA /	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
FIT ARIA /	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
FIT ARIA /	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
FIT ARIA /	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
FIT ARIA /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
FIT ARIA /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
FIT ARIA /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
FIT ARIA /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
FIT ARIA /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
FIT ARIA /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FIT ARIA /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FIT ARIA /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
FIT ARIA /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
FIT ARIA /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
FIT ARIA /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
FIT ARIA /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
FIT ARIA /	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
FIT ARIA /	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
FIT ARIA /	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
FIT ARIA /	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
FIT ARIA /	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning



FIT ARIA	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FIT ARIA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FIT ARIA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FIT ARIA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FIT ARIA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FIT ARIA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FIT ARIA	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FIT ARIA	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FIT ARIA	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FIT ARIA	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FIT ARIA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FIT ARIA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FIT ARIA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FIT ARIA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FIT ARIA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FIT ARIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FIT ARIA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	

FIT ARIA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FIT ARIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FIT ARIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FIT ARIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FIT ARIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FIT ARIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FIT ARIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FIT ARIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FIT ARIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FIT ARIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FIT ARIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FIT ARIA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FIT ARIA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Security	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FIT ARIA	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FIT ARIA	/	BODY ELECTRICAL/Security	MFF	History Data	
FIT ARIA	/	BODY ELECTRICAL/Security	MFF	History Clear	
FIT ARIA	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FIT ARIA	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FIT ARIA	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT ARIA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FIT ARIA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT ARIA	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FIT ARIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FIT ARIA	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FIT ARIA	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FIT ARIA	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FIT ARIA	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
FIT ARIA	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FIT ARIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FIT ARIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FIT ARIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FIT ARIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FIT ARIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FIT ARIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FIT ARIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FIT ARIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA

FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FIT ARIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FIT ARIA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FIT ARIA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FIT ARIA	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FIT ARIA	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
FIT ARIA	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FIT ARIA	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FIT ARIA	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FIT ARIA	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FIT ARIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read ECU Information	
FIT ARIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read codes	
FIT ARIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Erase Codes	
FIT ARIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read Freeze Frame Data	
FIT ARIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read Live Data	
FIT ARIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	CMBS (CMS) ACTIVATION HISTORY	
FIT ARIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Miscellaneous Test	RADAR AIMING
FIT ARIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Miscellaneous Test	CMBS Brake
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCMC Reset	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCMC Reset	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCMC Reset	
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
FIT ARIA	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
FIT ARIA	/	DBW	M34	Read ECU Information	
FIT ARIA	/	DBW	M34	Read codes	
FIT ARIA	/	DBW	M34	Erase Codes	
FIT ARIA	/	DBW	M34	Read Freeze Frame Data	
FIT ARIA	/	DBW	M34	Read Live Data	
FIT ARIA	/	DBW	M34	Inspection	Idle Speed Adjust
FIT ARIA	/	DBW	M34	Inspection	Throttle Test
FIT ARIA	/	DBW	M34	ECM Reset	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	

FIT ARIA	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FIT ARIA	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FIT ARIA	/	Capacitor Control System (EDLC)	M12	Read codes	
FIT ARIA	/	Capacitor Control System (EDLC)	M12	Erase Codes	
FIT ARIA	/	Capacitor Control System (EDLC)	M12	Read Live Data	
FIT ARIA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FIT ARIA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FIT ARIA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FIT ARIA	/	Electronic Brake Control System (EPB)	M1F	Read codes	
FIT ARIA	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FIT ARIA	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FIT ARIA	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FIT ARIA	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FIT ARIA	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FIT ARIA	/	Electronic Brake Control System (EPB)	M3E	Read codes	
FIT ARIA	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FIT ARIA	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FIT ARIA	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FIT ARIA	/	Electric Powertrain / IMA	M66	Read ECU Information	
FIT ARIA	/	Electric Powertrain / IMA	M66	Read codes	
FIT ARIA	/	Electric Powertrain / IMA	M66	Erase Codes	
FIT ARIA	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FIT ARIA	/	Electric Powertrain / IMA	M66	Read Live Data	
FIT ARIA	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FIT ARIA	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FIT ARIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FIT ARIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FIT ARIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FIT ARIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FIT ARIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FIT ARIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FIT ARIA	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FIT ARIA	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FIT ARIA	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FIT ARIA	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FIT ARIA	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FIT ARIA	/	New energy battery (EV)	M44	Read ECU Information	
FIT ARIA	/	New energy battery (EV)	M44	Read codes	
FIT ARIA	/	New energy battery (EV)	M44	Erase Codes	
FIT ARIA	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FIT ARIA	/	New energy battery (EV)	M44	Read Live Data	
FIT ARIA	/	New energy battery (EV)	M44	Inspection	
FIT ARIA	/	New energy battery (EV)	M44	Adjustment	
FIT ARIA	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FIT ARIA	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FIT ARIA	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FIT ARIA	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FIT ARIA	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FIT ARIA	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FIT ARIA	/	Electronic vacuum pump (EVPS)	M22	Read codes	

FIT ARIA	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FIT ARIA	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FIT ARIA	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FIT ARIA	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FIT ARIA	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FIT ARIA	/	FCW LDW	M4E	Read ECU Information	
FIT ARIA	/	FCW LDW	M4E	Read codes	
FIT ARIA	/	FCW LDW	M4E	Erase Codes	
FIT ARIA	/	FCW LDW	M4E	Read Live Data	
FIT ARIA	/	FCW LDW	M4E	Function Test	FCW Drive
FIT ARIA	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FIT ARIA	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FIT ARIA	/	FCW LDW	M4E	Function Test	Indicator Drive
FIT ARIA	/	FCW LDW	M4E	Adjustment	
FIT ARIA	/	Instrument Display System (GAUGE)	M2C	Read codes	
FIT ARIA	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FIT ARIA	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Read codes	
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Read codes	
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Read codes	
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FIT ARIA	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Read codes	
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FIT ARIA	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FIT ARIA	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FIT ARIA	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
FIT ARIA	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FIT ARIA	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FIT ARIA	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FIT ARIA	/	Intelligent Parking Control System (SPS)	M9B	Customize	
FIT ARIA	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FIT ARIA	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FIT ARIA	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FIT ARIA	/	Hydraulic booster control system (HBS)	M5F	Read codes	
FIT ARIA	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FIT ARIA	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FIT ARIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FIT ARIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FIT ARIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FIT ARIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test

FIT ARIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FIT ARIA	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FIT ARIA	/	IMA	M63	Read ECU Information	
FIT ARIA	/	IMA	M63	Read codes	
FIT ARIA	/	IMA	M63	Erase Codes	
FIT ARIA	/	IMA	M63	Read Freeze Frame Data	
FIT ARIA	/	IMA	M63	Read Live Data	
FIT ARIA	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FIT ARIA	/	IMA	M63	Adjustment	SOC PRESET
FIT ARIA	/	IMA	M64	Read ECU Information	
FIT ARIA	/	IMA	M64	Read codes	
FIT ARIA	/	IMA	M64	Erase Codes	
FIT ARIA	/	IMA	M64	Read Freeze Frame Data	
FIT ARIA	/	IMA	M64	Read Live Data	
FIT ARIA	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FIT ARIA	/	IMA	M64	Adjustment	SOC PRESET
FIT ARIA	/	IMA	M65	Read ECU Information	
FIT ARIA	/	IMA	M65	Read codes	
FIT ARIA	/	IMA	M65	Erase Codes	
FIT ARIA	/	IMA	M65	Read Freeze Frame Data	
FIT ARIA	/	IMA	M65	Read Live Data	
FIT ARIA	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FIT ARIA	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FIT ARIA	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FIT ARIA	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FIT ARIA	/	Intake Sounder Control System (ISC)	M6D	Read codes	
FIT ARIA	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FIT ARIA	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FIT ARIA	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FIT ARIA	/	Night Vision System (INVS)	0XB1	Read ECU Information	
FIT ARIA	/	Night Vision System (INVS)	0XB1	Read codes	
FIT ARIA	/	Night Vision System (INVS)	0XB1	Erase Codes	
FIT ARIA	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FIT ARIA	/	Night Vision System (INVS)	0XB1	Read Live Data	
FIT ARIA	/	Night Vision System (INVS)	0XB1	Adjustment	
FIT ARIA	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FIT ARIA	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FIT ARIA	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FIT ARIA	/	i-SHIFT	0XB0	Read ECU Information	
FIT ARIA	/	i-SHIFT	0XB0	Read codes	
FIT ARIA	/	i-SHIFT	0XB0	Erase Codes	
FIT ARIA	/	i-SHIFT	0XB0	Read Live Data	
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Read codes	
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Self Check	
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	History Data	
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IM OCD Terminal) Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving

FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FIT ARIA	/	Keyless Entry Control System (KAS)	M99	Registration	
FIT ARIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FIT ARIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FIT ARIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FIT ARIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FIT ARIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FIT ARIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FIT ARIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FIT ARIA	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
FIT ARIA	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
FIT ARIA	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
FIT ARIA	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
FIT ARIA	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
FIT ARIA	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
FIT ARIA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
FIT ARIA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
FIT ARIA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
FIT ARIA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
FIT ARIA	/	Management ECU Module (ME)	M74	Read ECU Information	
FIT ARIA	/	Management ECU Module (ME)	M74	Read codes	
FIT ARIA	/	Management ECU Module (ME)	M74	Erase Codes	
FIT ARIA	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FIT ARIA	/	Management ECU Module (ME)	M74	Read Live Data	
FIT ARIA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
FIT ARIA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
FIT ARIA	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
FIT ARIA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
FIT ARIA	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FIT ARIA	/	Multi-view camera system (MVCS)	M7A	Read codes	
FIT ARIA	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
FIT ARIA	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
FIT ARIA	/	Multi-view camera system (MVCS)	M7A	Customization	
FIT ARIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FIT ARIA	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FIT ARIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
FIT ARIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FIT ARIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FIT ARIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FIT ARIA	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FIT ARIA	/	Power Control Unit (PCU)	M83	Read ECU Information	
FIT ARIA	/	Power Control Unit (PCU)	M83	Read codes	
FIT ARIA	/	Power Control Unit (PCU)	M83	Erase Codes	
FIT ARIA	/	Power Control Unit (PCU)	M83	Read Live Data	
FIT ARIA	/	Power Control Unit (PCU)	M83	Self Check	
FIT ARIA	/	Power Control Unit (PCU)	M83	History Data	
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Read codes	
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Erase Codes	
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FIT ARIA	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Read Live Data	
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FIT ARIA	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FIT ARIA	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
FIT ARIA	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FIT ARIA	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
FIT ARIA	/	Engine Control System (PGM-FI)	M50	Read codes	
FIT ARIA	/	Engine Control System (PGM-FI)	M50	Erase Codes	
FIT ARIA	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
FIT ARIA	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FIT ARIA	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FIT ARIA	/	Engine Control System (PGM-FI)	M50	Read Live Data	
FIT ARIA	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FIT ARIA	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FIT ARIA	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FIT ARIA	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M50	VIN CHECK	

FIT ARIA	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Read codes	
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Erase Codes	
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
FIT ARIA	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Read Live Data	
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FIT ARIA	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FIT ARIA	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
FIT ARIA	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FIT ARIA	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
FIT ARIA	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
FIT ARIA	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
FIT ARIA	/	PSR	M27	Read ECU Information	
FIT ARIA	/	PSR	M27	Read codes	
FIT ARIA	/	PSR	M27	Erase Codes	
FIT ARIA	/	PSR	M27	Read Live Data	
FIT ARIA	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FIT ARIA	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FIT ARIA	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FIT ARIA	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FIT ARIA	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FIT ARIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
FIT ARIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
FIT ARIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
FIT ARIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
FIT ARIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
FIT ARIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
FIT ARIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FIT ARIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FIT ARIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FIT ARIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FIT ARIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FIT ARIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FIT ARIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FIT ARIA	/	Remote starter (RS)	M90	System Check	
FIT ARIA	/	Remote starter (RS)	M90	HISTORY	
FIT ARIA	/	Remote starter (RS)	M90	Registration	
FIT ARIA	/	Seat load cell (SWS)	M6F	Read ECU Information	
FIT ARIA	/	Seat load cell (SWS)	M6F	Read codes	
FIT ARIA	/	Seat load cell (SWS)	M6F	Erase Codes	
FIT ARIA	/	Seat load cell (SWS)	M6F	Read Live Data	
FIT ARIA	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FIT ARIA	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FIT ARIA	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FIT ARIA	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
FIT ARIA	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FIT ARIA	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FIT ARIA	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FIT ARIA	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	



FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FIT ARIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FIT ARIA	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FIT ARIA	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
FIT ARIA	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FIT ARIA	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FIT ARIA	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
FIT ARIA	/	Groove track drive unit (SLOT ECU)	M98	History Data	
FIT ARIA	/	Groove track drive unit (SLOT ECU)	M98	System Information	
FIT ARIA	/	Airbag Control System (SRS)	M9F	Read ECU Information	
FIT ARIA	/	Airbag Control System (SRS)	M9F	Read codes	
FIT ARIA	/	Airbag Control System (SRS)	M9F	Erase Codes	
FIT ARIA	/	Airbag Control System (SRS)	M9F	Read Live Data	
FIT ARIA	/	Airbag Control System (SRS)	MA0	Read ECU Information	
FIT ARIA	/	Airbag Control System (SRS)	MA0	Read codes	
FIT ARIA	/	Airbag Control System (SRS)	MA0	Erase Codes	
FIT ARIA	/	Airbag Control System (SRS)	MA0	Read Live Data	
FIT ARIA	/	Airbag Control System (SRS)	MA1	Read ECU Information	
FIT ARIA	/	Airbag Control System (SRS)	MA1	Read codes	
FIT ARIA	/	Airbag Control System (SRS)	MA1	Erase Codes	
FIT ARIA	/	Airbag Control System (SRS)	MA1	Read Live Data	
FIT ARIA	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FIT ARIA	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FIT ARIA	/	Airbag Control System (SRS)	M2A	Read codes	
FIT ARIA	/	Airbag Control System (SRS)	M2A	Erase Codes	
FIT ARIA	/	Airbag Control System (SRS)	M2A	Read Live Data	
FIT ARIA	/	Airbag Control System (SRS)	M9C	Read ECU Information	
FIT ARIA	/	Airbag Control System (SRS)	M9C	Read codes	
FIT ARIA	/	Airbag Control System (SRS)	M9C	Erase Codes	
FIT ARIA	/	Airbag Control System (SRS)	M9C	Read Live Data	
FIT ARIA	/	Airbag Control System (SRS)	M9D	Read ECU Information	
FIT ARIA	/	Airbag Control System (SRS)	M9D	Read codes	
FIT ARIA	/	Airbag Control System (SRS)	M9D	Erase Codes	
FIT ARIA	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FIT ARIA	/	Airbag Control System (SRS)	M9D	Read Live Data	
FIT ARIA	/	Airbag Control System (SRS)	M9D	Parameter Information	
FIT ARIA	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FIT ARIA	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FIT ARIA	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FIT ARIA	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FIT ARIA	/	Airbag Control System (SRS)	M9D	Function Test	
FIT ARIA	/	Airbag Control System (SRS)	M9D	System Information	
FIT ARIA	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FIT ARIA	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FIT ARIA	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FIT ARIA	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FIT ARIA	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FIT ARIA	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FIT ARIA	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FIT ARIA	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FIT ARIA	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FIT ARIA	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FIT ARIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FIT ARIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FIT ARIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FIT ARIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FIT ARIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FIT ARIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FIT ARIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FIT ARIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FIT ARIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FIT EV	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FIT EV	/	Four-wheel steering control system (4WS)	M52	Read codes	
FIT EV	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
FIT EV	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FIT EV	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
FIT EV	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FIT EV	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FIT EV	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FIT EV	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FIT EV	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FIT EV	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FIT EV	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
FIT EV	/	Automatic shift control system (A/T)	M1E	Read codes	
FIT EV	/	Automatic shift control system (A/T)	M1E	Erase Codes	
FIT EV	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FIT EV	/	Automatic shift control system (A/T)	M1E	Read Live Data	
FIT EV	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FIT EV	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests

FIT EV	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FIT EV	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT EV	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT EV	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT EV	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Solenoid Valve Control
FIT EV	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FIT EV	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FIT EV	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
FIT EV	/	Automatic shift control system (A/T)	M3B	Read codes	
FIT EV	/	Automatic shift control system (A/T)	M3B	Erase Codes	
FIT EV	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FIT EV	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FIT EV	/	Automatic shift control system (A/T)	M3B	Read Live Data	
FIT EV	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FIT EV	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FIT EV	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FIT EV	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FIT EV	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
FIT EV	/	Automatic shift control system (A/T)	M3C	Read codes	
FIT EV	/	Automatic shift control system (A/T)	M3C	Erase Codes	
FIT EV	/	Automatic shift control system (A/T)	M81	Read ECU Information	
FIT EV	/	Automatic shift control system (A/T)	M81	Read codes	
FIT EV	/	Automatic shift control system (A/T)	M81	Erase Codes	
FIT EV	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FIT EV	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FIT EV	/	Automatic shift control system (A/T)	M81	Read Live Data	
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT EV	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FIT EV	/	Automatic shift control system (A/T)	M82	Read ECU Information	
FIT EV	/	Automatic shift control system (A/T)	M82	Read codes	
FIT EV	/	Automatic shift control system (A/T)	M82	Erase Codes	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
FIT EV	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FIT EV	/	Active Engine Control Support System (ACM)	M06	Read codes	
FIT EV	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
FIT EV	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FIT EV	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
FIT EV	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
FIT EV	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FIT EV	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FIT EV	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FIT EV	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FIT EV	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FIT EV	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FIT EV	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FIT EV	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
FIT EV	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
FIT EV	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
FIT EV	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
FIT EV	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
FIT EV	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
FIT EV	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
FIT EV	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
FIT EV	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
FIT EV	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)

FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	Indicator Light
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	Information Display
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Function Test	Alarm Test
FIT EV	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M18	Adjustment	Radar aiming
FIT EV	/	Transmission Control System (AT)	M18	Read ECU Information	
FIT EV	/	Transmission Control System (AT)	M18	Read codes	
FIT EV	/	Transmission Control System (AT)	M18	Erase Codes	
FIT EV	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FIT EV	/	Transmission Control System (AT)	M18	Read Live Data	
FIT EV	/	Transmission Control System (AT)	M18	Adjustment	
FIT EV	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
FIT EV	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
FIT EV	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
FIT EV	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
FIT EV	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
FIT EV	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FIT EV	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
FIT EV	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FIT EV	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
FIT EV	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FIT EV	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FIT EV	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FIT EV	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FIT EV	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FIT EV	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FIT EV	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
FIT EV	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
FIT EV	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
FIT EV	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
FIT EV	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
FIT EV	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FIT EV	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FIT EV	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FIT EV	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FIT EV	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FIT EV	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FIT EV	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FIT EV	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FIT EV	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FIT EV	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FIT EV	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator

FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FIT EV	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FIT EV	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FIT EV	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FIT EV	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FIT EV	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FIT EV	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FIT EV	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FIT EV	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FIT EV	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FIT EV	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FIT EV	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FIT EV	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FIT EV	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FIT EV	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FIT EV	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FIT EV	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FIT EV	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FIT EV	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up

FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FIT EV	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FIT EV	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Security	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FIT EV	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FIT EV	/	BODY ELECTRICAL/Security	MFF	History Data	
FIT EV	/	BODY ELECTRICAL/Security	MFF	History Clear	
FIT EV	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FIT EV	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FIT EV	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT EV	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FIT EV	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT EV	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FIT EV	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FIT EV	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FIT EV	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FIT EV	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FIT EV	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
FIT EV	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FIT EV	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FIT EV	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FIT EV	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FIT EV	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FIT EV	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FIT EV	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FIT EV	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FIT EV	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FIT EV	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FIT EV	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FIT EV	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FIT EV	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FIT EV	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
FIT EV	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FIT EV	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FIT EV	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FIT EV	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FIT EV	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
FIT EV	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
FIT EV	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
FIT EV	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
FIT EV	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
FIT EV	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
FIT EV	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
FIT EV	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
FIT EV	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
FIT EV	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
FIT EV	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
FIT EV	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
FIT EV	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
FIT EV	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
FIT EV	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
FIT EV	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
FIT EV	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
FIT EV	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
FIT EV	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
FIT EV	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	

FIT EV	/	Promise Automatic Transmission Control System (CVT M33)	Read Freeze Frame Data		
FIT EV	/	Promise Automatic Transmission Control System (CVT M33)	Read Live Data		
FIT EV	/	Promise Automatic Transmission Control System (CVT M33)	ECMPCM Reset		
FIT EV	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid	
FIT EV	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)	
FIT EV	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)	
FIT EV	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn	
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information		
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes		
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes		
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data		
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data		
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	ECMPCM Reset		
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid	
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)	
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)	
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn	
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A	
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B	
FIT EV	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P	
FIT EV	/	DBW	Read ECU Information		
FIT EV	/	DBW	M34		
FIT EV	/	DBW	M34	Read codes	
FIT EV	/	DBW	M34	Erase Codes	
FIT EV	/	DBW	M34	Read Freeze Frame Data	
FIT EV	/	DBW	M34	Read Live Data	
FIT EV	/	DBW	M34	Inspection	Idle Speed Adjust
FIT EV	/	DBW	M34	Inspection	Throttle Test
FIT EV	/	DBW	M34	ECM Reset	
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FIT EV	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FIT EV	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FIT EV	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
FIT EV	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FIT EV	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FIT EV	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FIT EV	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FIT EV	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FIT EV	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FIT EV	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FIT EV	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FIT EV	/	Capacitor Control System (EDLC)	M12	Read codes	
FIT EV	/	Capacitor Control System (EDLC)	M12	Erase Codes	
FIT EV	/	Capacitor Control System (EDLC)	M12	Read Live Data	
FIT EV	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FIT EV	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FIT EV	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FIT EV	/	Electronic Brake Control System (EPB)	M1F	Read codes	
FIT EV	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FIT EV	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FIT EV	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FIT EV	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode

FIT EV	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FIT EV	/	Electronic Brake Control System (EPB)	M3E	Read codes	
FIT EV	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FIT EV	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FIT EV	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FIT EV	/	Electric Powertrain / IMA	M66	Read ECU Information	
FIT EV	/	Electric Powertrain / IMA	M66	Read codes	
FIT EV	/	Electric Powertrain / IMA	M66	Erase Codes	
FIT EV	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FIT EV	/	Electric Powertrain / IMA	M66	Read Live Data	
FIT EV	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FIT EV	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FIT EV	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FIT EV	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FIT EV	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FIT EV	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FIT EV	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FIT EV	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FIT EV	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FIT EV	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FIT EV	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FIT EV	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FIT EV	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FIT EV	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FIT EV	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FIT EV	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FIT EV	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FIT EV	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FIT EV	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FIT EV	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FIT EV	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FIT EV	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FIT EV	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FIT EV	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FIT EV	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FIT EV	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FIT EV	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FIT EV	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FIT EV	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FIT EV	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FIT EV	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FIT EV	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FIT EV	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FIT EV	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FIT EV	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FIT EV	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FIT EV	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FIT EV	/	New energy battery (EV)	M44	Read ECU Information	
FIT EV	/	New energy battery (EV)	M44	Read codes	
FIT EV	/	New energy battery (EV)	M44	Erase Codes	
FIT EV	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FIT EV	/	New energy battery (EV)	M44	Read Live Data	
FIT EV	/	New energy battery (EV)	M44	Inspection	
FIT EV	/	New energy battery (EV)	M44	Adjustment	
FIT EV	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FIT EV	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FIT EV	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FIT EV	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FIT EV	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FIT EV	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FIT EV	/	Electronic vacuum pump (EVPS)	M22	Read codes	
FIT EV	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FIT EV	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FIT EV	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FIT EV	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FIT EV	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FIT EV	/	FCW LDW	M4E	Read ECU Information	
FIT EV	/	FCW LDW	M4E	Read codes	
FIT EV	/	FCW LDW	M4E	Erase Codes	
FIT EV	/	FCW LDW	M4E	Read Live Data	
FIT EV	/	FCW LDW	M4E	Function Test	FCW Drive
FIT EV	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FIT EV	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FIT EV	/	FCW LDW	M4E	Function Test	Indicator Drive
FIT EV	/	FCW LDW	M4E	Adjustment	
FIT EV	/	Instrument Display System (GAUGE)	M2C	Read codes	
FIT EV	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FIT EV	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FIT EV	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FIT EV	/	Anti-lock brake control system (ABS)	M01	Read codes	
FIT EV	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FIT EV	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FIT EV	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FIT EV	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FIT EV	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FIT EV	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FIT EV	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FIT EV	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FIT EV	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	

FIT EV	/	Anti-lock brake control system (ABS)	M02	Read codes	
FIT EV	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FIT EV	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FIT EV	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FIT EV	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FIT EV	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FIT EV	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FIT EV	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FIT EV	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FIT EV	/	Anti-lock brake control system (ABS)	M03	Read codes	
FIT EV	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
FIT EV	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
FIT EV	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FIT EV	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FIT EV	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FIT EV	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FIT EV	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
FIT EV	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FIT EV	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FIT EV	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FIT EV	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FIT EV	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FIT EV	/	Anti-lock brake control system (ABS)	M19	Read codes	
FIT EV	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
FIT EV	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
FIT EV	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FIT EV	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FIT EV	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FIT EV	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FIT EV	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FIT EV	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FIT EV	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FIT EV	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FIT EV	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FIT EV	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FIT EV	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
FIT EV	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FIT EV	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FIT EV	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FIT EV	/	Intelligent Parking Control System (SPS)	M9B	Customize	
FIT EV	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FIT EV	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FIT EV	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FIT EV	/	Hydraulic booster control system (HBS)	M5F	Read codes	
FIT EV	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FIT EV	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FIT EV	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FIT EV	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FIT EV	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FIT EV	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FIT EV	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FIT EV	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FIT EV	/	IMA	M63	Read ECU Information	
FIT EV	/	IMA	M63	Read codes	
FIT EV	/	IMA	M63	Erase Codes	
FIT EV	/	IMA	M63	Read Freeze Frame Data	
FIT EV	/	IMA	M63	Read Live Data	
FIT EV	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FIT EV	/	IMA	M63	Adjustment	SOC PRESET
FIT EV	/	IMA	M64	Read ECU Information	
FIT EV	/	IMA	M64	Read codes	
FIT EV	/	IMA	M64	Erase Codes	
FIT EV	/	IMA	M64	Read Freeze Frame Data	
FIT EV	/	IMA	M64	Read Live Data	
FIT EV	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FIT EV	/	IMA	M64	Adjustment	SOC PRESET
FIT EV	/	IMA	M65	Read ECU Information	
FIT EV	/	IMA	M65	Read codes	
FIT EV	/	IMA	M65	Erase Codes	
FIT EV	/	IMA	M65	Read Freeze Frame Data	
FIT EV	/	IMA	M65	Read Live Data	
FIT EV	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FIT EV	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FIT EV	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FIT EV	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FIT EV	/	Intake Sounder Control System (ISC)	M6D	Read codes	
FIT EV	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FIT EV	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FIT EV	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FIT EV	/	Night Vision System (INVS)	0XB1	Read ECU Information	
FIT EV	/	Night Vision System (INVS)	0XB1	Read codes	
FIT EV	/	Night Vision System (INVS)	0XB1	Erase Codes	



FIT EV	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FIT EV	/	Night Vision System (INVS)	0XB1	Read Live Data	
FIT EV	/	Night Vision System (INVS)	0XB1	Adjustment	
FIT EV	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FIT EV	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FIT EV	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FIT EV	/	i-SHIFT	0XB0	Read ECU Information	
FIT EV	/	i-SHIFT	0XB0	Read codes	
FIT EV	/	i-SHIFT	0XB0	Erase Codes	
FIT EV	/	i-SHIFT	0XB0	Read Live Data	
FIT EV	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FIT EV	/	Keyless Entry Control System (KAS)	M99	Read codes	
FIT EV	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FIT EV	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FIT EV	/	Keyless Entry Control System (KAS)	M99	Self Check	
FIT EV	/	Keyless Entry Control System (KAS)	M99	History Data	
FIT EV	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FIT EV	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FIT EV	/	Keyless Entry Control System (KAS)	M99	Registration	
FIT EV	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FIT EV	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FIT EV	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FIT EV	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FIT EV	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FIT EV	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FIT EV	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FIT EV	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
FIT EV	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
FIT EV	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
FIT EV	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
FIT EV	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
FIT EV	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
FIT EV	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
FIT EV	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
FIT EV	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
FIT EV	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
FIT EV	/	Management ECU Module (ME)	M74	Read ECU Information	
FIT EV	/	Management ECU Module (ME)	M74	Read codes	
FIT EV	/	Management ECU Module (ME)	M74	Erase Codes	
FIT EV	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FIT EV	/	Management ECU Module (ME)	M74	Read Live Data	
FIT EV	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
FIT EV	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
FIT EV	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	

FIT EV	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
FIT EV	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FIT EV	/	Multi-view camera system (MVCS)	M7A	Read codes	
FIT EV	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
FIT EV	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
FIT EV	/	Multi-view camera system (MVCS)	M7A	Customization	
FIT EV	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FIT EV	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FIT EV	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
FIT EV	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FIT EV	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FIT EV	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FIT EV	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FIT EV	/	Power Control Unit (PCU)	M83	Read ECU Information	
FIT EV	/	Power Control Unit (PCU)	M83	Read codes	
FIT EV	/	Power Control Unit (PCU)	M83	Erase Codes	
FIT EV	/	Power Control Unit (PCU)	M83	Read Live Data	
FIT EV	/	Power Control Unit (PCU)	M83	Self Check	
FIT EV	/	Power Control Unit (PCU)	M83	History Data	
FIT EV	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
FIT EV	/	Engine Control System (PGM-FI)	M23	Read codes	
FIT EV	/	Engine Control System (PGM-FI)	M23	Erase Codes	
FIT EV	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
FIT EV	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FIT EV	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FIT EV	/	Engine Control System (PGM-FI)	M23	Read Live Data	
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FIT EV	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FIT EV	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FIT EV	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FIT EV	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FIT EV	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
FIT EV	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FIT EV	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
FIT EV	/	Engine Control System (PGM-FI)	M50	Read codes	
FIT EV	/	Engine Control System (PGM-FI)	M50	Erase Codes	
FIT EV	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
FIT EV	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FIT EV	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FIT EV	/	Engine Control System (PGM-FI)	M50	Read Live Data	
FIT EV	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FIT EV	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FIT EV	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FIT EV	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FIT EV	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
FIT EV	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FIT EV	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
FIT EV	/	Engine Control System (PGM-FI)	M86	Read codes	
FIT EV	/	Engine Control System (PGM-FI)	M86	Erase Codes	
FIT EV	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
FIT EV	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
FIT EV	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FIT EV	/	Engine Control System (PGM-FI)	M86	Read Live Data	
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FIT EV	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FIT EV	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FIT EV	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FIT EV	/	Engine Control System (PGM-FI)	M86	VIN CHECK	

FIT EV	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FIT EV	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
FIT EV	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
FIT EV	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
FIT EV	/	PSR	M27	Read ECU Information	
FIT EV	/	PSR	M27	Read codes	
FIT EV	/	PSR	M27	Erase Codes	
FIT EV	/	PSR	M27	Read Live Data	
FIT EV	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FIT EV	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FIT EV	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FIT EV	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FIT EV	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FIT EV	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
FIT EV	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
FIT EV	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
FIT EV	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
FIT EV	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
FIT EV	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
FIT EV	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FIT EV	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FIT EV	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FIT EV	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FIT EV	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FIT EV	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FIT EV	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FIT EV	/	Remote starter (RS)	M90	System Check	
FIT EV	/	Remote starter (RS)	M90	HISTORY	
FIT EV	/	Remote starter (RS)	M90	Registration	
FIT EV	/	Seat load cell (SWS)	M6F	Read ECU Information	
FIT EV	/	Seat load cell (SWS)	M6F	Read codes	
FIT EV	/	Seat load cell (SWS)	M6F	Erase Codes	
FIT EV	/	Seat load cell (SWS)	M6F	Read Live Data	
FIT EV	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FIT EV	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FIT EV	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FIT EV	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
FIT EV	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FIT EV	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FIT EV	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FIT EV	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FIT EV	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FIT EV	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FIT EV	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
FIT EV	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FIT EV	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FIT EV	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
FIT EV	/	Groove track drive unit (SLOT ECU)	M98	History Data	
FIT EV	/	Groove track drive unit (SLOT ECU)	M98	System Information	
FIT EV	/	Airbag Control System (SRS)	M9F	Read ECU Information	
FIT EV	/	Airbag Control System (SRS)	M9F	Read codes	
FIT EV	/	Airbag Control System (SRS)	M9F	Erase Codes	
FIT EV	/	Airbag Control System (SRS)	M9F	Read Live Data	
FIT EV	/	Airbag Control System (SRS)	MA0	Read ECU Information	
FIT EV	/	Airbag Control System (SRS)	MA0	Read codes	
FIT EV	/	Airbag Control System (SRS)	MA0	Erase Codes	
FIT EV	/	Airbag Control System (SRS)	MA0	Read Live Data	
FIT EV	/	Airbag Control System (SRS)	MA1	Read ECU Information	
FIT EV	/	Airbag Control System (SRS)	MA1	Read codes	
FIT EV	/	Airbag Control System (SRS)	MA1	Erase Codes	
FIT EV	/	Airbag Control System (SRS)	MA1	Read Live Data	
FIT EV	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FIT EV	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FIT EV	/	Airbag Control System (SRS)	M2A	Read codes	
FIT EV	/	Airbag Control System (SRS)	M2A	Erase Codes	
FIT EV	/	Airbag Control System (SRS)	M2A	Read Live Data	
FIT EV	/	Airbag Control System (SRS)	M9C	Read ECU Information	
FIT EV	/	Airbag Control System (SRS)	M9C	Read codes	
FIT EV	/	Airbag Control System (SRS)	M9C	Erase Codes	
FIT EV	/	Airbag Control System (SRS)	M9C	Read Live Data	

FIT EV	/	Airbag Control System (SRS)	M9D	Read ECU Information	
FIT EV	/	Airbag Control System (SRS)	M9D	Read codes	
FIT EV	/	Airbag Control System (SRS)	M9D	Erase Codes	
FIT EV	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FIT EV	/	Airbag Control System (SRS)	M9D	Read Live Data	
FIT EV	/	Airbag Control System (SRS)	M9D	Parameter Information	
FIT EV	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FIT EV	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FIT EV	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FIT EV	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FIT EV	/	Airbag Control System (SRS)	M9D	Function Test	
FIT EV	/	Airbag Control System (SRS)	M9D	System Information	
FIT EV	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FIT EV	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FIT EV	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FIT EV	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FIT EV	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FIT EV	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FIT EV	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FIT EV	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FIT EV	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FIT EV	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FIT EV	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FIT EV	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FIT EV	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FIT EV	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FIT EV	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FIT EV	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FIT EV	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FIT EV	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FIT EV	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FIT HYBRID	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FIT HYBRID	/	Four-wheel steering control system (4WS)	M52	Read codes	
FIT HYBRID	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
FIT HYBRID	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FIT HYBRID	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
FIT HYBRID	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FIT HYBRID	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FIT HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FIT HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FIT HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FIT HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	Read codes	
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	Erase Codes	
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	Read Live Data	
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FIT HYBRID	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FIT HYBRID	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
FIT HYBRID	/	Automatic shift control system (A/T)	M3B	Read codes	
FIT HYBRID	/	Automatic shift control system (A/T)	M3B	Erase Codes	
FIT HYBRID	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FIT HYBRID	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FIT HYBRID	/	Automatic shift control system (A/T)	M3B	Read Live Data	
FIT HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FIT HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FIT HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FIT HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FIT HYBRID	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
FIT HYBRID	/	Automatic shift control system (A/T)	M3C	Read codes	
FIT HYBRID	/	Automatic shift control system (A/T)	M3C	Erase Codes	
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Read ECU Information	
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Read codes	
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Erase Codes	
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FIT HYBRID	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Read Live Data	
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E

FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FIT HYBRID	/	Automatic shift control system (A/T)	M82	Read ECU Information	
FIT HYBRID	/	Automatic shift control system (A/T)	M82	Read codes	
FIT HYBRID	/	Automatic shift control system (A/T)	M82	Erase Codes	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
FIT HYBRID	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FIT HYBRID	/	Active Engine Control Support System (ACM)	M06	Read codes	
FIT HYBRID	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
FIT HYBRID	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FIT HYBRID	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
FIT HYBRID	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
FIT HYBRID	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FIT HYBRID	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FIT HYBRID	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FIT HYBRID	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FIT HYBRID	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FIT HYBRID	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FIT HYBRID	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FIT HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
FIT HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
FIT HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
FIT HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
FIT HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
FIT HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
FIT HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
FIT HYBRID	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
FIT HYBRID	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
FIT HYBRID	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
FIT HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
FIT HYBRID	/	Transmission Control System (AT)	M18	Read ECU Information	
FIT HYBRID	/	Transmission Control System (AT)	M18	Read codes	
FIT HYBRID	/	Transmission Control System (AT)	M18	Erase Codes	
FIT HYBRID	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FIT HYBRID	/	Transmission Control System (AT)	M18	Read Live Data	
FIT HYBRID	/	Transmission Control System (AT)	M18	Adjustment	
FIT HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
FIT HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
FIT HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
FIT HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
FIT HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
FIT HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FIT HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
FIT HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FIT HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message

FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
FIT HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FIT HYBRID	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FIT HYBRID	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FIT HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FIT HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FIT HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FIT HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
FIT HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
FIT HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
FIT HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
FIT HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
FIT HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FIT HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FIT HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FIT HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FIT HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FIT HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FIT HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FIT HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FIT HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FIT HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FIT HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FIT HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FIT HYBRID	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FIT HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	

FIT HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FIT HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FIT HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FIT HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FIT HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FIT HYBRID	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FIT HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FIT HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FIT HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FIT HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FIT HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FIT HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FIT HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FIT HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FIT HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FIT HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FIT HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FIT HYBRID	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Security	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FIT HYBRID	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FIT HYBRID	/	BODY ELECTRICAL/Security	MFF	History Data	
FIT HYBRID	/	BODY ELECTRICAL/Security	MFF	History Clear	
FIT HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FIT HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FIT HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FIT HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT HYBRID	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	

FIT HYBRID	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FIT HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FIT HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FIT HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FIT HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FIT HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
FIT HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FIT HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FIT HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FIT HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FIT HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FIT HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FIT HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FIT HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FIT HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FIT HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FIT HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FIT HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FIT HYBRID	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FIT HYBRID	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FIT HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FIT HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
FIT HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FIT HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FIT HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FIT HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FIT HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Read ECU Information	
FIT HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Read codes	
FIT HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Erase Codes	
FIT HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Read Freeze Frame Data	
FIT HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Read Live Data	
FIT HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
FIT HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
FIT HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
FIT HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
FIT HYBRID	/	DBW	M34	Read ECU Information	
FIT HYBRID	/	DBW	M34	Read codes	
FIT HYBRID	/	DBW	M34	Erase Codes	
FIT HYBRID	/	DBW	M34	Read Freeze Frame Data	
FIT HYBRID	/	DBW	M34	Read Live Data	
FIT HYBRID	/	DBW	M34	Inspection	Idle Speed Adjust
FIT HYBRID	/	DBW	M34	Inspection	Throttle Test
FIT HYBRID	/	DBW	M34	ECM Reset	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	



FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FIT HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FIT HYBRID	/	Capacitor Control System (EDLC)	M12	Read codes	
FIT HYBRID	/	Capacitor Control System (EDLC)	M12	Erase Codes	
FIT HYBRID	/	Capacitor Control System (EDLC)	M12	Read Live Data	
FIT HYBRID	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FIT HYBRID	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FIT HYBRID	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FIT HYBRID	/	Electronic Brake Control System (EPB)	M1F	Read codes	
FIT HYBRID	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FIT HYBRID	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FIT HYBRID	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FIT HYBRID	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FIT HYBRID	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FIT HYBRID	/	Electronic Brake Control System (EPB)	M3E	Read codes	
FIT HYBRID	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FIT HYBRID	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FIT HYBRID	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FIT HYBRID	/	Electric Powertrain / IMA	M66	Read ECU Information	
FIT HYBRID	/	Electric Powertrain / IMA	M66	Read codes	
FIT HYBRID	/	Electric Powertrain / IMA	M66	Erase Codes	
FIT HYBRID	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FIT HYBRID	/	Electric Powertrain / IMA	M66	Read Live Data	
FIT HYBRID	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FIT HYBRID	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FIT HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FIT HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FIT HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FIT HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FIT HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FIT HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FIT HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FIT HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FIT HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FIT HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	

FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FIT HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FIT HYBRID	/	New energy battery (EV)	M44	Read ECU Information	
FIT HYBRID	/	New energy battery (EV)	M44	Read codes	
FIT HYBRID	/	New energy battery (EV)	M44	Erase Codes	
FIT HYBRID	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FIT HYBRID	/	New energy battery (EV)	M44	Read Live Data	
FIT HYBRID	/	New energy battery (EV)	M44	Inspection	
FIT HYBRID	/	New energy battery (EV)	M44	Adjustment	
FIT HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FIT HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FIT HYBRID	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FIT HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FIT HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FIT HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FIT HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read codes	
FIT HYBRID	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FIT HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FIT HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FIT HYBRID	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FIT HYBRID	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FIT HYBRID	/	FCW LDW	M4E	Read ECU Information	
FIT HYBRID	/	FCW LDW	M4E	Read codes	
FIT HYBRID	/	FCW LDW	M4E	Erase Codes	
FIT HYBRID	/	FCW LDW	M4E	Read Live Data	
FIT HYBRID	/	FCW LDW	M4E	Function Test	FCW Drive
FIT HYBRID	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FIT HYBRID	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FIT HYBRID	/	FCW LDW	M4E	Function Test	Indicator Drive
FIT HYBRID	/	FCW LDW	M4E	Adjustment	
FIT HYBRID	/	Instrument Display System (GAUGE)	M2C	Read codes	
FIT HYBRID	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FIT HYBRID	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Read codes	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Read codes	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Read codes	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FIT HYBRID	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Read codes	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Erase Codes	

FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FIT HYBRID	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FIT HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FIT HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
FIT HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FIT HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FIT HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FIT HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Customize	
FIT HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FIT HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FIT HYBRID	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FIT HYBRID	/	Hydraulic booster control system (HBS)	M5F	Read codes	
FIT HYBRID	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FIT HYBRID	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FIT HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FIT HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FIT HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FIT HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FIT HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FIT HYBRID	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FIT HYBRID	/	IMA	M63	Read ECU Information	
FIT HYBRID	/	IMA	M63	Read codes	
FIT HYBRID	/	IMA	M63	Erase Codes	
FIT HYBRID	/	IMA	M63	Read Freeze Frame Data	
FIT HYBRID	/	IMA	M63	Read Live Data	
FIT HYBRID	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FIT HYBRID	/	IMA	M63	Adjustment	SOC PRESET
FIT HYBRID	/	IMA	M64	Read ECU Information	
FIT HYBRID	/	IMA	M64	Read codes	
FIT HYBRID	/	IMA	M64	Erase Codes	
FIT HYBRID	/	IMA	M64	Read Freeze Frame Data	
FIT HYBRID	/	IMA	M64	Read Live Data	
FIT HYBRID	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FIT HYBRID	/	IMA	M64	Adjustment	SOC PRESET
FIT HYBRID	/	IMA	M65	Read ECU Information	
FIT HYBRID	/	IMA	M65	Read codes	
FIT HYBRID	/	IMA	M65	Erase Codes	
FIT HYBRID	/	IMA	M65	Read Freeze Frame Data	
FIT HYBRID	/	IMA	M65	Read Live Data	
FIT HYBRID	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FIT HYBRID	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FIT HYBRID	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FIT HYBRID	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FIT HYBRID	/	Intake Sounder Control System (ISC)	M6D	Read codes	
FIT HYBRID	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FIT HYBRID	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FIT HYBRID	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FIT HYBRID	/	Night Vision System (INVS)	0XB1	Read ECU Information	
FIT HYBRID	/	Night Vision System (INVS)	0XB1	Read codes	
FIT HYBRID	/	Night Vision System (INVS)	0XB1	Erase Codes	
FIT HYBRID	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FIT HYBRID	/	Night Vision System (INVS)	0XB1	Read Live Data	
FIT HYBRID	/	Night Vision System (INVS)	0XB1	Adjustment	
FIT HYBRID	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FIT HYBRID	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FIT HYBRID	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FIT HYBRID	/	i-SHIFT	0XB0	Read ECU Information	
FIT HYBRID	/	i-SHIFT	0XB0	Read codes	
FIT HYBRID	/	i-SHIFT	0XB0	Erase Codes	
FIT HYBRID	/	i-SHIFT	0XB0	Read Live Data	
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Read codes	
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Self Check	
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	History Data	
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving

FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FIT HYBRID	/	Keyless Entry Control System (KAS)	M99	Registration	
FIT HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FIT HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FIT HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FIT HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FIT HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FIT HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FIT HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FIT HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
FIT HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
FIT HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
FIT HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
FIT HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
FIT HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
FIT HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
FIT HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
FIT HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
FIT HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
FIT HYBRID	/	Management ECU Module (ME)	M74	Read ECU Information	
FIT HYBRID	/	Management ECU Module (ME)	M74	Read codes	
FIT HYBRID	/	Management ECU Module (ME)	M74	Erase Codes	
FIT HYBRID	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FIT HYBRID	/	Management ECU Module (ME)	M74	Read Live Data	
FIT HYBRID	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
FIT HYBRID	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
FIT HYBRID	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
FIT HYBRID	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
FIT HYBRID	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FIT HYBRID	/	Multi-view camera system (MVCS)	M7A	Read codes	
FIT HYBRID	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
FIT HYBRID	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
FIT HYBRID	/	Multi-view camera system (MVCS)	M7A	Customization	
FIT HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FIT HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FIT HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
FIT HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FIT HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FIT HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FIT HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FIT HYBRID	/	Power Control Unit (PCU)	M83	Read ECU Information	
FIT HYBRID	/	Power Control Unit (PCU)	M83	Read codes	
FIT HYBRID	/	Power Control Unit (PCU)	M83	Erase Codes	
FIT HYBRID	/	Power Control Unit (PCU)	M83	Read Live Data	
FIT HYBRID	/	Power Control Unit (PCU)	M83	Self Check	
FIT HYBRID	/	Power Control Unit (PCU)	M83	History Data	
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Read codes	
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Erase Codes	
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Read Live Data	
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST

FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
FIT HYBRID	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	Read codes	
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	Erase Codes	
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	Read Live Data	
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
FIT HYBRID	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Read codes	
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Erase Codes	
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Read Live Data	
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
FIT HYBRID	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FIT HYBRID	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
FIT HYBRID	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
FIT HYBRID	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
FIT HYBRID	/	PSR	M27	Read ECU Information	
FIT HYBRID	/	PSR	M27	Read codes	
FIT HYBRID	/	PSR	M27	Erase Codes	
FIT HYBRID	/	PSR	M27	Read Live Data	
FIT HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FIT HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FIT HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FIT HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FIT HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FIT HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
FIT HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
FIT HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
FIT HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
FIT HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
FIT HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
FIT HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FIT HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FIT HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FIT HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FIT HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FIT HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FIT HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FIT HYBRID	/	Remote starter (RS)	M90	System Check	
FIT HYBRID	/	Remote starter (RS)	M90	HISTORY	
FIT HYBRID	/	Remote starter (RS)	M90	Registration	
FIT HYBRID	/	Seat load cell (SWS)	M6F	Read ECU Information	
FIT HYBRID	/	Seat load cell (SWS)	M6F	Read codes	
FIT HYBRID	/	Seat load cell (SWS)	M6F	Erase Codes	

FIT HYBRID	/	Seat load cell (SWS)	M6F	Read Live Data	
FIT HYBRID	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FIT HYBRID	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FIT HYBRID	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FIT HYBRID	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
FIT HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FIT HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FIT HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FIT HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FIT HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FIT HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FIT HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
FIT HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FIT HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FIT HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
FIT HYBRID	/	Groove track drive unit (SLOT ECU)	M98	History Data	
FIT HYBRID	/	Groove track drive unit (SLOT ECU)	M98	System Information	
FIT HYBRID	/	Airbag Control System (SRS)	M9F	Read ECU Information	
FIT HYBRID	/	Airbag Control System (SRS)	M9F	Read codes	
FIT HYBRID	/	Airbag Control System (SRS)	M9F	Erase Codes	
FIT HYBRID	/	Airbag Control System (SRS)	M9F	Read Live Data	
FIT HYBRID	/	Airbag Control System (SRS)	MA0	Read ECU Information	
FIT HYBRID	/	Airbag Control System (SRS)	MA0	Read codes	
FIT HYBRID	/	Airbag Control System (SRS)	MA0	Erase Codes	
FIT HYBRID	/	Airbag Control System (SRS)	MA0	Read Live Data	
FIT HYBRID	/	Airbag Control System (SRS)	MA1	Read ECU Information	
FIT HYBRID	/	Airbag Control System (SRS)	MA1	Read codes	
FIT HYBRID	/	Airbag Control System (SRS)	MA1	Erase Codes	
FIT HYBRID	/	Airbag Control System (SRS)	MA1	Read Live Data	
FIT HYBRID	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FIT HYBRID	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FIT HYBRID	/	Airbag Control System (SRS)	M2A	Read codes	
FIT HYBRID	/	Airbag Control System (SRS)	M2A	Erase Codes	
FIT HYBRID	/	Airbag Control System (SRS)	M2A	Read Live Data	
FIT HYBRID	/	Airbag Control System (SRS)	M9C	Read ECU Information	
FIT HYBRID	/	Airbag Control System (SRS)	M9C	Read codes	
FIT HYBRID	/	Airbag Control System (SRS)	M9C	Erase Codes	
FIT HYBRID	/	Airbag Control System (SRS)	M9C	Read Live Data	
FIT HYBRID	/	Airbag Control System (SRS)	M9D	Read ECU Information	
FIT HYBRID	/	Airbag Control System (SRS)	M9D	Read codes	
FIT HYBRID	/	Airbag Control System (SRS)	M9D	Erase Codes	
FIT HYBRID	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FIT HYBRID	/	Airbag Control System (SRS)	M9D	Read Live Data	
FIT HYBRID	/	Airbag Control System (SRS)	M9D	Parameter Information	
FIT HYBRID	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FIT HYBRID	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FIT HYBRID	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FIT HYBRID	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FIT HYBRID	/	Airbag Control System (SRS)	M9D	Function Test	
FIT HYBRID	/	Airbag Control System (SRS)	M9D	System Information	
FIT HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FIT HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FIT HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FIT HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FIT HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FIT HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FIT HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FIT HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FIT HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FIT HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators

FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FIT HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FIT HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FIT HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FIT HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FIT HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FIT HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FIT HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FIT HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FIT HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FIT SALOON	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FIT SALOON	/	Four-wheel steering control system (4WS)	M52	Read codes	
FIT SALOON	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
FIT SALOON	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FIT SALOON	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
FIT SALOON	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FIT SALOON	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FIT SALOON	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FIT SALOON	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FIT SALOON	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FIT SALOON	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FIT SALOON	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
FIT SALOON	/	Automatic shift control system (A/T)	M1E	Read codes	
FIT SALOON	/	Automatic shift control system (A/T)	M1E	Erase Codes	
FIT SALOON	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FIT SALOON	/	Automatic shift control system (A/T)	M1E	Read Live Data	
FIT SALOON	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FIT SALOON	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FIT SALOON	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FIT SALOON	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT SALOON	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT SALOON	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT SALOON	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT SALOON	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FIT SALOON	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FIT SALOON	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
FIT SALOON	/	Automatic shift control system (A/T)	M3B	Read codes	
FIT SALOON	/	Automatic shift control system (A/T)	M3B	Erase Codes	
FIT SALOON	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FIT SALOON	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FIT SALOON	/	Automatic shift control system (A/T)	M3B	Read Live Data	
FIT SALOON	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FIT SALOON	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FIT SALOON	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FIT SALOON	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FIT SALOON	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
FIT SALOON	/	Automatic shift control system (A/T)	M3C	Read codes	
FIT SALOON	/	Automatic shift control system (A/T)	M3C	Erase Codes	
FIT SALOON	/	Automatic shift control system (A/T)	M81	Read ECU Information	
FIT SALOON	/	Automatic shift control system (A/T)	M81	Read codes	
FIT SALOON	/	Automatic shift control system (A/T)	M81	Erase Codes	
FIT SALOON	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FIT SALOON	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FIT SALOON	/	Automatic shift control system (A/T)	M81	Read Live Data	
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT SALOON	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FIT SALOON	/	Automatic shift control system (A/T)	M82	Read ECU Information	
FIT SALOON	/	Automatic shift control system (A/T)	M82	Read codes	
FIT SALOON	/	Automatic shift control system (A/T)	M82	Erase Codes	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
FIT SALOON	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	

FIT SALOON	/	Active Engine Control Support System (ACM)	M06	Read codes	
FIT SALOON	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
FIT SALOON	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FIT SALOON	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
FIT SALOON	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
FIT SALOON	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FIT SALOON	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FIT SALOON	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FIT SALOON	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FIT SALOON	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FIT SALOON	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FIT SALOON	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FIT SALOON	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
FIT SALOON	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
FIT SALOON	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
FIT SALOON	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
FIT SALOON	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
FIT SALOON	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
FIT SALOON	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
FIT SALOON	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
FIT SALOON	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
FIT SALOON	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
FIT SALOON	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
FIT SALOON	/	Transmission Control System (AT)	M18	Read ECU Information	
FIT SALOON	/	Transmission Control System (AT)	M18	Read codes	
FIT SALOON	/	Transmission Control System (AT)	M18	Erase Codes	
FIT SALOON	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FIT SALOON	/	Transmission Control System (AT)	M18	Read Live Data	
FIT SALOON	/	Transmission Control System (AT)	M18	Adjustment	
FIT SALOON	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
FIT SALOON	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
FIT SALOON	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
FIT SALOON	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
FIT SALOON	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
FIT SALOON	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FIT SALOON	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
FIT SALOON	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FIT SALOON	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
FIT SALOON	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FIT SALOON	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FIT SALOON	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FIT SALOON	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FIT SALOON	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FIT SALOON	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FIT SALOON	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
FIT SALOON	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
FIT SALOON	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
FIT SALOON	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
FIT SALOON	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
FIT SALOON	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FIT SALOON	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FIT SALOON	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	



FIT SALOON	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FIT SALOON	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FIT SALOON	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FIT SALOON	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FIT SALOON	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FIT SALOON	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FIT SALOON	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FIT SALOON	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FIT SALOON	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FIT SALOON	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FIT SALOON	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FIT SALOON	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FIT SALOON	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FIT SALOON	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FIT SALOON	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FIT SALOON	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FIT SALOON	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	

FIT SALOON	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FIT SALOON	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FIT SALOON	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FIT SALOON	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FIT SALOON	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FIT SALOON	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FIT SALOON	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FIT SALOON	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FIT SALOON	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FIT SALOON	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FIT SALOON	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FIT SALOON	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FIT SALOON	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Security	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FIT SALOON	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FIT SALOON	/	BODY ELECTRICAL/Security	MFF	History Data	
FIT SALOON	/	BODY ELECTRICAL/Security	MFF	History Clear	
FIT SALOON	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FIT SALOON	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FIT SALOON	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT SALOON	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FIT SALOON	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT SALOON	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FIT SALOON	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FIT SALOON	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FIT SALOON	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FIT SALOON	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FIT SALOON	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
FIT SALOON	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FIT SALOON	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FIT SALOON	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FIT SALOON	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FIT SALOON	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FIT SALOON	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FIT SALOON	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FIT SALOON	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FIT SALOON	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA

FIT SALOON	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FIT SALOON	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FIT SALOON	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FIT SALOON	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FIT SALOON	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
FIT SALOON	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FIT SALOON	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FIT SALOON	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FIT SALOON	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FIT SALOON	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read ECU Information	
FIT SALOON	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read codes	
FIT SALOON	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Erase Codes	
FIT SALOON	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Freeze Frame Data	
FIT SALOON	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Live Data	
FIT SALOON	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	CMBS (CMS) ACTIVATION HISTORY	
FIT SALOON	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	RADAR AIMING
FIT SALOON	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	CMBS Brake
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCMC Reset	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCMC Reset	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCMC Reset	
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
FIT SALOON	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
FIT SALOON	/	DBW	M34	Read ECU Information	
FIT SALOON	/	DBW	M34	Read codes	
FIT SALOON	/	DBW	M34	Erase Codes	
FIT SALOON	/	DBW	M34	Read Freeze Frame Data	
FIT SALOON	/	DBW	M34	Read Live Data	
FIT SALOON	/	DBW	M34	Inspection	Idle Speed Adjust
FIT SALOON	/	DBW	M34	Inspection	Throttle Test
FIT SALOON	/	DBW	M34	ECM Reset	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	

FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Slow On/Off
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FIT SALOON	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FIT SALOON	/	Capacitor Control System (EDLC)	M12	Read codes	
FIT SALOON	/	Capacitor Control System (EDLC)	M12	Erase Codes	
FIT SALOON	/	Capacitor Control System (EDLC)	M12	Read Live Data	
FIT SALOON	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FIT SALOON	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FIT SALOON	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FIT SALOON	/	Electronic Brake Control System (EPB)	M1F	Read codes	
FIT SALOON	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FIT SALOON	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FIT SALOON	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FIT SALOON	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FIT SALOON	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FIT SALOON	/	Electronic Brake Control System (EPB)	M3E	Read codes	
FIT SALOON	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FIT SALOON	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FIT SALOON	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FIT SALOON	/	Electric Powertrain / IMA	M66	Read ECU Information	
FIT SALOON	/	Electric Powertrain / IMA	M66	Read codes	
FIT SALOON	/	Electric Powertrain / IMA	M66	Erase Codes	
FIT SALOON	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FIT SALOON	/	Electric Powertrain / IMA	M66	Read Live Data	
FIT SALOON	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FIT SALOON	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FIT SALOON	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FIT SALOON	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FIT SALOON	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FIT SALOON	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FIT SALOON	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FIT SALOON	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FIT SALOON	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FIT SALOON	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FIT SALOON	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FIT SALOON	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FIT SALOON	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FIT SALOON	/	New energy battery (EV)	M44	Read ECU Information	
FIT SALOON	/	New energy battery (EV)	M44	Read codes	
FIT SALOON	/	New energy battery (EV)	M44	Erase Codes	
FIT SALOON	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FIT SALOON	/	New energy battery (EV)	M44	Read Live Data	
FIT SALOON	/	New energy battery (EV)	M44	Inspection	
FIT SALOON	/	New energy battery (EV)	M44	Adjustment	
FIT SALOON	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FIT SALOON	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FIT SALOON	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FIT SALOON	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FIT SALOON	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FIT SALOON	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FIT SALOON	/	Electronic vacuum pump (EVPS)	M22	Read codes	
FIT SALOON	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FIT SALOON	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FIT SALOON	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	

FIT SALOON	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FIT SALOON	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FIT SALOON	/	FCW LDW	M4E	Read ECU Information	
FIT SALOON	/	FCW LDW	M4E	Read codes	
FIT SALOON	/	FCW LDW	M4E	Erase Codes	
FIT SALOON	/	FCW LDW	M4E	Read Live Data	
FIT SALOON	/	FCW LDW	M4E	Function Test	FCW Drive
FIT SALOON	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FIT SALOON	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FIT SALOON	/	FCW LDW	M4E	Function Test	Indicator Drive
FIT SALOON	/	FCW LDW	M4E	Adjustment	
FIT SALOON	/	Instrument Display System (GAUGE)	M2C	Read codes	
FIT SALOON	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FIT SALOON	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Read codes	
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Read codes	
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Read codes	
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FIT SALOON	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Read codes	
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FIT SALOON	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FIT SALOON	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FIT SALOON	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
FIT SALOON	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FIT SALOON	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FIT SALOON	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FIT SALOON	/	Intelligent Parking Control System (SPS)	M9B	Customize	
FIT SALOON	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FIT SALOON	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FIT SALOON	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FIT SALOON	/	Hydraulic booster control system (HBS)	M5F	Read codes	
FIT SALOON	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FIT SALOON	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FIT SALOON	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FIT SALOON	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FIT SALOON	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FIT SALOON	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FIT SALOON	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FIT SALOON	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FIT SALOON	/	IMA	M63	Read ECU Information	

FIT SALOON	/	IMA	M63	Read codes	
FIT SALOON	/	IMA	M63	Erase Codes	
FIT SALOON	/	IMA	M63	Read Freeze Frame Data	
FIT SALOON	/	IMA	M63	Read Live Data	
FIT SALOON	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FIT SALOON	/	IMA	M63	Adjustment	SOC PRESET
FIT SALOON	/	IMA	M64	Read ECU Information	
FIT SALOON	/	IMA	M64	Read codes	
FIT SALOON	/	IMA	M64	Erase Codes	
FIT SALOON	/	IMA	M64	Read Freeze Frame Data	
FIT SALOON	/	IMA	M64	Read Live Data	
FIT SALOON	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FIT SALOON	/	IMA	M64	Adjustment	SOC PRESET
FIT SALOON	/	IMA	M65	Read ECU Information	
FIT SALOON	/	IMA	M65	Read codes	
FIT SALOON	/	IMA	M65	Erase Codes	
FIT SALOON	/	IMA	M65	Read Freeze Frame Data	
FIT SALOON	/	IMA	M65	Read Live Data	
FIT SALOON	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FIT SALOON	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FIT SALOON	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FIT SALOON	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FIT SALOON	/	Intake Sounder Control System (ISC)	M6D	Read codes	
FIT SALOON	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FIT SALOON	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FIT SALOON	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FIT SALOON	/	Night Vision System (INVS)	0XB1	Read ECU Information	
FIT SALOON	/	Night Vision System (INVS)	0XB1	Read codes	
FIT SALOON	/	Night Vision System (INVS)	0XB1	Erase Codes	
FIT SALOON	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FIT SALOON	/	Night Vision System (INVS)	0XB1	Read Live Data	
FIT SALOON	/	Night Vision System (INVS)	0XB1	Adjustment	
FIT SALOON	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FIT SALOON	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FIT SALOON	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FIT SALOON	/	i-SHIFT	0XB0	Read ECU Information	
FIT SALOON	/	i-SHIFT	0XB0	Read codes	
FIT SALOON	/	i-SHIFT	0XB0	Erase Codes	
FIT SALOON	/	i-SHIFT	0XB0	Read Live Data	
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Read codes	
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Self Check	
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	History Data	
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving

FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FIT SALOON	/	Keyless Entry Control System (KAS)	M99	Registration	
FIT SALOON	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FIT SALOON	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FIT SALOON	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FIT SALOON	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FIT SALOON	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FIT SALOON	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FIT SALOON	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FIT SALOON	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
FIT SALOON	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
FIT SALOON	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
FIT SALOON	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
FIT SALOON	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
FIT SALOON	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
FIT SALOON	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
FIT SALOON	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
FIT SALOON	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
FIT SALOON	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
FIT SALOON	/	Management ECU Module (ME)	M74	Read ECU Information	
FIT SALOON	/	Management ECU Module (ME)	M74	Read codes	
FIT SALOON	/	Management ECU Module (ME)	M74	Erase Codes	
FIT SALOON	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FIT SALOON	/	Management ECU Module (ME)	M74	Read Live Data	
FIT SALOON	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
FIT SALOON	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
FIT SALOON	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
FIT SALOON	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
FIT SALOON	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FIT SALOON	/	Multi-view camera system (MVCS)	M7A	Read codes	
FIT SALOON	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
FIT SALOON	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
FIT SALOON	/	Multi-view camera system (MVCS)	M7A	Customization	
FIT SALOON	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FIT SALOON	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FIT SALOON	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
FIT SALOON	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FIT SALOON	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FIT SALOON	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FIT SALOON	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FIT SALOON	/	Power Control Unit (PCU)	M83	Read ECU Information	
FIT SALOON	/	Power Control Unit (PCU)	M83	Read codes	
FIT SALOON	/	Power Control Unit (PCU)	M83	Erase Codes	
FIT SALOON	/	Power Control Unit (PCU)	M83	Read Live Data	
FIT SALOON	/	Power Control Unit (PCU)	M83	Self Check	
FIT SALOON	/	Power Control Unit (PCU)	M83	History Data	
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Read codes	
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Erase Codes	
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FIT SALOON	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Read Live Data	
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FIT SALOON	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FIT SALOON	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
FIT SALOON	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FIT SALOON	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
FIT SALOON	/	Engine Control System (PGM-FI)	M50	Read codes	
FIT SALOON	/	Engine Control System (PGM-FI)	M50	Erase Codes	
FIT SALOON	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
FIT SALOON	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FIT SALOON	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FIT SALOON	/	Engine Control System (PGM-FI)	M50	Read Live Data	
FIT SALOON	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FIT SALOON	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FIT SALOON	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FIT SALOON	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
FIT SALOON	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Read codes	

FIT SALOON	/	Engine Control System (PGM-FI)	M86	Erase Codes	
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
FIT SALOON	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Read Live Data	
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FIT SALOON	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FIT SALOON	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
FIT SALOON	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FIT SALOON	/	Four-wheel precision steering control system (PAWSC) M96		Read codes	
FIT SALOON	/	Four-wheel precision steering control system (PAWSC) M96		Erase Codes	
FIT SALOON	/	Four-wheel precision steering control system (PAWSC) M96		Read Live Data	
FIT SALOON	/	PSR	M27	Read ECU Information	
FIT SALOON	/	PSR	M27	Read codes	
FIT SALOON	/	PSR	M27	Erase Codes	
FIT SALOON	/	PSR	M27	Read Live Data	
FIT SALOON	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FIT SALOON	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FIT SALOON	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FIT SALOON	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FIT SALOON	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FIT SALOON	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
FIT SALOON	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
FIT SALOON	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
FIT SALOON	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
FIT SALOON	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
FIT SALOON	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
FIT SALOON	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FIT SALOON	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FIT SALOON	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FIT SALOON	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FIT SALOON	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FIT SALOON	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FIT SALOON	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FIT SALOON	/	Remote starter (RS)	M90	System Check	
FIT SALOON	/	Remote starter (RS)	M90	HISTORY	
FIT SALOON	/	Remote starter (RS)	M90	Registration	
FIT SALOON	/	Seat load cell (SWS)	M6F	Read ECU Information	
FIT SALOON	/	Seat load cell (SWS)	M6F	Read codes	
FIT SALOON	/	Seat load cell (SWS)	M6F	Erase Codes	
FIT SALOON	/	Seat load cell (SWS)	M6F	Read Live Data	
FIT SALOON	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FIT SALOON	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FIT SALOON	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FIT SALOON	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
FIT SALOON	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FIT SALOON	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FIT SALOON	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FIT SALOON	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	



FIT SALOON	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FIT SALOON	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FIT SALOON	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
FIT SALOON	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FIT SALOON	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FIT SALOON	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
FIT SALOON	/	Groove track drive unit (SLOT ECU)	M98	History Data	
FIT SALOON	/	Groove track drive unit (SLOT ECU)	M98	System Information	
FIT SALOON	/	Airbag Control System (SRS)	M9F	Read ECU Information	
FIT SALOON	/	Airbag Control System (SRS)	M9F	Read codes	
FIT SALOON	/	Airbag Control System (SRS)	M9F	Erase Codes	
FIT SALOON	/	Airbag Control System (SRS)	M9F	Read Live Data	
FIT SALOON	/	Airbag Control System (SRS)	MA0	Read ECU Information	
FIT SALOON	/	Airbag Control System (SRS)	MA0	Read codes	
FIT SALOON	/	Airbag Control System (SRS)	MA0	Erase Codes	
FIT SALOON	/	Airbag Control System (SRS)	MA0	Read Live Data	
FIT SALOON	/	Airbag Control System (SRS)	MA1	Read ECU Information	
FIT SALOON	/	Airbag Control System (SRS)	MA1	Read codes	
FIT SALOON	/	Airbag Control System (SRS)	MA1	Erase Codes	
FIT SALOON	/	Airbag Control System (SRS)	MA1	Read Live Data	
FIT SALOON	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FIT SALOON	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FIT SALOON	/	Airbag Control System (SRS)	M2A	Read codes	
FIT SALOON	/	Airbag Control System (SRS)	M2A	Erase Codes	
FIT SALOON	/	Airbag Control System (SRS)	M2A	Read Live Data	
FIT SALOON	/	Airbag Control System (SRS)	M9C	Read ECU Information	
FIT SALOON	/	Airbag Control System (SRS)	M9C	Read codes	
FIT SALOON	/	Airbag Control System (SRS)	M9C	Erase Codes	
FIT SALOON	/	Airbag Control System (SRS)	M9C	Read Live Data	
FIT SALOON	/	Airbag Control System (SRS)	M9D	Read ECU Information	
FIT SALOON	/	Airbag Control System (SRS)	M9D	Read codes	
FIT SALOON	/	Airbag Control System (SRS)	M9D	Erase Codes	
FIT SALOON	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FIT SALOON	/	Airbag Control System (SRS)	M9D	Read Live Data	
FIT SALOON	/	Airbag Control System (SRS)	M9D	Parameter Information	
FIT SALOON	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FIT SALOON	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FIT SALOON	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FIT SALOON	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FIT SALOON	/	Airbag Control System (SRS)	M9D	Function Test	
FIT SALOON	/	Airbag Control System (SRS)	M9D	System Information	
FIT SALOON	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FIT SALOON	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FIT SALOON	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FIT SALOON	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FIT SALOON	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FIT SALOON	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FIT SALOON	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FIT SALOON	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FIT SALOON	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FIT SALOON	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FIT SALOON	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FIT SALOON	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FIT SALOON	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FIT SALOON	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FIT SALOON	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FIT SALOON	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FIT SALOON	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FIT SALOON	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FIT SALOON	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FIT SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FIT SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Read codes	
FIT SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
FIT SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FIT SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
FIT SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FIT SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FIT SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FIT SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FIT SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FIT SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	Read codes	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B

FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FIT SHUTTLE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3B	Read codes	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3C	Read codes	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Read codes	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Erase Codes	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Read Live Data	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FIT SHUTTLE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M82	Read codes	
FIT SHUTTLE	/	Automatic shift control system (A/T)	M82	Erase Codes	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read codes	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Erase Codes	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Freeze Frame Data	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Live Data	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	Throttle Opening Angle Test
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 1
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 2
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	LIGHT CHECK
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BUZZER CHECK
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read ECU Information	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read codes	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Erase Codes	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Freeze Frame Data	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Live Data	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Adjustment	RADAR AIMING
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	BRAKE ACTUATOR 3
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ACC relay malfunction.
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INDICATOR LIGHT
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INFORMATION DISPLAY
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ALARM BUZZER
FIT SHUTTLE	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FIT SHUTTLE	/	Active Engine Control Support System (ACM)	M06	Read codes	
FIT SHUTTLE	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
FIT SHUTTLE	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FIT SHUTTLE	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
FIT SHUTTLE	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
FIT SHUTTLE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FIT SHUTTLE	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FIT SHUTTLE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FIT SHUTTLE	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FIT SHUTTLE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FIT SHUTTLE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FIT SHUTTLE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FIT SHUTTLE	/	Active / Automatic Shock Absorber Control System (A	MOD	Read ECU Information	
FIT SHUTTLE	/	Active / Automatic Shock Absorber Control System (A	MOD	Read codes	
FIT SHUTTLE	/	Active / Automatic Shock Absorber Control System (A	MOD	Erase Codes	
FIT SHUTTLE	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Freeze Frame Data	
FIT SHUTTLE	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Live Data	
FIT SHUTTLE	/	Active / Automatic Shock Absorber Control System (A	MOD	Function Test	Damper Force Operation Test
FIT SHUTTLE	/	Active / Automatic Shock Absorber Control System (A	MOD	Adjustment	Damper Stroke Calibration
FIT SHUTTLE	/	Active / Automatic Shock Absorber Control System (A	M1A	Read codes	
FIT SHUTTLE	/	Active / Automatic Shock Absorber Control System (A	M1A	Erase Codes	
FIT SHUTTLE	/	Active / Automatic Shock Absorber Control System (A	M1A	Read Live Data	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read codes	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Erase Codes	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Freeze Frame Data	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Live Data	
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	ACC Brake (Brake Actuator)
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	CMBS Brake
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Brake Light (ACC Relay)
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Indicator Light
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Information Display
FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Alarm Test

FIT SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
FIT SHUTTLE	/	Transmission Control System (AT)	M18	Read ECU Information	
FIT SHUTTLE	/	Transmission Control System (AT)	M18	Read codes	
FIT SHUTTLE	/	Transmission Control System (AT)	M18	Erase Codes	
FIT SHUTTLE	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FIT SHUTTLE	/	Transmission Control System (AT)	M18	Read Live Data	
FIT SHUTTLE	/	Transmission Control System (AT)	M18	Adjustment	
FIT SHUTTLE	/	Active Torque Converter Control System (ATTS)	MOE	Read ECU Information	
FIT SHUTTLE	/	Active Torque Converter Control System (ATTS)	MOE	Read codes	
FIT SHUTTLE	/	Active Torque Converter Control System (ATTS)	MOE	Erase Codes	
FIT SHUTTLE	/	Active Torque Converter Control System (ATTS)	MOE	Read Freeze Frame Data	
FIT SHUTTLE	/	Active Torque Converter Control System (ATTS)	MOE	Read Live Data	
FIT SHUTTLE	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FIT SHUTTLE	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	STEERING ANGLE
FIT SHUTTLE	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FIT SHUTTLE	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ALL SENSORS
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
FIT SHUTTLE	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FIT SHUTTLE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FIT SHUTTLE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FIT SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FIT SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FIT SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FIT SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
FIT SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
FIT SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
FIT SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
FIT SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
FIT SHUTTLE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FIT SHUTTLE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FIT SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FIT SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FIT SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FIT SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FIT SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FIT SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FIT SHUTTLE	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FIT SHUTTLE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FIT SHUTTLE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator

FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FIT SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FIT SHUTTLE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FIT SHUTTLE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FIT SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FIT SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FIT SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FIT SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FIT SHUTTLE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FIT SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FIT SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FIT SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FIT SHUTTLE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FIT SHUTTLE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FIT SHUTTLE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FIT SHUTTLE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FIT SHUTTLE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FIT SHUTTLE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FIT SHUTTLE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up

FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FIT SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FIT SHUTTLE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Security	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FIT SHUTTLE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FIT SHUTTLE	/	BODY ELECTRICAL/Security	MFF	History Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Security	MFF	History Clear	
FIT SHUTTLE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FIT SHUTTLE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FIT SHUTTLE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT SHUTTLE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FIT SHUTTLE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT SHUTTLE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
FIT SHUTTLE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FIT SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FIT SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FIT SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FIT SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FIT SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FIT SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FIT SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FIT SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FIT SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FIT SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FIT SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FIT SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FIT SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FIT SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FIT SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FIT SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FIT SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FIT SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FIT SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FIT SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FIT SHUTTLE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Neutral Rewrite	
FIT SHUTTLE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FIT SHUTTLE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FIT SHUTTLE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FIT SHUTTLE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
FIT SHUTTLE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FIT SHUTTLE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FIT SHUTTLE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FIT SHUTTLE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FIT SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
FIT SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
FIT SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
FIT SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
FIT SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
FIT SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
FIT SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
FIT SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	

FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information		
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes		
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes		
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data		
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data		
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	ECM/PCM Reset		
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B	
FIT SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P	
FIT SHUTTLE	/	DBW	M34	Read ECU Information	
FIT SHUTTLE	/	DBW	M34	Read codes	
FIT SHUTTLE	/	DBW	M34	Erase Codes	
FIT SHUTTLE	/	DBW	M34	Read Freeze Frame Data	
FIT SHUTTLE	/	DBW	M34	Read Live Data	
FIT SHUTTLE	/	DBW	M34	Inspection	Idle Speed Adjust
FIT SHUTTLE	/	DBW	M34	Inspection	Throttle Test
FIT SHUTTLE	/	DBW	M34	ECM Reset	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FIT SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FIT SHUTTLE	/	Capacitor Control System (EDLC)	M12	Read codes	
FIT SHUTTLE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
FIT SHUTTLE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
FIT SHUTTLE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FIT SHUTTLE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FIT SHUTTLE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FIT SHUTTLE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
FIT SHUTTLE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FIT SHUTTLE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FIT SHUTTLE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FIT SHUTTLE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FIT SHUTTLE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FIT SHUTTLE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
FIT SHUTTLE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	

FIT SHUTTLE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FIT SHUTTLE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FIT SHUTTLE	/	Electric Powertrain / IMA	M66	Read ECU Information	
FIT SHUTTLE	/	Electric Powertrain / IMA	M66	Read codes	
FIT SHUTTLE	/	Electric Powertrain / IMA	M66	Erase Codes	
FIT SHUTTLE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FIT SHUTTLE	/	Electric Powertrain / IMA	M66	Read Live Data	
FIT SHUTTLE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FIT SHUTTLE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FIT SHUTTLE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FIT SHUTTLE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FIT SHUTTLE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FIT SHUTTLE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FIT SHUTTLE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FIT SHUTTLE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FIT SHUTTLE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FIT SHUTTLE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FIT SHUTTLE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FIT SHUTTLE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FIT SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FIT SHUTTLE	/	New energy battery (EV)	M44	Read ECU Information	
FIT SHUTTLE	/	New energy battery (EV)	M44	Read codes	
FIT SHUTTLE	/	New energy battery (EV)	M44	Erase Codes	
FIT SHUTTLE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FIT SHUTTLE	/	New energy battery (EV)	M44	Read Live Data	
FIT SHUTTLE	/	New energy battery (EV)	M44	Inspection	
FIT SHUTTLE	/	New energy battery (EV)	M44	Adjustment	
FIT SHUTTLE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FIT SHUTTLE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FIT SHUTTLE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FIT SHUTTLE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FIT SHUTTLE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FIT SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FIT SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
FIT SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FIT SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FIT SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FIT SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FIT SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FIT SHUTTLE	/	FCW LDW	M4E	Read ECU Information	
FIT SHUTTLE	/	FCW LDW	M4E	Read codes	
FIT SHUTTLE	/	FCW LDW	M4E	Erase Codes	
FIT SHUTTLE	/	FCW LDW	M4E	Read Live Data	
FIT SHUTTLE	/	FCW LDW	M4E	Function Test	FCW Drive
FIT SHUTTLE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FIT SHUTTLE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FIT SHUTTLE	/	FCW LDW	M4E	Function Test	Indicator Drive
FIT SHUTTLE	/	FCW LDW	M4E	Adjustment	
FIT SHUTTLE	/	Instrument Display System (GAUGE)	M2C	Read codes	
FIT SHUTTLE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FIT SHUTTLE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Read codes	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Read codes	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	

FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Read codes	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Read codes	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FIT SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FIT SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FIT SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
FIT SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FIT SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FIT SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FIT SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
FIT SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FIT SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FIT SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FIT SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
FIT SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FIT SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FIT SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FIT SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FIT SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FIT SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FIT SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FIT SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FIT SHUTTLE	/	IMA	M63	Read ECU Information	
FIT SHUTTLE	/	IMA	M63	Read codes	
FIT SHUTTLE	/	IMA	M63	Erase Codes	
FIT SHUTTLE	/	IMA	M63	Read Freeze Frame Data	
FIT SHUTTLE	/	IMA	M63	Read Live Data	
FIT SHUTTLE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FIT SHUTTLE	/	IMA	M63	Adjustment	SOC PRESET
FIT SHUTTLE	/	IMA	M64	Read ECU Information	
FIT SHUTTLE	/	IMA	M64	Read codes	
FIT SHUTTLE	/	IMA	M64	Erase Codes	
FIT SHUTTLE	/	IMA	M64	Read Freeze Frame Data	
FIT SHUTTLE	/	IMA	M64	Read Live Data	
FIT SHUTTLE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FIT SHUTTLE	/	IMA	M64	Adjustment	SOC PRESET
FIT SHUTTLE	/	IMA	M65	Read ECU Information	
FIT SHUTTLE	/	IMA	M65	Read codes	
FIT SHUTTLE	/	IMA	M65	Erase Codes	
FIT SHUTTLE	/	IMA	M65	Read Freeze Frame Data	
FIT SHUTTLE	/	IMA	M65	Read Live Data	
FIT SHUTTLE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FIT SHUTTLE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FIT SHUTTLE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FIT SHUTTLE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FIT SHUTTLE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
FIT SHUTTLE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FIT SHUTTLE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FIT SHUTTLE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FIT SHUTTLE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
FIT SHUTTLE	/	Night Vision System (INVS)	0XB1	Read codes	
FIT SHUTTLE	/	Night Vision System (INVS)	0XB1	Erase Codes	
FIT SHUTTLE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FIT SHUTTLE	/	Night Vision System (INVS)	0XB1	Read Live Data	
FIT SHUTTLE	/	Night Vision System (INVS)	0XB1	Adjustment	



FIT SHUTTLE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FIT SHUTTLE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FIT SHUTTLE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FIT SHUTTLE	/	i-SHIFT	0XB0	Read ECU Information	
FIT SHUTTLE	/	i-SHIFT	0XB0	Read codes	
FIT SHUTTLE	/	i-SHIFT	0XB0	Erase Codes	
FIT SHUTTLE	/	i-SHIFT	0XB0	Read Live Data	
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Read codes	
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Self Check	
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	History Data	
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FIT SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Registration	
FIT SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FIT SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FIT SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FIT SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FIT SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FIT SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FIT SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FIT SHUTTLE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
FIT SHUTTLE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
FIT SHUTTLE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
FIT SHUTTLE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
FIT SHUTTLE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
FIT SHUTTLE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
FIT SHUTTLE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
FIT SHUTTLE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
FIT SHUTTLE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
FIT SHUTTLE	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
FIT SHUTTLE	/	Management ECU Module (ME)	M74	Read ECU Information	
FIT SHUTTLE	/	Management ECU Module (ME)	M74	Read codes	
FIT SHUTTLE	/	Management ECU Module (ME)	M74	Erase Codes	
FIT SHUTTLE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FIT SHUTTLE	/	Management ECU Module (ME)	M74	Read Live Data	
FIT SHUTTLE	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read ECU Information	
FIT SHUTTLE	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read codes	
FIT SHUTTLE	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Erase Codes	
FIT SHUTTLE	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read Live Data	
FIT SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FIT SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Read codes	

FIT SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
FIT SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
FIT SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Customization	
FIT SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FIT SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FIT SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
FIT SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FIT SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FIT SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FIT SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FIT SHUTTLE	/	Power Control Unit (PCU)	M83	Read ECU Information	
FIT SHUTTLE	/	Power Control Unit (PCU)	M83	Read codes	
FIT SHUTTLE	/	Power Control Unit (PCU)	M83	Erase Codes	
FIT SHUTTLE	/	Power Control Unit (PCU)	M83	Read Live Data	
FIT SHUTTLE	/	Power Control Unit (PCU)	M83	Self Check	
FIT SHUTTLE	/	Power Control Unit (PCU)	M83	History Data	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Read codes	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	Read codes	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Read codes	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
FIT SHUTTLE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FIT SHUTTLE	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
FIT SHUTTLE	/	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	

FIT SHUTTLE	/	Four-wheel precision steering control system (PAWSC M96	Read Live Data	
FIT SHUTTLE	/	PSR M27	Read ECU Information	
FIT SHUTTLE	/	PSR M27	Read codes	
FIT SHUTTLE	/	PSR M27	Erase Codes	
FIT SHUTTLE	/	PSR M27	Read Live Data	
FIT SHUTTLE	/	Pedestrian Collision Protection System (PUH) M8C	Read ECU Information	
FIT SHUTTLE	/	Pedestrian Collision Protection System (PUH) M8C	Read codes	
FIT SHUTTLE	/	Pedestrian Collision Protection System (PUH) M8C	Erase Codes	
FIT SHUTTLE	/	Pedestrian Collision Protection System (PUH) M8C	Read Live Data	
FIT SHUTTLE	/	Pedestrian Collision Protection System (PUH) M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FIT SHUTTLE	/	Real-time four-wheel drive / intelligent control drive s M3A	Read codes	
FIT SHUTTLE	/	Real-time four-wheel drive / intelligent control drive s M3A	Erase Codes	
FIT SHUTTLE	/	Real-time four-wheel drive / intelligent control drive s M3A	Read Freeze Frame Data	
FIT SHUTTLE	/	Real-time four-wheel drive / intelligent control drive s M3A	Read Live Data	
FIT SHUTTLE	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	E-DPS Control Module Replacement
FIT SHUTTLE	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	Longitudinal G Sensor Learning
FIT SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read ECU Information	
FIT SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read codes	
FIT SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Erase Codes	
FIT SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read Live Data	
FIT SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Adjustment	
FIT SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test	Monitor and Alarm
FIT SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test	Display Rear Camera output image
FIT SHUTTLE	/	Remote starter (RS) M90	System Check	
FIT SHUTTLE	/	Remote starter (RS) M90	HISTORY	
FIT SHUTTLE	/	Remote starter (RS) M90	Registration	
FIT SHUTTLE	/	Seat load cell (SWS) M6F	Read ECU Information	
FIT SHUTTLE	/	Seat load cell (SWS) M6F	Read codes	
FIT SHUTTLE	/	Seat load cell (SWS) M6F	Erase Codes	
FIT SHUTTLE	/	Seat load cell (SWS) M6F	Read Live Data	
FIT SHUTTLE	/	Seat load cell (SWS) M6F	System Check	SWS DTC CHECK
FIT SHUTTLE	/	Seat load cell (SWS) M6F	System Check	Seat Output Check
FIT SHUTTLE	/	Seat load cell (SWS) M6F	System Check	AFTER A VEHICLE COLLISION
FIT SHUTTLE	/	Seat load cell (SWS) M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
FIT SHUTTLE	/	Seat load cell (SWS) M6F	Adjustment	ODS Unit Initialization
FIT SHUTTLE	/	Seat load cell (SWS) M6F	Adjustment	OPDS Initialization
FIT SHUTTLE	/	Seat load cell (SWS) M6F	Adjustment	SWS Initialization
FIT SHUTTLE	/	Seat load cell (SWS) M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M29	Read ECU Information	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M29	Read codes	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M29	Erase Codes	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M29	Readiness Codes	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M29	Read Freeze Frame Data	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M29	ECM/PCM Reset	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M29	Read Live Data	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M29	Inspection	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M29	Adjustment	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M29	VIN CHECK	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M29	Replace ECM/PCM	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Read ECU Information	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Read codes	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Erase Codes	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Read Freeze Frame Data	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Read Live Data	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Differential Torque	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FIT SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M ALL Sensor	
FIT SHUTTLE	/	Groove track drive unit (SLOT ECU) M98	Read ECU Information	
FIT SHUTTLE	/	Groove track drive unit (SLOT ECU) M98	Read codes	
FIT SHUTTLE	/	Groove track drive unit (SLOT ECU) M98	Erase Codes	
FIT SHUTTLE	/	Groove track drive unit (SLOT ECU) M98	Read Live Data	
FIT SHUTTLE	/	Groove track drive unit (SLOT ECU) M98	Self Check	
FIT SHUTTLE	/	Groove track drive unit (SLOT ECU) M98	History Data	
FIT SHUTTLE	/	Groove track drive unit (SLOT ECU) M98	System Information	
FIT SHUTTLE	/	Airbag Control System (SRS) M9F	Read ECU Information	
FIT SHUTTLE	/	Airbag Control System (SRS) M9F	Read codes	
FIT SHUTTLE	/	Airbag Control System (SRS) M9F	Erase Codes	
FIT SHUTTLE	/	Airbag Control System (SRS) M9F	Read Live Data	
FIT SHUTTLE	/	Airbag Control System (SRS) MA0	Read ECU Information	
FIT SHUTTLE	/	Airbag Control System (SRS) MA0	Read codes	
FIT SHUTTLE	/	Airbag Control System (SRS) MA0	Erase Codes	
FIT SHUTTLE	/	Airbag Control System (SRS) MA0	Read Live Data	
FIT SHUTTLE	/	Airbag Control System (SRS) MA1	Read ECU Information	
FIT SHUTTLE	/	Airbag Control System (SRS) MA1	Read codes	
FIT SHUTTLE	/	Airbag Control System (SRS) MA1	Erase Codes	
FIT SHUTTLE	/	Airbag Control System (SRS) MA1	Read Live Data	
FIT SHUTTLE	/	Airbag Control System (SRS) MA1	Miscellaneous Test	OPDS Initialization
FIT SHUTTLE	/	Airbag Control System (SRS) MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FIT SHUTTLE	/	Airbag Control System (SRS) M2A	Read codes	
FIT SHUTTLE	/	Airbag Control System (SRS) M2A	Erase Codes	
FIT SHUTTLE	/	Airbag Control System (SRS) M2A	Read Live Data	
FIT SHUTTLE	/	Airbag Control System (SRS) M9C	Read ECU Information	
FIT SHUTTLE	/	Airbag Control System (SRS) M9C	Read codes	
FIT SHUTTLE	/	Airbag Control System (SRS) M9C	Erase Codes	
FIT SHUTTLE	/	Airbag Control System (SRS) M9C	Read Live Data	
FIT SHUTTLE	/	Airbag Control System (SRS) M9D	Read ECU Information	
FIT SHUTTLE	/	Airbag Control System (SRS) M9D	Read codes	
FIT SHUTTLE	/	Airbag Control System (SRS) M9D	Erase Codes	

FIT SHUTTLE /	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FIT SHUTTLE /	Airbag Control System (SRS)	M9D	Read Live Data	
FIT SHUTTLE /	Airbag Control System (SRS)	M9D	Parameter Information	
FIT SHUTTLE /	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FIT SHUTTLE /	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FIT SHUTTLE /	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FIT SHUTTLE /	Airbag Control System (SRS)	M9D	CALIBRATION	E-PreTensioner For CMBS (CMS)
FIT SHUTTLE /	Airbag Control System (SRS)	M9D	Function Test	
FIT SHUTTLE /	Airbag Control System (SRS)	M9D	System Information	
FIT SHUTTLE /	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FIT SHUTTLE /	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FIT SHUTTLE /	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FIT SHUTTLE /	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FIT SHUTTLE /	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FIT SHUTTLE /	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FIT SHUTTLE /	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FIT SHUTTLE /	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FIT SHUTTLE /	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FIT SHUTTLE /	Variable Valve Timing Control System (SVT)	MA2	System Information	
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FIT SHUTTLE /	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FIT SHUTTLE /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FIT SHUTTLE /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FIT SHUTTLE /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FIT SHUTTLE /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FIT SHUTTLE /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FIT SHUTTLE /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FIT SHUTTLE /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FIT SHUTTLE /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FIT SHUTTLE HYBRI /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FIT SHUTTLE HYBRI /	Four-wheel steering control system (4WS)	M52	Read codes	
FIT SHUTTLE HYBRI /	Four-wheel steering control system (4WS)	M52	Erase Codes	
FIT SHUTTLE HYBRI /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Four-wheel steering control system (4WS)	M52	Read Live Data	
FIT SHUTTLE HYBRI /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FIT SHUTTLE HYBRI /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FIT SHUTTLE HYBRI /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FIT SHUTTLE HYBRI /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FIT SHUTTLE HYBRI /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FIT SHUTTLE HYBRI /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	Read ECU Information	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	Read codes	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	Erase Codes	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	Read Live Data	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3B	Read ECU Information	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3B	Read codes	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3B	Erase Codes	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3B	Read Live Data	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3C	Read ECU Information	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3C	Read codes	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M3C	Erase Codes	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Read ECU Information	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Read codes	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Erase Codes	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Read Live Data	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C

FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M82	Read ECU Information	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M82	Read codes	
FIT SHUTTLE HYBRI /	Automatic shift control system (A/T)	M82	Erase Codes	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
FIT SHUTTLE HYBRI /	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FIT SHUTTLE HYBRI /	Active Engine Control Support System (ACM)	M06	Read codes	
FIT SHUTTLE HYBRI /	Active Engine Control Support System (ACM)	M06	Erase Codes	
FIT SHUTTLE HYBRI /	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Active Engine Control Support System (ACM)	M06	Read Live Data	
FIT SHUTTLE HYBRI /	Active Engine Control Support System (ACM)	M06	ACM Reset	
FIT SHUTTLE HYBRI /	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FIT SHUTTLE HYBRI /	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FIT SHUTTLE HYBRI /	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FIT SHUTTLE HYBRI /	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FIT SHUTTLE HYBRI /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FIT SHUTTLE HYBRI /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FIT SHUTTLE HYBRI /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FIT SHUTTLE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
FIT SHUTTLE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
FIT SHUTTLE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
FIT SHUTTLE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
FIT SHUTTLE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
FIT SHUTTLE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
FIT SHUTTLE HYBRI /	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
FIT SHUTTLE HYBRI /	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
FIT SHUTTLE HYBRI /	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
FIT SHUTTLE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
FIT SHUTTLE HYBRI /	Transmission Control System (AT)	M18	Read ECU Information	
FIT SHUTTLE HYBRI /	Transmission Control System (AT)	M18	Read codes	
FIT SHUTTLE HYBRI /	Transmission Control System (AT)	M18	Erase Codes	
FIT SHUTTLE HYBRI /	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Transmission Control System (AT)	M18	Read Live Data	
FIT SHUTTLE HYBRI /	Transmission Control System (AT)	M18	Adjustment	
FIT SHUTTLE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
FIT SHUTTLE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Read codes	
FIT SHUTTLE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
FIT SHUTTLE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
FIT SHUTTLE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FIT SHUTTLE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
FIT SHUTTLE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FIT SHUTTLE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	

FIT SHUTTLE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/e-Call	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	

FIT SHUTTLE HYBRI /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Security	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Security	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Security	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Security	MFF	History Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Security	MFF	History Clear	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Telematics	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Wiper	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	

FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP Security	MFF	History Data	
FIT SHUTTLE HYBRI /	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FIT SHUTTLE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FIT SHUTTLE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FIT SHUTTLE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FIT SHUTTLE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FIT SHUTTLE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FIT SHUTTLE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FIT SHUTTLE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FIT SHUTTLE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FIT SHUTTLE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FIT SHUTTLE HYBRI /	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FIT SHUTTLE HYBRI /	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FIT SHUTTLE HYBRI /	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FIT SHUTTLE HYBRI /	Urban Active Brake Control System (CBAS)	M32	Read codes	
FIT SHUTTLE HYBRI /	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FIT SHUTTLE HYBRI /	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FIT SHUTTLE HYBRI /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FIT SHUTTLE HYBRI /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FIT SHUTTLE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read ECU Information	
FIT SHUTTLE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read codes	
FIT SHUTTLE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Erase Codes	
FIT SHUTTLE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read Live Data	
FIT SHUTTLE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	CMBS (CMS) ACTIVATION HISTORY	
FIT SHUTTLE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Miscellaneous Test	RADAR AIMING
FIT SHUTTLE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Miscellaneous Test	CMBS Brake
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M33)		Read codes	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		ECMPCM Reset	
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
FIT SHUTTLE HYBRI /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
FIT SHUTTLE HYBRI /	DBW	M34	Read ECU Information	
FIT SHUTTLE HYBRI /	DBW	M34	Read codes	
FIT SHUTTLE HYBRI /	DBW	M34	Erase Codes	
FIT SHUTTLE HYBRI /	DBW	M34	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	DBW	M34	Read Live Data	
FIT SHUTTLE HYBRI /	DBW	M34	Inspection	Idle Speed Adjust
FIT SHUTTLE HYBRI /	DBW	M34	Inspection	Throttle Test
FIT SHUTTLE HYBRI /	DBW	M34	ECM Reset	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test



FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M37	Read codes	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Read codes	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FIT SHUTTLE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FIT SHUTTLE HYBRI /	Capacitor Control System (EDLC)	M12	Read codes	
FIT SHUTTLE HYBRI /	Capacitor Control System (EDLC)	M12	Erase Codes	
FIT SHUTTLE HYBRI /	Capacitor Control System (EDLC)	M12	Read Live Data	
FIT SHUTTLE HYBRI /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FIT SHUTTLE HYBRI /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FIT SHUTTLE HYBRI /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FIT SHUTTLE HYBRI /	Electronic Brake Control System (EPB)	M1F	Read codes	
FIT SHUTTLE HYBRI /	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FIT SHUTTLE HYBRI /	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FIT SHUTTLE HYBRI /	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FIT SHUTTLE HYBRI /	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FIT SHUTTLE HYBRI /	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FIT SHUTTLE HYBRI /	Electronic Brake Control System (EPB)	M3E	Read codes	
FIT SHUTTLE HYBRI /	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FIT SHUTTLE HYBRI /	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FIT SHUTTLE HYBRI /	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FIT SHUTTLE HYBRI /	Electric Powertrain / IMA	M66	Read ECU Information	
FIT SHUTTLE HYBRI /	Electric Powertrain / IMA	M66	Read codes	
FIT SHUTTLE HYBRI /	Electric Powertrain / IMA	M66	Erase Codes	
FIT SHUTTLE HYBRI /	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Electric Powertrain / IMA	M66	Read Live Data	
FIT SHUTTLE HYBRI /	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FIT SHUTTLE HYBRI /	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FIT SHUTTLE HYBRI /	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FIT SHUTTLE HYBRI /	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FIT SHUTTLE HYBRI /	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FIT SHUTTLE HYBRI /	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FIT SHUTTLE HYBRI /	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FIT SHUTTLE HYBRI /	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FIT SHUTTLE HYBRI /	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FIT SHUTTLE HYBRI /	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FIT SHUTTLE HYBRI /	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Read codes	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn

FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FIT SHUTTLE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FIT SHUTTLE HYBRI /	New energy battery (EV)	M44	Read ECU Information	
FIT SHUTTLE HYBRI /	New energy battery (EV)	M44	Read codes	
FIT SHUTTLE HYBRI /	New energy battery (EV)	M44	Erase Codes	
FIT SHUTTLE HYBRI /	New energy battery (EV)	M44	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	New energy battery (EV)	M44	Read Live Data	
FIT SHUTTLE HYBRI /	New energy battery (EV)	M44	Inspection	
FIT SHUTTLE HYBRI /	New energy battery (EV)	M44	Adjustment	
FIT SHUTTLE HYBRI /	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FIT SHUTTLE HYBRI /	Electronic vacuum pump (EVPS)	M21	Read codes	
FIT SHUTTLE HYBRI /	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FIT SHUTTLE HYBRI /	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FIT SHUTTLE HYBRI /	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FIT SHUTTLE HYBRI /	Electronic vacuum pump (EVPS)	M22	Read codes	
FIT SHUTTLE HYBRI /	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FIT SHUTTLE HYBRI /	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FIT SHUTTLE HYBRI /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FIT SHUTTLE HYBRI /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FIT SHUTTLE HYBRI /	FCW LDW	M4E	Read ECU Information	
FIT SHUTTLE HYBRI /	FCW LDW	M4E	Read codes	
FIT SHUTTLE HYBRI /	FCW LDW	M4E	Erase Codes	
FIT SHUTTLE HYBRI /	FCW LDW	M4E	Read Live Data	
FIT SHUTTLE HYBRI /	FCW LDW	M4E	Function Test	FCW Drive
FIT SHUTTLE HYBRI /	FCW LDW	M4E	Function Test	Left side lane departure warning
FIT SHUTTLE HYBRI /	FCW LDW	M4E	Function Test	Right side lane departure warning
FIT SHUTTLE HYBRI /	FCW LDW	M4E	Function Test	Indicator Drive
FIT SHUTTLE HYBRI /	FCW LDW	M4E	Adjustment	
FIT SHUTTLE HYBRI /	Instrument Display System (GAUGE)	M2C	Read codes	
FIT SHUTTLE HYBRI /	Instrument Display System (GAUGE)	M2C	Erase Codes	
FIT SHUTTLE HYBRI /	Instrument Display System (GAUGE)	M2C	Read Live Data	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Read codes	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Erase Codes	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Read Live Data	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Read codes	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Erase Codes	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Read Live Data	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Read codes	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Erase Codes	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Read Live Data	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Pulser Test	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Read codes	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Erase Codes	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Read Live Data	
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid

FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FIT SHUTTLE HYBRI /	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FIT SHUTTLE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FIT SHUTTLE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Read codes	
FIT SHUTTLE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FIT SHUTTLE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FIT SHUTTLE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Customize	
FIT SHUTTLE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FIT SHUTTLE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FIT SHUTTLE HYBRI /	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FIT SHUTTLE HYBRI /	Hydraulic booster control system (HBS)	M5F	Read codes	
FIT SHUTTLE HYBRI /	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FIT SHUTTLE HYBRI /	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FIT SHUTTLE HYBRI /	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FIT SHUTTLE HYBRI /	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FIT SHUTTLE HYBRI /	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FIT SHUTTLE HYBRI /	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FIT SHUTTLE HYBRI /	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FIT SHUTTLE HYBRI /	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FIT SHUTTLE HYBRI /	IMA	M63	Read ECU Information	
FIT SHUTTLE HYBRI /	IMA	M63	Read codes	
FIT SHUTTLE HYBRI /	IMA	M63	Erase Codes	
FIT SHUTTLE HYBRI /	IMA	M63	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	IMA	M63	Read Live Data	
FIT SHUTTLE HYBRI /	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FIT SHUTTLE HYBRI /	IMA	M63	Adjustment	SOC PRESET
FIT SHUTTLE HYBRI /	IMA	M64	Read ECU Information	
FIT SHUTTLE HYBRI /	IMA	M64	Read codes	
FIT SHUTTLE HYBRI /	IMA	M64	Erase Codes	
FIT SHUTTLE HYBRI /	IMA	M64	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	IMA	M64	Read Live Data	
FIT SHUTTLE HYBRI /	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FIT SHUTTLE HYBRI /	IMA	M64	Adjustment	SOC PRESET
FIT SHUTTLE HYBRI /	IMA	M65	Read ECU Information	
FIT SHUTTLE HYBRI /	IMA	M65	Read codes	
FIT SHUTTLE HYBRI /	IMA	M65	Erase Codes	
FIT SHUTTLE HYBRI /	IMA	M65	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	IMA	M65	Read Live Data	
FIT SHUTTLE HYBRI /	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FIT SHUTTLE HYBRI /	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FIT SHUTTLE HYBRI /	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FIT SHUTTLE HYBRI /	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FIT SHUTTLE HYBRI /	Intake Sounder Control System (ISC)	M6D	Read codes	
FIT SHUTTLE HYBRI /	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FIT SHUTTLE HYBRI /	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FIT SHUTTLE HYBRI /	Night Vision System (INVS)	0XB1	Read ECU Information	
FIT SHUTTLE HYBRI /	Night Vision System (INVS)	0XB1	Read codes	
FIT SHUTTLE HYBRI /	Night Vision System (INVS)	0XB1	Erase Codes	
FIT SHUTTLE HYBRI /	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Night Vision System (INVS)	0XB1	Read Live Data	
FIT SHUTTLE HYBRI /	Night Vision System (INVS)	0XB1	Adjustment	
FIT SHUTTLE HYBRI /	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FIT SHUTTLE HYBRI /	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FIT SHUTTLE HYBRI /	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FIT SHUTTLE HYBRI /	i-SHIFT	0X80	Read ECU Information	
FIT SHUTTLE HYBRI /	i-SHIFT	0X80	Read codes	
FIT SHUTTLE HYBRI /	i-SHIFT	0X80	Erase Codes	
FIT SHUTTLE HYBRI /	i-SHIFT	0X80	Read Live Data	
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Read codes	
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Erase Codes	
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Read Live Data	
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Self Check	
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	History Data	
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving

FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FIT SHUTTLE HYBRI /	Keyless Entry Control System (KAS)	M99	Registration	
FIT SHUTTLE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FIT SHUTTLE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FIT SHUTTLE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FIT SHUTTLE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FIT SHUTTLE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FIT SHUTTLE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FIT SHUTTLE HYBRI /	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
FIT SHUTTLE HYBRI /	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
FIT SHUTTLE HYBRI /	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
FIT SHUTTLE HYBRI /	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
FIT SHUTTLE HYBRI /	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
FIT SHUTTLE HYBRI /	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
FIT SHUTTLE HYBRI /	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
FIT SHUTTLE HYBRI /	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
FIT SHUTTLE HYBRI /	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
FIT SHUTTLE HYBRI /	Management ECU Module (ME)	M74	Read ECU Information	
FIT SHUTTLE HYBRI /	Management ECU Module (ME)	M74	Read codes	
FIT SHUTTLE HYBRI /	Management ECU Module (ME)	M74	Erase Codes	
FIT SHUTTLE HYBRI /	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Management ECU Module (ME)	M74	Read Live Data	
FIT SHUTTLE HYBRI /	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
FIT SHUTTLE HYBRI /	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
FIT SHUTTLE HYBRI /	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
FIT SHUTTLE HYBRI /	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
FIT SHUTTLE HYBRI /	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FIT SHUTTLE HYBRI /	Multi-view camera system (MVCS)	M7A	Read codes	
FIT SHUTTLE HYBRI /	Multi-view camera system (MVCS)	M7A	Erase Codes	
FIT SHUTTLE HYBRI /	Multi-view camera system (MVCS)	M7A	Read Live Data	
FIT SHUTTLE HYBRI /	Multi-view camera system (MVCS)	M7A	Customization	
FIT SHUTTLE HYBRI /	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FIT SHUTTLE HYBRI /	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FIT SHUTTLE HYBRI /	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
FIT SHUTTLE HYBRI /	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FIT SHUTTLE HYBRI /	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FIT SHUTTLE HYBRI /	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FIT SHUTTLE HYBRI /	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FIT SHUTTLE HYBRI /	Power Control Unit (PCU)	M83	Read ECU Information	
FIT SHUTTLE HYBRI /	Power Control Unit (PCU)	M83	Read codes	
FIT SHUTTLE HYBRI /	Power Control Unit (PCU)	M83	Erase Codes	
FIT SHUTTLE HYBRI /	Power Control Unit (PCU)	M83	Read Live Data	
FIT SHUTTLE HYBRI /	Power Control Unit (PCU)	M83	Self Check	
FIT SHUTTLE HYBRI /	Power Control Unit (PCU)	M83	History Data	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Read ECU Information	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Read codes	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Erase Codes	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Readiness Codes	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Read Live Data	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH

FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	VIN CHECK	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	Read ECU Information	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	Read codes	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	Erase Codes	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	Readiness Codes	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	Read Live Data	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	VIN CHECK	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Read ECU Information	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Read codes	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Erase Codes	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Readiness Codes	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Read Live Data	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	ACM
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	VIN CHECK	
FIT SHUTTLE HYBRI /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FIT SHUTTLE HYBRI /	Four-wheel precision steering control system (PAWSC M96		Read codes	
FIT SHUTTLE HYBRI /	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
FIT SHUTTLE HYBRI /	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
FIT SHUTTLE HYBRI /	PSR	M27	Read ECU Information	
FIT SHUTTLE HYBRI /	PSR	M27	Read codes	
FIT SHUTTLE HYBRI /	PSR	M27	Erase Codes	
FIT SHUTTLE HYBRI /	PSR	M27	Read Live Data	
FIT SHUTTLE HYBRI /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FIT SHUTTLE HYBRI /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FIT SHUTTLE HYBRI /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FIT SHUTTLE HYBRI /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FIT SHUTTLE HYBRI /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FIT SHUTTLE HYBRI /	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
FIT SHUTTLE HYBRI /	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
FIT SHUTTLE HYBRI /	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
FIT SHUTTLE HYBRI /	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
FIT SHUTTLE HYBRI /	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
FIT SHUTTLE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FIT SHUTTLE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FIT SHUTTLE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FIT SHUTTLE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FIT SHUTTLE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FIT SHUTTLE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FIT SHUTTLE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FIT SHUTTLE HYBRI /	Remote starter (RS)	M90	System Check	
FIT SHUTTLE HYBRI /	Remote starter (RS)	M90	HISTORY	
FIT SHUTTLE HYBRI /	Remote starter (RS)	M90	Registration	
FIT SHUTTLE HYBRI /	Seat load cell (SWS)	M6F	Read ECU Information	
FIT SHUTTLE HYBRI /	Seat load cell (SWS)	M6F	Read codes	
FIT SHUTTLE HYBRI /	Seat load cell (SWS)	M6F	Erase Codes	
FIT SHUTTLE HYBRI /	Seat load cell (SWS)	M6F	Read Live Data	
FIT SHUTTLE HYBRI /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FIT SHUTTLE HYBRI /	Seat load cell (SWS)	M6F	System Check	Seat Output Check

FIT SHUTTLE HYBRI /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FIT SHUTTLE HYBRI /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
FIT SHUTTLE HYBRI /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FIT SHUTTLE HYBRI /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FIT SHUTTLE HYBRI /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FIT SHUTTLE HYBRI /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FIT SHUTTLE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FIT SHUTTLE HYBRI /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FIT SHUTTLE HYBRI /	Groove track drive unit (SLOT ECU)	M98	Read codes	
FIT SHUTTLE HYBRI /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FIT SHUTTLE HYBRI /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FIT SHUTTLE HYBRI /	Groove track drive unit (SLOT ECU)	M98	Self Check	
FIT SHUTTLE HYBRI /	Groove track drive unit (SLOT ECU)	M98	History Data	
FIT SHUTTLE HYBRI /	Groove track drive unit (SLOT ECU)	M98	System Information	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9F	Read ECU Information	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9F	Read codes	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9F	Erase Codes	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9F	Read Live Data	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	MA0	Read ECU Information	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	MA0	Read codes	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	MA0	Erase Codes	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	MA0	Read Live Data	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	MA1	Read ECU Information	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	MA1	Read codes	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	MA1	Erase Codes	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	MA1	Read Live Data	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M2A	Read codes	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M2A	Erase Codes	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M2A	Read Live Data	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9C	Read ECU Information	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9C	Read codes	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9C	Erase Codes	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9C	Read Live Data	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9D	Read ECU Information	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9D	Read codes	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9D	Erase Codes	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9D	Read Live Data	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9D	Parameter Information	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9D	Function Test	
FIT SHUTTLE HYBRI /	Airbag Control System (SRS)	M9D	System Information	
FIT SHUTTLE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FIT SHUTTLE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FIT SHUTTLE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FIT SHUTTLE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FIT SHUTTLE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FIT SHUTTLE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FIT SHUTTLE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FIT SHUTTLE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FIT SHUTTLE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	System Information	
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FIT SHUTTLE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	

FIT SHUTTLE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FIT SHUTTLE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FIT SHUTTLE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FIT SHUTTLE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FIT SHUTTLE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FIT SHUTTLE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FIT SHUTTLE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FIT SHUTTLE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FIT twist /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FIT twist /	Four-wheel steering control system (4WS)	M52	Read codes	
FIT twist /	Four-wheel steering control system (4WS)	M52	Erase Codes	
FIT twist /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FIT twist /	Four-wheel steering control system (4WS)	M52	Read Live Data	
FIT twist /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FIT twist /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FIT twist /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FIT twist /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FIT twist /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FIT twist /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FIT twist /	Automatic shift control system (A/T)	M1E	Read ECU Information	
FIT twist /	Automatic shift control system (A/T)	M1E	Read codes	
FIT twist /	Automatic shift control system (A/T)	M1E	Erase Codes	
FIT twist /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FIT twist /	Automatic shift control system (A/T)	M1E	Read Live Data	
FIT twist /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FIT twist /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FIT twist /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FIT twist /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT twist /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT twist /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT twist /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT twist /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FIT twist /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FIT twist /	Automatic shift control system (A/T)	M3B	Read ECU Information	
FIT twist /	Automatic shift control system (A/T)	M3B	Read codes	
FIT twist /	Automatic shift control system (A/T)	M3B	Erase Codes	
FIT twist /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FIT twist /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FIT twist /	Automatic shift control system (A/T)	M3B	Read Live Data	
FIT twist /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FIT twist /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FIT twist /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FIT twist /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FIT twist /	Automatic shift control system (A/T)	M3C	Read ECU Information	
FIT twist /	Automatic shift control system (A/T)	M3C	Read codes	
FIT twist /	Automatic shift control system (A/T)	M3C	Erase Codes	
FIT twist /	Automatic shift control system (A/T)	M81	Read ECU Information	
FIT twist /	Automatic shift control system (A/T)	M81	Read codes	
FIT twist /	Automatic shift control system (A/T)	M81	Erase Codes	
FIT twist /	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FIT twist /	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FIT twist /	Automatic shift control system (A/T)	M81	Read Live Data	
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FIT twist /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FIT twist /	Automatic shift control system (A/T)	M82	Read ECU Information	
FIT twist /	Automatic shift control system (A/T)	M82	Read codes	
FIT twist /	Automatic shift control system (A/T)	M82	Erase Codes	
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
FIT twist /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
FIT twist /	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FIT twist /	Active Engine Control Support System (ACM)	M06	Read codes	
FIT twist /	Active Engine Control Support System (ACM)	M06	Erase Codes	
FIT twist /	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	

FIT twist	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
FIT twist	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
FIT twist	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FIT twist	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FIT twist	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FIT twist	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FIT twist	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FIT twist	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FIT twist	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FIT twist	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
FIT twist	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
FIT twist	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
FIT twist	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
FIT twist	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
FIT twist	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
FIT twist	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
FIT twist	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
FIT twist	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
FIT twist	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
FIT twist	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
FIT twist	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
FIT twist	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
FIT twist	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
FIT twist	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
FIT twist	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
FIT twist	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
FIT twist	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
FIT twist	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
FIT twist	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
FIT twist	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
FIT twist	/	Transmission Control System (AT)	M18	Read ECU Information	
FIT twist	/	Transmission Control System (AT)	M18	Read codes	
FIT twist	/	Transmission Control System (AT)	M18	Erase Codes	
FIT twist	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FIT twist	/	Transmission Control System (AT)	M18	Read Live Data	
FIT twist	/	Transmission Control System (AT)	M18	Adjustment	
FIT twist	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
FIT twist	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
FIT twist	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
FIT twist	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
FIT twist	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
FIT twist	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FIT twist	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
FIT twist	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FIT twist	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
FIT twist	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FIT twist	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FIT twist	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FIT twist	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FIT twist	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FIT twist	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FIT twist	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
FIT twist	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
FIT twist	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
FIT twist	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
FIT twist	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
FIT twist	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FIT twist	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FIT twist	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FIT twist	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FIT twist	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors



FIT twist	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FIT twist	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FIT twist	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FIT twist	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FIT twist	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FIT twist	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FIT twist	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FIT twist	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FIT twist	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FIT twist	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FIT twist	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FIT twist	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FIT twist	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FIT twist	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FIT twist	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat

FIT twist	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FIT twist	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FIT twist	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FIT twist	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FIT twist	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FIT twist	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FIT twist	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FIT twist	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FIT twist	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FIT twist	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FIT twist	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Security	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FIT twist	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FIT twist	/	BODY ELECTRICAL/Security	MFF	History Data	
FIT twist	/	BODY ELECTRICAL/Security	MFF	History Clear	
FIT twist	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FIT twist	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FIT twist	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT twist	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FIT twist	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FIT twist	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FIT twist	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FIT twist	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FIT twist	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FIT twist	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FIT twist	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
FIT twist	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FIT twist	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FIT twist	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FIT twist	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FIT twist	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FIT twist	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FIT twist	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FIT twist	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FIT twist	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FIT twist	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FIT twist	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FIT twist	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	

FIT twist	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FIT twist	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
FIT twist	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FIT twist	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FIT twist	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FIT twist	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FIT twist	/	Collision Mitigation Brake Control System (CMBS/CM	M2E	Read ECU Information	
FIT twist	/	Collision Mitigation Brake Control System (CMBS/CM	M2E	Read codes	
FIT twist	/	Collision Mitigation Brake Control System (CMBS/CM	M2E	Erase Codes	
FIT twist	/	Collision Mitigation Brake Control System (CMBS/CM	M2E	Read Freeze Frame Data	
FIT twist	/	Collision Mitigation Brake Control System (CMBS/CM	M2E	Read Live Data	
FIT twist	/	Collision Mitigation Brake Control System (CMBS/CM	M2E	CMBS (CMS) ACTIVATION HISTORY	
FIT twist	/	Collision Mitigation Brake Control System (CMBS/CM	M2E	Miscellaneous Test	RADAR AIMING
FIT twist	/	Collision Mitigation Brake Control System (CMBS/CM	M2E	Miscellaneous Test	CMBS Brake
FIT twist	/	Promise Automatic Transmission Control System (CVT	M1B	Read ECU Information	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M1B	Read codes	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M1B	Erase Codes	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M1B	Read Freeze Frame Data	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M1B	Read Live Data	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M1B	ECMPCMC Reset	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M1B	Miscellaneous Test	Shift Lock Solenoid Test
FIT twist	/	Promise Automatic Transmission Control System (CVT	M1B	Miscellaneous Test	Shift Solenoid Tests
FIT twist	/	Promise Automatic Transmission Control System (CVT	M1B	Miscellaneous Test	Electrical Oil Pump Activation
FIT twist	/	Promise Automatic Transmission Control System (CVT	M33	Read ECU Information	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M33	Read codes	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M33	Erase Codes	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M33	Read Freeze Frame Data	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M33	Read Live Data	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M33	ECMPCMC Reset	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M33	Miscellaneous Test	Inhibitor Solenoid
FIT twist	/	Promise Automatic Transmission Control System (CVT	M33	Miscellaneous Test	CAS Solenoid A (LF)
FIT twist	/	Promise Automatic Transmission Control System (CVT	M33	Miscellaneous Test	CAS Solenoid B (RF)
FIT twist	/	Promise Automatic Transmission Control System (CVT	M33	Miscellaneous Test	Start Clutch Feedback Learn
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	Read ECU Information	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	Read codes	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	Erase Codes	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	Read Freeze Frame Data	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	Read Live Data	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	ECMPCMC Reset	
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Inhibitor Solenoid
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	CAS Solenoid A (LF)
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	CAS Solenoid B (RF)
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Start Clutch Feedback Learn
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Shift solenoid Valve A
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Shift solenoid Valve B
FIT twist	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Shift solenoid Valve O/P
FIT twist	/	DBW	M34	Read ECU Information	
FIT twist	/	DBW	M34	Read codes	
FIT twist	/	DBW	M34	Erase Codes	
FIT twist	/	DBW	M34	Read Freeze Frame Data	
FIT twist	/	DBW	M34	Read Live Data	
FIT twist	/	DBW	M34	Inspection	Idle Speed Adjust
FIT twist	/	DBW	M34	Inspection	Throttle Test
FIT twist	/	DBW	M34	ECM Reset	
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FIT twist	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FIT twist	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FIT twist	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
FIT twist	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FIT twist	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FIT twist	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FIT twist	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FIT twist	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FIT twist	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FIT twist	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	

FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FIT twist	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FIT twist	/	Capacitor Control System (EDLC)	M12	Read codes	
FIT twist	/	Capacitor Control System (EDLC)	M12	Erase Codes	
FIT twist	/	Capacitor Control System (EDLC)	M12	Read Live Data	
FIT twist	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FIT twist	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FIT twist	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FIT twist	/	Electronic Brake Control System (EPB)	M1F	Read codes	
FIT twist	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FIT twist	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FIT twist	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FIT twist	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FIT twist	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FIT twist	/	Electronic Brake Control System (EPB)	M3E	Read codes	
FIT twist	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FIT twist	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FIT twist	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FIT twist	/	Electric Powertrain / IMA	M66	Read ECU Information	
FIT twist	/	Electric Powertrain / IMA	M66	Read codes	
FIT twist	/	Electric Powertrain / IMA	M66	Erase Codes	
FIT twist	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FIT twist	/	Electric Powertrain / IMA	M66	Read Live Data	
FIT twist	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FIT twist	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FIT twist	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FIT twist	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FIT twist	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FIT twist	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FIT twist	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FIT twist	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FIT twist	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FIT twist	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FIT twist	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FIT twist	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FIT twist	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FIT twist	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FIT twist	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FIT twist	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FIT twist	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FIT twist	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FIT twist	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FIT twist	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FIT twist	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FIT twist	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FIT twist	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FIT twist	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FIT twist	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FIT twist	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FIT twist	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FIT twist	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FIT twist	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FIT twist	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FIT twist	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FIT twist	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FIT twist	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FIT twist	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FIT twist	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FIT twist	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FIT twist	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FIT twist	/	New energy battery (EV)	M44	Read ECU Information	
FIT twist	/	New energy battery (EV)	M44	Read codes	
FIT twist	/	New energy battery (EV)	M44	Erase Codes	
FIT twist	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FIT twist	/	New energy battery (EV)	M44	Read Live Data	
FIT twist	/	New energy battery (EV)	M44	Inspection	
FIT twist	/	New energy battery (EV)	M44	Adjustment	
FIT twist	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FIT twist	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FIT twist	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FIT twist	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FIT twist	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FIT twist	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FIT twist	/	Electronic vacuum pump (EVPS)	M22	Read codes	
FIT twist	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FIT twist	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FIT twist	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FIT twist	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FIT twist	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FIT twist	/	FCW LDW	M4E	Read ECU Information	

FIT twist	/	FCW LDW	M4E	Read codes	
FIT twist	/	FCW LDW	M4E	Erase Codes	
FIT twist	/	FCW LDW	M4E	Read Live Data	
FIT twist	/	FCW LDW	M4E	Function Test	FCW Drive
FIT twist	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FIT twist	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FIT twist	/	FCW LDW	M4E	Function Test	Indicator Drive
FIT twist	/	FCW LDW	M4E	Adjustment	
FIT twist	/	Instrument Display System (GAUGE)	M2C	Read codes	
FIT twist	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FIT twist	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FIT twist	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FIT twist	/	Anti-lock brake control system (ABS)	M01	Read codes	
FIT twist	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FIT twist	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FIT twist	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FIT twist	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FIT twist	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FIT twist	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FIT twist	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FIT twist	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FIT twist	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FIT twist	/	Anti-lock brake control system (ABS)	M02	Read codes	
FIT twist	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FIT twist	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FIT twist	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FIT twist	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FIT twist	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FIT twist	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FIT twist	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FIT twist	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FIT twist	/	Anti-lock brake control system (ABS)	M03	Read codes	
FIT twist	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
FIT twist	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
FIT twist	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FIT twist	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FIT twist	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FIT twist	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FIT twist	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
FIT twist	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FIT twist	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FIT twist	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FIT twist	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FIT twist	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FIT twist	/	Anti-lock brake control system (ABS)	M19	Read codes	
FIT twist	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
FIT twist	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
FIT twist	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FIT twist	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FIT twist	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FIT twist	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FIT twist	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FIT twist	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FIT twist	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FIT twist	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FIT twist	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FIT twist	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FIT twist	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
FIT twist	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FIT twist	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FIT twist	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FIT twist	/	Intelligent Parking Control System (SPS)	M9B	Customize	
FIT twist	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FIT twist	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FIT twist	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FIT twist	/	Hydraulic booster control system (HBS)	M5F	Read codes	
FIT twist	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FIT twist	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FIT twist	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FIT twist	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FIT twist	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FIT twist	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FIT twist	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FIT twist	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FIT twist	/	IMA	M63	Read ECU Information	
FIT twist	/	IMA	M63	Read codes	
FIT twist	/	IMA	M63	Erase Codes	
FIT twist	/	IMA	M63	Read Freeze Frame Data	

FIT twist	/	IMA	M63	Read Live Data	
FIT twist	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FIT twist	/	IMA	M63	Adjustment	SOC PRESET
FIT twist	/	IMA	M64	Read ECU Information	
FIT twist	/	IMA	M64	Read codes	
FIT twist	/	IMA	M64	Erase Codes	
FIT twist	/	IMA	M64	Read Freeze Frame Data	
FIT twist	/	IMA	M64	Read Live Data	
FIT twist	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FIT twist	/	IMA	M64	Adjustment	SOC PRESET
FIT twist	/	IMA	M65	Read ECU Information	
FIT twist	/	IMA	M65	Read codes	
FIT twist	/	IMA	M65	Erase Codes	
FIT twist	/	IMA	M65	Read Freeze Frame Data	
FIT twist	/	IMA	M65	Read Live Data	
FIT twist	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FIT twist	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FIT twist	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FIT twist	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FIT twist	/	Intake Sounder Control System (ISC)	M6D	Read codes	
FIT twist	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FIT twist	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FIT twist	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FIT twist	/	Night Vision System (INVS)	0XB1	Read ECU Information	
FIT twist	/	Night Vision System (INVS)	0XB1	Read codes	
FIT twist	/	Night Vision System (INVS)	0XB1	Erase Codes	
FIT twist	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FIT twist	/	Night Vision System (INVS)	0XB1	Read Live Data	
FIT twist	/	Night Vision System (INVS)	0XB1	Adjustment	
FIT twist	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FIT twist	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FIT twist	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FIT twist	/	i-SHIFT	0XB0	Read ECU Information	
FIT twist	/	i-SHIFT	0XB0	Read codes	
FIT twist	/	i-SHIFT	0XB0	Erase Codes	
FIT twist	/	i-SHIFT	0XB0	Read Live Data	
FIT twist	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FIT twist	/	Keyless Entry Control System (KAS)	M99	Read codes	
FIT twist	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FIT twist	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FIT twist	/	Keyless Entry Control System (KAS)	M99	Self Check	
FIT twist	/	Keyless Entry Control System (KAS)	M99	History Data	
FIT twist	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FIT twist	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output

FIT twist	/	Keyless Entry Control System (KAS)	M99	Registration	
FIT twist	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FIT twist	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FIT twist	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FIT twist	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FIT twist	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FIT twist	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FIT twist	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FIT twist	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
FIT twist	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
FIT twist	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
FIT twist	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
FIT twist	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
FIT twist	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
FIT twist	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
FIT twist	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
FIT twist	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
FIT twist	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
FIT twist	/	Management ECU Module (ME)	M74	Read ECU Information	
FIT twist	/	Management ECU Module (ME)	M74	Read codes	
FIT twist	/	Management ECU Module (ME)	M74	Erase Codes	
FIT twist	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FIT twist	/	Management ECU Module (ME)	M74	Read Live Data	
FIT twist	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
FIT twist	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
FIT twist	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
FIT twist	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
FIT twist	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FIT twist	/	Multi-view camera system (MVCS)	M7A	Read codes	
FIT twist	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
FIT twist	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
FIT twist	/	Multi-view camera system (MVCS)	M7A	Customization	
FIT twist	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FIT twist	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FIT twist	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
FIT twist	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FIT twist	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FIT twist	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FIT twist	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FIT twist	/	Power Control Unit (PCU)	M83	Read ECU Information	
FIT twist	/	Power Control Unit (PCU)	M83	Read codes	
FIT twist	/	Power Control Unit (PCU)	M83	Erase Codes	
FIT twist	/	Power Control Unit (PCU)	M83	Read Live Data	
FIT twist	/	Power Control Unit (PCU)	M83	Self Check	
FIT twist	/	Power Control Unit (PCU)	M83	History Data	
FIT twist	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
FIT twist	/	Engine Control System (PGM-FI)	M23	Read codes	
FIT twist	/	Engine Control System (PGM-FI)	M23	Erase Codes	
FIT twist	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
FIT twist	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FIT twist	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FIT twist	/	Engine Control System (PGM-FI)	M23	Read Live Data	
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FIT twist	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FIT twist	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FIT twist	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FIT twist	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FIT twist	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
FIT twist	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FIT twist	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
FIT twist	/	Engine Control System (PGM-FI)	M50	Read codes	
FIT twist	/	Engine Control System (PGM-FI)	M50	Erase Codes	
FIT twist	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
FIT twist	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FIT twist	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FIT twist	/	Engine Control System (PGM-FI)	M50	Read Live Data	
FIT twist	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FIT twist	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FIT twist	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FIT twist	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FIT twist	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
FIT twist	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FIT twist	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
FIT twist	/	Engine Control System (PGM-FI)	M86	Read codes	
FIT twist	/	Engine Control System (PGM-FI)	M86	Erase Codes	
FIT twist	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
FIT twist	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	

FIT twist	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FIT twist	/	Engine Control System (PGM-FI)	M86	Read Live Data	
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FIT twist	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FIT twist	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FIT twist	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FIT twist	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
FIT twist	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FIT twist	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
FIT twist	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
FIT twist	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
FIT twist	/	PSR	M27	Read ECU Information	
FIT twist	/	PSR	M27	Read codes	
FIT twist	/	PSR	M27	Erase Codes	
FIT twist	/	PSR	M27	Read Live Data	
FIT twist	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FIT twist	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FIT twist	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FIT twist	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FIT twist	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FIT twist	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
FIT twist	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
FIT twist	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
FIT twist	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
FIT twist	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
FIT twist	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
FIT twist	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FIT twist	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FIT twist	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FIT twist	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FIT twist	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FIT twist	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FIT twist	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FIT twist	/	Remote starter (RS)	M90	System Check	
FIT twist	/	Remote starter (RS)	M90	HISTORY	
FIT twist	/	Remote starter (RS)	M90	Registration	
FIT twist	/	Seat load cell (SWS)	M6F	Read ECU Information	
FIT twist	/	Seat load cell (SWS)	M6F	Read codes	
FIT twist	/	Seat load cell (SWS)	M6F	Erase Codes	
FIT twist	/	Seat load cell (SWS)	M6F	Read Live Data	
FIT twist	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FIT twist	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FIT twist	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FIT twist	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
FIT twist	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FIT twist	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FIT twist	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FIT twist	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FIT twist	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FIT twist	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FIT twist	/	Groove track drive unit (SLOT ECU)	M98	Read codes	



FIT twist	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FIT twist	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FIT twist	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
FIT twist	/	Groove track drive unit (SLOT ECU)	M98	History Data	
FIT twist	/	Groove track drive unit (SLOT ECU)	M98	System Information	
FIT twist	/	Airbag Control System (SRS)	M9F	Read ECU Information	
FIT twist	/	Airbag Control System (SRS)	M9F	Read codes	
FIT twist	/	Airbag Control System (SRS)	M9F	Erase Codes	
FIT twist	/	Airbag Control System (SRS)	M9F	Read Live Data	
FIT twist	/	Airbag Control System (SRS)	MA0	Read ECU Information	
FIT twist	/	Airbag Control System (SRS)	MA0	Read codes	
FIT twist	/	Airbag Control System (SRS)	MA0	Erase Codes	
FIT twist	/	Airbag Control System (SRS)	MA0	Read Live Data	
FIT twist	/	Airbag Control System (SRS)	MA1	Read ECU Information	
FIT twist	/	Airbag Control System (SRS)	MA1	Read codes	
FIT twist	/	Airbag Control System (SRS)	MA1	Erase Codes	
FIT twist	/	Airbag Control System (SRS)	MA1	Read Live Data	
FIT twist	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FIT twist	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FIT twist	/	Airbag Control System (SRS)	M2A	Read codes	
FIT twist	/	Airbag Control System (SRS)	M2A	Erase Codes	
FIT twist	/	Airbag Control System (SRS)	M2A	Read Live Data	
FIT twist	/	Airbag Control System (SRS)	M9C	Read ECU Information	
FIT twist	/	Airbag Control System (SRS)	M9C	Read codes	
FIT twist	/	Airbag Control System (SRS)	M9C	Erase Codes	
FIT twist	/	Airbag Control System (SRS)	M9C	Read Live Data	
FIT twist	/	Airbag Control System (SRS)	M9D	Read ECU Information	
FIT twist	/	Airbag Control System (SRS)	M9D	Read codes	
FIT twist	/	Airbag Control System (SRS)	M9D	Erase Codes	
FIT twist	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FIT twist	/	Airbag Control System (SRS)	M9D	Read Live Data	
FIT twist	/	Airbag Control System (SRS)	M9D	Parameter Information	
FIT twist	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FIT twist	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FIT twist	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FIT twist	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FIT twist	/	Airbag Control System (SRS)	M9D	Function Test	
FIT twist	/	Airbag Control System (SRS)	M9D	System Information	
FIT twist	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FIT twist	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FIT twist	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FIT twist	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FIT twist	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FIT twist	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FIT twist	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FIT twist	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FIT twist	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FIT twist	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FIT twist	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FIT twist	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FIT twist	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FIT twist	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FIT twist	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FIT twist	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FIT twist	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FIT twist	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FIT twist	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FR-V	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FR-V	/	Four-wheel steering control system (4WS)	M52	Read codes	
FR-V	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
FR-V	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FR-V	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
FR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FR-V	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
FR-V	/	Automatic shift control system (A/T)	M1E	Read codes	
FR-V	/	Automatic shift control system (A/T)	M1E	Erase Codes	
FR-V	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FR-V	/	Automatic shift control system (A/T)	M1E	Read Live Data	
FR-V	/	Automatic shift control system (A/T)	M1E	ECMPCAM Reset	
FR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode

FR-V	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FR-V	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
FR-V	/	Automatic shift control system (A/T)	M3B	Read codes	
FR-V	/	Automatic shift control system (A/T)	M3B	Erase Codes	
FR-V	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FR-V	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FR-V	/	Automatic shift control system (A/T)	M3B	Read Live Data	
FR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FR-V	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
FR-V	/	Automatic shift control system (A/T)	M3C	Read codes	
FR-V	/	Automatic shift control system (A/T)	M3C	Erase Codes	
FR-V	/	Automatic shift control system (A/T)	M81	Read ECU Information	
FR-V	/	Automatic shift control system (A/T)	M81	Read codes	
FR-V	/	Automatic shift control system (A/T)	M81	Erase Codes	
FR-V	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FR-V	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FR-V	/	Automatic shift control system (A/T)	M81	Read Live Data	
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve D
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve E
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FR-V	/	Automatic shift control system (A/T)	M82	Read ECU Information	
FR-V	/	Automatic shift control system (A/T)	M82	Read codes	
FR-V	/	Automatic shift control system (A/T)	M82	Erase Codes	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read codes	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Erase Codes	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Freeze Frame Data	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Live Data	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	Throttle Opening Angle Test
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 1
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 2
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	LIGHT CHECK
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BUZZER CHECK
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read ECU Information	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read codes	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Erase Codes	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Freeze Frame Data	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Live Data	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Adjustment	RADAR AIMING
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	BRAKE ACTUATOR 3
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ACC relay malfunction.
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INDICATOR LIGHT
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INFORMATION DISPLAY
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ALARM BUZZER
FR-V	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FR-V	/	Active Engine Control Support System (ACM)	M06	Read codes	
FR-V	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
FR-V	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FR-V	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
FR-V	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
FR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FR-V	/	Active / Automatic Shock Absorber Control System (A	MOD	Read ECU Information	
FR-V	/	Active / Automatic Shock Absorber Control System (A	MOD	Read codes	
FR-V	/	Active / Automatic Shock Absorber Control System (A	MOD	Erase Codes	
FR-V	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Freeze Frame Data	
FR-V	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Live Data	
FR-V	/	Active / Automatic Shock Absorber Control System (A	MOD	Function Test	Damper Force Operation Test
FR-V	/	Active / Automatic Shock Absorber Control System (A	MOD	Adjustment	Damper Stroke Calibration
FR-V	/	Active / Automatic Shock Absorber Control System (A	M1A	Read codes	
FR-V	/	Active / Automatic Shock Absorber Control System (A	M1A	Erase Codes	
FR-V	/	Active / Automatic Shock Absorber Control System (A	M1A	Read Live Data	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read codes	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Erase Codes	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Freeze Frame Data	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Live Data	
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	ACC Brake (Brake Actuator)
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	CMBS Brake
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Brake Light (ACC Relay)
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Indicator Light
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Information Display
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Alarm Test
FR-V	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Adjustment	Radar aiming
FR-V	/	Transmission Control System (AT)	M18	Read ECU Information	
FR-V	/	Transmission Control System (AT)	M18	Read codes	

FR-V	/	Transmission Control System (AT)	M18	Erase Codes	
FR-V	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FR-V	/	Transmission Control System (AT)	M18	Read Live Data	
FR-V	/	Transmission Control System (AT)	M18	Adjustment	
FR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
FR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
FR-V	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
FR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
FR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
FR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
FR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
FR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FR-V	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FR-V	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
FR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
FR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
FR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
FR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
FR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FR-V	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FR-V	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator

FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side

FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Security	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FR-V	/	BODY ELECTRICAL/Security	MFF	History Data	
FR-V	/	BODY ELECTRICAL/Security	MFF	History Clear	
FR-V	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FR-V	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FR-V	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
FR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FR-V	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FR-V	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
FR-V	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FR-V	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FR-V	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FR-V	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read ECU Information	
FR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read codes	
FR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Erase Codes	
FR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Freeze Frame Data	
FR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Live Data	
FR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
FR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	RADAR AIMING
FR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	CMBS Brake
FR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
FR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
FR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
FR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
FR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
FR-V	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
FR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
FR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
FR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
FR-V	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
FR-V	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
FR-V	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
FR-V	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
FR-V	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
FR-V	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
FR-V	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
FR-V	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
FR-V	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)

FR-V	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn	
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information		
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	Read codes		
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes		
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data		
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data		
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	ECM/PCM Reset		
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid	
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)	
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)	
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn	
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A	
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B	
FR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P	
FR-V	/	DBW	M34	Read ECU Information	
FR-V	/	DBW	M34	Read codes	
FR-V	/	DBW	M34	Erase Codes	
FR-V	/	DBW	M34	Read Freeze Frame Data	
FR-V	/	DBW	M34	Read Live Data	
FR-V	/	DBW	M34	Inspection	Idle Speed Adjust
FR-V	/	DBW	M34	Inspection	Throttle Test
FR-V	/	DBW	M34	ECM Reset	
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FR-V	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FR-V	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FR-V	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
FR-V	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FR-V	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FR-V	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FR-V	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FR-V	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FR-V	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FR-V	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FR-V	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FR-V	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FR-V	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FR-V	/	Capacitor Control System (EDLC)	M12	Read codes	
FR-V	/	Capacitor Control System (EDLC)	M12	Erase Codes	
FR-V	/	Capacitor Control System (EDLC)	M12	Read Live Data	
FR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FR-V	/	Electronic Brake Control System (EPB)	M1F	Read codes	
FR-V	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FR-V	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FR-V	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FR-V	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FR-V	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FR-V	/	Electronic Brake Control System (EPB)	M3E	Read codes	
FR-V	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FR-V	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FR-V	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FR-V	/	Electric Powertrain / IMA	M66	Read ECU Information	

FR-V	/	Electric Powertrain / IMA	M66	Read codes	
FR-V	/	Electric Powertrain / IMA	M66	Erase Codes	
FR-V	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FR-V	/	Electric Powertrain / IMA	M66	Read Live Data	
FR-V	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FR-V	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FR-V	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FR-V	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FR-V	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FR-V	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FR-V	/	New energy battery (EV)	M44	Read ECU Information	
FR-V	/	New energy battery (EV)	M44	Read codes	
FR-V	/	New energy battery (EV)	M44	Erase Codes	
FR-V	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FR-V	/	New energy battery (EV)	M44	Read Live Data	
FR-V	/	New energy battery (EV)	M44	Inspection	
FR-V	/	New energy battery (EV)	M44	Adjustment	
FR-V	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FR-V	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FR-V	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FR-V	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FR-V	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FR-V	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FR-V	/	Electronic vacuum pump (EVPS)	M22	Read codes	
FR-V	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FR-V	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FR-V	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FR-V	/	FCW LDW	M4E	Read ECU Information	
FR-V	/	FCW LDW	M4E	Read codes	
FR-V	/	FCW LDW	M4E	Erase Codes	
FR-V	/	FCW LDW	M4E	Read Live Data	
FR-V	/	FCW LDW	M4E	Function Test	FCW Drive
FR-V	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FR-V	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FR-V	/	FCW LDW	M4E	Function Test	Indicator Drive
FR-V	/	FCW LDW	M4E	Adjustment	
FR-V	/	Instrument Display System (GAUGE)	M2C	Read codes	
FR-V	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FR-V	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FR-V	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FR-V	/	Anti-lock brake control system (ABS)	M01	Read codes	
FR-V	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FR-V	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FR-V	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FR-V	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FR-V	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FR-V	/	Anti-lock brake control system (ABS)	M02	Read codes	
FR-V	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FR-V	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FR-V	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid

FR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FR-V	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FR-V	/	Anti-lock brake control system (ABS)	M03	Read codes	
FR-V	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
FR-V	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
FR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FR-V	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
FR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FR-V	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FR-V	/	Anti-lock brake control system (ABS)	M19	Read codes	
FR-V	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
FR-V	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
FR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FR-V	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FR-V	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FR-V	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
FR-V	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FR-V	/	Intelligent Parking Control System (SPS)	M9B	Customize	
FR-V	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FR-V	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FR-V	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FR-V	/	Hydraulic booster control system (HBS)	M5F	Read codes	
FR-V	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FR-V	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FR-V	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FR-V	/	IMA	M63	Read ECU Information	
FR-V	/	IMA	M63	Read codes	
FR-V	/	IMA	M63	Erase Codes	
FR-V	/	IMA	M63	Read Freeze Frame Data	
FR-V	/	IMA	M63	Read Live Data	
FR-V	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FR-V	/	IMA	M63	Adjustment	SOC PRESET
FR-V	/	IMA	M64	Read ECU Information	
FR-V	/	IMA	M64	Read codes	
FR-V	/	IMA	M64	Erase Codes	
FR-V	/	IMA	M64	Read Freeze Frame Data	
FR-V	/	IMA	M64	Read Live Data	
FR-V	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FR-V	/	IMA	M64	Adjustment	SOC PRESET
FR-V	/	IMA	M65	Read ECU Information	
FR-V	/	IMA	M65	Read codes	
FR-V	/	IMA	M65	Erase Codes	
FR-V	/	IMA	M65	Read Freeze Frame Data	
FR-V	/	IMA	M65	Read Live Data	
FR-V	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FR-V	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FR-V	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FR-V	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FR-V	/	Intake Sounder Control System (ISC)	M6D	Read codes	
FR-V	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FR-V	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FR-V	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FR-V	/	Night Vision System (INVS)	0XB1	Read ECU Information	
FR-V	/	Night Vision System (INVS)	0XB1	Read codes	
FR-V	/	Night Vision System (INVS)	0XB1	Erase Codes	
FR-V	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FR-V	/	Night Vision System (INVS)	0XB1	Read Live Data	
FR-V	/	Night Vision System (INVS)	0XB1	Adjustment	
FR-V	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FR-V	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FR-V	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test



FR-V	/	i-SHIFT	0X80	Read ECU Information	
FR-V	/	i-SHIFT	0X80	Read codes	
FR-V	/	i-SHIFT	0X80	Erase Codes	
FR-V	/	i-SHIFT	0X80	Read Live Data	
FR-V	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FR-V	/	Keyless Entry Control System (KAS)	M99	Read codes	
FR-V	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FR-V	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FR-V	/	Keyless Entry Control System (KAS)	M99	Self Check	
FR-V	/	Keyless Entry Control System (KAS)	M99	History Data	
FR-V	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FR-V	/	Keyless Entry Control System (KAS)	M99	Registration	
FR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
FR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
FR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
FR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
FR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
FR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
FR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
FR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
FR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
FR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
FR-V	/	Management ECU Module (ME)	M74	Read ECU Information	
FR-V	/	Management ECU Module (ME)	M74	Read codes	
FR-V	/	Management ECU Module (ME)	M74	Erase Codes	
FR-V	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FR-V	/	Management ECU Module (ME)	M74	Read Live Data	
FR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
FR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
FR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
FR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
FR-V	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FR-V	/	Multi-view camera system (MVCS)	M7A	Read codes	
FR-V	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
FR-V	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
FR-V	/	Multi-view camera system (MVCS)	M7A	Customization	

FR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
FR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FR-V	/	Power Control Unit (PCU)	M83	Read ECU Information	
FR-V	/	Power Control Unit (PCU)	M83	Read codes	
FR-V	/	Power Control Unit (PCU)	M83	Erase Codes	
FR-V	/	Power Control Unit (PCU)	M83	Read Live Data	
FR-V	/	Power Control Unit (PCU)	M83	Self Check	
FR-V	/	Power Control Unit (PCU)	M83	History Data	
FR-V	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
FR-V	/	Engine Control System (PGM-FI)	M23	Read codes	
FR-V	/	Engine Control System (PGM-FI)	M23	Erase Codes	
FR-V	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
FR-V	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FR-V	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FR-V	/	Engine Control System (PGM-FI)	M23	Read Live Data	
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FR-V	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FR-V	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
FR-V	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FR-V	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
FR-V	/	Engine Control System (PGM-FI)	M50	Read codes	
FR-V	/	Engine Control System (PGM-FI)	M50	Erase Codes	
FR-V	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
FR-V	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FR-V	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FR-V	/	Engine Control System (PGM-FI)	M50	Read Live Data	
FR-V	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FR-V	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FR-V	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FR-V	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FR-V	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
FR-V	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FR-V	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
FR-V	/	Engine Control System (PGM-FI)	M86	Read codes	
FR-V	/	Engine Control System (PGM-FI)	M86	Erase Codes	
FR-V	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
FR-V	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
FR-V	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FR-V	/	Engine Control System (PGM-FI)	M86	Read Live Data	
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	AGM
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FR-V	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FR-V	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FR-V	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
FR-V	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FR-V	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
FR-V	/	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
FR-V	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	
FR-V	/	PSR	M27	Read ECU Information	
FR-V	/	PSR	M27	Read codes	

FR-V	/	PSR	M27	Erase Codes	
FR-V	/	PSR	M27	Read Live Data	
FR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
FR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
FR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
FR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
FR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
FR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
FR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FR-V	/	Remote starter (RS)	M90	System Check	
FR-V	/	Remote starter (RS)	M90	HISTORY	
FR-V	/	Remote starter (RS)	M90	Registration	
FR-V	/	Seat load cell (SWS)	M6F	Read ECU Information	
FR-V	/	Seat load cell (SWS)	M6F	Read codes	
FR-V	/	Seat load cell (SWS)	M6F	Erase Codes	
FR-V	/	Seat load cell (SWS)	M6F	Read Live Data	
FR-V	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FR-V	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FR-V	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FR-V	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
FR-V	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FR-V	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FR-V	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FR-V	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FR-V	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FR-V	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
FR-V	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FR-V	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FR-V	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
FR-V	/	Groove track drive unit (SLOT ECU)	M98	History Data	
FR-V	/	Groove track drive unit (SLOT ECU)	M98	System Information	
FR-V	/	Airbag Control System (SRS)	M9F	Read ECU Information	
FR-V	/	Airbag Control System (SRS)	M9F	Read codes	
FR-V	/	Airbag Control System (SRS)	M9F	Erase Codes	
FR-V	/	Airbag Control System (SRS)	M9F	Read Live Data	
FR-V	/	Airbag Control System (SRS)	MA0	Read ECU Information	
FR-V	/	Airbag Control System (SRS)	MA0	Read codes	
FR-V	/	Airbag Control System (SRS)	MA0	Erase Codes	
FR-V	/	Airbag Control System (SRS)	MA0	Read Live Data	
FR-V	/	Airbag Control System (SRS)	MA1	Read ECU Information	
FR-V	/	Airbag Control System (SRS)	MA1	Read codes	
FR-V	/	Airbag Control System (SRS)	MA1	Erase Codes	
FR-V	/	Airbag Control System (SRS)	MA1	Read Live Data	
FR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FR-V	/	Airbag Control System (SRS)	M2A	Read codes	
FR-V	/	Airbag Control System (SRS)	M2A	Erase Codes	
FR-V	/	Airbag Control System (SRS)	M2A	Read Live Data	
FR-V	/	Airbag Control System (SRS)	M9C	Read ECU Information	
FR-V	/	Airbag Control System (SRS)	M9C	Read codes	
FR-V	/	Airbag Control System (SRS)	M9C	Erase Codes	
FR-V	/	Airbag Control System (SRS)	M9C	Read Live Data	
FR-V	/	Airbag Control System (SRS)	M9D	Read ECU Information	
FR-V	/	Airbag Control System (SRS)	M9D	Read codes	
FR-V	/	Airbag Control System (SRS)	M9D	Erase Codes	
FR-V	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FR-V	/	Airbag Control System (SRS)	M9D	Read Live Data	
FR-V	/	Airbag Control System (SRS)	M9D	Parameter Information	



FR-V DIESEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FR-V DIESEL	/	Automatic shift control system (A/T)	M82	Read ECU Information	
FR-V DIESEL	/	Automatic shift control system (A/T)	M82	Read codes	
FR-V DIESEL	/	Automatic shift control system (A/T)	M82	Erase Codes	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
FR-V DIESEL	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FR-V DIESEL	/	Active Engine Control Support System (ACM)	M06	Read codes	
FR-V DIESEL	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
FR-V DIESEL	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FR-V DIESEL	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
FR-V DIESEL	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
FR-V DIESEL	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FR-V DIESEL	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FR-V DIESEL	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FR-V DIESEL	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FR-V DIESEL	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FR-V DIESEL	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FR-V DIESEL	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
FR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
FR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
FR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
FR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
FR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
FR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
FR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
FR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
FR-V DIESEL	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
FR-V DIESEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
FR-V DIESEL	/	Transmission Control System (AT)	M18	Read ECU Information	
FR-V DIESEL	/	Transmission Control System (AT)	M18	Read codes	
FR-V DIESEL	/	Transmission Control System (AT)	M18	Erase Codes	
FR-V DIESEL	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FR-V DIESEL	/	Transmission Control System (AT)	M18	Read Live Data	
FR-V DIESEL	/	Transmission Control System (AT)	M18	Adjustment	
FR-V DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
FR-V DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
FR-V DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
FR-V DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
FR-V DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
FR-V DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FR-V DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
FR-V DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FR-V DIESEL	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
FR-V DIESEL	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FR-V DIESEL	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	

FR-V DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FR-V DIESEL	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
FR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
FR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
FR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
FR-V DIESEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
FR-V DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FR-V DIESEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FR-V DIESEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FR-V DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FR-V DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FR-V DIESEL	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FR-V DIESEL	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FR-V DIESEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FR-V DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FR-V DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	

FR-V DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FR-V DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FR-V DIESEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FR-V DIESEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FR-V DIESEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FR-V DIESEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FR-V DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FR-V DIESEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FR-V DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FR-V DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FR-V DIESEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FR-V DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FR-V DIESEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FR-V DIESEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FR-V DIESEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	History Data	
FR-V DIESEL	/	BODY ELECTRICAL/Security	MFF	History Clear	
FR-V DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FR-V DIESEL	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FR-V DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FR-V DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FR-V DIESEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FR-V DIESEL	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	

FR-V DIESEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FR-V DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FR-V DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FR-V DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FR-V DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
FR-V DIESEL	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FR-V DIESEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FR-V DIESEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FR-V DIESEL	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FR-V DIESEL	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FR-V DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FR-V DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
FR-V DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FR-V DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FR-V DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FR-V DIESEL	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
FR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
FR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
FR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
FR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
FR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
FR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
FR-V DIESEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
FR-V DIESEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
FR-V DIESEL	/	DBW	M34	Read ECU Information	
FR-V DIESEL	/	DBW	M34	Read codes	
FR-V DIESEL	/	DBW	M34	Erase Codes	
FR-V DIESEL	/	DBW	M34	Read Freeze Frame Data	
FR-V DIESEL	/	DBW	M34	Read Live Data	
FR-V DIESEL	/	DBW	M34	Inspection	Idle Speed Adjust
FR-V DIESEL	/	DBW	M34	Inspection	Throttle Test
FR-V DIESEL	/	DBW	M34	ECM Reset	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test



FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FR-V DIESEL	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FR-V DIESEL	/	Capacitor Control System (EDLC)	M12	Read codes	
FR-V DIESEL	/	Capacitor Control System (EDLC)	M12	Erase Codes	
FR-V DIESEL	/	Capacitor Control System (EDLC)	M12	Read Live Data	
FR-V DIESEL	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FR-V DIESEL	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FR-V DIESEL	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FR-V DIESEL	/	Electronic Brake Control System (EPB)	M1F	Read codes	
FR-V DIESEL	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FR-V DIESEL	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FR-V DIESEL	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FR-V DIESEL	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FR-V DIESEL	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FR-V DIESEL	/	Electronic Brake Control System (EPB)	M3E	Read codes	
FR-V DIESEL	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FR-V DIESEL	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FR-V DIESEL	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FR-V DIESEL	/	Electric Powertrain / IMA	M66	Read ECU Information	
FR-V DIESEL	/	Electric Powertrain / IMA	M66	Read codes	
FR-V DIESEL	/	Electric Powertrain / IMA	M66	Erase Codes	
FR-V DIESEL	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FR-V DIESEL	/	Electric Powertrain / IMA	M66	Read Live Data	
FR-V DIESEL	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FR-V DIESEL	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FR-V DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FR-V DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FR-V DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FR-V DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FR-V DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FR-V DIESEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FR-V DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FR-V DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FR-V DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FR-V DIESEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor

FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FR-V DIESEL	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FR-V DIESEL	/	New energy battery (EV)	M44	Read ECU Information	
FR-V DIESEL	/	New energy battery (EV)	M44	Read codes	
FR-V DIESEL	/	New energy battery (EV)	M44	Erase Codes	
FR-V DIESEL	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FR-V DIESEL	/	New energy battery (EV)	M44	Read Live Data	
FR-V DIESEL	/	New energy battery (EV)	M44	Inspection	
FR-V DIESEL	/	New energy battery (EV)	M44	Adjustment	
FR-V DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FR-V DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FR-V DIESEL	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FR-V DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FR-V DIESEL	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read codes	
FR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FR-V DIESEL	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FR-V DIESEL	/	FCW LDW	M4E	Read ECU Information	
FR-V DIESEL	/	FCW LDW	M4E	Read codes	
FR-V DIESEL	/	FCW LDW	M4E	Erase Codes	
FR-V DIESEL	/	FCW LDW	M4E	Read Live Data	
FR-V DIESEL	/	FCW LDW	M4E	Function Test	FCW Drive
FR-V DIESEL	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FR-V DIESEL	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FR-V DIESEL	/	FCW LDW	M4E	Function Test	Indicator Drive
FR-V DIESEL	/	FCW LDW	M4E	Adjustment	
FR-V DIESEL	/	Instrument Display System (GAUGE)	M2C	Read codes	
FR-V DIESEL	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FR-V DIESEL	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Read codes	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Read codes	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Read codes	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Read codes	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA

FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FR-V DIESEL	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
FR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Customize	
FR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FR-V DIESEL	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Read codes	
FR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FR-V DIESEL	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FR-V DIESEL	/	IMA	M63	Read ECU Information	
FR-V DIESEL	/	IMA	M63	Read codes	
FR-V DIESEL	/	IMA	M63	Erase Codes	
FR-V DIESEL	/	IMA	M63	Read Freeze Frame Data	
FR-V DIESEL	/	IMA	M63	Read Live Data	
FR-V DIESEL	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FR-V DIESEL	/	IMA	M63	Adjustment	SOC PRESET
FR-V DIESEL	/	IMA	M64	Read ECU Information	
FR-V DIESEL	/	IMA	M64	Read codes	
FR-V DIESEL	/	IMA	M64	Erase Codes	
FR-V DIESEL	/	IMA	M64	Read Freeze Frame Data	
FR-V DIESEL	/	IMA	M64	Read Live Data	
FR-V DIESEL	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FR-V DIESEL	/	IMA	M64	Adjustment	SOC PRESET
FR-V DIESEL	/	IMA	M65	Read ECU Information	
FR-V DIESEL	/	IMA	M65	Read codes	
FR-V DIESEL	/	IMA	M65	Erase Codes	
FR-V DIESEL	/	IMA	M65	Read Freeze Frame Data	
FR-V DIESEL	/	IMA	M65	Read Live Data	
FR-V DIESEL	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FR-V DIESEL	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FR-V DIESEL	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FR-V DIESEL	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FR-V DIESEL	/	Intake Sounder Control System (ISC)	M6D	Read codes	
FR-V DIESEL	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FR-V DIESEL	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FR-V DIESEL	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FR-V DIESEL	/	Night Vision System (INVS)	0XB1	Read ECU Information	
FR-V DIESEL	/	Night Vision System (INVS)	0XB1	Read codes	
FR-V DIESEL	/	Night Vision System (INVS)	0XB1	Erase Codes	
FR-V DIESEL	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FR-V DIESEL	/	Night Vision System (INVS)	0XB1	Read Live Data	
FR-V DIESEL	/	Night Vision System (INVS)	0XB1	Adjustment	
FR-V DIESEL	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FR-V DIESEL	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FR-V DIESEL	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FR-V DIESEL	/	i-SHIFT	0XB0	Read ECU Information	
FR-V DIESEL	/	i-SHIFT	0XB0	Read codes	
FR-V DIESEL	/	i-SHIFT	0XB0	Erase Codes	
FR-V DIESEL	/	i-SHIFT	0XB0	Read Live Data	
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Read codes	
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Self Check	
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	History Data	
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving

FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FR-V DIESEL	/	Keyless Entry Control System (KAS)	M99	Registration	
FR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FR-V DIESEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
FR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
FR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
FR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
FR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
FR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
FR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
FR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
FR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
FR-V DIESEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
FR-V DIESEL	/	Management ECU Module (ME)	M74	Read ECU Information	
FR-V DIESEL	/	Management ECU Module (ME)	M74	Read codes	
FR-V DIESEL	/	Management ECU Module (ME)	M74	Erase Codes	
FR-V DIESEL	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FR-V DIESEL	/	Management ECU Module (ME)	M74	Read Live Data	
FR-V DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
FR-V DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
FR-V DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
FR-V DIESEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
FR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Read codes	
FR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
FR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
FR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Customization	
FR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
FR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FR-V DIESEL	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FR-V DIESEL	/	Power Control Unit (PCU)	M83	Read ECU Information	
FR-V DIESEL	/	Power Control Unit (PCU)	M83	Read codes	
FR-V DIESEL	/	Power Control Unit (PCU)	M83	Erase Codes	
FR-V DIESEL	/	Power Control Unit (PCU)	M83	Read Live Data	
FR-V DIESEL	/	Power Control Unit (PCU)	M83	Self Check	
FR-V DIESEL	/	Power Control Unit (PCU)	M83	History Data	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Read codes	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Erase Codes	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Read Live Data	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP

FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Read codes	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Erase Codes	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Read Live Data	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Read codes	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Erase Codes	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Read Live Data	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
FR-V DIESEL	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FR-V DIESEL	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
FR-V DIESEL	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
FR-V DIESEL	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
FR-V DIESEL	/	PSR	M27	Read ECU Information	
FR-V DIESEL	/	PSR	M27	Read codes	
FR-V DIESEL	/	PSR	M27	Erase Codes	
FR-V DIESEL	/	PSR	M27	Read Live Data	
FR-V DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FR-V DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FR-V DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FR-V DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FR-V DIESEL	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FR-V DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
FR-V DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
FR-V DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
FR-V DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
FR-V DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
FR-V DIESEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
FR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FR-V DIESEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FR-V DIESEL	/	Remote starter (RS)	M90	System Check	
FR-V DIESEL	/	Remote starter (RS)	M90	HISTORY	
FR-V DIESEL	/	Remote starter (RS)	M90	Registration	
FR-V DIESEL	/	Seat load cell (SWS)	M6F	Read ECU Information	
FR-V DIESEL	/	Seat load cell (SWS)	M6F	Read codes	
FR-V DIESEL	/	Seat load cell (SWS)	M6F	Erase Codes	
FR-V DIESEL	/	Seat load cell (SWS)	M6F	Read Live Data	
FR-V DIESEL	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FR-V DIESEL	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FR-V DIESEL	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FR-V DIESEL	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
FR-V DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization

FR-V DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FR-V DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FR-V DIESEL	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FR-V DIESEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
FR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
FR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	History Data	
FR-V DIESEL	/	Groove track drive unit (SLOT ECU)	M98	System Information	
FR-V DIESEL	/	Airbag Control System (SRS)	M9F	Read ECU Information	
FR-V DIESEL	/	Airbag Control System (SRS)	M9F	Read codes	
FR-V DIESEL	/	Airbag Control System (SRS)	M9F	Erase Codes	
FR-V DIESEL	/	Airbag Control System (SRS)	M9F	Read Live Data	
FR-V DIESEL	/	Airbag Control System (SRS)	MA0	Read ECU Information	
FR-V DIESEL	/	Airbag Control System (SRS)	MA0	Read codes	
FR-V DIESEL	/	Airbag Control System (SRS)	MA0	Erase Codes	
FR-V DIESEL	/	Airbag Control System (SRS)	MA0	Read Live Data	
FR-V DIESEL	/	Airbag Control System (SRS)	MA1	Read ECU Information	
FR-V DIESEL	/	Airbag Control System (SRS)	MA1	Read codes	
FR-V DIESEL	/	Airbag Control System (SRS)	MA1	Erase Codes	
FR-V DIESEL	/	Airbag Control System (SRS)	MA1	Read Live Data	
FR-V DIESEL	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FR-V DIESEL	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FR-V DIESEL	/	Airbag Control System (SRS)	M2A	Read codes	
FR-V DIESEL	/	Airbag Control System (SRS)	M2A	Erase Codes	
FR-V DIESEL	/	Airbag Control System (SRS)	M2A	Read Live Data	
FR-V DIESEL	/	Airbag Control System (SRS)	M9C	Read ECU Information	
FR-V DIESEL	/	Airbag Control System (SRS)	M9C	Read codes	
FR-V DIESEL	/	Airbag Control System (SRS)	M9C	Erase Codes	
FR-V DIESEL	/	Airbag Control System (SRS)	M9C	Read Live Data	
FR-V DIESEL	/	Airbag Control System (SRS)	M9D	Read ECU Information	
FR-V DIESEL	/	Airbag Control System (SRS)	M9D	Read codes	
FR-V DIESEL	/	Airbag Control System (SRS)	M9D	Erase Codes	
FR-V DIESEL	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FR-V DIESEL	/	Airbag Control System (SRS)	M9D	Read Live Data	
FR-V DIESEL	/	Airbag Control System (SRS)	M9D	Parameter Information	
FR-V DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FR-V DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FR-V DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FR-V DIESEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FR-V DIESEL	/	Airbag Control System (SRS)	M9D	Function Test	
FR-V DIESEL	/	Airbag Control System (SRS)	M9D	System Information	
FR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FR-V DIESEL	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FR-V DIESEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	

FR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FR-V DIESEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FREED	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FREED	/	Four-wheel steering control system (4WS)	M52	Read codes	
FREED	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
FREED	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FREED	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
FREED	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FREED	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FREED	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FREED	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FREED	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FREED	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FREED	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
FREED	/	Automatic shift control system (A/T)	M1E	Read codes	
FREED	/	Automatic shift control system (A/T)	M1E	Erase Codes	
FREED	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FREED	/	Automatic shift control system (A/T)	M1E	Read Live Data	
FREED	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FREED	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FREED	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FREED	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FREED	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FREED	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FREED	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FREED	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FREED	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FREED	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
FREED	/	Automatic shift control system (A/T)	M3B	Read codes	
FREED	/	Automatic shift control system (A/T)	M3B	Erase Codes	
FREED	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FREED	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FREED	/	Automatic shift control system (A/T)	M3B	Read Live Data	
FREED	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FREED	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FREED	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FREED	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FREED	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
FREED	/	Automatic shift control system (A/T)	M3C	Read codes	
FREED	/	Automatic shift control system (A/T)	M3C	Erase Codes	
FREED	/	Automatic shift control system (A/T)	M81	Read ECU Information	
FREED	/	Automatic shift control system (A/T)	M81	Read codes	
FREED	/	Automatic shift control system (A/T)	M81	Erase Codes	
FREED	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FREED	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FREED	/	Automatic shift control system (A/T)	M81	Read Live Data	
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FREED	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FREED	/	Automatic shift control system (A/T)	M82	Read ECU Information	
FREED	/	Automatic shift control system (A/T)	M82	Read codes	
FREED	/	Automatic shift control system (A/T)	M82	Erase Codes	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read codes	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Erase Codes	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Freeze Frame Data	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Live Data	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	Throttle Opening Angle Test
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 1
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 2
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	LIGHT CHECK
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BUZZER CHECK
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read ECU Information	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read codes	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Erase Codes	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Freeze Frame Data	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Live Data	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Adjustment	RADAR AIMING
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	BRAKE ACTUATOR 3
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ACC relay malfunction.
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INDICATOR LIGHT
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INFORMATION DISPLAY
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ALARM BUZZER
FREED	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FREED	/	Active Engine Control Support System (ACM)	M06	Read codes	
FREED	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
FREED	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FREED	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
FREED	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
FREED	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF

FREED	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FREED	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FREED	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FREED	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FREED	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FREED	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FREED	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
FREED	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
FREED	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
FREED	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
FREED	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
FREED	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
FREED	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
FREED	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
FREED	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
FREED	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
FREED	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
FREED	/	Transmission Control System (AT)	M18	Read ECU Information	
FREED	/	Transmission Control System (AT)	M18	Read codes	
FREED	/	Transmission Control System (AT)	M18	Erase Codes	
FREED	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FREED	/	Transmission Control System (AT)	M18	Read Live Data	
FREED	/	Transmission Control System (AT)	M18	Adjustment	
FREED	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
FREED	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
FREED	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
FREED	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
FREED	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
FREED	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FREED	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
FREED	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FREED	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
FREED	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FREED	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FREED	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FREED	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FREED	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FREED	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FREED	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
FREED	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
FREED	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
FREED	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
FREED	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
FREED	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FREED	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FREED	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FREED	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FREED	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FREED	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FREED	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FREED	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door



FREED	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
FREED	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FREED	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FREED	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FREED	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FREED	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FREED	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FREED	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FREED	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FREED	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FREED	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FREED	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FREED	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FREED	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FREED	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FREED	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FREED	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FREED	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FREED	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FREED	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FREED	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FREED	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FREED	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FREED	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	

FREED	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FREED	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FREED	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FREED	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FREED	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FREED	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FREED	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FREED	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FREED	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Security	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FREED	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FREED	/	BODY ELECTRICAL/Security	MFF	History Data	
FREED	/	BODY ELECTRICAL/Security	MFF	History Clear	
FREED	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FREED	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FREED	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FREED	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FREED	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FREED	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FREED	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FREED	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FREED	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FREED	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FREED	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FREED	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FREED	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FREED	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
FREED	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FREED	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FREED	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FREED	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FREED	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FREED	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FREED	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FREED	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FREED	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FREED	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FREED	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FREED	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FREED	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FREED	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
FREED	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	

FREED	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FREED	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FREED	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FREED	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read ECU Information	
FREED	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read codes	
FREED	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Erase Codes	
FREED	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Freeze Frame Data	
FREED	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Live Data	
FREED	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	CMBS (CMS) ACTIVATION HISTORY	
FREED	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	RADAR AIMING
FREED	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	CMBS Brake
FREED	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
FREED	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
FREED	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
FREED	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
FREED	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
FREED	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
FREED	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
FREED	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
FREED	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
FREED	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
FREED	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
FREED	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
FREED	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
FREED	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
FREED	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
FREED	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
FREED	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
FREED	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
FREED	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
FREED	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
FREED	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
FREED	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
FREED	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
FREED	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
FREED	/	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
FREED	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
FREED	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
FREED	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
FREED	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
FREED	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
FREED	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
FREED	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
FREED	/	DBW	M34	Read ECU Information	
FREED	/	DBW	M34	Read codes	
FREED	/	DBW	M34	Erase Codes	
FREED	/	DBW	M34	Read Freeze Frame Data	
FREED	/	DBW	M34	Read Live Data	
FREED	/	DBW	M34	Inspection	Idle Speed Adjust
FREED	/	DBW	M34	Inspection	Throttle Test
FREED	/	DBW	M34	ECM Reset	
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FREED	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FREED	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FREED	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FREED	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FREED	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
FREED	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FREED	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FREED	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FREED	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FREED	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FREED	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FREED	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FREED	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FREED	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
FREED	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FREED	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FREED	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FREED	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	

FREED	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FREED	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FREED	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FREED	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FREED	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FREED	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FREED	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FREED	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FREED	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FREED	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FREED	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FREED	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FREED	/	Capacitor Control System (EDLC)	M12	Read codes	
FREED	/	Capacitor Control System (EDLC)	M12	Erase Codes	
FREED	/	Capacitor Control System (EDLC)	M12	Read Live Data	
FREED	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FREED	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FREED	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FREED	/	Electronic Brake Control System (EPB)	M1F	Read codes	
FREED	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FREED	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FREED	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FREED	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FREED	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FREED	/	Electronic Brake Control System (EPB)	M3E	Read codes	
FREED	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FREED	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FREED	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FREED	/	Electric Powertrain / IMA	M66	Read ECU Information	
FREED	/	Electric Powertrain / IMA	M66	Read codes	
FREED	/	Electric Powertrain / IMA	M66	Erase Codes	
FREED	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FREED	/	Electric Powertrain / IMA	M66	Read Live Data	
FREED	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FREED	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FREED	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FREED	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FREED	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FREED	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FREED	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FREED	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FREED	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FREED	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FREED	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FREED	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FREED	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FREED	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FREED	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FREED	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FREED	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FREED	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FREED	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FREED	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FREED	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FREED	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FREED	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FREED	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FREED	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FREED	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FREED	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FREED	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FREED	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FREED	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FREED	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FREED	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FREED	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FREED	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FREED	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FREED	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FREED	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FREED	/	New energy battery (EV)	M44	Read ECU Information	
FREED	/	New energy battery (EV)	M44	Read codes	
FREED	/	New energy battery (EV)	M44	Erase Codes	
FREED	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FREED	/	New energy battery (EV)	M44	Read Live Data	
FREED	/	New energy battery (EV)	M44	Inspection	
FREED	/	New energy battery (EV)	M44	Adjustment	
FREED	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FREED	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FREED	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FREED	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FREED	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FREED	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FREED	/	Electronic vacuum pump (EVPS)	M22	Read codes	
FREED	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FREED	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FREED	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FREED	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FREED	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FREED	/	FCW LDW	M4E	Read ECU Information	
FREED	/	FCW LDW	M4E	Read codes	
FREED	/	FCW LDW	M4E	Erase Codes	
FREED	/	FCW LDW	M4E	Read Live Data	

FREED	/	FCW LDW	M4E	Function Test	FCW Drive
FREED	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FREED	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FREED	/	FCW LDW	M4E	Function Test	Indicator Drive
FREED	/	FCW LDW	M4E	Adjustment	
FREED	/	Instrument Display System (GAUGE)	M2C	Read codes	
FREED	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FREED	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FREED	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FREED	/	Anti-lock brake control system (ABS)	M01	Read codes	
FREED	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FREED	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FREED	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FREED	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FREED	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FREED	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FREED	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FREED	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FREED	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FREED	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FREED	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FREED	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FREED	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FREED	/	Anti-lock brake control system (ABS)	M02	Read codes	
FREED	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FREED	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FREED	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FREED	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FREED	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FREED	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FREED	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FREED	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FREED	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FREED	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FREED	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FREED	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FREED	/	Anti-lock brake control system (ABS)	M03	Read codes	
FREED	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
FREED	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
FREED	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FREED	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FREED	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FREED	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FREED	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FREED	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FREED	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FREED	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FREED	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
FREED	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FREED	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FREED	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FREED	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FREED	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FREED	/	Anti-lock brake control system (ABS)	M19	Read codes	
FREED	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
FREED	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
FREED	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FREED	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FREED	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FREED	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FREED	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FREED	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FREED	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FREED	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FREED	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FREED	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FREED	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FREED	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FREED	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FREED	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
FREED	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FREED	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FREED	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FREED	/	Intelligent Parking Control System (SPS)	M9B	Customize	
FREED	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FREED	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FREED	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FREED	/	Hydraulic booster control system (HBS)	M5F	Read codes	
FREED	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FREED	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FREED	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FREED	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FREED	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FREED	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FREED	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FREED	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FREED	/	IMA	M63	Read ECU Information	
FREED	/	IMA	M63	Read codes	
FREED	/	IMA	M63	Erase Codes	
FREED	/	IMA	M63	Read Freeze Frame Data	
FREED	/	IMA	M63	Read Live Data	
FREED	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FREED	/	IMA	M63	Adjustment	SOC PRESET

FREED	/	IMA	M64	Read ECU Information	
FREED	/	IMA	M64	Read codes	
FREED	/	IMA	M64	Erase Codes	
FREED	/	IMA	M64	Read Freeze Frame Data	
FREED	/	IMA	M64	Read Live Data	
FREED	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FREED	/	IMA	M64	Adjustment	SOC PRESET
FREED	/	IMA	M65	Read ECU Information	
FREED	/	IMA	M65	Read codes	
FREED	/	IMA	M65	Erase Codes	
FREED	/	IMA	M65	Read Freeze Frame Data	
FREED	/	IMA	M65	Read Live Data	
FREED	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FREED	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FREED	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FREED	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FREED	/	Intake Sounder Control System (ISC)	M6D	Read codes	
FREED	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FREED	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FREED	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FREED	/	Night Vision System (INVS)	0XB1	Read ECU Information	
FREED	/	Night Vision System (INVS)	0XB1	Read codes	
FREED	/	Night Vision System (INVS)	0XB1	Erase Codes	
FREED	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FREED	/	Night Vision System (INVS)	0XB1	Read Live Data	
FREED	/	Night Vision System (INVS)	0XB1	Adjustment	
FREED	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FREED	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FREED	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FREED	/	i-SHIFT	0XB0	Read ECU Information	
FREED	/	i-SHIFT	0XB0	Read codes	
FREED	/	i-SHIFT	0XB0	Erase Codes	
FREED	/	i-SHIFT	0XB0	Read Live Data	
FREED	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FREED	/	Keyless Entry Control System (KAS)	M99	Read codes	
FREED	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FREED	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FREED	/	Keyless Entry Control System (KAS)	M99	Self Check	
FREED	/	Keyless Entry Control System (KAS)	M99	History Data	
FREED	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FREED	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FREED	/	Keyless Entry Control System (KAS)	M99	Registration	
FREED	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FREED	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	

FREED	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Erase Codes	
FREED	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Read Freeze Frame Data	
FREED	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Read Live Data	
FREED	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	STATIC CAMERA AIMING
FREED	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	VIDEO OUTPUT
FREED	/	Electronically assisted lane keeping control system (Lk) M71	Read ECU Information	
FREED	/	Electronically assisted lane keeping control system (Lk) M71	Read codes	
FREED	/	Electronically assisted lane keeping control system (Lk) M71	Erase Codes	
FREED	/	Electronically assisted lane keeping control system (Lk) M71	Read Freeze Frame Data	
FREED	/	Electronically assisted lane keeping control system (Lk) M71	Read Live Data	
FREED	/	Electronically assisted lane keeping control system (Lk) M71	Adjustment	STEERING REWRITE
FREED	/	Electronically assisted lane keeping control system (Lk) M71	Customize	LOW OFFSET
FREED	/	Electronically assisted lane keeping control system (Lk) M71	Customize	GAIN ADJUST
FREED	/	Electronically assisted lane keeping control system (Lk) M71	Customize	DRIVING WILL
FREED	/	Electronically assisted lane keeping control system (Lk) M71	Customize	CONTROL DELAY
FREED	/	Management ECU Module (ME) M74	Read ECU Information	
FREED	/	Management ECU Module (ME) M74	Read codes	
FREED	/	Management ECU Module (ME) M74	Erase Codes	
FREED	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
FREED	/	Management ECU Module (ME) M74	Read Live Data	
FREED	/	Multi-view camera and parking assist system (MVC/P) M26	Read ECU Information	
FREED	/	Multi-view camera and parking assist system (MVC/P) M26	Read codes	
FREED	/	Multi-view camera and parking assist system (MVC/P) M26	Erase Codes	
FREED	/	Multi-view camera and parking assist system (MVC/P) M26	Read Live Data	
FREED	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
FREED	/	Multi-view camera system (MVCS) M7A	Read codes	
FREED	/	Multi-view camera system (MVCS) M7A	Erase Codes	
FREED	/	Multi-view camera system (MVCS) M7A	Read Live Data	
FREED	/	Multi-view camera system (MVCS) M7A	Customization	
FREED	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
FREED	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
FREED	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
FREED	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
FREED	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
FREED	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
FREED	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
FREED	/	Power Control Unit (PCU) M83	Read ECU Information	
FREED	/	Power Control Unit (PCU) M83	Read codes	
FREED	/	Power Control Unit (PCU) M83	Erase Codes	
FREED	/	Power Control Unit (PCU) M83	Read Live Data	
FREED	/	Power Control Unit (PCU) M83	Self Check	
FREED	/	Power Control Unit (PCU) M83	History Data	
FREED	/	Engine Control System (PGM-FI) M23	Read ECU Information	
FREED	/	Engine Control System (PGM-FI) M23	Read codes	
FREED	/	Engine Control System (PGM-FI) M23	Erase Codes	
FREED	/	Engine Control System (PGM-FI) M23	Readiness Codes	
FREED	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
FREED	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
FREED	/	Engine Control System (PGM-FI) M23	Read Live Data	
FREED	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
FREED	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
FREED	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
FREED	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
FREED	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
FREED	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
FREED	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
FREED	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
FREED	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
FREED	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
FREED	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
FREED	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
FREED	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
FREED	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FREED	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FREED	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FREED	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FREED	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FREED	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
FREED	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FREED	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
FREED	/	Engine Control System (PGM-FI) M23	VIN CHECK	
FREED	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
FREED	/	Engine Control System (PGM-FI) M50	Read ECU Information	
FREED	/	Engine Control System (PGM-FI) M50	Read codes	
FREED	/	Engine Control System (PGM-FI) M50	Erase Codes	
FREED	/	Engine Control System (PGM-FI) M50	Readiness Codes	
FREED	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
FREED	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
FREED	/	Engine Control System (PGM-FI) M50	Read Live Data	
FREED	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
FREED	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
FREED	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
FREED	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
FREED	/	Engine Control System (PGM-FI) M50	VIN CHECK	
FREED	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
FREED	/	Engine Control System (PGM-FI) M86	Read ECU Information	
FREED	/	Engine Control System (PGM-FI) M86	Read codes	
FREED	/	Engine Control System (PGM-FI) M86	Erase Codes	
FREED	/	Engine Control System (PGM-FI) M86	Readiness Codes	
FREED	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
FREED	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
FREED	/	Engine Control System (PGM-FI) M86	Read Live Data	
FREED	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST

FREED	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FREED	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FREED	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FREED	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FREED	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FREED	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FREED	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
FREED	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FREED	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
FREED	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
FREED	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
FREED	/	PSR	M27	Read ECU Information	
FREED	/	PSR	M27	Read codes	
FREED	/	PSR	M27	Erase Codes	
FREED	/	PSR	M27	Read Live Data	
FREED	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FREED	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FREED	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FREED	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FREED	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FREED	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
FREED	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
FREED	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
FREED	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
FREED	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
FREED	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
FREED	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FREED	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FREED	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FREED	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FREED	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FREED	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FREED	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FREED	/	Remote starter (RS)	M90	System Check	
FREED	/	Remote starter (RS)	M90	HISTORY	
FREED	/	Remote starter (RS)	M90	Registration	
FREED	/	Seat load cell (SWS)	M6F	Read ECU Information	
FREED	/	Seat load cell (SWS)	M6F	Read codes	
FREED	/	Seat load cell (SWS)	M6F	Erase Codes	
FREED	/	Seat load cell (SWS)	M6F	Read Live Data	
FREED	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FREED	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FREED	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FREED	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
FREED	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FREED	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FREED	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FREED	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FREED	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FREED	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FREED	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
FREED	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FREED	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FREED	/	Groove track drive unit (SLOT ECU)	M98	Self Check	



FREED	/	Groove track drive unit (SLOT ECU)	M98	History Data	
FREED	/	Groove track drive unit (SLOT ECU)	M98	System Information	
FREED	/	Airbag Control System (SRS)	M9F	Read ECU Information	
FREED	/	Airbag Control System (SRS)	M9F	Read codes	
FREED	/	Airbag Control System (SRS)	M9F	Erase Codes	
FREED	/	Airbag Control System (SRS)	M9F	Read Live Data	
FREED	/	Airbag Control System (SRS)	MA0	Read ECU Information	
FREED	/	Airbag Control System (SRS)	MA0	Read codes	
FREED	/	Airbag Control System (SRS)	MA0	Erase Codes	
FREED	/	Airbag Control System (SRS)	MA0	Read Live Data	
FREED	/	Airbag Control System (SRS)	MA1	Read ECU Information	
FREED	/	Airbag Control System (SRS)	MA1	Read codes	
FREED	/	Airbag Control System (SRS)	MA1	Erase Codes	
FREED	/	Airbag Control System (SRS)	MA1	Read Live Data	
FREED	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FREED	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FREED	/	Airbag Control System (SRS)	M2A	Read codes	
FREED	/	Airbag Control System (SRS)	M2A	Erase Codes	
FREED	/	Airbag Control System (SRS)	M2A	Read Live Data	
FREED	/	Airbag Control System (SRS)	M9C	Read ECU Information	
FREED	/	Airbag Control System (SRS)	M9C	Read codes	
FREED	/	Airbag Control System (SRS)	M9C	Erase Codes	
FREED	/	Airbag Control System (SRS)	M9C	Read Live Data	
FREED	/	Airbag Control System (SRS)	M9D	Read ECU Information	
FREED	/	Airbag Control System (SRS)	M9D	Read codes	
FREED	/	Airbag Control System (SRS)	M9D	Erase Codes	
FREED	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FREED	/	Airbag Control System (SRS)	M9D	Read Live Data	
FREED	/	Airbag Control System (SRS)	M9D	Parameter Information	
FREED	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FREED	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FREED	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FREED	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FREED	/	Airbag Control System (SRS)	M9D	Function Test	
FREED	/	Airbag Control System (SRS)	M9D	System Information	
FREED	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FREED	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FREED	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FREED	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FREED	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FREED	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FREED	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FREED	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FREED	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FREED	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
FREED	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FREED	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FREED	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FREED	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FREED	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FREED	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FREED	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FREED	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FREED	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FREED	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FREED	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FREED	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FREED	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FREED	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FREED	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FREED	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FREED	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FREED	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FREED	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FREED	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FREED	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FREED HYBRID	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FREED HYBRID	/	Four-wheel steering control system (4WS)	M52	Read codes	
FREED HYBRID	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
FREED HYBRID	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FREED HYBRID	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
FREED HYBRID	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FREED HYBRID	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FREED HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FREED HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FREED HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FREED HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	Read codes	
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	Erase Codes	
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	Read Live Data	
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FREED HYBRID	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FREED HYBRID	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
FREED HYBRID	/	Automatic shift control system (A/T)	M3B	Read codes	

FREED HYBRID /	Automatic shift control system (A/T)	M3B	Erase Codes	
FREED HYBRID /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FREED HYBRID /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FREED HYBRID /	Automatic shift control system (A/T)	M3B	Read Live Data	
FREED HYBRID /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FREED HYBRID /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FREED HYBRID /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FREED HYBRID /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FREED HYBRID /	Automatic shift control system (A/T)	M3C	Read ECU Information	
FREED HYBRID /	Automatic shift control system (A/T)	M3C	Read codes	
FREED HYBRID /	Automatic shift control system (A/T)	M3C	Erase Codes	
FREED HYBRID /	Automatic shift control system (A/T)	M81	Read ECU Information	
FREED HYBRID /	Automatic shift control system (A/T)	M81	Read codes	
FREED HYBRID /	Automatic shift control system (A/T)	M81	Erase Codes	
FREED HYBRID /	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FREED HYBRID /	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FREED HYBRID /	Automatic shift control system (A/T)	M81	Read Live Data	
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FREED HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FREED HYBRID /	Automatic shift control system (A/T)	M82	Read ECU Information	
FREED HYBRID /	Automatic shift control system (A/T)	M82	Read codes	
FREED HYBRID /	Automatic shift control system (A/T)	M82	Erase Codes	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
FREED HYBRID /	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FREED HYBRID /	Active Engine Control Support System (ACM)	M06	Read codes	
FREED HYBRID /	Active Engine Control Support System (ACM)	M06	Erase Codes	
FREED HYBRID /	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FREED HYBRID /	Active Engine Control Support System (ACM)	M06	Read Live Data	
FREED HYBRID /	Active Engine Control Support System (ACM)	M06	ACM Reset	
FREED HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FREED HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FREED HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FREED HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FREED HYBRID /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FREED HYBRID /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FREED HYBRID /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FREED HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read ECU Information	
FREED HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read codes	
FREED HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Erase Codes	
FREED HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Freeze Frame Data	
FREED HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Live Data	
FREED HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Function Test	Damper Force Operation Test
FREED HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Adjustment	Damper Stroke Calibration
FREED HYBRID /	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
FREED HYBRID /	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
FREED HYBRID /	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
FREED HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
FREED HYBRID /	Transmission Control System (AT)	M18	Read ECU Information	
FREED HYBRID /	Transmission Control System (AT)	M18	Read codes	
FREED HYBRID /	Transmission Control System (AT)	M18	Erase Codes	
FREED HYBRID /	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FREED HYBRID /	Transmission Control System (AT)	M18	Read Live Data	

FREED HYBRID	/	Transmission Control System (AT)	M18	Adjustment	
FREED HYBRID	/	Active Torque Converter Control System (ATTS)	MOE	Read ECU Information	
FREED HYBRID	/	Active Torque Converter Control System (ATTS)	MOE	Read codes	
FREED HYBRID	/	Active Torque Converter Control System (ATTS)	MOE	Erase Codes	
FREED HYBRID	/	Active Torque Converter Control System (ATTS)	MOE	Read Freeze Frame Data	
FREED HYBRID	/	Active Torque Converter Control System (ATTS)	MOE	Read Live Data	
FREED HYBRID	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FREED HYBRID	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	STEERING ANGLE
FREED HYBRID	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FREED HYBRID	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ALL SENSORS
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
FREED HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FREED HYBRID	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FREED HYBRID	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FREED HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FREED HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Support System) Operation	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FREED HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Support System) Adjustment Menu	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FREED HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Support System) Reset Operation	MFF	Adjustment	Reset Operation
FREED HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Support System) Returning Operation	MFF	Adjustment	Returning Operation
FREED HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Support System) Automatic Returning Distance	MFF	Adjustment	Automatic Returning Distance
FREED HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Support System) Manual Returning Time	MFF	Adjustment	Manual Returning Time
FREED HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Support System) Reset to default	MFF	Adjustment	Reset to default
FREED HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FREED HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FREED HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FREED HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FREED HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FREED HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FREED HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FREED HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FREED HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FREED HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FREED HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)

FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FREED HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FREED HYBRID	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FREED HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FREED HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FREED HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FREED HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FREED HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FREED HYBRID	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FREED HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FREED HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FREED HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FREED HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FREED HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FREED HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FREED HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FREED HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FREED HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FREED HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FREED HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FREED HYBRID	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	

FREED HYBRID /	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FREED HYBRID /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FREED HYBRID /	BODY ELECTRICAL/Security	MFF	Read codes	
FREED HYBRID /	BODY ELECTRICAL/Security	MFF	Erase Codes	
FREED HYBRID /	BODY ELECTRICAL/Security	MFF	Read Live Data	
FREED HYBRID /	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FREED HYBRID /	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FREED HYBRID /	BODY ELECTRICAL/Security	MFF	History Data	
FREED HYBRID /	BODY ELECTRICAL/Security	MFF	History Clear	
FREED HYBRID /	BODY ELECTRICAL/Telematics	MFF	Read codes	
FREED HYBRID /	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FREED HYBRID /	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FREED HYBRID /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FREED HYBRID /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FREED HYBRID /	BODY ELECTRICAL/Wiper	MFF	Read codes	
FREED HYBRID /	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FREED HYBRID /	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FREED HYBRID /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FREED HYBRID /	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FREED HYBRID /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FREED HYBRID /	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FREED HYBRID /	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FREED HYBRID /	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FREED HYBRID /	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FREED HYBRID /	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FREED HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FREED HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FREED HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FREED HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FREED HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FREED HYBRID /	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FREED HYBRID /	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FREED HYBRID /	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FREED HYBRID /	BODY ELECTRICAL/YOP Security	MFF	History Data	
FREED HYBRID /	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FREED HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FREED HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FREED HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FREED HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FREED HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FREED HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FREED HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FREED HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FREED HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FREED HYBRID /	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FREED HYBRID /	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FREED HYBRID /	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FREED HYBRID /	Urban Active Brake Control System (CBAS)	M32	Read codes	
FREED HYBRID /	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FREED HYBRID /	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FREED HYBRID /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FREED HYBRID /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FREED HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>S</sup> M2E)		Read ECU Information	
FREED HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>S</sup> M2E)		Read codes	
FREED HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>S</sup> M2E)		Erase Codes	
FREED HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>S</sup> M2E)		Read Freeze Frame Data	
FREED HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>S</sup> M2E)		Read Live Data	
FREED HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>S</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
FREED HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>S</sup> M2E)		Miscellaneous Test	RADAR AIMING
FREED HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>S</sup> M2E)		Miscellaneous Test	CMBS Brake
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M33)		Read codes	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)		Read codes	

FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes		
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data		
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data		
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	ECM/PCM Reset		
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B	
FREED HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P	
FREED HYBRID /	DBW	M34	Read ECU Information	
FREED HYBRID /	DBW	M34	Read codes	
FREED HYBRID /	DBW	M34	Erase Codes	
FREED HYBRID /	DBW	M34	Read Freeze Frame Data	
FREED HYBRID /	DBW	M34	Read Live Data	
FREED HYBRID /	DBW	M34	Inspection	Idle Speed Adjust
FREED HYBRID /	DBW	M34	Inspection	Throttle Test
FREED HYBRID /	DBW	M34	ECM Reset	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M37	Read codes	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Read codes	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FREED HYBRID /	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FREED HYBRID /	Capacitor Control System (EDLC)	M12	Read codes	
FREED HYBRID /	Capacitor Control System (EDLC)	M12	Erase Codes	
FREED HYBRID /	Capacitor Control System (EDLC)	M12	Read Live Data	
FREED HYBRID /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FREED HYBRID /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FREED HYBRID /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FREED HYBRID /	Electronic Brake Control System (EPB)	M1F	Read codes	
FREED HYBRID /	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FREED HYBRID /	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FREED HYBRID /	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FREED HYBRID /	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FREED HYBRID /	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FREED HYBRID /	Electronic Brake Control System (EPB)	M3E	Read codes	
FREED HYBRID /	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FREED HYBRID /	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FREED HYBRID /	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FREED HYBRID /	Electric Powertrain / IMA	M66	Read ECU Information	
FREED HYBRID /	Electric Powertrain / IMA	M66	Read codes	
FREED HYBRID /	Electric Powertrain / IMA	M66	Erase Codes	
FREED HYBRID /	Electric Powertrain / IMA	M66	Read Freeze Frame Data	

FREED HYBRID	/	Electric Powertrain / IMA	M66	Read Live Data	
FREED HYBRID	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FREED HYBRID	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FREED HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FREED HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FREED HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FREED HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FREED HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FREED HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FREED HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FREED HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FREED HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FREED HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FREED HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FREED HYBRID	/	New energy battery (EV)	M44	Read ECU Information	
FREED HYBRID	/	New energy battery (EV)	M44	Read codes	
FREED HYBRID	/	New energy battery (EV)	M44	Erase Codes	
FREED HYBRID	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FREED HYBRID	/	New energy battery (EV)	M44	Read Live Data	
FREED HYBRID	/	New energy battery (EV)	M44	Inspection	
FREED HYBRID	/	New energy battery (EV)	M44	Adjustment	
FREED HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FREED HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FREED HYBRID	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FREED HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FREED HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FREED HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FREED HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read codes	
FREED HYBRID	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FREED HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FREED HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FREED HYBRID	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FREED HYBRID	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FREED HYBRID	/	FCW LDW	M4E	Read ECU Information	
FREED HYBRID	/	FCW LDW	M4E	Read codes	
FREED HYBRID	/	FCW LDW	M4E	Erase Codes	
FREED HYBRID	/	FCW LDW	M4E	Read Live Data	
FREED HYBRID	/	FCW LDW	M4E	Function Test	FCW Drive
FREED HYBRID	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FREED HYBRID	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FREED HYBRID	/	FCW LDW	M4E	Function Test	Indicator Drive
FREED HYBRID	/	FCW LDW	M4E	Adjustment	
FREED HYBRID	/	Instrument Display System (GAUGE)	M2C	Read codes	
FREED HYBRID	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FREED HYBRID	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Read codes	
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FREED HYBRID	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FREED HYBRID	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FREED HYBRID	/	Anti-lock brake control system (ABS)	M02	Read codes	
FREED HYBRID	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FREED HYBRID	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FREED HYBRID	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FREED HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FREED HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FREED HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FREED HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FREED HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA

FREED HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FREED HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FREED HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Read codes	
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Erase Codes	
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Read Live Data	
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Pulser Test	
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FREED HYBRID /	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Read codes	
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Erase Codes	
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Read Live Data	
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FREED HYBRID /	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FREED HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FREED HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read codes	
FREED HYBRID /	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FREED HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FREED HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FREED HYBRID /	Intelligent Parking Control System (SPS)	M9B	Customize	
FREED HYBRID /	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FREED HYBRID /	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FREED HYBRID /	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FREED HYBRID /	Hydraulic booster control system (HBS)	M5F	Read codes	
FREED HYBRID /	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FREED HYBRID /	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FREED HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FREED HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FREED HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FREED HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FREED HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FREED HYBRID /	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FREED HYBRID /	IMA	M63	Read ECU Information	
FREED HYBRID /	IMA	M63	Read codes	
FREED HYBRID /	IMA	M63	Erase Codes	
FREED HYBRID /	IMA	M63	Read Freeze Frame Data	
FREED HYBRID /	IMA	M63	Read Live Data	
FREED HYBRID /	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FREED HYBRID /	IMA	M63	Adjustment	SOC PRESET
FREED HYBRID /	IMA	M64	Read ECU Information	
FREED HYBRID /	IMA	M64	Read codes	
FREED HYBRID /	IMA	M64	Erase Codes	
FREED HYBRID /	IMA	M64	Read Freeze Frame Data	
FREED HYBRID /	IMA	M64	Read Live Data	
FREED HYBRID /	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FREED HYBRID /	IMA	M64	Adjustment	SOC PRESET
FREED HYBRID /	IMA	M65	Read ECU Information	
FREED HYBRID /	IMA	M65	Read codes	
FREED HYBRID /	IMA	M65	Erase Codes	
FREED HYBRID /	IMA	M65	Read Freeze Frame Data	
FREED HYBRID /	IMA	M65	Read Live Data	
FREED HYBRID /	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FREED HYBRID /	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FREED HYBRID /	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FREED HYBRID /	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FREED HYBRID /	Intake Sounder Control System (ISC)	M6D	Read codes	
FREED HYBRID /	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FREED HYBRID /	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FREED HYBRID /	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FREED HYBRID /	Night Vision System (INVS)	0XB1	Read ECU Information	
FREED HYBRID /	Night Vision System (INVS)	0XB1	Read codes	
FREED HYBRID /	Night Vision System (INVS)	0XB1	Erase Codes	
FREED HYBRID /	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FREED HYBRID /	Night Vision System (INVS)	0XB1	Read Live Data	
FREED HYBRID /	Night Vision System (INVS)	0XB1	Adjustment	
FREED HYBRID /	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FREED HYBRID /	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FREED HYBRID /	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FREED HYBRID /	i-SHIFT	0XB0	Read ECU Information	
FREED HYBRID /	i-SHIFT	0XB0	Read codes	
FREED HYBRID /	i-SHIFT	0XB0	Erase Codes	



FREED HYBRID	/	i-SHIFT	0X80	Read Live Data	
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Read codes	
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Self Check	
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	History Data	
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FREED HYBRID	/	Keyless Entry Control System (KAS)	M99	Registration	
FREED HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FREED HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FREED HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FREED HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FREED HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FREED HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FREED HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FREED HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
FREED HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
FREED HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
FREED HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
FREED HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
FREED HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
FREED HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
FREED HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
FREED HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
FREED HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
FREED HYBRID	/	Management ECU Module (ME)	M74	Read ECU Information	
FREED HYBRID	/	Management ECU Module (ME)	M74	Read codes	
FREED HYBRID	/	Management ECU Module (ME)	M74	Erase Codes	
FREED HYBRID	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FREED HYBRID	/	Management ECU Module (ME)	M74	Read Live Data	
FREED HYBRID	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
FREED HYBRID	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
FREED HYBRID	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
FREED HYBRID	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
FREED HYBRID	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FREED HYBRID	/	Multi-view camera system (MVCS)	M7A	Read codes	
FREED HYBRID	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
FREED HYBRID	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
FREED HYBRID	/	Multi-view camera system (MVCS)	M7A	Customization	
FREED HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FREED HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FREED HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image

FREED HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FREED HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FREED HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FREED HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FREED HYBRID /	Power Control Unit (PCU)	M83	Read ECU Information	
FREED HYBRID /	Power Control Unit (PCU)	M83	Read codes	
FREED HYBRID /	Power Control Unit (PCU)	M83	Erase Codes	
FREED HYBRID /	Power Control Unit (PCU)	M83	Read Live Data	
FREED HYBRID /	Power Control Unit (PCU)	M83	Self Check	
FREED HYBRID /	Power Control Unit (PCU)	M83	History Data	
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Read ECU Information	
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Read codes	
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Erase Codes	
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Readiness Codes	
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FREED HYBRID /	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Read Live Data	
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FREED HYBRID /	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FREED HYBRID /	Engine Control System (PGM-FI)	M23	VIN CHECK	
FREED HYBRID /	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FREED HYBRID /	Engine Control System (PGM-FI)	M50	Read ECU Information	
FREED HYBRID /	Engine Control System (PGM-FI)	M50	Read codes	
FREED HYBRID /	Engine Control System (PGM-FI)	M50	Erase Codes	
FREED HYBRID /	Engine Control System (PGM-FI)	M50	Readiness Codes	
FREED HYBRID /	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FREED HYBRID /	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FREED HYBRID /	Engine Control System (PGM-FI)	M50	Read Live Data	
FREED HYBRID /	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FREED HYBRID /	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FREED HYBRID /	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FREED HYBRID /	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M50	VIN CHECK	
FREED HYBRID /	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Read ECU Information	
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Read codes	
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Erase Codes	
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Readiness Codes	
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
FREED HYBRID /	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Read Live Data	
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ACM
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FREED HYBRID /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FREED HYBRID /	Engine Control System (PGM-FI)	M86	VIN CHECK	
FREED HYBRID /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FREED HYBRID /	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
FREED HYBRID /	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
FREED HYBRID /	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	
FREED HYBRID /	PSR	M27	Read ECU Information	
FREED HYBRID /	PSR	M27	Read codes	
FREED HYBRID /	PSR	M27	Erase Codes	
FREED HYBRID /	PSR	M27	Read Live Data	
FREED HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	

FREED HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FREED HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FREED HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FREED HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FREED HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
FREED HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
FREED HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
FREED HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
FREED HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
FREED HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
FREED HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FREED HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FREED HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FREED HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FREED HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FREED HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FREED HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FREED HYBRID	/	Remote starter (RS)	M90	System Check	
FREED HYBRID	/	Remote starter (RS)	M90	HISTORY	
FREED HYBRID	/	Remote starter (RS)	M90	Registration	
FREED HYBRID	/	Seat load cell (SWS)	M6F	Read ECU Information	
FREED HYBRID	/	Seat load cell (SWS)	M6F	Read codes	
FREED HYBRID	/	Seat load cell (SWS)	M6F	Erase Codes	
FREED HYBRID	/	Seat load cell (SWS)	M6F	Read Live Data	
FREED HYBRID	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FREED HYBRID	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FREED HYBRID	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FREED HYBRID	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
FREED HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FREED HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FREED HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FREED HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FREED HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FREED HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FREED HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
FREED HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FREED HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FREED HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
FREED HYBRID	/	Groove track drive unit (SLOT ECU)	M98	History Data	
FREED HYBRID	/	Groove track drive unit (SLOT ECU)	M98	System Information	
FREED HYBRID	/	Airbag Control System (SRS)	M9F	Read ECU Information	
FREED HYBRID	/	Airbag Control System (SRS)	M9F	Read codes	
FREED HYBRID	/	Airbag Control System (SRS)	M9F	Erase Codes	
FREED HYBRID	/	Airbag Control System (SRS)	M9F	Read Live Data	
FREED HYBRID	/	Airbag Control System (SRS)	MA0	Read ECU Information	
FREED HYBRID	/	Airbag Control System (SRS)	MA0	Read codes	
FREED HYBRID	/	Airbag Control System (SRS)	MA0	Erase Codes	
FREED HYBRID	/	Airbag Control System (SRS)	MA0	Read Live Data	
FREED HYBRID	/	Airbag Control System (SRS)	MA1	Read ECU Information	
FREED HYBRID	/	Airbag Control System (SRS)	MA1	Read codes	
FREED HYBRID	/	Airbag Control System (SRS)	MA1	Erase Codes	
FREED HYBRID	/	Airbag Control System (SRS)	MA1	Read Live Data	
FREED HYBRID	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FREED HYBRID	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FREED HYBRID	/	Airbag Control System (SRS)	M2A	Read codes	
FREED HYBRID	/	Airbag Control System (SRS)	M2A	Erase Codes	
FREED HYBRID	/	Airbag Control System (SRS)	M2A	Read Live Data	
FREED HYBRID	/	Airbag Control System (SRS)	M9C	Read ECU Information	
FREED HYBRID	/	Airbag Control System (SRS)	M9C	Read codes	
FREED HYBRID	/	Airbag Control System (SRS)	M9C	Erase Codes	
FREED HYBRID	/	Airbag Control System (SRS)	M9C	Read Live Data	
FREED HYBRID	/	Airbag Control System (SRS)	M9D	Read ECU Information	
FREED HYBRID	/	Airbag Control System (SRS)	M9D	Read codes	
FREED HYBRID	/	Airbag Control System (SRS)	M9D	Erase Codes	
FREED HYBRID	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FREED HYBRID	/	Airbag Control System (SRS)	M9D	Read Live Data	
FREED HYBRID	/	Airbag Control System (SRS)	M9D	Parameter Information	
FREED HYBRID	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FREED HYBRID	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FREED HYBRID	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization

FREED HYBRID	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FREED HYBRID	/	Airbag Control System (SRS)	M9D	Function Test	
FREED HYBRID	/	Airbag Control System (SRS)	M9D	System Information	
FREED HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FREED HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FREED HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FREED HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FREED HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FREED HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FREED HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FREED HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FREED HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FREED HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FREED HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FREED HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FREED HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FREED HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FREED HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FREED HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FREED HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FREED HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FREED HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FREED SPIKE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FREED SPIKE	/	Four-wheel steering control system (4WS)	M52	Read codes	
FREED SPIKE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
FREED SPIKE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FREED SPIKE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
FREED SPIKE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FREED SPIKE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FREED SPIKE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FREED SPIKE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FREED SPIKE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FREED SPIKE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	Read codes	
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FREED SPIKE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FREED SPIKE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
FREED SPIKE	/	Automatic shift control system (A/T)	M3B	Read codes	
FREED SPIKE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
FREED SPIKE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FREED SPIKE	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FREED SPIKE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
FREED SPIKE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FREED SPIKE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FREED SPIKE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FREED SPIKE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FREED SPIKE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FREED SPIKE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
FREED SPIKE	/	Automatic shift control system (A/T)	M3C	Read codes	
FREED SPIKE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Read codes	
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Erase Codes	
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FREED SPIKE	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Read Live Data	
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FREED SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FREED SPIKE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
FREED SPIKE	/	Automatic shift control system (A/T)	M82	Read codes	

FREED SPIKE	/	Automatic shift control system (A/T)	M82	Erase Codes	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
FREED SPIKE	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FREED SPIKE	/	Active Engine Control Support System (ACM)	M06	Read codes	
FREED SPIKE	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
FREED SPIKE	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FREED SPIKE	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
FREED SPIKE	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
FREED SPIKE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FREED SPIKE	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FREED SPIKE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FREED SPIKE	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
FREED SPIKE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FREED SPIKE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FREED SPIKE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FREED SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
FREED SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
FREED SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
FREED SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
FREED SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
FREED SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
FREED SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
FREED SPIKE	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
FREED SPIKE	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
FREED SPIKE	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
FREED SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
FREED SPIKE	/	Transmission Control System (AT)	M18	Read ECU Information	
FREED SPIKE	/	Transmission Control System (AT)	M18	Read codes	
FREED SPIKE	/	Transmission Control System (AT)	M18	Erase Codes	
FREED SPIKE	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FREED SPIKE	/	Transmission Control System (AT)	M18	Read Live Data	
FREED SPIKE	/	Transmission Control System (AT)	M18	Adjustment	
FREED SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
FREED SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
FREED SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
FREED SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
FREED SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
FREED SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FREED SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
FREED SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FREED SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
FREED SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FREED SPIKE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	

FREED SPIKE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FREED SPIKE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FREED SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FREED SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FREED SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FREED SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
FREED SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
FREED SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
FREED SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
FREED SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
FREED SPIKE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FREED SPIKE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FREED SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FREED SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FREED SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FREED SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FREED SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FREED SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FREED SPIKE	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FREED SPIKE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FREED SPIKE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FREED SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FREED SPIKE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FREED SPIKE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FREED SPIKE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FREED SPIKE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command

FREED SPIKE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FREED SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FREED SPIKE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FREED SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FREED SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FREED SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FREED SPIKE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
FREED SPIKE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FREED SPIKE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FREED SPIKE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FREED SPIKE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FREED SPIKE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FREED SPIKE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FREED SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FREED SPIKE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Security	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FREED SPIKE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FREED SPIKE	/	BODY ELECTRICAL/Security	MFF	History Data	
FREED SPIKE	/	BODY ELECTRICAL/Security	MFF	History Clear	
FREED SPIKE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FREED SPIKE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FREED SPIKE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FREED SPIKE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FREED SPIKE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FREED SPIKE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FREED SPIKE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FREED SPIKE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FREED SPIKE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FREED SPIKE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	

FREED SPIKE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FREED SPIKE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
FREED SPIKE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FREED SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FREED SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FREED SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FREED SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FREED SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FREED SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FREED SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FREED SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FREED SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FREED SPIKE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FREED SPIKE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FREED SPIKE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FREED SPIKE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
FREED SPIKE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FREED SPIKE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FREED SPIKE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FREED SPIKE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
FREED SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> )	M2E	Read ECU Information	
FREED SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> )	M2E	Read codes	
FREED SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> )	M2E	Erase Codes	
FREED SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> )	M2E	Read Freeze Frame Data	
FREED SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> )	M2E	Read Live Data	
FREED SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> )	M2E	CMBS (CMS) ACTIVATION HISTORY	
FREED SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> )	M2E	Miscellaneous Test	RADAR AIMING
FREED SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> )	M2E	Miscellaneous Test	CMBS Brake
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
FREED SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
FREED SPIKE	/	DBW	M34	Read ECU Information	
FREED SPIKE	/	DBW	M34	Read codes	
FREED SPIKE	/	DBW	M34	Erase Codes	
FREED SPIKE	/	DBW	M34	Read Freeze Frame Data	
FREED SPIKE	/	DBW	M34	Read Live Data	
FREED SPIKE	/	DBW	M34	Inspection	Idle Speed Adjust
FREED SPIKE	/	DBW	M34	Inspection	Throttle Test
FREED SPIKE	/	DBW	M34	ECM Reset	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off



FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FREED SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FREED SPIKE	/	Capacitor Control System (EDLC)	M12	Read codes	
FREED SPIKE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
FREED SPIKE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
FREED SPIKE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FREED SPIKE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FREED SPIKE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FREED SPIKE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
FREED SPIKE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FREED SPIKE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FREED SPIKE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FREED SPIKE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FREED SPIKE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FREED SPIKE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
FREED SPIKE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FREED SPIKE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FREED SPIKE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FREED SPIKE	/	Electric Powertrain / IMA	M66	Read ECU Information	
FREED SPIKE	/	Electric Powertrain / IMA	M66	Read codes	
FREED SPIKE	/	Electric Powertrain / IMA	M66	Erase Codes	
FREED SPIKE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FREED SPIKE	/	Electric Powertrain / IMA	M66	Read Live Data	
FREED SPIKE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FREED SPIKE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FREED SPIKE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FREED SPIKE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FREED SPIKE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FREED SPIKE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FREED SPIKE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FREED SPIKE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FREED SPIKE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FREED SPIKE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FREED SPIKE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FREED SPIKE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	

FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FREED SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FREED SPIKE	/	New energy battery (EV)	M44	Read ECU Information	
FREED SPIKE	/	New energy battery (EV)	M44	Read codes	
FREED SPIKE	/	New energy battery (EV)	M44	Erase Codes	
FREED SPIKE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
FREED SPIKE	/	New energy battery (EV)	M44	Read Live Data	
FREED SPIKE	/	New energy battery (EV)	M44	Inspection	
FREED SPIKE	/	New energy battery (EV)	M44	Adjustment	
FREED SPIKE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FREED SPIKE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
FREED SPIKE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FREED SPIKE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FREED SPIKE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FREED SPIKE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FREED SPIKE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
FREED SPIKE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FREED SPIKE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FREED SPIKE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FREED SPIKE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FREED SPIKE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FREED SPIKE	/	FCW LDW	M4E	Read ECU Information	
FREED SPIKE	/	FCW LDW	M4E	Read codes	
FREED SPIKE	/	FCW LDW	M4E	Erase Codes	
FREED SPIKE	/	FCW LDW	M4E	Read Live Data	
FREED SPIKE	/	FCW LDW	M4E	Function Test	FCW Drive
FREED SPIKE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
FREED SPIKE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
FREED SPIKE	/	FCW LDW	M4E	Function Test	Indicator Drive
FREED SPIKE	/	FCW LDW	M4E	Adjustment	
FREED SPIKE	/	Instrument Display System (GAUGE)	M2C	Read codes	
FREED SPIKE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
FREED SPIKE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Read codes	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Read codes	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Read codes	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FREED SPIKE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Read codes	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA

FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FREED SPIKE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FREED SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FREED SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
FREED SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FREED SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FREED SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FREED SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
FREED SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FREED SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FREED SPIKE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FREED SPIKE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
FREED SPIKE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FREED SPIKE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FREED SPIKE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FREED SPIKE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FREED SPIKE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FREED SPIKE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FREED SPIKE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FREED SPIKE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FREED SPIKE	/	IMA	M63	Read ECU Information	
FREED SPIKE	/	IMA	M63	Read codes	
FREED SPIKE	/	IMA	M63	Erase Codes	
FREED SPIKE	/	IMA	M63	Read Freeze Frame Data	
FREED SPIKE	/	IMA	M63	Read Live Data	
FREED SPIKE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FREED SPIKE	/	IMA	M63	Adjustment	SOC PRESET
FREED SPIKE	/	IMA	M64	Read ECU Information	
FREED SPIKE	/	IMA	M64	Read codes	
FREED SPIKE	/	IMA	M64	Erase Codes	
FREED SPIKE	/	IMA	M64	Read Freeze Frame Data	
FREED SPIKE	/	IMA	M64	Read Live Data	
FREED SPIKE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FREED SPIKE	/	IMA	M64	Adjustment	SOC PRESET
FREED SPIKE	/	IMA	M65	Read ECU Information	
FREED SPIKE	/	IMA	M65	Read codes	
FREED SPIKE	/	IMA	M65	Erase Codes	
FREED SPIKE	/	IMA	M65	Read Freeze Frame Data	
FREED SPIKE	/	IMA	M65	Read Live Data	
FREED SPIKE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FREED SPIKE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FREED SPIKE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FREED SPIKE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FREED SPIKE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
FREED SPIKE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FREED SPIKE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FREED SPIKE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FREED SPIKE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
FREED SPIKE	/	Night Vision System (INVS)	0XB1	Read codes	
FREED SPIKE	/	Night Vision System (INVS)	0XB1	Erase Codes	
FREED SPIKE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FREED SPIKE	/	Night Vision System (INVS)	0XB1	Read Live Data	
FREED SPIKE	/	Night Vision System (INVS)	0XB1	Adjustment	
FREED SPIKE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FREED SPIKE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FREED SPIKE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FREED SPIKE	/	i-SHIFT	0XB0	Read ECU Information	
FREED SPIKE	/	i-SHIFT	0XB0	Read codes	
FREED SPIKE	/	i-SHIFT	0XB0	Erase Codes	
FREED SPIKE	/	i-SHIFT	0XB0	Read Live Data	
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Read codes	
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Self Check	
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	History Data	
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving

FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FREED SPIKE	/	Keyless Entry Control System (KAS)	M99	Registration	
FREED SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FREED SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FREED SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FREED SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FREED SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
FREED SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
FREED SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
FREED SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
FREED SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
FREED SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
FREED SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
FREED SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
FREED SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
FREED SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
FREED SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
FREED SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
FREED SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
FREED SPIKE	/	Management ECU Module (ME)	M74	Read ECU Information	
FREED SPIKE	/	Management ECU Module (ME)	M74	Read codes	
FREED SPIKE	/	Management ECU Module (ME)	M74	Erase Codes	
FREED SPIKE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
FREED SPIKE	/	Management ECU Module (ME)	M74	Read Live Data	
FREED SPIKE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
FREED SPIKE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
FREED SPIKE	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
FREED SPIKE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
FREED SPIKE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
FREED SPIKE	/	Multi-view camera system (MVCS)	M7A	Read codes	
FREED SPIKE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
FREED SPIKE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
FREED SPIKE	/	Multi-view camera system (MVCS)	M7A	Customization	
FREED SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
FREED SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
FREED SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
FREED SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
FREED SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
FREED SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
FREED SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
FREED SPIKE	/	Power Control Unit (PCU)	M83	Read ECU Information	
FREED SPIKE	/	Power Control Unit (PCU)	M83	Read codes	
FREED SPIKE	/	Power Control Unit (PCU)	M83	Erase Codes	
FREED SPIKE	/	Power Control Unit (PCU)	M83	Read Live Data	
FREED SPIKE	/	Power Control Unit (PCU)	M83	Self Check	
FREED SPIKE	/	Power Control Unit (PCU)	M83	History Data	
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Read codes	
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST

FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
FREED SPIKE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	Read codes	
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
FREED SPIKE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Read codes	
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
FREED SPIKE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FREED SPIKE	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
FREED SPIKE	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
FREED SPIKE	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
FREED SPIKE	/	PSR	M27	Read ECU Information	
FREED SPIKE	/	PSR	M27	Read codes	
FREED SPIKE	/	PSR	M27	Erase Codes	
FREED SPIKE	/	PSR	M27	Read Live Data	
FREED SPIKE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FREED SPIKE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FREED SPIKE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FREED SPIKE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FREED SPIKE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FREED SPIKE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
FREED SPIKE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
FREED SPIKE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
FREED SPIKE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
FREED SPIKE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
FREED SPIKE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
FREED SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FREED SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FREED SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FREED SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FREED SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FREED SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FREED SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FREED SPIKE	/	Remote starter (RS)	M90	System Check	
FREED SPIKE	/	Remote starter (RS)	M90	HISTORY	
FREED SPIKE	/	Remote starter (RS)	M90	Registration	
FREED SPIKE	/	Seat load cell (SWS)	M6F	Read ECU Information	
FREED SPIKE	/	Seat load cell (SWS)	M6F	Read codes	
FREED SPIKE	/	Seat load cell (SWS)	M6F	Erase Codes	
FREED SPIKE	/	Seat load cell (SWS)	M6F	Read Live Data	
FREED SPIKE	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FREED SPIKE	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FREED SPIKE	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FREED SPIKE	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
FREED SPIKE	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FREED SPIKE	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FREED SPIKE	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FREED SPIKE	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)

FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FREED SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
FREED SPIKE	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FREED SPIKE	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
FREED SPIKE	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FREED SPIKE	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FREED SPIKE	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
FREED SPIKE	/	Groove track drive unit (SLOT ECU)	M98	History Data	
FREED SPIKE	/	Groove track drive unit (SLOT ECU)	M98	System Information	
FREED SPIKE	/	Airbag Control System (SRS)	M9F	Read ECU Information	
FREED SPIKE	/	Airbag Control System (SRS)	M9F	Read codes	
FREED SPIKE	/	Airbag Control System (SRS)	M9F	Erase Codes	
FREED SPIKE	/	Airbag Control System (SRS)	M9F	Read Live Data	
FREED SPIKE	/	Airbag Control System (SRS)	MA0	Read ECU Information	
FREED SPIKE	/	Airbag Control System (SRS)	MA0	Read codes	
FREED SPIKE	/	Airbag Control System (SRS)	MA0	Erase Codes	
FREED SPIKE	/	Airbag Control System (SRS)	MA0	Read Live Data	
FREED SPIKE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
FREED SPIKE	/	Airbag Control System (SRS)	MA1	Read codes	
FREED SPIKE	/	Airbag Control System (SRS)	MA1	Erase Codes	
FREED SPIKE	/	Airbag Control System (SRS)	MA1	Read Live Data	
FREED SPIKE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FREED SPIKE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FREED SPIKE	/	Airbag Control System (SRS)	M2A	Read codes	
FREED SPIKE	/	Airbag Control System (SRS)	M2A	Erase Codes	
FREED SPIKE	/	Airbag Control System (SRS)	M2A	Read Live Data	
FREED SPIKE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
FREED SPIKE	/	Airbag Control System (SRS)	M9C	Read codes	
FREED SPIKE	/	Airbag Control System (SRS)	M9C	Erase Codes	
FREED SPIKE	/	Airbag Control System (SRS)	M9C	Read Live Data	
FREED SPIKE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
FREED SPIKE	/	Airbag Control System (SRS)	M9D	Read codes	
FREED SPIKE	/	Airbag Control System (SRS)	M9D	Erase Codes	
FREED SPIKE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FREED SPIKE	/	Airbag Control System (SRS)	M9D	Read Live Data	
FREED SPIKE	/	Airbag Control System (SRS)	M9D	Parameter Information	
FREED SPIKE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FREED SPIKE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FREED SPIKE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FREED SPIKE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FREED SPIKE	/	Airbag Control System (SRS)	M9D	Function Test	
FREED SPIKE	/	Airbag Control System (SRS)	M9D	System Information	
FREED SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FREED SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FREED SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FREED SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FREED SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FREED SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FREED SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FREED SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FREED SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FREED SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FREED SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FREED SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FREED SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FREED SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FREED SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FREED SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FREED SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization

FREED SPIKE /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FREED SPIKE /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
FREED SPIKE HYBRI /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
FREED SPIKE HYBRI /	Four-wheel steering control system (4WS)	M52	Read codes	
FREED SPIKE HYBRI /	Four-wheel steering control system (4WS)	M52	Erase Codes	
FREED SPIKE HYBRI /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Four-wheel steering control system (4WS)	M52	Read Live Data	
FREED SPIKE HYBRI /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
FREED SPIKE HYBRI /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
FREED SPIKE HYBRI /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
FREED SPIKE HYBRI /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
FREED SPIKE HYBRI /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
FREED SPIKE HYBRI /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	Read ECU Information	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	Read codes	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	Erase Codes	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	Read Live Data	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3B	Read ECU Information	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3B	Read codes	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3B	Erase Codes	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3B	Read Live Data	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3C	Read ECU Information	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3C	Read codes	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M3C	Erase Codes	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Read ECU Information	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Read codes	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Erase Codes	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	ECMPCM Reset	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Read Live Data	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M82	Read ECU Information	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M82	Read codes	
FREED SPIKE HYBRI /	Automatic shift control system (A/T)	M82	Erase Codes	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read codes	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M61	Erase Codes	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Live Data	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	Throttle Opening Angle Test
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 1
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 2
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	LIGHT CHECK
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BUZZER CHECK
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read ECU Information	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read codes	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M62	Erase Codes	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Live Data	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M62	Adjustment	RADAR AIMING
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	BRAKE ACTUATOR 3
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ACC relay malfunction.
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INDICATOR LIGHT
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INFORMATION DISPLAY
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ALARM BUZZER
FREED SPIKE HYBRI /	Active Engine Control Support System (ACM)	M06	Read ECU Information	
FREED SPIKE HYBRI /	Active Engine Control Support System (ACM)	M06	Read codes	
FREED SPIKE HYBRI /	Active Engine Control Support System (ACM)	M06	Erase Codes	
FREED SPIKE HYBRI /	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Active Engine Control Support System (ACM)	M06	Read Live Data	
FREED SPIKE HYBRI /	Active Engine Control Support System (ACM)	M06	ACM Reset	
FREED SPIKE HYBRI /	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
FREED SPIKE HYBRI /	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
FREED SPIKE HYBRI /	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
FREED SPIKE HYBRI /	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test

FREED SPIKE HYBRI /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
FREED SPIKE HYBRI /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
FREED SPIKE HYBRI /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
FREED SPIKE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
FREED SPIKE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
FREED SPIKE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
FREED SPIKE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
FREED SPIKE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
FREED SPIKE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
FREED SPIKE HYBRI /	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
FREED SPIKE HYBRI /	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
FREED SPIKE HYBRI /	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
FREED SPIKE HYBRI /	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
FREED SPIKE HYBRI /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
FREED SPIKE HYBRI /	Transmission Control System (AT)	M18	Read ECU Information	
FREED SPIKE HYBRI /	Transmission Control System (AT)	M18	Read codes	
FREED SPIKE HYBRI /	Transmission Control System (AT)	M18	Erase Codes	
FREED SPIKE HYBRI /	Transmission Control System (AT)	M18	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Transmission Control System (AT)	M18	Read Live Data	
FREED SPIKE HYBRI /	Transmission Control System (AT)	M18	Adjustment	
FREED SPIKE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
FREED SPIKE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Read codes	
FREED SPIKE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
FREED SPIKE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
FREED SPIKE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
FREED SPIKE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
FREED SPIKE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
FREED SPIKE HYBRI /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
FREED SPIKE HYBRI /	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
FREED SPIKE HYBRI /	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
FREED SPIKE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
FREED SPIKE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
FREED SPIKE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
FREED SPIKE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
FREED SPIKE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
FREED SPIKE HYBRI /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
FREED SPIKE HYBRI /	BODY ELECTRICAL/e-Call	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/e-Call	MFF	Read Live Data	



FREED SPIKE HYBRI /	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Front Panel	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
FREED SPIKE HYBRI /	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
FREED SPIKE HYBRI /	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
FREED SPIKE HYBRI /	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
FREED SPIKE HYBRI /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
FREED SPIKE HYBRI /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
FREED SPIKE HYBRI /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
FREED SPIKE HYBRI /	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
FREED SPIKE HYBRI /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door

FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
FREED SPIKE HYBRI /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
FREED SPIKE HYBRI /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Security	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Security	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Security	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
FREED SPIKE HYBRI /	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
FREED SPIKE HYBRI /	BODY ELECTRICAL/Security	MFF	History Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Security	MFF	History Clear	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Telematics	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
FREED SPIKE HYBRI /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
FREED SPIKE HYBRI /	BODY ELECTRICAL/Wiper	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FREED SPIKE HYBRI /	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
FREED SPIKE HYBRI /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
FREED SPIKE HYBRI /	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP Security	MFF	Read codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP Security	MFF	History Data	
FREED SPIKE HYBRI /	BODY ELECTRICAL/YOP Security	MFF	History Clear	
FREED SPIKE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
FREED SPIKE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
FREED SPIKE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
FREED SPIKE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
FREED SPIKE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
FREED SPIKE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
FREED SPIKE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
FREED SPIKE HYBRI /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
FREED SPIKE HYBRI /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
FREED SPIKE HYBRI /	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
FREED SPIKE HYBRI /	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
FREED SPIKE HYBRI /	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
FREED SPIKE HYBRI /	Urban Active Brake Control System (CBAS)	M32	Read codes	
FREED SPIKE HYBRI /	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
FREED SPIKE HYBRI /	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
FREED SPIKE HYBRI /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
FREED SPIKE HYBRI /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield

FREED SPIKE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read ECU Information	
FREED SPIKE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read codes	
FREED SPIKE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Erase Codes	
FREED SPIKE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read Live Data	
FREED SPIKE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM# M2E	CMBS (CMS) ACTIVATION HISTORY	
FREED SPIKE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Miscellaneous Test	RADAR AIMING
FREED SPIKE HYBRI /	Collision Mitigation Brake Control System (CMBS/CM# M2E	Miscellaneous Test	CMBS Brake
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M1B	Read ECU Information	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M1B	Read codes	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M1B	Erase Codes	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M1B	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M1B	Read Live Data	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M1B	ECMPCM Reset	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Lock Solenoid Test
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Solenoid Tests
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Electrical Oil Pump Activation
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M33	Read ECU Information	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M33	Read codes	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M33	Erase Codes	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M33	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M33	Read Live Data	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M33	ECMPCM Reset	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	Read codes	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	ECMPCM Reset	
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
FREED SPIKE HYBRI /	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
FREED SPIKE HYBRI /	DBW	Read ECU Information	
FREED SPIKE HYBRI /	DBW	Read codes	
FREED SPIKE HYBRI /	DBW	Erase Codes	
FREED SPIKE HYBRI /	DBW	Read Freeze Frame Data	
FREED SPIKE HYBRI /	DBW	Read Live Data	
FREED SPIKE HYBRI /	DBW	Inspection	Idle Speed Adjust
FREED SPIKE HYBRI /	DBW	Inspection	Throttle Test
FREED SPIKE HYBRI /	DBW	ECM Reset	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Read ECU Information	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Read codes	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Erase Codes	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	ECM/PCM Reset	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Read Live Data	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	Injector Test
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	All Injectors Off
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	EGR TEST
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	IMRC Test
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	Glow On/Off
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	ACG On/Off
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	A/C Clutch On/Off
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	Fuel Heater On/ Off
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	Radiator Fan Relay Test
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	EGR Cooler Bypass Valve Test
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	Intake Shutter Test
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Adjustment	IQA Data Status
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Adjustment	IQA Write Data
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Adjustment	DPF Regeneration
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Adjustment	DPF Differential Pressure Sensor Initial Learn
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Adjustment	Reset 'Calculated PM Value'
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Adjustment	MAF Sensor Learning Clear
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Adjustment	A/F Sensor Learning Clear
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Adjustment	ISV Forced Learning
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	VIN CHECK	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Replace ECM/PCM	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Read ECU Information	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Read codes	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Erase Codes	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	ECM/PCM Reset	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Read Live Data	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	Injector Test
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	Compression Test
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	VIN CHECK	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Read ECU Information	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Read codes	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Erase Codes	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	ECM/PCM Reset	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Read Live Data	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	All Injectors Off
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	Fuel Rail Pressure Control Valve Test
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	Inspection	Glow On/Off

FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
FREED SPIKE HYBRI /	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
FREED SPIKE HYBRI /	Capacitor Control System (EDLC)	M12	Read codes	
FREED SPIKE HYBRI /	Capacitor Control System (EDLC)	M12	Erase Codes	
FREED SPIKE HYBRI /	Capacitor Control System (EDLC)	M12	Read Live Data	
FREED SPIKE HYBRI /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
FREED SPIKE HYBRI /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
FREED SPIKE HYBRI /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
FREED SPIKE HYBRI /	Electronic Brake Control System (EPB)	M1F	Read codes	
FREED SPIKE HYBRI /	Electronic Brake Control System (EPB)	M1F	Erase Codes	
FREED SPIKE HYBRI /	Electronic Brake Control System (EPB)	M1F	Read Live Data	
FREED SPIKE HYBRI /	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
FREED SPIKE HYBRI /	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
FREED SPIKE HYBRI /	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
FREED SPIKE HYBRI /	Electronic Brake Control System (EPB)	M3E	Read codes	
FREED SPIKE HYBRI /	Electronic Brake Control System (EPB)	M3E	Erase Codes	
FREED SPIKE HYBRI /	Electronic Brake Control System (EPB)	M3E	Read Live Data	
FREED SPIKE HYBRI /	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
FREED SPIKE HYBRI /	Electric Powertrain / IMA	M66	Read ECU Information	
FREED SPIKE HYBRI /	Electric Powertrain / IMA	M66	Read codes	
FREED SPIKE HYBRI /	Electric Powertrain / IMA	M66	Erase Codes	
FREED SPIKE HYBRI /	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Electric Powertrain / IMA	M66	Read Live Data	
FREED SPIKE HYBRI /	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
FREED SPIKE HYBRI /	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
FREED SPIKE HYBRI /	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
FREED SPIKE HYBRI /	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
FREED SPIKE HYBRI /	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
FREED SPIKE HYBRI /	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
FREED SPIKE HYBRI /	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
FREED SPIKE HYBRI /	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
FREED SPIKE HYBRI /	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
FREED SPIKE HYBRI /	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
FREED SPIKE HYBRI /	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Read codes	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Read codes	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Read codes	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
FREED SPIKE HYBRI /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
FREED SPIKE HYBRI /	New energy battery (EV)	M44	Read ECU Information	
FREED SPIKE HYBRI /	New energy battery (EV)	M44	Read codes	
FREED SPIKE HYBRI /	New energy battery (EV)	M44	Erase Codes	
FREED SPIKE HYBRI /	New energy battery (EV)	M44	Read Freeze Frame Data	
FREED SPIKE HYBRI /	New energy battery (EV)	M44	Read Live Data	
FREED SPIKE HYBRI /	New energy battery (EV)	M44	Inspection	
FREED SPIKE HYBRI /	New energy battery (EV)	M44	Adjustment	
FREED SPIKE HYBRI /	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
FREED SPIKE HYBRI /	Electronic vacuum pump (EVPS)	M21	Read codes	
FREED SPIKE HYBRI /	Electronic vacuum pump (EVPS)	M21	Erase Codes	
FREED SPIKE HYBRI /	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Electronic vacuum pump (EVPS)	M21	Read Live Data	
FREED SPIKE HYBRI /	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
FREED SPIKE HYBRI /	Electronic vacuum pump (EVPS)	M22	Read codes	
FREED SPIKE HYBRI /	Electronic vacuum pump (EVPS)	M22	Erase Codes	
FREED SPIKE HYBRI /	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Electronic vacuum pump (EVPS)	M22	Read Live Data	
FREED SPIKE HYBRI /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
FREED SPIKE HYBRI /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
FREED SPIKE HYBRI /	FCW LDW	M4E	Read ECU Information	
FREED SPIKE HYBRI /	FCW LDW	M4E	Read codes	
FREED SPIKE HYBRI /	FCW LDW	M4E	Erase Codes	
FREED SPIKE HYBRI /	FCW LDW	M4E	Read Live Data	
FREED SPIKE HYBRI /	FCW LDW	M4E	Function Test	FCW Drive
FREED SPIKE HYBRI /	FCW LDW	M4E	Function Test	Left side lane departure warning
FREED SPIKE HYBRI /	FCW LDW	M4E	Function Test	Right side lane departure warning

FREED SPIKE HYBRI /	FCW LDW	M4E	Function Test	Indicator Drive
FREED SPIKE HYBRI /	FCW LDW	M4E	Adjustment	
FREED SPIKE HYBRI /	Instrument Display System (GAUGE)	M2C	Read codes	
FREED SPIKE HYBRI /	Instrument Display System (GAUGE)	M2C	Erase Codes	
FREED SPIKE HYBRI /	Instrument Display System (GAUGE)	M2C	Read Live Data	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Read ECU Information	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Read codes	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Erase Codes	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Read Live Data	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Read ECU Information	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Read codes	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Erase Codes	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Read Live Data	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Read ECU Information	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Read codes	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Erase Codes	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Read Live Data	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Pulser Test	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Read codes	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Erase Codes	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Read Live Data	
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
FREED SPIKE HYBRI /	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
FREED SPIKE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
FREED SPIKE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Read codes	
FREED SPIKE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
FREED SPIKE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
FREED SPIKE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Customize	
FREED SPIKE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
FREED SPIKE HYBRI /	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
FREED SPIKE HYBRI /	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
FREED SPIKE HYBRI /	Hydraulic booster control system (HBS)	M5F	Read codes	
FREED SPIKE HYBRI /	Hydraulic booster control system (HBS)	M5F	Erase Codes	
FREED SPIKE HYBRI /	Hydraulic booster control system (HBS)	M5F	Read Live Data	
FREED SPIKE HYBRI /	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
FREED SPIKE HYBRI /	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
FREED SPIKE HYBRI /	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
FREED SPIKE HYBRI /	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
FREED SPIKE HYBRI /	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
FREED SPIKE HYBRI /	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
FREED SPIKE HYBRI /	IMA	M63	Read ECU Information	
FREED SPIKE HYBRI /	IMA	M63	Read codes	
FREED SPIKE HYBRI /	IMA	M63	Erase Codes	
FREED SPIKE HYBRI /	IMA	M63	Read Freeze Frame Data	
FREED SPIKE HYBRI /	IMA	M63	Read Live Data	
FREED SPIKE HYBRI /	IMA	M63	Function Test	IPU MODULE FAN DRIVE
FREED SPIKE HYBRI /	IMA	M63	Adjustment	SOC PRESET
FREED SPIKE HYBRI /	IMA	M64	Read ECU Information	
FREED SPIKE HYBRI /	IMA	M64	Read codes	
FREED SPIKE HYBRI /	IMA	M64	Erase Codes	

FREED SPIKE HYBRI /	IMA	M64	Read Freeze Frame Data	
FREED SPIKE HYBRI /	IMA	M64	Read Live Data	
FREED SPIKE HYBRI /	IMA	M64	Function Test	IPU MODULE FAN DRIVE
FREED SPIKE HYBRI /	IMA	M64	Adjustment	SOC PRESET
FREED SPIKE HYBRI /	IMA	M65	Read ECU Information	
FREED SPIKE HYBRI /	IMA	M65	Read codes	
FREED SPIKE HYBRI /	IMA	M65	Erase Codes	
FREED SPIKE HYBRI /	IMA	M65	Read Freeze Frame Data	
FREED SPIKE HYBRI /	IMA	M65	Read Live Data	
FREED SPIKE HYBRI /	IMA	M65	Function Test	IPU MODULE FAN DRIVE
FREED SPIKE HYBRI /	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
FREED SPIKE HYBRI /	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
FREED SPIKE HYBRI /	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
FREED SPIKE HYBRI /	Intake Sounder Control System (ISC)	M6D	Read codes	
FREED SPIKE HYBRI /	Intake Sounder Control System (ISC)	M6D	Erase Codes	
FREED SPIKE HYBRI /	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Intake Sounder Control System (ISC)	M6D	Read Live Data	
FREED SPIKE HYBRI /	Night Vision System (INVS)	0XB1	Read ECU Information	
FREED SPIKE HYBRI /	Night Vision System (INVS)	0XB1	Read codes	
FREED SPIKE HYBRI /	Night Vision System (INVS)	0XB1	Erase Codes	
FREED SPIKE HYBRI /	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Night Vision System (INVS)	0XB1	Read Live Data	
FREED SPIKE HYBRI /	Night Vision System (INVS)	0XB1	Adjustment	
FREED SPIKE HYBRI /	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
FREED SPIKE HYBRI /	Night Vision System (INVS)	0XB1	Function Test	Camera Test
FREED SPIKE HYBRI /	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
FREED SPIKE HYBRI /	i-SHIFT	0XB0	Read ECU Information	
FREED SPIKE HYBRI /	i-SHIFT	0XB0	Read codes	
FREED SPIKE HYBRI /	i-SHIFT	0XB0	Erase Codes	
FREED SPIKE HYBRI /	i-SHIFT	0XB0	Read Live Data	
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Read ECU Information	
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Read codes	
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Erase Codes	
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Read Live Data	
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Self Check	
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	History Data	
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
FREED SPIKE HYBRI /	Keyless Entry Control System (KAS)	M99	Registration	
FREED SPIKE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
FREED SPIKE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
FREED SPIKE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
FREED SPIKE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	

FREED SPIKE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	STATIC CAMERA AIMING
FREED SPIKE HYBRI /	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	VIDEO OUTPUT
FREED SPIKE HYBRI /	Electronically assisted lane keeping control system (Lk) M71	Read ECU Information	
FREED SPIKE HYBRI /	Electronically assisted lane keeping control system (Lk) M71	Read codes	
FREED SPIKE HYBRI /	Electronically assisted lane keeping control system (Lk) M71	Erase Codes	
FREED SPIKE HYBRI /	Electronically assisted lane keeping control system (Lk) M71	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Electronically assisted lane keeping control system (Lk) M71	Read Live Data	
FREED SPIKE HYBRI /	Electronically assisted lane keeping control system (Lk) M71	Adjustment	STEERING REWRITE
FREED SPIKE HYBRI /	Electronically assisted lane keeping control system (Lk) M71	Customize	LDW OFFSET
FREED SPIKE HYBRI /	Electronically assisted lane keeping control system (Lk) M71	Customize	GAIN ADJUST
FREED SPIKE HYBRI /	Electronically assisted lane keeping control system (Lk) M71	Customize	DRIVING WILL
FREED SPIKE HYBRI /	Electronically assisted lane keeping control system (Lk) M71	Customize	CONTROL DELAY
FREED SPIKE HYBRI /	Management ECU Module (ME) M74	Read ECU Information	
FREED SPIKE HYBRI /	Management ECU Module (ME) M74	Read codes	
FREED SPIKE HYBRI /	Management ECU Module (ME) M74	Erase Codes	
FREED SPIKE HYBRI /	Management ECU Module (ME) M74	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Management ECU Module (ME) M74	Read Live Data	
FREED SPIKE HYBRI /	Multi-view camera and parking assist system (MVC/P) M26	Read ECU Information	
FREED SPIKE HYBRI /	Multi-view camera and parking assist system (MVC/P) M26	Read codes	
FREED SPIKE HYBRI /	Multi-view camera and parking assist system (MVC/P) M26	Erase Codes	
FREED SPIKE HYBRI /	Multi-view camera and parking assist system (MVC/P) M26	Read Live Data	
FREED SPIKE HYBRI /	Multi-view camera system (MVCS) M7A	Read ECU Information	
FREED SPIKE HYBRI /	Multi-view camera system (MVCS) M7A	Read codes	
FREED SPIKE HYBRI /	Multi-view camera system (MVCS) M7A	Erase Codes	
FREED SPIKE HYBRI /	Multi-view camera system (MVCS) M7A	Read Live Data	
FREED SPIKE HYBRI /	Multi-view camera system (MVCS) M7A	Customization	
FREED SPIKE HYBRI /	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
FREED SPIKE HYBRI /	Multi-view camera system (MVCS) M7A	Function Test	LED Light
FREED SPIKE HYBRI /	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
FREED SPIKE HYBRI /	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
FREED SPIKE HYBRI /	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
FREED SPIKE HYBRI /	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
FREED SPIKE HYBRI /	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
FREED SPIKE HYBRI /	Power Control Unit (PCU) M83	Read ECU Information	
FREED SPIKE HYBRI /	Power Control Unit (PCU) M83	Read codes	
FREED SPIKE HYBRI /	Power Control Unit (PCU) M83	Erase Codes	
FREED SPIKE HYBRI /	Power Control Unit (PCU) M83	Read Live Data	
FREED SPIKE HYBRI /	Power Control Unit (PCU) M83	Self Check	
FREED SPIKE HYBRI /	Power Control Unit (PCU) M83	History Data	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Read ECU Information	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Read codes	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Erase Codes	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Readiness Codes	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Read Live Data	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	VIN CHECK	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	Read ECU Information	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	Read codes	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	Erase Codes	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	Readiness Codes	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	Read Live Data	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	VIN CHECK	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M86	Read ECU Information	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M86	Read codes	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M86	Erase Codes	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M86	Readiness Codes	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M86	Read Live Data	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST

FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	ACM
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	CRANK (CKP) PATTERN
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Adjustment	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	VIN CHECK	
FREED SPIKE HYBRI /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
FREED SPIKE HYBRI /	Four-wheel precision steering control system (PAWSC M96)		Read codes	
FREED SPIKE HYBRI /	Four-wheel precision steering control system (PAWSC M96)		Erase Codes	
FREED SPIKE HYBRI /	Four-wheel precision steering control system (PAWSC M96)		Read Live Data	
FREED SPIKE HYBRI /	PSR	M27	Read ECU Information	
FREED SPIKE HYBRI /	PSR	M27	Read codes	
FREED SPIKE HYBRI /	PSR	M27	Erase Codes	
FREED SPIKE HYBRI /	PSR	M27	Read Live Data	
FREED SPIKE HYBRI /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
FREED SPIKE HYBRI /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
FREED SPIKE HYBRI /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
FREED SPIKE HYBRI /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
FREED SPIKE HYBRI /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
FREED SPIKE HYBRI /	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
FREED SPIKE HYBRI /	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
FREED SPIKE HYBRI /	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
FREED SPIKE HYBRI /	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
FREED SPIKE HYBRI /	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
FREED SPIKE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
FREED SPIKE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
FREED SPIKE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
FREED SPIKE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
FREED SPIKE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
FREED SPIKE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
FREED SPIKE HYBRI /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
FREED SPIKE HYBRI /	Remote starter (RS)	M90	System Check	
FREED SPIKE HYBRI /	Remote starter (RS)	M90	HISTORY	
FREED SPIKE HYBRI /	Remote starter (RS)	M90	Registration	
FREED SPIKE HYBRI /	Seat load cell (SWS)	M6F	Read ECU Information	
FREED SPIKE HYBRI /	Seat load cell (SWS)	M6F	Read codes	
FREED SPIKE HYBRI /	Seat load cell (SWS)	M6F	Erase Codes	
FREED SPIKE HYBRI /	Seat load cell (SWS)	M6F	Read Live Data	
FREED SPIKE HYBRI /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
FREED SPIKE HYBRI /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
FREED SPIKE HYBRI /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
FREED SPIKE HYBRI /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
FREED SPIKE HYBRI /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
FREED SPIKE HYBRI /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
FREED SPIKE HYBRI /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
FREED SPIKE HYBRI /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
FREED SPIKE HYBRI /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M All Sensor	
FREED SPIKE HYBRI /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
FREED SPIKE HYBRI /	Groove track drive unit (SLOT ECU)	M98	Read codes	
FREED SPIKE HYBRI /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
FREED SPIKE HYBRI /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
FREED SPIKE HYBRI /	Groove track drive unit (SLOT ECU)	M98	Self Check	
FREED SPIKE HYBRI /	Groove track drive unit (SLOT ECU)	M98	History Data	
FREED SPIKE HYBRI /	Groove track drive unit (SLOT ECU)	M98	System Information	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9F	Read ECU Information	



FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9F	Read codes	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9F	Erase Codes	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9F	Read Live Data	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	MA0	Read ECU Information	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	MA0	Read codes	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	MA0	Erase Codes	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	MA0	Read Live Data	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	MA1	Read ECU Information	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	MA1	Read codes	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	MA1	Erase Codes	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	MA1	Read Live Data	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
FREED SPIKE HYBRI /	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M2A	Read codes	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M2A	Erase Codes	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M2A	Read Live Data	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9C	Read ECU Information	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9C	Read codes	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9C	Erase Codes	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9C	Read Live Data	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9D	Read ECU Information	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9D	Read codes	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9D	Erase Codes	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9D	Read Live Data	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9D	Parameter Information	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9D	Function Test	
FREED SPIKE HYBRI /	Airbag Control System (SRS)	M9D	System Information	
FREED SPIKE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
FREED SPIKE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Read codes	
FREED SPIKE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
FREED SPIKE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
FREED SPIKE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
FREED SPIKE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Inspection	
FREED SPIKE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
FREED SPIKE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	Function Test	
FREED SPIKE HYBRI /	Variable Valve Timing Control System (SVT)	MA2	System Information	
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
FREED SPIKE HYBRI /	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
FREED SPIKE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
FREED SPIKE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
FREED SPIKE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
FREED SPIKE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
FREED SPIKE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
FREED SPIKE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
FREED SPIKE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
FREED SPIKE HYBRI /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
Fit Flex /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
Fit Flex /	Four-wheel steering control system (4WS)	M52	Read codes	
Fit Flex /	Four-wheel steering control system (4WS)	M52	Erase Codes	
Fit Flex /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
Fit Flex /	Four-wheel steering control system (4WS)	M52	Read Live Data	
Fit Flex /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
Fit Flex /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
Fit Flex /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
Fit Flex /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
Fit Flex /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
Fit Flex /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
Fit Flex /	Automatic shift control system (A/T)	M1E	Read ECU Information	
Fit Flex /	Automatic shift control system (A/T)	M1E	Read codes	
Fit Flex /	Automatic shift control system (A/T)	M1E	Erase Codes	
Fit Flex /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
Fit Flex /	Automatic shift control system (A/T)	M1E	Read Live Data	
Fit Flex /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
Fit Flex /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
Fit Flex /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
Fit Flex /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Fit Flex /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Fit Flex /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Fit Flex /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Fit Flex /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
Fit Flex /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
Fit Flex /	Automatic shift control system (A/T)	M3B	Read ECU Information	
Fit Flex /	Automatic shift control system (A/T)	M3B	Read codes	
Fit Flex /	Automatic shift control system (A/T)	M3B	Erase Codes	
Fit Flex /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
Fit Flex /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	

Fit Flex	/	Automatic shift control system (A/T)	M3B	Read Live Data	
Fit Flex	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
Fit Flex	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
Fit Flex	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
Fit Flex	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
Fit Flex	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
Fit Flex	/	Automatic shift control system (A/T)	M3C	Read codes	
Fit Flex	/	Automatic shift control system (A/T)	M3C	Erase Codes	
Fit Flex	/	Automatic shift control system (A/T)	M81	Read ECU Information	
Fit Flex	/	Automatic shift control system (A/T)	M81	Read codes	
Fit Flex	/	Automatic shift control system (A/T)	M81	Erase Codes	
Fit Flex	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
Fit Flex	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
Fit Flex	/	Automatic shift control system (A/T)	M81	Read Live Data	
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Fit Flex	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
Fit Flex	/	Automatic shift control system (A/T)	M82	Read ECU Information	
Fit Flex	/	Automatic shift control system (A/T)	M82	Read codes	
Fit Flex	/	Automatic shift control system (A/T)	M82	Erase Codes	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
Fit Flex	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
Fit Flex	/	Active Engine Control Support System (ACM)	M06	Read codes	
Fit Flex	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
Fit Flex	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
Fit Flex	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
Fit Flex	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
Fit Flex	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
Fit Flex	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
Fit Flex	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
Fit Flex	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
Fit Flex	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
Fit Flex	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
Fit Flex	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
Fit Flex	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read ECU Information	
Fit Flex	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read codes	
Fit Flex	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Erase Codes	
Fit Flex	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Freeze Frame Data	
Fit Flex	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Live Data	
Fit Flex	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Function Test	Damper Force Operation Test
Fit Flex	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Adjustment	Damper Stroke Calibration
Fit Flex	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
Fit Flex	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
Fit Flex	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
Fit Flex	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
Fit Flex	/	Transmission Control System (AT)	M18	Read ECU Information	
Fit Flex	/	Transmission Control System (AT)	M18	Read codes	
Fit Flex	/	Transmission Control System (AT)	M18	Erase Codes	
Fit Flex	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
Fit Flex	/	Transmission Control System (AT)	M18	Read Live Data	
Fit Flex	/	Transmission Control System (AT)	M18	Adjustment	
Fit Flex	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
Fit Flex	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	

Fit Flex	/	Active Torque Converter Control System (ATTS)	MOE	Erase Codes	
Fit Flex	/	Active Torque Converter Control System (ATTS)	MOE	Read Freeze Frame Data	
Fit Flex	/	Active Torque Converter Control System (ATTS)	MOE	Read Live Data	
Fit Flex	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
Fit Flex	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	STEERING ANGLE
Fit Flex	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
Fit Flex	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ALL SENSORS
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
Fit Flex	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
Fit Flex	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
Fit Flex	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
Fit Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
Fit Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
Fit Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
Fit Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
Fit Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
Fit Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
Fit Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
Fit Flex	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
Fit Flex	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
Fit Flex	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
Fit Flex	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
Fit Flex	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
Fit Flex	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
Fit Flex	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
Fit Flex	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
Fit Flex	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
Fit Flex	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
Fit Flex	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
Fit Flex	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)

Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
Fit Flex	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
Fit Flex	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
Fit Flex	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
Fit Flex	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
Fit Flex	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
Fit Flex	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
Fit Flex	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
Fit Flex	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
Fit Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
Fit Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
Fit Flex	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
Fit Flex	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
Fit Flex	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
Fit Flex	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
Fit Flex	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
Fit Flex	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
Fit Flex	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
Fit Flex	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
Fit Flex	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
Fit Flex	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Security	MFF	Read codes	

Fit Flex	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
Fit Flex	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
Fit Flex	/	BODY ELECTRICAL/Security	MFF	History Data	
Fit Flex	/	BODY ELECTRICAL/Security	MFF	History Clear	
Fit Flex	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
Fit Flex	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
Fit Flex	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Fit Flex	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
Fit Flex	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Fit Flex	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
Fit Flex	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
Fit Flex	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
Fit Flex	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
Fit Flex	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
Fit Flex	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
Fit Flex	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
Fit Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
Fit Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
Fit Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
Fit Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
Fit Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
Fit Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
Fit Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
Fit Flex	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
Fit Flex	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
Fit Flex	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
Fit Flex	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
Fit Flex	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
Fit Flex	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
Fit Flex	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
Fit Flex	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
Fit Flex	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
Fit Flex	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
Fit Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Read ECU Information	
Fit Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Read codes	
Fit Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Erase Codes	
Fit Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Read Freeze Frame Data	
Fit Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Read Live Data	
Fit Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
Fit Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Miscellaneous Test	RADAR AIMING
Fit Flex	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)		Miscellaneous Test	CMBS Brake
Fit Flex	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
Fit Flex	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
Fit Flex	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
Fit Flex	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
Fit Flex	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
Fit Flex	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
Fit Flex	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	

Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D	ECMPCM Reset		
Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B	
Fit Flex	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P	
Fit Flex	/	DBW	M34	Read ECU Information	
Fit Flex	/	DBW	M34	Read codes	
Fit Flex	/	DBW	M34	Erase Codes	
Fit Flex	/	DBW	M34	Read Freeze Frame Data	
Fit Flex	/	DBW	M34	Read Live Data	
Fit Flex	/	DBW	M34	Inspection	Idle Speed Adjust
Fit Flex	/	DBW	M34	Inspection	Throttle Test
Fit Flex	/	DBW	M34	ECM Reset	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
Fit Flex	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
Fit Flex	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
Fit Flex	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
Fit Flex	/	Capacitor Control System (EDLC)	M12	Read codes	
Fit Flex	/	Capacitor Control System (EDLC)	M12	Erase Codes	
Fit Flex	/	Capacitor Control System (EDLC)	M12	Read Live Data	
Fit Flex	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
Fit Flex	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
Fit Flex	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
Fit Flex	/	Electronic Brake Control System (EPB)	M1F	Read codes	
Fit Flex	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
Fit Flex	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
Fit Flex	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
Fit Flex	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
Fit Flex	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
Fit Flex	/	Electronic Brake Control System (EPB)	M3E	Read codes	
Fit Flex	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
Fit Flex	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
Fit Flex	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
Fit Flex	/	Electric Powertrain / IMA	M66	Read ECU Information	
Fit Flex	/	Electric Powertrain / IMA	M66	Read codes	
Fit Flex	/	Electric Powertrain / IMA	M66	Erase Codes	
Fit Flex	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
Fit Flex	/	Electric Powertrain / IMA	M66	Read Live Data	
Fit Flex	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
Fit Flex	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration

Fit Flex	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
Fit Flex	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
Fit Flex	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
Fit Flex	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
Fit Flex	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
Fit Flex	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
Fit Flex	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
Fit Flex	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
Fit Flex	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
Fit Flex	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
Fit Flex	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
Fit Flex	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
Fit Flex	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
Fit Flex	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
Fit Flex	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
Fit Flex	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
Fit Flex	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
Fit Flex	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
Fit Flex	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
Fit Flex	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
Fit Flex	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
Fit Flex	/	New energy battery (EV)	M44	Read ECU Information	
Fit Flex	/	New energy battery (EV)	M44	Read codes	
Fit Flex	/	New energy battery (EV)	M44	Erase Codes	
Fit Flex	/	New energy battery (EV)	M44	Read Freeze Frame Data	
Fit Flex	/	New energy battery (EV)	M44	Read Live Data	
Fit Flex	/	New energy battery (EV)	M44	Inspection	
Fit Flex	/	New energy battery (EV)	M44	Adjustment	
Fit Flex	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
Fit Flex	/	Electronic vacuum pump (EVPS)	M21	Read codes	
Fit Flex	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
Fit Flex	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
Fit Flex	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
Fit Flex	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
Fit Flex	/	Electronic vacuum pump (EVPS)	M22	Read codes	
Fit Flex	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
Fit Flex	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
Fit Flex	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
Fit Flex	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
Fit Flex	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
Fit Flex	/	FCW LDW	M4E	Read ECU Information	
Fit Flex	/	FCW LDW	M4E	Read codes	
Fit Flex	/	FCW LDW	M4E	Erase Codes	
Fit Flex	/	FCW LDW	M4E	Read Live Data	
Fit Flex	/	FCW LDW	M4E	Function Test	FCW Drive
Fit Flex	/	FCW LDW	M4E	Function Test	Left side lane departure warning
Fit Flex	/	FCW LDW	M4E	Function Test	Right side lane departure warning
Fit Flex	/	FCW LDW	M4E	Function Test	Indicator Drive
Fit Flex	/	FCW LDW	M4E	Adjustment	
Fit Flex	/	Instrument Display System (GAUGE)	M2C	Read codes	
Fit Flex	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
Fit Flex	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Read codes	
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Read codes	
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA

Fit Flex	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Read codes	
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
Fit Flex	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
Fit Flex	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Read codes	
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
Fit Flex	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
Fit Flex	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
Fit Flex	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
Fit Flex	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
Fit Flex	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
Fit Flex	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
Fit Flex	/	Intelligent Parking Control System (SPS)	M9B	Customize	
Fit Flex	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
Fit Flex	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
Fit Flex	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
Fit Flex	/	Hydraulic booster control system (HBS)	M5F	Read codes	
Fit Flex	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
Fit Flex	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
Fit Flex	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
Fit Flex	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
Fit Flex	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
Fit Flex	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
Fit Flex	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
Fit Flex	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
Fit Flex	/	IMA	M63	Read ECU Information	
Fit Flex	/	IMA	M63	Read codes	
Fit Flex	/	IMA	M63	Erase Codes	
Fit Flex	/	IMA	M63	Read Freeze Frame Data	
Fit Flex	/	IMA	M63	Read Live Data	
Fit Flex	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
Fit Flex	/	IMA	M63	Adjustment	SOC PRESET
Fit Flex	/	IMA	M64	Read ECU Information	
Fit Flex	/	IMA	M64	Read codes	
Fit Flex	/	IMA	M64	Erase Codes	
Fit Flex	/	IMA	M64	Read Freeze Frame Data	
Fit Flex	/	IMA	M64	Read Live Data	
Fit Flex	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
Fit Flex	/	IMA	M64	Adjustment	SOC PRESET
Fit Flex	/	IMA	M65	Read ECU Information	
Fit Flex	/	IMA	M65	Read codes	
Fit Flex	/	IMA	M65	Erase Codes	
Fit Flex	/	IMA	M65	Read Freeze Frame Data	
Fit Flex	/	IMA	M65	Read Live Data	
Fit Flex	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
Fit Flex	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
Fit Flex	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
Fit Flex	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
Fit Flex	/	Intake Sounder Control System (ISC)	M6D	Read codes	
Fit Flex	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
Fit Flex	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
Fit Flex	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
Fit Flex	/	Night Vision System (INVS)	0XB1	Read ECU Information	
Fit Flex	/	Night Vision System (INVS)	0XB1	Read codes	
Fit Flex	/	Night Vision System (INVS)	0XB1	Erase Codes	
Fit Flex	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
Fit Flex	/	Night Vision System (INVS)	0XB1	Read Live Data	
Fit Flex	/	Night Vision System (INVS)	0XB1	Adjustment	
Fit Flex	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
Fit Flex	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
Fit Flex	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
Fit Flex	/	i-SHIFT	0XB0	Read ECU Information	
Fit Flex	/	i-SHIFT	0XB0	Read codes	
Fit Flex	/	i-SHIFT	0XB0	Erase Codes	
Fit Flex	/	i-SHIFT	0XB0	Read Live Data	
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Read codes	



Fit Flex	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Self Check	
Fit Flex	/	Keyless Entry Control System (KAS)	M99	History Data	
Fit Flex	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
Fit Flex	/	Keyless Entry Control System (KAS)	M99	Registration	
Fit Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
Fit Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
Fit Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
Fit Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
Fit Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
Fit Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
Fit Flex	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
Fit Flex	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
Fit Flex	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
Fit Flex	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
Fit Flex	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
Fit Flex	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
Fit Flex	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
Fit Flex	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
Fit Flex	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
Fit Flex	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
Fit Flex	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
Fit Flex	/	Management ECU Module (ME)	M74	Read ECU Information	
Fit Flex	/	Management ECU Module (ME)	M74	Read codes	
Fit Flex	/	Management ECU Module (ME)	M74	Erase Codes	
Fit Flex	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
Fit Flex	/	Management ECU Module (ME)	M74	Read Live Data	
Fit Flex	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
Fit Flex	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
Fit Flex	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
Fit Flex	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
Fit Flex	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
Fit Flex	/	Multi-view camera system (MVCS)	M7A	Read codes	
Fit Flex	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
Fit Flex	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
Fit Flex	/	Multi-view camera system (MVCS)	M7A	Customization	
Fit Flex	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
Fit Flex	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
Fit Flex	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
Fit Flex	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
Fit Flex	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
Fit Flex	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image

Fit Flex	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
Fit Flex	/	Power Control Unit (PCU)	M83	Read ECU Information	
Fit Flex	/	Power Control Unit (PCU)	M83	Read codes	
Fit Flex	/	Power Control Unit (PCU)	M83	Erase Codes	
Fit Flex	/	Power Control Unit (PCU)	M83	Read Live Data	
Fit Flex	/	Power Control Unit (PCU)	M83	Self Check	
Fit Flex	/	Power Control Unit (PCU)	M83	History Data	
Fit Flex	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
Fit Flex	/	Engine Control System (PGM-FI)	M23	Read codes	
Fit Flex	/	Engine Control System (PGM-FI)	M23	Erase Codes	
Fit Flex	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
Fit Flex	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
Fit Flex	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
Fit Flex	/	Engine Control System (PGM-FI)	M23	Read Live Data	
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
Fit Flex	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
Fit Flex	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
Fit Flex	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
Fit Flex	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
Fit Flex	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
Fit Flex	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
Fit Flex	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
Fit Flex	/	Engine Control System (PGM-FI)	M50	Read codes	
Fit Flex	/	Engine Control System (PGM-FI)	M50	Erase Codes	
Fit Flex	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
Fit Flex	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
Fit Flex	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
Fit Flex	/	Engine Control System (PGM-FI)	M50	Read Live Data	
Fit Flex	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
Fit Flex	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
Fit Flex	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
Fit Flex	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
Fit Flex	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
Fit Flex	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
Fit Flex	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
Fit Flex	/	Engine Control System (PGM-FI)	M86	Read codes	
Fit Flex	/	Engine Control System (PGM-FI)	M86	Erase Codes	
Fit Flex	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
Fit Flex	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
Fit Flex	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
Fit Flex	/	Engine Control System (PGM-FI)	M86	Read Live Data	
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
Fit Flex	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
Fit Flex	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
Fit Flex	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
Fit Flex	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
Fit Flex	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
Fit Flex	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
Fit Flex	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
Fit Flex	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
Fit Flex	/	PSR	M27	Read ECU Information	
Fit Flex	/	PSR	M27	Read codes	
Fit Flex	/	PSR	M27	Erase Codes	
Fit Flex	/	PSR	M27	Read Live Data	
Fit Flex	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
Fit Flex	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
Fit Flex	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
Fit Flex	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	

Fit Flex	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
Fit Flex	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
Fit Flex	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
Fit Flex	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
Fit Flex	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
Fit Flex	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
Fit Flex	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
Fit Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
Fit Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
Fit Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
Fit Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
Fit Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
Fit Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
Fit Flex	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
Fit Flex	/	Remote starter (RS)	M90	System Check	
Fit Flex	/	Remote starter (RS)	M90	HISTORY	
Fit Flex	/	Remote starter (RS)	M90	Registration	
Fit Flex	/	Seat load cell (SWS)	M6F	Read ECU Information	
Fit Flex	/	Seat load cell (SWS)	M6F	Read codes	
Fit Flex	/	Seat load cell (SWS)	M6F	Erase Codes	
Fit Flex	/	Seat load cell (SWS)	M6F	Read Live Data	
Fit Flex	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
Fit Flex	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
Fit Flex	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
Fit Flex	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
Fit Flex	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
Fit Flex	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
Fit Flex	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
Fit Flex	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
Fit Flex	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
Fit Flex	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
Fit Flex	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
Fit Flex	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
Fit Flex	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
Fit Flex	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
Fit Flex	/	Groove track drive unit (SLOT ECU)	M98	History Data	
Fit Flex	/	Groove track drive unit (SLOT ECU)	M98	System Information	
Fit Flex	/	Airbag Control System (SRS)	M9F	Read ECU Information	
Fit Flex	/	Airbag Control System (SRS)	M9F	Read codes	
Fit Flex	/	Airbag Control System (SRS)	M9F	Erase Codes	
Fit Flex	/	Airbag Control System (SRS)	M9F	Read Live Data	
Fit Flex	/	Airbag Control System (SRS)	MA0	Read ECU Information	
Fit Flex	/	Airbag Control System (SRS)	MA0	Read codes	
Fit Flex	/	Airbag Control System (SRS)	MA0	Erase Codes	
Fit Flex	/	Airbag Control System (SRS)	MA0	Read Live Data	
Fit Flex	/	Airbag Control System (SRS)	MA1	Read ECU Information	
Fit Flex	/	Airbag Control System (SRS)	MA1	Read codes	
Fit Flex	/	Airbag Control System (SRS)	MA1	Erase Codes	
Fit Flex	/	Airbag Control System (SRS)	MA1	Read Live Data	
Fit Flex	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
Fit Flex	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
Fit Flex	/	Airbag Control System (SRS)	M2A	Read codes	
Fit Flex	/	Airbag Control System (SRS)	M2A	Erase Codes	
Fit Flex	/	Airbag Control System (SRS)	M2A	Read Live Data	
Fit Flex	/	Airbag Control System (SRS)	M9C	Read ECU Information	
Fit Flex	/	Airbag Control System (SRS)	M9C	Read codes	
Fit Flex	/	Airbag Control System (SRS)	M9C	Erase Codes	
Fit Flex	/	Airbag Control System (SRS)	M9C	Read Live Data	
Fit Flex	/	Airbag Control System (SRS)	M9D	Read ECU Information	
Fit Flex	/	Airbag Control System (SRS)	M9D	Read codes	
Fit Flex	/	Airbag Control System (SRS)	M9D	Erase Codes	
Fit Flex	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
Fit Flex	/	Airbag Control System (SRS)	M9D	Read Live Data	
Fit Flex	/	Airbag Control System (SRS)	M9D	Parameter Information	
Fit Flex	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
Fit Flex	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
Fit Flex	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
Fit Flex	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
Fit Flex	/	Airbag Control System (SRS)	M9D	Function Test	
Fit Flex	/	Airbag Control System (SRS)	M9D	System Information	

Fit Flex	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
Fit Flex	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
Fit Flex	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
Fit Flex	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
Fit Flex	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
Fit Flex	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
Fit Flex	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
Fit Flex	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
Fit Flex	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
Fit Flex	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
Fit Flex	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
Fit Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
Fit Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
Fit Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
Fit Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
Fit Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
Fit Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
Fit Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
Fit Flex	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
GIENIA	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
GIENIA	/	Four-wheel steering control system (4WS)	M52	Read codes	
GIENIA	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
GIENIA	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
GIENIA	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
GIENIA	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
GIENIA	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
GIENIA	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
GIENIA	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
GIENIA	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
GIENIA	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
GIENIA	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
GIENIA	/	Automatic shift control system (A/T)	M1E	Read codes	
GIENIA	/	Automatic shift control system (A/T)	M1E	Erase Codes	
GIENIA	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
GIENIA	/	Automatic shift control system (A/T)	M1E	Read Live Data	
GIENIA	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
GIENIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
GIENIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
GIENIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
GIENIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
GIENIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
GIENIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
GIENIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
GIENIA	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
GIENIA	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
GIENIA	/	Automatic shift control system (A/T)	M3B	Read codes	
GIENIA	/	Automatic shift control system (A/T)	M3B	Erase Codes	
GIENIA	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
GIENIA	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
GIENIA	/	Automatic shift control system (A/T)	M3B	Read Live Data	
GIENIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
GIENIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
GIENIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
GIENIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
GIENIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
GIENIA	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
GIENIA	/	Automatic shift control system (A/T)	M3C	Read codes	
GIENIA	/	Automatic shift control system (A/T)	M3C	Erase Codes	
GIENIA	/	Automatic shift control system (A/T)	M81	Read ECU Information	
GIENIA	/	Automatic shift control system (A/T)	M81	Read codes	
GIENIA	/	Automatic shift control system (A/T)	M81	Erase Codes	
GIENIA	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
GIENIA	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
GIENIA	/	Automatic shift control system (A/T)	M81	Read Live Data	
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
GIENIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
GIENIA	/	Automatic shift control system (A/T)	M82	Read ECU Information	
GIENIA	/	Automatic shift control system (A/T)	M82	Read codes	
GIENIA	/	Automatic shift control system (A/T)	M82	Erase Codes	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	

GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Erase Codes	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Read Freeze Frame Data	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Read Live Data	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	Throttle Opening Angle Test
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 1
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 2
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	LIGHT CHECK
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
GIENIA	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
GIENIA	/	Active Engine Control Support System (ACM) M06	Read codes	
GIENIA	/	Active Engine Control Support System (ACM) M06	Erase Codes	
GIENIA	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
GIENIA	/	Active Engine Control Support System (ACM) M06	Read Live Data	
GIENIA	/	Active Engine Control Support System (ACM) M06	ACM Reset	
GIENIA	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
GIENIA	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
GIENIA	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
GIENIA	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
GIENIA	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
GIENIA	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
GIENIA	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
GIENIA	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
GIENIA	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
GIENIA	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
GIENIA	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
GIENIA	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
GIENIA	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
GIENIA	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
GIENIA	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
GIENIA	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
GIENIA	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
GIENIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
GIENIA	/	Transmission Control System (AT) M18	Read ECU Information	
GIENIA	/	Transmission Control System (AT) M18	Read codes	
GIENIA	/	Transmission Control System (AT) M18	Erase Codes	
GIENIA	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
GIENIA	/	Transmission Control System (AT) M18	Read Live Data	
GIENIA	/	Transmission Control System (AT) M18	Adjustment	
GIENIA	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
GIENIA	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
GIENIA	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
GIENIA	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
GIENIA	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
GIENIA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
GIENIA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
GIENIA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
GIENIA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
GIENIA	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
GIENIA	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
GIENIA	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	

GIENIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
GIENIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
GIENIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
GIENIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
GIENIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
GIENIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
GIENIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
GIENIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
GIENIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
GIENIA	/	BODY ELECTRICAL/Auto Light Leveling	Read codes	
GIENIA	/	BODY ELECTRICAL/Auto Light Leveling	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Auto Light Leveling	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Auto Light Leveling	Function Test	Auto Leveling Adjust Motor
GIENIA	/	BODY ELECTRICAL/Auto Light Leveling	Adjustment	Sensor Initial Position Learning
GIENIA	/	BODY ELECTRICAL/Door Locks	Read codes	
GIENIA	/	BODY ELECTRICAL/Door Locks	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Door Locks	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Door Locks	Function Test	Lock All Doors
GIENIA	/	BODY ELECTRICAL/Door Locks	Function Test	Unlock Driver's Side Door
GIENIA	/	BODY ELECTRICAL/Door Locks	Function Test	Unlock All Doors
GIENIA	/	BODY ELECTRICAL/Door Locks	Function Test	Fuel Fill Door Open
GIENIA	/	BODY ELECTRICAL/Door Locks	Function Test	Left Power Sliding Door
GIENIA	/	BODY ELECTRICAL/Door Locks	Function Test	Right Power Sliding Door
GIENIA	/	BODY ELECTRICAL/e-Call	Read codes	
GIENIA	/	BODY ELECTRICAL/e-Call	Erase Codes	
GIENIA	/	BODY ELECTRICAL/e-Call	Read Live Data	
GIENIA	/	BODY ELECTRICAL/e-Call	Activation and Display E-Call unit data	
GIENIA	/	BODY ELECTRICAL/Front Panel	Read codes	
GIENIA	/	BODY ELECTRICAL/Front Panel	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Front Panel	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Front Panel	Inspection	Front Panel Check
GIENIA	/	BODY ELECTRICAL/Front Panel	Function Test	Front Display Panel
GIENIA	/	BODY ELECTRICAL/Gauges	Read ECU Information	
GIENIA	/	BODY ELECTRICAL/Gauges	Read codes	
GIENIA	/	BODY ELECTRICAL/Gauges	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Gauges	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Speedometer
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Tachometer
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	VSA/TCS Activation Indicator
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	VSA/TCS Indicator
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	ABS INDICATOR
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	EBD Indicator(Electronic Brake Display)
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Cruise Activation Indicator
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	MIL Status
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Daytime Running Lights Indicator(Canada)
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Engine Oil Pressure Indicator
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Charging System Indicator
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Cruise Control Main Switch Indicator
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Maintenance Required Indicator
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	High Beam Indicator
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Light On Indicator
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Low fuel level indicator
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Security Indicator
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Trip Meter
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	A/T Gear Position Indicator (P)
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	A/T Gear Position Indicator (R)
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	A/T Gear Position Indicator (N)
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	A/T Gear Position Indicator (P)
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	A/T Gear Position Indicator (R)
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	A/T Gear Position Indicator (D3)
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	A/T Gear Position Indicator (1)
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	A/T Gear Position Indicator (2)
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	A/T Gear Position Indicator (M)
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Sequential Sport Shift Mode Indicator
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Illumination Brightness Control
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Key Alarm Chime
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Headlight Alarm Chime
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Seatbelt Reminder Chime
GIENIA	/	BODY ELECTRICAL/Gauges	Function Test	Self-diagnostic function
GIENIA	/	BODY ELECTRICAL/Gauges	Adjustment	Maintenance Minder
GIENIA	/	BODY ELECTRICAL/Gauges	Adjustment	PAX Warning Reset
GIENIA	/	BODY ELECTRICAL/HF LINK/TEL	Read codes	
GIENIA	/	BODY ELECTRICAL/HF LINK/TEL	Erase Codes	
GIENIA	/	BODY ELECTRICAL/HF LINK/TEL	Inspection	
GIENIA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	Read codes	
GIENIA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	Erase Codes	
GIENIA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	Read Live Data	
GIENIA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	Erase Codes	
GIENIA	/	BODY ELECTRICAL/HVAC/Climate Control	Read codes	
GIENIA	/	BODY ELECTRICAL/HVAC/Climate Control	Erase Codes	
GIENIA	/	BODY ELECTRICAL/HVAC/Climate Control	Read Live Data	
GIENIA	/	BODY ELECTRICAL/HVAC/Climate Control	Inspection	Climate Control Unit Self Test
GIENIA	/	BODY ELECTRICAL/Keyless Transmitter	Read codes	
GIENIA	/	BODY ELECTRICAL/Keyless Transmitter	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Keyless Transmitter	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Keyless Transmitter	Inspection	
GIENIA	/	BODY ELECTRICAL/Keyless Transmitter	Function Test	Trunk Lid Release Command
GIENIA	/	BODY ELECTRICAL/Keyless Transmitter	Function Test	Keyless Buzzer
GIENIA	/	BODY ELECTRICAL/Lighting	Read codes	
GIENIA	/	BODY ELECTRICAL/Lighting	Erase Codes	

GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
GIENIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
GIENIA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
GIENIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
GIENIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
GIENIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
GIENIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
GIENIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
GIENIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
GIENIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
GIENIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
GIENIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
GIENIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
GIENIA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
GIENIA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Security	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
GIENIA	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
GIENIA	/	BODY ELECTRICAL/Security	MFF	History Data	
GIENIA	/	BODY ELECTRICAL/Security	MFF	History Clear	
GIENIA	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
GIENIA	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
GIENIA	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
GIENIA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
GIENIA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
GIENIA	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
GIENIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
GIENIA	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
GIENIA	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
GIENIA	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
GIENIA	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
GIENIA	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	

GIENIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
GIENIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
GIENIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
GIENIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
GIENIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
GIENIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
GIENIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
GIENIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
GIENIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
GIENIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
GIENIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
GIENIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
GIENIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
GIENIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
GIENIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
GIENIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
GIENIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
GIENIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
GIENIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
GIENIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
GIENIA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Neutral Rewrite	
GIENIA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
GIENIA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
GIENIA	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
GIENIA	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
GIENIA	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
GIENIA	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
GIENIA	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
GIENIA	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
GIENIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Read ECU Information	
GIENIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Read codes	
GIENIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Erase Codes	
GIENIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Read Freeze Frame Data	
GIENIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Read Live Data	
GIENIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	CMBS (CMS) ACTIVATION HISTORY	
GIENIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Miscellaneous Test	RADAR AIMING
GIENIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Miscellaneous Test	CMBS Brake
GIENIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read ECU Information	
GIENIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read codes	
GIENIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Erase Codes	
GIENIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Freeze Frame Data	
GIENIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Live Data	
GIENIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	ECMPCMC Reset	
GIENIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Lock Solenoid Test
GIENIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Solenoid Tests
GIENIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Electrical Oil Pump Activation
GIENIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Read ECU Information	
GIENIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Read codes	
GIENIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Erase Codes	
GIENIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Freeze Frame Data	
GIENIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Live Data	
GIENIA	/	Promise Automatic Transmission Control System (CVT M33	M33	ECMPCMC Reset	
GIENIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Inhibitor Solenoid
GIENIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid A (LF)
GIENIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid B (RF)
GIENIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Start Clutch Feedback Learn
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read ECU Information	
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read codes	
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Erase Codes	
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Freeze Frame Data	
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Live Data	
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	ECMPCMC Reset	
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Inhibitor Solenoid
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid A (LF)
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid B (RF)
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Start Clutch Feedback Learn
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve A
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve B
GIENIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve O/P
GIENIA	/	DBW	M34	Read ECU Information	
GIENIA	/	DBW	M34	Read codes	
GIENIA	/	DBW	M34	Erase Codes	
GIENIA	/	DBW	M34	Read Freeze Frame Data	
GIENIA	/	DBW	M34	Read Live Data	
GIENIA	/	DBW	M34	Inspection	Idle Speed Adjust
GIENIA	/	DBW	M34	Inspection	Throttle Test
GIENIA	/	DBW	M34	ECM Reset	
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test



GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
GIENIA	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
GIENIA	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
GIENIA	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
GIENIA	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
GIENIA	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
GIENIA	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
GIENIA	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
GIENIA	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
GIENIA	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
GIENIA	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
GIENIA	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
GIENIA	/	Capacitor Control System (EDLC)	M12	Read codes	
GIENIA	/	Capacitor Control System (EDLC)	M12	Erase Codes	
GIENIA	/	Capacitor Control System (EDLC)	M12	Read Live Data	
GIENIA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
GIENIA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
GIENIA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
GIENIA	/	Electronic Brake Control System (EPB)	M1F	Read codes	
GIENIA	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
GIENIA	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
GIENIA	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
GIENIA	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
GIENIA	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
GIENIA	/	Electronic Brake Control System (EPB)	M3E	Read codes	
GIENIA	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
GIENIA	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
GIENIA	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
GIENIA	/	Electric Powertrain / IMA	M66	Read ECU Information	
GIENIA	/	Electric Powertrain / IMA	M66	Read codes	
GIENIA	/	Electric Powertrain / IMA	M66	Erase Codes	
GIENIA	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
GIENIA	/	Electric Powertrain / IMA	M66	Read Live Data	
GIENIA	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
GIENIA	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
GIENIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
GIENIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
GIENIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
GIENIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
GIENIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
GIENIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
GIENIA	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
GIENIA	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
GIENIA	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
GIENIA	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
GIENIA	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
GIENIA	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
GIENIA	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
GIENIA	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
GIENIA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
GIENIA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
GIENIA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
GIENIA	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
GIENIA	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
GIENIA	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
GIENIA	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
GIENIA	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
GIENIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
GIENIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
GIENIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
GIENIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
GIENIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
GIENIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
GIENIA	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
GIENIA	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
GIENIA	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
GIENIA	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	

GIENIA	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
GIENIA	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
GIENIA	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
GIENIA	/	New energy battery (EV)	M44	Read ECU Information	
GIENIA	/	New energy battery (EV)	M44	Read codes	
GIENIA	/	New energy battery (EV)	M44	Erase Codes	
GIENIA	/	New energy battery (EV)	M44	Read Freeze Frame Data	
GIENIA	/	New energy battery (EV)	M44	Read Live Data	
GIENIA	/	New energy battery (EV)	M44	Inspection	
GIENIA	/	New energy battery (EV)	M44	Adjustment	
GIENIA	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
GIENIA	/	Electronic vacuum pump (EVPS)	M21	Read codes	
GIENIA	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
GIENIA	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
GIENIA	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
GIENIA	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
GIENIA	/	Electronic vacuum pump (EVPS)	M22	Read codes	
GIENIA	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
GIENIA	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
GIENIA	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
GIENIA	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
GIENIA	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
GIENIA	/	FCW LDW	M4E	Read ECU Information	
GIENIA	/	FCW LDW	M4E	Read codes	
GIENIA	/	FCW LDW	M4E	Erase Codes	
GIENIA	/	FCW LDW	M4E	Read Live Data	
GIENIA	/	FCW LDW	M4E	Function Test	FCW Drive
GIENIA	/	FCW LDW	M4E	Function Test	Left side lane departure warning
GIENIA	/	FCW LDW	M4E	Function Test	Right side lane departure warning
GIENIA	/	FCW LDW	M4E	Function Test	Indicator Drive
GIENIA	/	FCW LDW	M4E	Adjustment	
GIENIA	/	Instrument Display System (GAUGE)	M2C	Read codes	
GIENIA	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
GIENIA	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
GIENIA	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
GIENIA	/	Anti-lock brake control system (ABS)	M01	Read codes	
GIENIA	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
GIENIA	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
GIENIA	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
GIENIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
GIENIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
GIENIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
GIENIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
GIENIA	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
GIENIA	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
GIENIA	/	Anti-lock brake control system (ABS)	M02	Read codes	
GIENIA	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
GIENIA	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
GIENIA	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
GIENIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
GIENIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
GIENIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
GIENIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
GIENIA	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
GIENIA	/	Anti-lock brake control system (ABS)	M03	Read codes	
GIENIA	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
GIENIA	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
GIENIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
GIENIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
GIENIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
GIENIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
GIENIA	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
GIENIA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
GIENIA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
GIENIA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
GIENIA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
GIENIA	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
GIENIA	/	Anti-lock brake control system (ABS)	M19	Read codes	
GIENIA	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
GIENIA	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
GIENIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
GIENIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
GIENIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
GIENIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
GIENIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
GIENIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
GIENIA	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
GIENIA	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode

GIENIA	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
GIENIA	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
GIENIA	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
GIENIA	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
GIENIA	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
GIENIA	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
GIENIA	/	Intelligent Parking Control System (SPS)	M9B	Customize	
GIENIA	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
GIENIA	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
GIENIA	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
GIENIA	/	Hydraulic booster control system (HBS)	M5F	Read codes	
GIENIA	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
GIENIA	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
GIENIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
GIENIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
GIENIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
GIENIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
GIENIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
GIENIA	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
GIENIA	/	IMA	M63	Read ECU Information	
GIENIA	/	IMA	M63	Read codes	
GIENIA	/	IMA	M63	Erase Codes	
GIENIA	/	IMA	M63	Read Freeze Frame Data	
GIENIA	/	IMA	M63	Read Live Data	
GIENIA	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
GIENIA	/	IMA	M63	Adjustment	SOC PRESET
GIENIA	/	IMA	M64	Read ECU Information	
GIENIA	/	IMA	M64	Read codes	
GIENIA	/	IMA	M64	Erase Codes	
GIENIA	/	IMA	M64	Read Freeze Frame Data	
GIENIA	/	IMA	M64	Read Live Data	
GIENIA	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
GIENIA	/	IMA	M64	Adjustment	SOC PRESET
GIENIA	/	IMA	M65	Read ECU Information	
GIENIA	/	IMA	M65	Read codes	
GIENIA	/	IMA	M65	Erase Codes	
GIENIA	/	IMA	M65	Read Freeze Frame Data	
GIENIA	/	IMA	M65	Read Live Data	
GIENIA	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
GIENIA	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
GIENIA	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
GIENIA	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
GIENIA	/	Intake Sounder Control System (ISC)	M6D	Read codes	
GIENIA	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
GIENIA	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
GIENIA	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
GIENIA	/	Night Vision System (INVS)	0XB1	Read ECU Information	
GIENIA	/	Night Vision System (INVS)	0XB1	Read codes	
GIENIA	/	Night Vision System (INVS)	0XB1	Erase Codes	
GIENIA	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
GIENIA	/	Night Vision System (INVS)	0XB1	Read Live Data	
GIENIA	/	Night Vision System (INVS)	0XB1	Adjustment	
GIENIA	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
GIENIA	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
GIENIA	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
GIENIA	/	i-SHIFT	0XB0	Read ECU Information	
GIENIA	/	i-SHIFT	0XB0	Read codes	
GIENIA	/	i-SHIFT	0XB0	Erase Codes	
GIENIA	/	i-SHIFT	0XB0	Read Live Data	
GIENIA	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
GIENIA	/	Keyless Entry Control System (KAS)	M99	Read codes	
GIENIA	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
GIENIA	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
GIENIA	/	Keyless Entry Control System (KAS)	M99	Self Check	
GIENIA	/	Keyless Entry Control System (KAS)	M99	History Data	
GIENIA	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving

GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
GIENIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
GIENIA	/	Keyless Entry Control System (KAS)	M99	Registration	
GIENIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
GIENIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
GIENIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
GIENIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
GIENIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
GIENIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
GIENIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
GIENIA	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
GIENIA	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
GIENIA	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
GIENIA	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
GIENIA	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
GIENIA	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
GIENIA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
GIENIA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
GIENIA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
GIENIA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
GIENIA	/	Management ECU Module (ME)	M74	Read ECU Information	
GIENIA	/	Management ECU Module (ME)	M74	Read codes	
GIENIA	/	Management ECU Module (ME)	M74	Erase Codes	
GIENIA	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
GIENIA	/	Management ECU Module (ME)	M74	Read Live Data	
GIENIA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
GIENIA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
GIENIA	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
GIENIA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
GIENIA	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
GIENIA	/	Multi-view camera system (MVCS)	M7A	Read codes	
GIENIA	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
GIENIA	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
GIENIA	/	Multi-view camera system (MVCS)	M7A	Customization	
GIENIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
GIENIA	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
GIENIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
GIENIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
GIENIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
GIENIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
GIENIA	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
GIENIA	/	Power Control Unit (PCU)	M83	Read ECU Information	
GIENIA	/	Power Control Unit (PCU)	M83	Read codes	
GIENIA	/	Power Control Unit (PCU)	M83	Erase Codes	
GIENIA	/	Power Control Unit (PCU)	M83	Read Live Data	
GIENIA	/	Power Control Unit (PCU)	M83	Self Check	
GIENIA	/	Power Control Unit (PCU)	M83	History Data	
GIENIA	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
GIENIA	/	Engine Control System (PGM-FI)	M23	Read codes	
GIENIA	/	Engine Control System (PGM-FI)	M23	Erase Codes	
GIENIA	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
GIENIA	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
GIENIA	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
GIENIA	/	Engine Control System (PGM-FI)	M23	Read Live Data	
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
GIENIA	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK

GIENIA	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
GIENIA	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
GIENIA	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
GIENIA	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
GIENIA	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
GIENIA	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
GIENIA	/	Engine Control System (PGM-FI)	M50	Read codes	
GIENIA	/	Engine Control System (PGM-FI)	M50	Erase Codes	
GIENIA	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
GIENIA	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
GIENIA	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
GIENIA	/	Engine Control System (PGM-FI)	M50	Read Live Data	
GIENIA	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
GIENIA	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
GIENIA	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
GIENIA	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
GIENIA	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
GIENIA	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
GIENIA	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
GIENIA	/	Engine Control System (PGM-FI)	M86	Read codes	
GIENIA	/	Engine Control System (PGM-FI)	M86	Erase Codes	
GIENIA	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
GIENIA	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
GIENIA	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
GIENIA	/	Engine Control System (PGM-FI)	M86	Read Live Data	
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
GIENIA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
GIENIA	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
GIENIA	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
GIENIA	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
GIENIA	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
GIENIA	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
GIENIA	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
GIENIA	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
GIENIA	/	PSR	M27	Read ECU Information	
GIENIA	/	PSR	M27	Read codes	
GIENIA	/	PSR	M27	Erase Codes	
GIENIA	/	PSR	M27	Read Live Data	
GIENIA	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
GIENIA	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
GIENIA	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
GIENIA	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
GIENIA	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
GIENIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
GIENIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
GIENIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
GIENIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
GIENIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
GIENIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
GIENIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
GIENIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
GIENIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
GIENIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
GIENIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
GIENIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
GIENIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
GIENIA	/	Remote starter (RS)	M90	System Check	
GIENIA	/	Remote starter (RS)	M90	HISTORY	
GIENIA	/	Remote starter (RS)	M90	Registration	
GIENIA	/	Seat load cell (SWS)	M6F	Read ECU Information	
GIENIA	/	Seat load cell (SWS)	M6F	Read codes	
GIENIA	/	Seat load cell (SWS)	M6F	Erase Codes	
GIENIA	/	Seat load cell (SWS)	M6F	Read Live Data	
GIENIA	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
GIENIA	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
GIENIA	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
GIENIA	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
GIENIA	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
GIENIA	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
GIENIA	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
GIENIA	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	

GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
GIENIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
GIENIA	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
GIENIA	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
GIENIA	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
GIENIA	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
GIENIA	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
GIENIA	/	Groove track drive unit (SLOT ECU)	M98	History Data	
GIENIA	/	Groove track drive unit (SLOT ECU)	M98	System Information	
GIENIA	/	Airbag Control System (SRS)	M9F	Read ECU Information	
GIENIA	/	Airbag Control System (SRS)	M9F	Read codes	
GIENIA	/	Airbag Control System (SRS)	M9F	Erase Codes	
GIENIA	/	Airbag Control System (SRS)	M9F	Read Live Data	
GIENIA	/	Airbag Control System (SRS)	MA0	Read ECU Information	
GIENIA	/	Airbag Control System (SRS)	MA0	Read codes	
GIENIA	/	Airbag Control System (SRS)	MA0	Erase Codes	
GIENIA	/	Airbag Control System (SRS)	MA0	Read Live Data	
GIENIA	/	Airbag Control System (SRS)	MA1	Read ECU Information	
GIENIA	/	Airbag Control System (SRS)	MA1	Read codes	
GIENIA	/	Airbag Control System (SRS)	MA1	Erase Codes	
GIENIA	/	Airbag Control System (SRS)	MA1	Read Live Data	
GIENIA	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
GIENIA	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
GIENIA	/	Airbag Control System (SRS)	M2A	Read codes	
GIENIA	/	Airbag Control System (SRS)	M2A	Erase Codes	
GIENIA	/	Airbag Control System (SRS)	M2A	Read Live Data	
GIENIA	/	Airbag Control System (SRS)	M9C	Read ECU Information	
GIENIA	/	Airbag Control System (SRS)	M9C	Read codes	
GIENIA	/	Airbag Control System (SRS)	M9C	Erase Codes	
GIENIA	/	Airbag Control System (SRS)	M9C	Read Live Data	
GIENIA	/	Airbag Control System (SRS)	M9D	Read ECU Information	
GIENIA	/	Airbag Control System (SRS)	M9D	Read codes	
GIENIA	/	Airbag Control System (SRS)	M9D	Erase Codes	
GIENIA	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
GIENIA	/	Airbag Control System (SRS)	M9D	Read Live Data	
GIENIA	/	Airbag Control System (SRS)	M9D	Parameter Information	
GIENIA	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
GIENIA	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
GIENIA	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
GIENIA	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
GIENIA	/	Airbag Control System (SRS)	M9D	Function Test	
GIENIA	/	Airbag Control System (SRS)	M9D	System Information	
GIENIA	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
GIENIA	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
GIENIA	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
GIENIA	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
GIENIA	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
GIENIA	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
GIENIA	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
GIENIA	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
GIENIA	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
GIENIA	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
GIENIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
GIENIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
GIENIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
GIENIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
GIENIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
GIENIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
GIENIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
GIENIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
GIENIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
GRACE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	

GRACE	/	Four-wheel steering control system (4WS)	M52	Read codes	
GRACE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
GRACE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
GRACE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
GRACE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
GRACE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
GRACE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
GRACE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
GRACE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
GRACE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
GRACE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
GRACE	/	Automatic shift control system (A/T)	M1E	Read codes	
GRACE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
GRACE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
GRACE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
GRACE	/	Automatic shift control system (A/T)	M1E	ECMPCMC Reset	
GRACE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
GRACE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
GRACE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
GRACE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
GRACE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
GRACE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
GRACE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
GRACE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
GRACE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
GRACE	/	Automatic shift control system (A/T)	M3B	Read codes	
GRACE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
GRACE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
GRACE	/	Automatic shift control system (A/T)	M3B	ECMPCMC Reset	
GRACE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
GRACE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
GRACE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
GRACE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
GRACE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
GRACE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
GRACE	/	Automatic shift control system (A/T)	M3C	Read codes	
GRACE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
GRACE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
GRACE	/	Automatic shift control system (A/T)	M81	Read codes	
GRACE	/	Automatic shift control system (A/T)	M81	Erase Codes	
GRACE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
GRACE	/	Automatic shift control system (A/T)	M81	ECMPCMC Reset	
GRACE	/	Automatic shift control system (A/T)	M81	Read Live Data	
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
GRACE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
GRACE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
GRACE	/	Automatic shift control system (A/T)	M82	Read codes	
GRACE	/	Automatic shift control system (A/T)	M82	Erase Codes	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
GRACE	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
GRACE	/	Active Engine Control Support System (ACM)	M06	Read codes	
GRACE	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
GRACE	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
GRACE	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
GRACE	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
GRACE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
GRACE	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
GRACE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
GRACE	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
GRACE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
GRACE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
GRACE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	

GRACE	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
GRACE	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
GRACE	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
GRACE	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
GRACE	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
GRACE	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
GRACE	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
GRACE	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
GRACE	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
GRACE	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
GRACE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
GRACE	/	Transmission Control System (AT) M18		Read ECU Information	
GRACE	/	Transmission Control System (AT) M18		Read codes	
GRACE	/	Transmission Control System (AT) M18		Erase Codes	
GRACE	/	Transmission Control System (AT) M18		Read Freeze Frame Data	
GRACE	/	Transmission Control System (AT) M18		Read Live Data	
GRACE	/	Transmission Control System (AT) M18		Adjustment	
GRACE	/	Active Torque Converter Control System (ATTS) MOE		Read ECU Information	
GRACE	/	Active Torque Converter Control System (ATTS) MOE		Read codes	
GRACE	/	Active Torque Converter Control System (ATTS) MOE		Erase Codes	
GRACE	/	Active Torque Converter Control System (ATTS) MOE		Read Freeze Frame Data	
GRACE	/	Active Torque Converter Control System (ATTS) MOE		Read Live Data	
GRACE	/	Active Torque Converter Control System (ATTS) MOE		Miscellaneous Test	ATTS TEST SHORT TIME MODE
GRACE	/	Active Torque Converter Control System (ATTS) MOE		Miscellaneous Test	STEERING ANGLE
GRACE	/	Active Torque Converter Control System (ATTS) MOE		Miscellaneous Test	LATERAL G & YAW RATE SENSORS
GRACE	/	Active Torque Converter Control System (ATTS) MOE		Miscellaneous Test	ALL SENSORS
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Read ECU Information	
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Read codes	
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Erase Codes	
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Read Live Data	
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	BSI Left Side Alert Indicator ON
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	Flash BSI Left Side Alert Indicator
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	BSI Right Side Alert Indicator ON
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	Flash BSI Right Side Alert Indicator
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	BSI Indicator ON
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	Right Side 'Blind Spot Not Available' Message
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	Left Side 'Blind Spot Not Available' Message
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	BSI Indicator OFF
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	Check Blind Spot System Message
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	BSI Buzzer
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	Select year
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		Function Test	
GRACE	/	Driving Visual Blind Spot Information System (BSI) M14		History Clear	
GRACE	/	BODY ELECTRICAL/Active Cornering Light MFF		Read codes	
GRACE	/	BODY ELECTRICAL/Active Cornering Light MFF		Erase Codes	
GRACE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF		Read codes	
GRACE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF		Erase Codes	
GRACE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF		Read Live Data	
GRACE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF		Function Test	Adaptive Front Lighting
GRACE	/	BODY ELECTRICAL/Auto A/C Sub display MFF		Read codes	
GRACE	/	BODY ELECTRICAL/Auto A/C Sub display MFF		Erase Codes	
GRACE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Read codes	
GRACE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Erase Codes	
GRACE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Read Live Data	
GRACE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Function Test	Oncoming Vehicle Detection
GRACE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Function Test	Preceding Vehicle Detection
GRACE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Auto High-Beam (High-Beam Support System) Operation
GRACE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
GRACE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Reset Operation
GRACE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Returning Operation
GRACE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Automatic Returning Distance
GRACE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Manual Returning Time
GRACE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Reset to default
GRACE	/	BODY ELECTRICAL/Auto Light Leveling MFF		Read codes	
GRACE	/	BODY ELECTRICAL/Auto Light Leveling MFF		Erase Codes	
GRACE	/	BODY ELECTRICAL/Auto Light Leveling MFF		Read Live Data	
GRACE	/	BODY ELECTRICAL/Auto Light Leveling MFF		Function Test	Auto Leveling Adjust Motor
GRACE	/	BODY ELECTRICAL/Auto Light Leveling MFF		Adjustment	Sensor Initial Position Learning
GRACE	/	BODY ELECTRICAL/Door Locks MFF		Read codes	
GRACE	/	BODY ELECTRICAL/Door Locks MFF		Erase Codes	
GRACE	/	BODY ELECTRICAL/Door Locks MFF		Read Live Data	
GRACE	/	BODY ELECTRICAL/Door Locks MFF		Function Test	Lock All Doors
GRACE	/	BODY ELECTRICAL/Door Locks MFF		Function Test	Unlock Driver's Side Door
GRACE	/	BODY ELECTRICAL/Door Locks MFF		Function Test	Unlock All Doors
GRACE	/	BODY ELECTRICAL/Door Locks MFF		Function Test	Fuel Fill Door Open
GRACE	/	BODY ELECTRICAL/Door Locks MFF		Function Test	Left Power Sliding Door
GRACE	/	BODY ELECTRICAL/Door Locks MFF		Function Test	Right Power Sliding Door
GRACE	/	BODY ELECTRICAL/e-Call MFF		Read codes	
GRACE	/	BODY ELECTRICAL/e-Call MFF		Erase Codes	
GRACE	/	BODY ELECTRICAL/e-Call MFF		Read Live Data	
GRACE	/	BODY ELECTRICAL/e-Call MFF		Activation and Display E-Call unit data	
GRACE	/	BODY ELECTRICAL/Front Panel MFF		Read codes	
GRACE	/	BODY ELECTRICAL/Front Panel MFF		Erase Codes	



GRACE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
GRACE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
GRACE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
GRACE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
GRACE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
GRACE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
GRACE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
GRACE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
GRACE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
GRACE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
GRACE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
GRACE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
GRACE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
GRACE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
GRACE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
GRACE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	

GRACE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
GRACE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
GRACE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
GRACE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
GRACE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
GRACE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
GRACE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Security	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
GRACE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
GRACE	/	BODY ELECTRICAL/Security	MFF	History Data	
GRACE	/	BODY ELECTRICAL/Security	MFF	History Clear	
GRACE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
GRACE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
GRACE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
GRACE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
GRACE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
GRACE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
GRACE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
GRACE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
GRACE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
GRACE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
GRACE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
GRACE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
GRACE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
GRACE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
GRACE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
GRACE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
GRACE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
GRACE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
GRACE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
GRACE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
GRACE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
GRACE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
GRACE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
GRACE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
GRACE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
GRACE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
GRACE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
GRACE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
GRACE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
GRACE	/	Collision Mitigation Brake Control System (CMBS/CM: M2E)		Read ECU Information	
GRACE	/	Collision Mitigation Brake Control System (CMBS/CM: M2E)		Read codes	
GRACE	/	Collision Mitigation Brake Control System (CMBS/CM: M2E)		Erase Codes	

GRACE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E	Read Freeze Frame Data	
GRACE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E	Read Live Data	
GRACE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E	CMBS (CMS) ACTIVATION HISTORY	
GRACE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E	Miscellaneous Test	RADAR AIMING
GRACE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E	Miscellaneous Test	CMBS Brake
GRACE	/	Promise Automatic Transmission Control System (CVT M1B	Read ECU Information	
GRACE	/	Promise Automatic Transmission Control System (CVT M1B	Read codes	
GRACE	/	Promise Automatic Transmission Control System (CVT M1B	Erase Codes	
GRACE	/	Promise Automatic Transmission Control System (CVT M1B	Read Freeze Frame Data	
GRACE	/	Promise Automatic Transmission Control System (CVT M1B	Read Live Data	
GRACE	/	Promise Automatic Transmission Control System (CVT M1B	ECMPCMC Reset	
GRACE	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Lock Solenoid Test
GRACE	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Solenoid Tests
GRACE	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Electrical Oil Pump Activation
GRACE	/	Promise Automatic Transmission Control System (CVT M33	Read ECU Information	
GRACE	/	Promise Automatic Transmission Control System (CVT M33	Read codes	
GRACE	/	Promise Automatic Transmission Control System (CVT M33	Erase Codes	
GRACE	/	Promise Automatic Transmission Control System (CVT M33	Read Freeze Frame Data	
GRACE	/	Promise Automatic Transmission Control System (CVT M33	Read Live Data	
GRACE	/	Promise Automatic Transmission Control System (CVT M33	ECMPCMC Reset	
GRACE	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
GRACE	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
GRACE	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
GRACE	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	Read codes	
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	ECMPCMC Reset	
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
GRACE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
GRACE	/	DBW	Read ECU Information	
GRACE	/	DBW	Read codes	
GRACE	/	DBW	Erase Codes	
GRACE	/	DBW	Read Freeze Frame Data	
GRACE	/	DBW	Read Live Data	
GRACE	/	DBW	Inspection	Idle Speed Adjust
GRACE	/	DBW	Inspection	Throttle Test
GRACE	/	DBW	ECM Reset	
GRACE	/	Diesel Engine Control System (DIESEL)	Read ECU Information	
GRACE	/	Diesel Engine Control System (DIESEL)	Read codes	
GRACE	/	Diesel Engine Control System (DIESEL)	Erase Codes	
GRACE	/	Diesel Engine Control System (DIESEL)	Read Freeze Frame Data	
GRACE	/	Diesel Engine Control System (DIESEL)	ECM/PCM Reset	
GRACE	/	Diesel Engine Control System (DIESEL)	Read Live Data	
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	Injector Test
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	All Injectors Off
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	EGR TEST
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	IMRC Test
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	Glow On/Off
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	ACG On/Off
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	A/C Clutch On/Off
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	Fuel Heater On/ Off
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	Radiator Fan Relay Test
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	EGR Cooler Bypass Valve Test
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	Intake Shutter Test
GRACE	/	Diesel Engine Control System (DIESEL)	Adjustment	IQA Data Status
GRACE	/	Diesel Engine Control System (DIESEL)	Adjustment	IQA Write Data
GRACE	/	Diesel Engine Control System (DIESEL)	Adjustment	DPF Regeneration
GRACE	/	Diesel Engine Control System (DIESEL)	Adjustment	DPF Differential Pressure Sensor Initial Learn
GRACE	/	Diesel Engine Control System (DIESEL)	Adjustment	Reset 'Calculated PM Value'
GRACE	/	Diesel Engine Control System (DIESEL)	Adjustment	MAF Sensor Learning Clear
GRACE	/	Diesel Engine Control System (DIESEL)	Adjustment	A/F Sensor Learning Clear
GRACE	/	Diesel Engine Control System (DIESEL)	Adjustment	ISV Forced Learning
GRACE	/	Diesel Engine Control System (DIESEL)	VIN CHECK	
GRACE	/	Diesel Engine Control System (DIESEL)	Replace ECM/PCM	
GRACE	/	Diesel Engine Control System (DIESEL)	Read ECU Information	
GRACE	/	Diesel Engine Control System (DIESEL)	Read codes	
GRACE	/	Diesel Engine Control System (DIESEL)	Erase Codes	
GRACE	/	Diesel Engine Control System (DIESEL)	Read Freeze Frame Data	
GRACE	/	Diesel Engine Control System (DIESEL)	ECM/PCM Reset	
GRACE	/	Diesel Engine Control System (DIESEL)	Read Live Data	
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	Injector Test
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	Compression Test
GRACE	/	Diesel Engine Control System (DIESEL)	VIN CHECK	
GRACE	/	Diesel Engine Control System (DIESEL)	Read ECU Information	
GRACE	/	Diesel Engine Control System (DIESEL)	Read codes	
GRACE	/	Diesel Engine Control System (DIESEL)	Erase Codes	
GRACE	/	Diesel Engine Control System (DIESEL)	Read Freeze Frame Data	
GRACE	/	Diesel Engine Control System (DIESEL)	ECM/PCM Reset	
GRACE	/	Diesel Engine Control System (DIESEL)	Read Live Data	
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	All Injectors Off
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	Fuel Rail Pressure Control Valve Test
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	Glow On/Off
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	ACG On/Off
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	A/C Clutch On/Off
GRACE	/	Diesel Engine Control System (DIESEL)	Inspection	Fuel Heater On/ Off

GRACE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
GRACE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
GRACE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
GRACE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
GRACE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
GRACE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
GRACE	/	Capacitor Control System (EDLC)	M12	Read codes	
GRACE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
GRACE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
GRACE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
GRACE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
GRACE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
GRACE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
GRACE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
GRACE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
GRACE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
GRACE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
GRACE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
GRACE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
GRACE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
GRACE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
GRACE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
GRACE	/	Electric Powertrain / IMA	M66	Read ECU Information	
GRACE	/	Electric Powertrain / IMA	M66	Read codes	
GRACE	/	Electric Powertrain / IMA	M66	Erase Codes	
GRACE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
GRACE	/	Electric Powertrain / IMA	M66	Read Live Data	
GRACE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
GRACE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
GRACE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
GRACE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
GRACE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
GRACE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
GRACE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
GRACE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
GRACE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
GRACE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
GRACE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
GRACE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
GRACE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
GRACE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
GRACE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
GRACE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
GRACE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
GRACE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
GRACE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
GRACE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
GRACE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
GRACE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
GRACE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
GRACE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
GRACE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
GRACE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
GRACE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
GRACE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
GRACE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
GRACE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
GRACE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
GRACE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
GRACE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
GRACE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
GRACE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
GRACE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
GRACE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
GRACE	/	New energy battery (EV)	M44	Read ECU Information	
GRACE	/	New energy battery (EV)	M44	Read codes	
GRACE	/	New energy battery (EV)	M44	Erase Codes	
GRACE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
GRACE	/	New energy battery (EV)	M44	Read Live Data	
GRACE	/	New energy battery (EV)	M44	Inspection	
GRACE	/	New energy battery (EV)	M44	Adjustment	
GRACE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
GRACE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
GRACE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
GRACE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
GRACE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
GRACE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
GRACE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
GRACE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
GRACE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
GRACE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
GRACE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
GRACE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
GRACE	/	FCW LDW	M4E	Read ECU Information	
GRACE	/	FCW LDW	M4E	Read codes	
GRACE	/	FCW LDW	M4E	Erase Codes	
GRACE	/	FCW LDW	M4E	Read Live Data	
GRACE	/	FCW LDW	M4E	Function Test	FCW Drive
GRACE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
GRACE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
GRACE	/	FCW LDW	M4E	Function Test	Indicator Drive
GRACE	/	FCW LDW	M4E	Adjustment	
GRACE	/	Instrument Display System (GAUGE)	M2C	Read codes	

GRACE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
GRACE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
GRACE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
GRACE	/	Anti-lock brake control system (ABS)	M01	Read codes	
GRACE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
GRACE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
GRACE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
GRACE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
GRACE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
GRACE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
GRACE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
GRACE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
GRACE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
GRACE	/	Anti-lock brake control system (ABS)	M02	Read codes	
GRACE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
GRACE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
GRACE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
GRACE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
GRACE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
GRACE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
GRACE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
GRACE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
GRACE	/	Anti-lock brake control system (ABS)	M03	Read codes	
GRACE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
GRACE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
GRACE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
GRACE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
GRACE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
GRACE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
GRACE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
GRACE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
GRACE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
GRACE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
GRACE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
GRACE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
GRACE	/	Anti-lock brake control system (ABS)	M19	Read codes	
GRACE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
GRACE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
GRACE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
GRACE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
GRACE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
GRACE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
GRACE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
GRACE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
GRACE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
GRACE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
GRACE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
GRACE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
GRACE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
GRACE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
GRACE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
GRACE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
GRACE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
GRACE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
GRACE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
GRACE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
GRACE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
GRACE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
GRACE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
GRACE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
GRACE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
GRACE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
GRACE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
GRACE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
GRACE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
GRACE	/	IMA	M63	Read ECU Information	
GRACE	/	IMA	M63	Read codes	
GRACE	/	IMA	M63	Erase Codes	
GRACE	/	IMA	M63	Read Freeze Frame Data	
GRACE	/	IMA	M63	Read Live Data	
GRACE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
GRACE	/	IMA	M63	Adjustment	SOC PRESET
GRACE	/	IMA	M64	Read ECU Information	
GRACE	/	IMA	M64	Read codes	
GRACE	/	IMA	M64	Erase Codes	
GRACE	/	IMA	M64	Read Freeze Frame Data	
GRACE	/	IMA	M64	Read Live Data	
GRACE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE

GRACE	/	IMA	M64	Adjustment	SOC PRESET
GRACE	/	IMA	M65	Read ECU Information	
GRACE	/	IMA	M65	Read codes	
GRACE	/	IMA	M65	Erase Codes	
GRACE	/	IMA	M65	Read Freeze Frame Data	
GRACE	/	IMA	M65	Read Live Data	
GRACE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
GRACE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
GRACE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
GRACE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
GRACE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
GRACE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
GRACE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
GRACE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
GRACE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
GRACE	/	Night Vision System (INVS)	0XB1	Read codes	
GRACE	/	Night Vision System (INVS)	0XB1	Erase Codes	
GRACE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
GRACE	/	Night Vision System (INVS)	0XB1	Read Live Data	
GRACE	/	Night Vision System (INVS)	0XB1	Adjustment	
GRACE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
GRACE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
GRACE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
GRACE	/	i-SHIFT	0XB0	Read ECU Information	
GRACE	/	i-SHIFT	0XB0	Read codes	
GRACE	/	i-SHIFT	0XB0	Erase Codes	
GRACE	/	i-SHIFT	0XB0	Read Live Data	
GRACE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
GRACE	/	Keyless Entry Control System (KAS)	M99	Read codes	
GRACE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
GRACE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
GRACE	/	Keyless Entry Control System (KAS)	M99	Self Check	
GRACE	/	Keyless Entry Control System (KAS)	M99	History Data	
GRACE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
GRACE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
GRACE	/	Keyless Entry Control System (KAS)	M99	Registration	
GRACE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
GRACE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
GRACE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
GRACE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
GRACE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
GRACE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
GRACE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
GRACE	/	Electronically assisted lane keeping control system (Lk	M71	Read ECU Information	

GRACE	/	Electronically assisted lane keeping control system (Lk M71	Read codes	
GRACE	/	Electronically assisted lane keeping control system (Lk M71	Erase Codes	
GRACE	/	Electronically assisted lane keeping control system (Lk M71	Read Freeze Frame Data	
GRACE	/	Electronically assisted lane keeping control system (Lk M71	Read Live Data	
GRACE	/	Electronically assisted lane keeping control system (Lk M71	Adjustment	STEERING REWRITE
GRACE	/	Electronically assisted lane keeping control system (Lk M71	Customize	LDW OFFSET
GRACE	/	Electronically assisted lane keeping control system (Lk M71	Customize	GAIN ADJUST
GRACE	/	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
GRACE	/	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
GRACE	/	Management ECU Module (ME) M74	Read ECU Information	
GRACE	/	Management ECU Module (ME) M74	Read codes	
GRACE	/	Management ECU Module (ME) M74	Erase Codes	
GRACE	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
GRACE	/	Management ECU Module (ME) M74	Read Live Data	
GRACE	/	Multi-view camera and parking assist system (MVC/P, M26	Read ECU Information	
GRACE	/	Multi-view camera and parking assist system (MVC/P, M26	Read codes	
GRACE	/	Multi-view camera and parking assist system (MVC/P, M26	Erase Codes	
GRACE	/	Multi-view camera and parking assist system (MVC/P, M26	Read Live Data	
GRACE	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
GRACE	/	Multi-view camera system (MVCS) M7A	Read codes	
GRACE	/	Multi-view camera system (MVCS) M7A	Erase Codes	
GRACE	/	Multi-view camera system (MVCS) M7A	Read Live Data	
GRACE	/	Multi-view camera system (MVCS) M7A	Customization	
GRACE	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
GRACE	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
GRACE	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
GRACE	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
GRACE	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
GRACE	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
GRACE	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
GRACE	/	Power Control Unit (PCU) M83	Read ECU Information	
GRACE	/	Power Control Unit (PCU) M83	Read codes	
GRACE	/	Power Control Unit (PCU) M83	Erase Codes	
GRACE	/	Power Control Unit (PCU) M83	Read Live Data	
GRACE	/	Power Control Unit (PCU) M83	Self Check	
GRACE	/	Power Control Unit (PCU) M83	History Data	
GRACE	/	Engine Control System (PGM-FI) M23	Read ECU Information	
GRACE	/	Engine Control System (PGM-FI) M23	Read codes	
GRACE	/	Engine Control System (PGM-FI) M23	Erase Codes	
GRACE	/	Engine Control System (PGM-FI) M23	Readiness Codes	
GRACE	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
GRACE	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
GRACE	/	Engine Control System (PGM-FI) M23	Read Live Data	
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
GRACE	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
GRACE	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
GRACE	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
GRACE	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
GRACE	/	Engine Control System (PGM-FI) M23	VIN CHECK	
GRACE	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
GRACE	/	Engine Control System (PGM-FI) M50	Read ECU Information	
GRACE	/	Engine Control System (PGM-FI) M50	Read codes	
GRACE	/	Engine Control System (PGM-FI) M50	Erase Codes	
GRACE	/	Engine Control System (PGM-FI) M50	Readiness Codes	
GRACE	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
GRACE	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
GRACE	/	Engine Control System (PGM-FI) M50	Read Live Data	
GRACE	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
GRACE	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
GRACE	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
GRACE	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
GRACE	/	Engine Control System (PGM-FI) M50	VIN CHECK	
GRACE	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
GRACE	/	Engine Control System (PGM-FI) M86	Read ECU Information	
GRACE	/	Engine Control System (PGM-FI) M86	Read codes	
GRACE	/	Engine Control System (PGM-FI) M86	Erase Codes	
GRACE	/	Engine Control System (PGM-FI) M86	Readiness Codes	
GRACE	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
GRACE	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
GRACE	/	Engine Control System (PGM-FI) M86	Read Live Data	
GRACE	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
GRACE	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
GRACE	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
GRACE	/	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
GRACE	/	Engine Control System (PGM-FI) M86	Inspection	EGR TEST
GRACE	/	Engine Control System (PGM-FI) M86	Inspection	VTEC TEST
GRACE	/	Engine Control System (PGM-FI) M86	Inspection	IACV TEST

GRACE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
GRACE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
GRACE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
GRACE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
GRACE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
GRACE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
GRACE	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
GRACE	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
GRACE	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
GRACE	/	PSR	M27	Read ECU Information	
GRACE	/	PSR	M27	Read codes	
GRACE	/	PSR	M27	Erase Codes	
GRACE	/	PSR	M27	Read Live Data	
GRACE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
GRACE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
GRACE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
GRACE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
GRACE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
GRACE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
GRACE	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
GRACE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
GRACE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
GRACE	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
GRACE	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
GRACE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
GRACE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
GRACE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
GRACE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
GRACE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
GRACE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
GRACE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
GRACE	/	Remote starter (RS)	M90	System Check	
GRACE	/	Remote starter (RS)	M90	HISTORY	
GRACE	/	Remote starter (RS)	M90	Registration	
GRACE	/	Seat load cell (SWS)	M6F	Read ECU Information	
GRACE	/	Seat load cell (SWS)	M6F	Read codes	
GRACE	/	Seat load cell (SWS)	M6F	Erase Codes	
GRACE	/	Seat load cell (SWS)	M6F	Read Live Data	
GRACE	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
GRACE	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
GRACE	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
GRACE	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
GRACE	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
GRACE	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
GRACE	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
GRACE	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
GRACE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
GRACE	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
GRACE	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
GRACE	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
GRACE	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
GRACE	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
GRACE	/	Groove track drive unit (SLOT ECU)	M98	History Data	
GRACE	/	Groove track drive unit (SLOT ECU)	M98	System Information	
GRACE	/	Airbag Control System (SRS)	M9F	Read ECU Information	
GRACE	/	Airbag Control System (SRS)	M9F	Read codes	
GRACE	/	Airbag Control System (SRS)	M9F	Erase Codes	
GRACE	/	Airbag Control System (SRS)	M9F	Read Live Data	



GRACE	/	Airbag Control System (SRS)	MA0	Read ECU Information	
GRACE	/	Airbag Control System (SRS)	MA0	Read codes	
GRACE	/	Airbag Control System (SRS)	MA0	Erase Codes	
GRACE	/	Airbag Control System (SRS)	MA0	Read Live Data	
GRACE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
GRACE	/	Airbag Control System (SRS)	MA1	Read codes	
GRACE	/	Airbag Control System (SRS)	MA1	Erase Codes	
GRACE	/	Airbag Control System (SRS)	MA1	Read Live Data	
GRACE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
GRACE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
GRACE	/	Airbag Control System (SRS)	M2A	Read codes	
GRACE	/	Airbag Control System (SRS)	M2A	Erase Codes	
GRACE	/	Airbag Control System (SRS)	M2A	Read Live Data	
GRACE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
GRACE	/	Airbag Control System (SRS)	M9C	Read codes	
GRACE	/	Airbag Control System (SRS)	M9C	Erase Codes	
GRACE	/	Airbag Control System (SRS)	M9C	Read Live Data	
GRACE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
GRACE	/	Airbag Control System (SRS)	M9D	Read codes	
GRACE	/	Airbag Control System (SRS)	M9D	Erase Codes	
GRACE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
GRACE	/	Airbag Control System (SRS)	M9D	Read Live Data	
GRACE	/	Airbag Control System (SRS)	M9D	Parameter Information	
GRACE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
GRACE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
GRACE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
GRACE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pre-tensioner For CMBS (CMS)
GRACE	/	Airbag Control System (SRS)	M9D	Function Test	
GRACE	/	Airbag Control System (SRS)	M9D	System Information	
GRACE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
GRACE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
GRACE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
GRACE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
GRACE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
GRACE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
GRACE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
GRACE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
GRACE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
GRACE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
GRACE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
GRACE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
GRACE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
GRACE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
GRACE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
GRACE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
GRACE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
GRACE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
GRACE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
GREIZ	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
GREIZ	/	Four-wheel steering control system (4WS)	M52	Read codes	
GREIZ	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
GREIZ	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
GREIZ	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
GREIZ	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
GREIZ	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
GREIZ	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
GREIZ	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
GREIZ	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
GREIZ	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
GREIZ	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
GREIZ	/	Automatic shift control system (A/T)	M1E	Read codes	
GREIZ	/	Automatic shift control system (A/T)	M1E	Erase Codes	
GREIZ	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
GREIZ	/	Automatic shift control system (A/T)	M1E	Read Live Data	
GREIZ	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
GREIZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
GREIZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
GREIZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
GREIZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
GREIZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
GREIZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
GREIZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
GREIZ	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
GREIZ	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
GREIZ	/	Automatic shift control system (A/T)	M3B	Read codes	
GREIZ	/	Automatic shift control system (A/T)	M3B	Erase Codes	
GREIZ	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
GREIZ	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
GREIZ	/	Automatic shift control system (A/T)	M3B	Read Live Data	
GREIZ	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
GREIZ	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A

GREIZ	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
GREIZ	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
GREIZ	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
GREIZ	/	Automatic shift control system (A/T)	M3C	Read codes	
GREIZ	/	Automatic shift control system (A/T)	M3C	Erase Codes	
GREIZ	/	Automatic shift control system (A/T)	M81	Read ECU Information	
GREIZ	/	Automatic shift control system (A/T)	M81	Read codes	
GREIZ	/	Automatic shift control system (A/T)	M81	Erase Codes	
GREIZ	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
GREIZ	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
GREIZ	/	Automatic shift control system (A/T)	M81	Read Live Data	
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
GREIZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
GREIZ	/	Automatic shift control system (A/T)	M82	Read ECU Information	
GREIZ	/	Automatic shift control system (A/T)	M82	Read codes	
GREIZ	/	Automatic shift control system (A/T)	M82	Erase Codes	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
GREIZ	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
GREIZ	/	Active Engine Control Support System (ACM)	M06	Read codes	
GREIZ	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
GREIZ	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
GREIZ	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
GREIZ	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
GREIZ	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
GREIZ	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
GREIZ	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
GREIZ	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
GREIZ	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
GREIZ	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
GREIZ	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
GREIZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read ECU Information	
GREIZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read codes	
GREIZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Erase Codes	
GREIZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Freeze Frame Data	
GREIZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Live Data	
GREIZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Function Test	Damper Force Operation Test
GREIZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Adjustment	Damper Stroke Calibration
GREIZ	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
GREIZ	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
GREIZ	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
GREIZ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
GREIZ	/	Transmission Control System (AT)	M18	Read ECU Information	
GREIZ	/	Transmission Control System (AT)	M18	Read codes	
GREIZ	/	Transmission Control System (AT)	M18	Erase Codes	
GREIZ	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
GREIZ	/	Transmission Control System (AT)	M18	Read Live Data	
GREIZ	/	Transmission Control System (AT)	M18	Adjustment	
GREIZ	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
GREIZ	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
GREIZ	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
GREIZ	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
GREIZ	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	

GREIZ	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
GREIZ	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
GREIZ	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
GREIZ	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
GREIZ	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
GREIZ	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
GREIZ	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
GREIZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
GREIZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
GREIZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
GREIZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
GREIZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
GREIZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
GREIZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
GREIZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
GREIZ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
GREIZ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
GREIZ	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
GREIZ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
GREIZ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
GREIZ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
GREIZ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
GREIZ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
GREIZ	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
GREIZ	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
GREIZ	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)

GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
GREIZ	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
GREIZ	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
GREIZ	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
GREIZ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
GREIZ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
GREIZ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
GREIZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
GREIZ	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
GREIZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
GREIZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
GREIZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
GREIZ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
GREIZ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
GREIZ	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
GREIZ	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
GREIZ	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
GREIZ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
GREIZ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
GREIZ	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
GREIZ	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Security	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command

GREIZ	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
GREIZ	/	BODY ELECTRICAL/Security	MFF	History Data	
GREIZ	/	BODY ELECTRICAL/Security	MFF	History Clear	
GREIZ	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
GREIZ	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
GREIZ	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
GREIZ	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
GREIZ	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
GREIZ	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
GREIZ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
GREIZ	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
GREIZ	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
GREIZ	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
GREIZ	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
GREIZ	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
GREIZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
GREIZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
GREIZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
GREIZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
GREIZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
GREIZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
GREIZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
GREIZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
GREIZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
GREIZ	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
GREIZ	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
GREIZ	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
GREIZ	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
GREIZ	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
GREIZ	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
GREIZ	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
GREIZ	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
GREIZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
GREIZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
GREIZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
GREIZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
GREIZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
GREIZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
GREIZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
GREIZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
GREIZ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
GREIZ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
GREIZ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
GREIZ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
GREIZ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
GREIZ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
GREIZ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
GREIZ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
GREIZ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
GREIZ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
GREIZ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
GREIZ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
GREIZ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
GREIZ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
GREIZ	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
GREIZ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
GREIZ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
GREIZ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
GREIZ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
GREIZ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
GREIZ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
GREIZ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
GREIZ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
GREIZ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
GREIZ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
GREIZ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
GREIZ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)

GREIZ	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)	
GREIZ	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn	
GREIZ	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A	
GREIZ	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B	
GREIZ	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P	
GREIZ	/	DBW	M34	Read ECU Information	
GREIZ	/	DBW	M34	Read codes	
GREIZ	/	DBW	M34	Erase Codes	
GREIZ	/	DBW	M34	Read Freeze Frame Data	
GREIZ	/	DBW	M34	Read Live Data	
GREIZ	/	DBW	M34	Inspection	Idle Speed Adjust
GREIZ	/	DBW	M34	Inspection	Throttle Test
GREIZ	/	DBW	M34	ECM Reset	
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
GREIZ	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
GREIZ	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
GREIZ	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
GREIZ	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
GREIZ	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
GREIZ	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
GREIZ	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
GREIZ	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
GREIZ	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
GREIZ	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
GREIZ	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
GREIZ	/	Capacitor Control System (EDLC)	M12	Read codes	
GREIZ	/	Capacitor Control System (EDLC)	M12	Erase Codes	
GREIZ	/	Capacitor Control System (EDLC)	M12	Read Live Data	
GREIZ	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
GREIZ	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
GREIZ	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
GREIZ	/	Electronic Brake Control System (EPB)	M1F	Read codes	
GREIZ	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
GREIZ	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
GREIZ	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
GREIZ	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
GREIZ	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
GREIZ	/	Electronic Brake Control System (EPB)	M3E	Read codes	
GREIZ	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
GREIZ	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
GREIZ	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
GREIZ	/	Electric Powertrain / IMA	M66	Read ECU Information	
GREIZ	/	Electric Powertrain / IMA	M66	Read codes	
GREIZ	/	Electric Powertrain / IMA	M66	Erase Codes	
GREIZ	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
GREIZ	/	Electric Powertrain / IMA	M66	Read Live Data	
GREIZ	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
GREIZ	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
GREIZ	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
GREIZ	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
GREIZ	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	

GREIZ	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
GREIZ	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
GREIZ	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
GREIZ	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
GREIZ	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
GREIZ	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
GREIZ	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
GREIZ	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
GREIZ	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
GREIZ	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
GREIZ	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
GREIZ	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
GREIZ	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
GREIZ	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
GREIZ	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
GREIZ	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
GREIZ	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
GREIZ	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
GREIZ	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
GREIZ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
GREIZ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
GREIZ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
GREIZ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
GREIZ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
GREIZ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
GREIZ	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
GREIZ	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
GREIZ	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
GREIZ	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
GREIZ	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
GREIZ	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
GREIZ	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
GREIZ	/	New energy battery (EV)	M44	Read ECU Information	
GREIZ	/	New energy battery (EV)	M44	Read codes	
GREIZ	/	New energy battery (EV)	M44	Erase Codes	
GREIZ	/	New energy battery (EV)	M44	Read Freeze Frame Data	
GREIZ	/	New energy battery (EV)	M44	Read Live Data	
GREIZ	/	New energy battery (EV)	M44	Inspection	
GREIZ	/	New energy battery (EV)	M44	Adjustment	
GREIZ	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
GREIZ	/	Electronic vacuum pump (EVPS)	M21	Read codes	
GREIZ	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
GREIZ	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
GREIZ	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
GREIZ	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
GREIZ	/	Electronic vacuum pump (EVPS)	M22	Read codes	
GREIZ	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
GREIZ	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
GREIZ	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
GREIZ	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
GREIZ	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
GREIZ	/	FCW LDW	M4E	Read ECU Information	
GREIZ	/	FCW LDW	M4E	Read codes	
GREIZ	/	FCW LDW	M4E	Erase Codes	
GREIZ	/	FCW LDW	M4E	Read Live Data	
GREIZ	/	FCW LDW	M4E	Function Test	FCW Drive
GREIZ	/	FCW LDW	M4E	Function Test	Left side lane departure warning
GREIZ	/	FCW LDW	M4E	Function Test	Right side lane departure warning
GREIZ	/	FCW LDW	M4E	Function Test	Indicator Drive
GREIZ	/	FCW LDW	M4E	Adjustment	
GREIZ	/	Instrument Display System (GAUGE)	M2C	Read codes	
GREIZ	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
GREIZ	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
GREIZ	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
GREIZ	/	Anti-lock brake control system (ABS)	M01	Read codes	
GREIZ	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
GREIZ	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
GREIZ	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
GREIZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
GREIZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
GREIZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
GREIZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
GREIZ	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
GREIZ	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
GREIZ	/	Anti-lock brake control system (ABS)	M02	Read codes	
GREIZ	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
GREIZ	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
GREIZ	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
GREIZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
GREIZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
GREIZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
GREIZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
GREIZ	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
GREIZ	/	Anti-lock brake control system (ABS)	M03	Read codes	
GREIZ	/	Anti-lock brake control system (ABS)	M03	Erase Codes	

GREIZ	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
GREIZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
GREIZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
GREIZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
GREIZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
GREIZ	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
GREIZ	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
GREIZ	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
GREIZ	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
GREIZ	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
GREIZ	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
GREIZ	/	Anti-lock brake control system (ABS)	M19	Read codes	
GREIZ	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
GREIZ	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
GREIZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
GREIZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
GREIZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
GREIZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
GREIZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
GREIZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
GREIZ	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
GREIZ	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
GREIZ	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
GREIZ	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
GREIZ	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
GREIZ	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
GREIZ	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
GREIZ	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
GREIZ	/	Intelligent Parking Control System (SPS)	M9B	Customize	
GREIZ	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
GREIZ	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
GREIZ	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
GREIZ	/	Hydraulic booster control system (HBS)	M5F	Read codes	
GREIZ	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
GREIZ	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
GREIZ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
GREIZ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
GREIZ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
GREIZ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
GREIZ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
GREIZ	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
GREIZ	/	IMA	M63	Read ECU Information	
GREIZ	/	IMA	M63	Read codes	
GREIZ	/	IMA	M63	Erase Codes	
GREIZ	/	IMA	M63	Read Freeze Frame Data	
GREIZ	/	IMA	M63	Read Live Data	
GREIZ	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
GREIZ	/	IMA	M63	Adjustment	SOC PRESET
GREIZ	/	IMA	M64	Read ECU Information	
GREIZ	/	IMA	M64	Read codes	
GREIZ	/	IMA	M64	Erase Codes	
GREIZ	/	IMA	M64	Read Freeze Frame Data	
GREIZ	/	IMA	M64	Read Live Data	
GREIZ	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
GREIZ	/	IMA	M64	Adjustment	SOC PRESET
GREIZ	/	IMA	M65	Read ECU Information	
GREIZ	/	IMA	M65	Read codes	
GREIZ	/	IMA	M65	Erase Codes	
GREIZ	/	IMA	M65	Read Freeze Frame Data	
GREIZ	/	IMA	M65	Read Live Data	
GREIZ	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
GREIZ	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
GREIZ	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
GREIZ	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
GREIZ	/	Intake Sounder Control System (ISC)	M6D	Read codes	
GREIZ	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
GREIZ	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
GREIZ	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
GREIZ	/	Night Vision System (INVS)	0XB1	Read ECU Information	
GREIZ	/	Night Vision System (INVS)	0XB1	Read codes	
GREIZ	/	Night Vision System (INVS)	0XB1	Erase Codes	
GREIZ	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
GREIZ	/	Night Vision System (INVS)	0XB1	Read Live Data	
GREIZ	/	Night Vision System (INVS)	0XB1	Adjustment	
GREIZ	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
GREIZ	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
GREIZ	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
GREIZ	/	i-SHIFT	0XB0	Read ECU Information	
GREIZ	/	i-SHIFT	0XB0	Read codes	
GREIZ	/	i-SHIFT	0XB0	Erase Codes	
GREIZ	/	i-SHIFT	0XB0	Read Live Data	
GREIZ	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
GREIZ	/	Keyless Entry Control System (KAS)	M99	Read codes	
GREIZ	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
GREIZ	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
GREIZ	/	Keyless Entry Control System (KAS)	M99	Self Check	



GREIZ	/	Keyless Entry Control System (KAS)	M99	History Data	
GREIZ	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
GREIZ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
GREIZ	/	Keyless Entry Control System (KAS)	M99	Registration	
GREIZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
GREIZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
GREIZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
GREIZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
GREIZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
GREIZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
GREIZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
GREIZ	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
GREIZ	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
GREIZ	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
GREIZ	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
GREIZ	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
GREIZ	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
GREIZ	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
GREIZ	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
GREIZ	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
GREIZ	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
GREIZ	/	Management ECU Module (ME)	M74	Read ECU Information	
GREIZ	/	Management ECU Module (ME)	M74	Read codes	
GREIZ	/	Management ECU Module (ME)	M74	Erase Codes	
GREIZ	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
GREIZ	/	Management ECU Module (ME)	M74	Read Live Data	
GREIZ	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
GREIZ	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
GREIZ	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
GREIZ	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
GREIZ	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
GREIZ	/	Multi-view camera system (MVCS)	M7A	Read codes	
GREIZ	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
GREIZ	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
GREIZ	/	Multi-view camera system (MVCS)	M7A	Customization	
GREIZ	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
GREIZ	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
GREIZ	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
GREIZ	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
GREIZ	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
GREIZ	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
GREIZ	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
GREIZ	/	Power Control Unit (PCU)	M83	Read ECU Information	
GREIZ	/	Power Control Unit (PCU)	M83	Read codes	

GREIZ	/	Power Control Unit (PCU)	M83	Erase Codes	
GREIZ	/	Power Control Unit (PCU)	M83	Read Live Data	
GREIZ	/	Power Control Unit (PCU)	M83	Self Check	
GREIZ	/	Power Control Unit (PCU)	M83	History Data	
GREIZ	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
GREIZ	/	Engine Control System (PGM-FI)	M23	Read codes	
GREIZ	/	Engine Control System (PGM-FI)	M23	Erase Codes	
GREIZ	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
GREIZ	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
GREIZ	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
GREIZ	/	Engine Control System (PGM-FI)	M23	Read Live Data	
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
GREIZ	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
GREIZ	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
GREIZ	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
GREIZ	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
GREIZ	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
GREIZ	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
GREIZ	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
GREIZ	/	Engine Control System (PGM-FI)	M50	Read codes	
GREIZ	/	Engine Control System (PGM-FI)	M50	Erase Codes	
GREIZ	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
GREIZ	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
GREIZ	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
GREIZ	/	Engine Control System (PGM-FI)	M50	Read Live Data	
GREIZ	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
GREIZ	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
GREIZ	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
GREIZ	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
GREIZ	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
GREIZ	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
GREIZ	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
GREIZ	/	Engine Control System (PGM-FI)	M86	Read codes	
GREIZ	/	Engine Control System (PGM-FI)	M86	Erase Codes	
GREIZ	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
GREIZ	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
GREIZ	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
GREIZ	/	Engine Control System (PGM-FI)	M86	Read Live Data	
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
GREIZ	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
GREIZ	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
GREIZ	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
GREIZ	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
GREIZ	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
GREIZ	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
GREIZ	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
GREIZ	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
GREIZ	/	PSR	M27	Read ECU Information	
GREIZ	/	PSR	M27	Read codes	
GREIZ	/	PSR	M27	Erase Codes	
GREIZ	/	PSR	M27	Read Live Data	
GREIZ	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
GREIZ	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
GREIZ	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
GREIZ	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
GREIZ	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
GREIZ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
GREIZ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	

GREIZ	/	Real-time four-wheel drive / intelligent control drive s M3A	Read Freeze Frame Data	
GREIZ	/	Real-time four-wheel drive / intelligent control drive s M3A	Read Live Data	
GREIZ	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	E-DPS Control Module Replacement
GREIZ	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	Longitudinal G Sensor Learning
GREIZ	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read ECU Information	
GREIZ	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read codes	
GREIZ	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Erase Codes	
GREIZ	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read Live Data	
GREIZ	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Adjustment	
GREIZ	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test	Monitor and Alarm
GREIZ	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test	Display Rear Camera output image
GREIZ	/	Remote starter (RS) M90	System Check	
GREIZ	/	Remote starter (RS) M90	HISTORY	
GREIZ	/	Remote starter (RS) M90	Registration	
GREIZ	/	Seat load cell (SWS) M6F	Read ECU Information	
GREIZ	/	Seat load cell (SWS) M6F	Read codes	
GREIZ	/	Seat load cell (SWS) M6F	Erase Codes	
GREIZ	/	Seat load cell (SWS) M6F	Read Live Data	
GREIZ	/	Seat load cell (SWS) M6F	System Check	SWS DTC CHECK
GREIZ	/	Seat load cell (SWS) M6F	System Check	Seat Output Check
GREIZ	/	Seat load cell (SWS) M6F	System Check	AFTER A VEHICLE COLLISION
GREIZ	/	Seat load cell (SWS) M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
GREIZ	/	Seat load cell (SWS) M6F	Adjustment	ODS Unit Initialization
GREIZ	/	Seat load cell (SWS) M6F	Adjustment	OPDS Initialization
GREIZ	/	Seat load cell (SWS) M6F	Adjustment	SWS Initialization
GREIZ	/	Seat load cell (SWS) M6F	Adjustment	E-Pretensioner For CMBS (CMS)
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M29	Read ECU Information	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M29	Read codes	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M29	Erase Codes	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M29	Readiness Codes	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M29	Read Freeze Frame Data	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M29	ECM/PCM Reset	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M29	Read Live Data	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M29	Inspection	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M29	Adjustment	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M29	VIN CHECK	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M29	Replace ECM/PCM	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Read ECU Information	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Read codes	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Erase Codes	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Read Freeze Frame Data	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Read Live Data	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Acceleration Device Test	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Clutch Coil Test	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Differential Torque	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
GREIZ	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M ALL Sensor	
GREIZ	/	Groove track drive unit (SLOT ECU) M98	Read ECU Information	
GREIZ	/	Groove track drive unit (SLOT ECU) M98	Read codes	
GREIZ	/	Groove track drive unit (SLOT ECU) M98	Erase Codes	
GREIZ	/	Groove track drive unit (SLOT ECU) M98	Read Live Data	
GREIZ	/	Groove track drive unit (SLOT ECU) M98	Self Check	
GREIZ	/	Groove track drive unit (SLOT ECU) M98	History Data	
GREIZ	/	Groove track drive unit (SLOT ECU) M98	System Information	
GREIZ	/	Airbag Control System (SRS) M9F	Read ECU Information	
GREIZ	/	Airbag Control System (SRS) M9F	Read codes	
GREIZ	/	Airbag Control System (SRS) M9F	Erase Codes	
GREIZ	/	Airbag Control System (SRS) M9F	Read Live Data	
GREIZ	/	Airbag Control System (SRS) MA0	Read ECU Information	
GREIZ	/	Airbag Control System (SRS) MA0	Read codes	
GREIZ	/	Airbag Control System (SRS) MA0	Erase Codes	
GREIZ	/	Airbag Control System (SRS) MA0	Read Live Data	
GREIZ	/	Airbag Control System (SRS) MA1	Read ECU Information	
GREIZ	/	Airbag Control System (SRS) MA1	Read codes	
GREIZ	/	Airbag Control System (SRS) MA1	Erase Codes	
GREIZ	/	Airbag Control System (SRS) MA1	Read Live Data	
GREIZ	/	Airbag Control System (SRS) MA1	Miscellaneous Test	OPDS Initialization
GREIZ	/	Airbag Control System (SRS) MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
GREIZ	/	Airbag Control System (SRS) M2A	Read codes	
GREIZ	/	Airbag Control System (SRS) M2A	Erase Codes	
GREIZ	/	Airbag Control System (SRS) M2A	Read Live Data	
GREIZ	/	Airbag Control System (SRS) M9C	Read ECU Information	
GREIZ	/	Airbag Control System (SRS) M9C	Read codes	
GREIZ	/	Airbag Control System (SRS) M9C	Erase Codes	
GREIZ	/	Airbag Control System (SRS) M9C	Read Live Data	
GREIZ	/	Airbag Control System (SRS) M9D	Read ECU Information	
GREIZ	/	Airbag Control System (SRS) M9D	Read codes	
GREIZ	/	Airbag Control System (SRS) M9D	Erase Codes	
GREIZ	/	Airbag Control System (SRS) M9D	Read Freeze Frame Data	
GREIZ	/	Airbag Control System (SRS) M9D	Read Live Data	
GREIZ	/	Airbag Control System (SRS) M9D	Parameter Information	
GREIZ	/	Airbag Control System (SRS) M9D	CALIBRATION	ODS Unit Initialization
GREIZ	/	Airbag Control System (SRS) M9D	CALIBRATION	OPDS Initialization
GREIZ	/	Airbag Control System (SRS) M9D	CALIBRATION	SWS Initialization
GREIZ	/	Airbag Control System (SRS) M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
GREIZ	/	Airbag Control System (SRS) M9D	Function Test	
GREIZ	/	Airbag Control System (SRS) M9D	System Information	
GREIZ	/	Variable Valve Timing Control System (SVT) MA2	Read ECU Information	
GREIZ	/	Variable Valve Timing Control System (SVT) MA2	Read codes	
GREIZ	/	Variable Valve Timing Control System (SVT) MA2	Erase Codes	

GREIZ	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
GREIZ	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
GREIZ	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
GREIZ	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
GREIZ	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
GREIZ	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
GREIZ	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
GREIZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
GREIZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
GREIZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
GREIZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
GREIZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
GREIZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
GREIZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
GREIZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
GREIZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
HR-V	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
HR-V	/	Four-wheel steering control system (4WS)	M52	Read codes	
HR-V	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
HR-V	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
HR-V	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
HR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
HR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
HR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
HR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
HR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
HR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
HR-V	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
HR-V	/	Automatic shift control system (A/T)	M1E	Read codes	
HR-V	/	Automatic shift control system (A/T)	M1E	Erase Codes	
HR-V	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
HR-V	/	Automatic shift control system (A/T)	M1E	Read Live Data	
HR-V	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
HR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
HR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
HR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
HR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
HR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
HR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
HR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
HR-V	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
HR-V	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
HR-V	/	Automatic shift control system (A/T)	M3B	Read codes	
HR-V	/	Automatic shift control system (A/T)	M3B	Erase Codes	
HR-V	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
HR-V	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
HR-V	/	Automatic shift control system (A/T)	M3B	Read Live Data	
HR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
HR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
HR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
HR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
HR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
HR-V	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
HR-V	/	Automatic shift control system (A/T)	M3C	Read codes	
HR-V	/	Automatic shift control system (A/T)	M3C	Erase Codes	
HR-V	/	Automatic shift control system (A/T)	M81	Read ECU Information	
HR-V	/	Automatic shift control system (A/T)	M81	Read codes	
HR-V	/	Automatic shift control system (A/T)	M81	Erase Codes	
HR-V	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
HR-V	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
HR-V	/	Automatic shift control system (A/T)	M81	Read Live Data	
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
HR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
HR-V	/	Automatic shift control system (A/T)	M82	Read ECU Information	
HR-V	/	Automatic shift control system (A/T)	M82	Read codes	
HR-V	/	Automatic shift control system (A/T)	M82	Erase Codes	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	

HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	Throttle Opening Angle Test
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 1
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 2
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	LIGHT CHECK
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
HR-V	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
HR-V	/	Active Engine Control Support System (ACM) M06	Read codes	
HR-V	/	Active Engine Control Support System (ACM) M06	Erase Codes	
HR-V	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
HR-V	/	Active Engine Control Support System (ACM) M06	Read Live Data	
HR-V	/	Active Engine Control Support System (ACM) M06	ACM Reset	
HR-V	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
HR-V	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
HR-V	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
HR-V	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
HR-V	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
HR-V	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
HR-V	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
HR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
HR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
HR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
HR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
HR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
HR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
HR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
HR-V	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
HR-V	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
HR-V	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
HR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
HR-V	/	Transmission Control System (AT) M18	Read ECU Information	
HR-V	/	Transmission Control System (AT) M18	Read codes	
HR-V	/	Transmission Control System (AT) M18	Erase Codes	
HR-V	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
HR-V	/	Transmission Control System (AT) M18	Read Live Data	
HR-V	/	Transmission Control System (AT) M18	Adjustment	
HR-V	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
HR-V	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
HR-V	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
HR-V	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
HR-V	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
HR-V	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
HR-V	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
HR-V	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
HR-V	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
HR-V	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
HR-V	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
HR-V	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	

HR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection	
HR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection	
HR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation	
HR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu	
HR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation	
HR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation	
HR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance	
HR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time	
HR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default	
HR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
HR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
HR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
HR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
HR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
HR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
HR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
HR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
HR-V	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
HR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
HR-V	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
HR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
HR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
HR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
HR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
HR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
HR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command

HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
HR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
HR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
HR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
HR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
HR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
HR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
HR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
HR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
HR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
HR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
HR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
HR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
HR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
HR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Security	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
HR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
HR-V	/	BODY ELECTRICAL/Security	MFF	History Data	
HR-V	/	BODY ELECTRICAL/Security	MFF	History Clear	
HR-V	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
HR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
HR-V	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
HR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
HR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
HR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
HR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
HR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
HR-V	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
HR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
HR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
HR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
HR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
HR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
HR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	

HR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
HR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
HR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
HR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
HR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
HR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
HR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
HR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
HR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
HR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
HR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
HR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
HR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
HR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
HR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
HR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
HR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
HR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Neutral Rewrite	
HR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
HR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
HR-V	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
HR-V	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
HR-V	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
HR-V	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
HR-V	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
HR-V	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
HR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
HR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
HR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
HR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
HR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
HR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
HR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
HR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
HR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
HR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
HR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
HR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
HR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
HR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCMC Reset	
HR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
HR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
HR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
HR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
HR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
HR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
HR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
HR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
HR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCMC Reset	
HR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
HR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
HR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
HR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCMC Reset	
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
HR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
HR-V	/	DBW	M34	Read ECU Information	
HR-V	/	DBW	M34	Read codes	
HR-V	/	DBW	M34	Erase Codes	
HR-V	/	DBW	M34	Read Freeze Frame Data	
HR-V	/	DBW	M34	Read Live Data	
HR-V	/	DBW	M34	Inspection	Idle Speed Adjust
HR-V	/	DBW	M34	Inspection	Throttle Test
HR-V	/	DBW	M34	ECM Reset	
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data



HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
HR-V	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
HR-V	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
HR-V	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
HR-V	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
HR-V	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
HR-V	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
HR-V	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
HR-V	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
HR-V	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
HR-V	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
HR-V	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
HR-V	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
HR-V	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
HR-V	/	Capacitor Control System (EDLC)	M12	Read codes	
HR-V	/	Capacitor Control System (EDLC)	M12	Erase Codes	
HR-V	/	Capacitor Control System (EDLC)	M12	Read Live Data	
HR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
HR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
HR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
HR-V	/	Electronic Brake Control System (EPB)	M1F	Read codes	
HR-V	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
HR-V	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
HR-V	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
HR-V	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
HR-V	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
HR-V	/	Electronic Brake Control System (EPB)	M3E	Read codes	
HR-V	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
HR-V	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
HR-V	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
HR-V	/	Electric Powertrain / IMA	M66	Read ECU Information	
HR-V	/	Electric Powertrain / IMA	M66	Read codes	
HR-V	/	Electric Powertrain / IMA	M66	Erase Codes	
HR-V	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
HR-V	/	Electric Powertrain / IMA	M66	Read Live Data	
HR-V	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
HR-V	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
HR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
HR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
HR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
HR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
HR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
HR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
HR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
HR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
HR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
HR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
HR-V	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
HR-V	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
HR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
HR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
HR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
HR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
HR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
HR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
HR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
HR-V	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
HR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
HR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
HR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
HR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
HR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
HR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
HR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
HR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
HR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
HR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
HR-V	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
HR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
HR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
HR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
HR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR

HR-V	/	New energy battery (EV)	M44	Read ECU Information	
HR-V	/	New energy battery (EV)	M44	Read codes	
HR-V	/	New energy battery (EV)	M44	Erase Codes	
HR-V	/	New energy battery (EV)	M44	Read Freeze Frame Data	
HR-V	/	New energy battery (EV)	M44	Read Live Data	
HR-V	/	New energy battery (EV)	M44	Inspection	
HR-V	/	New energy battery (EV)	M44	Adjustment	
HR-V	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
HR-V	/	Electronic vacuum pump (EVPS)	M21	Read codes	
HR-V	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
HR-V	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
HR-V	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
HR-V	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
HR-V	/	Electronic vacuum pump (EVPS)	M22	Read codes	
HR-V	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
HR-V	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
HR-V	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
HR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
HR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
HR-V	/	FCW LDW	M4E	Read ECU Information	
HR-V	/	FCW LDW	M4E	Read codes	
HR-V	/	FCW LDW	M4E	Erase Codes	
HR-V	/	FCW LDW	M4E	Read Live Data	
HR-V	/	FCW LDW	M4E	Function Test	FCW Drive
HR-V	/	FCW LDW	M4E	Function Test	Left side lane departure warning
HR-V	/	FCW LDW	M4E	Function Test	Right side lane departure warning
HR-V	/	FCW LDW	M4E	Function Test	Indicator Drive
HR-V	/	FCW LDW	M4E	Adjustment	
HR-V	/	Instrument Display System (GAUGE)	M2C	Read codes	
HR-V	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
HR-V	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
HR-V	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
HR-V	/	Anti-lock brake control system (ABS)	M01	Read codes	
HR-V	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
HR-V	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
HR-V	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
HR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
HR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
HR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
HR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
HR-V	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
HR-V	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
HR-V	/	Anti-lock brake control system (ABS)	M02	Read codes	
HR-V	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
HR-V	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
HR-V	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
HR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
HR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
HR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
HR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
HR-V	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
HR-V	/	Anti-lock brake control system (ABS)	M03	Read codes	
HR-V	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
HR-V	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
HR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
HR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
HR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
HR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
HR-V	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
HR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
HR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
HR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
HR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
HR-V	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
HR-V	/	Anti-lock brake control system (ABS)	M19	Read codes	
HR-V	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
HR-V	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
HR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
HR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
HR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
HR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
HR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
HR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
HR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
HR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
HR-V	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
HR-V	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
HR-V	/	Intelligent Parking Control System (SPS)	M9B	Read codes	

HR-V	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
HR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
HR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
HR-V	/	Intelligent Parking Control System (SPS)	M9B	Customize	
HR-V	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
HR-V	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
HR-V	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
HR-V	/	Hydraulic booster control system (HBS)	M5F	Read codes	
HR-V	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
HR-V	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
HR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
HR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
HR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
HR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
HR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
HR-V	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
HR-V	/	IMA	M63	Read ECU Information	
HR-V	/	IMA	M63	Read codes	
HR-V	/	IMA	M63	Erase Codes	
HR-V	/	IMA	M63	Read Freeze Frame Data	
HR-V	/	IMA	M63	Read Live Data	
HR-V	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
HR-V	/	IMA	M63	Adjustment	SOC PRESET
HR-V	/	IMA	M64	Read ECU Information	
HR-V	/	IMA	M64	Read codes	
HR-V	/	IMA	M64	Erase Codes	
HR-V	/	IMA	M64	Read Freeze Frame Data	
HR-V	/	IMA	M64	Read Live Data	
HR-V	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
HR-V	/	IMA	M64	Adjustment	SOC PRESET
HR-V	/	IMA	M65	Read ECU Information	
HR-V	/	IMA	M65	Read codes	
HR-V	/	IMA	M65	Erase Codes	
HR-V	/	IMA	M65	Read Freeze Frame Data	
HR-V	/	IMA	M65	Read Live Data	
HR-V	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
HR-V	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
HR-V	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
HR-V	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
HR-V	/	Intake Sounder Control System (ISC)	M6D	Read codes	
HR-V	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
HR-V	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
HR-V	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
HR-V	/	Night Vision System (INVS)	0XB1	Read ECU Information	
HR-V	/	Night Vision System (INVS)	0XB1	Read codes	
HR-V	/	Night Vision System (INVS)	0XB1	Erase Codes	
HR-V	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
HR-V	/	Night Vision System (INVS)	0XB1	Read Live Data	
HR-V	/	Night Vision System (INVS)	0XB1	Adjustment	
HR-V	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
HR-V	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
HR-V	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
HR-V	/	i-SHIFT	0XB0	Read ECU Information	
HR-V	/	i-SHIFT	0XB0	Read codes	
HR-V	/	i-SHIFT	0XB0	Erase Codes	
HR-V	/	i-SHIFT	0XB0	Read Live Data	
HR-V	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
HR-V	/	Keyless Entry Control System (KAS)	M99	Read codes	
HR-V	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
HR-V	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
HR-V	/	Keyless Entry Control System (KAS)	M99	Self Check	
HR-V	/	Keyless Entry Control System (KAS)	M99	History Data	
HR-V	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output

HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
HR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
HR-V	/	Keyless Entry Control System (KAS)	M99	Registration	
HR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
HR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
HR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
HR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
HR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
HR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
HR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
HR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
HR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
HR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
HR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
HR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
HR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
HR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
HR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
HR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
HR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
HR-V	/	Management ECU Module (ME)	M74	Read ECU Information	
HR-V	/	Management ECU Module (ME)	M74	Read codes	
HR-V	/	Management ECU Module (ME)	M74	Erase Codes	
HR-V	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
HR-V	/	Management ECU Module (ME)	M74	Read Live Data	
HR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
HR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
HR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
HR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
HR-V	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
HR-V	/	Multi-view camera system (MVCS)	M7A	Read codes	
HR-V	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
HR-V	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
HR-V	/	Multi-view camera system (MVCS)	M7A	Customization	
HR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
HR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
HR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
HR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
HR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
HR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
HR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
HR-V	/	Power Control Unit (PCU)	M83	Read ECU Information	
HR-V	/	Power Control Unit (PCU)	M83	Read codes	
HR-V	/	Power Control Unit (PCU)	M83	Erase Codes	
HR-V	/	Power Control Unit (PCU)	M83	Read Live Data	
HR-V	/	Power Control Unit (PCU)	M83	Self Check	
HR-V	/	Power Control Unit (PCU)	M83	History Data	
HR-V	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
HR-V	/	Engine Control System (PGM-FI)	M23	Read codes	
HR-V	/	Engine Control System (PGM-FI)	M23	Erase Codes	
HR-V	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
HR-V	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
HR-V	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
HR-V	/	Engine Control System (PGM-FI)	M23	Read Live Data	
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
HR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
HR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
HR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
HR-V	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	

HR-V	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
HR-V	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
HR-V	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
HR-V	/	Engine Control System (PGM-FI)	M50	Read codes	
HR-V	/	Engine Control System (PGM-FI)	M50	Erase Codes	
HR-V	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
HR-V	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
HR-V	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
HR-V	/	Engine Control System (PGM-FI)	M50	Read Live Data	
HR-V	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
HR-V	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
HR-V	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
HR-V	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
HR-V	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
HR-V	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
HR-V	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
HR-V	/	Engine Control System (PGM-FI)	M86	Read codes	
HR-V	/	Engine Control System (PGM-FI)	M86	Erase Codes	
HR-V	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
HR-V	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
HR-V	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
HR-V	/	Engine Control System (PGM-FI)	M86	Read Live Data	
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
HR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
HR-V	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
HR-V	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
HR-V	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
HR-V	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
HR-V	/	Four-wheel precision steering control system (PAWSC) M96		Read codes	
HR-V	/	Four-wheel precision steering control system (PAWSC) M96		Erase Codes	
HR-V	/	Four-wheel precision steering control system (PAWSC) M96		Read Live Data	
HR-V	/	PSR	M27	Read ECU Information	
HR-V	/	PSR	M27	Read codes	
HR-V	/	PSR	M27	Erase Codes	
HR-V	/	PSR	M27	Read Live Data	
HR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
HR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
HR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
HR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
HR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
HR-V	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
HR-V	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
HR-V	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
HR-V	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
HR-V	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
HR-V	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
HR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
HR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
HR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
HR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
HR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
HR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
HR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
HR-V	/	Remote starter (RS)	M90	System Check	
HR-V	/	Remote starter (RS)	M90	HISTORY	
HR-V	/	Remote starter (RS)	M90	Registration	
HR-V	/	Seat load cell (SWS)	M6F	Read ECU Information	
HR-V	/	Seat load cell (SWS)	M6F	Read codes	
HR-V	/	Seat load cell (SWS)	M6F	Erase Codes	
HR-V	/	Seat load cell (SWS)	M6F	Read Live Data	
HR-V	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
HR-V	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
HR-V	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
HR-V	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
HR-V	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
HR-V	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
HR-V	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
HR-V	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
HR-V	/	Full-time four-wheel drive control system (SH-AWD) M29		Read ECU Information	
HR-V	/	Full-time four-wheel drive control system (SH-AWD) M29		Read codes	
HR-V	/	Full-time four-wheel drive control system (SH-AWD) M29		Erase Codes	
HR-V	/	Full-time four-wheel drive control system (SH-AWD) M29		Readiness Codes	
HR-V	/	Full-time four-wheel drive control system (SH-AWD) M29		Read Freeze Frame Data	
HR-V	/	Full-time four-wheel drive control system (SH-AWD) M29		ECM/PCM Reset	

HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
HR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
HR-V	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
HR-V	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
HR-V	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
HR-V	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
HR-V	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
HR-V	/	Groove track drive unit (SLOT ECU)	M98	History Data	
HR-V	/	Groove track drive unit (SLOT ECU)	M98	System Information	
HR-V	/	Airbag Control System (SRS)	M9F	Read ECU Information	
HR-V	/	Airbag Control System (SRS)	M9F	Read codes	
HR-V	/	Airbag Control System (SRS)	M9F	Erase Codes	
HR-V	/	Airbag Control System (SRS)	M9F	Read Live Data	
HR-V	/	Airbag Control System (SRS)	MA0	Read ECU Information	
HR-V	/	Airbag Control System (SRS)	MA0	Read codes	
HR-V	/	Airbag Control System (SRS)	MA0	Erase Codes	
HR-V	/	Airbag Control System (SRS)	MA0	Read Live Data	
HR-V	/	Airbag Control System (SRS)	MA1	Read ECU Information	
HR-V	/	Airbag Control System (SRS)	MA1	Read codes	
HR-V	/	Airbag Control System (SRS)	MA1	Erase Codes	
HR-V	/	Airbag Control System (SRS)	MA1	Read Live Data	
HR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
HR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
HR-V	/	Airbag Control System (SRS)	M2A	Read codes	
HR-V	/	Airbag Control System (SRS)	M2A	Erase Codes	
HR-V	/	Airbag Control System (SRS)	M2A	Read Live Data	
HR-V	/	Airbag Control System (SRS)	M9C	Read ECU Information	
HR-V	/	Airbag Control System (SRS)	M9C	Read codes	
HR-V	/	Airbag Control System (SRS)	M9C	Erase Codes	
HR-V	/	Airbag Control System (SRS)	M9C	Read Live Data	
HR-V	/	Airbag Control System (SRS)	M9D	Read ECU Information	
HR-V	/	Airbag Control System (SRS)	M9D	Read codes	
HR-V	/	Airbag Control System (SRS)	M9D	Erase Codes	
HR-V	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
HR-V	/	Airbag Control System (SRS)	M9D	Read Live Data	
HR-V	/	Airbag Control System (SRS)	M9D	Parameter Information	
HR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
HR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
HR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
HR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
HR-V	/	Airbag Control System (SRS)	M9D	Function Test	
HR-V	/	Airbag Control System (SRS)	M9D	System Information	
HR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
HR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
HR-V	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
HR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
HR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
HR-V	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
HR-V	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
HR-V	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
HR-V	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
HR-V	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
HR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
HR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
HR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
HR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
HR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
HR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
HR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
HR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
HR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
INSIGHT	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
INSIGHT	/	Four-wheel steering control system (4WS)	M52	Read codes	
INSIGHT	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
INSIGHT	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	

INSIGHT	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
INSIGHT	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
INSIGHT	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
INSIGHT	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
INSIGHT	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
INSIGHT	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
INSIGHT	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
INSIGHT	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
INSIGHT	/	Automatic shift control system (A/T)	M1E	Read codes	
INSIGHT	/	Automatic shift control system (A/T)	M1E	Erase Codes	
INSIGHT	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
INSIGHT	/	Automatic shift control system (A/T)	M1E	Read Live Data	
INSIGHT	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
INSIGHT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
INSIGHT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
INSIGHT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
INSIGHT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
INSIGHT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
INSIGHT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Solenoid Valve Control
INSIGHT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
INSIGHT	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
INSIGHT	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
INSIGHT	/	Automatic shift control system (A/T)	M3B	Read codes	
INSIGHT	/	Automatic shift control system (A/T)	M3B	Erase Codes	
INSIGHT	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
INSIGHT	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
INSIGHT	/	Automatic shift control system (A/T)	M3B	Read Live Data	
INSIGHT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
INSIGHT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
INSIGHT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
INSIGHT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
INSIGHT	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
INSIGHT	/	Automatic shift control system (A/T)	M3C	Read codes	
INSIGHT	/	Automatic shift control system (A/T)	M3C	Erase Codes	
INSIGHT	/	Automatic shift control system (A/T)	M81	Read ECU Information	
INSIGHT	/	Automatic shift control system (A/T)	M81	Read codes	
INSIGHT	/	Automatic shift control system (A/T)	M81	Erase Codes	
INSIGHT	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
INSIGHT	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
INSIGHT	/	Automatic shift control system (A/T)	M81	Read Live Data	
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
INSIGHT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
INSIGHT	/	Automatic shift control system (A/T)	M82	Read ECU Information	
INSIGHT	/	Automatic shift control system (A/T)	M82	Read codes	
INSIGHT	/	Automatic shift control system (A/T)	M82	Erase Codes	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read codes	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Erase Codes	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Freeze Frame Data	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Live Data	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	Throttle Opening Angle Test
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 1
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 2
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	LIGHT CHECK
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BUZZER CHECK
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read ECU Information	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read codes	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Erase Codes	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Freeze Frame Data	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Live Data	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Adjustment	RADAR AIMING
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	BRAKE ACTUATOR 3
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ACC relay malfunction.
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INDICATOR LIGHT
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INFORMATION DISPLAY
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ALARM BUZZER
INSIGHT	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
INSIGHT	/	Active Engine Control Support System (ACM)	M06	Read codes	
INSIGHT	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
INSIGHT	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
INSIGHT	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
INSIGHT	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
INSIGHT	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
INSIGHT	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
INSIGHT	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
INSIGHT	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
INSIGHT	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
INSIGHT	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
INSIGHT	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
INSIGHT	/	Active / Automatic Shock Absorber Control System (A	MOD	Read ECU Information	
INSIGHT	/	Active / Automatic Shock Absorber Control System (A	MOD	Read codes	
INSIGHT	/	Active / Automatic Shock Absorber Control System (A	MOD	Erase Codes	

INSIGHT	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
INSIGHT	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
INSIGHT	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
INSIGHT	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
INSIGHT	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
INSIGHT	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
INSIGHT	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
INSIGHT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
INSIGHT	/	Transmission Control System (AT) M18		Read ECU Information	
INSIGHT	/	Transmission Control System (AT) M18		Read codes	
INSIGHT	/	Transmission Control System (AT) M18		Erase Codes	
INSIGHT	/	Transmission Control System (AT) M18		Read Freeze Frame Data	
INSIGHT	/	Transmission Control System (AT) M18		Read Live Data	
INSIGHT	/	Transmission Control System (AT) M18		Adjustment	
INSIGHT	/	Active Torque Converter Control System (ATTS) MOE		Read ECU Information	
INSIGHT	/	Active Torque Converter Control System (ATTS) MOE		Read codes	
INSIGHT	/	Active Torque Converter Control System (ATTS) MOE		Erase Codes	
INSIGHT	/	Active Torque Converter Control System (ATTS) MOE		Read Freeze Frame Data	
INSIGHT	/	Active Torque Converter Control System (ATTS) MOE		Read Live Data	
INSIGHT	/	Active Torque Converter Control System (ATTS) MOE		Miscellaneous Test	ATTS TEST SHORT TIME MODE
INSIGHT	/	Active Torque Converter Control System (ATTS) MOE		Miscellaneous Test	STEERING ANGLE
INSIGHT	/	Active Torque Converter Control System (ATTS) MOE		Miscellaneous Test	LATERAL G & YAW RATE SENSORS
INSIGHT	/	Active Torque Converter Control System (ATTS) MOE		Miscellaneous Test	ALL SENSORS
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Read ECU Information	
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Read codes	
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Erase Codes	
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Read Live Data	
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	BSI Left Side Alert Indicator ON
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	Flash BSI Left Side Alert Indicator
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	BSI Right Side Alert Indicator ON
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	Flash BSI Right Side Alert Indicator
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	BSI Indicator ON
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	Right Side 'Blind Spot Not Available' Message
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	Left Side 'Blind Spot Not Available' Message
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	BSI Indicator OFF
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	Check Blind Spot System Message
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	BSI Buzzer
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Inspection	Select year
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		Function Test	
INSIGHT	/	Driving Visual Blind Spot Information System (BSI) M14		History Clear	
INSIGHT	/	BODY ELECTRICAL/Active Cornering Light MFF		Read codes	
INSIGHT	/	BODY ELECTRICAL/Active Cornering Light MFF		Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Adaptive Front Lighting MFF		Read codes	
INSIGHT	/	BODY ELECTRICAL/Adaptive Front Lighting MFF		Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Adaptive Front Lighting MFF		Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Adaptive Front Lighting MFF		Function Test	Adaptive Front Lighting
INSIGHT	/	BODY ELECTRICAL/Auto A/C Sub display MFF		Read codes	
INSIGHT	/	BODY ELECTRICAL/Auto A/C Sub display MFF		Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Read codes	
INSIGHT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Function Test	Oncoming Vehicle Detection
INSIGHT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Function Test	Preceding Vehicle Detection
INSIGHT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Auto High-Beam (High-Beam Support System) Operation
INSIGHT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
INSIGHT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Reset Operation
INSIGHT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Returning Operation
INSIGHT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Automatic Returning Distance
INSIGHT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Manual Returning Time
INSIGHT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF		Adjustment	Reset to default
INSIGHT	/	BODY ELECTRICAL/Auto Light Leveling MFF		Read codes	
INSIGHT	/	BODY ELECTRICAL/Auto Light Leveling MFF		Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Auto Light Leveling MFF		Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Auto Light Leveling MFF		Function Test	Auto Leveling Adjust Motor
INSIGHT	/	BODY ELECTRICAL/Auto Light Leveling MFF		Adjustment	Sensor Initial Position Learning
INSIGHT	/	BODY ELECTRICAL/Door Locks MFF		Read codes	
INSIGHT	/	BODY ELECTRICAL/Door Locks MFF		Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Door Locks MFF		Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Door Locks MFF		Function Test	Lock All Doors
INSIGHT	/	BODY ELECTRICAL/Door Locks MFF		Function Test	Unlock Driver's Side Door
INSIGHT	/	BODY ELECTRICAL/Door Locks MFF		Function Test	Unlock All Doors
INSIGHT	/	BODY ELECTRICAL/Door Locks MFF		Function Test	Fuel Fill Door Open
INSIGHT	/	BODY ELECTRICAL/Door Locks MFF		Function Test	Left Power Sliding Door
INSIGHT	/	BODY ELECTRICAL/Door Locks MFF		Function Test	Right Power Sliding Door
INSIGHT	/	BODY ELECTRICAL/e-Call MFF		Read codes	
INSIGHT	/	BODY ELECTRICAL/e-Call MFF		Erase Codes	
INSIGHT	/	BODY ELECTRICAL/e-Call MFF		Read Live Data	
INSIGHT	/	BODY ELECTRICAL/e-Call MFF		Activation and Display E-Call unit data	
INSIGHT	/	BODY ELECTRICAL/Front Panel MFF		Read codes	
INSIGHT	/	BODY ELECTRICAL/Front Panel MFF		Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Front Panel MFF		Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Front Panel MFF		Inspection	Front Panel Check
INSIGHT	/	BODY ELECTRICAL/Front Panel MFF		Function Test	Front Display Panel



INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
INSIGHT	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
INSIGHT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
INSIGHT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
INSIGHT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
INSIGHT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
INSIGHT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
INSIGHT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
INSIGHT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
INSIGHT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
INSIGHT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
INSIGHT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
INSIGHT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
INSIGHT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
INSIGHT	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
INSIGHT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch

INSIGHT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
INSIGHT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
INSIGHT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
INSIGHT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
INSIGHT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Security	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
INSIGHT	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
INSIGHT	/	BODY ELECTRICAL/Security	MFF	History Data	
INSIGHT	/	BODY ELECTRICAL/Security	MFF	History Clear	
INSIGHT	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
INSIGHT	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
INSIGHT	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
INSIGHT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
INSIGHT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
INSIGHT	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
INSIGHT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
INSIGHT	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
INSIGHT	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
INSIGHT	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
INSIGHT	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
INSIGHT	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
INSIGHT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
INSIGHT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
INSIGHT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
INSIGHT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
INSIGHT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
INSIGHT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
INSIGHT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
INSIGHT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
INSIGHT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
INSIGHT	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
INSIGHT	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
INSIGHT	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
INSIGHT	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
INSIGHT	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
INSIGHT	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
INSIGHT	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
INSIGHT	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
INSIGHT	/	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	Read ECU Information	
INSIGHT	/	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	Read codes	
INSIGHT	/	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	Erase Codes	
INSIGHT	/	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	Read Freeze Frame Data	
INSIGHT	/	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	Read Live Data	
INSIGHT	/	Collision Mitigation Brake Control System (CMBS/CM: M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	

INSIGHT	/	Collision Mitigation Brake Control System (CMBS/CM	M2E	Miscellaneous Test	RADAR AIMING
INSIGHT	/	Collision Mitigation Brake Control System (CMBS/CM	M2E	Miscellaneous Test	CMBS Brake
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M1B	Read ECU Information	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M1B	Read codes	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M1B	Erase Codes	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M1B	Read Freeze Frame Data	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M1B	Read Live Data	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M1B	ECMPCMC Reset	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M1B	Miscellaneous Test	Shift Lock Solenoid Test
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M1B	Miscellaneous Test	Shift Solenoid Tests
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M1B	Miscellaneous Test	Electrical Oil Pump Activation
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M33	Read ECU Information	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M33	Read codes	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M33	Erase Codes	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M33	Read Freeze Frame Data	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M33	Read Live Data	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M33	ECMPCMC Reset	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M33	Miscellaneous Test	Inhibitor Solenoid
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M33	Miscellaneous Test	CAS Solenoid A (LF)
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M33	Miscellaneous Test	CAS Solenoid B (RF)
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M33	Miscellaneous Test	Start Clutch Feedback Learn
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	Read ECU Information	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	Read codes	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	Erase Codes	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	Read Freeze Frame Data	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	Read Live Data	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	ECMPCMC Reset	
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Inhibitor Solenoid
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	CAS Solenoid A (LF)
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	CAS Solenoid B (RF)
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Start Clutch Feedback Learn
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Shift solenoid Valve A
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Shift solenoid Valve B
INSIGHT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Shift solenoid Valve O/P
INSIGHT	/	DBW	M34	Read ECU Information	
INSIGHT	/	DBW	M34	Read codes	
INSIGHT	/	DBW	M34	Erase Codes	
INSIGHT	/	DBW	M34	Read Freeze Frame Data	
INSIGHT	/	DBW	M34	Read Live Data	
INSIGHT	/	DBW	M34	Inspection	Idle Speed Adjust
INSIGHT	/	DBW	M34	Inspection	Throttle Test
INSIGHT	/	DBW	M34	ECM Reset	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC TEST
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
INSIGHT	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
INSIGHT	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn

INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
INSIGHT	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
INSIGHT	/	Capacitor Control System (EDLC)	M12	Read codes	
INSIGHT	/	Capacitor Control System (EDLC)	M12	Erase Codes	
INSIGHT	/	Capacitor Control System (EDLC)	M12	Read Live Data	
INSIGHT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
INSIGHT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
INSIGHT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
INSIGHT	/	Electronic Brake Control System (EPB)	M1F	Read codes	
INSIGHT	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
INSIGHT	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
INSIGHT	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
INSIGHT	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
INSIGHT	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
INSIGHT	/	Electronic Brake Control System (EPB)	M3E	Read codes	
INSIGHT	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
INSIGHT	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
INSIGHT	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
INSIGHT	/	Electric Powertrain / IMA	M66	Read ECU Information	
INSIGHT	/	Electric Powertrain / IMA	M66	Read codes	
INSIGHT	/	Electric Powertrain / IMA	M66	Erase Codes	
INSIGHT	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
INSIGHT	/	Electric Powertrain / IMA	M66	Read Live Data	
INSIGHT	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
INSIGHT	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
INSIGHT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
INSIGHT	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
INSIGHT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
INSIGHT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
INSIGHT	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
INSIGHT	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
INSIGHT	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
INSIGHT	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
INSIGHT	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
INSIGHT	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
INSIGHT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
INSIGHT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
INSIGHT	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
INSIGHT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
INSIGHT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
INSIGHT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
INSIGHT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
INSIGHT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
INSIGHT	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
INSIGHT	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
INSIGHT	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
INSIGHT	/	New energy battery (EV)	M44	Read ECU Information	
INSIGHT	/	New energy battery (EV)	M44	Read codes	
INSIGHT	/	New energy battery (EV)	M44	Erase Codes	
INSIGHT	/	New energy battery (EV)	M44	Read Freeze Frame Data	
INSIGHT	/	New energy battery (EV)	M44	Read Live Data	
INSIGHT	/	New energy battery (EV)	M44	Inspection	
INSIGHT	/	New energy battery (EV)	M44	Adjustment	
INSIGHT	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
INSIGHT	/	Electronic vacuum pump (EVPS)	M21	Read codes	
INSIGHT	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
INSIGHT	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
INSIGHT	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
INSIGHT	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
INSIGHT	/	Electronic vacuum pump (EVPS)	M22	Read codes	
INSIGHT	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
INSIGHT	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
INSIGHT	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
INSIGHT	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
INSIGHT	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
INSIGHT	/	FCW LDW	M4E	Read ECU Information	
INSIGHT	/	FCW LDW	M4E	Read codes	
INSIGHT	/	FCW LDW	M4E	Erase Codes	
INSIGHT	/	FCW LDW	M4E	Read Live Data	
INSIGHT	/	FCW LDW	M4E	Function Test	FCW Drive
INSIGHT	/	FCW LDW	M4E	Function Test	Left side lane departure warning
INSIGHT	/	FCW LDW	M4E	Function Test	Right side lane departure warning
INSIGHT	/	FCW LDW	M4E	Function Test	Indicator Drive
INSIGHT	/	FCW LDW	M4E	Adjustment	
INSIGHT	/	Instrument Display System (GAUGE)	M2C	Read codes	
INSIGHT	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
INSIGHT	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	

INSIGHT	/	Anti-lock brake control system (ABS)	M01	Read codes	
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Read codes	
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Read codes	
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
INSIGHT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
INSIGHT	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Read codes	
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
INSIGHT	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
INSIGHT	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
INSIGHT	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
INSIGHT	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
INSIGHT	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
INSIGHT	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
INSIGHT	/	Intelligent Parking Control System (SPS)	M9B	Customize	
INSIGHT	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
INSIGHT	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
INSIGHT	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
INSIGHT	/	Hydraulic booster control system (HBS)	M5F	Read codes	
INSIGHT	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
INSIGHT	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
INSIGHT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
INSIGHT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
INSIGHT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
INSIGHT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
INSIGHT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
INSIGHT	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
INSIGHT	/	IMA	M63	Read ECU Information	
INSIGHT	/	IMA	M63	Read codes	
INSIGHT	/	IMA	M63	Erase Codes	
INSIGHT	/	IMA	M63	Read Freeze Frame Data	
INSIGHT	/	IMA	M63	Read Live Data	
INSIGHT	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
INSIGHT	/	IMA	M63	Adjustment	SOC PRESET
INSIGHT	/	IMA	M64	Read ECU Information	
INSIGHT	/	IMA	M64	Read codes	
INSIGHT	/	IMA	M64	Erase Codes	
INSIGHT	/	IMA	M64	Read Freeze Frame Data	
INSIGHT	/	IMA	M64	Read Live Data	
INSIGHT	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
INSIGHT	/	IMA	M64	Adjustment	SOC PRESET
INSIGHT	/	IMA	M65	Read ECU Information	
INSIGHT	/	IMA	M65	Read codes	

INSIGHT	/	IMA	M65	Erase Codes	
INSIGHT	/	IMA	M65	Read Freeze Frame Data	
INSIGHT	/	IMA	M65	Read Live Data	
INSIGHT	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
INSIGHT	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
INSIGHT	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
INSIGHT	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
INSIGHT	/	Intake Sounder Control System (ISC)	M6D	Read codes	
INSIGHT	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
INSIGHT	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
INSIGHT	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
INSIGHT	/	Night Vision System (INVS)	0XB1	Read ECU Information	
INSIGHT	/	Night Vision System (INVS)	0XB1	Read codes	
INSIGHT	/	Night Vision System (INVS)	0XB1	Erase Codes	
INSIGHT	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
INSIGHT	/	Night Vision System (INVS)	0XB1	Read Live Data	
INSIGHT	/	Night Vision System (INVS)	0XB1	Adjustment	
INSIGHT	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
INSIGHT	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
INSIGHT	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
INSIGHT	/	i-SHIFT	0XB0	Read ECU Information	
INSIGHT	/	i-SHIFT	0XB0	Read codes	
INSIGHT	/	i-SHIFT	0XB0	Erase Codes	
INSIGHT	/	i-SHIFT	0XB0	Read Live Data	
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Read codes	
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Self Check	
INSIGHT	/	Keyless Entry Control System (KAS)	M99	History Data	
INSIGHT	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCONT Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
INSIGHT	/	Keyless Entry Control System (KAS)	M99	Registration	
INSIGHT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
INSIGHT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
INSIGHT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
INSIGHT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
INSIGHT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
INSIGHT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
INSIGHT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
INSIGHT	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
INSIGHT	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
INSIGHT	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
INSIGHT	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	

INSIGHT	/	Electronically assisted lane keeping control system (Lk M71	Read Live Data	
INSIGHT	/	Electronically assisted lane keeping control system (Lk M71	Adjustment	STEERING REWRITE
INSIGHT	/	Electronically assisted lane keeping control system (Lk M71	Customize	LDW OFFSET
INSIGHT	/	Electronically assisted lane keeping control system (Lk M71	Customize	GAIN ADJUST
INSIGHT	/	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
INSIGHT	/	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
INSIGHT	/	Management ECU Module (ME) M74	Read ECU Information	
INSIGHT	/	Management ECU Module (ME) M74	Read codes	
INSIGHT	/	Management ECU Module (ME) M74	Erase Codes	
INSIGHT	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
INSIGHT	/	Management ECU Module (ME) M74	Read Live Data	
INSIGHT	/	Multi-view camera and parking assist system (MVC/P) M26	Read ECU Information	
INSIGHT	/	Multi-view camera and parking assist system (MVC/P) M26	Read codes	
INSIGHT	/	Multi-view camera and parking assist system (MVC/P) M26	Erase Codes	
INSIGHT	/	Multi-view camera and parking assist system (MVC/P) M26	Read Live Data	
INSIGHT	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
INSIGHT	/	Multi-view camera system (MVCS) M7A	Read codes	
INSIGHT	/	Multi-view camera system (MVCS) M7A	Erase Codes	
INSIGHT	/	Multi-view camera system (MVCS) M7A	Read Live Data	
INSIGHT	/	Multi-view camera system (MVCS) M7A	Customization	
INSIGHT	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
INSIGHT	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
INSIGHT	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
INSIGHT	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
INSIGHT	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
INSIGHT	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
INSIGHT	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
INSIGHT	/	Power Control Unit (PCU) M83	Read ECU Information	
INSIGHT	/	Power Control Unit (PCU) M83	Read codes	
INSIGHT	/	Power Control Unit (PCU) M83	Erase Codes	
INSIGHT	/	Power Control Unit (PCU) M83	Read Live Data	
INSIGHT	/	Power Control Unit (PCU) M83	Self Check	
INSIGHT	/	Power Control Unit (PCU) M83	History Data	
INSIGHT	/	Engine Control System (PGM-FI) M23	Read ECU Information	
INSIGHT	/	Engine Control System (PGM-FI) M23	Read codes	
INSIGHT	/	Engine Control System (PGM-FI) M23	Erase Codes	
INSIGHT	/	Engine Control System (PGM-FI) M23	Readiness Codes	
INSIGHT	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
INSIGHT	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
INSIGHT	/	Engine Control System (PGM-FI) M23	Read Live Data	
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
INSIGHT	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
INSIGHT	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
INSIGHT	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
INSIGHT	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
INSIGHT	/	Engine Control System (PGM-FI) M23	VIN CHECK	
INSIGHT	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
INSIGHT	/	Engine Control System (PGM-FI) M50	Read ECU Information	
INSIGHT	/	Engine Control System (PGM-FI) M50	Read codes	
INSIGHT	/	Engine Control System (PGM-FI) M50	Erase Codes	
INSIGHT	/	Engine Control System (PGM-FI) M50	Readiness Codes	
INSIGHT	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
INSIGHT	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
INSIGHT	/	Engine Control System (PGM-FI) M50	Read Live Data	
INSIGHT	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
INSIGHT	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
INSIGHT	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
INSIGHT	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
INSIGHT	/	Engine Control System (PGM-FI) M50	VIN CHECK	
INSIGHT	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
INSIGHT	/	Engine Control System (PGM-FI) M86	Read ECU Information	
INSIGHT	/	Engine Control System (PGM-FI) M86	Read codes	
INSIGHT	/	Engine Control System (PGM-FI) M86	Erase Codes	
INSIGHT	/	Engine Control System (PGM-FI) M86	Readiness Codes	
INSIGHT	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
INSIGHT	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
INSIGHT	/	Engine Control System (PGM-FI) M86	Read Live Data	
INSIGHT	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
INSIGHT	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
INSIGHT	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
INSIGHT	/	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
INSIGHT	/	Engine Control System (PGM-FI) M86	Inspection	EGR TEST
INSIGHT	/	Engine Control System (PGM-FI) M86	Inspection	VTEC TEST
INSIGHT	/	Engine Control System (PGM-FI) M86	Inspection	IACV TEST
INSIGHT	/	Engine Control System (PGM-FI) M86	Inspection	O2S TEST
INSIGHT	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
INSIGHT	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK

INSIGHT	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
INSIGHT	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
INSIGHT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
INSIGHT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
INSIGHT	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
INSIGHT	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
INSIGHT	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
INSIGHT	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
INSIGHT	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
INSIGHT	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
INSIGHT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
INSIGHT	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
INSIGHT	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
INSIGHT	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
INSIGHT	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
INSIGHT	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
INSIGHT	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
INSIGHT	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
INSIGHT	/	PSR	M27	Read ECU Information	
INSIGHT	/	PSR	M27	Read codes	
INSIGHT	/	PSR	M27	Erase Codes	
INSIGHT	/	PSR	M27	Read Live Data	
INSIGHT	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
INSIGHT	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
INSIGHT	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
INSIGHT	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
INSIGHT	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
INSIGHT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
INSIGHT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
INSIGHT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
INSIGHT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
INSIGHT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
INSIGHT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
INSIGHT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
INSIGHT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
INSIGHT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
INSIGHT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
INSIGHT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
INSIGHT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
INSIGHT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
INSIGHT	/	Remote starter (RS)	M90	System Check	
INSIGHT	/	Remote starter (RS)	M90	HISTORY	
INSIGHT	/	Remote starter (RS)	M90	Registration	
INSIGHT	/	Seat load cell (SWS)	M6F	Read ECU Information	
INSIGHT	/	Seat load cell (SWS)	M6F	Read codes	
INSIGHT	/	Seat load cell (SWS)	M6F	Erase Codes	
INSIGHT	/	Seat load cell (SWS)	M6F	Read Live Data	
INSIGHT	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
INSIGHT	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
INSIGHT	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
INSIGHT	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
INSIGHT	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
INSIGHT	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
INSIGHT	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
INSIGHT	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
INSIGHT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
INSIGHT	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
INSIGHT	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
INSIGHT	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
INSIGHT	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
INSIGHT	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
INSIGHT	/	Groove track drive unit (SLOT ECU)	M98	History Data	
INSIGHT	/	Groove track drive unit (SLOT ECU)	M98	System Information	
INSIGHT	/	Airbag Control System (SRS)	M9F	Read ECU Information	
INSIGHT	/	Airbag Control System (SRS)	M9F	Read codes	
INSIGHT	/	Airbag Control System (SRS)	M9F	Erase Codes	
INSIGHT	/	Airbag Control System (SRS)	M9F	Read Live Data	
INSIGHT	/	Airbag Control System (SRS)	MA0	Read ECU Information	
INSIGHT	/	Airbag Control System (SRS)	MA0	Read codes	
INSIGHT	/	Airbag Control System (SRS)	MA0	Erase Codes	



INSIGHT	/	Airbag Control System (SRS)	MA0	Read Live Data	
INSIGHT	/	Airbag Control System (SRS)	MA1	Read ECU Information	
INSIGHT	/	Airbag Control System (SRS)	MA1	Read codes	
INSIGHT	/	Airbag Control System (SRS)	MA1	Erase Codes	
INSIGHT	/	Airbag Control System (SRS)	MA1	Read Live Data	
INSIGHT	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
INSIGHT	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
INSIGHT	/	Airbag Control System (SRS)	M2A	Read codes	
INSIGHT	/	Airbag Control System (SRS)	M2A	Erase Codes	
INSIGHT	/	Airbag Control System (SRS)	M2A	Read Live Data	
INSIGHT	/	Airbag Control System (SRS)	M9C	Read ECU Information	
INSIGHT	/	Airbag Control System (SRS)	M9C	Read codes	
INSIGHT	/	Airbag Control System (SRS)	M9C	Erase Codes	
INSIGHT	/	Airbag Control System (SRS)	M9C	Read Live Data	
INSIGHT	/	Airbag Control System (SRS)	M9D	Read ECU Information	
INSIGHT	/	Airbag Control System (SRS)	M9D	Read codes	
INSIGHT	/	Airbag Control System (SRS)	M9D	Erase Codes	
INSIGHT	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
INSIGHT	/	Airbag Control System (SRS)	M9D	Read Live Data	
INSIGHT	/	Airbag Control System (SRS)	M9D	Parameter Information	
INSIGHT	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
INSIGHT	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
INSIGHT	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
INSIGHT	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
INSIGHT	/	Airbag Control System (SRS)	M9D	Function Test	
INSIGHT	/	Airbag Control System (SRS)	M9D	System Information	
INSIGHT	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
INSIGHT	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
INSIGHT	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
INSIGHT	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
INSIGHT	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
INSIGHT	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
INSIGHT	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
INSIGHT	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
INSIGHT	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
INSIGHT	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
INSIGHT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
INSIGHT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
INSIGHT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
INSIGHT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
INSIGHT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
INSIGHT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
INSIGHT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
INSIGHT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
INSIGHT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
INSPIRE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
INSPIRE	/	Four-wheel steering control system (4WS)	M52	Read codes	
INSPIRE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
INSPIRE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
INSPIRE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
INSPIRE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
INSPIRE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
INSPIRE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
INSPIRE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
INSPIRE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
INSPIRE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
INSPIRE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
INSPIRE	/	Automatic shift control system (A/T)	M1E	Read codes	
INSPIRE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
INSPIRE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
INSPIRE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
INSPIRE	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
INSPIRE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
INSPIRE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
INSPIRE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
INSPIRE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
INSPIRE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
INSPIRE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
INSPIRE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
INSPIRE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
INSPIRE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
INSPIRE	/	Automatic shift control system (A/T)	M3B	Read codes	
INSPIRE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
INSPIRE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
INSPIRE	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
INSPIRE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
INSPIRE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
INSPIRE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
INSPIRE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
INSPIRE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
INSPIRE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	

INSPIRE	/	Automatic shift control system (A/T)	M3C	Read codes	
INSPIRE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
INSPIRE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
INSPIRE	/	Automatic shift control system (A/T)	M81	Read codes	
INSPIRE	/	Automatic shift control system (A/T)	M81	Erase Codes	
INSPIRE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
INSPIRE	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
INSPIRE	/	Automatic shift control system (A/T)	M81	Read Live Data	
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
INSPIRE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
INSPIRE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
INSPIRE	/	Automatic shift control system (A/T)	M82	Read codes	
INSPIRE	/	Automatic shift control system (A/T)	M82	Erase Codes	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
INSPIRE	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
INSPIRE	/	Active Engine Control Support System (ACM)	M06	Read codes	
INSPIRE	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
INSPIRE	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
INSPIRE	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
INSPIRE	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
INSPIRE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
INSPIRE	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
INSPIRE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
INSPIRE	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
INSPIRE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
INSPIRE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
INSPIRE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
INSPIRE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
INSPIRE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
INSPIRE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
INSPIRE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
INSPIRE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
INSPIRE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
INSPIRE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
INSPIRE	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
INSPIRE	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
INSPIRE	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
INSPIRE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
INSPIRE	/	Transmission Control System (AT)	M18	Read ECU Information	
INSPIRE	/	Transmission Control System (AT)	M18	Read codes	
INSPIRE	/	Transmission Control System (AT)	M18	Erase Codes	
INSPIRE	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
INSPIRE	/	Transmission Control System (AT)	M18	Read Live Data	
INSPIRE	/	Transmission Control System (AT)	M18	Adjustment	
INSPIRE	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
INSPIRE	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
INSPIRE	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
INSPIRE	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
INSPIRE	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
INSPIRE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
INSPIRE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
INSPIRE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS

INSPIRE	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ALL SENSORS
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
INSPIRE	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
INSPIRE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
INSPIRE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
INSPIRE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
INSPIRE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
INSPIRE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
INSPIRE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
INSPIRE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
INSPIRE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
INSPIRE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
INSPIRE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
INSPIRE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
INSPIRE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
INSPIRE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
INSPIRE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
INSPIRE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
INSPIRE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
INSPIRE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
INSPIRE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
INSPIRE	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
INSPIRE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
INSPIRE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (I1)
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator

INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
INSPIRE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
INSPIRE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
INSPIRE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
INSPIRE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
INSPIRE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
INSPIRE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
INSPIRE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
INSPIRE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
INSPIRE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
INSPIRE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
INSPIRE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
INSPIRE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
INSPIRE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
INSPIRE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
INSPIRE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
INSPIRE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
INSPIRE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
INSPIRE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
INSPIRE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
INSPIRE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Security	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
INSPIRE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
INSPIRE	/	BODY ELECTRICAL/Security	MFF	History Data	
INSPIRE	/	BODY ELECTRICAL/Security	MFF	History Clear	

INSPIRE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
INSPIRE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
INSPIRE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
INSPIRE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
INSPIRE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
INSPIRE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
INSPIRE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
INSPIRE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
INSPIRE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
INSPIRE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
INSPIRE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
INSPIRE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
INSPIRE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
INSPIRE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
INSPIRE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
INSPIRE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
INSPIRE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
INSPIRE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
INSPIRE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
INSPIRE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
INSPIRE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
INSPIRE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
INSPIRE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
INSPIRE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
INSPIRE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
INSPIRE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
INSPIRE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
INSPIRE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
INSPIRE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
INSPIRE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E		Read ECU Information	
INSPIRE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E		Read codes	
INSPIRE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E		Erase Codes	
INSPIRE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E		Read Freeze Frame Data	
INSPIRE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E		Read Live Data	
INSPIRE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E		CMBS (CMS) ACTIVATION HISTORY	
INSPIRE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E		Miscellaneous Test	RADAR AIMING
INSPIRE	/	Collision Mitigation Brake Control System (CMBS/CM! M2E		Miscellaneous Test	CMBS Brake
INSPIRE	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
INSPIRE	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
INSPIRE	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
INSPIRE	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
INSPIRE	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
INSPIRE	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
INSPIRE	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A

INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B	
INSPIRE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P	
INSPIRE	/	DBW	M34	Read ECU Information	
INSPIRE	/	DBW	M34	Read codes	
INSPIRE	/	DBW	M34	Erase Codes	
INSPIRE	/	DBW	M34	Read Freeze Frame Data	
INSPIRE	/	DBW	M34	Read Live Data	
INSPIRE	/	DBW	M34	Inspection	Idle Speed Adjust
INSPIRE	/	DBW	M34	Inspection	Throttle Test
INSPIRE	/	DBW	M34	ECM Reset	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
INSPIRE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
INSPIRE	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
INSPIRE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
INSPIRE	/	Capacitor Control System (EDLC)	M12	Read codes	
INSPIRE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
INSPIRE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
INSPIRE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
INSPIRE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
INSPIRE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
INSPIRE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
INSPIRE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
INSPIRE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
INSPIRE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
INSPIRE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
INSPIRE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
INSPIRE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
INSPIRE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
INSPIRE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
INSPIRE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
INSPIRE	/	Electric Powertrain / IMA	M66	Read ECU Information	
INSPIRE	/	Electric Powertrain / IMA	M66	Read codes	
INSPIRE	/	Electric Powertrain / IMA	M66	Erase Codes	
INSPIRE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
INSPIRE	/	Electric Powertrain / IMA	M66	Read Live Data	
INSPIRE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
INSPIRE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
INSPIRE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
INSPIRE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
INSPIRE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
INSPIRE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
INSPIRE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
INSPIRE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE

INSPIRE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
INSPIRE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
INSPIRE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
INSPIRE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
INSPIRE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
INSPIRE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
INSPIRE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
INSPIRE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
INSPIRE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
INSPIRE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
INSPIRE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
INSPIRE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
INSPIRE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
INSPIRE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
INSPIRE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
INSPIRE	/	New energy battery (EV)	M44	Read ECU Information	
INSPIRE	/	New energy battery (EV)	M44	Read codes	
INSPIRE	/	New energy battery (EV)	M44	Erase Codes	
INSPIRE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
INSPIRE	/	New energy battery (EV)	M44	Read Live Data	
INSPIRE	/	New energy battery (EV)	M44	Inspection	
INSPIRE	/	New energy battery (EV)	M44	Adjustment	
INSPIRE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
INSPIRE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
INSPIRE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
INSPIRE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
INSPIRE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
INSPIRE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
INSPIRE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
INSPIRE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
INSPIRE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
INSPIRE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
INSPIRE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
INSPIRE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
INSPIRE	/	FCW LDW	M4E	Read ECU Information	
INSPIRE	/	FCW LDW	M4E	Read codes	
INSPIRE	/	FCW LDW	M4E	Erase Codes	
INSPIRE	/	FCW LDW	M4E	Read Live Data	
INSPIRE	/	FCW LDW	M4E	Function Test	FCW Drive
INSPIRE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
INSPIRE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
INSPIRE	/	FCW LDW	M4E	Function Test	Indicator Drive
INSPIRE	/	FCW LDW	M4E	Adjustment	
INSPIRE	/	Instrument Display System (GAUGE)	M2C	Read codes	
INSPIRE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
INSPIRE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Read codes	
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Read codes	
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Read codes	
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid

INSPIRE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
INSPIRE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
INSPIRE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Read codes	
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
INSPIRE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
INSPIRE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
INSPIRE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
INSPIRE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
INSPIRE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
INSPIRE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
INSPIRE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
INSPIRE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
INSPIRE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
INSPIRE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
INSPIRE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
INSPIRE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
INSPIRE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
INSPIRE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
INSPIRE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
INSPIRE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
INSPIRE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
INSPIRE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
INSPIRE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
INSPIRE	/	IMA	M63	Read ECU Information	
INSPIRE	/	IMA	M63	Read codes	
INSPIRE	/	IMA	M63	Erase Codes	
INSPIRE	/	IMA	M63	Read Freeze Frame Data	
INSPIRE	/	IMA	M63	Read Live Data	
INSPIRE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
INSPIRE	/	IMA	M63	Adjustment	SOC PRESET
INSPIRE	/	IMA	M64	Read ECU Information	
INSPIRE	/	IMA	M64	Read codes	
INSPIRE	/	IMA	M64	Erase Codes	
INSPIRE	/	IMA	M64	Read Freeze Frame Data	
INSPIRE	/	IMA	M64	Read Live Data	
INSPIRE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
INSPIRE	/	IMA	M64	Adjustment	SOC PRESET
INSPIRE	/	IMA	M65	Read ECU Information	
INSPIRE	/	IMA	M65	Read codes	
INSPIRE	/	IMA	M65	Erase Codes	
INSPIRE	/	IMA	M65	Read Freeze Frame Data	
INSPIRE	/	IMA	M65	Read Live Data	
INSPIRE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
INSPIRE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
INSPIRE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
INSPIRE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
INSPIRE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
INSPIRE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
INSPIRE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
INSPIRE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
INSPIRE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
INSPIRE	/	Night Vision System (INVS)	0XB1	Read codes	
INSPIRE	/	Night Vision System (INVS)	0XB1	Erase Codes	
INSPIRE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
INSPIRE	/	Night Vision System (INVS)	0XB1	Read Live Data	
INSPIRE	/	Night Vision System (INVS)	0XB1	Adjustment	
INSPIRE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
INSPIRE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
INSPIRE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
INSPIRE	/	i-SHIFT	0XB0	Read ECU Information	
INSPIRE	/	i-SHIFT	0XB0	Read codes	
INSPIRE	/	i-SHIFT	0XB0	Erase Codes	
INSPIRE	/	i-SHIFT	0XB0	Read Live Data	
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Read codes	
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Self Check	
INSPIRE	/	Keyless Entry Control System (KAS)	M99	History Data	
INSPIRE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving



INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
INSPIRE	/	Keyless Entry Control System (KAS)	M99	Registration	
INSPIRE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
INSPIRE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
INSPIRE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
INSPIRE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
INSPIRE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
INSPIRE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
INSPIRE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
INSPIRE	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
INSPIRE	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
INSPIRE	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
INSPIRE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
INSPIRE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
INSPIRE	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
INSPIRE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
INSPIRE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
INSPIRE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
INSPIRE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
INSPIRE	/	Management ECU Module (ME)	M74	Read ECU Information	
INSPIRE	/	Management ECU Module (ME)	M74	Read codes	
INSPIRE	/	Management ECU Module (ME)	M74	Erase Codes	
INSPIRE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
INSPIRE	/	Management ECU Module (ME)	M74	Read Live Data	
INSPIRE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
INSPIRE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
INSPIRE	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
INSPIRE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
INSPIRE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
INSPIRE	/	Multi-view camera system (MVCS)	M7A	Read codes	
INSPIRE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
INSPIRE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
INSPIRE	/	Multi-view camera system (MVCS)	M7A	Customization	
INSPIRE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
INSPIRE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
INSPIRE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
INSPIRE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
INSPIRE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
INSPIRE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
INSPIRE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
INSPIRE	/	Power Control Unit (PCU)	M83	Read ECU Information	
INSPIRE	/	Power Control Unit (PCU)	M83	Read codes	
INSPIRE	/	Power Control Unit (PCU)	M83	Erase Codes	
INSPIRE	/	Power Control Unit (PCU)	M83	Read Live Data	
INSPIRE	/	Power Control Unit (PCU)	M83	Self Check	

INSPIRE	/	Power Control Unit (PCU)	M83	History Data	
INSPIRE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
INSPIRE	/	Engine Control System (PGM-FI)	M23	Read codes	
INSPIRE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
INSPIRE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
INSPIRE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
INSPIRE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
INSPIRE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
INSPIRE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
INSPIRE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
INSPIRE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
INSPIRE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
INSPIRE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
INSPIRE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
INSPIRE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
INSPIRE	/	Engine Control System (PGM-FI)	M50	Read codes	
INSPIRE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
INSPIRE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
INSPIRE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
INSPIRE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
INSPIRE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
INSPIRE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
INSPIRE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
INSPIRE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
INSPIRE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
INSPIRE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
INSPIRE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
INSPIRE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
INSPIRE	/	Engine Control System (PGM-FI)	M86	Read codes	
INSPIRE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
INSPIRE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
INSPIRE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
INSPIRE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
INSPIRE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
INSPIRE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
INSPIRE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
INSPIRE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
INSPIRE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
INSPIRE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
INSPIRE	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
INSPIRE	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
INSPIRE	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
INSPIRE	/	PSR	M27	Read ECU Information	
INSPIRE	/	PSR	M27	Read codes	
INSPIRE	/	PSR	M27	Erase Codes	
INSPIRE	/	PSR	M27	Read Live Data	
INSPIRE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
INSPIRE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
INSPIRE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
INSPIRE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
INSPIRE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
INSPIRE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
INSPIRE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
INSPIRE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
INSPIRE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
INSPIRE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement

INSPIRE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
INSPIRE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
INSPIRE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
INSPIRE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
INSPIRE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
INSPIRE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
INSPIRE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
INSPIRE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
INSPIRE	/	Remote starter (RS)	M90	System Check	
INSPIRE	/	Remote starter (RS)	M90	HISTORY	
INSPIRE	/	Remote starter (RS)	M90	Registration	
INSPIRE	/	Seat load cell (SWS)	M6F	Read ECU Information	
INSPIRE	/	Seat load cell (SWS)	M6F	Read codes	
INSPIRE	/	Seat load cell (SWS)	M6F	Erase Codes	
INSPIRE	/	Seat load cell (SWS)	M6F	Read Live Data	
INSPIRE	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
INSPIRE	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
INSPIRE	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
INSPIRE	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
INSPIRE	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
INSPIRE	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
INSPIRE	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
INSPIRE	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
INSPIRE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
INSPIRE	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
INSPIRE	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
INSPIRE	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
INSPIRE	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
INSPIRE	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
INSPIRE	/	Groove track drive unit (SLOT ECU)	M98	History Data	
INSPIRE	/	Groove track drive unit (SLOT ECU)	M98	System Information	
INSPIRE	/	Airbag Control System (SRS)	M9F	Read ECU Information	
INSPIRE	/	Airbag Control System (SRS)	M9F	Read codes	
INSPIRE	/	Airbag Control System (SRS)	M9F	Erase Codes	
INSPIRE	/	Airbag Control System (SRS)	M9F	Read Live Data	
INSPIRE	/	Airbag Control System (SRS)	MA0	Read ECU Information	
INSPIRE	/	Airbag Control System (SRS)	MA0	Read codes	
INSPIRE	/	Airbag Control System (SRS)	MA0	Erase Codes	
INSPIRE	/	Airbag Control System (SRS)	MA0	Read Live Data	
INSPIRE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
INSPIRE	/	Airbag Control System (SRS)	MA1	Read codes	
INSPIRE	/	Airbag Control System (SRS)	MA1	Erase Codes	
INSPIRE	/	Airbag Control System (SRS)	MA1	Read Live Data	
INSPIRE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
INSPIRE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
INSPIRE	/	Airbag Control System (SRS)	M2A	Read codes	
INSPIRE	/	Airbag Control System (SRS)	M2A	Erase Codes	
INSPIRE	/	Airbag Control System (SRS)	M2A	Read Live Data	
INSPIRE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
INSPIRE	/	Airbag Control System (SRS)	M9C	Read codes	
INSPIRE	/	Airbag Control System (SRS)	M9C	Erase Codes	
INSPIRE	/	Airbag Control System (SRS)	M9C	Read Live Data	
INSPIRE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
INSPIRE	/	Airbag Control System (SRS)	M9D	Read codes	
INSPIRE	/	Airbag Control System (SRS)	M9D	Erase Codes	
INSPIRE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
INSPIRE	/	Airbag Control System (SRS)	M9D	Read Live Data	
INSPIRE	/	Airbag Control System (SRS)	M9D	Parameter Information	
INSPIRE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
INSPIRE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
INSPIRE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
INSPIRE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
INSPIRE	/	Airbag Control System (SRS)	M9D	Function Test	
INSPIRE	/	Airbag Control System (SRS)	M9D	System Information	
INSPIRE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
INSPIRE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
INSPIRE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
INSPIRE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
INSPIRE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
INSPIRE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	

INSPIRE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
INSPIRE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
INSPIRE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
INSPIRE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
INSPIRE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
INSPIRE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
INSPIRE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
INSPIRE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
INSPIRE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
INSPIRE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
INSPIRE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
INSPIRE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
INSPIRE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
INSPIRE V6	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
INSPIRE V6	/	Four-wheel steering control system (4WS)	M52	Read codes	
INSPIRE V6	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
INSPIRE V6	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
INSPIRE V6	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
INSPIRE V6	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
INSPIRE V6	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
INSPIRE V6	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
INSPIRE V6	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
INSPIRE V6	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
INSPIRE V6	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	Read codes	
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	Erase Codes	
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	Read Live Data	
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
INSPIRE V6	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
INSPIRE V6	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
INSPIRE V6	/	Automatic shift control system (A/T)	M3B	Read codes	
INSPIRE V6	/	Automatic shift control system (A/T)	M3B	Erase Codes	
INSPIRE V6	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
INSPIRE V6	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
INSPIRE V6	/	Automatic shift control system (A/T)	M3B	Read Live Data	
INSPIRE V6	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
INSPIRE V6	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
INSPIRE V6	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
INSPIRE V6	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
INSPIRE V6	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
INSPIRE V6	/	Automatic shift control system (A/T)	M3C	Read codes	
INSPIRE V6	/	Automatic shift control system (A/T)	M3C	Erase Codes	
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Read ECU Information	
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Read codes	
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Erase Codes	
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
INSPIRE V6	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Read Live Data	
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
INSPIRE V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
INSPIRE V6	/	Automatic shift control system (A/T)	M82	Read ECU Information	
INSPIRE V6	/	Automatic shift control system (A/T)	M82	Read codes	
INSPIRE V6	/	Automatic shift control system (A/T)	M82	Erase Codes	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2

INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	LIGHT CHECK
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
INSPIRE V6	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
INSPIRE V6	/	Active Engine Control Support System (ACM) M06	Read codes	
INSPIRE V6	/	Active Engine Control Support System (ACM) M06	Erase Codes	
INSPIRE V6	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
INSPIRE V6	/	Active Engine Control Support System (ACM) M06	Read Live Data	
INSPIRE V6	/	Active Engine Control Support System (ACM) M06	ACM Reset	
INSPIRE V6	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
INSPIRE V6	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
INSPIRE V6	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
INSPIRE V6	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
INSPIRE V6	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
INSPIRE V6	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
INSPIRE V6	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
INSPIRE V6	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
INSPIRE V6	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
INSPIRE V6	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
INSPIRE V6	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
INSPIRE V6	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
INSPIRE V6	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
INSPIRE V6	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
INSPIRE V6	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
INSPIRE V6	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
INSPIRE V6	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
INSPIRE V6	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
INSPIRE V6	/	Transmission Control System (AT) M18	Read ECU Information	
INSPIRE V6	/	Transmission Control System (AT) M18	Read codes	
INSPIRE V6	/	Transmission Control System (AT) M18	Erase Codes	
INSPIRE V6	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
INSPIRE V6	/	Transmission Control System (AT) M18	Read Live Data	
INSPIRE V6	/	Transmission Control System (AT) M18	Adjustment	
INSPIRE V6	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
INSPIRE V6	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
INSPIRE V6	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
INSPIRE V6	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
INSPIRE V6	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
INSPIRE V6	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
INSPIRE V6	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
INSPIRE V6	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
INSPIRE V6	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
INSPIRE V6	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
INSPIRE V6	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
INSPIRE V6	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
INSPIRE V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
INSPIRE V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation

INSPIRE V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
INSPIRE V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Reset Operation
INSPIRE V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Returning Operation
INSPIRE V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Automatic Returning Distance
INSPIRE V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Manual Returning Time
INSPIRE V6	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Reset to default
INSPIRE V6	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
INSPIRE V6	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
INSPIRE V6	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
INSPIRE V6	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
INSPIRE V6	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
INSPIRE V6	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
INSPIRE V6	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
INSPIRE V6	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
INSPIRE V6	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
INSPIRE V6	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
INSPIRE V6	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
INSPIRE V6	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
INSPIRE V6	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
INSPIRE V6	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
INSPIRE V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
INSPIRE V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
INSPIRE V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command

INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
INSPIRE V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
INSPIRE V6	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
INSPIRE V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
INSPIRE V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
INSPIRE V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
INSPIRE V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
INSPIRE V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
INSPIRE V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
INSPIRE V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
INSPIRE V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
INSPIRE V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
INSPIRE V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
INSPIRE V6	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
INSPIRE V6	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Security	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
INSPIRE V6	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
INSPIRE V6	/	BODY ELECTRICAL/Security	MFF	History Data	
INSPIRE V6	/	BODY ELECTRICAL/Security	MFF	History Clear	
INSPIRE V6	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
INSPIRE V6	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
INSPIRE V6	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
INSPIRE V6	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
INSPIRE V6	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
INSPIRE V6	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
INSPIRE V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
INSPIRE V6	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
INSPIRE V6	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
INSPIRE V6	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
INSPIRE V6	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
INSPIRE V6	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
INSPIRE V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
INSPIRE V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
INSPIRE V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
INSPIRE V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
INSPIRE V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
INSPIRE V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid

INSPIRE V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
INSPIRE V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
INSPIRE V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
INSPIRE V6	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
INSPIRE V6	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
INSPIRE V6	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
INSPIRE V6	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
INSPIRE V6	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
INSPIRE V6	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
INSPIRE V6	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
INSPIRE V6	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
INSPIRE V6	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read ECU Information	
INSPIRE V6	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read codes	
INSPIRE V6	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Erase Codes	
INSPIRE V6	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Freeze Frame Data	
INSPIRE V6	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Live Data	
INSPIRE V6	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	CMBS (CMS) ACTIVATION HISTORY	
INSPIRE V6	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	RADAR AIMING
INSPIRE V6	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	CMBS Brake
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
INSPIRE V6	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
INSPIRE V6	/	DBW	M34	Read ECU Information	
INSPIRE V6	/	DBW	M34	Read codes	
INSPIRE V6	/	DBW	M34	Erase Codes	
INSPIRE V6	/	DBW	M34	Read Freeze Frame Data	
INSPIRE V6	/	DBW	M34	Read Live Data	
INSPIRE V6	/	DBW	M34	Inspection	Idle Speed Adjust
INSPIRE V6	/	DBW	M34	Inspection	Throttle Test
INSPIRE V6	/	DBW	M34	ECM Reset	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'



INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
INSPIRE V6	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
INSPIRE V6	/	Capacitor Control System (EDLC)	M12	Read codes	
INSPIRE V6	/	Capacitor Control System (EDLC)	M12	Erase Codes	
INSPIRE V6	/	Capacitor Control System (EDLC)	M12	Read Live Data	
INSPIRE V6	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
INSPIRE V6	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
INSPIRE V6	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
INSPIRE V6	/	Electronic Brake Control System (EPB)	M1F	Read codes	
INSPIRE V6	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
INSPIRE V6	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
INSPIRE V6	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
INSPIRE V6	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
INSPIRE V6	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
INSPIRE V6	/	Electronic Brake Control System (EPB)	M3E	Read codes	
INSPIRE V6	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
INSPIRE V6	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
INSPIRE V6	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
INSPIRE V6	/	Electric Powertrain / IMA	M66	Read ECU Information	
INSPIRE V6	/	Electric Powertrain / IMA	M66	Read codes	
INSPIRE V6	/	Electric Powertrain / IMA	M66	Erase Codes	
INSPIRE V6	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
INSPIRE V6	/	Electric Powertrain / IMA	M66	Read Live Data	
INSPIRE V6	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
INSPIRE V6	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
INSPIRE V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
INSPIRE V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
INSPIRE V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
INSPIRE V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
INSPIRE V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
INSPIRE V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
INSPIRE V6	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
INSPIRE V6	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
INSPIRE V6	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
INSPIRE V6	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
INSPIRE V6	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
INSPIRE V6	/	New energy battery (EV)	M44	Read ECU Information	
INSPIRE V6	/	New energy battery (EV)	M44	Read codes	
INSPIRE V6	/	New energy battery (EV)	M44	Erase Codes	

INSPIRE V6	/	New energy battery (EV)	M44	Read Freeze Frame Data	
INSPIRE V6	/	New energy battery (EV)	M44	Read Live Data	
INSPIRE V6	/	New energy battery (EV)	M44	Inspection	
INSPIRE V6	/	New energy battery (EV)	M44	Adjustment	
INSPIRE V6	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
INSPIRE V6	/	Electronic vacuum pump (EVPS)	M21	Read codes	
INSPIRE V6	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
INSPIRE V6	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
INSPIRE V6	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
INSPIRE V6	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
INSPIRE V6	/	Electronic vacuum pump (EVPS)	M22	Read codes	
INSPIRE V6	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
INSPIRE V6	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
INSPIRE V6	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
INSPIRE V6	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
INSPIRE V6	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
INSPIRE V6	/	FCW LDW	M4E	Read ECU Information	
INSPIRE V6	/	FCW LDW	M4E	Read codes	
INSPIRE V6	/	FCW LDW	M4E	Erase Codes	
INSPIRE V6	/	FCW LDW	M4E	Read Live Data	
INSPIRE V6	/	FCW LDW	M4E	Function Test	FCW Drive
INSPIRE V6	/	FCW LDW	M4E	Function Test	Left side lane departure warning
INSPIRE V6	/	FCW LDW	M4E	Function Test	Right side lane departure warning
INSPIRE V6	/	FCW LDW	M4E	Function Test	Indicator Drive
INSPIRE V6	/	FCW LDW	M4E	Adjustment	
INSPIRE V6	/	Instrument Display System (GAUGE)	M2C	Read codes	
INSPIRE V6	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
INSPIRE V6	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Read codes	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Read codes	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Read codes	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
INSPIRE V6	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Read codes	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
INSPIRE V6	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
INSPIRE V6	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
INSPIRE V6	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
INSPIRE V6	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
INSPIRE V6	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
INSPIRE V6	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	

INSPIRE V6	/	Intelligent Parking Control System (SPS)	M9B	Customize	
INSPIRE V6	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
INSPIRE V6	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
INSPIRE V6	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
INSPIRE V6	/	Hydraulic booster control system (HBS)	M5F	Read codes	
INSPIRE V6	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
INSPIRE V6	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
INSPIRE V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
INSPIRE V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
INSPIRE V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
INSPIRE V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
INSPIRE V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
INSPIRE V6	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
INSPIRE V6	/	IMA	M63	Read ECU Information	
INSPIRE V6	/	IMA	M63	Read codes	
INSPIRE V6	/	IMA	M63	Erase Codes	
INSPIRE V6	/	IMA	M63	Read Freeze Frame Data	
INSPIRE V6	/	IMA	M63	Read Live Data	
INSPIRE V6	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
INSPIRE V6	/	IMA	M63	Adjustment	SOC PRESET
INSPIRE V6	/	IMA	M64	Read ECU Information	
INSPIRE V6	/	IMA	M64	Read codes	
INSPIRE V6	/	IMA	M64	Erase Codes	
INSPIRE V6	/	IMA	M64	Read Freeze Frame Data	
INSPIRE V6	/	IMA	M64	Read Live Data	
INSPIRE V6	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
INSPIRE V6	/	IMA	M64	Adjustment	SOC PRESET
INSPIRE V6	/	IMA	M65	Read ECU Information	
INSPIRE V6	/	IMA	M65	Read codes	
INSPIRE V6	/	IMA	M65	Erase Codes	
INSPIRE V6	/	IMA	M65	Read Freeze Frame Data	
INSPIRE V6	/	IMA	M65	Read Live Data	
INSPIRE V6	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
INSPIRE V6	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
INSPIRE V6	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
INSPIRE V6	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
INSPIRE V6	/	Intake Sounder Control System (ISC)	M6D	Read codes	
INSPIRE V6	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
INSPIRE V6	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
INSPIRE V6	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
INSPIRE V6	/	Night Vision System (INVS)	0XB1	Read ECU Information	
INSPIRE V6	/	Night Vision System (INVS)	0XB1	Read codes	
INSPIRE V6	/	Night Vision System (INVS)	0XB1	Erase Codes	
INSPIRE V6	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
INSPIRE V6	/	Night Vision System (INVS)	0XB1	Read Live Data	
INSPIRE V6	/	Night Vision System (INVS)	0XB1	Adjustment	
INSPIRE V6	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
INSPIRE V6	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
INSPIRE V6	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
INSPIRE V6	/	i-SHIFT	0XB0	Read ECU Information	
INSPIRE V6	/	i-SHIFT	0XB0	Read codes	
INSPIRE V6	/	i-SHIFT	0XB0	Erase Codes	
INSPIRE V6	/	i-SHIFT	0XB0	Read Live Data	
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Read codes	
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Self Check	
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	History Data	
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output

INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
INSPIRE V6	/	Keyless Entry Control System (KAS)	M99	Registration	
INSPIRE V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
INSPIRE V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
INSPIRE V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
INSPIRE V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
INSPIRE V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
INSPIRE V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
INSPIRE V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
INSPIRE V6	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
INSPIRE V6	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
INSPIRE V6	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
INSPIRE V6	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
INSPIRE V6	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
INSPIRE V6	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
INSPIRE V6	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
INSPIRE V6	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
INSPIRE V6	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
INSPIRE V6	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
INSPIRE V6	/	Management ECU Module (ME)	M74	Read ECU Information	
INSPIRE V6	/	Management ECU Module (ME)	M74	Read codes	
INSPIRE V6	/	Management ECU Module (ME)	M74	Erase Codes	
INSPIRE V6	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
INSPIRE V6	/	Management ECU Module (ME)	M74	Read Live Data	
INSPIRE V6	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
INSPIRE V6	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
INSPIRE V6	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
INSPIRE V6	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
INSPIRE V6	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
INSPIRE V6	/	Multi-view camera system (MVCS)	M7A	Read codes	
INSPIRE V6	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
INSPIRE V6	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
INSPIRE V6	/	Multi-view camera system (MVCS)	M7A	Customization	
INSPIRE V6	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
INSPIRE V6	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
INSPIRE V6	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
INSPIRE V6	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
INSPIRE V6	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
INSPIRE V6	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
INSPIRE V6	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
INSPIRE V6	/	Power Control Unit (PCU)	M83	Read ECU Information	
INSPIRE V6	/	Power Control Unit (PCU)	M83	Read codes	
INSPIRE V6	/	Power Control Unit (PCU)	M83	Erase Codes	
INSPIRE V6	/	Power Control Unit (PCU)	M83	Read Live Data	
INSPIRE V6	/	Power Control Unit (PCU)	M83	Self Check	
INSPIRE V6	/	Power Control Unit (PCU)	M83	History Data	
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Read codes	
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Erase Codes	
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Read Live Data	
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
INSPIRE V6	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
INSPIRE V6	/	Engine Control System (PGM-FI)	M50	Read ECU Information	

INSPIRE V6	/	Engine Control System (PGM-FI)	M50	Read codes	
INSPIRE V6	/	Engine Control System (PGM-FI)	M50	Erase Codes	
INSPIRE V6	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
INSPIRE V6	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
INSPIRE V6	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
INSPIRE V6	/	Engine Control System (PGM-FI)	M50	Read Live Data	
INSPIRE V6	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
INSPIRE V6	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
INSPIRE V6	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
INSPIRE V6	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
INSPIRE V6	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Read codes	
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Erase Codes	
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Read Live Data	
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
INSPIRE V6	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
INSPIRE V6	/	Four-wheel precision steering control system (PAWSC) M96		Read codes	
INSPIRE V6	/	Four-wheel precision steering control system (PAWSC) M96		Erase Codes	
INSPIRE V6	/	Four-wheel precision steering control system (PAWSC) M96		Read Live Data	
INSPIRE V6	/	PSR	M27	Read ECU Information	
INSPIRE V6	/	PSR	M27	Read codes	
INSPIRE V6	/	PSR	M27	Erase Codes	
INSPIRE V6	/	PSR	M27	Read Live Data	
INSPIRE V6	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
INSPIRE V6	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
INSPIRE V6	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
INSPIRE V6	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
INSPIRE V6	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
INSPIRE V6	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
INSPIRE V6	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
INSPIRE V6	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
INSPIRE V6	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
INSPIRE V6	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
INSPIRE V6	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
INSPIRE V6	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
INSPIRE V6	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
INSPIRE V6	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
INSPIRE V6	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
INSPIRE V6	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
INSPIRE V6	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
INSPIRE V6	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
INSPIRE V6	/	Remote starter (RS)	M90	System Check	
INSPIRE V6	/	Remote starter (RS)	M90	HISTORY	
INSPIRE V6	/	Remote starter (RS)	M90	Registration	
INSPIRE V6	/	Seat load cell (SWS)	M6F	Read ECU Information	
INSPIRE V6	/	Seat load cell (SWS)	M6F	Read codes	
INSPIRE V6	/	Seat load cell (SWS)	M6F	Erase Codes	
INSPIRE V6	/	Seat load cell (SWS)	M6F	Read Live Data	
INSPIRE V6	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
INSPIRE V6	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
INSPIRE V6	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
INSPIRE V6	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
INSPIRE V6	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
INSPIRE V6	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
INSPIRE V6	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
INSPIRE V6	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	

INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
INSPIRE V6	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
INSPIRE V6	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
INSPIRE V6	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
INSPIRE V6	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
INSPIRE V6	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
INSPIRE V6	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
INSPIRE V6	/	Groove track drive unit (SLOT ECU)	M98	History Data	
INSPIRE V6	/	Groove track drive unit (SLOT ECU)	M98	System Information	
INSPIRE V6	/	Airbag Control System (SRS)	M9F	Read ECU Information	
INSPIRE V6	/	Airbag Control System (SRS)	M9F	Read codes	
INSPIRE V6	/	Airbag Control System (SRS)	M9F	Erase Codes	
INSPIRE V6	/	Airbag Control System (SRS)	M9F	Read Live Data	
INSPIRE V6	/	Airbag Control System (SRS)	MA0	Read ECU Information	
INSPIRE V6	/	Airbag Control System (SRS)	MA0	Read codes	
INSPIRE V6	/	Airbag Control System (SRS)	MA0	Erase Codes	
INSPIRE V6	/	Airbag Control System (SRS)	MA0	Read Live Data	
INSPIRE V6	/	Airbag Control System (SRS)	MA1	Read ECU Information	
INSPIRE V6	/	Airbag Control System (SRS)	MA1	Read codes	
INSPIRE V6	/	Airbag Control System (SRS)	MA1	Erase Codes	
INSPIRE V6	/	Airbag Control System (SRS)	MA1	Read Live Data	
INSPIRE V6	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
INSPIRE V6	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
INSPIRE V6	/	Airbag Control System (SRS)	M2A	Read codes	
INSPIRE V6	/	Airbag Control System (SRS)	M2A	Erase Codes	
INSPIRE V6	/	Airbag Control System (SRS)	M2A	Read Live Data	
INSPIRE V6	/	Airbag Control System (SRS)	M9C	Read ECU Information	
INSPIRE V6	/	Airbag Control System (SRS)	M9C	Read codes	
INSPIRE V6	/	Airbag Control System (SRS)	M9C	Erase Codes	
INSPIRE V6	/	Airbag Control System (SRS)	M9C	Read Live Data	
INSPIRE V6	/	Airbag Control System (SRS)	M9D	Read ECU Information	
INSPIRE V6	/	Airbag Control System (SRS)	M9D	Read codes	
INSPIRE V6	/	Airbag Control System (SRS)	M9D	Erase Codes	
INSPIRE V6	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
INSPIRE V6	/	Airbag Control System (SRS)	M9D	Read Live Data	
INSPIRE V6	/	Airbag Control System (SRS)	M9D	Parameter Information	
INSPIRE V6	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
INSPIRE V6	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
INSPIRE V6	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
INSPIRE V6	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pre-tensioner For CMBS (CMS)
INSPIRE V6	/	Airbag Control System (SRS)	M9D	Function Test	
INSPIRE V6	/	Airbag Control System (SRS)	M9D	System Information	
INSPIRE V6	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
INSPIRE V6	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
INSPIRE V6	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
INSPIRE V6	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
INSPIRE V6	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
INSPIRE V6	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
INSPIRE V6	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
INSPIRE V6	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
INSPIRE V6	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
INSPIRE V6	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
INSPIRE V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
INSPIRE V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
INSPIRE V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
INSPIRE V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
INSPIRE V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
INSPIRE V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
INSPIRE V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
INSPIRE V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
INSPIRE V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
INTEGRA	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
INTEGRA	/	Four-wheel steering control system (4WS)	M52	Read codes	
INTEGRA	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
INTEGRA	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
INTEGRA	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
INTEGRA	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
INTEGRA	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT

INTEGRA	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
INTEGRA	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
INTEGRA	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
INTEGRA	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
INTEGRA	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
INTEGRA	/	Automatic shift control system (A/T)	M1E	Read codes	
INTEGRA	/	Automatic shift control system (A/T)	M1E	Erase Codes	
INTEGRA	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
INTEGRA	/	Automatic shift control system (A/T)	M1E	Read Live Data	
INTEGRA	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
INTEGRA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
INTEGRA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
INTEGRA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
INTEGRA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
INTEGRA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
INTEGRA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
INTEGRA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
INTEGRA	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
INTEGRA	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
INTEGRA	/	Automatic shift control system (A/T)	M3B	Read codes	
INTEGRA	/	Automatic shift control system (A/T)	M3B	Erase Codes	
INTEGRA	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
INTEGRA	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
INTEGRA	/	Automatic shift control system (A/T)	M3B	Read Live Data	
INTEGRA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
INTEGRA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
INTEGRA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
INTEGRA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
INTEGRA	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
INTEGRA	/	Automatic shift control system (A/T)	M3C	Read codes	
INTEGRA	/	Automatic shift control system (A/T)	M3C	Erase Codes	
INTEGRA	/	Automatic shift control system (A/T)	M81	Read ECU Information	
INTEGRA	/	Automatic shift control system (A/T)	M81	Read codes	
INTEGRA	/	Automatic shift control system (A/T)	M81	Erase Codes	
INTEGRA	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
INTEGRA	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
INTEGRA	/	Automatic shift control system (A/T)	M81	Read Live Data	
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
INTEGRA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
INTEGRA	/	Automatic shift control system (A/T)	M82	Read ECU Information	
INTEGRA	/	Automatic shift control system (A/T)	M82	Read codes	
INTEGRA	/	Automatic shift control system (A/T)	M82	Erase Codes	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read codes	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Erase Codes	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Freeze Frame Data	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Live Data	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	Throttle Opening Angle Test
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 1
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 2
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	LIGHT CHECK
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BUZZER CHECK
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read ECU Information	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read codes	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Erase Codes	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Freeze Frame Data	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Live Data	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Adjustment	RADAR AIMING
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	BRAKE ACTUATOR 3
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ACC relay malfunction.
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INDICATOR LIGHT
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INFORMATION DISPLAY
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ALARM BUZZER
INTEGRA	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
INTEGRA	/	Active Engine Control Support System (ACM)	M06	Read codes	
INTEGRA	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
INTEGRA	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
INTEGRA	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
INTEGRA	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
INTEGRA	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
INTEGRA	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
INTEGRA	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
INTEGRA	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
INTEGRA	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
INTEGRA	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
INTEGRA	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
INTEGRA	/	Active / Automatic Shock Absorber Control System (A	MOD	Read ECU Information	
INTEGRA	/	Active / Automatic Shock Absorber Control System (A	MOD	Read codes	
INTEGRA	/	Active / Automatic Shock Absorber Control System (A	MOD	Erase Codes	
INTEGRA	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Freeze Frame Data	
INTEGRA	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Live Data	
INTEGRA	/	Active / Automatic Shock Absorber Control System (A	MOD	Function Test	Damper Force Operation Test

INTEGRA	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
INTEGRA	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
INTEGRA	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
INTEGRA	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
INTEGRA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
INTEGRA	/	Transmission Control System (AT) M18	Read ECU Information	
INTEGRA	/	Transmission Control System (AT) M18	Read codes	
INTEGRA	/	Transmission Control System (AT) M18	Erase Codes	
INTEGRA	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
INTEGRA	/	Transmission Control System (AT) M18	Read Live Data	
INTEGRA	/	Transmission Control System (AT) M18	Adjustment	
INTEGRA	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
INTEGRA	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
INTEGRA	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
INTEGRA	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
INTEGRA	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
INTEGRA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
INTEGRA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
INTEGRA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
INTEGRA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
INTEGRA	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
INTEGRA	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
INTEGRA	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
INTEGRA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
INTEGRA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
INTEGRA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
INTEGRA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
INTEGRA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
INTEGRA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
INTEGRA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
INTEGRA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
INTEGRA	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
INTEGRA	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
INTEGRA	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
INTEGRA	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
INTEGRA	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
INTEGRA	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
INTEGRA	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
INTEGRA	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
INTEGRA	/	BODY ELECTRICAL/e-Call MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
INTEGRA	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
INTEGRA	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
INTEGRA	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	
INTEGRA	/	BODY ELECTRICAL/Gauges MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Gauges MFF	Erase Codes	



INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
INTEGRA	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
INTEGRA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
INTEGRA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
INTEGRA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
INTEGRA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
INTEGRA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
INTEGRA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
INTEGRA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
INTEGRA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
INTEGRA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
INTEGRA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
INTEGRA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
INTEGRA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
INTEGRA	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
INTEGRA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
INTEGRA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
INTEGRA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	

INTEGRA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
INTEGRA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
INTEGRA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
INTEGRA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Security	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
INTEGRA	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
INTEGRA	/	BODY ELECTRICAL/Security	MFF	History Data	
INTEGRA	/	BODY ELECTRICAL/Security	MFF	History Clear	
INTEGRA	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
INTEGRA	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
INTEGRA	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
INTEGRA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
INTEGRA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
INTEGRA	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
INTEGRA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
INTEGRA	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
INTEGRA	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
INTEGRA	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
INTEGRA	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
INTEGRA	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
INTEGRA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
INTEGRA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
INTEGRA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
INTEGRA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
INTEGRA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
INTEGRA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
INTEGRA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
INTEGRA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
INTEGRA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
INTEGRA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
INTEGRA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
INTEGRA	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
INTEGRA	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
INTEGRA	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
INTEGRA	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
INTEGRA	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
INTEGRA	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
INTEGRA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
INTEGRA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
INTEGRA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
INTEGRA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
INTEGRA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
INTEGRA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
INTEGRA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
INTEGRA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
INTEGRA	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	

INTEGRA	/	Promise Automatic Transmission Control System (CVT M1B)	Read codes	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M1B)	Erase Codes	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M1B)	Read Freeze Frame Data	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M1B)	Read Live Data	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M1B)	ECMPCMC Reset	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Lock Solenoid Test
INTEGRA	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Solenoid Tests
INTEGRA	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Electrical Oil Pump Activation
INTEGRA	/	Promise Automatic Transmission Control System (CVT M33)	Read ECU Information	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M33)	Read codes	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M33)	Erase Codes	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M33)	Read Freeze Frame Data	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M33)	Read Live Data	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M33)	ECMPCMC Reset	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid
INTEGRA	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)
INTEGRA	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)
INTEGRA	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	ECMPCMC Reset	
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B
INTEGRA	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P
INTEGRA	/	DBW M34	Read ECU Information	
INTEGRA	/	DBW M34	Read codes	
INTEGRA	/	DBW M34	Erase Codes	
INTEGRA	/	DBW M34	Read Freeze Frame Data	
INTEGRA	/	DBW M34	Read Live Data	
INTEGRA	/	DBW M34	Inspection	Idle Speed Adjust
INTEGRA	/	DBW M34	Inspection	Throttle Test
INTEGRA	/	DBW M34	ECM Reset	
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
INTEGRA	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
INTEGRA	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
INTEGRA	/	Diesel Engine Control System (DIESEL) M37	Read codes	
INTEGRA	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
INTEGRA	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
INTEGRA	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
INTEGRA	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
INTEGRA	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
INTEGRA	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
INTEGRA	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Read codes	
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
INTEGRA	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	

INTEGRA	/	Capacitor Control System (EDLC)	M12	Read codes	
INTEGRA	/	Capacitor Control System (EDLC)	M12	Erase Codes	
INTEGRA	/	Capacitor Control System (EDLC)	M12	Read Live Data	
INTEGRA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
INTEGRA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
INTEGRA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
INTEGRA	/	Electronic Brake Control System (EPB)	M1F	Read codes	
INTEGRA	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
INTEGRA	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
INTEGRA	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
INTEGRA	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
INTEGRA	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
INTEGRA	/	Electronic Brake Control System (EPB)	M3E	Read codes	
INTEGRA	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
INTEGRA	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
INTEGRA	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
INTEGRA	/	Electric Powertrain / IMA	M66	Read ECU Information	
INTEGRA	/	Electric Powertrain / IMA	M66	Read codes	
INTEGRA	/	Electric Powertrain / IMA	M66	Erase Codes	
INTEGRA	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
INTEGRA	/	Electric Powertrain / IMA	M66	Read Live Data	
INTEGRA	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
INTEGRA	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
INTEGRA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
INTEGRA	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
INTEGRA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
INTEGRA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
INTEGRA	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
INTEGRA	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
INTEGRA	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
INTEGRA	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
INTEGRA	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
INTEGRA	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
INTEGRA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
INTEGRA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
INTEGRA	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
INTEGRA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
INTEGRA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
INTEGRA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
INTEGRA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
INTEGRA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
INTEGRA	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
INTEGRA	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
INTEGRA	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
INTEGRA	/	New energy battery (EV)	M44	Read ECU Information	
INTEGRA	/	New energy battery (EV)	M44	Read codes	
INTEGRA	/	New energy battery (EV)	M44	Erase Codes	
INTEGRA	/	New energy battery (EV)	M44	Read Freeze Frame Data	
INTEGRA	/	New energy battery (EV)	M44	Read Live Data	
INTEGRA	/	New energy battery (EV)	M44	Inspection	
INTEGRA	/	New energy battery (EV)	M44	Adjustment	
INTEGRA	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
INTEGRA	/	Electronic vacuum pump (EVPS)	M21	Read codes	
INTEGRA	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
INTEGRA	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
INTEGRA	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
INTEGRA	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
INTEGRA	/	Electronic vacuum pump (EVPS)	M22	Read codes	
INTEGRA	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
INTEGRA	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
INTEGRA	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
INTEGRA	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
INTEGRA	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
INTEGRA	/	FCW LDW	M4E	Read ECU Information	
INTEGRA	/	FCW LDW	M4E	Read codes	
INTEGRA	/	FCW LDW	M4E	Erase Codes	
INTEGRA	/	FCW LDW	M4E	Read Live Data	
INTEGRA	/	FCW LDW	M4E	Function Test	FCW Drive
INTEGRA	/	FCW LDW	M4E	Function Test	Left side lane departure warning
INTEGRA	/	FCW LDW	M4E	Function Test	Right side lane departure warning
INTEGRA	/	FCW LDW	M4E	Function Test	Indicator Drive
INTEGRA	/	FCW LDW	M4E	Adjustment	
INTEGRA	/	Instrument Display System (GAUGE)	M2C	Read codes	
INTEGRA	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
INTEGRA	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Read codes	
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	

INTEGRA	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Read codes	
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Read codes	
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
INTEGRA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
INTEGRA	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Read codes	
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
INTEGRA	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
INTEGRA	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
INTEGRA	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
INTEGRA	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
INTEGRA	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
INTEGRA	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
INTEGRA	/	Intelligent Parking Control System (SPS)	M9B	Customize	
INTEGRA	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
INTEGRA	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
INTEGRA	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
INTEGRA	/	Hydraulic booster control system (HBS)	M5F	Read codes	
INTEGRA	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
INTEGRA	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
INTEGRA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
INTEGRA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
INTEGRA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
INTEGRA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
INTEGRA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
INTEGRA	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
INTEGRA	/	IMA	M63	Read ECU Information	
INTEGRA	/	IMA	M63	Read codes	
INTEGRA	/	IMA	M63	Erase Codes	
INTEGRA	/	IMA	M63	Read Freeze Frame Data	
INTEGRA	/	IMA	M63	Read Live Data	
INTEGRA	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
INTEGRA	/	IMA	M63	Adjustment	SOC PRESET
INTEGRA	/	IMA	M64	Read ECU Information	
INTEGRA	/	IMA	M64	Read codes	
INTEGRA	/	IMA	M64	Erase Codes	
INTEGRA	/	IMA	M64	Read Freeze Frame Data	
INTEGRA	/	IMA	M64	Read Live Data	
INTEGRA	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
INTEGRA	/	IMA	M64	Adjustment	SOC PRESET
INTEGRA	/	IMA	M65	Read ECU Information	
INTEGRA	/	IMA	M65	Read codes	
INTEGRA	/	IMA	M65	Erase Codes	
INTEGRA	/	IMA	M65	Read Freeze Frame Data	
INTEGRA	/	IMA	M65	Read Live Data	

INTEGRA	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
INTEGRA	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
INTEGRA	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
INTEGRA	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
INTEGRA	/	Intake Sounder Control System (ISC)	M6D	Read codes	
INTEGRA	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
INTEGRA	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
INTEGRA	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
INTEGRA	/	Night Vision System (INVS)	0XB1	Read ECU Information	
INTEGRA	/	Night Vision System (INVS)	0XB1	Read codes	
INTEGRA	/	Night Vision System (INVS)	0XB1	Erase Codes	
INTEGRA	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
INTEGRA	/	Night Vision System (INVS)	0XB1	Read Live Data	
INTEGRA	/	Night Vision System (INVS)	0XB1	Adjustment	
INTEGRA	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
INTEGRA	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
INTEGRA	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
INTEGRA	/	i-SHIFT	0XB0	Read ECU Information	
INTEGRA	/	i-SHIFT	0XB0	Read codes	
INTEGRA	/	i-SHIFT	0XB0	Erase Codes	
INTEGRA	/	i-SHIFT	0XB0	Read Live Data	
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Read codes	
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Self Check	
INTEGRA	/	Keyless Entry Control System (KAS)	M99	History Data	
INTEGRA	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCONT Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
INTEGRA	/	Keyless Entry Control System (KAS)	M99	Registration	
INTEGRA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
INTEGRA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
INTEGRA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
INTEGRA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
INTEGRA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
INTEGRA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
INTEGRA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
INTEGRA	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
INTEGRA	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
INTEGRA	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
INTEGRA	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
INTEGRA	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
INTEGRA	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
INTEGRA	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET

INTEGRA	/	Electronically assisted lane keeping control system (Lk M71	Customize	GAIN ADJUST
INTEGRA	/	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
INTEGRA	/	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
INTEGRA	/	Management ECU Module (ME) M74	Read ECU Information	
INTEGRA	/	Management ECU Module (ME) M74	Read codes	
INTEGRA	/	Management ECU Module (ME) M74	Erase Codes	
INTEGRA	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
INTEGRA	/	Management ECU Module (ME) M74	Read Live Data	
INTEGRA	/	Multi-view camera and parking assist system (MVC/P, M26	Read ECU Information	
INTEGRA	/	Multi-view camera and parking assist system (MVC/P, M26	Read codes	
INTEGRA	/	Multi-view camera and parking assist system (MVC/P, M26	Erase Codes	
INTEGRA	/	Multi-view camera and parking assist system (MVC/P, M26	Read Live Data	
INTEGRA	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
INTEGRA	/	Multi-view camera system (MVCS) M7A	Read codes	
INTEGRA	/	Multi-view camera system (MVCS) M7A	Erase Codes	
INTEGRA	/	Multi-view camera system (MVCS) M7A	Read Live Data	
INTEGRA	/	Multi-view camera system (MVCS) M7A	Customization	
INTEGRA	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
INTEGRA	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
INTEGRA	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
INTEGRA	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
INTEGRA	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
INTEGRA	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
INTEGRA	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
INTEGRA	/	Power Control Unit (PCU) M83	Read ECU Information	
INTEGRA	/	Power Control Unit (PCU) M83	Read codes	
INTEGRA	/	Power Control Unit (PCU) M83	Erase Codes	
INTEGRA	/	Power Control Unit (PCU) M83	Read Live Data	
INTEGRA	/	Power Control Unit (PCU) M83	Self Check	
INTEGRA	/	Power Control Unit (PCU) M83	History Data	
INTEGRA	/	Engine Control System (PGM-FI) M23	Read ECU Information	
INTEGRA	/	Engine Control System (PGM-FI) M23	Read codes	
INTEGRA	/	Engine Control System (PGM-FI) M23	Erase Codes	
INTEGRA	/	Engine Control System (PGM-FI) M23	Readiness Codes	
INTEGRA	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
INTEGRA	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
INTEGRA	/	Engine Control System (PGM-FI) M23	Read Live Data	
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
INTEGRA	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
INTEGRA	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
INTEGRA	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
INTEGRA	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
INTEGRA	/	Engine Control System (PGM-FI) M23	VIN CHECK	
INTEGRA	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
INTEGRA	/	Engine Control System (PGM-FI) M50	Read ECU Information	
INTEGRA	/	Engine Control System (PGM-FI) M50	Read codes	
INTEGRA	/	Engine Control System (PGM-FI) M50	Erase Codes	
INTEGRA	/	Engine Control System (PGM-FI) M50	Readiness Codes	
INTEGRA	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
INTEGRA	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
INTEGRA	/	Engine Control System (PGM-FI) M50	Read Live Data	
INTEGRA	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
INTEGRA	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
INTEGRA	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
INTEGRA	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
INTEGRA	/	Engine Control System (PGM-FI) M50	VIN CHECK	
INTEGRA	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
INTEGRA	/	Engine Control System (PGM-FI) M86	Read ECU Information	
INTEGRA	/	Engine Control System (PGM-FI) M86	Read codes	
INTEGRA	/	Engine Control System (PGM-FI) M86	Erase Codes	
INTEGRA	/	Engine Control System (PGM-FI) M86	Readiness Codes	
INTEGRA	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
INTEGRA	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
INTEGRA	/	Engine Control System (PGM-FI) M86	Read Live Data	
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection	EGR TEST
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection	VTEC TEST
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection	IACV TEST
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection	O2S TEST
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection	RADIATOR FAN
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection	A/C CLUTCH
INTEGRA	/	Engine Control System (PGM-FI) M86	Inspection	FUEL PUMP ON

INTEGRA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
INTEGRA	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
INTEGRA	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
INTEGRA	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
INTEGRA	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
INTEGRA	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
INTEGRA	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
INTEGRA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
INTEGRA	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
INTEGRA	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
INTEGRA	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
INTEGRA	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
INTEGRA	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
INTEGRA	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
INTEGRA	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
INTEGRA	/	PSR	M27	Read ECU Information	
INTEGRA	/	PSR	M27	Read codes	
INTEGRA	/	PSR	M27	Erase Codes	
INTEGRA	/	PSR	M27	Read Live Data	
INTEGRA	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
INTEGRA	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
INTEGRA	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
INTEGRA	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
INTEGRA	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
INTEGRA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
INTEGRA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
INTEGRA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
INTEGRA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
INTEGRA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
INTEGRA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
INTEGRA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
INTEGRA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
INTEGRA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
INTEGRA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
INTEGRA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
INTEGRA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
INTEGRA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
INTEGRA	/	Remote starter (RS)	M90	System Check	
INTEGRA	/	Remote starter (RS)	M90	HISTORY	
INTEGRA	/	Remote starter (RS)	M90	Registration	
INTEGRA	/	Seat load cell (SWS)	M6F	Read ECU Information	
INTEGRA	/	Seat load cell (SWS)	M6F	Read codes	
INTEGRA	/	Seat load cell (SWS)	M6F	Erase Codes	
INTEGRA	/	Seat load cell (SWS)	M6F	Read Live Data	
INTEGRA	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
INTEGRA	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
INTEGRA	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
INTEGRA	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
INTEGRA	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
INTEGRA	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
INTEGRA	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
INTEGRA	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
INTEGRA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
INTEGRA	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
INTEGRA	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
INTEGRA	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
INTEGRA	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
INTEGRA	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
INTEGRA	/	Groove track drive unit (SLOT ECU)	M98	History Data	
INTEGRA	/	Groove track drive unit (SLOT ECU)	M98	System Information	
INTEGRA	/	Airbag Control System (SRS)	M9F	Read ECU Information	
INTEGRA	/	Airbag Control System (SRS)	M9F	Read codes	
INTEGRA	/	Airbag Control System (SRS)	M9F	Erase Codes	
INTEGRA	/	Airbag Control System (SRS)	M9F	Read Live Data	
INTEGRA	/	Airbag Control System (SRS)	MA0	Read ECU Information	
INTEGRA	/	Airbag Control System (SRS)	MA0	Read codes	
INTEGRA	/	Airbag Control System (SRS)	MA0	Erase Codes	
INTEGRA	/	Airbag Control System (SRS)	MA0	Read Live Data	
INTEGRA	/	Airbag Control System (SRS)	MA1	Read ECU Information	
INTEGRA	/	Airbag Control System (SRS)	MA1	Read codes	



INTEGRA	/	Airbag Control System (SRS)	MA1	Erase Codes	
INTEGRA	/	Airbag Control System (SRS)	MA1	Read Live Data	
INTEGRA	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
INTEGRA	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
INTEGRA	/	Airbag Control System (SRS)	M2A	Read codes	
INTEGRA	/	Airbag Control System (SRS)	M2A	Erase Codes	
INTEGRA	/	Airbag Control System (SRS)	M2A	Read Live Data	
INTEGRA	/	Airbag Control System (SRS)	M9C	Read ECU Information	
INTEGRA	/	Airbag Control System (SRS)	M9C	Read codes	
INTEGRA	/	Airbag Control System (SRS)	M9C	Erase Codes	
INTEGRA	/	Airbag Control System (SRS)	M9C	Read Live Data	
INTEGRA	/	Airbag Control System (SRS)	M9D	Read ECU Information	
INTEGRA	/	Airbag Control System (SRS)	M9D	Read codes	
INTEGRA	/	Airbag Control System (SRS)	M9D	Erase Codes	
INTEGRA	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
INTEGRA	/	Airbag Control System (SRS)	M9D	Read Live Data	
INTEGRA	/	Airbag Control System (SRS)	M9D	Parameter Information	
INTEGRA	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
INTEGRA	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
INTEGRA	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
INTEGRA	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pre-tensioner For CMBS (CMS)
INTEGRA	/	Airbag Control System (SRS)	M9D	Function Test	
INTEGRA	/	Airbag Control System (SRS)	M9D	System Information	
INTEGRA	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
INTEGRA	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
INTEGRA	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
INTEGRA	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
INTEGRA	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
INTEGRA	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
INTEGRA	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
INTEGRA	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
INTEGRA	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
INTEGRA	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
INTEGRA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
INTEGRA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
INTEGRA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
INTEGRA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
INTEGRA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
INTEGRA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
INTEGRA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
INTEGRA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
INTEGRA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
INTEGRA SJ	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
INTEGRA SJ	/	Four-wheel steering control system (4WS)	M52	Read codes	
INTEGRA SJ	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
INTEGRA SJ	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
INTEGRA SJ	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
INTEGRA SJ	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
INTEGRA SJ	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
INTEGRA SJ	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
INTEGRA SJ	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
INTEGRA SJ	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
INTEGRA SJ	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	Read codes	
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	Erase Codes	
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	Read Live Data	
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
INTEGRA SJ	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
INTEGRA SJ	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
INTEGRA SJ	/	Automatic shift control system (A/T)	M3B	Read codes	
INTEGRA SJ	/	Automatic shift control system (A/T)	M3B	Erase Codes	
INTEGRA SJ	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
INTEGRA SJ	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
INTEGRA SJ	/	Automatic shift control system (A/T)	M3B	Read Live Data	
INTEGRA SJ	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
INTEGRA SJ	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
INTEGRA SJ	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
INTEGRA SJ	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
INTEGRA SJ	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
INTEGRA SJ	/	Automatic shift control system (A/T)	M3C	Read codes	
INTEGRA SJ	/	Automatic shift control system (A/T)	M3C	Erase Codes	
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Read ECU Information	

INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Read codes	
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Erase Codes	
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Read Live Data	
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
INTEGRA SJ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
INTEGRA SJ	/	Automatic shift control system (A/T)	M82	Read ECU Information	
INTEGRA SJ	/	Automatic shift control system (A/T)	M82	Read codes	
INTEGRA SJ	/	Automatic shift control system (A/T)	M82	Erase Codes	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
INTEGRA SJ	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
INTEGRA SJ	/	Active Engine Control Support System (ACM)	M06	Read codes	
INTEGRA SJ	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
INTEGRA SJ	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
INTEGRA SJ	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
INTEGRA SJ	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
INTEGRA SJ	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
INTEGRA SJ	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
INTEGRA SJ	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
INTEGRA SJ	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
INTEGRA SJ	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
INTEGRA SJ	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
INTEGRA SJ	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
INTEGRA SJ	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
INTEGRA SJ	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
INTEGRA SJ	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
INTEGRA SJ	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
INTEGRA SJ	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
INTEGRA SJ	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
INTEGRA SJ	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
INTEGRA SJ	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
INTEGRA SJ	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
INTEGRA SJ	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
INTEGRA SJ	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
INTEGRA SJ	/	Transmission Control System (AT)	M18	Read ECU Information	
INTEGRA SJ	/	Transmission Control System (AT)	M18	Read codes	
INTEGRA SJ	/	Transmission Control System (AT)	M18	Erase Codes	
INTEGRA SJ	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
INTEGRA SJ	/	Transmission Control System (AT)	M18	Read Live Data	
INTEGRA SJ	/	Transmission Control System (AT)	M18	Adjustment	
INTEGRA SJ	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
INTEGRA SJ	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
INTEGRA SJ	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
INTEGRA SJ	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
INTEGRA SJ	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
INTEGRA SJ	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
INTEGRA SJ	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
INTEGRA SJ	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
INTEGRA SJ	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	

INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
INTEGRA SJ	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
INTEGRA SJ	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
INTEGRA SJ	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
INTEGRA SJ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
INTEGRA SJ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
INTEGRA SJ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
INTEGRA SJ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
INTEGRA SJ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
INTEGRA SJ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
INTEGRA SJ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
INTEGRA SJ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
INTEGRA SJ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
INTEGRA SJ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
INTEGRA SJ	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
INTEGRA SJ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
INTEGRA SJ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
INTEGRA SJ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
INTEGRA SJ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
INTEGRA SJ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
INTEGRA SJ	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
INTEGRA SJ	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
INTEGRA SJ	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime

INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
INTEGRA SJ	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
INTEGRA SJ	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
INTEGRA SJ	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
INTEGRA SJ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
INTEGRA SJ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
INTEGRA SJ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
INTEGRA SJ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
INTEGRA SJ	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
INTEGRA SJ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
INTEGRA SJ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
INTEGRA SJ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
INTEGRA SJ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
INTEGRA SJ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
INTEGRA SJ	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
INTEGRA SJ	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
INTEGRA SJ	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
INTEGRA SJ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
INTEGRA SJ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
INTEGRA SJ	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
INTEGRA SJ	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Security	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
INTEGRA SJ	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
INTEGRA SJ	/	BODY ELECTRICAL/Security	MFF	History Data	
INTEGRA SJ	/	BODY ELECTRICAL/Security	MFF	History Clear	
INTEGRA SJ	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	

INTEGRA SJ	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
INTEGRA SJ	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
INTEGRA SJ	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
INTEGRA SJ	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
INTEGRA SJ	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
INTEGRA SJ	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
INTEGRA SJ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
INTEGRA SJ	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
INTEGRA SJ	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
INTEGRA SJ	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
INTEGRA SJ	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
INTEGRA SJ	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
INTEGRA SJ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
INTEGRA SJ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
INTEGRA SJ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
INTEGRA SJ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
INTEGRA SJ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
INTEGRA SJ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
INTEGRA SJ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
INTEGRA SJ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
INTEGRA SJ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
INTEGRA SJ	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
INTEGRA SJ	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
INTEGRA SJ	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
INTEGRA SJ	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
INTEGRA SJ	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
INTEGRA SJ	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
INTEGRA SJ	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
INTEGRA SJ	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
INTEGRA SJ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
INTEGRA SJ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
INTEGRA SJ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
INTEGRA SJ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
INTEGRA SJ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
INTEGRA SJ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
INTEGRA SJ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
INTEGRA SJ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
INTEGRA SJ	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
INTEGRA SJ	/	DBW	M34	Read ECU Information	

INTEGRA SJ	/	DBW	M34	Read codes	
INTEGRA SJ	/	DBW	M34	Erase Codes	
INTEGRA SJ	/	DBW	M34	Read Freeze Frame Data	
INTEGRA SJ	/	DBW	M34	Read Live Data	
INTEGRA SJ	/	DBW	M34	Inspection	Idle Speed Adjust
INTEGRA SJ	/	DBW	M34	Inspection	Throttle Test
INTEGRA SJ	/	DBW	M34	ECM Reset	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
INTEGRA SJ	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
INTEGRA SJ	/	Capacitor Control System (EDLC)	M12	Read codes	
INTEGRA SJ	/	Capacitor Control System (EDLC)	M12	Erase Codes	
INTEGRA SJ	/	Capacitor Control System (EDLC)	M12	Read Live Data	
INTEGRA SJ	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
INTEGRA SJ	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
INTEGRA SJ	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
INTEGRA SJ	/	Electronic Brake Control System (EPB)	M1F	Read codes	
INTEGRA SJ	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
INTEGRA SJ	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
INTEGRA SJ	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
INTEGRA SJ	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
INTEGRA SJ	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
INTEGRA SJ	/	Electronic Brake Control System (EPB)	M3E	Read codes	
INTEGRA SJ	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
INTEGRA SJ	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
INTEGRA SJ	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
INTEGRA SJ	/	Electric Powertrain / IMA	M66	Read ECU Information	
INTEGRA SJ	/	Electric Powertrain / IMA	M66	Read codes	
INTEGRA SJ	/	Electric Powertrain / IMA	M66	Erase Codes	
INTEGRA SJ	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
INTEGRA SJ	/	Electric Powertrain / IMA	M66	Read Live Data	
INTEGRA SJ	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
INTEGRA SJ	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
INTEGRA SJ	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
INTEGRA SJ	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
INTEGRA SJ	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
INTEGRA SJ	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
INTEGRA SJ	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
INTEGRA SJ	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
INTEGRA SJ	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
INTEGRA SJ	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
INTEGRA SJ	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	

INTEGRA SJ	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
INTEGRA SJ	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
INTEGRA SJ	/	New energy battery (EV)	M44	Read ECU Information	
INTEGRA SJ	/	New energy battery (EV)	M44	Read codes	
INTEGRA SJ	/	New energy battery (EV)	M44	Erase Codes	
INTEGRA SJ	/	New energy battery (EV)	M44	Read Freeze Frame Data	
INTEGRA SJ	/	New energy battery (EV)	M44	Read Live Data	
INTEGRA SJ	/	New energy battery (EV)	M44	Inspection	
INTEGRA SJ	/	New energy battery (EV)	M44	Adjustment	
INTEGRA SJ	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
INTEGRA SJ	/	Electronic vacuum pump (EVPS)	M21	Read codes	
INTEGRA SJ	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
INTEGRA SJ	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
INTEGRA SJ	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
INTEGRA SJ	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
INTEGRA SJ	/	Electronic vacuum pump (EVPS)	M22	Read codes	
INTEGRA SJ	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
INTEGRA SJ	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
INTEGRA SJ	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
INTEGRA SJ	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
INTEGRA SJ	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
INTEGRA SJ	/	FCW LDW	M4E	Read ECU Information	
INTEGRA SJ	/	FCW LDW	M4E	Read codes	
INTEGRA SJ	/	FCW LDW	M4E	Erase Codes	
INTEGRA SJ	/	FCW LDW	M4E	Read Live Data	
INTEGRA SJ	/	FCW LDW	M4E	Function Test	FCW Drive
INTEGRA SJ	/	FCW LDW	M4E	Function Test	Left side lane departure warning
INTEGRA SJ	/	FCW LDW	M4E	Function Test	Right side lane departure warning
INTEGRA SJ	/	FCW LDW	M4E	Function Test	Indicator Drive
INTEGRA SJ	/	FCW LDW	M4E	Adjustment	
INTEGRA SJ	/	Instrument Display System (GAUGE)	M2C	Read codes	
INTEGRA SJ	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
INTEGRA SJ	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Read codes	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Read codes	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Read codes	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA

INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Read codes	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
INTEGRA SJ	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
INTEGRA SJ	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
INTEGRA SJ	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
INTEGRA SJ	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
INTEGRA SJ	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
INTEGRA SJ	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
INTEGRA SJ	/	Intelligent Parking Control System (SPS)	M9B	Customize	
INTEGRA SJ	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
INTEGRA SJ	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
INTEGRA SJ	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
INTEGRA SJ	/	Hydraulic booster control system (HBS)	M5F	Read codes	
INTEGRA SJ	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
INTEGRA SJ	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
INTEGRA SJ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
INTEGRA SJ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
INTEGRA SJ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
INTEGRA SJ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
INTEGRA SJ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
INTEGRA SJ	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
INTEGRA SJ	/	IMA	M63	Read ECU Information	
INTEGRA SJ	/	IMA	M63	Read codes	
INTEGRA SJ	/	IMA	M63	Erase Codes	
INTEGRA SJ	/	IMA	M63	Read Freeze Frame Data	
INTEGRA SJ	/	IMA	M63	Read Live Data	
INTEGRA SJ	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
INTEGRA SJ	/	IMA	M63	Adjustment	SOC PRESET
INTEGRA SJ	/	IMA	M64	Read ECU Information	
INTEGRA SJ	/	IMA	M64	Read codes	
INTEGRA SJ	/	IMA	M64	Erase Codes	
INTEGRA SJ	/	IMA	M64	Read Freeze Frame Data	
INTEGRA SJ	/	IMA	M64	Read Live Data	
INTEGRA SJ	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
INTEGRA SJ	/	IMA	M64	Adjustment	SOC PRESET
INTEGRA SJ	/	IMA	M65	Read ECU Information	
INTEGRA SJ	/	IMA	M65	Read codes	
INTEGRA SJ	/	IMA	M65	Erase Codes	
INTEGRA SJ	/	IMA	M65	Read Freeze Frame Data	
INTEGRA SJ	/	IMA	M65	Read Live Data	
INTEGRA SJ	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
INTEGRA SJ	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
INTEGRA SJ	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
INTEGRA SJ	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
INTEGRA SJ	/	Intake Sounder Control System (ISC)	M6D	Read codes	
INTEGRA SJ	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
INTEGRA SJ	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
INTEGRA SJ	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
INTEGRA SJ	/	Night Vision System (INVS)	0XB1	Read ECU Information	
INTEGRA SJ	/	Night Vision System (INVS)	0XB1	Read codes	
INTEGRA SJ	/	Night Vision System (INVS)	0XB1	Erase Codes	
INTEGRA SJ	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
INTEGRA SJ	/	Night Vision System (INVS)	0XB1	Read Live Data	
INTEGRA SJ	/	Night Vision System (INVS)	0XB1	Adjustment	
INTEGRA SJ	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
INTEGRA SJ	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
INTEGRA SJ	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
INTEGRA SJ	/	i-SHIFT	0XB0	Read ECU Information	
INTEGRA SJ	/	i-SHIFT	0XB0	Read codes	
INTEGRA SJ	/	i-SHIFT	0XB0	Erase Codes	
INTEGRA SJ	/	i-SHIFT	0XB0	Read Live Data	
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Read codes	
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Self Check	
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	History Data	
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication



INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
INTEGRA SJ	/	Keyless Entry Control System (KAS)	M99	Registration	
INTEGRA SJ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
INTEGRA SJ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
INTEGRA SJ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
INTEGRA SJ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
INTEGRA SJ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
INTEGRA SJ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
INTEGRA SJ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
INTEGRA SJ	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
INTEGRA SJ	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
INTEGRA SJ	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
INTEGRA SJ	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
INTEGRA SJ	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
INTEGRA SJ	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
INTEGRA SJ	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
INTEGRA SJ	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
INTEGRA SJ	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
INTEGRA SJ	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
INTEGRA SJ	/	Management ECU Module (ME)	M74	Read ECU Information	
INTEGRA SJ	/	Management ECU Module (ME)	M74	Read codes	
INTEGRA SJ	/	Management ECU Module (ME)	M74	Erase Codes	
INTEGRA SJ	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
INTEGRA SJ	/	Management ECU Module (ME)	M74	Read Live Data	
INTEGRA SJ	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
INTEGRA SJ	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
INTEGRA SJ	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
INTEGRA SJ	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
INTEGRA SJ	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
INTEGRA SJ	/	Multi-view camera system (MVCS)	M7A	Read codes	
INTEGRA SJ	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
INTEGRA SJ	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
INTEGRA SJ	/	Multi-view camera system (MVCS)	M7A	Customization	
INTEGRA SJ	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
INTEGRA SJ	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
INTEGRA SJ	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
INTEGRA SJ	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
INTEGRA SJ	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
INTEGRA SJ	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
INTEGRA SJ	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
INTEGRA SJ	/	Power Control Unit (PCU)	M83	Read ECU Information	
INTEGRA SJ	/	Power Control Unit (PCU)	M83	Read codes	
INTEGRA SJ	/	Power Control Unit (PCU)	M83	Erase Codes	
INTEGRA SJ	/	Power Control Unit (PCU)	M83	Read Live Data	
INTEGRA SJ	/	Power Control Unit (PCU)	M83	Self Check	
INTEGRA SJ	/	Power Control Unit (PCU)	M83	History Data	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Read codes	

INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Erase Codes	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Read Live Data	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	Read codes	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	Erase Codes	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	Read Live Data	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC Low V/T CHECK
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Read codes	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Erase Codes	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Read Live Data	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
INTEGRA SJ	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
INTEGRA SJ	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
INTEGRA SJ	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
INTEGRA SJ	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
INTEGRA SJ	/	PSR	M27	Read ECU Information	
INTEGRA SJ	/	PSR	M27	Read codes	
INTEGRA SJ	/	PSR	M27	Erase Codes	
INTEGRA SJ	/	PSR	M27	Read Live Data	
INTEGRA SJ	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
INTEGRA SJ	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
INTEGRA SJ	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
INTEGRA SJ	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
INTEGRA SJ	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
INTEGRA SJ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
INTEGRA SJ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
INTEGRA SJ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
INTEGRA SJ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
INTEGRA SJ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
INTEGRA SJ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
INTEGRA SJ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
INTEGRA SJ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	

INTEGRA SJ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
INTEGRA SJ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
INTEGRA SJ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
INTEGRA SJ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
INTEGRA SJ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
INTEGRA SJ	/	Remote starter (RS)	M90	System Check	
INTEGRA SJ	/	Remote starter (RS)	M90	HISTORY	
INTEGRA SJ	/	Remote starter (RS)	M90	Registration	
INTEGRA SJ	/	Seat load cell (SWS)	M6F	Read ECU Information	
INTEGRA SJ	/	Seat load cell (SWS)	M6F	Read codes	
INTEGRA SJ	/	Seat load cell (SWS)	M6F	Erase Codes	
INTEGRA SJ	/	Seat load cell (SWS)	M6F	Read Live Data	
INTEGRA SJ	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
INTEGRA SJ	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
INTEGRA SJ	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
INTEGRA SJ	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
INTEGRA SJ	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
INTEGRA SJ	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
INTEGRA SJ	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
INTEGRA SJ	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
INTEGRA SJ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
INTEGRA SJ	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
INTEGRA SJ	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
INTEGRA SJ	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
INTEGRA SJ	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
INTEGRA SJ	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
INTEGRA SJ	/	Groove track drive unit (SLOT ECU)	M98	History Data	
INTEGRA SJ	/	Groove track drive unit (SLOT ECU)	M98	System Information	
INTEGRA SJ	/	Airbag Control System (SRS)	M9F	Read ECU Information	
INTEGRA SJ	/	Airbag Control System (SRS)	M9F	Read codes	
INTEGRA SJ	/	Airbag Control System (SRS)	M9F	Erase Codes	
INTEGRA SJ	/	Airbag Control System (SRS)	M9F	Read Live Data	
INTEGRA SJ	/	Airbag Control System (SRS)	MA0	Read ECU Information	
INTEGRA SJ	/	Airbag Control System (SRS)	MA0	Read codes	
INTEGRA SJ	/	Airbag Control System (SRS)	MA0	Erase Codes	
INTEGRA SJ	/	Airbag Control System (SRS)	MA0	Read Live Data	
INTEGRA SJ	/	Airbag Control System (SRS)	MA1	Read ECU Information	
INTEGRA SJ	/	Airbag Control System (SRS)	MA1	Read codes	
INTEGRA SJ	/	Airbag Control System (SRS)	MA1	Erase Codes	
INTEGRA SJ	/	Airbag Control System (SRS)	MA1	Read Live Data	
INTEGRA SJ	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
INTEGRA SJ	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
INTEGRA SJ	/	Airbag Control System (SRS)	M2A	Read codes	
INTEGRA SJ	/	Airbag Control System (SRS)	M2A	Erase Codes	
INTEGRA SJ	/	Airbag Control System (SRS)	M2A	Read Live Data	
INTEGRA SJ	/	Airbag Control System (SRS)	M9C	Read ECU Information	
INTEGRA SJ	/	Airbag Control System (SRS)	M9C	Read codes	
INTEGRA SJ	/	Airbag Control System (SRS)	M9C	Erase Codes	
INTEGRA SJ	/	Airbag Control System (SRS)	M9C	Read Live Data	
INTEGRA SJ	/	Airbag Control System (SRS)	M9D	Read ECU Information	
INTEGRA SJ	/	Airbag Control System (SRS)	M9D	Read codes	
INTEGRA SJ	/	Airbag Control System (SRS)	M9D	Erase Codes	
INTEGRA SJ	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
INTEGRA SJ	/	Airbag Control System (SRS)	M9D	Read Live Data	
INTEGRA SJ	/	Airbag Control System (SRS)	M9D	Parameter Information	
INTEGRA SJ	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
INTEGRA SJ	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
INTEGRA SJ	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
INTEGRA SJ	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
INTEGRA SJ	/	Airbag Control System (SRS)	M9D	Function Test	
INTEGRA SJ	/	Airbag Control System (SRS)	M9D	System Information	
INTEGRA SJ	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
INTEGRA SJ	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
INTEGRA SJ	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
INTEGRA SJ	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
INTEGRA SJ	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
INTEGRA SJ	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
INTEGRA SJ	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
INTEGRA SJ	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
INTEGRA SJ	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	

INTEGRA SJ	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
INTEGRA SJ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
INTEGRA SJ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
INTEGRA SJ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
INTEGRA SJ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
INTEGRA SJ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
INTEGRA SJ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
INTEGRA SJ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
INTEGRA SJ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
INTEGRA SJ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
JADE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
JADE	/	Four-wheel steering control system (4WS)	M52	Read codes	
JADE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
JADE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
JADE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
JADE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
JADE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
JADE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
JADE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
JADE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
JADE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
JADE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
JADE	/	Automatic shift control system (A/T)	M1E	Read codes	
JADE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
JADE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
JADE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
JADE	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
JADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
JADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
JADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
JADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
JADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
JADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
JADE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
JADE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
JADE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
JADE	/	Automatic shift control system (A/T)	M3B	Read codes	
JADE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
JADE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
JADE	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
JADE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
JADE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
JADE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
JADE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
JADE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
JADE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
JADE	/	Automatic shift control system (A/T)	M3C	Read codes	
JADE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
JADE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
JADE	/	Automatic shift control system (A/T)	M81	Read codes	
JADE	/	Automatic shift control system (A/T)	M81	Erase Codes	
JADE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
JADE	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
JADE	/	Automatic shift control system (A/T)	M81	Read Live Data	
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
JADE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
JADE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
JADE	/	Automatic shift control system (A/T)	M82	Read codes	
JADE	/	Automatic shift control system (A/T)	M82	Erase Codes	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	

JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
JADE	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
JADE	/	Active Engine Control Support System (ACM) M06	Read codes	
JADE	/	Active Engine Control Support System (ACM) M06	Erase Codes	
JADE	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
JADE	/	Active Engine Control Support System (ACM) M06	Read Live Data	
JADE	/	Active Engine Control Support System (ACM) M06	ACM Reset	
JADE	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
JADE	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
JADE	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
JADE	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
JADE	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
JADE	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
JADE	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
JADE	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
JADE	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
JADE	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
JADE	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
JADE	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
JADE	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
JADE	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
JADE	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
JADE	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
JADE	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
JADE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
JADE	/	Transmission Control System (AT) M18	Read ECU Information	
JADE	/	Transmission Control System (AT) M18	Read codes	
JADE	/	Transmission Control System (AT) M18	Erase Codes	
JADE	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
JADE	/	Transmission Control System (AT) M18	Read Live Data	
JADE	/	Transmission Control System (AT) M18	Adjustment	
JADE	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
JADE	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
JADE	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
JADE	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
JADE	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
JADE	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
JADE	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
JADE	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
JADE	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
JADE	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
JADE	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
JADE	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
JADE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
JADE	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
JADE	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
JADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
JADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
JADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
JADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
JADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
JADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation

JADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
JADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
JADE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
JADE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
JADE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
JADE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
JADE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
JADE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
JADE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
JADE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
JADE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
JADE	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
JADE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
JADE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
JADE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
JADE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
JADE	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
JADE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
JADE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
JADE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
JADE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
JADE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
JADE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
JADE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
JADE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
JADE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
JADE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
JADE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
JADE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command

JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
JADE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
JADE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
JADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
JADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
JADE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
JADE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
JADE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
JADE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
JADE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
JADE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
JADE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
JADE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
JADE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
JADE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Security	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
JADE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
JADE	/	BODY ELECTRICAL/Security	MFF	History Data	
JADE	/	BODY ELECTRICAL/Security	MFF	History Clear	
JADE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
JADE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
JADE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
JADE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
JADE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
JADE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
JADE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
JADE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
JADE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
JADE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
JADE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
JADE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
JADE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
JADE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
JADE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
JADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
JADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
JADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
JADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
JADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
JADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
JADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
JADE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	

JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
JADE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
JADE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
JADE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
JADE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
JADE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
JADE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
JADE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
JADE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
JADE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
JADE	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read ECU Information	
JADE	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read codes	
JADE	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Erase Codes	
JADE	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Freeze Frame Data	
JADE	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Live Data	
JADE	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	CMBS (CMS) ACTIVATION HISTORY	
JADE	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	RADAR AIMING
JADE	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	CMBS Brake
JADE	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
JADE	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
JADE	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
JADE	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
JADE	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
JADE	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
JADE	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
JADE	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
JADE	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
JADE	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
JADE	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
JADE	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
JADE	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
JADE	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
JADE	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
JADE	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
JADE	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
JADE	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
JADE	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
JADE	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
JADE	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
JADE	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
JADE	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
JADE	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
JADE	/	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
JADE	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
JADE	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
JADE	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
JADE	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
JADE	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
JADE	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
JADE	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
JADE	/	DBW	M34	Read ECU Information	
JADE	/	DBW	M34	Read codes	
JADE	/	DBW	M34	Erase Codes	
JADE	/	DBW	M34	Read Freeze Frame Data	
JADE	/	DBW	M34	Read Live Data	
JADE	/	DBW	M34	Inspection	Idle Speed Adjust
JADE	/	DBW	M34	Inspection	Throttle Test
JADE	/	DBW	M34	ECM Reset	
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
JADE	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning



JADE	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
JADE	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
JADE	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
JADE	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
JADE	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
JADE	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
JADE	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
JADE	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
JADE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
JADE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
JADE	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
JADE	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
JADE	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
JADE	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
JADE	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
JADE	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
JADE	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
JADE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
JADE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
JADE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
JADE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
JADE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
JADE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
JADE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
JADE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
JADE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
JADE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
JADE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
JADE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
JADE	/	Capacitor Control System (EDLC)	M12	Read codes	
JADE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
JADE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
JADE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
JADE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
JADE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
JADE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
JADE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
JADE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
JADE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
JADE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
JADE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
JADE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
JADE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
JADE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
JADE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
JADE	/	Electric Powertrain / IMA	M66	Read ECU Information	
JADE	/	Electric Powertrain / IMA	M66	Read codes	
JADE	/	Electric Powertrain / IMA	M66	Erase Codes	
JADE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
JADE	/	Electric Powertrain / IMA	M66	Read Live Data	
JADE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
JADE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
JADE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
JADE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
JADE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
JADE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
JADE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
JADE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
JADE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
JADE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
JADE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
JADE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
JADE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
JADE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
JADE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
JADE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
JADE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
JADE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
JADE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
JADE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
JADE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
JADE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
JADE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
JADE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
JADE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
JADE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
JADE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
JADE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
JADE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
JADE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
JADE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
JADE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
JADE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
JADE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
JADE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
JADE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
JADE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
JADE	/	New energy battery (EV)	M44	Read ECU Information	
JADE	/	New energy battery (EV)	M44	Read codes	
JADE	/	New energy battery (EV)	M44	Erase Codes	
JADE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
JADE	/	New energy battery (EV)	M44	Read Live Data	
JADE	/	New energy battery (EV)	M44	Inspection	

JADE	/	New energy battery (EV)	M44	Adjustment	
JADE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
JADE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
JADE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
JADE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
JADE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
JADE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
JADE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
JADE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
JADE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
JADE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
JADE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
JADE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
JADE	/	FCW LDW	M4E	Read ECU Information	
JADE	/	FCW LDW	M4E	Read codes	
JADE	/	FCW LDW	M4E	Erase Codes	
JADE	/	FCW LDW	M4E	Read Live Data	
JADE	/	FCW LDW	M4E	Function Test	FCW Drive
JADE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
JADE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
JADE	/	FCW LDW	M4E	Function Test	Indicator Drive
JADE	/	FCW LDW	M4E	Adjustment	
JADE	/	Instrument Display System (GAUGE)	M2C	Read codes	
JADE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
JADE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
JADE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
JADE	/	Anti-lock brake control system (ABS)	M01	Read codes	
JADE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
JADE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
JADE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
JADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
JADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
JADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
JADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
JADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
JADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
JADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
JADE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
JADE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
JADE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
JADE	/	Anti-lock brake control system (ABS)	M02	Read codes	
JADE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
JADE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
JADE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
JADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
JADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
JADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
JADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
JADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
JADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
JADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
JADE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
JADE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
JADE	/	Anti-lock brake control system (ABS)	M03	Read codes	
JADE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
JADE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
JADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
JADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
JADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
JADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
JADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
JADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
JADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
JADE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
JADE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
JADE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
JADE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
JADE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
JADE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
JADE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
JADE	/	Anti-lock brake control system (ABS)	M19	Read codes	
JADE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
JADE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
JADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
JADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
JADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
JADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
JADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
JADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
JADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
JADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
JADE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
JADE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
JADE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
JADE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
JADE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
JADE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
JADE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
JADE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
JADE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
JADE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
JADE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
JADE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test

JADE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
JADE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
JADE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
JADE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
JADE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
JADE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
JADE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
JADE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
JADE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
JADE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
JADE	/	IMA	M63	Read ECU Information	
JADE	/	IMA	M63	Read codes	
JADE	/	IMA	M63	Erase Codes	
JADE	/	IMA	M63	Read Freeze Frame Data	
JADE	/	IMA	M63	Read Live Data	
JADE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
JADE	/	IMA	M63	Adjustment	SOC PRESET
JADE	/	IMA	M64	Read ECU Information	
JADE	/	IMA	M64	Read codes	
JADE	/	IMA	M64	Erase Codes	
JADE	/	IMA	M64	Read Freeze Frame Data	
JADE	/	IMA	M64	Read Live Data	
JADE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
JADE	/	IMA	M64	Adjustment	SOC PRESET
JADE	/	IMA	M65	Read ECU Information	
JADE	/	IMA	M65	Read codes	
JADE	/	IMA	M65	Erase Codes	
JADE	/	IMA	M65	Read Freeze Frame Data	
JADE	/	IMA	M65	Read Live Data	
JADE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
JADE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
JADE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
JADE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
JADE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
JADE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
JADE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
JADE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
JADE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
JADE	/	Night Vision System (INVS)	0XB1	Read codes	
JADE	/	Night Vision System (INVS)	0XB1	Erase Codes	
JADE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
JADE	/	Night Vision System (INVS)	0XB1	Read Live Data	
JADE	/	Night Vision System (INVS)	0XB1	Adjustment	
JADE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
JADE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
JADE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
JADE	/	i-SHIFT	0XB0	Read ECU Information	
JADE	/	i-SHIFT	0XB0	Read codes	
JADE	/	i-SHIFT	0XB0	Erase Codes	
JADE	/	i-SHIFT	0XB0	Read Live Data	
JADE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
JADE	/	Keyless Entry Control System (KAS)	M99	Read codes	
JADE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
JADE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
JADE	/	Keyless Entry Control System (KAS)	M99	Self Check	
JADE	/	Keyless Entry Control System (KAS)	M99	History Data	
JADE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output

JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
JADE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
JADE	/	Keyless Entry Control System (KAS)	M99	Registration	
JADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
JADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
JADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
JADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
JADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
JADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
JADE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
JADE	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
JADE	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
JADE	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
JADE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
JADE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
JADE	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
JADE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
JADE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
JADE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
JADE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
JADE	/	Management ECU Module (ME)	M74	Read ECU Information	
JADE	/	Management ECU Module (ME)	M74	Read codes	
JADE	/	Management ECU Module (ME)	M74	Erase Codes	
JADE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
JADE	/	Management ECU Module (ME)	M74	Read Live Data	
JADE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
JADE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
JADE	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
JADE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
JADE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
JADE	/	Multi-view camera system (MVCS)	M7A	Read codes	
JADE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
JADE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
JADE	/	Multi-view camera system (MVCS)	M7A	Customization	
JADE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
JADE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
JADE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
JADE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
JADE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
JADE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
JADE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
JADE	/	Power Control Unit (PCU)	M83	Read ECU Information	
JADE	/	Power Control Unit (PCU)	M83	Read codes	
JADE	/	Power Control Unit (PCU)	M83	Erase Codes	
JADE	/	Power Control Unit (PCU)	M83	Read Live Data	
JADE	/	Power Control Unit (PCU)	M83	Self Check	
JADE	/	Power Control Unit (PCU)	M83	History Data	
JADE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
JADE	/	Engine Control System (PGM-FI)	M23	Read codes	
JADE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
JADE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
JADE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
JADE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
JADE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
JADE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
JADE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
JADE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
JADE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
JADE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
JADE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
JADE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
JADE	/	Engine Control System (PGM-FI)	M50	Read codes	
JADE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
JADE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	

JADE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
JADE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
JADE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
JADE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
JADE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
JADE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
JADE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
JADE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
JADE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
JADE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
JADE	/	Engine Control System (PGM-FI)	M86	Read codes	
JADE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
JADE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
JADE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
JADE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
JADE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
JADE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
JADE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
JADE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
JADE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
JADE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
JADE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
JADE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
JADE	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
JADE	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
JADE	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
JADE	/	PSR	M27	Read ECU Information	
JADE	/	PSR	M27	Read codes	
JADE	/	PSR	M27	Erase Codes	
JADE	/	PSR	M27	Read Live Data	
JADE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
JADE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
JADE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
JADE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
JADE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
JADE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
JADE	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
JADE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
JADE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
JADE	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
JADE	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
JADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
JADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
JADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
JADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
JADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
JADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
JADE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
JADE	/	Remote starter (RS)	M90	System Check	
JADE	/	Remote starter (RS)	M90	HISTORY	
JADE	/	Remote starter (RS)	M90	Registration	
JADE	/	Seat load cell (SWS)	M6F	Read ECU Information	
JADE	/	Seat load cell (SWS)	M6F	Read codes	
JADE	/	Seat load cell (SWS)	M6F	Erase Codes	
JADE	/	Seat load cell (SWS)	M6F	Read Live Data	
JADE	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
JADE	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
JADE	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
JADE	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
JADE	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
JADE	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
JADE	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
JADE	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	

JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
JADE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
JADE	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
JADE	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
JADE	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
JADE	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
JADE	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
JADE	/	Groove track drive unit (SLOT ECU)	M98	History Data	
JADE	/	Groove track drive unit (SLOT ECU)	M98	System Information	
JADE	/	Airbag Control System (SRS)	M9F	Read ECU Information	
JADE	/	Airbag Control System (SRS)	M9F	Read codes	
JADE	/	Airbag Control System (SRS)	M9F	Erase Codes	
JADE	/	Airbag Control System (SRS)	M9F	Read Live Data	
JADE	/	Airbag Control System (SRS)	MA0	Read ECU Information	
JADE	/	Airbag Control System (SRS)	MA0	Read codes	
JADE	/	Airbag Control System (SRS)	MA0	Erase Codes	
JADE	/	Airbag Control System (SRS)	MA0	Read Live Data	
JADE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
JADE	/	Airbag Control System (SRS)	MA1	Read codes	
JADE	/	Airbag Control System (SRS)	MA1	Erase Codes	
JADE	/	Airbag Control System (SRS)	MA1	Read Live Data	
JADE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
JADE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
JADE	/	Airbag Control System (SRS)	M2A	Read codes	
JADE	/	Airbag Control System (SRS)	M2A	Erase Codes	
JADE	/	Airbag Control System (SRS)	M2A	Read Live Data	
JADE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
JADE	/	Airbag Control System (SRS)	M9C	Read codes	
JADE	/	Airbag Control System (SRS)	M9C	Erase Codes	
JADE	/	Airbag Control System (SRS)	M9C	Read Live Data	
JADE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
JADE	/	Airbag Control System (SRS)	M9D	Read codes	
JADE	/	Airbag Control System (SRS)	M9D	Erase Codes	
JADE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
JADE	/	Airbag Control System (SRS)	M9D	Read Live Data	
JADE	/	Airbag Control System (SRS)	M9D	Parameter Information	
JADE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
JADE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
JADE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
JADE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
JADE	/	Airbag Control System (SRS)	M9D	Function Test	
JADE	/	Airbag Control System (SRS)	M9D	System Information	
JADE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
JADE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
JADE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
JADE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
JADE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
JADE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
JADE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
JADE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
JADE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
JADE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
JADE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
JADE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
JADE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
JADE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
JADE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
JADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
JADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
JADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
JADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
JADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
JADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
JADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
JADE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
JADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
JADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
JADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
JADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
JADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
JADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
JADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
JADE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
JAZZ	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
JAZZ	/	Four-wheel steering control system (4WS)	M52	Read codes	
JAZZ	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
JAZZ	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
JAZZ	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
JAZZ	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
JAZZ	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
JAZZ	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
JAZZ	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
JAZZ	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK

JAZZ	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
JAZZ	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
JAZZ	/	Automatic shift control system (A/T)	M1E	Read codes	
JAZZ	/	Automatic shift control system (A/T)	M1E	Erase Codes	
JAZZ	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
JAZZ	/	Automatic shift control system (A/T)	M1E	Read Live Data	
JAZZ	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
JAZZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
JAZZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
JAZZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
JAZZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
JAZZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
JAZZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
JAZZ	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
JAZZ	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
JAZZ	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
JAZZ	/	Automatic shift control system (A/T)	M3B	Read codes	
JAZZ	/	Automatic shift control system (A/T)	M3B	Erase Codes	
JAZZ	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
JAZZ	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
JAZZ	/	Automatic shift control system (A/T)	M3B	Read Live Data	
JAZZ	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
JAZZ	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
JAZZ	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
JAZZ	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
JAZZ	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
JAZZ	/	Automatic shift control system (A/T)	M3C	Read codes	
JAZZ	/	Automatic shift control system (A/T)	M3C	Erase Codes	
JAZZ	/	Automatic shift control system (A/T)	M81	Read ECU Information	
JAZZ	/	Automatic shift control system (A/T)	M81	Read codes	
JAZZ	/	Automatic shift control system (A/T)	M81	Erase Codes	
JAZZ	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
JAZZ	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
JAZZ	/	Automatic shift control system (A/T)	M81	Read Live Data	
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
JAZZ	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
JAZZ	/	Automatic shift control system (A/T)	M82	Read ECU Information	
JAZZ	/	Automatic shift control system (A/T)	M82	Read codes	
JAZZ	/	Automatic shift control system (A/T)	M82	Erase Codes	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
JAZZ	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
JAZZ	/	Active Engine Control Support System (ACM)	M06	Read codes	
JAZZ	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
JAZZ	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
JAZZ	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
JAZZ	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
JAZZ	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
JAZZ	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
JAZZ	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
JAZZ	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
JAZZ	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
JAZZ	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
JAZZ	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
JAZZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read ECU Information	
JAZZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read codes	
JAZZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Erase Codes	
JAZZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read Freeze Frame Data	
JAZZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Read Live Data	
JAZZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Function Test	Damper Force Operation Test
JAZZ	/	Active / Automatic Shock Absorber Control System (A MOD)	M10	Adjustment	Damper Stroke Calibration
JAZZ	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
JAZZ	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	

JAZZ	/	Active / Automatic Shock Absorber Control System (A	M1A	Read Live Data	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read codes	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Erase Codes	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Freeze Frame Data	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Live Data	
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	ACC Brake (Brake Actuator)
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	CMBS Brake
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Brake Light (ACC Relay)
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Indicator Light
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Information Display
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Alarm Test
JAZZ	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Adjustment	Radar aiming
JAZZ	/	Transmission Control System (AT)	M18	Read ECU Information	
JAZZ	/	Transmission Control System (AT)	M18	Read codes	
JAZZ	/	Transmission Control System (AT)	M18	Erase Codes	
JAZZ	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
JAZZ	/	Transmission Control System (AT)	M18	Read Live Data	
JAZZ	/	Transmission Control System (AT)	M18	Adjustment	
JAZZ	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
JAZZ	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
JAZZ	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
JAZZ	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
JAZZ	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
JAZZ	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
JAZZ	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
JAZZ	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
JAZZ	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
JAZZ	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
JAZZ	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
JAZZ	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
JAZZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
JAZZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
JAZZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
JAZZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
JAZZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
JAZZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
JAZZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
JAZZ	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
JAZZ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
JAZZ	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
JAZZ	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
JAZZ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
JAZZ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
JAZZ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
JAZZ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
JAZZ	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
JAZZ	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
JAZZ	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
JAZZ	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer



JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
JAZZ	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
JAZZ	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
JAZZ	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
JAZZ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
JAZZ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
JAZZ	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
JAZZ	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
JAZZ	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
JAZZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
JAZZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
JAZZ	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
JAZZ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
JAZZ	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
JAZZ	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
JAZZ	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
JAZZ	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
JAZZ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
JAZZ	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor

JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
JAZZ	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
JAZZ	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Security	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
JAZZ	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
JAZZ	/	BODY ELECTRICAL/Security	MFF	History Data	
JAZZ	/	BODY ELECTRICAL/Security	MFF	History Clear	
JAZZ	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
JAZZ	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
JAZZ	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
JAZZ	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
JAZZ	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
JAZZ	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
JAZZ	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
JAZZ	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
JAZZ	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
JAZZ	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
JAZZ	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
JAZZ	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
JAZZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
JAZZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
JAZZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
JAZZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
JAZZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
JAZZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
JAZZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
JAZZ	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
JAZZ	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
JAZZ	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
JAZZ	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
JAZZ	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
JAZZ	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
JAZZ	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
JAZZ	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
JAZZ	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
JAZZ	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
JAZZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read ECU Information	
JAZZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read codes	
JAZZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Erase Codes	
JAZZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Freeze Frame Data	
JAZZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Live Data	
JAZZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
JAZZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	RADAR AIMING
JAZZ	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	CMBS Brake
JAZZ	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
JAZZ	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
JAZZ	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
JAZZ	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	

JAZZ	/	Promise Automatic Transmission Control System (CVT M1B)	Read Live Data	
JAZZ	/	Promise Automatic Transmission Control System (CVT M1B)	ECMPCMC Reset	
JAZZ	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Lock Solenoid Test
JAZZ	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Solenoid Tests
JAZZ	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Electrical Oil Pump Activation
JAZZ	/	Promise Automatic Transmission Control System (CVT M33)	Read ECU Information	
JAZZ	/	Promise Automatic Transmission Control System (CVT M33)	Read codes	
JAZZ	/	Promise Automatic Transmission Control System (CVT M33)	Erase Codes	
JAZZ	/	Promise Automatic Transmission Control System (CVT M33)	Read Freeze Frame Data	
JAZZ	/	Promise Automatic Transmission Control System (CVT M33)	Read Live Data	
JAZZ	/	Promise Automatic Transmission Control System (CVT M33)	ECMPCMC Reset	
JAZZ	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid
JAZZ	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)
JAZZ	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)
JAZZ	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information	
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes	
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes	
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data	
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data	
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	ECMPCMC Reset	
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B
JAZZ	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P
JAZZ	/	DBW M34	Read ECU Information	
JAZZ	/	DBW M34	Read codes	
JAZZ	/	DBW M34	Erase Codes	
JAZZ	/	DBW M34	Read Freeze Frame Data	
JAZZ	/	DBW M34	Read Live Data	
JAZZ	/	DBW M34	Inspection	Idle Speed Adjust
JAZZ	/	DBW M34	Inspection	Throttle Test
JAZZ	/	DBW M34	ECM Reset	
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
JAZZ	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
JAZZ	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
JAZZ	/	Diesel Engine Control System (DIESEL) M37	Read codes	
JAZZ	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
JAZZ	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
JAZZ	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
JAZZ	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
JAZZ	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
JAZZ	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
JAZZ	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Read codes	
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
JAZZ	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
JAZZ	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
JAZZ	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
JAZZ	/	Capacitor Control System (EDLC) M12	Read codes	
JAZZ	/	Capacitor Control System (EDLC) M12	Erase Codes	
JAZZ	/	Capacitor Control System (EDLC) M12	Read Live Data	

JAZZ	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
JAZZ	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
JAZZ	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
JAZZ	/	Electronic Brake Control System (EPB)	M1F	Read codes	
JAZZ	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
JAZZ	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
JAZZ	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
JAZZ	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
JAZZ	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
JAZZ	/	Electronic Brake Control System (EPB)	M3E	Read codes	
JAZZ	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
JAZZ	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
JAZZ	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
JAZZ	/	Electric Powertrain / IMA	M66	Read ECU Information	
JAZZ	/	Electric Powertrain / IMA	M66	Read codes	
JAZZ	/	Electric Powertrain / IMA	M66	Erase Codes	
JAZZ	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
JAZZ	/	Electric Powertrain / IMA	M66	Read Live Data	
JAZZ	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
JAZZ	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
JAZZ	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
JAZZ	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
JAZZ	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
JAZZ	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
JAZZ	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
JAZZ	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
JAZZ	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
JAZZ	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
JAZZ	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
JAZZ	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
JAZZ	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
JAZZ	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
JAZZ	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
JAZZ	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
JAZZ	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
JAZZ	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
JAZZ	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
JAZZ	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
JAZZ	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
JAZZ	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
JAZZ	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
JAZZ	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
JAZZ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
JAZZ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
JAZZ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
JAZZ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
JAZZ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
JAZZ	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
JAZZ	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
JAZZ	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
JAZZ	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
JAZZ	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
JAZZ	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
JAZZ	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
JAZZ	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
JAZZ	/	New energy battery (EV)	M44	Read ECU Information	
JAZZ	/	New energy battery (EV)	M44	Read codes	
JAZZ	/	New energy battery (EV)	M44	Erase Codes	
JAZZ	/	New energy battery (EV)	M44	Read Freeze Frame Data	
JAZZ	/	New energy battery (EV)	M44	Read Live Data	
JAZZ	/	New energy battery (EV)	M44	Inspection	
JAZZ	/	New energy battery (EV)	M44	Adjustment	
JAZZ	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
JAZZ	/	Electronic vacuum pump (EVPS)	M21	Read codes	
JAZZ	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
JAZZ	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
JAZZ	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
JAZZ	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
JAZZ	/	Electronic vacuum pump (EVPS)	M22	Read codes	
JAZZ	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
JAZZ	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
JAZZ	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
JAZZ	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
JAZZ	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
JAZZ	/	FCW LDW	M4E	Read ECU Information	
JAZZ	/	FCW LDW	M4E	Read codes	
JAZZ	/	FCW LDW	M4E	Erase Codes	
JAZZ	/	FCW LDW	M4E	Read Live Data	
JAZZ	/	FCW LDW	M4E	Function Test	FCW Drive
JAZZ	/	FCW LDW	M4E	Function Test	Left side lane departure warning
JAZZ	/	FCW LDW	M4E	Function Test	Right side lane departure warning
JAZZ	/	FCW LDW	M4E	Function Test	Indicator Drive
JAZZ	/	FCW LDW	M4E	Adjustment	
JAZZ	/	Instrument Display System (GAUGE)	M2C	Read codes	
JAZZ	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
JAZZ	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
JAZZ	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
JAZZ	/	Anti-lock brake control system (ABS)	M01	Read codes	
JAZZ	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
JAZZ	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
JAZZ	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
JAZZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid

JAZZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
JAZZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
JAZZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
JAZZ	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
JAZZ	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
JAZZ	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
JAZZ	/	Anti-lock brake control system (ABS)	M02	Read codes	
JAZZ	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
JAZZ	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
JAZZ	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
JAZZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
JAZZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
JAZZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
JAZZ	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
JAZZ	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
JAZZ	/	Anti-lock brake control system (ABS)	M03	Read codes	
JAZZ	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
JAZZ	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
JAZZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
JAZZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
JAZZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
JAZZ	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
JAZZ	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
JAZZ	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
JAZZ	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
JAZZ	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
JAZZ	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
JAZZ	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
JAZZ	/	Anti-lock brake control system (ABS)	M19	Read codes	
JAZZ	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
JAZZ	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
JAZZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
JAZZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
JAZZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
JAZZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
JAZZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
JAZZ	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
JAZZ	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
JAZZ	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
JAZZ	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
JAZZ	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
JAZZ	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
JAZZ	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
JAZZ	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
JAZZ	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
JAZZ	/	Intelligent Parking Control System (SPS)	M9B	Customize	
JAZZ	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
JAZZ	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
JAZZ	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
JAZZ	/	Hydraulic booster control system (HBS)	M5F	Read codes	
JAZZ	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
JAZZ	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
JAZZ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
JAZZ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
JAZZ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
JAZZ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
JAZZ	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
JAZZ	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
JAZZ	/	IMA	M63	Read ECU Information	
JAZZ	/	IMA	M63	Read codes	
JAZZ	/	IMA	M63	Erase Codes	
JAZZ	/	IMA	M63	Read Freeze Frame Data	
JAZZ	/	IMA	M63	Read Live Data	
JAZZ	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
JAZZ	/	IMA	M63	Adjustment	SOC PRESET
JAZZ	/	IMA	M64	Read ECU Information	
JAZZ	/	IMA	M64	Read codes	
JAZZ	/	IMA	M64	Erase Codes	
JAZZ	/	IMA	M64	Read Freeze Frame Data	
JAZZ	/	IMA	M64	Read Live Data	
JAZZ	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
JAZZ	/	IMA	M64	Adjustment	SOC PRESET
JAZZ	/	IMA	M65	Read ECU Information	
JAZZ	/	IMA	M65	Read codes	
JAZZ	/	IMA	M65	Erase Codes	
JAZZ	/	IMA	M65	Read Freeze Frame Data	
JAZZ	/	IMA	M65	Read Live Data	
JAZZ	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
JAZZ	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
JAZZ	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	

JAZZ	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
JAZZ	/	Intake Sounder Control System (ISC)	M6D	Read codes	
JAZZ	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
JAZZ	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
JAZZ	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
JAZZ	/	Night Vision System (INVS)	0XB1	Read ECU Information	
JAZZ	/	Night Vision System (INVS)	0XB1	Read codes	
JAZZ	/	Night Vision System (INVS)	0XB1	Erase Codes	
JAZZ	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
JAZZ	/	Night Vision System (INVS)	0XB1	Read Live Data	
JAZZ	/	Night Vision System (INVS)	0XB1	Adjustment	
JAZZ	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
JAZZ	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
JAZZ	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
JAZZ	/	i-SHIFT	0XB0	Read ECU Information	
JAZZ	/	i-SHIFT	0XB0	Read codes	
JAZZ	/	i-SHIFT	0XB0	Erase Codes	
JAZZ	/	i-SHIFT	0XB0	Read Live Data	
JAZZ	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
JAZZ	/	Keyless Entry Control System (KAS)	M99	Read codes	
JAZZ	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
JAZZ	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
JAZZ	/	Keyless Entry Control System (KAS)	M99	Self Check	
JAZZ	/	Keyless Entry Control System (KAS)	M99	History Data	
JAZZ	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
JAZZ	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
JAZZ	/	Keyless Entry Control System (KAS)	M99	Registration	
JAZZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
JAZZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
JAZZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
JAZZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
JAZZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
JAZZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
JAZZ	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
JAZZ	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
JAZZ	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
JAZZ	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
JAZZ	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
JAZZ	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
JAZZ	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
JAZZ	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
JAZZ	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
JAZZ	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
JAZZ	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY

JAZZ	/	Management ECU Module (ME)	M74	Read ECU Information	
JAZZ	/	Management ECU Module (ME)	M74	Read codes	
JAZZ	/	Management ECU Module (ME)	M74	Erase Codes	
JAZZ	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
JAZZ	/	Management ECU Module (ME)	M74	Read Live Data	
JAZZ	/	Multi-view camera and parking assist system (MVC/P, M26		Read ECU Information	
JAZZ	/	Multi-view camera and parking assist system (MVC/P, M26		Read codes	
JAZZ	/	Multi-view camera and parking assist system (MVC/P, M26		Erase Codes	
JAZZ	/	Multi-view camera and parking assist system (MVC/P, M26		Read Live Data	
JAZZ	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
JAZZ	/	Multi-view camera system (MVCS)	M7A	Read codes	
JAZZ	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
JAZZ	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
JAZZ	/	Multi-view camera system (MVCS)	M7A	Customization	
JAZZ	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
JAZZ	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
JAZZ	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
JAZZ	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
JAZZ	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
JAZZ	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
JAZZ	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
JAZZ	/	Power Control Unit (PCU)	M83	Read ECU Information	
JAZZ	/	Power Control Unit (PCU)	M83	Read codes	
JAZZ	/	Power Control Unit (PCU)	M83	Erase Codes	
JAZZ	/	Power Control Unit (PCU)	M83	Read Live Data	
JAZZ	/	Power Control Unit (PCU)	M83	Self Check	
JAZZ	/	Power Control Unit (PCU)	M83	History Data	
JAZZ	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
JAZZ	/	Engine Control System (PGM-FI)	M23	Read codes	
JAZZ	/	Engine Control System (PGM-FI)	M23	Erase Codes	
JAZZ	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
JAZZ	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
JAZZ	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
JAZZ	/	Engine Control System (PGM-FI)	M23	Read Live Data	
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
JAZZ	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
JAZZ	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
JAZZ	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
JAZZ	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
JAZZ	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
JAZZ	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
JAZZ	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
JAZZ	/	Engine Control System (PGM-FI)	M50	Read codes	
JAZZ	/	Engine Control System (PGM-FI)	M50	Erase Codes	
JAZZ	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
JAZZ	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
JAZZ	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
JAZZ	/	Engine Control System (PGM-FI)	M50	Read Live Data	
JAZZ	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
JAZZ	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
JAZZ	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
JAZZ	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
JAZZ	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
JAZZ	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
JAZZ	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
JAZZ	/	Engine Control System (PGM-FI)	M86	Read codes	
JAZZ	/	Engine Control System (PGM-FI)	M86	Erase Codes	
JAZZ	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
JAZZ	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
JAZZ	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
JAZZ	/	Engine Control System (PGM-FI)	M86	Read Live Data	
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP

JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
JAZZ	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
JAZZ	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
JAZZ	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
JAZZ	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
JAZZ	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
JAZZ	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
JAZZ	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
JAZZ	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
JAZZ	/	PSR	M27	Read ECU Information	
JAZZ	/	PSR	M27	Read codes	
JAZZ	/	PSR	M27	Erase Codes	
JAZZ	/	PSR	M27	Read Live Data	
JAZZ	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
JAZZ	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
JAZZ	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
JAZZ	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
JAZZ	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
JAZZ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
JAZZ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
JAZZ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
JAZZ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
JAZZ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
JAZZ	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
JAZZ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
JAZZ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
JAZZ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
JAZZ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
JAZZ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
JAZZ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
JAZZ	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
JAZZ	/	Remote starter (RS)	M90	System Check	
JAZZ	/	Remote starter (RS)	M90	HISTORY	
JAZZ	/	Remote starter (RS)	M90	Registration	
JAZZ	/	Seat load cell (SWS)	M6F	Read ECU Information	
JAZZ	/	Seat load cell (SWS)	M6F	Read codes	
JAZZ	/	Seat load cell (SWS)	M6F	Erase Codes	
JAZZ	/	Seat load cell (SWS)	M6F	Read Live Data	
JAZZ	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
JAZZ	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
JAZZ	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
JAZZ	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
JAZZ	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
JAZZ	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
JAZZ	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
JAZZ	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
JAZZ	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
JAZZ	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
JAZZ	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
JAZZ	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
JAZZ	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
JAZZ	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
JAZZ	/	Groove track drive unit (SLOT ECU)	M98	History Data	
JAZZ	/	Groove track drive unit (SLOT ECU)	M98	System Information	
JAZZ	/	Airbag Control System (SRS)	M9F	Read ECU Information	
JAZZ	/	Airbag Control System (SRS)	M9F	Read codes	
JAZZ	/	Airbag Control System (SRS)	M9F	Erase Codes	
JAZZ	/	Airbag Control System (SRS)	M9F	Read Live Data	
JAZZ	/	Airbag Control System (SRS)	MA0	Read ECU Information	
JAZZ	/	Airbag Control System (SRS)	MA0	Read codes	
JAZZ	/	Airbag Control System (SRS)	MA0	Erase Codes	
JAZZ	/	Airbag Control System (SRS)	MA0	Read Live Data	
JAZZ	/	Airbag Control System (SRS)	MA1	Read ECU Information	
JAZZ	/	Airbag Control System (SRS)	MA1	Read codes	
JAZZ	/	Airbag Control System (SRS)	MA1	Erase Codes	
JAZZ	/	Airbag Control System (SRS)	MA1	Read Live Data	
JAZZ	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization



JAZZ	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
JAZZ	/	Airbag Control System (SRS)	M2A	Read codes	
JAZZ	/	Airbag Control System (SRS)	M2A	Erase Codes	
JAZZ	/	Airbag Control System (SRS)	M2A	Read Live Data	
JAZZ	/	Airbag Control System (SRS)	M9C	Read ECU Information	
JAZZ	/	Airbag Control System (SRS)	M9C	Read codes	
JAZZ	/	Airbag Control System (SRS)	M9C	Erase Codes	
JAZZ	/	Airbag Control System (SRS)	M9C	Read Live Data	
JAZZ	/	Airbag Control System (SRS)	M9D	Read ECU Information	
JAZZ	/	Airbag Control System (SRS)	M9D	Read codes	
JAZZ	/	Airbag Control System (SRS)	M9D	Erase Codes	
JAZZ	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
JAZZ	/	Airbag Control System (SRS)	M9D	Read Live Data	
JAZZ	/	Airbag Control System (SRS)	M9D	Parameter Information	
JAZZ	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
JAZZ	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
JAZZ	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
JAZZ	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
JAZZ	/	Airbag Control System (SRS)	M9D	Function Test	
JAZZ	/	Airbag Control System (SRS)	M9D	System Information	
JAZZ	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
JAZZ	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
JAZZ	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
JAZZ	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
JAZZ	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
JAZZ	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
JAZZ	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
JAZZ	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
JAZZ	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
JAZZ	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
JAZZ	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
JAZZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
JAZZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
JAZZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
JAZZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
JAZZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
JAZZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
JAZZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
JAZZ	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
JAZZ HYBRID	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
JAZZ HYBRID	/	Four-wheel steering control system (4WS)	M52	Read codes	
JAZZ HYBRID	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
JAZZ HYBRID	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
JAZZ HYBRID	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
JAZZ HYBRID	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
JAZZ HYBRID	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
JAZZ HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
JAZZ HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
JAZZ HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
JAZZ HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	Read codes	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	Erase Codes	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	Read Live Data	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
JAZZ HYBRID	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3B	Read codes	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3B	Erase Codes	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3B	Read Live Data	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3C	Read codes	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M3C	Erase Codes	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Read ECU Information	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Read codes	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Erase Codes	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	

JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Read Live Data	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
JAZZ HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
JAZZ HYBRID	/	Automatic shift control system (A/T)	M82	Read ECU Information	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M82	Read codes	
JAZZ HYBRID	/	Automatic shift control system (A/T)	M82	Erase Codes	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
JAZZ HYBRID	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
JAZZ HYBRID	/	Active Engine Control Support System (ACM)	M06	Read codes	
JAZZ HYBRID	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
JAZZ HYBRID	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
JAZZ HYBRID	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
JAZZ HYBRID	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
JAZZ HYBRID	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
JAZZ HYBRID	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
JAZZ HYBRID	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
JAZZ HYBRID	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
JAZZ HYBRID	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
JAZZ HYBRID	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
JAZZ HYBRID	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
JAZZ HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
JAZZ HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
JAZZ HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
JAZZ HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
JAZZ HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
JAZZ HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
JAZZ HYBRID	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
JAZZ HYBRID	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
JAZZ HYBRID	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
JAZZ HYBRID	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
JAZZ HYBRID	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
JAZZ HYBRID	/	Transmission Control System (AT)	M18	Read ECU Information	
JAZZ HYBRID	/	Transmission Control System (AT)	M18	Read codes	
JAZZ HYBRID	/	Transmission Control System (AT)	M18	Erase Codes	
JAZZ HYBRID	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
JAZZ HYBRID	/	Transmission Control System (AT)	M18	Read Live Data	
JAZZ HYBRID	/	Transmission Control System (AT)	M18	Adjustment	
JAZZ HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
JAZZ HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
JAZZ HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
JAZZ HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
JAZZ HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
JAZZ HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
JAZZ HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
JAZZ HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
JAZZ HYBRID	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON

JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
JAZZ HYBRID	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
JAZZ HYBRID	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
JAZZ HYBRID	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
JAZZ HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
JAZZ HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
JAZZ HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
JAZZ HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
JAZZ HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
JAZZ HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
JAZZ HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
JAZZ HYBRID	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
JAZZ HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
JAZZ HYBRID	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
JAZZ HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
JAZZ HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
JAZZ HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
JAZZ HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
JAZZ HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
JAZZ HYBRID	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
JAZZ HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
JAZZ HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
JAZZ HYBRID	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder

JAZZ HYBRID	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
JAZZ HYBRID	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
JAZZ HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
JAZZ HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
JAZZ HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
JAZZ HYBRID	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
JAZZ HYBRID	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
JAZZ HYBRID	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
JAZZ HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
JAZZ HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
JAZZ HYBRID	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
JAZZ HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
JAZZ HYBRID	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
JAZZ HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
JAZZ HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
JAZZ HYBRID	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
JAZZ HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
JAZZ HYBRID	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
JAZZ HYBRID	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
JAZZ HYBRID	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Security	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
JAZZ HYBRID	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
JAZZ HYBRID	/	BODY ELECTRICAL/Security	MFF	History Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Security	MFF	History Clear	
JAZZ HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
JAZZ HYBRID	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
JAZZ HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Read codes	

JAZZ HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
JAZZ HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
JAZZ HYBRID	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
JAZZ HYBRID	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
JAZZ HYBRID	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
JAZZ HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
JAZZ HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
JAZZ HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
JAZZ HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
JAZZ HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
JAZZ HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
JAZZ HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
JAZZ HYBRID	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
JAZZ HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
JAZZ HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
JAZZ HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
JAZZ HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
JAZZ HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
JAZZ HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
JAZZ HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
JAZZ HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
JAZZ HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
JAZZ HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
JAZZ HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
JAZZ HYBRID	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
JAZZ HYBRID	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
JAZZ HYBRID	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
JAZZ HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
JAZZ HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
JAZZ HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
JAZZ HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
JAZZ HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
JAZZ HYBRID	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
JAZZ HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Read ECU Information	
JAZZ HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Read codes	
JAZZ HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Erase Codes	
JAZZ HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Read Freeze Frame Data	
JAZZ HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Read Live Data	
JAZZ HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
JAZZ HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
JAZZ HYBRID	/	Collision Mitigation Brake Control System (CMBS/CM <sup>s</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
JAZZ HYBRID	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
JAZZ HYBRID	/	DBW	M34	Read ECU Information	
JAZZ HYBRID	/	DBW	M34	Read codes	
JAZZ HYBRID	/	DBW	M34	Erase Codes	
JAZZ HYBRID	/	DBW	M34	Read Freeze Frame Data	

JAZZ HYBRID	/	DBW	M34	Read Live Data	
JAZZ HYBRID	/	DBW	M34	Inspection	Idle Speed Adjust
JAZZ HYBRID	/	DBW	M34	Inspection	Throttle Test
JAZZ HYBRID	/	DBW	M34	ECM Reset	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
JAZZ HYBRID	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
JAZZ HYBRID	/	Capacitor Control System (EDLC)	M12	Read codes	
JAZZ HYBRID	/	Capacitor Control System (EDLC)	M12	Erase Codes	
JAZZ HYBRID	/	Capacitor Control System (EDLC)	M12	Read Live Data	
JAZZ HYBRID	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
JAZZ HYBRID	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
JAZZ HYBRID	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
JAZZ HYBRID	/	Electronic Brake Control System (EPB)	M1F	Read codes	
JAZZ HYBRID	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
JAZZ HYBRID	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
JAZZ HYBRID	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
JAZZ HYBRID	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
JAZZ HYBRID	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
JAZZ HYBRID	/	Electronic Brake Control System (EPB)	M3E	Read codes	
JAZZ HYBRID	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
JAZZ HYBRID	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
JAZZ HYBRID	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
JAZZ HYBRID	/	Electric Powertrain / IMA	M66	Read ECU Information	
JAZZ HYBRID	/	Electric Powertrain / IMA	M66	Read codes	
JAZZ HYBRID	/	Electric Powertrain / IMA	M66	Erase Codes	
JAZZ HYBRID	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
JAZZ HYBRID	/	Electric Powertrain / IMA	M66	Read Live Data	
JAZZ HYBRID	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
JAZZ HYBRID	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
JAZZ HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
JAZZ HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
JAZZ HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
JAZZ HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
JAZZ HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
JAZZ HYBRID	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
JAZZ HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
JAZZ HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
JAZZ HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
JAZZ HYBRID	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	

JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
JAZZ HYBRID	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
JAZZ HYBRID	/	New energy battery (EV)	M44	Read ECU Information	
JAZZ HYBRID	/	New energy battery (EV)	M44	Read codes	
JAZZ HYBRID	/	New energy battery (EV)	M44	Erase Codes	
JAZZ HYBRID	/	New energy battery (EV)	M44	Read Freeze Frame Data	
JAZZ HYBRID	/	New energy battery (EV)	M44	Read Live Data	
JAZZ HYBRID	/	New energy battery (EV)	M44	Inspection	
JAZZ HYBRID	/	New energy battery (EV)	M44	Adjustment	
JAZZ HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
JAZZ HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read codes	
JAZZ HYBRID	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
JAZZ HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
JAZZ HYBRID	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
JAZZ HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
JAZZ HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read codes	
JAZZ HYBRID	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
JAZZ HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
JAZZ HYBRID	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
JAZZ HYBRID	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
JAZZ HYBRID	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
JAZZ HYBRID	/	FCW LDW	M4E	Read ECU Information	
JAZZ HYBRID	/	FCW LDW	M4E	Read codes	
JAZZ HYBRID	/	FCW LDW	M4E	Erase Codes	
JAZZ HYBRID	/	FCW LDW	M4E	Read Live Data	
JAZZ HYBRID	/	FCW LDW	M4E	Function Test	FCW Drive
JAZZ HYBRID	/	FCW LDW	M4E	Function Test	Left side lane departure warning
JAZZ HYBRID	/	FCW LDW	M4E	Function Test	Right side lane departure warning
JAZZ HYBRID	/	FCW LDW	M4E	Function Test	Indicator Drive
JAZZ HYBRID	/	FCW LDW	M4E	Adjustment	
JAZZ HYBRID	/	Instrument Display System (GAUGE)	M2C	Read codes	
JAZZ HYBRID	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
JAZZ HYBRID	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Read codes	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Read codes	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Read codes	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Bleeding	

JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Read codes	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
JAZZ HYBRID	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
JAZZ HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
JAZZ HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
JAZZ HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
JAZZ HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
JAZZ HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
JAZZ HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Customize	
JAZZ HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
JAZZ HYBRID	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
JAZZ HYBRID	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
JAZZ HYBRID	/	Hydraulic booster control system (HBS)	M5F	Read codes	
JAZZ HYBRID	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
JAZZ HYBRID	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
JAZZ HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
JAZZ HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
JAZZ HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
JAZZ HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
JAZZ HYBRID	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
JAZZ HYBRID	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
JAZZ HYBRID	/	IMA	M63	Read ECU Information	
JAZZ HYBRID	/	IMA	M63	Read codes	
JAZZ HYBRID	/	IMA	M63	Erase Codes	
JAZZ HYBRID	/	IMA	M63	Read Freeze Frame Data	
JAZZ HYBRID	/	IMA	M63	Read Live Data	
JAZZ HYBRID	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
JAZZ HYBRID	/	IMA	M63	Adjustment	SOC PRESET
JAZZ HYBRID	/	IMA	M64	Read ECU Information	
JAZZ HYBRID	/	IMA	M64	Read codes	
JAZZ HYBRID	/	IMA	M64	Erase Codes	
JAZZ HYBRID	/	IMA	M64	Read Freeze Frame Data	
JAZZ HYBRID	/	IMA	M64	Read Live Data	
JAZZ HYBRID	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
JAZZ HYBRID	/	IMA	M64	Adjustment	SOC PRESET
JAZZ HYBRID	/	IMA	M65	Read ECU Information	
JAZZ HYBRID	/	IMA	M65	Read codes	
JAZZ HYBRID	/	IMA	M65	Erase Codes	
JAZZ HYBRID	/	IMA	M65	Read Freeze Frame Data	
JAZZ HYBRID	/	IMA	M65	Read Live Data	
JAZZ HYBRID	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
JAZZ HYBRID	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
JAZZ HYBRID	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
JAZZ HYBRID	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
JAZZ HYBRID	/	Intake Sounder Control System (ISC)	M6D	Read codes	
JAZZ HYBRID	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
JAZZ HYBRID	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
JAZZ HYBRID	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
JAZZ HYBRID	/	Night Vision System (INVS)	0XB1	Read ECU Information	
JAZZ HYBRID	/	Night Vision System (INVS)	0XB1	Read codes	
JAZZ HYBRID	/	Night Vision System (INVS)	0XB1	Erase Codes	
JAZZ HYBRID	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
JAZZ HYBRID	/	Night Vision System (INVS)	0XB1	Read Live Data	
JAZZ HYBRID	/	Night Vision System (INVS)	0XB1	Adjustment	
JAZZ HYBRID	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
JAZZ HYBRID	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
JAZZ HYBRID	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
JAZZ HYBRID	/	i-SHIFT	0XB0	Read ECU Information	
JAZZ HYBRID	/	i-SHIFT	0XB0	Read codes	
JAZZ HYBRID	/	i-SHIFT	0XB0	Erase Codes	
JAZZ HYBRID	/	i-SHIFT	0XB0	Read Live Data	
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Read codes	
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Self Check	
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	History Data	
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving



JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCED Terminal) Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
JAZZ HYBRID	/	Keyless Entry Control System (KAS)	M99	Registration	
JAZZ HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
JAZZ HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
JAZZ HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
JAZZ HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
JAZZ HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
JAZZ HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
JAZZ HYBRID	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
JAZZ HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
JAZZ HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
JAZZ HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
JAZZ HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
JAZZ HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
JAZZ HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
JAZZ HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
JAZZ HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
JAZZ HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
JAZZ HYBRID	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
JAZZ HYBRID	/	Management ECU Module (ME)	M74	Read ECU Information	
JAZZ HYBRID	/	Management ECU Module (ME)	M74	Read codes	
JAZZ HYBRID	/	Management ECU Module (ME)	M74	Erase Codes	
JAZZ HYBRID	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
JAZZ HYBRID	/	Management ECU Module (ME)	M74	Read Live Data	
JAZZ HYBRID	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
JAZZ HYBRID	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
JAZZ HYBRID	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
JAZZ HYBRID	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
JAZZ HYBRID	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
JAZZ HYBRID	/	Multi-view camera system (MVCS)	M7A	Read codes	
JAZZ HYBRID	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
JAZZ HYBRID	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
JAZZ HYBRID	/	Multi-view camera system (MVCS)	M7A	Customization	
JAZZ HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
JAZZ HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
JAZZ HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
JAZZ HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
JAZZ HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
JAZZ HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
JAZZ HYBRID	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
JAZZ HYBRID	/	Power Control Unit (PCU)	M83	Read ECU Information	
JAZZ HYBRID	/	Power Control Unit (PCU)	M83	Read codes	
JAZZ HYBRID	/	Power Control Unit (PCU)	M83	Erase Codes	
JAZZ HYBRID	/	Power Control Unit (PCU)	M83	Read Live Data	
JAZZ HYBRID	/	Power Control Unit (PCU)	M83	Self Check	
JAZZ HYBRID	/	Power Control Unit (PCU)	M83	History Data	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Read codes	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Erase Codes	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	

JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Read Live Data	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	Read codes	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	Erase Codes	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	Read Live Data	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Read codes	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Erase Codes	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Read Live Data	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
JAZZ HYBRID	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
JAZZ HYBRID	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
JAZZ HYBRID	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
JAZZ HYBRID	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
JAZZ HYBRID	/	PSR	M27	Read ECU Information	
JAZZ HYBRID	/	PSR	M27	Read codes	
JAZZ HYBRID	/	PSR	M27	Erase Codes	
JAZZ HYBRID	/	PSR	M27	Read Live Data	
JAZZ HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
JAZZ HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
JAZZ HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
JAZZ HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
JAZZ HYBRID	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
JAZZ HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
JAZZ HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
JAZZ HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
JAZZ HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
JAZZ HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
JAZZ HYBRID	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
JAZZ HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
JAZZ HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
JAZZ HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
JAZZ HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
JAZZ HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	

JAZZ HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
JAZZ HYBRID	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
JAZZ HYBRID	/	Remote starter (RS)	M90	System Check	
JAZZ HYBRID	/	Remote starter (RS)	M90	HISTORY	
JAZZ HYBRID	/	Remote starter (RS)	M90	Registration	
JAZZ HYBRID	/	Seat load cell (SWS)	M6F	Read ECU Information	
JAZZ HYBRID	/	Seat load cell (SWS)	M6F	Read codes	
JAZZ HYBRID	/	Seat load cell (SWS)	M6F	Erase Codes	
JAZZ HYBRID	/	Seat load cell (SWS)	M6F	Read Live Data	
JAZZ HYBRID	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
JAZZ HYBRID	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
JAZZ HYBRID	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
JAZZ HYBRID	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
JAZZ HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
JAZZ HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
JAZZ HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
JAZZ HYBRID	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
JAZZ HYBRID	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
JAZZ HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
JAZZ HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
JAZZ HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
JAZZ HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
JAZZ HYBRID	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
JAZZ HYBRID	/	Groove track drive unit (SLOT ECU)	M98	History Data	
JAZZ HYBRID	/	Groove track drive unit (SLOT ECU)	M98	System Information	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9F	Read ECU Information	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9F	Read codes	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9F	Erase Codes	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9F	Read Live Data	
JAZZ HYBRID	/	Airbag Control System (SRS)	MA0	Read ECU Information	
JAZZ HYBRID	/	Airbag Control System (SRS)	MA0	Read codes	
JAZZ HYBRID	/	Airbag Control System (SRS)	MA0	Erase Codes	
JAZZ HYBRID	/	Airbag Control System (SRS)	MA0	Read Live Data	
JAZZ HYBRID	/	Airbag Control System (SRS)	MA1	Read ECU Information	
JAZZ HYBRID	/	Airbag Control System (SRS)	MA1	Read codes	
JAZZ HYBRID	/	Airbag Control System (SRS)	MA1	Erase Codes	
JAZZ HYBRID	/	Airbag Control System (SRS)	MA1	Read Live Data	
JAZZ HYBRID	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
JAZZ HYBRID	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
JAZZ HYBRID	/	Airbag Control System (SRS)	M2A	Read codes	
JAZZ HYBRID	/	Airbag Control System (SRS)	M2A	Erase Codes	
JAZZ HYBRID	/	Airbag Control System (SRS)	M2A	Read Live Data	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9C	Read ECU Information	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9C	Read codes	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9C	Erase Codes	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9C	Read Live Data	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9D	Read ECU Information	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9D	Read codes	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9D	Erase Codes	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9D	Read Live Data	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9D	Parameter Information	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
JAZZ HYBRID	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
JAZZ HYBRID	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
JAZZ HYBRID	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
JAZZ HYBRID	/	Airbag Control System (SRS)	M9D	Function Test	
JAZZ HYBRID	/	Airbag Control System (SRS)	M9D	System Information	
JAZZ HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
JAZZ HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
JAZZ HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
JAZZ HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
JAZZ HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
JAZZ HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
JAZZ HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
JAZZ HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
JAZZ HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
JAZZ HYBRID	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	

JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
JAZZ HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
JAZZ HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
JAZZ HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
JAZZ HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
JAZZ HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
JAZZ HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
JAZZ HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
JAZZ HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
JAZZ HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
LAGREAT	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
LAGREAT	/	Four-wheel steering control system (4WS)	M52	Read codes	
LAGREAT	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
LAGREAT	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
LAGREAT	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
LAGREAT	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
LAGREAT	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
LAGREAT	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
LAGREAT	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
LAGREAT	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
LAGREAT	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
LAGREAT	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
LAGREAT	/	Automatic shift control system (A/T)	M1E	Read codes	
LAGREAT	/	Automatic shift control system (A/T)	M1E	Erase Codes	
LAGREAT	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
LAGREAT	/	Automatic shift control system (A/T)	M1E	Read Live Data	
LAGREAT	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
LAGREAT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
LAGREAT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
LAGREAT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
LAGREAT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
LAGREAT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
LAGREAT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
LAGREAT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
LAGREAT	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
LAGREAT	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
LAGREAT	/	Automatic shift control system (A/T)	M3B	Read codes	
LAGREAT	/	Automatic shift control system (A/T)	M3B	Erase Codes	
LAGREAT	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
LAGREAT	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
LAGREAT	/	Automatic shift control system (A/T)	M3B	Read Live Data	
LAGREAT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
LAGREAT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
LAGREAT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
LAGREAT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
LAGREAT	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
LAGREAT	/	Automatic shift control system (A/T)	M3C	Read codes	
LAGREAT	/	Automatic shift control system (A/T)	M3C	Erase Codes	
LAGREAT	/	Automatic shift control system (A/T)	M81	Read ECU Information	
LAGREAT	/	Automatic shift control system (A/T)	M81	Read codes	
LAGREAT	/	Automatic shift control system (A/T)	M81	Erase Codes	
LAGREAT	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
LAGREAT	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
LAGREAT	/	Automatic shift control system (A/T)	M81	Read Live Data	
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
LAGREAT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
LAGREAT	/	Automatic shift control system (A/T)	M82	Read ECU Information	
LAGREAT	/	Automatic shift control system (A/T)	M82	Read codes	
LAGREAT	/	Automatic shift control system (A/T)	M82	Erase Codes	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	

LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
LAGREAT	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
LAGREAT	/	Active Engine Control Support System (ACM) M06	Read codes	
LAGREAT	/	Active Engine Control Support System (ACM) M06	Erase Codes	
LAGREAT	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
LAGREAT	/	Active Engine Control Support System (ACM) M06	Read Live Data	
LAGREAT	/	Active Engine Control Support System (ACM) M06	ACM Reset	
LAGREAT	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
LAGREAT	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
LAGREAT	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
LAGREAT	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
LAGREAT	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
LAGREAT	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
LAGREAT	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
LAGREAT	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
LAGREAT	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
LAGREAT	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
LAGREAT	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
LAGREAT	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
LAGREAT	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
LAGREAT	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
LAGREAT	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
LAGREAT	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
LAGREAT	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
LAGREAT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
LAGREAT	/	Transmission Control System (AT) M18	Read ECU Information	
LAGREAT	/	Transmission Control System (AT) M18	Read codes	
LAGREAT	/	Transmission Control System (AT) M18	Erase Codes	
LAGREAT	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
LAGREAT	/	Transmission Control System (AT) M18	Read Live Data	
LAGREAT	/	Transmission Control System (AT) M18	Adjustment	
LAGREAT	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
LAGREAT	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
LAGREAT	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
LAGREAT	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
LAGREAT	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
LAGREAT	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
LAGREAT	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
LAGREAT	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
LAGREAT	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
LAGREAT	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
LAGREAT	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
LAGREAT	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
LAGREAT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
LAGREAT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
LAGREAT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
LAGREAT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
LAGREAT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
LAGREAT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
LAGREAT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
LAGREAT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default

LAGREAT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
LAGREAT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
LAGREAT	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
LAGREAT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
LAGREAT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
LAGREAT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
LAGREAT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
LAGREAT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
LAGREAT	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
LAGREAT	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
LAGREAT	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
LAGREAT	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
LAGREAT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
LAGREAT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
LAGREAT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
LAGREAT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
LAGREAT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights

LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
LAGREAT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
LAGREAT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
LAGREAT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
LAGREAT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
LAGREAT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
LAGREAT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
LAGREAT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
LAGREAT	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
LAGREAT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
LAGREAT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
LAGREAT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
LAGREAT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
LAGREAT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
LAGREAT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Security	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
LAGREAT	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
LAGREAT	/	BODY ELECTRICAL/Security	MFF	History Data	
LAGREAT	/	BODY ELECTRICAL/Security	MFF	History Clear	
LAGREAT	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
LAGREAT	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
LAGREAT	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
LAGREAT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
LAGREAT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
LAGREAT	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
LAGREAT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
LAGREAT	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
LAGREAT	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
LAGREAT	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
LAGREAT	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
LAGREAT	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
LAGREAT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
LAGREAT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
LAGREAT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
LAGREAT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
LAGREAT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
LAGREAT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
LAGREAT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
LAGREAT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	

LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
LAGREAT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
LAGREAT	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
LAGREAT	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
LAGREAT	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
LAGREAT	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
LAGREAT	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
LAGREAT	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
LAGREAT	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
LAGREAT	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
LAGREAT	/	Collision Mitigation Brake Control System (CMBS/CM#	M2E	Read ECU Information	
LAGREAT	/	Collision Mitigation Brake Control System (CMBS/CM#	M2E	Read codes	
LAGREAT	/	Collision Mitigation Brake Control System (CMBS/CM#	M2E	Erase Codes	
LAGREAT	/	Collision Mitigation Brake Control System (CMBS/CM#	M2E	Read Freeze Frame Data	
LAGREAT	/	Collision Mitigation Brake Control System (CMBS/CM#	M2E	Read Live Data	
LAGREAT	/	Collision Mitigation Brake Control System (CMBS/CM#	M2E	CMBS (CMS) ACTIVATION HISTORY	
LAGREAT	/	Collision Mitigation Brake Control System (CMBS/CM#	M2E	Miscellaneous Test	RADAR AIMING
LAGREAT	/	Collision Mitigation Brake Control System (CMBS/CM#	M2E	Miscellaneous Test	CMBS Brake
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M1B	Read ECU Information	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M1B	Read codes	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M1B	Erase Codes	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M1B	Read Freeze Frame Data	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M1B	Read Live Data	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M1B	ECMPCM Reset	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M1B	Miscellaneous Test	Shift Lock Solenoid Test
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M1B	Miscellaneous Test	Shift Solenoid Tests
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M1B	Miscellaneous Test	Electrical Oil Pump Activation
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M33	Read ECU Information	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M33	Read codes	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M33	Erase Codes	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M33	Read Freeze Frame Data	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M33	Read Live Data	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M33	ECMPCM Reset	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M33	Miscellaneous Test	Inhibitor Solenoid
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M33	Miscellaneous Test	CAS Solenoid A (LF)
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M33	Miscellaneous Test	CAS Solenoid B (RF)
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M33	Miscellaneous Test	Start Clutch Feedback Learn
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	Read ECU Information	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	Read codes	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	Erase Codes	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	Read Freeze Frame Data	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	Read Live Data	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	ECMPCM Reset	
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Inhibitor Solenoid
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	CAS Solenoid A (LF)
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	CAS Solenoid B (RF)
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Start Clutch Feedback Learn
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Shift solenoid Valve A
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Shift solenoid Valve B
LAGREAT	/	Promise Automatic Transmission Control System (CVT	M8D	Miscellaneous Test	Shift solenoid Valve O/P
LAGREAT	/	DBW	M34	Read ECU Information	
LAGREAT	/	DBW	M34	Read codes	
LAGREAT	/	DBW	M34	Erase Codes	
LAGREAT	/	DBW	M34	Read Freeze Frame Data	
LAGREAT	/	DBW	M34	Read Live Data	
LAGREAT	/	DBW	M34	Inspection	Idle Speed Adjust
LAGREAT	/	DBW	M34	Inspection	Throttle Test
LAGREAT	/	DBW	M34	ECM Reset	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	



LAGREAT	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
LAGREAT	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
LAGREAT	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
LAGREAT	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
LAGREAT	/	Capacitor Control System (EDLC)	M12	Read codes	
LAGREAT	/	Capacitor Control System (EDLC)	M12	Erase Codes	
LAGREAT	/	Capacitor Control System (EDLC)	M12	Read Live Data	
LAGREAT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
LAGREAT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
LAGREAT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
LAGREAT	/	Electronic Brake Control System (EPB)	M1F	Read codes	
LAGREAT	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
LAGREAT	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
LAGREAT	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
LAGREAT	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
LAGREAT	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
LAGREAT	/	Electronic Brake Control System (EPB)	M3E	Read codes	
LAGREAT	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
LAGREAT	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
LAGREAT	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
LAGREAT	/	Electric Powertrain / IMA	M66	Read ECU Information	
LAGREAT	/	Electric Powertrain / IMA	M66	Read codes	
LAGREAT	/	Electric Powertrain / IMA	M66	Erase Codes	
LAGREAT	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
LAGREAT	/	Electric Powertrain / IMA	M66	Read Live Data	
LAGREAT	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
LAGREAT	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
LAGREAT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
LAGREAT	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
LAGREAT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
LAGREAT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
LAGREAT	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
LAGREAT	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
LAGREAT	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
LAGREAT	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
LAGREAT	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
LAGREAT	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
LAGREAT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
LAGREAT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
LAGREAT	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
LAGREAT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
LAGREAT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
LAGREAT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
LAGREAT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
LAGREAT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
LAGREAT	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
LAGREAT	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
LAGREAT	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
LAGREAT	/	New energy battery (EV)	M44	Read ECU Information	
LAGREAT	/	New energy battery (EV)	M44	Read codes	
LAGREAT	/	New energy battery (EV)	M44	Erase Codes	
LAGREAT	/	New energy battery (EV)	M44	Read Freeze Frame Data	
LAGREAT	/	New energy battery (EV)	M44	Read Live Data	
LAGREAT	/	New energy battery (EV)	M44	Inspection	
LAGREAT	/	New energy battery (EV)	M44	Adjustment	
LAGREAT	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
LAGREAT	/	Electronic vacuum pump (EVPS)	M21	Read codes	

LAGREAT	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
LAGREAT	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
LAGREAT	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
LAGREAT	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
LAGREAT	/	Electronic vacuum pump (EVPS)	M22	Read codes	
LAGREAT	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
LAGREAT	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
LAGREAT	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
LAGREAT	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
LAGREAT	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
LAGREAT	/	FCW LDW	M4E	Read ECU Information	
LAGREAT	/	FCW LDW	M4E	Read codes	
LAGREAT	/	FCW LDW	M4E	Erase Codes	
LAGREAT	/	FCW LDW	M4E	Read Live Data	
LAGREAT	/	FCW LDW	M4E	Function Test	FCW Drive
LAGREAT	/	FCW LDW	M4E	Function Test	Left side lane departure warning
LAGREAT	/	FCW LDW	M4E	Function Test	Right side lane departure warning
LAGREAT	/	FCW LDW	M4E	Function Test	Indicator Drive
LAGREAT	/	FCW LDW	M4E	Adjustment	
LAGREAT	/	Instrument Display System (GAUGE)	M2C	Read codes	
LAGREAT	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
LAGREAT	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Read codes	
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Read codes	
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Read codes	
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
LAGREAT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
LAGREAT	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Read codes	
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
LAGREAT	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
LAGREAT	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
LAGREAT	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
LAGREAT	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
LAGREAT	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
LAGREAT	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
LAGREAT	/	Intelligent Parking Control System (SPS)	M9B	Customize	
LAGREAT	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
LAGREAT	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
LAGREAT	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
LAGREAT	/	Hydraulic booster control system (HBS)	M5F	Read codes	
LAGREAT	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	

LAGREAT	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
LAGREAT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
LAGREAT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
LAGREAT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
LAGREAT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
LAGREAT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
LAGREAT	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
LAGREAT	/	IMA	M63	Read ECU Information	
LAGREAT	/	IMA	M63	Read codes	
LAGREAT	/	IMA	M63	Erase Codes	
LAGREAT	/	IMA	M63	Read Freeze Frame Data	
LAGREAT	/	IMA	M63	Read Live Data	
LAGREAT	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
LAGREAT	/	IMA	M63	Adjustment	SOC PRESET
LAGREAT	/	IMA	M64	Read ECU Information	
LAGREAT	/	IMA	M64	Read codes	
LAGREAT	/	IMA	M64	Erase Codes	
LAGREAT	/	IMA	M64	Read Freeze Frame Data	
LAGREAT	/	IMA	M64	Read Live Data	
LAGREAT	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
LAGREAT	/	IMA	M64	Adjustment	SOC PRESET
LAGREAT	/	IMA	M65	Read ECU Information	
LAGREAT	/	IMA	M65	Read codes	
LAGREAT	/	IMA	M65	Erase Codes	
LAGREAT	/	IMA	M65	Read Freeze Frame Data	
LAGREAT	/	IMA	M65	Read Live Data	
LAGREAT	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
LAGREAT	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
LAGREAT	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
LAGREAT	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
LAGREAT	/	Intake Sounder Control System (ISC)	M6D	Read codes	
LAGREAT	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
LAGREAT	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
LAGREAT	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
LAGREAT	/	Night Vision System (INVS)	0XB1	Read ECU Information	
LAGREAT	/	Night Vision System (INVS)	0XB1	Read codes	
LAGREAT	/	Night Vision System (INVS)	0XB1	Erase Codes	
LAGREAT	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
LAGREAT	/	Night Vision System (INVS)	0XB1	Read Live Data	
LAGREAT	/	Night Vision System (INVS)	0XB1	Adjustment	
LAGREAT	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
LAGREAT	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
LAGREAT	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
LAGREAT	/	i-SHIFT	0XB0	Read ECU Information	
LAGREAT	/	i-SHIFT	0XB0	Read codes	
LAGREAT	/	i-SHIFT	0XB0	Erase Codes	
LAGREAT	/	i-SHIFT	0XB0	Read Live Data	
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Read codes	
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Self Check	
LAGREAT	/	Keyless Entry Control System (KAS)	M99	History Data	
LAGREAT	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output

LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
LAGREAT	/	Keyless Entry Control System (KAS)	M99	Registration	
LAGREAT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
LAGREAT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
LAGREAT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
LAGREAT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
LAGREAT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
LAGREAT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
LAGREAT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
LAGREAT	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
LAGREAT	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
LAGREAT	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
LAGREAT	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
LAGREAT	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
LAGREAT	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
LAGREAT	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
LAGREAT	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
LAGREAT	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
LAGREAT	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
LAGREAT	/	Management ECU Module (ME)	M74	Read ECU Information	
LAGREAT	/	Management ECU Module (ME)	M74	Read codes	
LAGREAT	/	Management ECU Module (ME)	M74	Erase Codes	
LAGREAT	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
LAGREAT	/	Management ECU Module (ME)	M74	Read Live Data	
LAGREAT	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
LAGREAT	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
LAGREAT	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
LAGREAT	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
LAGREAT	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
LAGREAT	/	Multi-view camera system (MVCS)	M7A	Read codes	
LAGREAT	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
LAGREAT	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
LAGREAT	/	Multi-view camera system (MVCS)	M7A	Customization	
LAGREAT	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
LAGREAT	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
LAGREAT	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
LAGREAT	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
LAGREAT	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
LAGREAT	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
LAGREAT	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
LAGREAT	/	Power Control Unit (PCU)	M83	Read ECU Information	
LAGREAT	/	Power Control Unit (PCU)	M83	Read codes	
LAGREAT	/	Power Control Unit (PCU)	M83	Erase Codes	
LAGREAT	/	Power Control Unit (PCU)	M83	Read Live Data	
LAGREAT	/	Power Control Unit (PCU)	M83	Self Check	
LAGREAT	/	Power Control Unit (PCU)	M83	History Data	
LAGREAT	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
LAGREAT	/	Engine Control System (PGM-FI)	M23	Read codes	
LAGREAT	/	Engine Control System (PGM-FI)	M23	Erase Codes	
LAGREAT	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
LAGREAT	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
LAGREAT	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
LAGREAT	/	Engine Control System (PGM-FI)	M23	Read Live Data	
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
LAGREAT	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
LAGREAT	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
LAGREAT	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
LAGREAT	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
LAGREAT	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
LAGREAT	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
LAGREAT	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
LAGREAT	/	Engine Control System (PGM-FI)	M50	Read codes	
LAGREAT	/	Engine Control System (PGM-FI)	M50	Erase Codes	
LAGREAT	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
LAGREAT	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
LAGREAT	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
LAGREAT	/	Engine Control System (PGM-FI)	M50	Read Live Data	

LAGREAT	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
LAGREAT	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
LAGREAT	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
LAGREAT	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
LAGREAT	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
LAGREAT	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
LAGREAT	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
LAGREAT	/	Engine Control System (PGM-FI)	M86	Read codes	
LAGREAT	/	Engine Control System (PGM-FI)	M86	Erase Codes	
LAGREAT	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
LAGREAT	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
LAGREAT	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
LAGREAT	/	Engine Control System (PGM-FI)	M86	Read Live Data	
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
LAGREAT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
LAGREAT	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
LAGREAT	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
LAGREAT	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
LAGREAT	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
LAGREAT	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
LAGREAT	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
LAGREAT	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
LAGREAT	/	PSR	M27	Read ECU Information	
LAGREAT	/	PSR	M27	Read codes	
LAGREAT	/	PSR	M27	Erase Codes	
LAGREAT	/	PSR	M27	Read Live Data	
LAGREAT	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
LAGREAT	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
LAGREAT	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
LAGREAT	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
LAGREAT	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
LAGREAT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
LAGREAT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
LAGREAT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
LAGREAT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
LAGREAT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
LAGREAT	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
LAGREAT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
LAGREAT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
LAGREAT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
LAGREAT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
LAGREAT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
LAGREAT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
LAGREAT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
LAGREAT	/	Remote starter (RS)	M90	System Check	
LAGREAT	/	Remote starter (RS)	M90	HISTORY	
LAGREAT	/	Remote starter (RS)	M90	Registration	
LAGREAT	/	Seat load cell (SWS)	M6F	Read ECU Information	
LAGREAT	/	Seat load cell (SWS)	M6F	Read codes	
LAGREAT	/	Seat load cell (SWS)	M6F	Erase Codes	
LAGREAT	/	Seat load cell (SWS)	M6F	Read Live Data	
LAGREAT	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
LAGREAT	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
LAGREAT	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
LAGREAT	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
LAGREAT	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
LAGREAT	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
LAGREAT	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
LAGREAT	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	

LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
LAGREAT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
LAGREAT	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
LAGREAT	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
LAGREAT	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
LAGREAT	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
LAGREAT	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
LAGREAT	/	Groove track drive unit (SLOT ECU)	M98	History Data	
LAGREAT	/	Groove track drive unit (SLOT ECU)	M98	System Information	
LAGREAT	/	Airbag Control System (SRS)	M9F	Read ECU Information	
LAGREAT	/	Airbag Control System (SRS)	M9F	Read codes	
LAGREAT	/	Airbag Control System (SRS)	M9F	Erase Codes	
LAGREAT	/	Airbag Control System (SRS)	M9F	Read Live Data	
LAGREAT	/	Airbag Control System (SRS)	MA0	Read ECU Information	
LAGREAT	/	Airbag Control System (SRS)	MA0	Read codes	
LAGREAT	/	Airbag Control System (SRS)	MA0	Erase Codes	
LAGREAT	/	Airbag Control System (SRS)	MA0	Read Live Data	
LAGREAT	/	Airbag Control System (SRS)	MA1	Read ECU Information	
LAGREAT	/	Airbag Control System (SRS)	MA1	Read codes	
LAGREAT	/	Airbag Control System (SRS)	MA1	Erase Codes	
LAGREAT	/	Airbag Control System (SRS)	MA1	Read Live Data	
LAGREAT	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
LAGREAT	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
LAGREAT	/	Airbag Control System (SRS)	M2A	Read codes	
LAGREAT	/	Airbag Control System (SRS)	M2A	Erase Codes	
LAGREAT	/	Airbag Control System (SRS)	M2A	Read Live Data	
LAGREAT	/	Airbag Control System (SRS)	M9C	Read ECU Information	
LAGREAT	/	Airbag Control System (SRS)	M9C	Read codes	
LAGREAT	/	Airbag Control System (SRS)	M9C	Erase Codes	
LAGREAT	/	Airbag Control System (SRS)	M9C	Read Live Data	
LAGREAT	/	Airbag Control System (SRS)	M9D	Read ECU Information	
LAGREAT	/	Airbag Control System (SRS)	M9D	Read codes	
LAGREAT	/	Airbag Control System (SRS)	M9D	Erase Codes	
LAGREAT	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
LAGREAT	/	Airbag Control System (SRS)	M9D	Read Live Data	
LAGREAT	/	Airbag Control System (SRS)	M9D	Parameter Information	
LAGREAT	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
LAGREAT	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
LAGREAT	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
LAGREAT	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pre-tensioner For CMBS (CMS)
LAGREAT	/	Airbag Control System (SRS)	M9D	Function Test	
LAGREAT	/	Airbag Control System (SRS)	M9D	System Information	
LAGREAT	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
LAGREAT	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
LAGREAT	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
LAGREAT	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
LAGREAT	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
LAGREAT	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
LAGREAT	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
LAGREAT	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
LAGREAT	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
LAGREAT	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
LAGREAT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
LAGREAT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
LAGREAT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
LAGREAT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
LAGREAT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
LAGREAT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
LAGREAT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
LAGREAT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
LAGREAT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
LEGEND	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
LEGEND	/	Four-wheel steering control system (4WS)	M52	Read codes	
LEGEND	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
LEGEND	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
LEGEND	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
LEGEND	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
LEGEND	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
LEGEND	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
LEGEND	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
LEGEND	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
LEGEND	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
LEGEND	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
LEGEND	/	Automatic shift control system (A/T)	M1E	Read codes	

LEGEND	/	Automatic shift control system (A/T)	M1E	Erase Codes	
LEGEND	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
LEGEND	/	Automatic shift control system (A/T)	M1E	Read Live Data	
LEGEND	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
LEGEND	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
LEGEND	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
LEGEND	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
LEGEND	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
LEGEND	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
LEGEND	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
LEGEND	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
LEGEND	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
LEGEND	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
LEGEND	/	Automatic shift control system (A/T)	M3B	Read codes	
LEGEND	/	Automatic shift control system (A/T)	M3B	Erase Codes	
LEGEND	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
LEGEND	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
LEGEND	/	Automatic shift control system (A/T)	M3B	Read Live Data	
LEGEND	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
LEGEND	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
LEGEND	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
LEGEND	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
LEGEND	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
LEGEND	/	Automatic shift control system (A/T)	M3C	Read codes	
LEGEND	/	Automatic shift control system (A/T)	M3C	Erase Codes	
LEGEND	/	Automatic shift control system (A/T)	M81	Read ECU Information	
LEGEND	/	Automatic shift control system (A/T)	M81	Read codes	
LEGEND	/	Automatic shift control system (A/T)	M81	Erase Codes	
LEGEND	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
LEGEND	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
LEGEND	/	Automatic shift control system (A/T)	M81	Read Live Data	
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
LEGEND	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
LEGEND	/	Automatic shift control system (A/T)	M82	Read ECU Information	
LEGEND	/	Automatic shift control system (A/T)	M82	Read codes	
LEGEND	/	Automatic shift control system (A/T)	M82	Erase Codes	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
LEGEND	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
LEGEND	/	Active Engine Control Support System (ACM)	M06	Read codes	
LEGEND	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
LEGEND	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
LEGEND	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
LEGEND	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
LEGEND	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
LEGEND	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
LEGEND	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
LEGEND	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
LEGEND	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
LEGEND	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
LEGEND	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
LEGEND	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
LEGEND	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
LEGEND	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
LEGEND	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
LEGEND	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
LEGEND	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
LEGEND	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
LEGEND	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
LEGEND	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
LEGEND	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	

LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
LEGEND	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
LEGEND	/	Transmission Control System (AT) M18	Read ECU Information	
LEGEND	/	Transmission Control System (AT) M18	Read codes	
LEGEND	/	Transmission Control System (AT) M18	Erase Codes	
LEGEND	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
LEGEND	/	Transmission Control System (AT) M18	Read Live Data	
LEGEND	/	Transmission Control System (AT) M18	Adjustment	
LEGEND	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
LEGEND	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
LEGEND	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
LEGEND	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
LEGEND	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
LEGEND	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
LEGEND	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
LEGEND	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
LEGEND	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
LEGEND	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
LEGEND	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
LEGEND	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
LEGEND	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
LEGEND	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
LEGEND	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
LEGEND	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
LEGEND	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
LEGEND	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
LEGEND	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
LEGEND	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
LEGEND	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
LEGEND	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
LEGEND	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
LEGEND	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
LEGEND	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
LEGEND	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
LEGEND	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
LEGEND	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
LEGEND	/	BODY ELECTRICAL/e-Call MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
LEGEND	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
LEGEND	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
LEGEND	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	
LEGEND	/	BODY ELECTRICAL/Gauges MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Gauges MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Gauges MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Gauges MFF	Function Test	Speedometer
LEGEND	/	BODY ELECTRICAL/Gauges MFF	Function Test	Tachometer
LEGEND	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Activation Indicator
LEGEND	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Indicator
LEGEND	/	BODY ELECTRICAL/Gauges MFF	Function Test	ABS INDICATOR



LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
LEGEND	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
LEGEND	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
LEGEND	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
LEGEND	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
LEGEND	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
LEGEND	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
LEGEND	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
LEGEND	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
LEGEND	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
LEGEND	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
LEGEND	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
LEGEND	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
LEGEND	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
LEGEND	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
LEGEND	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
LEGEND	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
LEGEND	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
LEGEND	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	

LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
LEGEND	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
LEGEND	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Security	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
LEGEND	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
LEGEND	/	BODY ELECTRICAL/Security	MFF	History Data	
LEGEND	/	BODY ELECTRICAL/Security	MFF	History Clear	
LEGEND	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
LEGEND	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
LEGEND	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
LEGEND	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
LEGEND	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
LEGEND	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
LEGEND	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
LEGEND	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
LEGEND	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
LEGEND	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
LEGEND	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
LEGEND	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
LEGEND	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
LEGEND	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
LEGEND	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
LEGEND	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
LEGEND	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
LEGEND	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
LEGEND	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
LEGEND	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
LEGEND	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
LEGEND	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
LEGEND	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
LEGEND	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
LEGEND	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
LEGEND	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
LEGEND	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
LEGEND	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
LEGEND	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
LEGEND	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read ECU Information	
LEGEND	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read codes	
LEGEND	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Erase Codes	
LEGEND	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read Freeze Frame Data	
LEGEND	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read Live Data	
LEGEND	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
LEGEND	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Miscellaneous Test	RADAR AIMING
LEGEND	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Miscellaneous Test	CMBS Brake
LEGEND	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
LEGEND	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
LEGEND	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
LEGEND	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
LEGEND	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
LEGEND	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
LEGEND	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test

LEGEND	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Solenoid Tests	
LEGEND	/	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Electrical Oil Pump Activation	
LEGEND	/	Promise Automatic Transmission Control System (CVT M33)	Read ECU Information		
LEGEND	/	Promise Automatic Transmission Control System (CVT M33)	Read codes		
LEGEND	/	Promise Automatic Transmission Control System (CVT M33)	Erase Codes		
LEGEND	/	Promise Automatic Transmission Control System (CVT M33)	Read Freeze Frame Data		
LEGEND	/	Promise Automatic Transmission Control System (CVT M33)	Read Live Data		
LEGEND	/	Promise Automatic Transmission Control System (CVT M33)	ECM/PCM Reset		
LEGEND	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid	
LEGEND	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)	
LEGEND	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)	
LEGEND	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn	
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information		
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes		
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes		
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data		
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data		
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	ECM/PCM Reset		
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid	
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)	
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)	
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn	
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A	
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B	
LEGEND	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P	
LEGEND	/	DBW	M34	Read ECU Information	
LEGEND	/	DBW	M34	Read codes	
LEGEND	/	DBW	M34	Erase Codes	
LEGEND	/	DBW	M34	Read Freeze Frame Data	
LEGEND	/	DBW	M34	Read Live Data	
LEGEND	/	DBW	M34	Inspection	Idle Speed Adjust
LEGEND	/	DBW	M34	Inspection	Throttle Test
LEGEND	/	DBW	M34	ECM Reset	
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
LEGEND	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
LEGEND	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
LEGEND	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
LEGEND	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
LEGEND	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
LEGEND	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
LEGEND	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
LEGEND	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
LEGEND	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
LEGEND	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
LEGEND	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
LEGEND	/	Capacitor Control System (EDLC)	M12	Read codes	
LEGEND	/	Capacitor Control System (EDLC)	M12	Erase Codes	
LEGEND	/	Capacitor Control System (EDLC)	M12	Read Live Data	
LEGEND	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
LEGEND	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
LEGEND	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear

LEGEND	/	Electronic Brake Control System (EPB)	M1F	Read codes	
LEGEND	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
LEGEND	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
LEGEND	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
LEGEND	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
LEGEND	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
LEGEND	/	Electronic Brake Control System (EPB)	M3E	Read codes	
LEGEND	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
LEGEND	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
LEGEND	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
LEGEND	/	Electric Powertrain / IMA	M66	Read ECU Information	
LEGEND	/	Electric Powertrain / IMA	M66	Read codes	
LEGEND	/	Electric Powertrain / IMA	M66	Erase Codes	
LEGEND	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
LEGEND	/	Electric Powertrain / IMA	M66	Read Live Data	
LEGEND	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
LEGEND	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
LEGEND	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
LEGEND	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
LEGEND	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
LEGEND	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
LEGEND	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
LEGEND	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
LEGEND	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
LEGEND	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
LEGEND	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
LEGEND	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
LEGEND	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
LEGEND	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
LEGEND	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
LEGEND	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
LEGEND	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
LEGEND	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
LEGEND	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
LEGEND	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
LEGEND	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
LEGEND	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
LEGEND	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
LEGEND	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
LEGEND	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
LEGEND	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
LEGEND	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
LEGEND	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
LEGEND	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
LEGEND	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
LEGEND	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
LEGEND	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
LEGEND	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
LEGEND	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
LEGEND	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
LEGEND	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
LEGEND	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
LEGEND	/	New energy battery (EV)	M44	Read ECU Information	
LEGEND	/	New energy battery (EV)	M44	Read codes	
LEGEND	/	New energy battery (EV)	M44	Erase Codes	
LEGEND	/	New energy battery (EV)	M44	Read Freeze Frame Data	
LEGEND	/	New energy battery (EV)	M44	Read Live Data	
LEGEND	/	New energy battery (EV)	M44	Inspection	
LEGEND	/	New energy battery (EV)	M44	Adjustment	
LEGEND	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
LEGEND	/	Electronic vacuum pump (EVPS)	M21	Read codes	
LEGEND	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
LEGEND	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
LEGEND	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
LEGEND	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
LEGEND	/	Electronic vacuum pump (EVPS)	M22	Read codes	
LEGEND	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
LEGEND	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
LEGEND	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
LEGEND	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
LEGEND	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
LEGEND	/	FCW LDW	M4E	Read ECU Information	
LEGEND	/	FCW LDW	M4E	Read codes	
LEGEND	/	FCW LDW	M4E	Erase Codes	
LEGEND	/	FCW LDW	M4E	Read Live Data	
LEGEND	/	FCW LDW	M4E	Function Test	FCW Drive
LEGEND	/	FCW LDW	M4E	Function Test	Left side lane departure warning
LEGEND	/	FCW LDW	M4E	Function Test	Right side lane departure warning
LEGEND	/	FCW LDW	M4E	Function Test	Indicator Drive
LEGEND	/	FCW LDW	M4E	Adjustment	
LEGEND	/	Instrument Display System (GAUGE)	M2C	Read codes	
LEGEND	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
LEGEND	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
LEGEND	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
LEGEND	/	Anti-lock brake control system (ABS)	M01	Read codes	
LEGEND	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
LEGEND	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
LEGEND	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
LEGEND	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA

LEGEND	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
LEGEND	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
LEGEND	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
LEGEND	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
LEGEND	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
LEGEND	/	Anti-lock brake control system (ABS)	M02	Read codes	
LEGEND	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
LEGEND	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
LEGEND	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
LEGEND	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
LEGEND	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
LEGEND	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
LEGEND	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
LEGEND	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
LEGEND	/	Anti-lock brake control system (ABS)	M03	Read codes	
LEGEND	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
LEGEND	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
LEGEND	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
LEGEND	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
LEGEND	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
LEGEND	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
LEGEND	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
LEGEND	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
LEGEND	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
LEGEND	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
LEGEND	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
LEGEND	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
LEGEND	/	Anti-lock brake control system (ABS)	M19	Read codes	
LEGEND	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
LEGEND	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
LEGEND	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
LEGEND	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
LEGEND	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
LEGEND	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
LEGEND	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
LEGEND	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
LEGEND	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
LEGEND	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
LEGEND	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
LEGEND	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
LEGEND	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
LEGEND	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
LEGEND	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
LEGEND	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
LEGEND	/	Intelligent Parking Control System (SPS)	M9B	Customize	
LEGEND	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
LEGEND	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
LEGEND	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
LEGEND	/	Hydraulic booster control system (HBS)	M5F	Read codes	
LEGEND	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
LEGEND	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
LEGEND	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
LEGEND	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
LEGEND	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
LEGEND	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
LEGEND	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
LEGEND	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
LEGEND	/	IMA	M63	Read ECU Information	
LEGEND	/	IMA	M63	Read codes	
LEGEND	/	IMA	M63	Erase Codes	
LEGEND	/	IMA	M63	Read Freeze Frame Data	
LEGEND	/	IMA	M63	Read Live Data	
LEGEND	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
LEGEND	/	IMA	M63	Adjustment	SOC PRESET
LEGEND	/	IMA	M64	Read ECU Information	
LEGEND	/	IMA	M64	Read codes	
LEGEND	/	IMA	M64	Erase Codes	
LEGEND	/	IMA	M64	Read Freeze Frame Data	
LEGEND	/	IMA	M64	Read Live Data	
LEGEND	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
LEGEND	/	IMA	M64	Adjustment	SOC PRESET
LEGEND	/	IMA	M65	Read ECU Information	
LEGEND	/	IMA	M65	Read codes	
LEGEND	/	IMA	M65	Erase Codes	
LEGEND	/	IMA	M65	Read Freeze Frame Data	
LEGEND	/	IMA	M65	Read Live Data	
LEGEND	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
LEGEND	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
LEGEND	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
LEGEND	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
LEGEND	/	Intake Sounder Control System (ISC)	M6D	Read codes	
LEGEND	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	

LEGEND	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
LEGEND	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
LEGEND	/	Night Vision System (INVS)	0XB1	Read ECU Information	
LEGEND	/	Night Vision System (INVS)	0XB1	Read codes	
LEGEND	/	Night Vision System (INVS)	0XB1	Erase Codes	
LEGEND	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
LEGEND	/	Night Vision System (INVS)	0XB1	Read Live Data	
LEGEND	/	Night Vision System (INVS)	0XB1	Adjustment	
LEGEND	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
LEGEND	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
LEGEND	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
LEGEND	/	i-SHIFT	0XB0	Read ECU Information	
LEGEND	/	i-SHIFT	0XB0	Read codes	
LEGEND	/	i-SHIFT	0XB0	Erase Codes	
LEGEND	/	i-SHIFT	0XB0	Read Live Data	
LEGEND	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
LEGEND	/	Keyless Entry Control System (KAS)	M99	Read codes	
LEGEND	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
LEGEND	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
LEGEND	/	Keyless Entry Control System (KAS)	M99	Self Check	
LEGEND	/	Keyless Entry Control System (KAS)	M99	History Data	
LEGEND	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
LEGEND	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
LEGEND	/	Keyless Entry Control System (KAS)	M99	Registration	
LEGEND	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
LEGEND	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
LEGEND	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
LEGEND	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
LEGEND	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
LEGEND	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
LEGEND	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
LEGEND	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
LEGEND	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
LEGEND	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
LEGEND	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
LEGEND	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
LEGEND	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
LEGEND	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
LEGEND	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
LEGEND	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
LEGEND	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
LEGEND	/	Management ECU Module (ME)	M74	Read ECU Information	
LEGEND	/	Management ECU Module (ME)	M74	Read codes	
LEGEND	/	Management ECU Module (ME)	M74	Erase Codes	

LEGEND	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
LEGEND	/	Management ECU Module (ME)	M74	Read Live Data	
LEGEND	/	Multi-view camera and parking assist system (MVC/P, M26		Read ECU Information	
LEGEND	/	Multi-view camera and parking assist system (MVC/P, M26		Read codes	
LEGEND	/	Multi-view camera and parking assist system (MVC/P, M26		Erase Codes	
LEGEND	/	Multi-view camera and parking assist system (MVC/P, M26		Read Live Data	
LEGEND	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
LEGEND	/	Multi-view camera system (MVCS)	M7A	Read codes	
LEGEND	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
LEGEND	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
LEGEND	/	Multi-view camera system (MVCS)	M7A	Customization	
LEGEND	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
LEGEND	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
LEGEND	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
LEGEND	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
LEGEND	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
LEGEND	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
LEGEND	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
LEGEND	/	Power Control Unit (PCU)	M83	Read ECU Information	
LEGEND	/	Power Control Unit (PCU)	M83	Read codes	
LEGEND	/	Power Control Unit (PCU)	M83	Erase Codes	
LEGEND	/	Power Control Unit (PCU)	M83	Read Live Data	
LEGEND	/	Power Control Unit (PCU)	M83	Self Check	
LEGEND	/	Power Control Unit (PCU)	M83	History Data	
LEGEND	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
LEGEND	/	Engine Control System (PGM-FI)	M23	Read codes	
LEGEND	/	Engine Control System (PGM-FI)	M23	Erase Codes	
LEGEND	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
LEGEND	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
LEGEND	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
LEGEND	/	Engine Control System (PGM-FI)	M23	Read Live Data	
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
LEGEND	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
LEGEND	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
LEGEND	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
LEGEND	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
LEGEND	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
LEGEND	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
LEGEND	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
LEGEND	/	Engine Control System (PGM-FI)	M50	Read codes	
LEGEND	/	Engine Control System (PGM-FI)	M50	Erase Codes	
LEGEND	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
LEGEND	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
LEGEND	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
LEGEND	/	Engine Control System (PGM-FI)	M50	Read Live Data	
LEGEND	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
LEGEND	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
LEGEND	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
LEGEND	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
LEGEND	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
LEGEND	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
LEGEND	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
LEGEND	/	Engine Control System (PGM-FI)	M86	Read codes	
LEGEND	/	Engine Control System (PGM-FI)	M86	Erase Codes	
LEGEND	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
LEGEND	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
LEGEND	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
LEGEND	/	Engine Control System (PGM-FI)	M86	Read Live Data	
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST

LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
LEGEND	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
LEGEND	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
LEGEND	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
LEGEND	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
LEGEND	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
LEGEND	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
LEGEND	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
LEGEND	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
LEGEND	/	PSR	M27	Read ECU Information	
LEGEND	/	PSR	M27	Read codes	
LEGEND	/	PSR	M27	Erase Codes	
LEGEND	/	PSR	M27	Read Live Data	
LEGEND	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
LEGEND	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
LEGEND	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
LEGEND	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
LEGEND	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
LEGEND	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
LEGEND	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
LEGEND	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
LEGEND	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
LEGEND	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
LEGEND	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
LEGEND	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
LEGEND	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
LEGEND	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
LEGEND	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
LEGEND	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
LEGEND	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
LEGEND	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
LEGEND	/	Remote starter (RS)	M90	System Check	
LEGEND	/	Remote starter (RS)	M90	HISTORY	
LEGEND	/	Remote starter (RS)	M90	Registration	
LEGEND	/	Seat load cell (SWS)	M6F	Read ECU Information	
LEGEND	/	Seat load cell (SWS)	M6F	Read codes	
LEGEND	/	Seat load cell (SWS)	M6F	Erase Codes	
LEGEND	/	Seat load cell (SWS)	M6F	Read Live Data	
LEGEND	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
LEGEND	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
LEGEND	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
LEGEND	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
LEGEND	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
LEGEND	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
LEGEND	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
LEGEND	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
LEGEND	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
LEGEND	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
LEGEND	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
LEGEND	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
LEGEND	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
LEGEND	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
LEGEND	/	Groove track drive unit (SLOT ECU)	M98	History Data	
LEGEND	/	Groove track drive unit (SLOT ECU)	M98	System Information	
LEGEND	/	Airbag Control System (SRS)	M9F	Read ECU Information	
LEGEND	/	Airbag Control System (SRS)	M9F	Read codes	
LEGEND	/	Airbag Control System (SRS)	M9F	Erase Codes	
LEGEND	/	Airbag Control System (SRS)	M9F	Read Live Data	
LEGEND	/	Airbag Control System (SRS)	MA0	Read ECU Information	
LEGEND	/	Airbag Control System (SRS)	MA0	Read codes	
LEGEND	/	Airbag Control System (SRS)	MA0	Erase Codes	
LEGEND	/	Airbag Control System (SRS)	MA0	Read Live Data	
LEGEND	/	Airbag Control System (SRS)	MA1	Read ECU Information	
LEGEND	/	Airbag Control System (SRS)	MA1	Read codes	
LEGEND	/	Airbag Control System (SRS)	MA1	Erase Codes	
LEGEND	/	Airbag Control System (SRS)	MA1	Read Live Data	
LEGEND	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
LEGEND	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
LEGEND	/	Airbag Control System (SRS)	M2A	Read codes	
LEGEND	/	Airbag Control System (SRS)	M2A	Erase Codes	



LEGEND	/	Airbag Control System (SRS)	M2A	Read Live Data	
LEGEND	/	Airbag Control System (SRS)	M9C	Read ECU Information	
LEGEND	/	Airbag Control System (SRS)	M9C	Read codes	
LEGEND	/	Airbag Control System (SRS)	M9C	Erase Codes	
LEGEND	/	Airbag Control System (SRS)	M9C	Read Live Data	
LEGEND	/	Airbag Control System (SRS)	M9D	Read ECU Information	
LEGEND	/	Airbag Control System (SRS)	M9D	Read codes	
LEGEND	/	Airbag Control System (SRS)	M9D	Erase Codes	
LEGEND	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
LEGEND	/	Airbag Control System (SRS)	M9D	Read Live Data	
LEGEND	/	Airbag Control System (SRS)	M9D	Parameter Information	
LEGEND	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
LEGEND	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
LEGEND	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
LEGEND	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
LEGEND	/	Airbag Control System (SRS)	M9D	Function Test	
LEGEND	/	Airbag Control System (SRS)	M9D	System Information	
LEGEND	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
LEGEND	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
LEGEND	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
LEGEND	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
LEGEND	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
LEGEND	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
LEGEND	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
LEGEND	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
LEGEND	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
LEGEND	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
LEGEND	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
LEGEND	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
LEGEND	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
LEGEND	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
LEGEND	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
LEGEND	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
LEGEND	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
LEGEND	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
LEGEND	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
LEGEND HYBRID	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
LEGEND HYBRID	/	Four-wheel steering control system (4WS)	M52	Read codes	
LEGEND HYBRID	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
LEGEND HYBRID	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
LEGEND HYBRID	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
LEGEND HYBRID	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
LEGEND HYBRID	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
LEGEND HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
LEGEND HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
LEGEND HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
LEGEND HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	Read codes	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	Erase Codes	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	Read Live Data	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
LEGEND HYBRID	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3B	Read codes	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3B	Erase Codes	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3B	Read Live Data	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3C	Read codes	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M3C	Erase Codes	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M81	Read ECU Information	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M81	Read codes	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M81	Erase Codes	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M81	Read Live Data	
LEGEND HYBRID	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test

LEGEND HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
LEGEND HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
LEGEND HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
LEGEND HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
LEGEND HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
LEGEND HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
LEGEND HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
LEGEND HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
LEGEND HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
LEGEND HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
LEGEND HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
LEGEND HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
LEGEND HYBRID /	Automatic shift control system (A/T)	M82	Read ECU Information	
LEGEND HYBRID /	Automatic shift control system (A/T)	M82	Read codes	
LEGEND HYBRID /	Automatic shift control system (A/T)	M82	Erase Codes	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
LEGEND HYBRID /	Active Engine Control Support System (ACM)	M06	Read ECU Information	
LEGEND HYBRID /	Active Engine Control Support System (ACM)	M06	Read codes	
LEGEND HYBRID /	Active Engine Control Support System (ACM)	M06	Erase Codes	
LEGEND HYBRID /	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
LEGEND HYBRID /	Active Engine Control Support System (ACM)	M06	Read Live Data	
LEGEND HYBRID /	Active Engine Control Support System (ACM)	M06	ACM Reset	
LEGEND HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
LEGEND HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
LEGEND HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
LEGEND HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
LEGEND HYBRID /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
LEGEND HYBRID /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
LEGEND HYBRID /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
LEGEND HYBRID /	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
LEGEND HYBRID /	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
LEGEND HYBRID /	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
LEGEND HYBRID /	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
LEGEND HYBRID /	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
LEGEND HYBRID /	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
LEGEND HYBRID /	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
LEGEND HYBRID /	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
LEGEND HYBRID /	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
LEGEND HYBRID /	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
LEGEND HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
LEGEND HYBRID /	Transmission Control System (AT)	M18	Read ECU Information	
LEGEND HYBRID /	Transmission Control System (AT)	M18	Read codes	
LEGEND HYBRID /	Transmission Control System (AT)	M18	Erase Codes	
LEGEND HYBRID /	Transmission Control System (AT)	M18	Read Freeze Frame Data	
LEGEND HYBRID /	Transmission Control System (AT)	M18	Read Live Data	
LEGEND HYBRID /	Transmission Control System (AT)	M18	Adjustment	
LEGEND HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
LEGEND HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Read codes	
LEGEND HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
LEGEND HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
LEGEND HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
LEGEND HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
LEGEND HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
LEGEND HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
LEGEND HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator

LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
LEGEND HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
LEGEND HYBRID /	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
LEGEND HYBRID /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
LEGEND HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
LEGEND HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
LEGEND HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
LEGEND HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
LEGEND HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
LEGEND HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
LEGEND HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
LEGEND HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
LEGEND HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
LEGEND HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
LEGEND HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
LEGEND HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
LEGEND HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
LEGEND HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
LEGEND HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
LEGEND HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
LEGEND HYBRID /	BODY ELECTRICAL/e-Call	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
LEGEND HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
LEGEND HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
LEGEND HYBRID /	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
LEGEND HYBRID /	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	

LEGEND HYBRID /	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
LEGEND HYBRID /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
LEGEND HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
LEGEND HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
LEGEND HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
LEGEND HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
LEGEND HYBRID /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
LEGEND HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
LEGEND HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
LEGEND HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
LEGEND HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
LEGEND HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
LEGEND HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
LEGEND HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
LEGEND HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
LEGEND HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
LEGEND HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
LEGEND HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
LEGEND HYBRID /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Security	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Security	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Security	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
LEGEND HYBRID /	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
LEGEND HYBRID /	BODY ELECTRICAL/Security	MFF	History Data	
LEGEND HYBRID /	BODY ELECTRICAL/Security	MFF	History Clear	
LEGEND HYBRID /	BODY ELECTRICAL/Telematics	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
LEGEND HYBRID /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
LEGEND HYBRID /	BODY ELECTRICAL/Wiper	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper

LEGEND HYBRID /	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
LEGEND HYBRID /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
LEGEND HYBRID /	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
LEGEND HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
LEGEND HYBRID /	BODY ELECTRICAL/YOP Security	MFF	Read codes	
LEGEND HYBRID /	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
LEGEND HYBRID /	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
LEGEND HYBRID /	BODY ELECTRICAL/YOP Security	MFF	History Data	
LEGEND HYBRID /	BODY ELECTRICAL/YOP Security	MFF	History Clear	
LEGEND HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
LEGEND HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
LEGEND HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
LEGEND HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
LEGEND HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
LEGEND HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
LEGEND HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
LEGEND HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
LEGEND HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
LEGEND HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
LEGEND HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
LEGEND HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
LEGEND HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
LEGEND HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
LEGEND HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
LEGEND HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
LEGEND HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
LEGEND HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
LEGEND HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
LEGEND HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
LEGEND HYBRID /	Engine Network Control Gateway (CAN GATEWAY)	M24	Neutral Rewrite	
LEGEND HYBRID /	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
LEGEND HYBRID /	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
LEGEND HYBRID /	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
LEGEND HYBRID /	Urban Active Brake Control System (CBAS)	M32	Read codes	
LEGEND HYBRID /	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
LEGEND HYBRID /	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
LEGEND HYBRID /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
LEGEND HYBRID /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
LEGEND HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
LEGEND HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
LEGEND HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
LEGEND HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
LEGEND HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
LEGEND HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
LEGEND HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
LEGEND HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
LEGEND HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
LEGEND HYBRID /	DBW	M34	Read ECU Information	
LEGEND HYBRID /	DBW	M34	Read codes	
LEGEND HYBRID /	DBW	M34	Erase Codes	
LEGEND HYBRID /	DBW	M34	Read Freeze Frame Data	
LEGEND HYBRID /	DBW	M34	Read Live Data	
LEGEND HYBRID /	DBW	M34	Inspection	Idle Speed Adjust
LEGEND HYBRID /	DBW	M34	Inspection	Throttle Test

LEGEND HYBRID /	DBW	M34	ECM Reset	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Read codes	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M37	Read codes	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Read codes	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
LEGEND HYBRID /	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
LEGEND HYBRID /	Capacitor Control System (EDLC)	M12	Read codes	
LEGEND HYBRID /	Capacitor Control System (EDLC)	M12	Erase Codes	
LEGEND HYBRID /	Capacitor Control System (EDLC)	M12	Read Live Data	
LEGEND HYBRID /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
LEGEND HYBRID /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
LEGEND HYBRID /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
LEGEND HYBRID /	Electronic Brake Control System (EPB)	M1F	Read codes	
LEGEND HYBRID /	Electronic Brake Control System (EPB)	M1F	Erase Codes	
LEGEND HYBRID /	Electronic Brake Control System (EPB)	M1F	Read Live Data	
LEGEND HYBRID /	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
LEGEND HYBRID /	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
LEGEND HYBRID /	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
LEGEND HYBRID /	Electronic Brake Control System (EPB)	M3E	Read codes	
LEGEND HYBRID /	Electronic Brake Control System (EPB)	M3E	Erase Codes	
LEGEND HYBRID /	Electronic Brake Control System (EPB)	M3E	Read Live Data	
LEGEND HYBRID /	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
LEGEND HYBRID /	Electric Powertrain / IMA	M66	Read ECU Information	
LEGEND HYBRID /	Electric Powertrain / IMA	M66	Read codes	
LEGEND HYBRID /	Electric Powertrain / IMA	M66	Erase Codes	
LEGEND HYBRID /	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
LEGEND HYBRID /	Electric Powertrain / IMA	M66	Read Live Data	
LEGEND HYBRID /	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
LEGEND HYBRID /	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
LEGEND HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
LEGEND HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
LEGEND HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
LEGEND HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
LEGEND HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
LEGEND HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
LEGEND HYBRID /	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
LEGEND HYBRID /	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
LEGEND HYBRID /	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
LEGEND HYBRID /	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M20	Read codes	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING

LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Read codes	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Read codes	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
LEGEND HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
LEGEND HYBRID /	New energy battery (EV)	M44	Read ECU Information	
LEGEND HYBRID /	New energy battery (EV)	M44	Read codes	
LEGEND HYBRID /	New energy battery (EV)	M44	Erase Codes	
LEGEND HYBRID /	New energy battery (EV)	M44	Read Freeze Frame Data	
LEGEND HYBRID /	New energy battery (EV)	M44	Read Live Data	
LEGEND HYBRID /	New energy battery (EV)	M44	Inspection	
LEGEND HYBRID /	New energy battery (EV)	M44	Adjustment	
LEGEND HYBRID /	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
LEGEND HYBRID /	Electronic vacuum pump (EVPS)	M21	Read codes	
LEGEND HYBRID /	Electronic vacuum pump (EVPS)	M21	Erase Codes	
LEGEND HYBRID /	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
LEGEND HYBRID /	Electronic vacuum pump (EVPS)	M21	Read Live Data	
LEGEND HYBRID /	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
LEGEND HYBRID /	Electronic vacuum pump (EVPS)	M22	Read codes	
LEGEND HYBRID /	Electronic vacuum pump (EVPS)	M22	Erase Codes	
LEGEND HYBRID /	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
LEGEND HYBRID /	Electronic vacuum pump (EVPS)	M22	Read Live Data	
LEGEND HYBRID /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
LEGEND HYBRID /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
LEGEND HYBRID /	FCW LDW	M4E	Read ECU Information	
LEGEND HYBRID /	FCW LDW	M4E	Read codes	
LEGEND HYBRID /	FCW LDW	M4E	Erase Codes	
LEGEND HYBRID /	FCW LDW	M4E	Read Live Data	
LEGEND HYBRID /	FCW LDW	M4E	Function Test	FCW Drive
LEGEND HYBRID /	FCW LDW	M4E	Function Test	Left side lane departure warning
LEGEND HYBRID /	FCW LDW	M4E	Function Test	Right side lane departure warning
LEGEND HYBRID /	FCW LDW	M4E	Function Test	Indicator Drive
LEGEND HYBRID /	FCW LDW	M4E	Adjustment	
LEGEND HYBRID /	Instrument Display System (GAUGE)	M2C	Read codes	
LEGEND HYBRID /	Instrument Display System (GAUGE)	M2C	Erase Codes	
LEGEND HYBRID /	Instrument Display System (GAUGE)	M2C	Read Live Data	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Read ECU Information	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Read codes	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Erase Codes	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Read Live Data	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Read ECU Information	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Read codes	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Erase Codes	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Read Live Data	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Read ECU Information	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Read codes	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Erase Codes	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Read Live Data	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Pulser Test	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser

LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Read codes	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Erase Codes	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Read Live Data	
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
LEGEND HYBRID /	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
LEGEND HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
LEGEND HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read codes	
LEGEND HYBRID /	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
LEGEND HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
LEGEND HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
LEGEND HYBRID /	Intelligent Parking Control System (SPS)	M9B	Customize	
LEGEND HYBRID /	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
LEGEND HYBRID /	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
LEGEND HYBRID /	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
LEGEND HYBRID /	Hydraulic booster control system (HBS)	M5F	Read codes	
LEGEND HYBRID /	Hydraulic booster control system (HBS)	M5F	Erase Codes	
LEGEND HYBRID /	Hydraulic booster control system (HBS)	M5F	Read Live Data	
LEGEND HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
LEGEND HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
LEGEND HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
LEGEND HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
LEGEND HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
LEGEND HYBRID /	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
LEGEND HYBRID /	IMA	M63	Read ECU Information	
LEGEND HYBRID /	IMA	M63	Read codes	
LEGEND HYBRID /	IMA	M63	Erase Codes	
LEGEND HYBRID /	IMA	M63	Read Freeze Frame Data	
LEGEND HYBRID /	IMA	M63	Read Live Data	
LEGEND HYBRID /	IMA	M63	Function Test	IPU MODULE FAN DRIVE
LEGEND HYBRID /	IMA	M63	Adjustment	SOC PRESET
LEGEND HYBRID /	IMA	M64	Read ECU Information	
LEGEND HYBRID /	IMA	M64	Read codes	
LEGEND HYBRID /	IMA	M64	Erase Codes	
LEGEND HYBRID /	IMA	M64	Read Freeze Frame Data	
LEGEND HYBRID /	IMA	M64	Read Live Data	
LEGEND HYBRID /	IMA	M64	Function Test	IPU MODULE FAN DRIVE
LEGEND HYBRID /	IMA	M64	Adjustment	SOC PRESET
LEGEND HYBRID /	IMA	M65	Read ECU Information	
LEGEND HYBRID /	IMA	M65	Read codes	
LEGEND HYBRID /	IMA	M65	Erase Codes	
LEGEND HYBRID /	IMA	M65	Read Freeze Frame Data	
LEGEND HYBRID /	IMA	M65	Read Live Data	
LEGEND HYBRID /	IMA	M65	Function Test	IPU MODULE FAN DRIVE
LEGEND HYBRID /	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
LEGEND HYBRID /	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
LEGEND HYBRID /	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
LEGEND HYBRID /	Intake Sounder Control System (ISC)	M6D	Read codes	
LEGEND HYBRID /	Intake Sounder Control System (ISC)	M6D	Erase Codes	
LEGEND HYBRID /	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
LEGEND HYBRID /	Intake Sounder Control System (ISC)	M6D	Read Live Data	
LEGEND HYBRID /	Night Vision System (INVS)	0XB1	Read ECU Information	
LEGEND HYBRID /	Night Vision System (INVS)	0XB1	Read codes	
LEGEND HYBRID /	Night Vision System (INVS)	0XB1	Erase Codes	
LEGEND HYBRID /	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
LEGEND HYBRID /	Night Vision System (INVS)	0XB1	Read Live Data	
LEGEND HYBRID /	Night Vision System (INVS)	0XB1	Adjustment	
LEGEND HYBRID /	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
LEGEND HYBRID /	Night Vision System (INVS)	0XB1	Function Test	Camera Test
LEGEND HYBRID /	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
LEGEND HYBRID /	i-SHIFT	0XB0	Read ECU Information	
LEGEND HYBRID /	i-SHIFT	0XB0	Read codes	
LEGEND HYBRID /	i-SHIFT	0XB0	Erase Codes	
LEGEND HYBRID /	i-SHIFT	0XB0	Read Live Data	
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Read ECU Information	
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Read codes	
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Erase Codes	
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Read Live Data	
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Self Check	
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	History Data	
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving



LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
LEGEND HYBRID /	Keyless Entry Control System (KAS)	M99	Registration	
LEGEND HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
LEGEND HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
LEGEND HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
LEGEND HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
LEGEND HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
LEGEND HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
LEGEND HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
LEGEND HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
LEGEND HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
LEGEND HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
LEGEND HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
LEGEND HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
LEGEND HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
LEGEND HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
LEGEND HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
LEGEND HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
LEGEND HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
LEGEND HYBRID /	Management ECU Module (ME)	M74	Read ECU Information	
LEGEND HYBRID /	Management ECU Module (ME)	M74	Read codes	
LEGEND HYBRID /	Management ECU Module (ME)	M74	Erase Codes	
LEGEND HYBRID /	Management ECU Module (ME)	M74	Read Freeze Frame Data	
LEGEND HYBRID /	Management ECU Module (ME)	M74	Read Live Data	
LEGEND HYBRID /	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
LEGEND HYBRID /	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
LEGEND HYBRID /	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
LEGEND HYBRID /	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
LEGEND HYBRID /	Multi-view camera system (MVCS)	M7A	Read ECU Information	
LEGEND HYBRID /	Multi-view camera system (MVCS)	M7A	Read codes	
LEGEND HYBRID /	Multi-view camera system (MVCS)	M7A	Erase Codes	
LEGEND HYBRID /	Multi-view camera system (MVCS)	M7A	Read Live Data	
LEGEND HYBRID /	Multi-view camera system (MVCS)	M7A	Customization	
LEGEND HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
LEGEND HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
LEGEND HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
LEGEND HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
LEGEND HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
LEGEND HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
LEGEND HYBRID /	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
LEGEND HYBRID /	Power Control Unit (PCU)	M83	Read ECU Information	
LEGEND HYBRID /	Power Control Unit (PCU)	M83	Read codes	
LEGEND HYBRID /	Power Control Unit (PCU)	M83	Erase Codes	
LEGEND HYBRID /	Power Control Unit (PCU)	M83	Read Live Data	
LEGEND HYBRID /	Power Control Unit (PCU)	M83	Self Check	
LEGEND HYBRID /	Power Control Unit (PCU)	M83	History Data	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Read ECU Information	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Read codes	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Erase Codes	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Readiness Codes	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Read Live Data	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test

LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	VIN CHECK	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	Read ECU Information	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	Read codes	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	Erase Codes	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	Readiness Codes	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	Read Live Data	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	VIN CHECK	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Read ECU Information	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Read codes	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Erase Codes	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Readiness Codes	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Read Live Data	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ACM
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	VIN CHECK	
LEGEND HYBRID /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
LEGEND HYBRID /	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
LEGEND HYBRID /	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
LEGEND HYBRID /	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	
LEGEND HYBRID /	PSR	M27	Read ECU Information	
LEGEND HYBRID /	PSR	M27	Read codes	
LEGEND HYBRID /	PSR	M27	Erase Codes	
LEGEND HYBRID /	PSR	M27	Read Live Data	
LEGEND HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
LEGEND HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
LEGEND HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
LEGEND HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
LEGEND HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
LEGEND HYBRID /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
LEGEND HYBRID /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
LEGEND HYBRID /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
LEGEND HYBRID /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
LEGEND HYBRID /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
LEGEND HYBRID /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
LEGEND HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
LEGEND HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
LEGEND HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
LEGEND HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
LEGEND HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
LEGEND HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
LEGEND HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
LEGEND HYBRID /	Remote starter (RS)	M90	System Check	

LEGEND HYBRID /	Remote starter (RS)	M90	HISTORY	
LEGEND HYBRID /	Remote starter (RS)	M90	Registration	
LEGEND HYBRID /	Seat load cell (SWS)	M6F	Read ECU Information	
LEGEND HYBRID /	Seat load cell (SWS)	M6F	Read codes	
LEGEND HYBRID /	Seat load cell (SWS)	M6F	Erase Codes	
LEGEND HYBRID /	Seat load cell (SWS)	M6F	Read Live Data	
LEGEND HYBRID /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
LEGEND HYBRID /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
LEGEND HYBRID /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
LEGEND HYBRID /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
LEGEND HYBRID /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
LEGEND HYBRID /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
LEGEND HYBRID /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
LEGEND HYBRID /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
LEGEND HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
LEGEND HYBRID /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
LEGEND HYBRID /	Groove track drive unit (SLOT ECU)	M98	Read codes	
LEGEND HYBRID /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
LEGEND HYBRID /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
LEGEND HYBRID /	Groove track drive unit (SLOT ECU)	M98	Self Check	
LEGEND HYBRID /	Groove track drive unit (SLOT ECU)	M98	History Data	
LEGEND HYBRID /	Groove track drive unit (SLOT ECU)	M98	System Information	
LEGEND HYBRID /	Airbag Control System (SRS)	M9F	Read ECU Information	
LEGEND HYBRID /	Airbag Control System (SRS)	M9F	Read codes	
LEGEND HYBRID /	Airbag Control System (SRS)	M9F	Erase Codes	
LEGEND HYBRID /	Airbag Control System (SRS)	M9F	Read Live Data	
LEGEND HYBRID /	Airbag Control System (SRS)	MA0	Read ECU Information	
LEGEND HYBRID /	Airbag Control System (SRS)	MA0	Read codes	
LEGEND HYBRID /	Airbag Control System (SRS)	MA0	Erase Codes	
LEGEND HYBRID /	Airbag Control System (SRS)	MA0	Read Live Data	
LEGEND HYBRID /	Airbag Control System (SRS)	MA1	Read ECU Information	
LEGEND HYBRID /	Airbag Control System (SRS)	MA1	Read codes	
LEGEND HYBRID /	Airbag Control System (SRS)	MA1	Erase Codes	
LEGEND HYBRID /	Airbag Control System (SRS)	MA1	Read Live Data	
LEGEND HYBRID /	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
LEGEND HYBRID /	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
LEGEND HYBRID /	Airbag Control System (SRS)	M2A	Read codes	
LEGEND HYBRID /	Airbag Control System (SRS)	M2A	Erase Codes	
LEGEND HYBRID /	Airbag Control System (SRS)	M2A	Read Live Data	
LEGEND HYBRID /	Airbag Control System (SRS)	M9C	Read ECU Information	
LEGEND HYBRID /	Airbag Control System (SRS)	M9C	Read codes	
LEGEND HYBRID /	Airbag Control System (SRS)	M9C	Erase Codes	
LEGEND HYBRID /	Airbag Control System (SRS)	M9C	Read Live Data	
LEGEND HYBRID /	Airbag Control System (SRS)	M9D	Read ECU Information	
LEGEND HYBRID /	Airbag Control System (SRS)	M9D	Read codes	
LEGEND HYBRID /	Airbag Control System (SRS)	M9D	Erase Codes	
LEGEND HYBRID /	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
LEGEND HYBRID /	Airbag Control System (SRS)	M9D	Read Live Data	
LEGEND HYBRID /	Airbag Control System (SRS)	M9D	Parameter Information	
LEGEND HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
LEGEND HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
LEGEND HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
LEGEND HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
LEGEND HYBRID /	Airbag Control System (SRS)	M9D	Function Test	
LEGEND HYBRID /	Airbag Control System (SRS)	M9D	System Information	
LEGEND HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
LEGEND HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read codes	
LEGEND HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
LEGEND HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
LEGEND HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
LEGEND HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
LEGEND HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Inspection	
LEGEND HYBRID /	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
LEGEND HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Function Test	
LEGEND HYBRID /	Variable Valve Timing Control System (SVT)	MA2	System Information	
LEGEND HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
LEGEND HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
LEGEND HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
LEGEND HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
LEGEND HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	

LEGEND HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
LEGEND HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
LEGEND HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
LEGEND HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
LEGEND HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
LEGEND HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
LEGEND HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
LEGEND HYBRID	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
LEGEND HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
LEGEND HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
LEGEND HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
LEGEND HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
LEGEND HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
LEGEND HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
LEGEND HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
LEGEND HYBRID	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
LIFE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
LIFE	/	Four-wheel steering control system (4WS)	M52	Read codes	
LIFE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
LIFE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
LIFE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
LIFE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
LIFE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
LIFE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
LIFE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
LIFE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
LIFE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
LIFE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
LIFE	/	Automatic shift control system (A/T)	M1E	Read codes	
LIFE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
LIFE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
LIFE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
LIFE	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
LIFE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
LIFE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
LIFE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
LIFE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
LIFE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
LIFE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
LIFE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
LIFE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
LIFE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
LIFE	/	Automatic shift control system (A/T)	M3B	Read codes	
LIFE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
LIFE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
LIFE	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
LIFE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
LIFE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
LIFE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
LIFE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
LIFE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
LIFE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
LIFE	/	Automatic shift control system (A/T)	M3C	Read codes	
LIFE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
LIFE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
LIFE	/	Automatic shift control system (A/T)	M81	Read codes	
LIFE	/	Automatic shift control system (A/T)	M81	Erase Codes	
LIFE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
LIFE	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
LIFE	/	Automatic shift control system (A/T)	M81	Read Live Data	
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
LIFE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
LIFE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
LIFE	/	Automatic shift control system (A/T)	M82	Read codes	
LIFE	/	Automatic shift control system (A/T)	M82	Erase Codes	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3

LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
LIFE	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
LIFE	/	Active Engine Control Support System (ACM) M06	Read codes	
LIFE	/	Active Engine Control Support System (ACM) M06	Erase Codes	
LIFE	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
LIFE	/	Active Engine Control Support System (ACM) M06	Read Live Data	
LIFE	/	Active Engine Control Support System (ACM) M06	ACM Reset	
LIFE	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
LIFE	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
LIFE	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
LIFE	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
LIFE	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
LIFE	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
LIFE	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
LIFE	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
LIFE	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
LIFE	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
LIFE	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
LIFE	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
LIFE	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
LIFE	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
LIFE	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
LIFE	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
LIFE	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
LIFE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
LIFE	/	Transmission Control System (AT) M18	Read ECU Information	
LIFE	/	Transmission Control System (AT) M18	Read codes	
LIFE	/	Transmission Control System (AT) M18	Erase Codes	
LIFE	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
LIFE	/	Transmission Control System (AT) M18	Read Live Data	
LIFE	/	Transmission Control System (AT) M18	Adjustment	
LIFE	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
LIFE	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
LIFE	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
LIFE	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
LIFE	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
LIFE	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
LIFE	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
LIFE	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
LIFE	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
LIFE	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
LIFE	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
LIFE	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
LIFE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
LIFE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
LIFE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
LIFE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
LIFE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
LIFE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
LIFE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
LIFE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
LIFE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	

LIFE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
LIFE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
LIFE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
LIFE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
LIFE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
LIFE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
LIFE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
LIFE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
LIFE	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
LIFE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
LIFE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
LIFE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
LIFE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
LIFE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
LIFE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
LIFE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
LIFE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
LIFE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner

LIFE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
LIFE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
LIFE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
LIFE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
LIFE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
LIFE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
LIFE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
LIFE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
LIFE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
LIFE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
LIFE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
LIFE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
LIFE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Security	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
LIFE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
LIFE	/	BODY ELECTRICAL/Security	MFF	History Data	
LIFE	/	BODY ELECTRICAL/Security	MFF	History Clear	
LIFE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
LIFE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
LIFE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
LIFE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
LIFE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
LIFE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
LIFE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
LIFE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
LIFE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
LIFE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
LIFE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
LIFE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
LIFE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
LIFE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
LIFE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
LIFE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
LIFE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
LIFE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
LIFE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
LIFE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid

LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
LIFE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
LIFE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
LIFE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
LIFE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
LIFE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
LIFE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
LIFE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
LIFE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
LIFE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
LIFE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read ECU Information	
LIFE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read codes	
LIFE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Erase Codes	
LIFE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Freeze Frame Data	
LIFE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Live Data	
LIFE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	CMBS (CMS) ACTIVATION HISTORY	
LIFE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	RADAR AIMING
LIFE	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	CMBS Brake
LIFE	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
LIFE	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
LIFE	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
LIFE	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
LIFE	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
LIFE	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
LIFE	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
LIFE	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
LIFE	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
LIFE	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
LIFE	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
LIFE	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
LIFE	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
LIFE	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
LIFE	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
LIFE	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
LIFE	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
LIFE	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
LIFE	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		ECMPCM Reset	
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
LIFE	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
LIFE	/	DBW	M34	Read ECU Information	
LIFE	/	DBW	M34	Read codes	
LIFE	/	DBW	M34	Erase Codes	
LIFE	/	DBW	M34	Read Freeze Frame Data	
LIFE	/	DBW	M34	Read Live Data	
LIFE	/	DBW	M34	Inspection	Idle Speed Adjust
LIFE	/	DBW	M34	Inspection	Throttle Test
LIFE	/	DBW	M34	ECM Reset	
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
LIFE	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
LIFE	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
LIFE	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
LIFE	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
LIFE	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	



LIFE	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
LIFE	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
LIFE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
LIFE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
LIFE	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
LIFE	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
LIFE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
LIFE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
LIFE	/	Capacitor Control System (EDLC)	M12	Read codes	
LIFE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
LIFE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
LIFE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
LIFE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
LIFE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
LIFE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
LIFE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
LIFE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
LIFE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
LIFE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
LIFE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
LIFE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
LIFE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
LIFE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
LIFE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
LIFE	/	Electric Powertrain / IMA	M66	Read ECU Information	
LIFE	/	Electric Powertrain / IMA	M66	Read codes	
LIFE	/	Electric Powertrain / IMA	M66	Erase Codes	
LIFE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
LIFE	/	Electric Powertrain / IMA	M66	Read Live Data	
LIFE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
LIFE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
LIFE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
LIFE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
LIFE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
LIFE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
LIFE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
LIFE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
LIFE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
LIFE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
LIFE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
LIFE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
LIFE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
LIFE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
LIFE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
LIFE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
LIFE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
LIFE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
LIFE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
LIFE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
LIFE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
LIFE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
LIFE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
LIFE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
LIFE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
LIFE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
LIFE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
LIFE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
LIFE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
LIFE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
LIFE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
LIFE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
LIFE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
LIFE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
LIFE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
LIFE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
LIFE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
LIFE	/	New energy battery (EV)	M44	Read ECU Information	
LIFE	/	New energy battery (EV)	M44	Read codes	
LIFE	/	New energy battery (EV)	M44	Erase Codes	
LIFE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
LIFE	/	New energy battery (EV)	M44	Read Live Data	
LIFE	/	New energy battery (EV)	M44	Inspection	
LIFE	/	New energy battery (EV)	M44	Adjustment	
LIFE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
LIFE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
LIFE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
LIFE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
LIFE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	

LIFE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
LIFE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
LIFE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
LIFE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
LIFE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
LIFE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
LIFE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
LIFE	/	FCW LDW	M4E	Read ECU Information	
LIFE	/	FCW LDW	M4E	Read codes	
LIFE	/	FCW LDW	M4E	Erase Codes	
LIFE	/	FCW LDW	M4E	Read Live Data	
LIFE	/	FCW LDW	M4E	Function Test	FCW Drive
LIFE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
LIFE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
LIFE	/	FCW LDW	M4E	Function Test	Indicator Drive
LIFE	/	FCW LDW	M4E	Adjustment	
LIFE	/	Instrument Display System (GAUGE)	M2C	Read codes	
LIFE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
LIFE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
LIFE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
LIFE	/	Anti-lock brake control system (ABS)	M01	Read codes	
LIFE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
LIFE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
LIFE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
LIFE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
LIFE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
LIFE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
LIFE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
LIFE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
LIFE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
LIFE	/	Anti-lock brake control system (ABS)	M02	Read codes	
LIFE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
LIFE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
LIFE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
LIFE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
LIFE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
LIFE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
LIFE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
LIFE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
LIFE	/	Anti-lock brake control system (ABS)	M03	Read codes	
LIFE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
LIFE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
LIFE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
LIFE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
LIFE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
LIFE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
LIFE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
LIFE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
LIFE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
LIFE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
LIFE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
LIFE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
LIFE	/	Anti-lock brake control system (ABS)	M19	Read codes	
LIFE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
LIFE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
LIFE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
LIFE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
LIFE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
LIFE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
LIFE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
LIFE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
LIFE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
LIFE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
LIFE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
LIFE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
LIFE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
LIFE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
LIFE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
LIFE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
LIFE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
LIFE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
LIFE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
LIFE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
LIFE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
LIFE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
LIFE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
LIFE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
LIFE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test

LIFE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
LIFE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
LIFE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
LIFE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
LIFE	/	IMA	M63	Read ECU Information	
LIFE	/	IMA	M63	Read codes	
LIFE	/	IMA	M63	Erase Codes	
LIFE	/	IMA	M63	Read Freeze Frame Data	
LIFE	/	IMA	M63	Read Live Data	
LIFE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
LIFE	/	IMA	M63	Adjustment	SOC PRESET
LIFE	/	IMA	M64	Read ECU Information	
LIFE	/	IMA	M64	Read codes	
LIFE	/	IMA	M64	Erase Codes	
LIFE	/	IMA	M64	Read Freeze Frame Data	
LIFE	/	IMA	M64	Read Live Data	
LIFE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
LIFE	/	IMA	M64	Adjustment	SOC PRESET
LIFE	/	IMA	M65	Read ECU Information	
LIFE	/	IMA	M65	Read codes	
LIFE	/	IMA	M65	Erase Codes	
LIFE	/	IMA	M65	Read Freeze Frame Data	
LIFE	/	IMA	M65	Read Live Data	
LIFE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
LIFE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
LIFE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
LIFE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
LIFE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
LIFE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
LIFE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
LIFE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
LIFE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
LIFE	/	Night Vision System (INVS)	0XB1	Read codes	
LIFE	/	Night Vision System (INVS)	0XB1	Erase Codes	
LIFE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
LIFE	/	Night Vision System (INVS)	0XB1	Read Live Data	
LIFE	/	Night Vision System (INVS)	0XB1	Adjustment	
LIFE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
LIFE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
LIFE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
LIFE	/	i-SHIFT	0XB0	Read ECU Information	
LIFE	/	i-SHIFT	0XB0	Read codes	
LIFE	/	i-SHIFT	0XB0	Erase Codes	
LIFE	/	i-SHIFT	0XB0	Read Live Data	
LIFE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
LIFE	/	Keyless Entry Control System (KAS)	M99	Read codes	
LIFE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
LIFE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
LIFE	/	Keyless Entry Control System (KAS)	M99	Self Check	
LIFE	/	Keyless Entry Control System (KAS)	M99	History Data	
LIFE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication

LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
LIFE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
LIFE	/	Keyless Entry Control System (KAS)	M99	Registration	
LIFE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
LIFE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
LIFE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
LIFE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
LIFE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
LIFE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
LIFE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
LIFE	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
LIFE	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
LIFE	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
LIFE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
LIFE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
LIFE	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
LIFE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
LIFE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
LIFE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
LIFE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
LIFE	/	Management ECU Module (ME)	M74	Read ECU Information	
LIFE	/	Management ECU Module (ME)	M74	Read codes	
LIFE	/	Management ECU Module (ME)	M74	Erase Codes	
LIFE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
LIFE	/	Management ECU Module (ME)	M74	Read Live Data	
LIFE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
LIFE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
LIFE	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
LIFE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
LIFE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
LIFE	/	Multi-view camera system (MVCS)	M7A	Read codes	
LIFE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
LIFE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
LIFE	/	Multi-view camera system (MVCS)	M7A	Customization	
LIFE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
LIFE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
LIFE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
LIFE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
LIFE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
LIFE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
LIFE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
LIFE	/	Power Control Unit (PCU)	M83	Read ECU Information	
LIFE	/	Power Control Unit (PCU)	M83	Read codes	
LIFE	/	Power Control Unit (PCU)	M83	Erase Codes	
LIFE	/	Power Control Unit (PCU)	M83	Read Live Data	
LIFE	/	Power Control Unit (PCU)	M83	Self Check	
LIFE	/	Power Control Unit (PCU)	M83	History Data	
LIFE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
LIFE	/	Engine Control System (PGM-FI)	M23	Read codes	
LIFE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
LIFE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
LIFE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
LIFE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
LIFE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
LIFE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
LIFE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
LIFE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
LIFE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
LIFE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
LIFE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
LIFE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
LIFE	/	Engine Control System (PGM-FI)	M50	Read codes	
LIFE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
LIFE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
LIFE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
LIFE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
LIFE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
LIFE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
LIFE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
LIFE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK

LIFE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
LIFE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
LIFE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
LIFE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
LIFE	/	Engine Control System (PGM-FI)	M86	Read codes	
LIFE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
LIFE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
LIFE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
LIFE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
LIFE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
LIFE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
LIFE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
LIFE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
LIFE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
LIFE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
LIFE	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
LIFE	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
LIFE	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
LIFE	/	PSR	M27	Read ECU Information	
LIFE	/	PSR	M27	Read codes	
LIFE	/	PSR	M27	Erase Codes	
LIFE	/	PSR	M27	Read Live Data	
LIFE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
LIFE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
LIFE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
LIFE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
LIFE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
LIFE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
LIFE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
LIFE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
LIFE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
LIFE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
LIFE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
LIFE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
LIFE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
LIFE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
LIFE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
LIFE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
LIFE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
LIFE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
LIFE	/	Remote starter (RS)	M90	System Check	
LIFE	/	Remote starter (RS)	M90	HISTORY	
LIFE	/	Remote starter (RS)	M90	Registration	
LIFE	/	Seat load cell (SWS)	M6F	Read ECU Information	
LIFE	/	Seat load cell (SWS)	M6F	Read codes	
LIFE	/	Seat load cell (SWS)	M6F	Erase Codes	
LIFE	/	Seat load cell (SWS)	M6F	Read Live Data	
LIFE	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
LIFE	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
LIFE	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
LIFE	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
LIFE	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
LIFE	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
LIFE	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
LIFE	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	

LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
LIFE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M All Sensor	
LIFE	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
LIFE	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
LIFE	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
LIFE	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
LIFE	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
LIFE	/	Groove track drive unit (SLOT ECU)	M98	History Data	
LIFE	/	Groove track drive unit (SLOT ECU)	M98	System Information	
LIFE	/	Airbag Control System (SRS)	M9F	Read ECU Information	
LIFE	/	Airbag Control System (SRS)	M9F	Read codes	
LIFE	/	Airbag Control System (SRS)	M9F	Erase Codes	
LIFE	/	Airbag Control System (SRS)	M9F	Read Live Data	
LIFE	/	Airbag Control System (SRS)	MA0	Read ECU Information	
LIFE	/	Airbag Control System (SRS)	MA0	Read codes	
LIFE	/	Airbag Control System (SRS)	MA0	Erase Codes	
LIFE	/	Airbag Control System (SRS)	MA0	Read Live Data	
LIFE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
LIFE	/	Airbag Control System (SRS)	MA1	Read codes	
LIFE	/	Airbag Control System (SRS)	MA1	Erase Codes	
LIFE	/	Airbag Control System (SRS)	MA1	Read Live Data	
LIFE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
LIFE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
LIFE	/	Airbag Control System (SRS)	M2A	Read codes	
LIFE	/	Airbag Control System (SRS)	M2A	Erase Codes	
LIFE	/	Airbag Control System (SRS)	M2A	Read Live Data	
LIFE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
LIFE	/	Airbag Control System (SRS)	M9C	Read codes	
LIFE	/	Airbag Control System (SRS)	M9C	Erase Codes	
LIFE	/	Airbag Control System (SRS)	M9C	Read Live Data	
LIFE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
LIFE	/	Airbag Control System (SRS)	M9D	Read codes	
LIFE	/	Airbag Control System (SRS)	M9D	Erase Codes	
LIFE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
LIFE	/	Airbag Control System (SRS)	M9D	Read Live Data	
LIFE	/	Airbag Control System (SRS)	M9D	Parameter Information	
LIFE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
LIFE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
LIFE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
LIFE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
LIFE	/	Airbag Control System (SRS)	M9D	Function Test	
LIFE	/	Airbag Control System (SRS)	M9D	System Information	
LIFE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
LIFE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
LIFE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
LIFE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
LIFE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
LIFE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
LIFE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
LIFE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
LIFE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
LIFE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
LIFE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
LIFE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
LIFE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
LIFE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
LIFE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
LIFE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
LIFE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
LIFE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
LIFE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
LOGO	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
LOGO	/	Four-wheel steering control system (4WS)	M52	Read codes	
LOGO	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
LOGO	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
LOGO	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
LOGO	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
LOGO	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
LOGO	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
LOGO	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
LOGO	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
LOGO	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
LOGO	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
LOGO	/	Automatic shift control system (A/T)	M1E	Read codes	
LOGO	/	Automatic shift control system (A/T)	M1E	Erase Codes	
LOGO	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
LOGO	/	Automatic shift control system (A/T)	M1E	Read Live Data	

LOGO	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
LOGO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
LOGO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
LOGO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
LOGO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
LOGO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
LOGO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
LOGO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
LOGO	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
LOGO	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
LOGO	/	Automatic shift control system (A/T)	M3B	Read codes	
LOGO	/	Automatic shift control system (A/T)	M3B	Erase Codes	
LOGO	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
LOGO	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
LOGO	/	Automatic shift control system (A/T)	M3B	Read Live Data	
LOGO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
LOGO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
LOGO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
LOGO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
LOGO	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
LOGO	/	Automatic shift control system (A/T)	M3C	Read codes	
LOGO	/	Automatic shift control system (A/T)	M3C	Erase Codes	
LOGO	/	Automatic shift control system (A/T)	M81	Read ECU Information	
LOGO	/	Automatic shift control system (A/T)	M81	Read codes	
LOGO	/	Automatic shift control system (A/T)	M81	Erase Codes	
LOGO	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
LOGO	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
LOGO	/	Automatic shift control system (A/T)	M81	Read Live Data	
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
LOGO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
LOGO	/	Automatic shift control system (A/T)	M82	Read ECU Information	
LOGO	/	Automatic shift control system (A/T)	M82	Read codes	
LOGO	/	Automatic shift control system (A/T)	M82	Erase Codes	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
LOGO	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
LOGO	/	Active Engine Control Support System (ACM)	M06	Read codes	
LOGO	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
LOGO	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
LOGO	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
LOGO	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
LOGO	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
LOGO	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
LOGO	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
LOGO	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
LOGO	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
LOGO	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
LOGO	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
LOGO	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
LOGO	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
LOGO	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
LOGO	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
LOGO	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
LOGO	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
LOGO	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
LOGO	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
LOGO	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
LOGO	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)

LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
LOGO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
LOGO	/	Transmission Control System (AT) M18	Read ECU Information	
LOGO	/	Transmission Control System (AT) M18	Read codes	
LOGO	/	Transmission Control System (AT) M18	Erase Codes	
LOGO	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
LOGO	/	Transmission Control System (AT) M18	Read Live Data	
LOGO	/	Transmission Control System (AT) M18	Adjustment	
LOGO	/	Active Torque Converter Control System (ATTTS) M0E	Read ECU Information	
LOGO	/	Active Torque Converter Control System (ATTTS) M0E	Read codes	
LOGO	/	Active Torque Converter Control System (ATTTS) M0E	Erase Codes	
LOGO	/	Active Torque Converter Control System (ATTTS) M0E	Read Freeze Frame Data	
LOGO	/	Active Torque Converter Control System (ATTTS) M0E	Read Live Data	
LOGO	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
LOGO	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	STEERING ANGLE
LOGO	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
LOGO	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	ALL SENSORS
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
LOGO	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
LOGO	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
LOGO	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
LOGO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
LOGO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
LOGO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
LOGO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
LOGO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
LOGO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
LOGO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
LOGO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
LOGO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
LOGO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
LOGO	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
LOGO	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
LOGO	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
LOGO	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
LOGO	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
LOGO	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
LOGO	/	BODY ELECTRICAL/e-Call MFF	Read codes	
LOGO	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
LOGO	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
LOGO	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
LOGO	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	
LOGO	/	BODY ELECTRICAL/Gauges MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Gauges MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Gauges MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Gauges MFF	Function Test	Speedometer
LOGO	/	BODY ELECTRICAL/Gauges MFF	Function Test	Tachometer
LOGO	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Activation Indicator
LOGO	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Indicator
LOGO	/	BODY ELECTRICAL/Gauges MFF	Function Test	ABS INDICATOR
LOGO	/	BODY ELECTRICAL/Gauges MFF	Function Test	EBD Indicator(Electronic Brake Display)
LOGO	/	BODY ELECTRICAL/Gauges MFF	Function Test	Cruise Activation Indicator
LOGO	/	BODY ELECTRICAL/Gauges MFF	Function Test	MIL Status



LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
LOGO	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
LOGO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
LOGO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
LOGO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
LOGO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
LOGO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
LOGO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
LOGO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
LOGO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
LOGO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
LOGO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
LOGO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
LOGO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
LOGO	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
LOGO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
LOGO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
LOGO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
LOGO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up

LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
LOGO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
LOGO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Security	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
LOGO	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
LOGO	/	BODY ELECTRICAL/Security	MFF	History Data	
LOGO	/	BODY ELECTRICAL/Security	MFF	History Clear	
LOGO	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
LOGO	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
LOGO	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
LOGO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
LOGO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
LOGO	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
LOGO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
LOGO	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
LOGO	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
LOGO	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
LOGO	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
LOGO	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
LOGO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
LOGO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
LOGO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
LOGO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
LOGO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
LOGO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
LOGO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
LOGO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
LOGO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
LOGO	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
LOGO	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
LOGO	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
LOGO	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
LOGO	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
LOGO	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
LOGO	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
LOGO	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
LOGO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
LOGO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
LOGO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
LOGO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
LOGO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
LOGO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
LOGO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
LOGO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
LOGO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
LOGO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
LOGO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
LOGO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
LOGO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
LOGO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
LOGO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
LOGO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
LOGO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
LOGO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	

LOGO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
LOGO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
LOGO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
LOGO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
LOGO	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECM/PCM Reset	
LOGO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
LOGO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
LOGO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
LOGO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECM/PCM Reset	
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
LOGO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
LOGO	/	DBW	M34	Read ECU Information	
LOGO	/	DBW	M34	Read codes	
LOGO	/	DBW	M34	Erase Codes	
LOGO	/	DBW	M34	Read Freeze Frame Data	
LOGO	/	DBW	M34	Read Live Data	
LOGO	/	DBW	M34	Inspection	Idle Speed Adjust
LOGO	/	DBW	M34	Inspection	Throttle Test
LOGO	/	DBW	M34	ECM Reset	
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
LOGO	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
LOGO	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
LOGO	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
LOGO	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
LOGO	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
LOGO	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
LOGO	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
LOGO	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
LOGO	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
LOGO	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
LOGO	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
LOGO	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
LOGO	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
LOGO	/	Capacitor Control System (EDLC)	M12	Read codes	
LOGO	/	Capacitor Control System (EDLC)	M12	Erase Codes	
LOGO	/	Capacitor Control System (EDLC)	M12	Read Live Data	
LOGO	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
LOGO	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
LOGO	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
LOGO	/	Electronic Brake Control System (EPB)	M1F	Read codes	
LOGO	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
LOGO	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	

LOGO	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
LOGO	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
LOGO	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
LOGO	/	Electronic Brake Control System (EPB)	M3E	Read codes	
LOGO	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
LOGO	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
LOGO	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
LOGO	/	Electric Powertrain / IMA	M66	Read ECU Information	
LOGO	/	Electric Powertrain / IMA	M66	Read codes	
LOGO	/	Electric Powertrain / IMA	M66	Erase Codes	
LOGO	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
LOGO	/	Electric Powertrain / IMA	M66	Read Live Data	
LOGO	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
LOGO	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
LOGO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
LOGO	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
LOGO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
LOGO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
LOGO	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
LOGO	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
LOGO	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
LOGO	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
LOGO	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
LOGO	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
LOGO	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
LOGO	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
LOGO	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
LOGO	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
LOGO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
LOGO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
LOGO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
LOGO	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
LOGO	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
LOGO	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
LOGO	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
LOGO	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
LOGO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
LOGO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
LOGO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
LOGO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
LOGO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
LOGO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
LOGO	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
LOGO	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
LOGO	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
LOGO	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
LOGO	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
LOGO	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
LOGO	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
LOGO	/	New energy battery (EV)	M44	Read ECU Information	
LOGO	/	New energy battery (EV)	M44	Read codes	
LOGO	/	New energy battery (EV)	M44	Erase Codes	
LOGO	/	New energy battery (EV)	M44	Read Freeze Frame Data	
LOGO	/	New energy battery (EV)	M44	Read Live Data	
LOGO	/	New energy battery (EV)	M44	Inspection	
LOGO	/	New energy battery (EV)	M44	Adjustment	
LOGO	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
LOGO	/	Electronic vacuum pump (EVPS)	M21	Read codes	
LOGO	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
LOGO	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
LOGO	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
LOGO	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
LOGO	/	Electronic vacuum pump (EVPS)	M22	Read codes	
LOGO	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
LOGO	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
LOGO	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
LOGO	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
LOGO	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
LOGO	/	FCW LDW	M4E	Read ECU Information	
LOGO	/	FCW LDW	M4E	Read codes	
LOGO	/	FCW LDW	M4E	Erase Codes	
LOGO	/	FCW LDW	M4E	Read Live Data	
LOGO	/	FCW LDW	M4E	Function Test	FCW Drive
LOGO	/	FCW LDW	M4E	Function Test	Left side lane departure warning
LOGO	/	FCW LDW	M4E	Function Test	Right side lane departure warning
LOGO	/	FCW LDW	M4E	Function Test	Indicator Drive
LOGO	/	FCW LDW	M4E	Adjustment	
LOGO	/	Instrument Display System (GAUGE)	M2C	Read codes	
LOGO	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
LOGO	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
LOGO	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
LOGO	/	Anti-lock brake control system (ABS)	M01	Read codes	
LOGO	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
LOGO	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
LOGO	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
LOGO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
LOGO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
LOGO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
LOGO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA

LOGO	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
LOGO	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
LOGO	/	Anti-lock brake control system (ABS)	M02	Read codes	
LOGO	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
LOGO	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
LOGO	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
LOGO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
LOGO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
LOGO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
LOGO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
LOGO	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
LOGO	/	Anti-lock brake control system (ABS)	M03	Read codes	
LOGO	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
LOGO	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
LOGO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
LOGO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
LOGO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
LOGO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
LOGO	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
LOGO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
LOGO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
LOGO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
LOGO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
LOGO	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
LOGO	/	Anti-lock brake control system (ABS)	M19	Read codes	
LOGO	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
LOGO	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
LOGO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
LOGO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
LOGO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
LOGO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
LOGO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
LOGO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
LOGO	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
LOGO	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
LOGO	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
LOGO	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
LOGO	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
LOGO	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
LOGO	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
LOGO	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
LOGO	/	Intelligent Parking Control System (SPS)	M9B	Customize	
LOGO	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
LOGO	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
LOGO	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
LOGO	/	Hydraulic booster control system (HBS)	M5F	Read codes	
LOGO	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
LOGO	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
LOGO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
LOGO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
LOGO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
LOGO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
LOGO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
LOGO	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
LOGO	/	IMA	M63	Read ECU Information	
LOGO	/	IMA	M63	Read codes	
LOGO	/	IMA	M63	Erase Codes	
LOGO	/	IMA	M63	Read Freeze Frame Data	
LOGO	/	IMA	M63	Read Live Data	
LOGO	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
LOGO	/	IMA	M63	Adjustment	SOC PRESET
LOGO	/	IMA	M64	Read ECU Information	
LOGO	/	IMA	M64	Read codes	
LOGO	/	IMA	M64	Erase Codes	
LOGO	/	IMA	M64	Read Freeze Frame Data	
LOGO	/	IMA	M64	Read Live Data	
LOGO	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
LOGO	/	IMA	M64	Adjustment	SOC PRESET
LOGO	/	IMA	M65	Read ECU Information	
LOGO	/	IMA	M65	Read codes	
LOGO	/	IMA	M65	Erase Codes	
LOGO	/	IMA	M65	Read Freeze Frame Data	
LOGO	/	IMA	M65	Read Live Data	
LOGO	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
LOGO	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
LOGO	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
LOGO	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
LOGO	/	Intake Sounder Control System (ISC)	M6D	Read codes	
LOGO	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
LOGO	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
LOGO	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
LOGO	/	Night Vision System (INVS)	0XB1	Read ECU Information	

LOGO	/	Night Vision System (INVS)	0XB1	Read codes	
LOGO	/	Night Vision System (INVS)	0XB1	Erase Codes	
LOGO	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
LOGO	/	Night Vision System (INVS)	0XB1	Read Live Data	
LOGO	/	Night Vision System (INVS)	0XB1	Adjustment	
LOGO	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
LOGO	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
LOGO	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
LOGO	/	i-SHIFT	0XB0	Read ECU Information	
LOGO	/	i-SHIFT	0XB0	Read codes	
LOGO	/	i-SHIFT	0XB0	Erase Codes	
LOGO	/	i-SHIFT	0XB0	Read Live Data	
LOGO	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
LOGO	/	Keyless Entry Control System (KAS)	M99	Read codes	
LOGO	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
LOGO	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
LOGO	/	Keyless Entry Control System (KAS)	M99	Self Check	
LOGO	/	Keyless Entry Control System (KAS)	M99	History Data	
LOGO	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
LOGO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
LOGO	/	Keyless Entry Control System (KAS)	M99	Registration	
LOGO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
LOGO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
LOGO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
LOGO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
LOGO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
LOGO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
LOGO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
LOGO	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
LOGO	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
LOGO	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
LOGO	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
LOGO	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
LOGO	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
LOGO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
LOGO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
LOGO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
LOGO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
LOGO	/	Management ECU Module (ME)	M74	Read ECU Information	
LOGO	/	Management ECU Module (ME)	M74	Read codes	
LOGO	/	Management ECU Module (ME)	M74	Erase Codes	
LOGO	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
LOGO	/	Management ECU Module (ME)	M74	Read Live Data	
LOGO	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	

LOGO	/	Multi-view camera and parking assist system (MVC/P, M26	Read codes		
LOGO	/	Multi-view camera and parking assist system (MVC/P, M26	Erase Codes		
LOGO	/	Multi-view camera and parking assist system (MVC/P, M26	Read Live Data		
LOGO	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
LOGO	/	Multi-view camera system (MVCS)	M7A	Read codes	
LOGO	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
LOGO	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
LOGO	/	Multi-view camera system (MVCS)	M7A	Customization	
LOGO	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
LOGO	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
LOGO	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
LOGO	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
LOGO	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
LOGO	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
LOGO	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
LOGO	/	Power Control Unit (PCU)	M83	Read ECU Information	
LOGO	/	Power Control Unit (PCU)	M83	Read codes	
LOGO	/	Power Control Unit (PCU)	M83	Erase Codes	
LOGO	/	Power Control Unit (PCU)	M83	Read Live Data	
LOGO	/	Power Control Unit (PCU)	M83	Self Check	
LOGO	/	Power Control Unit (PCU)	M83	History Data	
LOGO	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
LOGO	/	Engine Control System (PGM-FI)	M23	Read codes	
LOGO	/	Engine Control System (PGM-FI)	M23	Erase Codes	
LOGO	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
LOGO	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
LOGO	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
LOGO	/	Engine Control System (PGM-FI)	M23	Read Live Data	
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
LOGO	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
LOGO	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
LOGO	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
LOGO	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
LOGO	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
LOGO	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
LOGO	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
LOGO	/	Engine Control System (PGM-FI)	M50	Read codes	
LOGO	/	Engine Control System (PGM-FI)	M50	Erase Codes	
LOGO	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
LOGO	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
LOGO	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
LOGO	/	Engine Control System (PGM-FI)	M50	Read Live Data	
LOGO	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
LOGO	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
LOGO	/	Engine Control System (PGM-FI)	M50	Inspection	VTC TEST
LOGO	/	Engine Control System (PGM-FI)	M50	Inspection	IMT (IMRC) TEST
LOGO	/	Engine Control System (PGM-FI)	M50	Inspection	EGR TEST
LOGO	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC TEST
LOGO	/	Engine Control System (PGM-FI)	M50	Inspection	IACV TEST
LOGO	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
LOGO	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
LOGO	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
LOGO	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
LOGO	/	Engine Control System (PGM-FI)	M86	Read codes	
LOGO	/	Engine Control System (PGM-FI)	M86	Erase Codes	
LOGO	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
LOGO	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
LOGO	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
LOGO	/	Engine Control System (PGM-FI)	M86	Read Live Data	
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
LOGO	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
LOGO	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	

LOGO	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
LOGO	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
LOGO	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
LOGO	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
LOGO	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
LOGO	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
LOGO	/	PSR	M27	Read ECU Information	
LOGO	/	PSR	M27	Read codes	
LOGO	/	PSR	M27	Erase Codes	
LOGO	/	PSR	M27	Read Live Data	
LOGO	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
LOGO	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
LOGO	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
LOGO	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
LOGO	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
LOGO	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
LOGO	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
LOGO	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
LOGO	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
LOGO	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
LOGO	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
LOGO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
LOGO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
LOGO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
LOGO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
LOGO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
LOGO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
LOGO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
LOGO	/	Remote starter (RS)	M90	System Check	
LOGO	/	Remote starter (RS)	M90	HISTORY	
LOGO	/	Remote starter (RS)	M90	Registration	
LOGO	/	Seat load cell (SWS)	M6F	Read ECU Information	
LOGO	/	Seat load cell (SWS)	M6F	Read codes	
LOGO	/	Seat load cell (SWS)	M6F	Erase Codes	
LOGO	/	Seat load cell (SWS)	M6F	Read Live Data	
LOGO	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
LOGO	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
LOGO	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
LOGO	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
LOGO	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
LOGO	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
LOGO	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
LOGO	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
LOGO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
LOGO	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
LOGO	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
LOGO	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
LOGO	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
LOGO	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
LOGO	/	Groove track drive unit (SLOT ECU)	M98	History Data	
LOGO	/	Groove track drive unit (SLOT ECU)	M98	System Information	
LOGO	/	Airbag Control System (SRS)	M9F	Read ECU Information	
LOGO	/	Airbag Control System (SRS)	M9F	Read codes	
LOGO	/	Airbag Control System (SRS)	M9F	Erase Codes	
LOGO	/	Airbag Control System (SRS)	M9F	Read Live Data	
LOGO	/	Airbag Control System (SRS)	MA0	Read ECU Information	
LOGO	/	Airbag Control System (SRS)	MA0	Read codes	
LOGO	/	Airbag Control System (SRS)	MA0	Erase Codes	
LOGO	/	Airbag Control System (SRS)	MA0	Read Live Data	
LOGO	/	Airbag Control System (SRS)	MA1	Read ECU Information	
LOGO	/	Airbag Control System (SRS)	MA1	Read codes	
LOGO	/	Airbag Control System (SRS)	MA1	Erase Codes	
LOGO	/	Airbag Control System (SRS)	MA1	Read Live Data	
LOGO	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
LOGO	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
LOGO	/	Airbag Control System (SRS)	M2A	Read codes	
LOGO	/	Airbag Control System (SRS)	M2A	Erase Codes	
LOGO	/	Airbag Control System (SRS)	M2A	Read Live Data	
LOGO	/	Airbag Control System (SRS)	M9C	Read ECU Information	
LOGO	/	Airbag Control System (SRS)	M9C	Read codes	



LOGO	/	Airbag Control System (SRS)	M9C	Erase Codes	
LOGO	/	Airbag Control System (SRS)	M9C	Read Live Data	
LOGO	/	Airbag Control System (SRS)	M9D	Read ECU Information	
LOGO	/	Airbag Control System (SRS)	M9D	Read codes	
LOGO	/	Airbag Control System (SRS)	M9D	Erase Codes	
LOGO	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
LOGO	/	Airbag Control System (SRS)	M9D	Read Live Data	
LOGO	/	Airbag Control System (SRS)	M9D	Parameter Information	
LOGO	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
LOGO	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
LOGO	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
LOGO	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
LOGO	/	Airbag Control System (SRS)	M9D	Function Test	
LOGO	/	Airbag Control System (SRS)	M9D	System Information	
LOGO	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
LOGO	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
LOGO	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
LOGO	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
LOGO	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
LOGO	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
LOGO	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
LOGO	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
LOGO	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
LOGO	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
LOGO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
LOGO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
LOGO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
LOGO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
LOGO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
LOGO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
LOGO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
LOGO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
LOGO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
MDX	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
MDX	/	Four-wheel steering control system (4WS)	M52	Read codes	
MDX	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
MDX	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
MDX	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
MDX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
MDX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
MDX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
MDX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
MDX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
MDX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
MDX	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
MDX	/	Automatic shift control system (A/T)	M1E	Read codes	
MDX	/	Automatic shift control system (A/T)	M1E	Erase Codes	
MDX	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
MDX	/	Automatic shift control system (A/T)	M1E	Read Live Data	
MDX	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
MDX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
MDX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
MDX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
MDX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
MDX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
MDX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
MDX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
MDX	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
MDX	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
MDX	/	Automatic shift control system (A/T)	M3B	Read codes	
MDX	/	Automatic shift control system (A/T)	M3B	Erase Codes	
MDX	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
MDX	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
MDX	/	Automatic shift control system (A/T)	M3B	Read Live Data	
MDX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
MDX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
MDX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
MDX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
MDX	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
MDX	/	Automatic shift control system (A/T)	M3C	Read codes	
MDX	/	Automatic shift control system (A/T)	M3C	Erase Codes	
MDX	/	Automatic shift control system (A/T)	M81	Read ECU Information	
MDX	/	Automatic shift control system (A/T)	M81	Read codes	
MDX	/	Automatic shift control system (A/T)	M81	Erase Codes	
MDX	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
MDX	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
MDX	/	Automatic shift control system (A/T)	M81	Read Live Data	
MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C

MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
MDX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
MDX	/	Automatic shift control system (A/T)	M82	Read ECU Information	
MDX	/	Automatic shift control system (A/T)	M82	Read codes	
MDX	/	Automatic shift control system (A/T)	M82	Erase Codes	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
MDX	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
MDX	/	Active Engine Control Support System (ACM)	M06	Read codes	
MDX	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
MDX	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
MDX	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
MDX	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
MDX	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
MDX	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
MDX	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
MDX	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
MDX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
MDX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
MDX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
MDX	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read ECU Information	
MDX	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read codes	
MDX	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Erase Codes	
MDX	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Freeze Frame Data	
MDX	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Live Data	
MDX	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Function Test	Damper Force Operation Test
MDX	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Adjustment	Damper Stroke Calibration
MDX	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
MDX	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
MDX	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
MDX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
MDX	/	Transmission Control System (AT)	M18	Read ECU Information	
MDX	/	Transmission Control System (AT)	M18	Read codes	
MDX	/	Transmission Control System (AT)	M18	Erase Codes	
MDX	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
MDX	/	Transmission Control System (AT)	M18	Read Live Data	
MDX	/	Transmission Control System (AT)	M18	Adjustment	
MDX	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
MDX	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
MDX	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
MDX	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
MDX	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
MDX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
MDX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
MDX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
MDX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message

MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
MDX	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
MDX	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
MDX	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Function Test	Oncoming Vehicle Detection
MDX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Function Test	Preceding Vehicle Detection
MDX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
MDX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
MDX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Reset Operation
MDX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Returning Operation
MDX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Automatic Returning Distance
MDX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Manual Returning Time
MDX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Reset to default
MDX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
MDX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
MDX	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
MDX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
MDX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
MDX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
MDX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
MDX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
MDX	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
MDX	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
MDX	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
MDX	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
MDX	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
MDX	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
MDX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
MDX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
MDX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
MDX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
MDX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
MDX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
MDX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	

MDX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
MDX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
MDX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
MDX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
MDX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
MDX	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
MDX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
MDX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
MDX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
MDX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
MDX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
MDX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
MDX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
MDX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
MDX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
MDX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
MDX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
MDX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
MDX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
MDX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Security	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
MDX	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
MDX	/	BODY ELECTRICAL/Security	MFF	History Data	
MDX	/	BODY ELECTRICAL/Security	MFF	History Clear	
MDX	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
MDX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
MDX	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
MDX	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
MDX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
MDX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
MDX	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	

MDX	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
MDX	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
MDX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
MDX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
MDX	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
MDX	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
MDX	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
MDX	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
MDX	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
MDX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
MDX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
MDX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
MDX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
MDX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
MDX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
MDX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
MDX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
MDX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
MDX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
MDX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
MDX	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
MDX	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
MDX	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
MDX	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
MDX	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
MDX	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
MDX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
MDX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
MDX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
MDX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
MDX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
MDX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
MDX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
MDX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
MDX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
MDX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
MDX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
MDX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
MDX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
MDX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
MDX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
MDX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
MDX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
MDX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
MDX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
MDX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
MDX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
MDX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
MDX	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
MDX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
MDX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
MDX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
MDX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
MDX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
MDX	/	DBW	M34	Read ECU Information	
MDX	/	DBW	M34	Read codes	
MDX	/	DBW	M34	Erase Codes	
MDX	/	DBW	M34	Read Freeze Frame Data	
MDX	/	DBW	M34	Read Live Data	
MDX	/	DBW	M34	Inspection	Idle Speed Adjust
MDX	/	DBW	M34	Inspection	Throttle Test
MDX	/	DBW	M34	ECM Reset	
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	

MDX	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
MDX	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
MDX	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
MDX	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
MDX	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
MDX	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
MDX	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
MDX	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
MDX	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
MDX	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
MDX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
MDX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
MDX	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
MDX	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
MDX	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
MDX	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
MDX	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
MDX	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
MDX	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
MDX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
MDX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
MDX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
MDX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
MDX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
MDX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
MDX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
MDX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
MDX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
MDX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
MDX	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
MDX	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
MDX	/	Capacitor Control System (EDLC)	M12	Read codes	
MDX	/	Capacitor Control System (EDLC)	M12	Erase Codes	
MDX	/	Capacitor Control System (EDLC)	M12	Read Live Data	
MDX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
MDX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
MDX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
MDX	/	Electronic Brake Control System (EPB)	M1F	Read codes	
MDX	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
MDX	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
MDX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
MDX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
MDX	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
MDX	/	Electronic Brake Control System (EPB)	M3E	Read codes	
MDX	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
MDX	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
MDX	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
MDX	/	Electric Powertrain / IMA	M66	Read ECU Information	
MDX	/	Electric Powertrain / IMA	M66	Read codes	
MDX	/	Electric Powertrain / IMA	M66	Erase Codes	
MDX	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
MDX	/	Electric Powertrain / IMA	M66	Read Live Data	
MDX	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
MDX	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
MDX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
MDX	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
MDX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
MDX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
MDX	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
MDX	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
MDX	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
MDX	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
MDX	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
MDX	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
MDX	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
MDX	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
MDX	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
MDX	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
MDX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
MDX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
MDX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
MDX	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	

MDX	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
MDX	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
MDX	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
MDX	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
MDX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
MDX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
MDX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
MDX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
MDX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
MDX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
MDX	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
MDX	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
MDX	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
MDX	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
MDX	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
MDX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
MDX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
MDX	/	New energy battery (EV)	M44	Read ECU Information	
MDX	/	New energy battery (EV)	M44	Read codes	
MDX	/	New energy battery (EV)	M44	Erase Codes	
MDX	/	New energy battery (EV)	M44	Read Freeze Frame Data	
MDX	/	New energy battery (EV)	M44	Read Live Data	
MDX	/	New energy battery (EV)	M44	Inspection	
MDX	/	New energy battery (EV)	M44	Adjustment	
MDX	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
MDX	/	Electronic vacuum pump (EVPS)	M21	Read codes	
MDX	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
MDX	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
MDX	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
MDX	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
MDX	/	Electronic vacuum pump (EVPS)	M22	Read codes	
MDX	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
MDX	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
MDX	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
MDX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
MDX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
MDX	/	FCW LDW	M4E	Read ECU Information	
MDX	/	FCW LDW	M4E	Read codes	
MDX	/	FCW LDW	M4E	Erase Codes	
MDX	/	FCW LDW	M4E	Read Live Data	
MDX	/	FCW LDW	M4E	Function Test	FCW Drive
MDX	/	FCW LDW	M4E	Function Test	Left side lane departure warning
MDX	/	FCW LDW	M4E	Function Test	Right side lane departure warning
MDX	/	FCW LDW	M4E	Function Test	Indicator Drive
MDX	/	FCW LDW	M4E	Adjustment	
MDX	/	Instrument Display System (GAUGE)	M2C	Read codes	
MDX	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
MDX	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
MDX	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
MDX	/	Anti-lock brake control system (ABS)	M01	Read codes	
MDX	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
MDX	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
MDX	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
MDX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
MDX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
MDX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
MDX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
MDX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
MDX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
MDX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
MDX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
MDX	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
MDX	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
MDX	/	Anti-lock brake control system (ABS)	M02	Read codes	
MDX	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
MDX	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
MDX	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
MDX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
MDX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
MDX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
MDX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
MDX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
MDX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
MDX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
MDX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
MDX	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
MDX	/	Anti-lock brake control system (ABS)	M03	Read codes	
MDX	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
MDX	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
MDX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
MDX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
MDX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
MDX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
MDX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
MDX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
MDX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
MDX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
MDX	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
MDX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
MDX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
MDX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
MDX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
MDX	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	

MDX	/	Anti-lock brake control system (ABS)	M19	Read codes	
MDX	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
MDX	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
MDX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
MDX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
MDX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
MDX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
MDX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
MDX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
MDX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
MDX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
MDX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
MDX	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
MDX	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
MDX	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
MDX	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
MDX	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
MDX	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
MDX	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
MDX	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
MDX	/	Intelligent Parking Control System (SPS)	M9B	Customize	
MDX	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
MDX	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
MDX	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
MDX	/	Hydraulic booster control system (HBS)	M5F	Read codes	
MDX	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
MDX	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
MDX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
MDX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
MDX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
MDX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
MDX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
MDX	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
MDX	/	IMA	M63	Read ECU Information	
MDX	/	IMA	M63	Read codes	
MDX	/	IMA	M63	Erase Codes	
MDX	/	IMA	M63	Read Freeze Frame Data	
MDX	/	IMA	M63	Read Live Data	
MDX	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
MDX	/	IMA	M63	Adjustment	SOC PRESET
MDX	/	IMA	M64	Read ECU Information	
MDX	/	IMA	M64	Read codes	
MDX	/	IMA	M64	Erase Codes	
MDX	/	IMA	M64	Read Freeze Frame Data	
MDX	/	IMA	M64	Read Live Data	
MDX	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
MDX	/	IMA	M64	Adjustment	SOC PRESET
MDX	/	IMA	M65	Read ECU Information	
MDX	/	IMA	M65	Read codes	
MDX	/	IMA	M65	Erase Codes	
MDX	/	IMA	M65	Read Freeze Frame Data	
MDX	/	IMA	M65	Read Live Data	
MDX	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
MDX	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
MDX	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
MDX	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
MDX	/	Intake Sounder Control System (ISC)	M6D	Read codes	
MDX	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
MDX	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
MDX	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
MDX	/	Night Vision System (INVS)	0XB1	Read ECU Information	
MDX	/	Night Vision System (INVS)	0XB1	Read codes	
MDX	/	Night Vision System (INVS)	0XB1	Erase Codes	
MDX	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
MDX	/	Night Vision System (INVS)	0XB1	Read Live Data	
MDX	/	Night Vision System (INVS)	0XB1	Adjustment	
MDX	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
MDX	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
MDX	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
MDX	/	i-SHIFT	0XB0	Read ECU Information	
MDX	/	i-SHIFT	0XB0	Read codes	
MDX	/	i-SHIFT	0XB0	Erase Codes	
MDX	/	i-SHIFT	0XB0	Read Live Data	
MDX	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
MDX	/	Keyless Entry Control System (KAS)	M99	Read codes	
MDX	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
MDX	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
MDX	/	Keyless Entry Control System (KAS)	M99	Self Check	
MDX	/	Keyless Entry Control System (KAS)	M99	History Data	
MDX	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving



MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
MDX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
MDX	/	Keyless Entry Control System (KAS)	M99	Registration	
MDX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
MDX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
MDX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
MDX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
MDX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
MDX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
MDX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
MDX	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
MDX	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
MDX	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
MDX	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
MDX	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
MDX	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
MDX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
MDX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
MDX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
MDX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
MDX	/	Management ECU Module (ME)	M74	Read ECU Information	
MDX	/	Management ECU Module (ME)	M74	Read codes	
MDX	/	Management ECU Module (ME)	M74	Erase Codes	
MDX	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
MDX	/	Management ECU Module (ME)	M74	Read Live Data	
MDX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
MDX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
MDX	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
MDX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
MDX	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
MDX	/	Multi-view camera system (MVCS)	M7A	Read codes	
MDX	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
MDX	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
MDX	/	Multi-view camera system (MVCS)	M7A	Customization	
MDX	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
MDX	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
MDX	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
MDX	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
MDX	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
MDX	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
MDX	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
MDX	/	Power Control Unit (PCU)	M83	Read ECU Information	
MDX	/	Power Control Unit (PCU)	M83	Read codes	
MDX	/	Power Control Unit (PCU)	M83	Erase Codes	
MDX	/	Power Control Unit (PCU)	M83	Read Live Data	
MDX	/	Power Control Unit (PCU)	M83	Self Check	
MDX	/	Power Control Unit (PCU)	M83	History Data	
MDX	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
MDX	/	Engine Control System (PGM-FI)	M23	Read codes	
MDX	/	Engine Control System (PGM-FI)	M23	Erase Codes	
MDX	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
MDX	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
MDX	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
MDX	/	Engine Control System (PGM-FI)	M23	Read Live Data	
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST

MDX	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
MDX	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
MDX	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
MDX	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
MDX	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
MDX	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
MDX	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
MDX	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
MDX	/	Engine Control System (PGM-FI)	M50	Read codes	
MDX	/	Engine Control System (PGM-FI)	M50	Erase Codes	
MDX	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
MDX	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
MDX	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
MDX	/	Engine Control System (PGM-FI)	M50	Read Live Data	
MDX	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
MDX	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
MDX	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
MDX	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
MDX	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
MDX	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
MDX	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
MDX	/	Engine Control System (PGM-FI)	M86	Read codes	
MDX	/	Engine Control System (PGM-FI)	M86	Erase Codes	
MDX	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
MDX	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
MDX	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
MDX	/	Engine Control System (PGM-FI)	M86	Read Live Data	
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
MDX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
MDX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
MDX	/	Engine Control System (PGM-FI)	M86	Inspection	CRANK (CKP) PATTERN CLEAR
MDX	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
MDX	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
MDX	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
MDX	/	Four-wheel precision steering control system (PAWSC M96)		Read codes	
MDX	/	Four-wheel precision steering control system (PAWSC M96)		Erase Codes	
MDX	/	Four-wheel precision steering control system (PAWSC M96)		Read Live Data	
MDX	/	PSR	M27	Read ECU Information	
MDX	/	PSR	M27	Read codes	
MDX	/	PSR	M27	Erase Codes	
MDX	/	PSR	M27	Read Live Data	
MDX	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
MDX	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
MDX	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
MDX	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
MDX	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
MDX	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
MDX	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
MDX	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
MDX	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
MDX	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
MDX	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
MDX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
MDX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
MDX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
MDX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
MDX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
MDX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
MDX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
MDX	/	Remote starter (RS)	M90	System Check	
MDX	/	Remote starter (RS)	M90	HISTORY	
MDX	/	Remote starter (RS)	M90	Registration	
MDX	/	Seat load cell (SWS)	M6F	Read ECU Information	

MDX	/	Seat load cell (SWS)	M6F	Read codes	
MDX	/	Seat load cell (SWS)	M6F	Erase Codes	
MDX	/	Seat load cell (SWS)	M6F	Read Live Data	
MDX	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
MDX	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
MDX	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
MDX	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
MDX	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
MDX	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
MDX	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
MDX	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
MDX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
MDX	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
MDX	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
MDX	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
MDX	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
MDX	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
MDX	/	Groove track drive unit (SLOT ECU)	M98	History Data	
MDX	/	Groove track drive unit (SLOT ECU)	M98	System Information	
MDX	/	Airbag Control System (SRS)	M9F	Read ECU Information	
MDX	/	Airbag Control System (SRS)	M9F	Read codes	
MDX	/	Airbag Control System (SRS)	M9F	Erase Codes	
MDX	/	Airbag Control System (SRS)	M9F	Read Live Data	
MDX	/	Airbag Control System (SRS)	MA0	Read ECU Information	
MDX	/	Airbag Control System (SRS)	MA0	Read codes	
MDX	/	Airbag Control System (SRS)	MA0	Erase Codes	
MDX	/	Airbag Control System (SRS)	MA0	Read Live Data	
MDX	/	Airbag Control System (SRS)	MA1	Read ECU Information	
MDX	/	Airbag Control System (SRS)	MA1	Read codes	
MDX	/	Airbag Control System (SRS)	MA1	Erase Codes	
MDX	/	Airbag Control System (SRS)	MA1	Read Live Data	
MDX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
MDX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
MDX	/	Airbag Control System (SRS)	M2A	Read codes	
MDX	/	Airbag Control System (SRS)	M2A	Erase Codes	
MDX	/	Airbag Control System (SRS)	M2A	Read Live Data	
MDX	/	Airbag Control System (SRS)	M9C	Read ECU Information	
MDX	/	Airbag Control System (SRS)	M9C	Read codes	
MDX	/	Airbag Control System (SRS)	M9C	Erase Codes	
MDX	/	Airbag Control System (SRS)	M9C	Read Live Data	
MDX	/	Airbag Control System (SRS)	M9D	Read ECU Information	
MDX	/	Airbag Control System (SRS)	M9D	Read codes	
MDX	/	Airbag Control System (SRS)	M9D	Erase Codes	
MDX	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
MDX	/	Airbag Control System (SRS)	M9D	Read Live Data	
MDX	/	Airbag Control System (SRS)	M9D	Parameter Information	
MDX	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
MDX	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
MDX	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
MDX	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
MDX	/	Airbag Control System (SRS)	M9D	Function Test	
MDX	/	Airbag Control System (SRS)	M9D	System Information	
MDX	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
MDX	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
MDX	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
MDX	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
MDX	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
MDX	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
MDX	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
MDX	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
MDX	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
MDX	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
MDX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
MDX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
MDX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
MDX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
MDX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
MDX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
MDX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
MDX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	

MDX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
MDX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
MDX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
MDX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
MDX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
MDX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
MDX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
MDX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
MDX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
MDX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
MDX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
MDX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
MDX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
MOBILIO	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
MOBILIO	/	Four-wheel steering control system (4WS)	M52	Read codes	
MOBILIO	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
MOBILIO	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
MOBILIO	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
MOBILIO	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
MOBILIO	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
MOBILIO	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
MOBILIO	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
MOBILIO	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
MOBILIO	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
MOBILIO	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
MOBILIO	/	Automatic shift control system (A/T)	M1E	Read codes	
MOBILIO	/	Automatic shift control system (A/T)	M1E	Erase Codes	
MOBILIO	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
MOBILIO	/	Automatic shift control system (A/T)	M1E	Read Live Data	
MOBILIO	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
MOBILIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
MOBILIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
MOBILIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
MOBILIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
MOBILIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
MOBILIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
MOBILIO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
MOBILIO	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
MOBILIO	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
MOBILIO	/	Automatic shift control system (A/T)	M3B	Read codes	
MOBILIO	/	Automatic shift control system (A/T)	M3B	Erase Codes	
MOBILIO	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
MOBILIO	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
MOBILIO	/	Automatic shift control system (A/T)	M3B	Read Live Data	
MOBILIO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
MOBILIO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
MOBILIO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
MOBILIO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
MOBILIO	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
MOBILIO	/	Automatic shift control system (A/T)	M3C	Read codes	
MOBILIO	/	Automatic shift control system (A/T)	M3C	Erase Codes	
MOBILIO	/	Automatic shift control system (A/T)	M81	Read ECU Information	
MOBILIO	/	Automatic shift control system (A/T)	M81	Read codes	
MOBILIO	/	Automatic shift control system (A/T)	M81	Erase Codes	
MOBILIO	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
MOBILIO	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
MOBILIO	/	Automatic shift control system (A/T)	M81	Read Live Data	
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
MOBILIO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
MOBILIO	/	Automatic shift control system (A/T)	M82	Read ECU Information	
MOBILIO	/	Automatic shift control system (A/T)	M82	Read codes	
MOBILIO	/	Automatic shift control system (A/T)	M82	Erase Codes	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY

MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
MOBILIO	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
MOBILIO	/	Active Engine Control Support System (ACM) M06	Read codes	
MOBILIO	/	Active Engine Control Support System (ACM) M06	Erase Codes	
MOBILIO	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
MOBILIO	/	Active Engine Control Support System (ACM) M06	Read Live Data	
MOBILIO	/	Active Engine Control Support System (ACM) M06	ACM Reset	
MOBILIO	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
MOBILIO	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
MOBILIO	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
MOBILIO	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
MOBILIO	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
MOBILIO	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
MOBILIO	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
MOBILIO	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
MOBILIO	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
MOBILIO	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
MOBILIO	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
MOBILIO	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
MOBILIO	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
MOBILIO	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
MOBILIO	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
MOBILIO	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
MOBILIO	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
MOBILIO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
MOBILIO	/	Transmission Control System (AT) M18	Read ECU Information	
MOBILIO	/	Transmission Control System (AT) M18	Read codes	
MOBILIO	/	Transmission Control System (AT) M18	Erase Codes	
MOBILIO	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
MOBILIO	/	Transmission Control System (AT) M18	Read Live Data	
MOBILIO	/	Transmission Control System (AT) M18	Adjustment	
MOBILIO	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
MOBILIO	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
MOBILIO	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
MOBILIO	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
MOBILIO	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
MOBILIO	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
MOBILIO	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
MOBILIO	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
MOBILIO	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
MOBILIO	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
MOBILIO	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
MOBILIO	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
MOBILIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
MOBILIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
MOBILIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
MOBILIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
MOBILIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
MOBILIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
MOBILIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
MOBILIO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
MOBILIO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
MOBILIO	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
MOBILIO	/	BODY ELECTRICAL/Door Locks MFF	Read codes	

MOBILIO	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
MOBILIO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
MOBILIO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
MOBILIO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
MOBILIO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
MOBILIO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
MOBILIO	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
MOBILIO	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
MOBILIO	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
MOBILIO	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
MOBILIO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
MOBILIO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
MOBILIO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
MOBILIO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
MOBILIO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
MOBILIO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
MOBILIO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	

MOBILIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
MOBILIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
MOBILIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
MOBILIO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
MOBILIO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
MOBILIO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
MOBILIO	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
MOBILIO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
MOBILIO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
MOBILIO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
MOBILIO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
MOBILIO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
MOBILIO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Security	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
MOBILIO	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
MOBILIO	/	BODY ELECTRICAL/Security	MFF	History Data	
MOBILIO	/	BODY ELECTRICAL/Security	MFF	History Clear	
MOBILIO	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
MOBILIO	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
MOBILIO	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
MOBILIO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
MOBILIO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
MOBILIO	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
MOBILIO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
MOBILIO	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
MOBILIO	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
MOBILIO	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
MOBILIO	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
MOBILIO	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
MOBILIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
MOBILIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
MOBILIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
MOBILIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
MOBILIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
MOBILIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
MOBILIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
MOBILIO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA

MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
MOBILIO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
MOBILIO	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
MOBILIO	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
MOBILIO	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
MOBILIO	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
MOBILIO	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
MOBILIO	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
MOBILIO	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
MOBILIO	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
MOBILIO	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read ECU Information	
MOBILIO	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read codes	
MOBILIO	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Erase Codes	
MOBILIO	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Freeze Frame Data	
MOBILIO	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Live Data	
MOBILIO	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	CMBS (CMS) ACTIVATION HISTORY	
MOBILIO	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	RADAR AIMING
MOBILIO	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	CMBS Brake
MOBILIO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
MOBILIO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
MOBILIO	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
MOBILIO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
MOBILIO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
MOBILIO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
MOBILIO	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
MOBILIO	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
MOBILIO	/	DBW	M34	Read ECU Information	
MOBILIO	/	DBW	M34	Read codes	
MOBILIO	/	DBW	M34	Erase Codes	
MOBILIO	/	DBW	M34	Read Freeze Frame Data	
MOBILIO	/	DBW	M34	Read Live Data	
MOBILIO	/	DBW	M34	Inspection	Idle Speed Adjust
MOBILIO	/	DBW	M34	Inspection	Throttle Test
MOBILIO	/	DBW	M34	ECM Reset	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC TEST
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test



MOBILIO	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
MOBILIO	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
MOBILIO	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
MOBILIO	/	Capacitor Control System (EDLC)	M12	Read codes	
MOBILIO	/	Capacitor Control System (EDLC)	M12	Erase Codes	
MOBILIO	/	Capacitor Control System (EDLC)	M12	Read Live Data	
MOBILIO	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
MOBILIO	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
MOBILIO	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
MOBILIO	/	Electronic Brake Control System (EPB)	M1F	Read codes	
MOBILIO	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
MOBILIO	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
MOBILIO	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
MOBILIO	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
MOBILIO	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
MOBILIO	/	Electronic Brake Control System (EPB)	M3E	Read codes	
MOBILIO	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
MOBILIO	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
MOBILIO	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
MOBILIO	/	Electric Powertrain / IMA	M66	Read ECU Information	
MOBILIO	/	Electric Powertrain / IMA	M66	Read codes	
MOBILIO	/	Electric Powertrain / IMA	M66	Erase Codes	
MOBILIO	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
MOBILIO	/	Electric Powertrain / IMA	M66	Read Live Data	
MOBILIO	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
MOBILIO	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
MOBILIO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
MOBILIO	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
MOBILIO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
MOBILIO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
MOBILIO	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
MOBILIO	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
MOBILIO	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
MOBILIO	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
MOBILIO	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
MOBILIO	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
MOBILIO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
MOBILIO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
MOBILIO	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
MOBILIO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
MOBILIO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
MOBILIO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
MOBILIO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
MOBILIO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
MOBILIO	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
MOBILIO	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
MOBILIO	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
MOBILIO	/	New energy battery (EV)	M44	Read ECU Information	
MOBILIO	/	New energy battery (EV)	M44	Read codes	
MOBILIO	/	New energy battery (EV)	M44	Erase Codes	
MOBILIO	/	New energy battery (EV)	M44	Read Freeze Frame Data	
MOBILIO	/	New energy battery (EV)	M44	Read Live Data	
MOBILIO	/	New energy battery (EV)	M44	Inspection	
MOBILIO	/	New energy battery (EV)	M44	Adjustment	
MOBILIO	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
MOBILIO	/	Electronic vacuum pump (EVPS)	M21	Read codes	
MOBILIO	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
MOBILIO	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
MOBILIO	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
MOBILIO	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
MOBILIO	/	Electronic vacuum pump (EVPS)	M22	Read codes	
MOBILIO	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	

MOBILIO	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
MOBILIO	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
MOBILIO	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
MOBILIO	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
MOBILIO	/	FCW LDW	M4E	Read ECU Information	
MOBILIO	/	FCW LDW	M4E	Read codes	
MOBILIO	/	FCW LDW	M4E	Erase Codes	
MOBILIO	/	FCW LDW	M4E	Read Live Data	
MOBILIO	/	FCW LDW	M4E	Function Test	FCW Drive
MOBILIO	/	FCW LDW	M4E	Function Test	Left side lane departure warning
MOBILIO	/	FCW LDW	M4E	Function Test	Right side lane departure warning
MOBILIO	/	FCW LDW	M4E	Function Test	Indicator Drive
MOBILIO	/	FCW LDW	M4E	Adjustment	
MOBILIO	/	Instrument Display System (GAUGE)	M2C	Read codes	
MOBILIO	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
MOBILIO	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Read codes	
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Read codes	
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Read codes	
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
MOBILIO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
MOBILIO	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Read codes	
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
MOBILIO	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
MOBILIO	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
MOBILIO	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
MOBILIO	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
MOBILIO	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
MOBILIO	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
MOBILIO	/	Intelligent Parking Control System (SPS)	M9B	Customize	
MOBILIO	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
MOBILIO	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
MOBILIO	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
MOBILIO	/	Hydraulic booster control system (HBS)	M5F	Read codes	
MOBILIO	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
MOBILIO	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
MOBILIO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
MOBILIO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
MOBILIO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
MOBILIO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
MOBILIO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test

MOBILIO	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
MOBILIO	/	IMA	M63	Read ECU Information	
MOBILIO	/	IMA	M63	Read codes	
MOBILIO	/	IMA	M63	Erase Codes	
MOBILIO	/	IMA	M63	Read Freeze Frame Data	
MOBILIO	/	IMA	M63	Read Live Data	
MOBILIO	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
MOBILIO	/	IMA	M63	Adjustment	SOC PRESET
MOBILIO	/	IMA	M64	Read ECU Information	
MOBILIO	/	IMA	M64	Read codes	
MOBILIO	/	IMA	M64	Erase Codes	
MOBILIO	/	IMA	M64	Read Freeze Frame Data	
MOBILIO	/	IMA	M64	Read Live Data	
MOBILIO	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
MOBILIO	/	IMA	M64	Adjustment	SOC PRESET
MOBILIO	/	IMA	M65	Read ECU Information	
MOBILIO	/	IMA	M65	Read codes	
MOBILIO	/	IMA	M65	Erase Codes	
MOBILIO	/	IMA	M65	Read Freeze Frame Data	
MOBILIO	/	IMA	M65	Read Live Data	
MOBILIO	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
MOBILIO	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
MOBILIO	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
MOBILIO	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
MOBILIO	/	Intake Sounder Control System (ISC)	M6D	Read codes	
MOBILIO	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
MOBILIO	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
MOBILIO	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
MOBILIO	/	Night Vision System (INVS)	0XB1	Read ECU Information	
MOBILIO	/	Night Vision System (INVS)	0XB1	Read codes	
MOBILIO	/	Night Vision System (INVS)	0XB1	Erase Codes	
MOBILIO	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
MOBILIO	/	Night Vision System (INVS)	0XB1	Read Live Data	
MOBILIO	/	Night Vision System (INVS)	0XB1	Adjustment	
MOBILIO	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
MOBILIO	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
MOBILIO	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
MOBILIO	/	i-SHIFT	0XB0	Read ECU Information	
MOBILIO	/	i-SHIFT	0XB0	Read codes	
MOBILIO	/	i-SHIFT	0XB0	Erase Codes	
MOBILIO	/	i-SHIFT	0XB0	Read Live Data	
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Read codes	
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Self Check	
MOBILIO	/	Keyless Entry Control System (KAS)	M99	History Data	
MOBILIO	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCONT Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving

MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
MOBILIO	/	Keyless Entry Control System (KAS)	M99	Registration	
MOBILIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
MOBILIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
MOBILIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
MOBILIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
MOBILIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
MOBILIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
MOBILIO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
MOBILIO	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
MOBILIO	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
MOBILIO	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
MOBILIO	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
MOBILIO	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
MOBILIO	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
MOBILIO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
MOBILIO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
MOBILIO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
MOBILIO	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
MOBILIO	/	Management ECU Module (ME)	M74	Read ECU Information	
MOBILIO	/	Management ECU Module (ME)	M74	Read codes	
MOBILIO	/	Management ECU Module (ME)	M74	Erase Codes	
MOBILIO	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
MOBILIO	/	Management ECU Module (ME)	M74	Read Live Data	
MOBILIO	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
MOBILIO	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
MOBILIO	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
MOBILIO	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
MOBILIO	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
MOBILIO	/	Multi-view camera system (MVCS)	M7A	Read codes	
MOBILIO	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
MOBILIO	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
MOBILIO	/	Multi-view camera system (MVCS)	M7A	Customization	
MOBILIO	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
MOBILIO	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
MOBILIO	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
MOBILIO	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
MOBILIO	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
MOBILIO	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
MOBILIO	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
MOBILIO	/	Power Control Unit (PCU)	M83	Read ECU Information	
MOBILIO	/	Power Control Unit (PCU)	M83	Read codes	
MOBILIO	/	Power Control Unit (PCU)	M83	Erase Codes	
MOBILIO	/	Power Control Unit (PCU)	M83	Read Live Data	
MOBILIO	/	Power Control Unit (PCU)	M83	Self Check	
MOBILIO	/	Power Control Unit (PCU)	M83	History Data	
MOBILIO	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
MOBILIO	/	Engine Control System (PGM-FI)	M23	Read codes	
MOBILIO	/	Engine Control System (PGM-FI)	M23	Erase Codes	
MOBILIO	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
MOBILIO	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
MOBILIO	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
MOBILIO	/	Engine Control System (PGM-FI)	M23	Read Live Data	
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
MOBILIO	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
MOBILIO	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
MOBILIO	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
MOBILIO	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
MOBILIO	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
MOBILIO	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
MOBILIO	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
MOBILIO	/	Engine Control System (PGM-FI)	M50	Read codes	
MOBILIO	/	Engine Control System (PGM-FI)	M50	Erase Codes	
MOBILIO	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
MOBILIO	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
MOBILIO	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
MOBILIO	/	Engine Control System (PGM-FI)	M50	Read Live Data	
MOBILIO	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
MOBILIO	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
MOBILIO	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
MOBILIO	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
MOBILIO	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
MOBILIO	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	

MOBILIO	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
MOBILIO	/	Engine Control System (PGM-FI)	M86	Read codes	
MOBILIO	/	Engine Control System (PGM-FI)	M86	Erase Codes	
MOBILIO	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
MOBILIO	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
MOBILIO	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
MOBILIO	/	Engine Control System (PGM-FI)	M86	Read Live Data	
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
MOBILIO	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
MOBILIO	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
MOBILIO	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
MOBILIO	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
MOBILIO	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
MOBILIO	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
MOBILIO	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
MOBILIO	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
MOBILIO	/	PSR	M27	Read ECU Information	
MOBILIO	/	PSR	M27	Read codes	
MOBILIO	/	PSR	M27	Erase Codes	
MOBILIO	/	PSR	M27	Read Live Data	
MOBILIO	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
MOBILIO	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
MOBILIO	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
MOBILIO	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
MOBILIO	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
MOBILIO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
MOBILIO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
MOBILIO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
MOBILIO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
MOBILIO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
MOBILIO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
MOBILIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
MOBILIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
MOBILIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
MOBILIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
MOBILIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
MOBILIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
MOBILIO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
MOBILIO	/	Remote starter (RS)	M90	System Check	
MOBILIO	/	Remote starter (RS)	M90	HISTORY	
MOBILIO	/	Remote starter (RS)	M90	Registration	
MOBILIO	/	Seat load cell (SWS)	M6F	Read ECU Information	
MOBILIO	/	Seat load cell (SWS)	M6F	Read codes	
MOBILIO	/	Seat load cell (SWS)	M6F	Erase Codes	
MOBILIO	/	Seat load cell (SWS)	M6F	Read Live Data	
MOBILIO	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
MOBILIO	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
MOBILIO	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
MOBILIO	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
MOBILIO	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
MOBILIO	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
MOBILIO	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
MOBILIO	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	

MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
MOBILIO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
MOBILIO	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
MOBILIO	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
MOBILIO	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
MOBILIO	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
MOBILIO	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
MOBILIO	/	Groove track drive unit (SLOT ECU)	M98	History Data	
MOBILIO	/	Groove track drive unit (SLOT ECU)	M98	System Information	
MOBILIO	/	Airbag Control System (SRS)	M9F	Read ECU Information	
MOBILIO	/	Airbag Control System (SRS)	M9F	Read codes	
MOBILIO	/	Airbag Control System (SRS)	M9F	Erase Codes	
MOBILIO	/	Airbag Control System (SRS)	M9F	Read Live Data	
MOBILIO	/	Airbag Control System (SRS)	MA0	Read ECU Information	
MOBILIO	/	Airbag Control System (SRS)	MA0	Read codes	
MOBILIO	/	Airbag Control System (SRS)	MA0	Erase Codes	
MOBILIO	/	Airbag Control System (SRS)	MA0	Read Live Data	
MOBILIO	/	Airbag Control System (SRS)	MA1	Read ECU Information	
MOBILIO	/	Airbag Control System (SRS)	MA1	Read codes	
MOBILIO	/	Airbag Control System (SRS)	MA1	Erase Codes	
MOBILIO	/	Airbag Control System (SRS)	MA1	Read Live Data	
MOBILIO	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
MOBILIO	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
MOBILIO	/	Airbag Control System (SRS)	M2A	Read codes	
MOBILIO	/	Airbag Control System (SRS)	M2A	Erase Codes	
MOBILIO	/	Airbag Control System (SRS)	M2A	Read Live Data	
MOBILIO	/	Airbag Control System (SRS)	M9C	Read ECU Information	
MOBILIO	/	Airbag Control System (SRS)	M9C	Read codes	
MOBILIO	/	Airbag Control System (SRS)	M9C	Erase Codes	
MOBILIO	/	Airbag Control System (SRS)	M9C	Read Live Data	
MOBILIO	/	Airbag Control System (SRS)	M9D	Read ECU Information	
MOBILIO	/	Airbag Control System (SRS)	M9D	Read codes	
MOBILIO	/	Airbag Control System (SRS)	M9D	Erase Codes	
MOBILIO	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
MOBILIO	/	Airbag Control System (SRS)	M9D	Read Live Data	
MOBILIO	/	Airbag Control System (SRS)	M9D	Parameter Information	
MOBILIO	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
MOBILIO	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
MOBILIO	/	Airbag Control System (SRS)	M9D	CALIBRATION	SW5 Initialization
MOBILIO	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
MOBILIO	/	Airbag Control System (SRS)	M9D	Function Test	
MOBILIO	/	Airbag Control System (SRS)	M9D	System Information	
MOBILIO	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
MOBILIO	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
MOBILIO	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
MOBILIO	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
MOBILIO	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
MOBILIO	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
MOBILIO	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
MOBILIO	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
MOBILIO	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
MOBILIO	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
MOBILIO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
MOBILIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
MOBILIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
MOBILIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
MOBILIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
MOBILIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
MOBILIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
MOBILIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
MOBILIO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
MR-V	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
MR-V	/	Four-wheel steering control system (4WS)	M52	Read codes	
MR-V	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
MR-V	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
MR-V	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
MR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
MR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
MR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
MR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
MR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
MR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
MR-V	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
MR-V	/	Automatic shift control system (A/T)	M1E	Read codes	
MR-V	/	Automatic shift control system (A/T)	M1E	Erase Codes	
MR-V	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
MR-V	/	Automatic shift control system (A/T)	M1E	Read Live Data	
MR-V	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
MR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
MR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test

MR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
MR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
MR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
MR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
MR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
MR-V	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
MR-V	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
MR-V	/	Automatic shift control system (A/T)	M3B	Read codes	
MR-V	/	Automatic shift control system (A/T)	M3B	Erase Codes	
MR-V	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
MR-V	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
MR-V	/	Automatic shift control system (A/T)	M3B	Read Live Data	
MR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
MR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
MR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
MR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
MR-V	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
MR-V	/	Automatic shift control system (A/T)	M3C	Read codes	
MR-V	/	Automatic shift control system (A/T)	M3C	Erase Codes	
MR-V	/	Automatic shift control system (A/T)	M81	Read ECU Information	
MR-V	/	Automatic shift control system (A/T)	M81	Read codes	
MR-V	/	Automatic shift control system (A/T)	M81	Erase Codes	
MR-V	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
MR-V	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
MR-V	/	Automatic shift control system (A/T)	M81	Read Live Data	
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
MR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
MR-V	/	Automatic shift control system (A/T)	M82	Read ECU Information	
MR-V	/	Automatic shift control system (A/T)	M82	Read codes	
MR-V	/	Automatic shift control system (A/T)	M82	Erase Codes	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
MR-V	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
MR-V	/	Active Engine Control Support System (ACM)	M06	Read codes	
MR-V	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
MR-V	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
MR-V	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
MR-V	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
MR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
MR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
MR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
MR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
MR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
MR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
MR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
MR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
MR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
MR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
MR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
MR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
MR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
MR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
MR-V	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
MR-V	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
MR-V	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light

MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test	
MR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming	
MR-V	/	Transmission Control System (AT)	M18	Read ECU Information	
MR-V	/	Transmission Control System (AT)	M18	Read codes	
MR-V	/	Transmission Control System (AT)	M18	Erase Codes	
MR-V	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
MR-V	/	Transmission Control System (AT)	M18	Read Live Data	
MR-V	/	Transmission Control System (AT)	M18	Adjustment	
MR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
MR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
MR-V	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
MR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
MR-V	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
MR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
MR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
MR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
MR-V	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
MR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
MR-V	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
MR-V	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
MR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
MR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
MR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
MR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
MR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
MR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
MR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
MR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
MR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
MR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
MR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
MR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
MR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
MR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
MR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
MR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
MR-V	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
MR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
MR-V	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator



MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
MR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
MR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
MR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
MR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
MR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
MR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
MR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
MR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
MR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
MR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
MR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
MR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
MR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
MR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
MR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
MR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
MR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
MR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down

MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
MR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
MR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Security	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
MR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
MR-V	/	BODY ELECTRICAL/Security	MFF	History Data	
MR-V	/	BODY ELECTRICAL/Security	MFF	History Clear	
MR-V	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
MR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
MR-V	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
MR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
MR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
MR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
MR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
MR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
MR-V	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
MR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
MR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
MR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
MR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
MR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
MR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
MR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
MR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
MR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
MR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
MR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
MR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
MR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
MR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
MR-V	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
MR-V	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
MR-V	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
MR-V	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
MR-V	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
MR-V	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
MR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read ECU Information	
MR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read codes	
MR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Erase Codes	
MR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Freeze Frame Data	
MR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Live Data	
MR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
MR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	RADAR AIMING
MR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	CMBS Brake
MR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
MR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
MR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
MR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
MR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
MR-V	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
MR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
MR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
MR-V	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
MR-V	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
MR-V	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
MR-V	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
MR-V	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	

MR-V	/	Promise Automatic Transmission Control System (CVT M33	Read Live Data	
MR-V	/	Promise Automatic Transmission Control System (CVT M33	ECMPCMC Reset	
MR-V	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
MR-V	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
MR-V	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
MR-V	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	Read codes	
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	ECMPCMC Reset	
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
MR-V	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
MR-V	/	DBW M34	Read ECU Information	
MR-V	/	DBW M34	Read codes	
MR-V	/	DBW M34	Erase Codes	
MR-V	/	DBW M34	Read Freeze Frame Data	
MR-V	/	DBW M34	Read Live Data	
MR-V	/	DBW M34	Inspection	Idle Speed Adjust
MR-V	/	DBW M34	Inspection	Throttle Test
MR-V	/	DBW M34	ECM Reset	
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
MR-V	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
MR-V	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
MR-V	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
MR-V	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
MR-V	/	Diesel Engine Control System (DIESEL) M37	Read codes	
MR-V	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
MR-V	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
MR-V	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
MR-V	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
MR-V	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
MR-V	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
MR-V	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
MR-V	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
MR-V	/	Diesel Engine Control System (DIESEL) M85	Read codes	
MR-V	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
MR-V	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
MR-V	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
MR-V	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
MR-V	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
MR-V	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
MR-V	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
MR-V	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
MR-V	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
MR-V	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
MR-V	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
MR-V	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
MR-V	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
MR-V	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
MR-V	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
MR-V	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
MR-V	/	Capacitor Control System (EDLC) M12	Read codes	
MR-V	/	Capacitor Control System (EDLC) M12	Erase Codes	
MR-V	/	Capacitor Control System (EDLC) M12	Read Live Data	
MR-V	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge and Charge Test
MR-V	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge for Removal or Disposal
MR-V	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Usage History Clear
MR-V	/	Electronic Brake Control System (EPB) M1F	Read codes	
MR-V	/	Electronic Brake Control System (EPB) M1F	Erase Codes	
MR-V	/	Electronic Brake Control System (EPB) M1F	Read Live Data	
MR-V	/	Electronic Brake Control System (EPB) M1F	Adjustment	Sensor Calibration
MR-V	/	Electronic Brake Control System (EPB) M1F	Adjustment	Brake Pad Maintenance Mode
MR-V	/	Electronic Brake Control System (EPB) M3E	Read ECU Information	

MR-V	/	Electronic Brake Control System (EPB)	M3E	Read codes	
MR-V	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
MR-V	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
MR-V	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
MR-V	/	Electric Powertrain / IMA	M66	Read ECU Information	
MR-V	/	Electric Powertrain / IMA	M66	Read codes	
MR-V	/	Electric Powertrain / IMA	M66	Erase Codes	
MR-V	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
MR-V	/	Electric Powertrain / IMA	M66	Read Live Data	
MR-V	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
MR-V	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
MR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
MR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
MR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
MR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
MR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
MR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
MR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
MR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
MR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
MR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
MR-V	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
MR-V	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
MR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
MR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
MR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
MR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
MR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
MR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
MR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
MR-V	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
MR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
MR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
MR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
MR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
MR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
MR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
MR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
MR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
MR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
MR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
MR-V	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
MR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
MR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
MR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
MR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
MR-V	/	New energy battery (EV)	M44	Read ECU Information	
MR-V	/	New energy battery (EV)	M44	Read codes	
MR-V	/	New energy battery (EV)	M44	Erase Codes	
MR-V	/	New energy battery (EV)	M44	Read Freeze Frame Data	
MR-V	/	New energy battery (EV)	M44	Read Live Data	
MR-V	/	New energy battery (EV)	M44	Inspection	
MR-V	/	New energy battery (EV)	M44	Adjustment	
MR-V	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
MR-V	/	Electronic vacuum pump (EVPS)	M21	Read codes	
MR-V	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
MR-V	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
MR-V	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
MR-V	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
MR-V	/	Electronic vacuum pump (EVPS)	M22	Read codes	
MR-V	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
MR-V	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
MR-V	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
MR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
MR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
MR-V	/	FCW LDW	M4E	Read ECU Information	
MR-V	/	FCW LDW	M4E	Read codes	
MR-V	/	FCW LDW	M4E	Erase Codes	
MR-V	/	FCW LDW	M4E	Read Live Data	
MR-V	/	FCW LDW	M4E	Function Test	FCW Drive
MR-V	/	FCW LDW	M4E	Function Test	Left side lane departure warning
MR-V	/	FCW LDW	M4E	Function Test	Right side lane departure warning
MR-V	/	FCW LDW	M4E	Function Test	Indicator Drive
MR-V	/	FCW LDW	M4E	Adjustment	
MR-V	/	Instrument Display System (GAUGE)	M2C	Read codes	
MR-V	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
MR-V	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
MR-V	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
MR-V	/	Anti-lock brake control system (ABS)	M01	Read codes	
MR-V	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
MR-V	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
MR-V	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
MR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
MR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
MR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
MR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
MR-V	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
MR-V	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
MR-V	/	Anti-lock brake control system (ABS)	M02	Read codes	

MR-V	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
MR-V	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
MR-V	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
MR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
MR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
MR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
MR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
MR-V	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
MR-V	/	Anti-lock brake control system (ABS)	M03	Read codes	
MR-V	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
MR-V	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
MR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
MR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
MR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
MR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
MR-V	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
MR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
MR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
MR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
MR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
MR-V	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
MR-V	/	Anti-lock brake control system (ABS)	M19	Read codes	
MR-V	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
MR-V	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
MR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
MR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
MR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
MR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
MR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
MR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
MR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
MR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
MR-V	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
MR-V	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
MR-V	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
MR-V	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
MR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
MR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
MR-V	/	Intelligent Parking Control System (SPS)	M9B	Customize	
MR-V	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
MR-V	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
MR-V	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
MR-V	/	Hydraulic booster control system (HBS)	M5F	Read codes	
MR-V	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
MR-V	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
MR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
MR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
MR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
MR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
MR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
MR-V	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
MR-V	/	IMA	M63	Read ECU Information	
MR-V	/	IMA	M63	Read codes	
MR-V	/	IMA	M63	Erase Codes	
MR-V	/	IMA	M63	Read Freeze Frame Data	
MR-V	/	IMA	M63	Read Live Data	
MR-V	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
MR-V	/	IMA	M63	Adjustment	SOC PRESET
MR-V	/	IMA	M64	Read ECU Information	
MR-V	/	IMA	M64	Read codes	
MR-V	/	IMA	M64	Erase Codes	
MR-V	/	IMA	M64	Read Freeze Frame Data	
MR-V	/	IMA	M64	Read Live Data	
MR-V	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
MR-V	/	IMA	M64	Adjustment	SOC PRESET
MR-V	/	IMA	M65	Read ECU Information	
MR-V	/	IMA	M65	Read codes	
MR-V	/	IMA	M65	Erase Codes	
MR-V	/	IMA	M65	Read Freeze Frame Data	
MR-V	/	IMA	M65	Read Live Data	
MR-V	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
MR-V	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
MR-V	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
MR-V	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
MR-V	/	Intake Sounder Control System (ISC)	M6D	Read codes	
MR-V	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
MR-V	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
MR-V	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
MR-V	/	Night Vision System (INVS)	0XB1	Read ECU Information	
MR-V	/	Night Vision System (INVS)	0XB1	Read codes	
MR-V	/	Night Vision System (INVS)	0XB1	Erase Codes	
MR-V	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	

MR-V	/	Night Vision System (INVS)	0XB1	Read Live Data	
MR-V	/	Night Vision System (INVS)	0XB1	Adjustment	
MR-V	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
MR-V	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
MR-V	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
MR-V	/	i-SHIFT	0XB0	Read ECU Information	
MR-V	/	i-SHIFT	0XB0	Read codes	
MR-V	/	i-SHIFT	0XB0	Erase Codes	
MR-V	/	i-SHIFT	0XB0	Read Live Data	
MR-V	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
MR-V	/	Keyless Entry Control System (KAS)	M99	Read codes	
MR-V	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
MR-V	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
MR-V	/	Keyless Entry Control System (KAS)	M99	Self Check	
MR-V	/	Keyless Entry Control System (KAS)	M99	History Data	
MR-V	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
MR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
MR-V	/	Keyless Entry Control System (KAS)	M99	Registration	
MR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
MR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
MR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
MR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
MR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
MR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
MR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
MR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
MR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
MR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
MR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
MR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
MR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
MR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
MR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
MR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
MR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
MR-V	/	Management ECU Module (ME)	M74	Read ECU Information	
MR-V	/	Management ECU Module (ME)	M74	Read codes	
MR-V	/	Management ECU Module (ME)	M74	Erase Codes	
MR-V	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
MR-V	/	Management ECU Module (ME)	M74	Read Live Data	
MR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
MR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
MR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
MR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	

MR-V	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
MR-V	/	Multi-view camera system (MVCS)	M7A	Read codes	
MR-V	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
MR-V	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
MR-V	/	Multi-view camera system (MVCS)	M7A	Customization	
MR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
MR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
MR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
MR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
MR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
MR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
MR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
MR-V	/	Power Control Unit (PCU)	M83	Read ECU Information	
MR-V	/	Power Control Unit (PCU)	M83	Read codes	
MR-V	/	Power Control Unit (PCU)	M83	Erase Codes	
MR-V	/	Power Control Unit (PCU)	M83	Read Live Data	
MR-V	/	Power Control Unit (PCU)	M83	Self Check	
MR-V	/	Power Control Unit (PCU)	M83	History Data	
MR-V	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
MR-V	/	Engine Control System (PGM-FI)	M23	Read codes	
MR-V	/	Engine Control System (PGM-FI)	M23	Erase Codes	
MR-V	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
MR-V	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
MR-V	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
MR-V	/	Engine Control System (PGM-FI)	M23	Read Live Data	
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
MR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
MR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
MR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
MR-V	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
MR-V	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
MR-V	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
MR-V	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
MR-V	/	Engine Control System (PGM-FI)	M50	Read codes	
MR-V	/	Engine Control System (PGM-FI)	M50	Erase Codes	
MR-V	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
MR-V	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
MR-V	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
MR-V	/	Engine Control System (PGM-FI)	M50	Read Live Data	
MR-V	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
MR-V	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
MR-V	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
MR-V	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
MR-V	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
MR-V	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
MR-V	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
MR-V	/	Engine Control System (PGM-FI)	M86	Read codes	
MR-V	/	Engine Control System (PGM-FI)	M86	Erase Codes	
MR-V	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
MR-V	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
MR-V	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
MR-V	/	Engine Control System (PGM-FI)	M86	Read Live Data	
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
MR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
MR-V	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
MR-V	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
MR-V	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
MR-V	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	

MR-V	/	Four-wheel precision steering control system (PAWSC M96)	Read codes	
MR-V	/	Four-wheel precision steering control system (PAWSC M96)	Erase Codes	
MR-V	/	Four-wheel precision steering control system (PAWSC M96)	Read Live Data	
MR-V	/	PSR	Read ECU Information	
MR-V	/	PSR	M27	
MR-V	/	PSR	M27	Read codes
MR-V	/	PSR	M27	Erase Codes
MR-V	/	PSR	M27	Read Live Data
MR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information
MR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes
MR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes
MR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data
MR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test
MR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	WARNING DISPLAY FORCE ACTIVATION
MR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes
MR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes
MR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data
MR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data
MR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment
MR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	E-DPS Control Module Replacement
MR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Longitudinal G Sensor Learning
MR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information
MR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes
MR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes
MR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data
MR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment
MR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test
MR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Monitor and Alarm
MR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Display Rear Camera output image
MR-V	/	Remote starter (RS)	M90	System Check
MR-V	/	Remote starter (RS)	M90	HISTORY
MR-V	/	Remote starter (RS)	M90	Registration
MR-V	/	Seat load cell (SWS)	M6F	Read ECU Information
MR-V	/	Seat load cell (SWS)	M6F	Read codes
MR-V	/	Seat load cell (SWS)	M6F	Erase Codes
MR-V	/	Seat load cell (SWS)	M6F	Read Live Data
MR-V	/	Seat load cell (SWS)	M6F	System Check
MR-V	/	Seat load cell (SWS)	M6F	SWS DTC CHECK
MR-V	/	Seat load cell (SWS)	M6F	System Check
MR-V	/	Seat load cell (SWS)	M6F	Seat Output Check
MR-V	/	Seat load cell (SWS)	M6F	AFTER A VEHICLE COLLISION
MR-V	/	Seat load cell (SWS)	M6F	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
MR-V	/	Seat load cell (SWS)	M6F	Adjustment
MR-V	/	Seat load cell (SWS)	M6F	ODS Unit Initialization
MR-V	/	Seat load cell (SWS)	M6F	OPDS Initialization
MR-V	/	Seat load cell (SWS)	M6F	SWS Initialization
MR-V	/	Seat load cell (SWS)	M6F	E-Pretensioner For CMBS (CMS)
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor
MR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor
MR-V	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information
MR-V	/	Groove track drive unit (SLOT ECU)	M98	Read codes
MR-V	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes
MR-V	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data
MR-V	/	Groove track drive unit (SLOT ECU)	M98	Self Check
MR-V	/	Groove track drive unit (SLOT ECU)	M98	History Data
MR-V	/	Groove track drive unit (SLOT ECU)	M98	System Information
MR-V	/	Airbag Control System (SRS)	M9F	Read ECU Information
MR-V	/	Airbag Control System (SRS)	M9F	Read codes
MR-V	/	Airbag Control System (SRS)	M9F	Erase Codes
MR-V	/	Airbag Control System (SRS)	M9F	Read Live Data
MR-V	/	Airbag Control System (SRS)	MA0	Read ECU Information
MR-V	/	Airbag Control System (SRS)	MA0	Read codes
MR-V	/	Airbag Control System (SRS)	MA0	Erase Codes
MR-V	/	Airbag Control System (SRS)	MA0	Read Live Data
MR-V	/	Airbag Control System (SRS)	MA1	Read ECU Information
MR-V	/	Airbag Control System (SRS)	MA1	Read codes
MR-V	/	Airbag Control System (SRS)	MA1	Erase Codes
MR-V	/	Airbag Control System (SRS)	MA1	Read Live Data
MR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test
MR-V	/	Airbag Control System (SRS)	MA1	OPDS Initialization
MR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test
MR-V	/	Airbag Control System (SRS)	M2A	Blinking Side Airbag Indicator Light
MR-V	/	Airbag Control System (SRS)	M2A	Read codes
MR-V	/	Airbag Control System (SRS)	M2A	Erase Codes
MR-V	/	Airbag Control System (SRS)	M2A	Read Live Data
MR-V	/	Airbag Control System (SRS)	M9C	Read ECU Information
MR-V	/	Airbag Control System (SRS)	M9C	Read codes
MR-V	/	Airbag Control System (SRS)	M9C	Erase Codes
MR-V	/	Airbag Control System (SRS)	M9C	Read Live Data
MR-V	/	Airbag Control System (SRS)	M9D	Read ECU Information



MR-V	/	Airbag Control System (SRS)	M9D	Read codes	
MR-V	/	Airbag Control System (SRS)	M9D	Erase Codes	
MR-V	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
MR-V	/	Airbag Control System (SRS)	M9D	Read Live Data	
MR-V	/	Airbag Control System (SRS)	M9D	Parameter Information	
MR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
MR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
MR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
MR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pre-tensioner For CMBS (CMS)
MR-V	/	Airbag Control System (SRS)	M9D	Function Test	
MR-V	/	Airbag Control System (SRS)	M9D	System Information	
MR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
MR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
MR-V	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
MR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
MR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
MR-V	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
MR-V	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
MR-V	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
MR-V	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
MR-V	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
MR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
MR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
MR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
MR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
MR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
MR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
MR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
MR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
MR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
N-BOX	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
N-BOX	/	Four-wheel steering control system (4WS)	M52	Read codes	
N-BOX	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
N-BOX	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
N-BOX	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
N-BOX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
N-BOX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
N-BOX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
N-BOX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
N-BOX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
N-BOX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
N-BOX	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
N-BOX	/	Automatic shift control system (A/T)	M1E	Read codes	
N-BOX	/	Automatic shift control system (A/T)	M1E	Erase Codes	
N-BOX	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
N-BOX	/	Automatic shift control system (A/T)	M1E	Read Live Data	
N-BOX	/	Automatic shift control system (A/T)	M1E	ECMPCMC Reset	
N-BOX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
N-BOX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
N-BOX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
N-BOX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
N-BOX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
N-BOX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
N-BOX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
N-BOX	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
N-BOX	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
N-BOX	/	Automatic shift control system (A/T)	M3B	Read codes	
N-BOX	/	Automatic shift control system (A/T)	M3B	Erase Codes	
N-BOX	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
N-BOX	/	Automatic shift control system (A/T)	M3B	ECMPCMC Reset	
N-BOX	/	Automatic shift control system (A/T)	M3B	Read Live Data	
N-BOX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
N-BOX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
N-BOX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
N-BOX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
N-BOX	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
N-BOX	/	Automatic shift control system (A/T)	M3C	Read codes	
N-BOX	/	Automatic shift control system (A/T)	M3C	Erase Codes	
N-BOX	/	Automatic shift control system (A/T)	M81	Read ECU Information	
N-BOX	/	Automatic shift control system (A/T)	M81	Read codes	
N-BOX	/	Automatic shift control system (A/T)	M81	Erase Codes	
N-BOX	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
N-BOX	/	Automatic shift control system (A/T)	M81	ECMPCMC Reset	
N-BOX	/	Automatic shift control system (A/T)	M81	Read Live Data	
N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A

N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
N-BOX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
N-BOX	/	Automatic shift control system (A/T)	M82	Read ECU Information	
N-BOX	/	Automatic shift control system (A/T)	M82	Read codes	
N-BOX	/	Automatic shift control system (A/T)	M82	Erase Codes	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
N-BOX	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
N-BOX	/	Active Engine Control Support System (ACM)	M06	Read codes	
N-BOX	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
N-BOX	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
N-BOX	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
N-BOX	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
N-BOX	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
N-BOX	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
N-BOX	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
N-BOX	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
N-BOX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
N-BOX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
N-BOX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
N-BOX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
N-BOX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
N-BOX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
N-BOX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
N-BOX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
N-BOX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
N-BOX	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
N-BOX	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
N-BOX	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
N-BOX	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
N-BOX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
N-BOX	/	Transmission Control System (AT)	M18	Read ECU Information	
N-BOX	/	Transmission Control System (AT)	M18	Read codes	
N-BOX	/	Transmission Control System (AT)	M18	Erase Codes	
N-BOX	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
N-BOX	/	Transmission Control System (AT)	M18	Read Live Data	
N-BOX	/	Transmission Control System (AT)	M18	Adjustment	
N-BOX	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
N-BOX	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
N-BOX	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
N-BOX	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
N-BOX	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
N-BOX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
N-BOX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
N-BOX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
N-BOX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer

N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
N-BOX	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
N-BOX	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
N-BOX	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
N-BOX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
N-BOX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
N-BOX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
N-BOX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
N-BOX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
N-BOX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
N-BOX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
N-BOX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
N-BOX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
N-BOX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
N-BOX	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
N-BOX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
N-BOX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
N-BOX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
N-BOX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
N-BOX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
N-BOX	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
N-BOX	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
N-BOX	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
N-BOX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
N-BOX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
N-BOX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	

N-BOX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
N-BOX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
N-BOX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
N-BOX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
N-BOX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
N-BOX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
N-BOX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
N-BOX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
N-BOX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
N-BOX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
N-BOX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
N-BOX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
N-BOX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
N-BOX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
N-BOX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
N-BOX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
N-BOX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
N-BOX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Security	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
N-BOX	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
N-BOX	/	BODY ELECTRICAL/Security	MFF	History Data	
N-BOX	/	BODY ELECTRICAL/Security	MFF	History Clear	
N-BOX	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
N-BOX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
N-BOX	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
N-BOX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
N-BOX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
N-BOX	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	

N-BOX	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
N-BOX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
N-BOX	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
N-BOX	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
N-BOX	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
N-BOX	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
N-BOX	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
N-BOX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
N-BOX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
N-BOX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
N-BOX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
N-BOX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
N-BOX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
N-BOX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
N-BOX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
N-BOX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
N-BOX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
N-BOX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
N-BOX	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
N-BOX	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
N-BOX	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
N-BOX	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
N-BOX	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
N-BOX	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
N-BOX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
N-BOX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
N-BOX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
N-BOX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
N-BOX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
N-BOX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
N-BOX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
N-BOX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
N-BOX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
N-BOX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
N-BOX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
N-BOX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
N-BOX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
N-BOX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
N-BOX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
N-BOX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
N-BOX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
N-BOX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
N-BOX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
N-BOX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
N-BOX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
N-BOX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
N-BOX	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
N-BOX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
N-BOX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
N-BOX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
N-BOX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
N-BOX	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
N-BOX	/	DBW	M34	Read ECU Information	
N-BOX	/	DBW	M34	Read codes	
N-BOX	/	DBW	M34	Erase Codes	
N-BOX	/	DBW	M34	Read Freeze Frame Data	
N-BOX	/	DBW	M34	Read Live Data	
N-BOX	/	DBW	M34	Inspection	Idle Speed Adjust
N-BOX	/	DBW	M34	Inspection	Throttle Test
N-BOX	/	DBW	M34	ECM Reset	
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	

N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
N-BOX	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
N-BOX	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
N-BOX	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
N-BOX	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
N-BOX	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
N-BOX	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
N-BOX	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
N-BOX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
N-BOX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
N-BOX	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
N-BOX	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
N-BOX	/	Capacitor Control System (EDLC)	M12	Read codes	
N-BOX	/	Capacitor Control System (EDLC)	M12	Erase Codes	
N-BOX	/	Capacitor Control System (EDLC)	M12	Read Live Data	
N-BOX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
N-BOX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
N-BOX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
N-BOX	/	Electronic Brake Control System (EPB)	M1F	Read codes	
N-BOX	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
N-BOX	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
N-BOX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
N-BOX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
N-BOX	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
N-BOX	/	Electronic Brake Control System (EPB)	M3E	Read codes	
N-BOX	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
N-BOX	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
N-BOX	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
N-BOX	/	Electric Powertrain / IMA	M66	Read ECU Information	
N-BOX	/	Electric Powertrain / IMA	M66	Read codes	
N-BOX	/	Electric Powertrain / IMA	M66	Erase Codes	
N-BOX	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
N-BOX	/	Electric Powertrain / IMA	M66	Read Live Data	
N-BOX	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
N-BOX	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
N-BOX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
N-BOX	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
N-BOX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
N-BOX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
N-BOX	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
N-BOX	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
N-BOX	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
N-BOX	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
N-BOX	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
N-BOX	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
N-BOX	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
N-BOX	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
N-BOX	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
N-BOX	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
N-BOX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
N-BOX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
N-BOX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
N-BOX	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
N-BOX	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
N-BOX	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
N-BOX	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	

N-BOX	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
N-BOX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
N-BOX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
N-BOX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
N-BOX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
N-BOX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
N-BOX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
N-BOX	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
N-BOX	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
N-BOX	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
N-BOX	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
N-BOX	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
N-BOX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
N-BOX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
N-BOX	/	New energy battery (EV)	M44	Read ECU Information	
N-BOX	/	New energy battery (EV)	M44	Read codes	
N-BOX	/	New energy battery (EV)	M44	Erase Codes	
N-BOX	/	New energy battery (EV)	M44	Read Freeze Frame Data	
N-BOX	/	New energy battery (EV)	M44	Read Live Data	
N-BOX	/	New energy battery (EV)	M44	Inspection	
N-BOX	/	New energy battery (EV)	M44	Adjustment	
N-BOX	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
N-BOX	/	Electronic vacuum pump (EVPS)	M21	Read codes	
N-BOX	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
N-BOX	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
N-BOX	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
N-BOX	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
N-BOX	/	Electronic vacuum pump (EVPS)	M22	Read codes	
N-BOX	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
N-BOX	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
N-BOX	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
N-BOX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
N-BOX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
N-BOX	/	FCW LDW	M4E	Read ECU Information	
N-BOX	/	FCW LDW	M4E	Read codes	
N-BOX	/	FCW LDW	M4E	Erase Codes	
N-BOX	/	FCW LDW	M4E	Read Live Data	
N-BOX	/	FCW LDW	M4E	Function Test	FCW Drive
N-BOX	/	FCW LDW	M4E	Function Test	Left side lane departure warning
N-BOX	/	FCW LDW	M4E	Function Test	Right side lane departure warning
N-BOX	/	FCW LDW	M4E	Function Test	Indicator Drive
N-BOX	/	FCW LDW	M4E	Adjustment	
N-BOX	/	Instrument Display System (GAUGE)	M2C	Read codes	
N-BOX	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
N-BOX	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
N-BOX	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
N-BOX	/	Anti-lock brake control system (ABS)	M01	Read codes	
N-BOX	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
N-BOX	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
N-BOX	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
N-BOX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
N-BOX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
N-BOX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
N-BOX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
N-BOX	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
N-BOX	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
N-BOX	/	Anti-lock brake control system (ABS)	M02	Read codes	
N-BOX	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
N-BOX	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
N-BOX	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
N-BOX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
N-BOX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
N-BOX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
N-BOX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
N-BOX	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
N-BOX	/	Anti-lock brake control system (ABS)	M03	Read codes	
N-BOX	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
N-BOX	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
N-BOX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
N-BOX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
N-BOX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
N-BOX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
N-BOX	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
N-BOX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
N-BOX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
N-BOX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
N-BOX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
N-BOX	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
N-BOX	/	Anti-lock brake control system (ABS)	M19	Read codes	
N-BOX	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
N-BOX	/	Anti-lock brake control system (ABS)	M19	Read Live Data	

N-BOX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
N-BOX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
N-BOX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
N-BOX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
N-BOX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
N-BOX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
N-BOX	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
N-BOX	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
N-BOX	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
N-BOX	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
N-BOX	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
N-BOX	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
N-BOX	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
N-BOX	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
N-BOX	/	Intelligent Parking Control System (SPS)	M9B	Customize	
N-BOX	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
N-BOX	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
N-BOX	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
N-BOX	/	Hydraulic booster control system (HBS)	M5F	Read codes	
N-BOX	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
N-BOX	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
N-BOX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
N-BOX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
N-BOX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
N-BOX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
N-BOX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
N-BOX	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
N-BOX	/	IMA	M63	Read ECU Information	
N-BOX	/	IMA	M63	Read codes	
N-BOX	/	IMA	M63	Erase Codes	
N-BOX	/	IMA	M63	Read Freeze Frame Data	
N-BOX	/	IMA	M63	Read Live Data	
N-BOX	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
N-BOX	/	IMA	M63	Adjustment	SOC PRESET
N-BOX	/	IMA	M64	Read ECU Information	
N-BOX	/	IMA	M64	Read codes	
N-BOX	/	IMA	M64	Erase Codes	
N-BOX	/	IMA	M64	Read Freeze Frame Data	
N-BOX	/	IMA	M64	Read Live Data	
N-BOX	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
N-BOX	/	IMA	M64	Adjustment	SOC PRESET
N-BOX	/	IMA	M65	Read ECU Information	
N-BOX	/	IMA	M65	Read codes	
N-BOX	/	IMA	M65	Erase Codes	
N-BOX	/	IMA	M65	Read Freeze Frame Data	
N-BOX	/	IMA	M65	Read Live Data	
N-BOX	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
N-BOX	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
N-BOX	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
N-BOX	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
N-BOX	/	Intake Sounder Control System (ISC)	M6D	Read codes	
N-BOX	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
N-BOX	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
N-BOX	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
N-BOX	/	Night Vision System (INVS)	0XB1	Read ECU Information	
N-BOX	/	Night Vision System (INVS)	0XB1	Read codes	
N-BOX	/	Night Vision System (INVS)	0XB1	Erase Codes	
N-BOX	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
N-BOX	/	Night Vision System (INVS)	0XB1	Read Live Data	
N-BOX	/	Night Vision System (INVS)	0XB1	Adjustment	
N-BOX	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
N-BOX	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
N-BOX	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
N-BOX	/	i-SHIFT	0XB0	Read ECU Information	
N-BOX	/	i-SHIFT	0XB0	Read codes	
N-BOX	/	i-SHIFT	0XB0	Erase Codes	
N-BOX	/	i-SHIFT	0XB0	Read Live Data	
N-BOX	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
N-BOX	/	Keyless Entry Control System (KAS)	M99	Read codes	
N-BOX	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
N-BOX	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
N-BOX	/	Keyless Entry Control System (KAS)	M99	Self Check	
N-BOX	/	Keyless Entry Control System (KAS)	M99	History Data	
N-BOX	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving



N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
N-BOX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
N-BOX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Registration	
N-BOX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
N-BOX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
N-BOX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
N-BOX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
N-BOX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
N-BOX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
N-BOX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
N-BOX	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
N-BOX	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
N-BOX	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
N-BOX	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
N-BOX	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
N-BOX	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
N-BOX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
N-BOX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
N-BOX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
N-BOX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
N-BOX	/	Management ECU Module (ME)	M74	Read ECU Information	
N-BOX	/	Management ECU Module (ME)	M74	Read codes	
N-BOX	/	Management ECU Module (ME)	M74	Erase Codes	
N-BOX	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
N-BOX	/	Management ECU Module (ME)	M74	Read Live Data	
N-BOX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
N-BOX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
N-BOX	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
N-BOX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
N-BOX	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
N-BOX	/	Multi-view camera system (MVCS)	M7A	Read codes	
N-BOX	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
N-BOX	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
N-BOX	/	Multi-view camera system (MVCS)	M7A	Customization	
N-BOX	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
N-BOX	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
N-BOX	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
N-BOX	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
N-BOX	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
N-BOX	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
N-BOX	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
N-BOX	/	Power Control Unit (PCU)	M83	Read ECU Information	
N-BOX	/	Power Control Unit (PCU)	M83	Read codes	
N-BOX	/	Power Control Unit (PCU)	M83	Erase Codes	
N-BOX	/	Power Control Unit (PCU)	M83	Read Live Data	
N-BOX	/	Power Control Unit (PCU)	M83	Self Check	
N-BOX	/	Power Control Unit (PCU)	M83	History Data	
N-BOX	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
N-BOX	/	Engine Control System (PGM-FI)	M23	Read codes	
N-BOX	/	Engine Control System (PGM-FI)	M23	Erase Codes	
N-BOX	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
N-BOX	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
N-BOX	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
N-BOX	/	Engine Control System (PGM-FI)	M23	Read Live Data	
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST

N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
N-BOX	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
N-BOX	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
N-BOX	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
N-BOX	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
N-BOX	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
N-BOX	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
N-BOX	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
N-BOX	/	Engine Control System (PGM-FI)	M50	Read codes	
N-BOX	/	Engine Control System (PGM-FI)	M50	Erase Codes	
N-BOX	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
N-BOX	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
N-BOX	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
N-BOX	/	Engine Control System (PGM-FI)	M50	Read Live Data	
N-BOX	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
N-BOX	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
N-BOX	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
N-BOX	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
N-BOX	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
N-BOX	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
N-BOX	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
N-BOX	/	Engine Control System (PGM-FI)	M86	Read codes	
N-BOX	/	Engine Control System (PGM-FI)	M86	Erase Codes	
N-BOX	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
N-BOX	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
N-BOX	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
N-BOX	/	Engine Control System (PGM-FI)	M86	Read Live Data	
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	AGM
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
N-BOX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
N-BOX	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
N-BOX	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
N-BOX	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
N-BOX	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
N-BOX	/	Four-wheel precision steering control system (PAWSC M96)		Read codes	
N-BOX	/	Four-wheel precision steering control system (PAWSC M96)		Erase Codes	
N-BOX	/	Four-wheel precision steering control system (PAWSC M96)		Read Live Data	
N-BOX	/	PSR	M27	Read ECU Information	
N-BOX	/	PSR	M27	Read codes	
N-BOX	/	PSR	M27	Erase Codes	
N-BOX	/	PSR	M27	Read Live Data	
N-BOX	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
N-BOX	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
N-BOX	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
N-BOX	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
N-BOX	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
N-BOX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
N-BOX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
N-BOX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
N-BOX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
N-BOX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
N-BOX	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
N-BOX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
N-BOX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
N-BOX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
N-BOX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
N-BOX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
N-BOX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
N-BOX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
N-BOX	/	Remote starter (RS)	M90	System Check	
N-BOX	/	Remote starter (RS)	M90	HISTORY	
N-BOX	/	Remote starter (RS)	M90	Registration	
N-BOX	/	Seat load cell (SWS)	M6F	Read ECU Information	
N-BOX	/	Seat load cell (SWS)	M6F	Read codes	
N-BOX	/	Seat load cell (SWS)	M6F	Erase Codes	
N-BOX	/	Seat load cell (SWS)	M6F	Read Live Data	

N-BOX	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
N-BOX	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
N-BOX	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
N-BOX	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
N-BOX	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
N-BOX	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
N-BOX	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
N-BOX	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
N-BOX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
N-BOX	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
N-BOX	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
N-BOX	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
N-BOX	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
N-BOX	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
N-BOX	/	Groove track drive unit (SLOT ECU)	M98	History Data	
N-BOX	/	Groove track drive unit (SLOT ECU)	M98	System Information	
N-BOX	/	Airbag Control System (SRS)	M9F	Read ECU Information	
N-BOX	/	Airbag Control System (SRS)	M9F	Read codes	
N-BOX	/	Airbag Control System (SRS)	M9F	Erase Codes	
N-BOX	/	Airbag Control System (SRS)	M9F	Read Live Data	
N-BOX	/	Airbag Control System (SRS)	MA0	Read ECU Information	
N-BOX	/	Airbag Control System (SRS)	MA0	Read codes	
N-BOX	/	Airbag Control System (SRS)	MA0	Erase Codes	
N-BOX	/	Airbag Control System (SRS)	MA0	Read Live Data	
N-BOX	/	Airbag Control System (SRS)	MA1	Read ECU Information	
N-BOX	/	Airbag Control System (SRS)	MA1	Read codes	
N-BOX	/	Airbag Control System (SRS)	MA1	Erase Codes	
N-BOX	/	Airbag Control System (SRS)	MA1	Read Live Data	
N-BOX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
N-BOX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
N-BOX	/	Airbag Control System (SRS)	M2A	Read codes	
N-BOX	/	Airbag Control System (SRS)	M2A	Erase Codes	
N-BOX	/	Airbag Control System (SRS)	M2A	Read Live Data	
N-BOX	/	Airbag Control System (SRS)	M9C	Read ECU Information	
N-BOX	/	Airbag Control System (SRS)	M9C	Read codes	
N-BOX	/	Airbag Control System (SRS)	M9C	Erase Codes	
N-BOX	/	Airbag Control System (SRS)	M9C	Read Live Data	
N-BOX	/	Airbag Control System (SRS)	M9D	Read ECU Information	
N-BOX	/	Airbag Control System (SRS)	M9D	Read codes	
N-BOX	/	Airbag Control System (SRS)	M9D	Erase Codes	
N-BOX	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
N-BOX	/	Airbag Control System (SRS)	M9D	Read Live Data	
N-BOX	/	Airbag Control System (SRS)	M9D	Parameter Information	
N-BOX	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
N-BOX	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
N-BOX	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
N-BOX	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
N-BOX	/	Airbag Control System (SRS)	M9D	Function Test	
N-BOX	/	Airbag Control System (SRS)	M9D	System Information	
N-BOX	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
N-BOX	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
N-BOX	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
N-BOX	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
N-BOX	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
N-BOX	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
N-BOX	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
N-BOX	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
N-BOX	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
N-BOX	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check

N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
N-BOX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
N-BOX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
N-BOX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
N-BOX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
N-BOX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
N-BOX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
N-BOX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
N-BOX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
N-BOX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
N-BOX SLASH	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
N-BOX SLASH	/	Four-wheel steering control system (4WS)	M52	Read codes	
N-BOX SLASH	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
N-BOX SLASH	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
N-BOX SLASH	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
N-BOX SLASH	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
N-BOX SLASH	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
N-BOX SLASH	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
N-BOX SLASH	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
N-BOX SLASH	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
N-BOX SLASH	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	Read codes	
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	Erase Codes	
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	Read Live Data	
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
N-BOX SLASH	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
N-BOX SLASH	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
N-BOX SLASH	/	Automatic shift control system (A/T)	M3B	Read codes	
N-BOX SLASH	/	Automatic shift control system (A/T)	M3B	Erase Codes	
N-BOX SLASH	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
N-BOX SLASH	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
N-BOX SLASH	/	Automatic shift control system (A/T)	M3B	Read Live Data	
N-BOX SLASH	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
N-BOX SLASH	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
N-BOX SLASH	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
N-BOX SLASH	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
N-BOX SLASH	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
N-BOX SLASH	/	Automatic shift control system (A/T)	M3C	Read codes	
N-BOX SLASH	/	Automatic shift control system (A/T)	M3C	Erase Codes	
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Read ECU Information	
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Read codes	
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Erase Codes	
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Read Live Data	
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
N-BOX SLASH	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
N-BOX SLASH	/	Automatic shift control system (A/T)	M82	Read ECU Information	
N-BOX SLASH	/	Automatic shift control system (A/T)	M82	Read codes	
N-BOX SLASH	/	Automatic shift control system (A/T)	M82	Erase Codes	
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
N-BOX SLASH	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
N-BOX SLASH	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
N-BOX SLASH	/	Active Engine Control Support System (ACM)	M06	Read codes	

N-BOX SLASH /	Active Engine Control Support System (ACM)	M06	Erase Codes	
N-BOX SLASH /	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
N-BOX SLASH /	Active Engine Control Support System (ACM)	M06	Read Live Data	
N-BOX SLASH /	Active Engine Control Support System (ACM)	M06	ACM Reset	
N-BOX SLASH /	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
N-BOX SLASH /	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
N-BOX SLASH /	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
N-BOX SLASH /	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
N-BOX SLASH /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
N-BOX SLASH /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
N-BOX SLASH /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
N-BOX SLASH /	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
N-BOX SLASH /	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
N-BOX SLASH /	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
N-BOX SLASH /	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
N-BOX SLASH /	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
N-BOX SLASH /	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
N-BOX SLASH /	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
N-BOX SLASH /	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
N-BOX SLASH /	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
N-BOX SLASH /	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
N-BOX SLASH /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
N-BOX SLASH /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
N-BOX SLASH /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
N-BOX SLASH /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
N-BOX SLASH /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
N-BOX SLASH /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
N-BOX SLASH /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
N-BOX SLASH /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
N-BOX SLASH /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
N-BOX SLASH /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
N-BOX SLASH /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
N-BOX SLASH /	Transmission Control System (AT)	M18	Read ECU Information	
N-BOX SLASH /	Transmission Control System (AT)	M18	Read codes	
N-BOX SLASH /	Transmission Control System (AT)	M18	Erase Codes	
N-BOX SLASH /	Transmission Control System (AT)	M18	Read Freeze Frame Data	
N-BOX SLASH /	Transmission Control System (AT)	M18	Read Live Data	
N-BOX SLASH /	Transmission Control System (AT)	M18	Adjustment	
N-BOX SLASH /	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
N-BOX SLASH /	Active Torque Converter Control System (ATTS)	M0E	Read codes	
N-BOX SLASH /	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
N-BOX SLASH /	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
N-BOX SLASH /	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
N-BOX SLASH /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
N-BOX SLASH /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
N-BOX SLASH /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
N-BOX SLASH /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
N-BOX SLASH /	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
N-BOX SLASH /	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
N-BOX SLASH /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
N-BOX SLASH /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
N-BOX SLASH /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
N-BOX SLASH /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
N-BOX SLASH /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
N-BOX SLASH /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
N-BOX SLASH /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
N-BOX SLASH /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
N-BOX SLASH /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
N-BOX SLASH /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
N-BOX SLASH /	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
N-BOX SLASH /	BODY ELECTRICAL/Door Locks	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors

N-BOX SLASH	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
N-BOX SLASH	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
N-BOX SLASH	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
N-BOX SLASH	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
N-BOX SLASH	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
N-BOX SLASH	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
N-BOX SLASH	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
N-BOX SLASH	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
N-BOX SLASH	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
N-BOX SLASH	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
N-BOX SLASH	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
N-BOX SLASH	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
N-BOX SLASH	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
N-BOX SLASH	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
N-BOX SLASH	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
N-BOX SLASH	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
N-BOX SLASH	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
N-BOX SLASH	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
N-BOX SLASH	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
N-BOX SLASH	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
N-BOX SLASH	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
N-BOX SLASH	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
N-BOX SLASH	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
N-BOX SLASH	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
N-BOX SLASH	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
N-BOX SLASH	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
N-BOX SLASH	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
N-BOX SLASH	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
N-BOX SLASH	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
N-BOX SLASH	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
N-BOX SLASH	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
N-BOX SLASH	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
N-BOX SLASH	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
N-BOX SLASH	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
N-BOX SLASH	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
N-BOX SLASH	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
N-BOX SLASH	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
N-BOX SLASH	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
N-BOX SLASH	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	

N-BOX SLASH /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
N-BOX SLASH /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
N-BOX SLASH /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
N-BOX SLASH /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
N-BOX SLASH /	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
N-BOX SLASH /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
N-BOX SLASH /	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
N-BOX SLASH /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
N-BOX SLASH /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
N-BOX SLASH /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
N-BOX SLASH /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
N-BOX SLASH /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
N-BOX SLASH /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/Security	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Security	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Security	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
N-BOX SLASH /	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
N-BOX SLASH /	BODY ELECTRICAL/Security	MFF	History Data	
N-BOX SLASH /	BODY ELECTRICAL/Security	MFF	History Clear	
N-BOX SLASH /	BODY ELECTRICAL/Telematics	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
N-BOX SLASH /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
N-BOX SLASH /	BODY ELECTRICAL/Wiper	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
N-BOX SLASH /	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
N-BOX SLASH /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
N-BOX SLASH /	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
N-BOX SLASH /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
N-BOX SLASH /	BODY ELECTRICAL/YOP Security	MFF	Read codes	
N-BOX SLASH /	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
N-BOX SLASH /	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
N-BOX SLASH /	BODY ELECTRICAL/YOP Security	MFF	History Data	
N-BOX SLASH /	BODY ELECTRICAL/YOP Security	MFF	History Clear	
N-BOX SLASH /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
N-BOX SLASH /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
N-BOX SLASH /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
N-BOX SLASH /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
N-BOX SLASH /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
N-BOX SLASH /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
N-BOX SLASH /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
N-BOX SLASH /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
N-BOX SLASH /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	

N-BOX SLASH /	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
N-BOX SLASH /	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
N-BOX SLASH /	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
N-BOX SLASH /	Urban Active Brake Control System (CBAS)	M32	Read codes	
N-BOX SLASH /	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
N-BOX SLASH /	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
N-BOX SLASH /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
N-BOX SLASH /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
N-BOX SLASH /	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read ECU Information	
N-BOX SLASH /	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read codes	
N-BOX SLASH /	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Erase Codes	
N-BOX SLASH /	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Freeze Frame Data	
N-BOX SLASH /	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Live Data	
N-BOX SLASH /	Collision Mitigation Brake Control System (CMBS/CM)	M2E	CMBS (CMS) ACTIVATION HISTORY	
N-BOX SLASH /	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	RADAR AIMING
N-BOX SLASH /	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	CMBS Brake
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M1B)		ECMPCMC Reset	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M33)		Read codes	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M33)		ECMPCMC Reset	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		ECMPCMC Reset	
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
N-BOX SLASH /	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
N-BOX SLASH /	DBW	M34	Read ECU Information	
N-BOX SLASH /	DBW	M34	Read codes	
N-BOX SLASH /	DBW	M34	Erase Codes	
N-BOX SLASH /	DBW	M34	Read Freeze Frame Data	
N-BOX SLASH /	DBW	M34	Read Live Data	
N-BOX SLASH /	DBW	M34	Inspection	Idle Speed Adjust
N-BOX SLASH /	DBW	M34	Inspection	Throttle Test
N-BOX SLASH /	DBW	M34	ECM Reset	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Read codes	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M37	Read codes	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	



N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Read codes	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
N-BOX SLASH /	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
N-BOX SLASH /	Capacitor Control System (EDLC)	M12	Read codes	
N-BOX SLASH /	Capacitor Control System (EDLC)	M12	Erase Codes	
N-BOX SLASH /	Capacitor Control System (EDLC)	M12	Read Live Data	
N-BOX SLASH /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
N-BOX SLASH /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
N-BOX SLASH /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
N-BOX SLASH /	Electronic Brake Control System (EPB)	M1F	Read codes	
N-BOX SLASH /	Electronic Brake Control System (EPB)	M1F	Erase Codes	
N-BOX SLASH /	Electronic Brake Control System (EPB)	M1F	Read Live Data	
N-BOX SLASH /	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
N-BOX SLASH /	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
N-BOX SLASH /	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
N-BOX SLASH /	Electronic Brake Control System (EPB)	M3E	Read codes	
N-BOX SLASH /	Electronic Brake Control System (EPB)	M3E	Erase Codes	
N-BOX SLASH /	Electronic Brake Control System (EPB)	M3E	Read Live Data	
N-BOX SLASH /	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
N-BOX SLASH /	Electric Powertrain / IMA	M66	Read ECU Information	
N-BOX SLASH /	Electric Powertrain / IMA	M66	Read codes	
N-BOX SLASH /	Electric Powertrain / IMA	M66	Erase Codes	
N-BOX SLASH /	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
N-BOX SLASH /	Electric Powertrain / IMA	M66	Read Live Data	
N-BOX SLASH /	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
N-BOX SLASH /	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
N-BOX SLASH /	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
N-BOX SLASH /	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
N-BOX SLASH /	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
N-BOX SLASH /	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
N-BOX SLASH /	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
N-BOX SLASH /	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
N-BOX SLASH /	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
N-BOX SLASH /	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
N-BOX SLASH /	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
N-BOX SLASH /	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M20	Read codes	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M3F	Read codes	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M6B	Read codes	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
N-BOX SLASH /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
N-BOX SLASH /	New energy battery (EV)	M44	Read ECU Information	
N-BOX SLASH /	New energy battery (EV)	M44	Read codes	
N-BOX SLASH /	New energy battery (EV)	M44	Erase Codes	
N-BOX SLASH /	New energy battery (EV)	M44	Read Freeze Frame Data	
N-BOX SLASH /	New energy battery (EV)	M44	Read Live Data	
N-BOX SLASH /	New energy battery (EV)	M44	Inspection	
N-BOX SLASH /	New energy battery (EV)	M44	Adjustment	
N-BOX SLASH /	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
N-BOX SLASH /	Electronic vacuum pump (EVPS)	M21	Read codes	
N-BOX SLASH /	Electronic vacuum pump (EVPS)	M21	Erase Codes	
N-BOX SLASH /	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
N-BOX SLASH /	Electronic vacuum pump (EVPS)	M21	Read Live Data	
N-BOX SLASH /	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
N-BOX SLASH /	Electronic vacuum pump (EVPS)	M22	Read codes	
N-BOX SLASH /	Electronic vacuum pump (EVPS)	M22	Erase Codes	
N-BOX SLASH /	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
N-BOX SLASH /	Electronic vacuum pump (EVPS)	M22	Read Live Data	
N-BOX SLASH /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2

N-BOX SLASH /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
N-BOX SLASH /	FCW LDW	M4E	Read ECU Information	
N-BOX SLASH /	FCW LDW	M4E	Read codes	
N-BOX SLASH /	FCW LDW	M4E	Erase Codes	
N-BOX SLASH /	FCW LDW	M4E	Read Live Data	
N-BOX SLASH /	FCW LDW	M4E	Function Test	FCW Drive
N-BOX SLASH /	FCW LDW	M4E	Function Test	Left side lane departure warning
N-BOX SLASH /	FCW LDW	M4E	Function Test	Right side lane departure warning
N-BOX SLASH /	FCW LDW	M4E	Function Test	Indicator Drive
N-BOX SLASH /	FCW LDW	M4E	Adjustment	
N-BOX SLASH /	Instrument Display System (GAUGE)	M2C	Read codes	
N-BOX SLASH /	Instrument Display System (GAUGE)	M2C	Erase Codes	
N-BOX SLASH /	Instrument Display System (GAUGE)	M2C	Read Live Data	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Read ECU Information	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Read codes	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Erase Codes	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Read Live Data	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Read ECU Information	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Read codes	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Erase Codes	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Read Live Data	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Read ECU Information	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Read codes	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Erase Codes	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Read Live Data	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Pulser Test	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
N-BOX SLASH /	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Read codes	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Erase Codes	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Read Live Data	
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
N-BOX SLASH /	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
N-BOX SLASH /	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
N-BOX SLASH /	Intelligent Parking Control System (SPS)	M9B	Read codes	
N-BOX SLASH /	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
N-BOX SLASH /	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
N-BOX SLASH /	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
N-BOX SLASH /	Intelligent Parking Control System (SPS)	M9B	Customize	
N-BOX SLASH /	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
N-BOX SLASH /	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
N-BOX SLASH /	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
N-BOX SLASH /	Hydraulic booster control system (HBS)	M5F	Read codes	
N-BOX SLASH /	Hydraulic booster control system (HBS)	M5F	Erase Codes	
N-BOX SLASH /	Hydraulic booster control system (HBS)	M5F	Read Live Data	
N-BOX SLASH /	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
N-BOX SLASH /	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
N-BOX SLASH /	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
N-BOX SLASH /	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
N-BOX SLASH /	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
N-BOX SLASH /	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
N-BOX SLASH /	IMA	M63	Read ECU Information	
N-BOX SLASH /	IMA	M63	Read codes	

N-BOX SLASH /	IMA	M63	Erase Codes	
N-BOX SLASH /	IMA	M63	Read Freeze Frame Data	
N-BOX SLASH /	IMA	M63	Read Live Data	
N-BOX SLASH /	IMA	M63	Function Test	IPU MODULE FAN DRIVE
N-BOX SLASH /	IMA	M63	Adjustment	SOC PRESET
N-BOX SLASH /	IMA	M64	Read ECU Information	
N-BOX SLASH /	IMA	M64	Read codes	
N-BOX SLASH /	IMA	M64	Erase Codes	
N-BOX SLASH /	IMA	M64	Read Freeze Frame Data	
N-BOX SLASH /	IMA	M64	Read Live Data	
N-BOX SLASH /	IMA	M64	Function Test	IPU MODULE FAN DRIVE
N-BOX SLASH /	IMA	M64	Adjustment	SOC PRESET
N-BOX SLASH /	IMA	M65	Read ECU Information	
N-BOX SLASH /	IMA	M65	Read codes	
N-BOX SLASH /	IMA	M65	Erase Codes	
N-BOX SLASH /	IMA	M65	Read Freeze Frame Data	
N-BOX SLASH /	IMA	M65	Read Live Data	
N-BOX SLASH /	IMA	M65	Function Test	IPU MODULE FAN DRIVE
N-BOX SLASH /	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
N-BOX SLASH /	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
N-BOX SLASH /	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
N-BOX SLASH /	Intake Sounder Control System (ISC)	M6D	Read codes	
N-BOX SLASH /	Intake Sounder Control System (ISC)	M6D	Erase Codes	
N-BOX SLASH /	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
N-BOX SLASH /	Intake Sounder Control System (ISC)	M6D	Read Live Data	
N-BOX SLASH /	Night Vision System (INVS)	0XB1	Read ECU Information	
N-BOX SLASH /	Night Vision System (INVS)	0XB1	Read codes	
N-BOX SLASH /	Night Vision System (INVS)	0XB1	Erase Codes	
N-BOX SLASH /	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
N-BOX SLASH /	Night Vision System (INVS)	0XB1	Read Live Data	
N-BOX SLASH /	Night Vision System (INVS)	0XB1	Adjustment	
N-BOX SLASH /	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
N-BOX SLASH /	Night Vision System (INVS)	0XB1	Function Test	Camera Test
N-BOX SLASH /	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
N-BOX SLASH /	i-SHIFT	0XB0	Read ECU Information	
N-BOX SLASH /	i-SHIFT	0XB0	Read codes	
N-BOX SLASH /	i-SHIFT	0XB0	Erase Codes	
N-BOX SLASH /	i-SHIFT	0XB0	Read Live Data	
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Read ECU Information	
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Read codes	
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Erase Codes	
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Read Live Data	
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Self Check	
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	History Data	
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	IMOCONT Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving

N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
N-BOX SLASH /	Keyless Entry Control System (KAS)	M99	Registration	
N-BOX SLASH /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
N-BOX SLASH /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
N-BOX SLASH /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
N-BOX SLASH /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
N-BOX SLASH /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
N-BOX SLASH /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
N-BOX SLASH /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
N-BOX SLASH /	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
N-BOX SLASH /	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
N-BOX SLASH /	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
N-BOX SLASH /	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
N-BOX SLASH /	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
N-BOX SLASH /	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
N-BOX SLASH /	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
N-BOX SLASH /	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
N-BOX SLASH /	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
N-BOX SLASH /	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
N-BOX SLASH /	Management ECU Module (ME)	M74	Read ECU Information	
N-BOX SLASH /	Management ECU Module (ME)	M74	Read codes	
N-BOX SLASH /	Management ECU Module (ME)	M74	Erase Codes	
N-BOX SLASH /	Management ECU Module (ME)	M74	Read Freeze Frame Data	
N-BOX SLASH /	Management ECU Module (ME)	M74	Read Live Data	
N-BOX SLASH /	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
N-BOX SLASH /	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
N-BOX SLASH /	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
N-BOX SLASH /	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
N-BOX SLASH /	Multi-view camera system (MVCS)	M7A	Read ECU Information	
N-BOX SLASH /	Multi-view camera system (MVCS)	M7A	Read codes	
N-BOX SLASH /	Multi-view camera system (MVCS)	M7A	Erase Codes	
N-BOX SLASH /	Multi-view camera system (MVCS)	M7A	Read Live Data	
N-BOX SLASH /	Multi-view camera system (MVCS)	M7A	Customization	
N-BOX SLASH /	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
N-BOX SLASH /	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
N-BOX SLASH /	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
N-BOX SLASH /	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
N-BOX SLASH /	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
N-BOX SLASH /	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
N-BOX SLASH /	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
N-BOX SLASH /	Power Control Unit (PCU)	M83	Read ECU Information	
N-BOX SLASH /	Power Control Unit (PCU)	M83	Read codes	
N-BOX SLASH /	Power Control Unit (PCU)	M83	Erase Codes	
N-BOX SLASH /	Power Control Unit (PCU)	M83	Read Live Data	
N-BOX SLASH /	Power Control Unit (PCU)	M83	Self Check	
N-BOX SLASH /	Power Control Unit (PCU)	M83	History Data	
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Read ECU Information	
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Read codes	
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Erase Codes	
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Readiness Codes	
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Read Live Data	
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	VIN CHECK	
N-BOX SLASH /	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	Read ECU Information	
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	Read codes	
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	Erase Codes	
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	Readiness Codes	
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	Read Live Data	
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	VIN CHECK	
N-BOX SLASH /	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Read ECU Information	
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Read codes	
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Erase Codes	

N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Readiness Codes	
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Read Live Data	
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	ACM
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	VIN CHECK	
N-BOX SLASH /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
N-BOX SLASH /	Four-wheel precision steering control system (PAWSC) M96		Read codes	
N-BOX SLASH /	Four-wheel precision steering control system (PAWSC) M96		Erase Codes	
N-BOX SLASH /	Four-wheel precision steering control system (PAWSC) M96		Read Live Data	
N-BOX SLASH /	PSR	M27	Read ECU Information	
N-BOX SLASH /	PSR	M27	Read codes	
N-BOX SLASH /	PSR	M27	Erase Codes	
N-BOX SLASH /	PSR	M27	Read Live Data	
N-BOX SLASH /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
N-BOX SLASH /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
N-BOX SLASH /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
N-BOX SLASH /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
N-BOX SLASH /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
N-BOX SLASH /	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
N-BOX SLASH /	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
N-BOX SLASH /	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
N-BOX SLASH /	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
N-BOX SLASH /	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
N-BOX SLASH /	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
N-BOX SLASH /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
N-BOX SLASH /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
N-BOX SLASH /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
N-BOX SLASH /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
N-BOX SLASH /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
N-BOX SLASH /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
N-BOX SLASH /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
N-BOX SLASH /	Remote starter (RS)	M90	System Check	
N-BOX SLASH /	Remote starter (RS)	M90	HISTORY	
N-BOX SLASH /	Remote starter (RS)	M90	Registration	
N-BOX SLASH /	Seat load cell (SWS)	M6F	Read ECU Information	
N-BOX SLASH /	Seat load cell (SWS)	M6F	Read codes	
N-BOX SLASH /	Seat load cell (SWS)	M6F	Erase Codes	
N-BOX SLASH /	Seat load cell (SWS)	M6F	Read Live Data	
N-BOX SLASH /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
N-BOX SLASH /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
N-BOX SLASH /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
N-BOX SLASH /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
N-BOX SLASH /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
N-BOX SLASH /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
N-BOX SLASH /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
N-BOX SLASH /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M29		Read ECU Information	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M29		Read codes	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M29		Erase Codes	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M29		Readiness Codes	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M29		Read Freeze Frame Data	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M29		ECM/PCM Reset	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M29		Read Live Data	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M29		Inspection	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M29		Adjustment	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M29		VIN CHECK	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M29		Replace ECM/PCM	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Read ECU Information	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Read codes	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Erase Codes	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Read Freeze Frame Data	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Read Live Data	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Miscellaneous Test/Function 1 Shift Solenoid Test	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Miscellaneous Test/Function 1 Acceleration Device Test	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Miscellaneous Test/Function 1 Clutch Coil Test	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Miscellaneous Test/Neutral M Differential Torque	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Miscellaneous Test/Neutral M Steering Angle Sensor	
N-BOX SLASH /	Full-time four-wheel drive control system (SH-AWD) M97		Miscellaneous Test/Neutral M All Sensor	

N-BOX SLASH /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
N-BOX SLASH /	Groove track drive unit (SLOT ECU)	M98	Read codes	
N-BOX SLASH /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
N-BOX SLASH /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
N-BOX SLASH /	Groove track drive unit (SLOT ECU)	M98	Self Check	
N-BOX SLASH /	Groove track drive unit (SLOT ECU)	M98	History Data	
N-BOX SLASH /	Groove track drive unit (SLOT ECU)	M98	System Information	
N-BOX SLASH /	Airbag Control System (SRS)	M9F	Read ECU Information	
N-BOX SLASH /	Airbag Control System (SRS)	M9F	Read codes	
N-BOX SLASH /	Airbag Control System (SRS)	M9F	Erase Codes	
N-BOX SLASH /	Airbag Control System (SRS)	M9F	Read Live Data	
N-BOX SLASH /	Airbag Control System (SRS)	MA0	Read ECU Information	
N-BOX SLASH /	Airbag Control System (SRS)	MA0	Read codes	
N-BOX SLASH /	Airbag Control System (SRS)	MA0	Erase Codes	
N-BOX SLASH /	Airbag Control System (SRS)	MA0	Read Live Data	
N-BOX SLASH /	Airbag Control System (SRS)	MA1	Read ECU Information	
N-BOX SLASH /	Airbag Control System (SRS)	MA1	Read codes	
N-BOX SLASH /	Airbag Control System (SRS)	MA1	Erase Codes	
N-BOX SLASH /	Airbag Control System (SRS)	MA1	Read Live Data	
N-BOX SLASH /	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
N-BOX SLASH /	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
N-BOX SLASH /	Airbag Control System (SRS)	M2A	Read codes	
N-BOX SLASH /	Airbag Control System (SRS)	M2A	Erase Codes	
N-BOX SLASH /	Airbag Control System (SRS)	M2A	Read Live Data	
N-BOX SLASH /	Airbag Control System (SRS)	M9C	Read ECU Information	
N-BOX SLASH /	Airbag Control System (SRS)	M9C	Read codes	
N-BOX SLASH /	Airbag Control System (SRS)	M9C	Erase Codes	
N-BOX SLASH /	Airbag Control System (SRS)	M9C	Read Live Data	
N-BOX SLASH /	Airbag Control System (SRS)	M9D	Read ECU Information	
N-BOX SLASH /	Airbag Control System (SRS)	M9D	Read codes	
N-BOX SLASH /	Airbag Control System (SRS)	M9D	Erase Codes	
N-BOX SLASH /	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
N-BOX SLASH /	Airbag Control System (SRS)	M9D	Read Live Data	
N-BOX SLASH /	Airbag Control System (SRS)	M9D	Parameter Information	
N-BOX SLASH /	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
N-BOX SLASH /	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
N-BOX SLASH /	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
N-BOX SLASH /	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
N-BOX SLASH /	Airbag Control System (SRS)	M9D	Function Test	
N-BOX SLASH /	Airbag Control System (SRS)	M9D	System Information	
N-BOX SLASH /	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
N-BOX SLASH /	Variable Valve Timing Control System (SVT)	MA2	Read codes	
N-BOX SLASH /	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
N-BOX SLASH /	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
N-BOX SLASH /	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
N-BOX SLASH /	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
N-BOX SLASH /	Variable Valve Timing Control System (SVT)	MA2	Inspection	
N-BOX SLASH /	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
N-BOX SLASH /	Variable Valve Timing Control System (SVT)	MA2	Function Test	
N-BOX SLASH /	Variable Valve Timing Control System (SVT)	MA2	System Information	
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
N-BOX SLASH /	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
N-BOX SLASH /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
N-BOX SLASH /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
N-BOX SLASH /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
N-BOX SLASH /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
N-BOX SLASH /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
N-BOX SLASH /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
N-BOX SLASH /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
N-BOX SLASH /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
N-BOX+ /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
N-BOX+ /	Four-wheel steering control system (4WS)	M52	Read codes	
N-BOX+ /	Four-wheel steering control system (4WS)	M52	Erase Codes	
N-BOX+ /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
N-BOX+ /	Four-wheel steering control system (4WS)	M52	Read Live Data	
N-BOX+ /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
N-BOX+ /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
N-BOX+ /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
N-BOX+ /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
N-BOX+ /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
N-BOX+ /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
N-BOX+ /	Automatic shift control system (A/T)	M1E	Read ECU Information	
N-BOX+ /	Automatic shift control system (A/T)	M1E	Read codes	
N-BOX+ /	Automatic shift control system (A/T)	M1E	Erase Codes	
N-BOX+ /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
N-BOX+ /	Automatic shift control system (A/T)	M1E	Read Live Data	
N-BOX+ /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
N-BOX+ /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
N-BOX+ /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
N-BOX+ /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
N-BOX+ /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
N-BOX+ /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C

N-BOX+	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
N-BOX+	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
N-BOX+	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
N-BOX+	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
N-BOX+	/	Automatic shift control system (A/T)	M3B	Read codes	
N-BOX+	/	Automatic shift control system (A/T)	M3B	Erase Codes	
N-BOX+	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
N-BOX+	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
N-BOX+	/	Automatic shift control system (A/T)	M3B	Read Live Data	
N-BOX+	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
N-BOX+	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
N-BOX+	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
N-BOX+	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
N-BOX+	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
N-BOX+	/	Automatic shift control system (A/T)	M3C	Read codes	
N-BOX+	/	Automatic shift control system (A/T)	M3C	Erase Codes	
N-BOX+	/	Automatic shift control system (A/T)	M81	Read ECU Information	
N-BOX+	/	Automatic shift control system (A/T)	M81	Read codes	
N-BOX+	/	Automatic shift control system (A/T)	M81	Erase Codes	
N-BOX+	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
N-BOX+	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
N-BOX+	/	Automatic shift control system (A/T)	M81	Read Live Data	
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
N-BOX+	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
N-BOX+	/	Automatic shift control system (A/T)	M82	Read ECU Information	
N-BOX+	/	Automatic shift control system (A/T)	M82	Read codes	
N-BOX+	/	Automatic shift control system (A/T)	M82	Erase Codes	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read codes	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Erase Codes	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Freeze Frame Data	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Live Data	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	Throttle Opening Angle Test
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 1
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 2
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	LIGHT CHECK
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BUZZER CHECK
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read ECU Information	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read codes	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Erase Codes	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Freeze Frame Data	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Live Data	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Adjustment	RADAR AIMING
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	BRAKE ACTUATOR 3
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ACC relay malfunction.
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INDICATOR LIGHT
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INFORMATION DISPLAY
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ALARM BUZZER
N-BOX+	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
N-BOX+	/	Active Engine Control Support System (ACM)	M06	Read codes	
N-BOX+	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
N-BOX+	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
N-BOX+	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
N-BOX+	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
N-BOX+	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
N-BOX+	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
N-BOX+	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
N-BOX+	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
N-BOX+	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
N-BOX+	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
N-BOX+	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
N-BOX+	/	Active / Automatic Shock Absorber Control System (A	MOD	Read ECU Information	
N-BOX+	/	Active / Automatic Shock Absorber Control System (A	MOD	Read codes	
N-BOX+	/	Active / Automatic Shock Absorber Control System (A	MOD	Erase Codes	
N-BOX+	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Freeze Frame Data	
N-BOX+	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Live Data	
N-BOX+	/	Active / Automatic Shock Absorber Control System (A	MOD	Function Test	Damper Force Operation Test
N-BOX+	/	Active / Automatic Shock Absorber Control System (A	MOD	Adjustment	Damper Stroke Calibration
N-BOX+	/	Active / Automatic Shock Absorber Control System (A	M1A	Read codes	
N-BOX+	/	Active / Automatic Shock Absorber Control System (A	M1A	Erase Codes	
N-BOX+	/	Active / Automatic Shock Absorber Control System (A	M1A	Read Live Data	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read codes	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Erase Codes	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Freeze Frame Data	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Live Data	
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	ACC Brake (Brake Actuator)
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	CMBS Brake
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Brake Light (ACC Relay)
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Indicator Light
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Information Display
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Alarm Test
N-BOX+	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Adjustment	Radar aiming

N-BOX+	/	Transmission Control System (AT)	M18	Read ECU Information	
N-BOX+	/	Transmission Control System (AT)	M18	Read codes	
N-BOX+	/	Transmission Control System (AT)	M18	Erase Codes	
N-BOX+	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
N-BOX+	/	Transmission Control System (AT)	M18	Read Live Data	
N-BOX+	/	Transmission Control System (AT)	M18	Adjustment	
N-BOX+	/	Active Torque Converter Control System (ATTS)	MOE	Read ECU Information	
N-BOX+	/	Active Torque Converter Control System (ATTS)	MOE	Read codes	
N-BOX+	/	Active Torque Converter Control System (ATTS)	MOE	Erase Codes	
N-BOX+	/	Active Torque Converter Control System (ATTS)	MOE	Read Freeze Frame Data	
N-BOX+	/	Active Torque Converter Control System (ATTS)	MOE	Read Live Data	
N-BOX+	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
N-BOX+	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	STEERING ANGLE
N-BOX+	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
N-BOX+	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ALL SENSORS
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
N-BOX+	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
N-BOX+	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
N-BOX+	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
N-BOX+	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
N-BOX+	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
N-BOX+	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
N-BOX+	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
N-BOX+	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
N-BOX+	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
N-BOX+	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
N-BOX+	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
N-BOX+	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
N-BOX+	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
N-BOX+	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
N-BOX+	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
N-BOX+	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
N-BOX+	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
N-BOX+	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
N-BOX+	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
N-BOX+	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
N-BOX+	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
N-BOX+	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator



N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
N-BOX+	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
N-BOX+	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
N-BOX+	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
N-BOX+	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
N-BOX+	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
N-BOX+	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
N-BOX+	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
N-BOX+	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
N-BOX+	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
N-BOX+	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
N-BOX+	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
N-BOX+	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
N-BOX+	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
N-BOX+	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
N-BOX+	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
N-BOX+	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
N-BOX+	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
N-BOX+	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command

N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
N-BOX+	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
N-BOX+	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Security	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
N-BOX+	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
N-BOX+	/	BODY ELECTRICAL/Security	MFF	History Data	
N-BOX+	/	BODY ELECTRICAL/Security	MFF	History Clear	
N-BOX+	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
N-BOX+	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
N-BOX+	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
N-BOX+	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
N-BOX+	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
N-BOX+	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
N-BOX+	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
N-BOX+	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
N-BOX+	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
N-BOX+	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
N-BOX+	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
N-BOX+	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
N-BOX+	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
N-BOX+	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
N-BOX+	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
N-BOX+	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
N-BOX+	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
N-BOX+	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
N-BOX+	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
N-BOX+	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
N-BOX+	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
N-BOX+	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
N-BOX+	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
N-BOX+	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
N-BOX+	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
N-BOX+	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
N-BOX+	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
N-BOX+	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
N-BOX+	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
N-BOX+	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Read ECU Information	
N-BOX+	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Read codes	
N-BOX+	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Erase Codes	
N-BOX+	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Read Freeze Frame Data	
N-BOX+	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Read Live Data	
N-BOX+	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		CMBS (CMS) ACTIVATION HISTORY	
N-BOX+	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Miscellaneous Test	RADAR AIMING
N-BOX+	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Miscellaneous Test	CMBS Brake
N-BOX+	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
N-BOX+	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
N-BOX+	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
N-BOX+	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid

N-BOX+	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)
N-BOX+	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)
N-BOX+	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	ECM/PCM Reset	
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B
N-BOX+	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P
N-BOX+	/	DBW M34	Read ECU Information	
N-BOX+	/	DBW M34	Read codes	
N-BOX+	/	DBW M34	Erase Codes	
N-BOX+	/	DBW M34	Read Freeze Frame Data	
N-BOX+	/	DBW M34	Read Live Data	
N-BOX+	/	DBW M34	Inspection	Idle Speed Adjust
N-BOX+	/	DBW M34	Inspection	Throttle Test
N-BOX+	/	DBW M34	ECM Reset	
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
N-BOX+	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
N-BOX+	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
N-BOX+	/	Diesel Engine Control System (DIESEL) M37	Read codes	
N-BOX+	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
N-BOX+	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
N-BOX+	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
N-BOX+	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
N-BOX+	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
N-BOX+	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
N-BOX+	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Read codes	
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
N-BOX+	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
N-BOX+	/	Capacitor Control System (EDLC) M12	Read codes	
N-BOX+	/	Capacitor Control System (EDLC) M12	Erase Codes	
N-BOX+	/	Capacitor Control System (EDLC) M12	Read Live Data	
N-BOX+	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge and Charge Test
N-BOX+	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge for Removal or Disposal
N-BOX+	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Usage History Clear
N-BOX+	/	Electronic Brake Control System (EPB) M1F	Read codes	
N-BOX+	/	Electronic Brake Control System (EPB) M1F	Erase Codes	
N-BOX+	/	Electronic Brake Control System (EPB) M1F	Read Live Data	
N-BOX+	/	Electronic Brake Control System (EPB) M1F	Adjustment	Sensor Calibration
N-BOX+	/	Electronic Brake Control System (EPB) M1F	Adjustment	Brake Pad Maintenance Mode
N-BOX+	/	Electronic Brake Control System (EPB) M3E	Read ECU Information	
N-BOX+	/	Electronic Brake Control System (EPB) M3E	Read codes	
N-BOX+	/	Electronic Brake Control System (EPB) M3E	Erase Codes	
N-BOX+	/	Electronic Brake Control System (EPB) M3E	Read Live Data	

N-BOX+	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
N-BOX+	/	Electric Powertrain / IMA	M66	Read ECU Information	
N-BOX+	/	Electric Powertrain / IMA	M66	Read codes	
N-BOX+	/	Electric Powertrain / IMA	M66	Erase Codes	
N-BOX+	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
N-BOX+	/	Electric Powertrain / IMA	M66	Read Live Data	
N-BOX+	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
N-BOX+	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
N-BOX+	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
N-BOX+	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
N-BOX+	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
N-BOX+	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
N-BOX+	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
N-BOX+	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
N-BOX+	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
N-BOX+	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
N-BOX+	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
N-BOX+	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
N-BOX+	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
N-BOX+	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
N-BOX+	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
N-BOX+	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
N-BOX+	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
N-BOX+	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
N-BOX+	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
N-BOX+	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
N-BOX+	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
N-BOX+	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
N-BOX+	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
N-BOX+	/	New energy battery (EV)	M44	Read ECU Information	
N-BOX+	/	New energy battery (EV)	M44	Read codes	
N-BOX+	/	New energy battery (EV)	M44	Erase Codes	
N-BOX+	/	New energy battery (EV)	M44	Read Freeze Frame Data	
N-BOX+	/	New energy battery (EV)	M44	Read Live Data	
N-BOX+	/	New energy battery (EV)	M44	Inspection	
N-BOX+	/	New energy battery (EV)	M44	Adjustment	
N-BOX+	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
N-BOX+	/	Electronic vacuum pump (EVPS)	M21	Read codes	
N-BOX+	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
N-BOX+	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
N-BOX+	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
N-BOX+	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
N-BOX+	/	Electronic vacuum pump (EVPS)	M22	Read codes	
N-BOX+	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
N-BOX+	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
N-BOX+	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
N-BOX+	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
N-BOX+	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
N-BOX+	/	FCW LDW	M4E	Read ECU Information	
N-BOX+	/	FCW LDW	M4E	Read codes	
N-BOX+	/	FCW LDW	M4E	Erase Codes	
N-BOX+	/	FCW LDW	M4E	Read Live Data	
N-BOX+	/	FCW LDW	M4E	Function Test	FCW Drive
N-BOX+	/	FCW LDW	M4E	Function Test	Left side lane departure warning
N-BOX+	/	FCW LDW	M4E	Function Test	Right side lane departure warning
N-BOX+	/	FCW LDW	M4E	Function Test	Indicator Drive
N-BOX+	/	FCW LDW	M4E	Adjustment	
N-BOX+	/	Instrument Display System (GAUGE)	M2C	Read codes	
N-BOX+	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
N-BOX+	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Read codes	
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
N-BOX+	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
N-BOX+	/	Anti-lock brake control system (ABS)	M02	Read codes	
N-BOX+	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
N-BOX+	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
N-BOX+	/	Anti-lock brake control system (ABS)	M02	Read Live Data	

N-BOX+	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Read codes	
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
N-BOX+	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
N-BOX+	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Read codes	
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
N-BOX+	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
N-BOX+	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
N-BOX+	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
N-BOX+	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
N-BOX+	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
N-BOX+	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
N-BOX+	/	Intelligent Parking Control System (SPS)	M9B	Customize	
N-BOX+	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
N-BOX+	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
N-BOX+	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
N-BOX+	/	Hydraulic booster control system (HBS)	M5F	Read codes	
N-BOX+	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
N-BOX+	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
N-BOX+	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
N-BOX+	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
N-BOX+	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
N-BOX+	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
N-BOX+	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
N-BOX+	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
N-BOX+	/	IMA	M63	Read ECU Information	
N-BOX+	/	IMA	M63	Read codes	
N-BOX+	/	IMA	M63	Erase Codes	
N-BOX+	/	IMA	M63	Read Freeze Frame Data	
N-BOX+	/	IMA	M63	Read Live Data	
N-BOX+	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
N-BOX+	/	IMA	M63	Adjustment	SOC PRESET
N-BOX+	/	IMA	M64	Read ECU Information	
N-BOX+	/	IMA	M64	Read codes	
N-BOX+	/	IMA	M64	Erase Codes	
N-BOX+	/	IMA	M64	Read Freeze Frame Data	
N-BOX+	/	IMA	M64	Read Live Data	
N-BOX+	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
N-BOX+	/	IMA	M64	Adjustment	SOC PRESET
N-BOX+	/	IMA	M65	Read ECU Information	
N-BOX+	/	IMA	M65	Read codes	
N-BOX+	/	IMA	M65	Erase Codes	
N-BOX+	/	IMA	M65	Read Freeze Frame Data	
N-BOX+	/	IMA	M65	Read Live Data	
N-BOX+	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
N-BOX+	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
N-BOX+	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
N-BOX+	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
N-BOX+	/	Intake Sounder Control System (ISC)	M6D	Read codes	
N-BOX+	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
N-BOX+	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
N-BOX+	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
N-BOX+	/	Night Vision System (INVS)	0XB1	Read ECU Information	
N-BOX+	/	Night Vision System (INVS)	0XB1	Read codes	
N-BOX+	/	Night Vision System (INVS)	0XB1	Erase Codes	
N-BOX+	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
N-BOX+	/	Night Vision System (INVS)	0XB1	Read Live Data	
N-BOX+	/	Night Vision System (INVS)	0XB1	Adjustment	
N-BOX+	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test

N-BOX+	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
N-BOX+	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
N-BOX+	/	i-SHIFT	0XB0	Read ECU Information	
N-BOX+	/	i-SHIFT	0XB0	Read codes	
N-BOX+	/	i-SHIFT	0XB0	Erase Codes	
N-BOX+	/	i-SHIFT	0XB0	Read Live Data	
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Read codes	
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Self Check	
N-BOX+	/	Keyless Entry Control System (KAS)	M99	History Data	
N-BOX+	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
N-BOX+	/	Keyless Entry Control System (KAS)	M99	Registration	
N-BOX+	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
N-BOX+	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
N-BOX+	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
N-BOX+	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
N-BOX+	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
N-BOX+	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
N-BOX+	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
N-BOX+	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
N-BOX+	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
N-BOX+	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
N-BOX+	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
N-BOX+	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
N-BOX+	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
N-BOX+	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
N-BOX+	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
N-BOX+	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
N-BOX+	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
N-BOX+	/	Management ECU Module (ME)	M74	Read ECU Information	
N-BOX+	/	Management ECU Module (ME)	M74	Read codes	
N-BOX+	/	Management ECU Module (ME)	M74	Erase Codes	
N-BOX+	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
N-BOX+	/	Management ECU Module (ME)	M74	Read Live Data	
N-BOX+	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
N-BOX+	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
N-BOX+	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
N-BOX+	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
N-BOX+	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
N-BOX+	/	Multi-view camera system (MVCS)	M7A	Read codes	
N-BOX+	/	Multi-view camera system (MVCS)	M7A	Erase Codes	

N-BOX+	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
N-BOX+	/	Multi-view camera system (MVCS)	M7A	Customization	
N-BOX+	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
N-BOX+	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
N-BOX+	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
N-BOX+	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
N-BOX+	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
N-BOX+	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
N-BOX+	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
N-BOX+	/	Power Control Unit (PCU)	M83	Read ECU Information	
N-BOX+	/	Power Control Unit (PCU)	M83	Read codes	
N-BOX+	/	Power Control Unit (PCU)	M83	Erase Codes	
N-BOX+	/	Power Control Unit (PCU)	M83	Read Live Data	
N-BOX+	/	Power Control Unit (PCU)	M83	Self Check	
N-BOX+	/	Power Control Unit (PCU)	M83	History Data	
N-BOX+	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
N-BOX+	/	Engine Control System (PGM-FI)	M23	Read codes	
N-BOX+	/	Engine Control System (PGM-FI)	M23	Erase Codes	
N-BOX+	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
N-BOX+	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
N-BOX+	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
N-BOX+	/	Engine Control System (PGM-FI)	M23	Read Live Data	
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
N-BOX+	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
N-BOX+	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
N-BOX+	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
N-BOX+	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
N-BOX+	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
N-BOX+	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
N-BOX+	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
N-BOX+	/	Engine Control System (PGM-FI)	M50	Read codes	
N-BOX+	/	Engine Control System (PGM-FI)	M50	Erase Codes	
N-BOX+	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
N-BOX+	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
N-BOX+	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
N-BOX+	/	Engine Control System (PGM-FI)	M50	Read Live Data	
N-BOX+	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
N-BOX+	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
N-BOX+	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
N-BOX+	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
N-BOX+	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
N-BOX+	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
N-BOX+	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
N-BOX+	/	Engine Control System (PGM-FI)	M86	Read codes	
N-BOX+	/	Engine Control System (PGM-FI)	M86	Erase Codes	
N-BOX+	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
N-BOX+	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
N-BOX+	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
N-BOX+	/	Engine Control System (PGM-FI)	M86	Read Live Data	
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
N-BOX+	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
N-BOX+	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
N-BOX+	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
N-BOX+	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
N-BOX+	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
N-BOX+	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
N-BOX+	/	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
N-BOX+	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	

N-BOX+	/	PSR	M27	Read ECU Information	
N-BOX+	/	PSR	M27	Read codes	
N-BOX+	/	PSR	M27	Erase Codes	
N-BOX+	/	PSR	M27	Read Live Data	
N-BOX+	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
N-BOX+	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
N-BOX+	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
N-BOX+	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
N-BOX+	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
N-BOX+	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
N-BOX+	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
N-BOX+	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
N-BOX+	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
N-BOX+	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
N-BOX+	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
N-BOX+	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
N-BOX+	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
N-BOX+	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
N-BOX+	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
N-BOX+	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
N-BOX+	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
N-BOX+	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
N-BOX+	/	Remote starter (RS)	M90	System Check	
N-BOX+	/	Remote starter (RS)	M90	HISTORY	
N-BOX+	/	Remote starter (RS)	M90	Registration	
N-BOX+	/	Seat load cell (SWS)	M6F	Read ECU Information	
N-BOX+	/	Seat load cell (SWS)	M6F	Read codes	
N-BOX+	/	Seat load cell (SWS)	M6F	Erase Codes	
N-BOX+	/	Seat load cell (SWS)	M6F	Read Live Data	
N-BOX+	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
N-BOX+	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
N-BOX+	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
N-BOX+	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
N-BOX+	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
N-BOX+	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
N-BOX+	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
N-BOX+	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
N-BOX+	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
N-BOX+	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
N-BOX+	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
N-BOX+	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
N-BOX+	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
N-BOX+	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
N-BOX+	/	Groove track drive unit (SLOT ECU)	M98	History Data	
N-BOX+	/	Groove track drive unit (SLOT ECU)	M98	System Information	
N-BOX+	/	Airbag Control System (SRS)	M9F	Read ECU Information	
N-BOX+	/	Airbag Control System (SRS)	M9F	Read codes	
N-BOX+	/	Airbag Control System (SRS)	M9F	Erase Codes	
N-BOX+	/	Airbag Control System (SRS)	M9F	Read Live Data	
N-BOX+	/	Airbag Control System (SRS)	MA0	Read ECU Information	
N-BOX+	/	Airbag Control System (SRS)	MA0	Read codes	
N-BOX+	/	Airbag Control System (SRS)	MA0	Erase Codes	
N-BOX+	/	Airbag Control System (SRS)	MA0	Read Live Data	
N-BOX+	/	Airbag Control System (SRS)	MA1	Read ECU Information	
N-BOX+	/	Airbag Control System (SRS)	MA1	Read codes	
N-BOX+	/	Airbag Control System (SRS)	MA1	Erase Codes	
N-BOX+	/	Airbag Control System (SRS)	MA1	Read Live Data	
N-BOX+	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
N-BOX+	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
N-BOX+	/	Airbag Control System (SRS)	M2A	Read codes	
N-BOX+	/	Airbag Control System (SRS)	M2A	Erase Codes	
N-BOX+	/	Airbag Control System (SRS)	M2A	Read Live Data	
N-BOX+	/	Airbag Control System (SRS)	M9C	Read ECU Information	
N-BOX+	/	Airbag Control System (SRS)	M9C	Read codes	
N-BOX+	/	Airbag Control System (SRS)	M9C	Erase Codes	
N-BOX+	/	Airbag Control System (SRS)	M9C	Read Live Data	
N-BOX+	/	Airbag Control System (SRS)	M9D	Read ECU Information	
N-BOX+	/	Airbag Control System (SRS)	M9D	Read codes	
N-BOX+	/	Airbag Control System (SRS)	M9D	Erase Codes	
N-BOX+	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	



N-BOX+	/	Airbag Control System (SRS)	M9D	Read Live Data	
N-BOX+	/	Airbag Control System (SRS)	M9D	Parameter Information	
N-BOX+	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
N-BOX+	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
N-BOX+	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
N-BOX+	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
N-BOX+	/	Airbag Control System (SRS)	M9D	Function Test	
N-BOX+	/	Airbag Control System (SRS)	M9D	System Information	
N-BOX+	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
N-BOX+	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
N-BOX+	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
N-BOX+	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
N-BOX+	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
N-BOX+	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
N-BOX+	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
N-BOX+	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
N-BOX+	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
N-BOX+	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
N-BOX+	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
N-BOX+	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
N-BOX+	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
N-BOX+	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
N-BOX+	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
N-BOX+	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
N-BOX+	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
N-BOX+	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
N-BOX+	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
N-ONE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
N-ONE	/	Four-wheel steering control system (4WS)	M52	Read codes	
N-ONE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
N-ONE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
N-ONE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
N-ONE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
N-ONE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
N-ONE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
N-ONE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
N-ONE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
N-ONE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
N-ONE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
N-ONE	/	Automatic shift control system (A/T)	M1E	Read codes	
N-ONE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
N-ONE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
N-ONE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
N-ONE	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
N-ONE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
N-ONE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
N-ONE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
N-ONE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
N-ONE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
N-ONE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
N-ONE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
N-ONE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
N-ONE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
N-ONE	/	Automatic shift control system (A/T)	M3B	Read codes	
N-ONE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
N-ONE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
N-ONE	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
N-ONE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
N-ONE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
N-ONE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
N-ONE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
N-ONE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
N-ONE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
N-ONE	/	Automatic shift control system (A/T)	M3C	Read codes	
N-ONE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
N-ONE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
N-ONE	/	Automatic shift control system (A/T)	M81	Read codes	
N-ONE	/	Automatic shift control system (A/T)	M81	Erase Codes	
N-ONE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
N-ONE	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
N-ONE	/	Automatic shift control system (A/T)	M81	Read Live Data	
N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test

N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
N-ONE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
N-ONE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
N-ONE	/	Automatic shift control system (A/T)	M82	Read codes	
N-ONE	/	Automatic shift control system (A/T)	M82	Erase Codes	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
N-ONE	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
N-ONE	/	Active Engine Control Support System (ACM)	M06	Read codes	
N-ONE	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
N-ONE	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
N-ONE	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
N-ONE	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
N-ONE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
N-ONE	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
N-ONE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
N-ONE	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
N-ONE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
N-ONE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
N-ONE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
N-ONE	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
N-ONE	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
N-ONE	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
N-ONE	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
N-ONE	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
N-ONE	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
N-ONE	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
N-ONE	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
N-ONE	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
N-ONE	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
N-ONE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
N-ONE	/	Transmission Control System (AT)	M18	Read ECU Information	
N-ONE	/	Transmission Control System (AT)	M18	Read codes	
N-ONE	/	Transmission Control System (AT)	M18	Erase Codes	
N-ONE	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
N-ONE	/	Transmission Control System (AT)	M18	Read Live Data	
N-ONE	/	Transmission Control System (AT)	M18	Adjustment	
N-ONE	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
N-ONE	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
N-ONE	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
N-ONE	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
N-ONE	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
N-ONE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
N-ONE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
N-ONE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
N-ONE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
N-ONE	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	

N-ONE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
N-ONE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Function Test	Oncoming Vehicle Detection
N-ONE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Function Test	Preceding Vehicle Detection
N-ONE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
N-ONE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
N-ONE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Reset Operation
N-ONE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Returning Operation
N-ONE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Automatic Returning Distance
N-ONE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Manual Returning Time
N-ONE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	MFF	Adjustment	Reset to default
N-ONE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
N-ONE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
N-ONE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
N-ONE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
N-ONE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
N-ONE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
N-ONE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
N-ONE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
N-ONE	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
N-ONE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
N-ONE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
N-ONE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
N-ONE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
N-ONE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test

N-ONE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
N-ONE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
N-ONE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
N-ONE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
N-ONE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
N-ONE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
N-ONE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
N-ONE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
N-ONE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
N-ONE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
N-ONE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
N-ONE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
N-ONE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
N-ONE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
N-ONE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
N-ONE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
N-ONE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Security	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
N-ONE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
N-ONE	/	BODY ELECTRICAL/Security	MFF	History Data	
N-ONE	/	BODY ELECTRICAL/Security	MFF	History Clear	
N-ONE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
N-ONE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
N-ONE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
N-ONE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
N-ONE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
N-ONE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	

N-ONE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
N-ONE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
N-ONE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
N-ONE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
N-ONE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
N-ONE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
N-ONE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
N-ONE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
N-ONE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
N-ONE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
N-ONE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
N-ONE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
N-ONE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
N-ONE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
N-ONE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
N-ONE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
N-ONE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
N-ONE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
N-ONE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
N-ONE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
N-ONE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
N-ONE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
N-ONE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
N-ONE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
N-ONE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
N-ONE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
N-ONE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
N-ONE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
N-ONE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
N-ONE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
N-ONE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
N-ONE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
N-ONE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
N-ONE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
N-ONE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
N-ONE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
N-ONE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
N-ONE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
N-ONE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
N-ONE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
N-ONE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
N-ONE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
N-ONE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
N-ONE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
N-ONE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
N-ONE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
N-ONE	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
N-ONE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
N-ONE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
N-ONE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
N-ONE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
N-ONE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
N-ONE	/	DBW	M34	Read ECU Information	
N-ONE	/	DBW	M34	Read codes	
N-ONE	/	DBW	M34	Erase Codes	
N-ONE	/	DBW	M34	Read Freeze Frame Data	
N-ONE	/	DBW	M34	Read Live Data	
N-ONE	/	DBW	M34	Inspection	Idle Speed Adjust
N-ONE	/	DBW	M34	Inspection	Throttle Test
N-ONE	/	DBW	M34	ECM Reset	
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off

N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	ISV Forced Learning
N-ONE	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
N-ONE	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
N-ONE	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
N-ONE	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
N-ONE	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
N-ONE	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
N-ONE	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
N-ONE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
N-ONE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
N-ONE	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
N-ONE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
N-ONE	/	Capacitor Control System (EDLC)	M12	Read codes	
N-ONE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
N-ONE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
N-ONE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
N-ONE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
N-ONE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
N-ONE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
N-ONE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
N-ONE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
N-ONE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
N-ONE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
N-ONE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
N-ONE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
N-ONE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
N-ONE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
N-ONE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
N-ONE	/	Electric Powertrain / IMA	M66	Read ECU Information	
N-ONE	/	Electric Powertrain / IMA	M66	Read codes	
N-ONE	/	Electric Powertrain / IMA	M66	Erase Codes	
N-ONE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
N-ONE	/	Electric Powertrain / IMA	M66	Read Live Data	
N-ONE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
N-ONE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
N-ONE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
N-ONE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
N-ONE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
N-ONE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
N-ONE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
N-ONE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
N-ONE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
N-ONE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
N-ONE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
N-ONE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
N-ONE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
N-ONE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
N-ONE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
N-ONE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
N-ONE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
N-ONE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
N-ONE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
N-ONE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
N-ONE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
N-ONE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
N-ONE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
N-ONE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
N-ONE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
N-ONE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal

N-ONE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
N-ONE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
N-ONE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
N-ONE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
N-ONE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
N-ONE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
N-ONE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
N-ONE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
N-ONE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
N-ONE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
N-ONE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
N-ONE	/	New energy battery (EV)	M44	Read ECU Information	
N-ONE	/	New energy battery (EV)	M44	Read codes	
N-ONE	/	New energy battery (EV)	M44	Erase Codes	
N-ONE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
N-ONE	/	New energy battery (EV)	M44	Read Live Data	
N-ONE	/	New energy battery (EV)	M44	Inspection	
N-ONE	/	New energy battery (EV)	M44	Adjustment	
N-ONE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
N-ONE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
N-ONE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
N-ONE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
N-ONE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
N-ONE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
N-ONE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
N-ONE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
N-ONE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
N-ONE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
N-ONE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
N-ONE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
N-ONE	/	FCW LDW	M4E	Read ECU Information	
N-ONE	/	FCW LDW	M4E	Read codes	
N-ONE	/	FCW LDW	M4E	Erase Codes	
N-ONE	/	FCW LDW	M4E	Read Live Data	
N-ONE	/	FCW LDW	M4E	Function Test	FCW Drive
N-ONE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
N-ONE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
N-ONE	/	FCW LDW	M4E	Function Test	Indicator Drive
N-ONE	/	FCW LDW	M4E	Adjustment	
N-ONE	/	Instrument Display System (GAUGE)	M2C	Read codes	
N-ONE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
N-ONE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
N-ONE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
N-ONE	/	Anti-lock brake control system (ABS)	M01	Read codes	
N-ONE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
N-ONE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
N-ONE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
N-ONE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
N-ONE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
N-ONE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
N-ONE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
N-ONE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
N-ONE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
N-ONE	/	Anti-lock brake control system (ABS)	M02	Read codes	
N-ONE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
N-ONE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
N-ONE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
N-ONE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
N-ONE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
N-ONE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
N-ONE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
N-ONE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
N-ONE	/	Anti-lock brake control system (ABS)	M03	Read codes	
N-ONE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
N-ONE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
N-ONE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
N-ONE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
N-ONE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
N-ONE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
N-ONE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
N-ONE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
N-ONE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
N-ONE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
N-ONE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
N-ONE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
N-ONE	/	Anti-lock brake control system (ABS)	M19	Read codes	
N-ONE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
N-ONE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
N-ONE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid

N-ONE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
N-ONE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
N-ONE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
N-ONE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
N-ONE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
N-ONE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
N-ONE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
N-ONE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
N-ONE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
N-ONE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
N-ONE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
N-ONE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
N-ONE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
N-ONE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
N-ONE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
N-ONE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
N-ONE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
N-ONE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
N-ONE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
N-ONE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
N-ONE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
N-ONE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
N-ONE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
N-ONE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
N-ONE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
N-ONE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
N-ONE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
N-ONE	/	IMA	M63	Read ECU Information	
N-ONE	/	IMA	M63	Read codes	
N-ONE	/	IMA	M63	Erase Codes	
N-ONE	/	IMA	M63	Read Freeze Frame Data	
N-ONE	/	IMA	M63	Read Live Data	
N-ONE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
N-ONE	/	IMA	M63	Adjustment	SOC PRESET
N-ONE	/	IMA	M64	Read ECU Information	
N-ONE	/	IMA	M64	Read codes	
N-ONE	/	IMA	M64	Erase Codes	
N-ONE	/	IMA	M64	Read Freeze Frame Data	
N-ONE	/	IMA	M64	Read Live Data	
N-ONE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
N-ONE	/	IMA	M64	Adjustment	SOC PRESET
N-ONE	/	IMA	M65	Read ECU Information	
N-ONE	/	IMA	M65	Read codes	
N-ONE	/	IMA	M65	Erase Codes	
N-ONE	/	IMA	M65	Read Freeze Frame Data	
N-ONE	/	IMA	M65	Read Live Data	
N-ONE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
N-ONE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
N-ONE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
N-ONE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
N-ONE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
N-ONE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
N-ONE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
N-ONE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
N-ONE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
N-ONE	/	Night Vision System (INVS)	0XB1	Read codes	
N-ONE	/	Night Vision System (INVS)	0XB1	Erase Codes	
N-ONE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
N-ONE	/	Night Vision System (INVS)	0XB1	Read Live Data	
N-ONE	/	Night Vision System (INVS)	0XB1	Adjustment	
N-ONE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
N-ONE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
N-ONE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
N-ONE	/	i-SHIFT	0XB0	Read ECU Information	
N-ONE	/	i-SHIFT	0XB0	Read codes	
N-ONE	/	i-SHIFT	0XB0	Erase Codes	
N-ONE	/	i-SHIFT	0XB0	Read Live Data	
N-ONE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
N-ONE	/	Keyless Entry Control System (KAS)	M99	Read codes	
N-ONE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
N-ONE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
N-ONE	/	Keyless Entry Control System (KAS)	M99	Self Check	
N-ONE	/	Keyless Entry Control System (KAS)	M99	History Data	
N-ONE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving



N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
N-ONE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
N-ONE	/	Keyless Entry Control System (KAS)	M99	Registration	
N-ONE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
N-ONE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
N-ONE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
N-ONE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
N-ONE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
N-ONE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
N-ONE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
N-ONE	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
N-ONE	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
N-ONE	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
N-ONE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
N-ONE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
N-ONE	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
N-ONE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
N-ONE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
N-ONE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
N-ONE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
N-ONE	/	Management ECU Module (ME)	M74	Read ECU Information	
N-ONE	/	Management ECU Module (ME)	M74	Read codes	
N-ONE	/	Management ECU Module (ME)	M74	Erase Codes	
N-ONE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
N-ONE	/	Management ECU Module (ME)	M74	Read Live Data	
N-ONE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
N-ONE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
N-ONE	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
N-ONE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
N-ONE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
N-ONE	/	Multi-view camera system (MVCS)	M7A	Read codes	
N-ONE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
N-ONE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
N-ONE	/	Multi-view camera system (MVCS)	M7A	Customization	
N-ONE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
N-ONE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
N-ONE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
N-ONE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
N-ONE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
N-ONE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
N-ONE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
N-ONE	/	Power Control Unit (PCU)	M83	Read ECU Information	
N-ONE	/	Power Control Unit (PCU)	M83	Read codes	
N-ONE	/	Power Control Unit (PCU)	M83	Erase Codes	
N-ONE	/	Power Control Unit (PCU)	M83	Read Live Data	
N-ONE	/	Power Control Unit (PCU)	M83	Self Check	
N-ONE	/	Power Control Unit (PCU)	M83	History Data	
N-ONE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
N-ONE	/	Engine Control System (PGM-FI)	M23	Read codes	
N-ONE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
N-ONE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
N-ONE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
N-ONE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
N-ONE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON

N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
N-ONE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
N-ONE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
N-ONE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
N-ONE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
N-ONE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
N-ONE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
N-ONE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
N-ONE	/	Engine Control System (PGM-FI)	M50	Read codes	
N-ONE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
N-ONE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
N-ONE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
N-ONE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
N-ONE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
N-ONE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
N-ONE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
N-ONE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
N-ONE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
N-ONE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
N-ONE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
N-ONE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
N-ONE	/	Engine Control System (PGM-FI)	M86	Read codes	
N-ONE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
N-ONE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
N-ONE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
N-ONE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
N-ONE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
N-ONE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
N-ONE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
N-ONE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
N-ONE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
N-ONE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
N-ONE	/	Four-wheel precision steering control system (PAWSC M96)		Read codes	
N-ONE	/	Four-wheel precision steering control system (PAWSC M96)		Erase Codes	
N-ONE	/	Four-wheel precision steering control system (PAWSC M96)		Read Live Data	
N-ONE	/	PSR	M27	Read ECU Information	
N-ONE	/	PSR	M27	Read codes	
N-ONE	/	PSR	M27	Erase Codes	
N-ONE	/	PSR	M27	Read Live Data	
N-ONE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
N-ONE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
N-ONE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
N-ONE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
N-ONE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
N-ONE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
N-ONE	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
N-ONE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
N-ONE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
N-ONE	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
N-ONE	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
N-ONE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
N-ONE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
N-ONE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
N-ONE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
N-ONE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
N-ONE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
N-ONE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
N-ONE	/	Remote starter (RS)	M90	System Check	
N-ONE	/	Remote starter (RS)	M90	HISTORY	
N-ONE	/	Remote starter (RS)	M90	Registration	
N-ONE	/	Seat load cell (SWS)	M6F	Read ECU Information	
N-ONE	/	Seat load cell (SWS)	M6F	Read codes	
N-ONE	/	Seat load cell (SWS)	M6F	Erase Codes	
N-ONE	/	Seat load cell (SWS)	M6F	Read Live Data	
N-ONE	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
N-ONE	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
N-ONE	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION

N-ONE	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
N-ONE	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
N-ONE	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
N-ONE	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
N-ONE	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
N-ONE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
N-ONE	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
N-ONE	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
N-ONE	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
N-ONE	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
N-ONE	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
N-ONE	/	Groove track drive unit (SLOT ECU)	M98	History Data	
N-ONE	/	Groove track drive unit (SLOT ECU)	M98	System Information	
N-ONE	/	Airbag Control System (SRS)	M9F	Read ECU Information	
N-ONE	/	Airbag Control System (SRS)	M9F	Read codes	
N-ONE	/	Airbag Control System (SRS)	M9F	Erase Codes	
N-ONE	/	Airbag Control System (SRS)	M9F	Read Live Data	
N-ONE	/	Airbag Control System (SRS)	MA0	Read ECU Information	
N-ONE	/	Airbag Control System (SRS)	MA0	Read codes	
N-ONE	/	Airbag Control System (SRS)	MA0	Erase Codes	
N-ONE	/	Airbag Control System (SRS)	MA0	Read Live Data	
N-ONE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
N-ONE	/	Airbag Control System (SRS)	MA1	Read codes	
N-ONE	/	Airbag Control System (SRS)	MA1	Erase Codes	
N-ONE	/	Airbag Control System (SRS)	MA1	Read Live Data	
N-ONE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
N-ONE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
N-ONE	/	Airbag Control System (SRS)	M2A	Read codes	
N-ONE	/	Airbag Control System (SRS)	M2A	Erase Codes	
N-ONE	/	Airbag Control System (SRS)	M2A	Read Live Data	
N-ONE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
N-ONE	/	Airbag Control System (SRS)	M9C	Read codes	
N-ONE	/	Airbag Control System (SRS)	M9C	Erase Codes	
N-ONE	/	Airbag Control System (SRS)	M9C	Read Live Data	
N-ONE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
N-ONE	/	Airbag Control System (SRS)	M9D	Read codes	
N-ONE	/	Airbag Control System (SRS)	M9D	Erase Codes	
N-ONE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
N-ONE	/	Airbag Control System (SRS)	M9D	Read Live Data	
N-ONE	/	Airbag Control System (SRS)	M9D	Parameter Information	
N-ONE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
N-ONE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
N-ONE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
N-ONE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
N-ONE	/	Airbag Control System (SRS)	M9D	Function Test	
N-ONE	/	Airbag Control System (SRS)	M9D	System Information	
N-ONE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
N-ONE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
N-ONE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
N-ONE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
N-ONE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
N-ONE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
N-ONE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
N-ONE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
N-ONE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
N-ONE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
N-ONE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
N-ONE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	

N-ONE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
N-ONE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
N-ONE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
N-ONE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
N-ONE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
N-ONE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
N-ONE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
N-WGN	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
N-WGN	/	Four-wheel steering control system (4WS)	M52	Read codes	
N-WGN	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
N-WGN	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
N-WGN	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
N-WGN	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
N-WGN	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
N-WGN	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
N-WGN	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
N-WGN	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
N-WGN	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
N-WGN	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
N-WGN	/	Automatic shift control system (A/T)	M1E	Read codes	
N-WGN	/	Automatic shift control system (A/T)	M1E	Erase Codes	
N-WGN	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
N-WGN	/	Automatic shift control system (A/T)	M1E	Read Live Data	
N-WGN	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
N-WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
N-WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
N-WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
N-WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
N-WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
N-WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
N-WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
N-WGN	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
N-WGN	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
N-WGN	/	Automatic shift control system (A/T)	M3B	Read codes	
N-WGN	/	Automatic shift control system (A/T)	M3B	Erase Codes	
N-WGN	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
N-WGN	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
N-WGN	/	Automatic shift control system (A/T)	M3B	Read Live Data	
N-WGN	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
N-WGN	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
N-WGN	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
N-WGN	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
N-WGN	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
N-WGN	/	Automatic shift control system (A/T)	M3C	Read codes	
N-WGN	/	Automatic shift control system (A/T)	M3C	Erase Codes	
N-WGN	/	Automatic shift control system (A/T)	M81	Read ECU Information	
N-WGN	/	Automatic shift control system (A/T)	M81	Read codes	
N-WGN	/	Automatic shift control system (A/T)	M81	Erase Codes	
N-WGN	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
N-WGN	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
N-WGN	/	Automatic shift control system (A/T)	M81	Read Live Data	
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
N-WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
N-WGN	/	Automatic shift control system (A/T)	M82	Read ECU Information	
N-WGN	/	Automatic shift control system (A/T)	M82	Read codes	
N-WGN	/	Automatic shift control system (A/T)	M82	Erase Codes	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read codes	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Erase Codes	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Freeze Frame Data	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Live Data	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	Throttle Opening Angle Test
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 1
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 2
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	LIGHT CHECK
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BUZZER CHECK
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read ECU Information	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read codes	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Erase Codes	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Freeze Frame Data	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Live Data	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Adjustment	RADAR AIMING
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	BRAKE ACTUATOR 3
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ACC relay malfunction.
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INDICATOR LIGHT
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INFORMATION DISPLAY
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ALARM BUZZER
N-WGN	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
N-WGN	/	Active Engine Control Support System (ACM)	M06	Read codes	
N-WGN	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
N-WGN	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
N-WGN	/	Active Engine Control Support System (ACM)	M06	Read Live Data	

N-WGN	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
N-WGN	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
N-WGN	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
N-WGN	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
N-WGN	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
N-WGN	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
N-WGN	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
N-WGN	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
N-WGN	/	Active / Automatic Shock Absorber Control System (A	MOD	Read ECU Information	
N-WGN	/	Active / Automatic Shock Absorber Control System (A	MOD	Read codes	
N-WGN	/	Active / Automatic Shock Absorber Control System (A	MOD	Erase Codes	
N-WGN	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Freeze Frame Data	
N-WGN	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Live Data	
N-WGN	/	Active / Automatic Shock Absorber Control System (A	MOD	Function Test	Damper Force Operation Test
N-WGN	/	Active / Automatic Shock Absorber Control System (A	MOD	Adjustment	Damper Stroke Calibration
N-WGN	/	Active / Automatic Shock Absorber Control System (A	M1A	Read codes	
N-WGN	/	Active / Automatic Shock Absorber Control System (A	M1A	Erase Codes	
N-WGN	/	Active / Automatic Shock Absorber Control System (A	M1A	Read Live Data	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read codes	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Erase Codes	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Freeze Frame Data	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Live Data	
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	ACC Brake (Brake Actuator)
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	CMBS Brake
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Brake Light (ACC Relay)
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Indicator Light
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Information Display
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Alarm Test
N-WGN	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Adjustment	Radar aiming
N-WGN	/	Transmission Control System (AT)	M18	Read ECU Information	
N-WGN	/	Transmission Control System (AT)	M18	Read codes	
N-WGN	/	Transmission Control System (AT)	M18	Erase Codes	
N-WGN	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
N-WGN	/	Transmission Control System (AT)	M18	Read Live Data	
N-WGN	/	Transmission Control System (AT)	M18	Adjustment	
N-WGN	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
N-WGN	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
N-WGN	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
N-WGN	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
N-WGN	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
N-WGN	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
N-WGN	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
N-WGN	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
N-WGN	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
N-WGN	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
N-WGN	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
N-WGN	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
N-WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
N-WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
N-WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
N-WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
N-WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
N-WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
N-WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
N-WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
N-WGN	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
N-WGN	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
N-WGN	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
N-WGN	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
N-WGN	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
N-WGN	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open

N-WGN	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
N-WGN	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
N-WGN	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
N-WGN	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
N-WGN	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
N-WGN	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
N-WGN	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
N-WGN	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
N-WGN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
N-WGN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
N-WGN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
N-WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
N-WGN	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
N-WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
N-WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror

N-WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
N-WGN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
N-WGN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
N-WGN	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
N-WGN	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
N-WGN	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
N-WGN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
N-WGN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
N-WGN	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
N-WGN	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Security	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
N-WGN	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
N-WGN	/	BODY ELECTRICAL/Security	MFF	History Data	
N-WGN	/	BODY ELECTRICAL/Security	MFF	History Clear	
N-WGN	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
N-WGN	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
N-WGN	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
N-WGN	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
N-WGN	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
N-WGN	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
N-WGN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
N-WGN	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
N-WGN	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
N-WGN	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
N-WGN	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
N-WGN	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
N-WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
N-WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
N-WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
N-WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
N-WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
N-WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
N-WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
N-WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
N-WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
N-WGN	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
N-WGN	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
N-WGN	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	

N-WGN	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
N-WGN	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
N-WGN	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
N-WGN	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
N-WGN	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
N-WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Read ECU Information	
N-WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Read codes	
N-WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Erase Codes	
N-WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Read Freeze Frame Data	
N-WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Read Live Data	
N-WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		CMBS (CMS) ACTIVATION HISTORY	
N-WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Miscellaneous Test	RADAR AIMING
N-WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E		Miscellaneous Test	CMBS Brake
N-WGN	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
N-WGN	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
N-WGN	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
N-WGN	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
N-WGN	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
N-WGN	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
N-WGN	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
N-WGN	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
N-WGN	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
N-WGN	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
N-WGN	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
N-WGN	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
N-WGN	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
N-WGN	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
N-WGN	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
N-WGN	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
N-WGN	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
N-WGN	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
N-WGN	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
N-WGN	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
N-WGN	/	DBW	M34	Read ECU Information	
N-WGN	/	DBW	M34	Read codes	
N-WGN	/	DBW	M34	Erase Codes	
N-WGN	/	DBW	M34	Read Freeze Frame Data	
N-WGN	/	DBW	M34	Read Live Data	
N-WGN	/	DBW	M34	Inspection	Idle Speed Adjust
N-WGN	/	DBW	M34	Inspection	Throttle Test
N-WGN	/	DBW	M34	ECM Reset	
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
N-WGN	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
N-WGN	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
N-WGN	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
N-WGN	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
N-WGN	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
N-WGN	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
N-WGN	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
N-WGN	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
N-WGN	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
N-WGN	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	



N-WGN	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
N-WGN	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
N-WGN	/	Capacitor Control System (EDLC)	M12	Read codes	
N-WGN	/	Capacitor Control System (EDLC)	M12	Erase Codes	
N-WGN	/	Capacitor Control System (EDLC)	M12	Read Live Data	
N-WGN	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
N-WGN	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
N-WGN	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
N-WGN	/	Electronic Brake Control System (EPB)	M1F	Read codes	
N-WGN	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
N-WGN	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
N-WGN	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
N-WGN	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
N-WGN	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
N-WGN	/	Electronic Brake Control System (EPB)	M3E	Read codes	
N-WGN	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
N-WGN	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
N-WGN	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
N-WGN	/	Electric Powertrain / IMA	M66	Read ECU Information	
N-WGN	/	Electric Powertrain / IMA	M66	Read codes	
N-WGN	/	Electric Powertrain / IMA	M66	Erase Codes	
N-WGN	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
N-WGN	/	Electric Powertrain / IMA	M66	Read Live Data	
N-WGN	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
N-WGN	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
N-WGN	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
N-WGN	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
N-WGN	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
N-WGN	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
N-WGN	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
N-WGN	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
N-WGN	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
N-WGN	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
N-WGN	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
N-WGN	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
N-WGN	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
N-WGN	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
N-WGN	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
N-WGN	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
N-WGN	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
N-WGN	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
N-WGN	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
N-WGN	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
N-WGN	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
N-WGN	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
N-WGN	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
N-WGN	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
N-WGN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
N-WGN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
N-WGN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
N-WGN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
N-WGN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
N-WGN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
N-WGN	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
N-WGN	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
N-WGN	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
N-WGN	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
N-WGN	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
N-WGN	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
N-WGN	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
N-WGN	/	New energy battery (EV)	M44	Read ECU Information	
N-WGN	/	New energy battery (EV)	M44	Read codes	
N-WGN	/	New energy battery (EV)	M44	Erase Codes	
N-WGN	/	New energy battery (EV)	M44	Read Freeze Frame Data	
N-WGN	/	New energy battery (EV)	M44	Read Live Data	
N-WGN	/	New energy battery (EV)	M44	Inspection	
N-WGN	/	New energy battery (EV)	M44	Adjustment	
N-WGN	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
N-WGN	/	Electronic vacuum pump (EVPS)	M21	Read codes	
N-WGN	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
N-WGN	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
N-WGN	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
N-WGN	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
N-WGN	/	Electronic vacuum pump (EVPS)	M22	Read codes	
N-WGN	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
N-WGN	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
N-WGN	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
N-WGN	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
N-WGN	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
N-WGN	/	FCW LDW	M4E	Read ECU Information	
N-WGN	/	FCW LDW	M4E	Read codes	

N-WGN	/	FCW LDW	M4E	Erase Codes	
N-WGN	/	FCW LDW	M4E	Read Live Data	
N-WGN	/	FCW LDW	M4E	Function Test	FCW Drive
N-WGN	/	FCW LDW	M4E	Function Test	Left side lane departure warning
N-WGN	/	FCW LDW	M4E	Function Test	Right side lane departure warning
N-WGN	/	FCW LDW	M4E	Function Test	Indicator Drive
N-WGN	/	FCW LDW	M4E	Adjustment	
N-WGN	/	Instrument Display System (GAUGE)	M2C	Read codes	
N-WGN	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
N-WGN	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
N-WGN	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
N-WGN	/	Anti-lock brake control system (ABS)	M01	Read codes	
N-WGN	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
N-WGN	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
N-WGN	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
N-WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
N-WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
N-WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
N-WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
N-WGN	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
N-WGN	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
N-WGN	/	Anti-lock brake control system (ABS)	M02	Read codes	
N-WGN	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
N-WGN	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
N-WGN	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
N-WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
N-WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
N-WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
N-WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
N-WGN	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
N-WGN	/	Anti-lock brake control system (ABS)	M03	Read codes	
N-WGN	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
N-WGN	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
N-WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
N-WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
N-WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
N-WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
N-WGN	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
N-WGN	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
N-WGN	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
N-WGN	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
N-WGN	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
N-WGN	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
N-WGN	/	Anti-lock brake control system (ABS)	M19	Read codes	
N-WGN	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
N-WGN	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
N-WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
N-WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
N-WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
N-WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
N-WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
N-WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
N-WGN	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
N-WGN	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
N-WGN	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
N-WGN	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
N-WGN	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
N-WGN	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
N-WGN	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
N-WGN	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
N-WGN	/	Intelligent Parking Control System (SPS)	M9B	Customize	
N-WGN	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
N-WGN	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
N-WGN	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
N-WGN	/	Hydraulic booster control system (HBS)	M5F	Read codes	
N-WGN	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
N-WGN	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
N-WGN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
N-WGN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
N-WGN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
N-WGN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
N-WGN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
N-WGN	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
N-WGN	/	IMA	M63	Read ECU Information	
N-WGN	/	IMA	M63	Read codes	
N-WGN	/	IMA	M63	Erase Codes	
N-WGN	/	IMA	M63	Read Freeze Frame Data	
N-WGN	/	IMA	M63	Read Live Data	

N-WGN	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
N-WGN	/	IMA	M63	Adjustment	SOC PRESET
N-WGN	/	IMA	M64	Read ECU Information	
N-WGN	/	IMA	M64	Read codes	
N-WGN	/	IMA	M64	Erase Codes	
N-WGN	/	IMA	M64	Read Freeze Frame Data	
N-WGN	/	IMA	M64	Read Live Data	
N-WGN	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
N-WGN	/	IMA	M64	Adjustment	SOC PRESET
N-WGN	/	IMA	M65	Read ECU Information	
N-WGN	/	IMA	M65	Read codes	
N-WGN	/	IMA	M65	Erase Codes	
N-WGN	/	IMA	M65	Read Freeze Frame Data	
N-WGN	/	IMA	M65	Read Live Data	
N-WGN	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
N-WGN	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
N-WGN	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
N-WGN	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
N-WGN	/	Intake Sounder Control System (ISC)	M6D	Read codes	
N-WGN	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
N-WGN	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
N-WGN	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
N-WGN	/	Night Vision System (INVS)	0XB1	Read ECU Information	
N-WGN	/	Night Vision System (INVS)	0XB1	Read codes	
N-WGN	/	Night Vision System (INVS)	0XB1	Erase Codes	
N-WGN	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
N-WGN	/	Night Vision System (INVS)	0XB1	Read Live Data	
N-WGN	/	Night Vision System (INVS)	0XB1	Adjustment	
N-WGN	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
N-WGN	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
N-WGN	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
N-WGN	/	i-SHIFT	0XB0	Read ECU Information	
N-WGN	/	i-SHIFT	0XB0	Read codes	
N-WGN	/	i-SHIFT	0XB0	Erase Codes	
N-WGN	/	i-SHIFT	0XB0	Read Live Data	
N-WGN	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
N-WGN	/	Keyless Entry Control System (KAS)	M99	Read codes	
N-WGN	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
N-WGN	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
N-WGN	/	Keyless Entry Control System (KAS)	M99	Self Check	
N-WGN	/	Keyless Entry Control System (KAS)	M99	History Data	
N-WGN	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC D Terminal) Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
N-WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
N-WGN	/	Keyless Entry Control System (KAS)	M99	Registration	

N-WGN	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Read ECU Information	
N-WGN	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Read codes	
N-WGN	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Erase Codes	
N-WGN	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Read Freeze Frame Data	
N-WGN	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Read Live Data	
N-WGN	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	STATIC CAMERA AIMING
N-WGN	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	VIDEO OUTPUT
N-WGN	/	Electronically assisted lane keeping control system (Lk) M71	Read ECU Information	
N-WGN	/	Electronically assisted lane keeping control system (Lk) M71	Read codes	
N-WGN	/	Electronically assisted lane keeping control system (Lk) M71	Erase Codes	
N-WGN	/	Electronically assisted lane keeping control system (Lk) M71	Read Freeze Frame Data	
N-WGN	/	Electronically assisted lane keeping control system (Lk) M71	Read Live Data	
N-WGN	/	Electronically assisted lane keeping control system (Lk) M71	Adjustment	STEERING REWRITE
N-WGN	/	Electronically assisted lane keeping control system (Lk) M71	Customize	LDW OFFSET
N-WGN	/	Electronically assisted lane keeping control system (Lk) M71	Customize	GAIN ADJUST
N-WGN	/	Electronically assisted lane keeping control system (Lk) M71	Customize	DRIVING WILL
N-WGN	/	Electronically assisted lane keeping control system (Lk) M71	Customize	CONTROL DELAY
N-WGN	/	Management ECU Module (ME) M74	Read ECU Information	
N-WGN	/	Management ECU Module (ME) M74	Read codes	
N-WGN	/	Management ECU Module (ME) M74	Erase Codes	
N-WGN	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
N-WGN	/	Management ECU Module (ME) M74	Read Live Data	
N-WGN	/	Multi-view camera and parking assist system (MVC/P) M26	Read ECU Information	
N-WGN	/	Multi-view camera and parking assist system (MVC/P) M26	Read codes	
N-WGN	/	Multi-view camera and parking assist system (MVC/P) M26	Erase Codes	
N-WGN	/	Multi-view camera and parking assist system (MVC/P) M26	Read Live Data	
N-WGN	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
N-WGN	/	Multi-view camera system (MVCS) M7A	Read codes	
N-WGN	/	Multi-view camera system (MVCS) M7A	Erase Codes	
N-WGN	/	Multi-view camera system (MVCS) M7A	Read Live Data	
N-WGN	/	Multi-view camera system (MVCS) M7A	Customization	
N-WGN	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
N-WGN	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
N-WGN	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
N-WGN	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
N-WGN	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
N-WGN	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
N-WGN	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
N-WGN	/	Power Control Unit (PCU) M83	Read ECU Information	
N-WGN	/	Power Control Unit (PCU) M83	Read codes	
N-WGN	/	Power Control Unit (PCU) M83	Erase Codes	
N-WGN	/	Power Control Unit (PCU) M83	Read Live Data	
N-WGN	/	Power Control Unit (PCU) M83	Self Check	
N-WGN	/	Power Control Unit (PCU) M83	History Data	
N-WGN	/	Engine Control System (PGM-FI) M23	Read ECU Information	
N-WGN	/	Engine Control System (PGM-FI) M23	Read codes	
N-WGN	/	Engine Control System (PGM-FI) M23	Erase Codes	
N-WGN	/	Engine Control System (PGM-FI) M23	Readiness Codes	
N-WGN	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
N-WGN	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
N-WGN	/	Engine Control System (PGM-FI) M23	Read Live Data	
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
N-WGN	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
N-WGN	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
N-WGN	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
N-WGN	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
N-WGN	/	Engine Control System (PGM-FI) M23	VIN CHECK	
N-WGN	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
N-WGN	/	Engine Control System (PGM-FI) M50	Read ECU Information	
N-WGN	/	Engine Control System (PGM-FI) M50	Read codes	
N-WGN	/	Engine Control System (PGM-FI) M50	Erase Codes	
N-WGN	/	Engine Control System (PGM-FI) M50	Readiness Codes	
N-WGN	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
N-WGN	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
N-WGN	/	Engine Control System (PGM-FI) M50	Read Live Data	
N-WGN	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
N-WGN	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
N-WGN	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
N-WGN	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
N-WGN	/	Engine Control System (PGM-FI) M50	VIN CHECK	
N-WGN	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
N-WGN	/	Engine Control System (PGM-FI) M86	Read ECU Information	
N-WGN	/	Engine Control System (PGM-FI) M86	Read codes	
N-WGN	/	Engine Control System (PGM-FI) M86	Erase Codes	
N-WGN	/	Engine Control System (PGM-FI) M86	Readiness Codes	
N-WGN	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
N-WGN	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	

N-WGN	/	Engine Control System (PGM-FI)	M86	Read Live Data	
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
N-WGN	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
N-WGN	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
N-WGN	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
N-WGN	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
N-WGN	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
N-WGN	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
N-WGN	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
N-WGN	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
N-WGN	/	PSR	M27	Read ECU Information	
N-WGN	/	PSR	M27	Read codes	
N-WGN	/	PSR	M27	Erase Codes	
N-WGN	/	PSR	M27	Read Live Data	
N-WGN	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
N-WGN	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
N-WGN	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
N-WGN	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
N-WGN	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
N-WGN	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
N-WGN	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
N-WGN	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
N-WGN	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
N-WGN	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
N-WGN	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
N-WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
N-WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
N-WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
N-WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
N-WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
N-WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
N-WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
N-WGN	/	Remote starter (RS)	M90	System Check	
N-WGN	/	Remote starter (RS)	M90	HISTORY	
N-WGN	/	Remote starter (RS)	M90	Registration	
N-WGN	/	Seat load cell (SWS)	M6F	Read ECU Information	
N-WGN	/	Seat load cell (SWS)	M6F	Read codes	
N-WGN	/	Seat load cell (SWS)	M6F	Erase Codes	
N-WGN	/	Seat load cell (SWS)	M6F	Read Live Data	
N-WGN	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
N-WGN	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
N-WGN	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
N-WGN	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
N-WGN	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
N-WGN	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
N-WGN	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
N-WGN	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
N-WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
N-WGN	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
N-WGN	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
N-WGN	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	

N-WGN	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
N-WGN	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
N-WGN	/	Groove track drive unit (SLOT ECU)	M98	History Data	
N-WGN	/	Groove track drive unit (SLOT ECU)	M98	System Information	
N-WGN	/	Airbag Control System (SRS)	M9F	Read ECU Information	
N-WGN	/	Airbag Control System (SRS)	M9F	Read codes	
N-WGN	/	Airbag Control System (SRS)	M9F	Erase Codes	
N-WGN	/	Airbag Control System (SRS)	M9F	Read Live Data	
N-WGN	/	Airbag Control System (SRS)	MA0	Read ECU Information	
N-WGN	/	Airbag Control System (SRS)	MA0	Read codes	
N-WGN	/	Airbag Control System (SRS)	MA0	Erase Codes	
N-WGN	/	Airbag Control System (SRS)	MA0	Read Live Data	
N-WGN	/	Airbag Control System (SRS)	MA1	Read ECU Information	
N-WGN	/	Airbag Control System (SRS)	MA1	Read codes	
N-WGN	/	Airbag Control System (SRS)	MA1	Erase Codes	
N-WGN	/	Airbag Control System (SRS)	MA1	Read Live Data	
N-WGN	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
N-WGN	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
N-WGN	/	Airbag Control System (SRS)	M2A	Read codes	
N-WGN	/	Airbag Control System (SRS)	M2A	Erase Codes	
N-WGN	/	Airbag Control System (SRS)	M2A	Read Live Data	
N-WGN	/	Airbag Control System (SRS)	M9C	Read ECU Information	
N-WGN	/	Airbag Control System (SRS)	M9C	Read codes	
N-WGN	/	Airbag Control System (SRS)	M9C	Erase Codes	
N-WGN	/	Airbag Control System (SRS)	M9C	Read Live Data	
N-WGN	/	Airbag Control System (SRS)	M9D	Read ECU Information	
N-WGN	/	Airbag Control System (SRS)	M9D	Read codes	
N-WGN	/	Airbag Control System (SRS)	M9D	Erase Codes	
N-WGN	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
N-WGN	/	Airbag Control System (SRS)	M9D	Read Live Data	
N-WGN	/	Airbag Control System (SRS)	M9D	Parameter Information	
N-WGN	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
N-WGN	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
N-WGN	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
N-WGN	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
N-WGN	/	Airbag Control System (SRS)	M9D	Function Test	
N-WGN	/	Airbag Control System (SRS)	M9D	System Information	
N-WGN	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
N-WGN	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
N-WGN	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
N-WGN	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
N-WGN	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
N-WGN	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
N-WGN	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
N-WGN	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
N-WGN	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
N-WGN	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
N-WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
N-WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
N-WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
N-WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
N-WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
N-WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
N-WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
N-WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
N-WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
NSX	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
NSX	/	Four-wheel steering control system (4WS)	M52	Read codes	
NSX	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
NSX	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
NSX	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
NSX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
NSX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
NSX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
NSX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
NSX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
NSX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
NSX	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
NSX	/	Automatic shift control system (A/T)	M1E	Read codes	
NSX	/	Automatic shift control system (A/T)	M1E	Erase Codes	
NSX	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
NSX	/	Automatic shift control system (A/T)	M1E	Read Live Data	
NSX	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
NSX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
NSX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
NSX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
NSX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
NSX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
NSX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
NSX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
NSX	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	

NSX	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
NSX	/	Automatic shift control system (A/T)	M3B	Read codes	
NSX	/	Automatic shift control system (A/T)	M3B	Erase Codes	
NSX	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
NSX	/	Automatic shift control system (A/T)	M3B	ECMPCMC Reset	
NSX	/	Automatic shift control system (A/T)	M3B	Read Live Data	
NSX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
NSX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
NSX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
NSX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
NSX	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
NSX	/	Automatic shift control system (A/T)	M3C	Read codes	
NSX	/	Automatic shift control system (A/T)	M3C	Erase Codes	
NSX	/	Automatic shift control system (A/T)	M81	Read ECU Information	
NSX	/	Automatic shift control system (A/T)	M81	Read codes	
NSX	/	Automatic shift control system (A/T)	M81	Erase Codes	
NSX	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
NSX	/	Automatic shift control system (A/T)	M81	ECMPCMC Reset	
NSX	/	Automatic shift control system (A/T)	M81	Read Live Data	
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
NSX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
NSX	/	Automatic shift control system (A/T)	M82	Read ECU Information	
NSX	/	Automatic shift control system (A/T)	M82	Read codes	
NSX	/	Automatic shift control system (A/T)	M82	Erase Codes	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read codes	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Erase Codes	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Freeze Frame Data	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Live Data	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	Throttle Opening Angle Test
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 1
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 2
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	LIGHT CHECK
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BUZZER CHECK
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read ECU Information	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read codes	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Erase Codes	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Freeze Frame Data	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Live Data	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Adjustment	RADAR AIMING
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	BRAKE ACTUATOR 3
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ACC relay malfunction.
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INDICATOR LIGHT
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INFORMATION DISPLAY
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ALARM BUZZER
NSX	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
NSX	/	Active Engine Control Support System (ACM)	M06	Read codes	
NSX	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
NSX	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
NSX	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
NSX	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
NSX	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
NSX	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
NSX	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
NSX	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
NSX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
NSX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
NSX	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
NSX	/	Active / Automatic Shock Absorber Control System (A	MOD	Read ECU Information	
NSX	/	Active / Automatic Shock Absorber Control System (A	MOD	Read codes	
NSX	/	Active / Automatic Shock Absorber Control System (A	MOD	Erase Codes	
NSX	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Freeze Frame Data	
NSX	/	Active / Automatic Shock Absorber Control System (A	MOD	Read Live Data	
NSX	/	Active / Automatic Shock Absorber Control System (A	MOD	Function Test	Damper Force Operation Test
NSX	/	Active / Automatic Shock Absorber Control System (A	MOD	Adjustment	Damper Stroke Calibration
NSX	/	Active / Automatic Shock Absorber Control System (A	M1A	Read codes	
NSX	/	Active / Automatic Shock Absorber Control System (A	M1A	Erase Codes	
NSX	/	Active / Automatic Shock Absorber Control System (A	M1A	Read Live Data	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read codes	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Erase Codes	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Freeze Frame Data	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Read Live Data	
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	ACC Brake (Brake Actuator)
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	CMBS Brake
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Brake Light (ACC Relay)
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Indicator Light
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Information Display
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Function Test	Alarm Test
NSX	/	Adaptive Cruise (Constant Speed) Control System (AC	M2B	Adjustment	Radar aiming
NSX	/	Transmission Control System (AT)	M18	Read ECU Information	
NSX	/	Transmission Control System (AT)	M18	Read codes	
NSX	/	Transmission Control System (AT)	M18	Erase Codes	

NSX	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
NSX	/	Transmission Control System (AT)	M18	Read Live Data	
NSX	/	Transmission Control System (AT)	M18	Adjustment	
NSX	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
NSX	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
NSX	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
NSX	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
NSX	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
NSX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
NSX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
NSX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
NSX	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
NSX	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
NSX	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
NSX	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
NSX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
NSX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
NSX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
NSX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
NSX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
NSX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
NSX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
NSX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
NSX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
NSX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
NSX	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
NSX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
NSX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
NSX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
NSX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
NSX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
NSX	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
NSX	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
NSX	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
NSX	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
NSX	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
NSX	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator



NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
NSX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
NSX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
NSX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
NSX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
NSX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
NSX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
NSX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
NSX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
NSX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
NSX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
NSX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
NSX	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
NSX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
NSX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
NSX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
NSX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
NSX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
NSX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
NSX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
NSX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
NSX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
NSX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
NSX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
NSX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
NSX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear

NSX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
NSX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Security	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
NSX	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
NSX	/	BODY ELECTRICAL/Security	MFF	History Data	
NSX	/	BODY ELECTRICAL/Security	MFF	History Clear	
NSX	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
NSX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
NSX	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
NSX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
NSX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
NSX	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
NSX	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
NSX	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
NSX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
NSX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
NSX	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
NSX	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
NSX	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
NSX	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
NSX	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
NSX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
NSX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
NSX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
NSX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
NSX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
NSX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
NSX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
NSX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
NSX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
NSX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
NSX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
NSX	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
NSX	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
NSX	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
NSX	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
NSX	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
NSX	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
NSX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
NSX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
NSX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
NSX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
NSX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
NSX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
NSX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
NSX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
NSX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
NSX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
NSX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
NSX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
NSX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
NSX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
NSX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
NSX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
NSX	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
NSX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
NSX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
NSX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
NSX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
NSX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
NSX	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
NSX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
NSX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
NSX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
NSX	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn

NSX	/	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
NSX	/	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
NSX	/	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
NSX	/	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
NSX	/	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
NSX	/	Promise Automatic Transmission Control System (CVT M8D)		ECM/PCM Reset	
NSX	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
NSX	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
NSX	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
NSX	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
NSX	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
NSX	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
NSX	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
NSX	/	DBW	M34	Read ECU Information	
NSX	/	DBW	M34	Read codes	
NSX	/	DBW	M34	Erase Codes	
NSX	/	DBW	M34	Read Freeze Frame Data	
NSX	/	DBW	M34	Read Live Data	
NSX	/	DBW	M34	Inspection	Idle Speed Adjust
NSX	/	DBW	M34	Inspection	Throttle Test
NSX	/	DBW	M34	ECM Reset	
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
NSX	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
NSX	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
NSX	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
NSX	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
NSX	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
NSX	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
NSX	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
NSX	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
NSX	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
NSX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
NSX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
NSX	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
NSX	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
NSX	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
NSX	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
NSX	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
NSX	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
NSX	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
NSX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
NSX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
NSX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
NSX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
NSX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
NSX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
NSX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
NSX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
NSX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
NSX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
NSX	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
NSX	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
NSX	/	Capacitor Control System (EDLC)	M12	Read codes	
NSX	/	Capacitor Control System (EDLC)	M12	Erase Codes	
NSX	/	Capacitor Control System (EDLC)	M12	Read Live Data	
NSX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
NSX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
NSX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
NSX	/	Electronic Brake Control System (EPB)	M1F	Read codes	
NSX	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
NSX	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
NSX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
NSX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
NSX	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
NSX	/	Electronic Brake Control System (EPB)	M3E	Read codes	
NSX	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
NSX	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
NSX	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
NSX	/	Electric Powertrain / IMA	M66	Read ECU Information	
NSX	/	Electric Powertrain / IMA	M66	Read codes	

NSX	/	Electric Powertrain / IMA	M66	Erase Codes	
NSX	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
NSX	/	Electric Powertrain / IMA	M66	Read Live Data	
NSX	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
NSX	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
NSX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
NSX	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
NSX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
NSX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
NSX	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
NSX	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
NSX	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
NSX	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
NSX	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
NSX	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
NSX	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
NSX	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
NSX	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
NSX	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
NSX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
NSX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
NSX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
NSX	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
NSX	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
NSX	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
NSX	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
NSX	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
NSX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
NSX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
NSX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
NSX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
NSX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
NSX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
NSX	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
NSX	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
NSX	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
NSX	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
NSX	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
NSX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
NSX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
NSX	/	New energy battery (EV)	M44	Read ECU Information	
NSX	/	New energy battery (EV)	M44	Read codes	
NSX	/	New energy battery (EV)	M44	Erase Codes	
NSX	/	New energy battery (EV)	M44	Read Freeze Frame Data	
NSX	/	New energy battery (EV)	M44	Read Live Data	
NSX	/	New energy battery (EV)	M44	Inspection	
NSX	/	New energy battery (EV)	M44	Adjustment	
NSX	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
NSX	/	Electronic vacuum pump (EVPS)	M21	Read codes	
NSX	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
NSX	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
NSX	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
NSX	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
NSX	/	Electronic vacuum pump (EVPS)	M22	Read codes	
NSX	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
NSX	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
NSX	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
NSX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
NSX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
NSX	/	FCW LDW	M4E	Read ECU Information	
NSX	/	FCW LDW	M4E	Read codes	
NSX	/	FCW LDW	M4E	Erase Codes	
NSX	/	FCW LDW	M4E	Read Live Data	
NSX	/	FCW LDW	M4E	Function Test	FCW Drive
NSX	/	FCW LDW	M4E	Function Test	Left side lane departure warning
NSX	/	FCW LDW	M4E	Function Test	Right side lane departure warning
NSX	/	FCW LDW	M4E	Function Test	Indicator Drive
NSX	/	FCW LDW	M4E	Adjustment	
NSX	/	Instrument Display System (GAUGE)	M2C	Read codes	
NSX	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
NSX	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
NSX	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
NSX	/	Anti-lock brake control system (ABS)	M01	Read codes	
NSX	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
NSX	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
NSX	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
NSX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
NSX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
NSX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
NSX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
NSX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
NSX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
NSX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
NSX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
NSX	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
NSX	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
NSX	/	Anti-lock brake control system (ABS)	M02	Read codes	
NSX	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
NSX	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
NSX	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
NSX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
NSX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
NSX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid

NSX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
NSX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
NSX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
NSX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
NSX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
NSX	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
NSX	/	Anti-lock brake control system (ABS)	M03	Read codes	
NSX	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
NSX	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
NSX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
NSX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
NSX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
NSX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
NSX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
NSX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
NSX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
NSX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
NSX	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
NSX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
NSX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
NSX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
NSX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
NSX	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
NSX	/	Anti-lock brake control system (ABS)	M19	Read codes	
NSX	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
NSX	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
NSX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
NSX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
NSX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
NSX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
NSX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
NSX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
NSX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
NSX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
NSX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
NSX	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
NSX	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
NSX	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
NSX	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
NSX	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
NSX	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
NSX	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
NSX	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
NSX	/	Intelligent Parking Control System (SPS)	M9B	Customize	
NSX	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
NSX	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
NSX	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
NSX	/	Hydraulic booster control system (HBS)	M5F	Read codes	
NSX	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
NSX	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
NSX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
NSX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
NSX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
NSX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
NSX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
NSX	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
NSX	/	IMA	M63	Read ECU Information	
NSX	/	IMA	M63	Read codes	
NSX	/	IMA	M63	Erase Codes	
NSX	/	IMA	M63	Read Freeze Frame Data	
NSX	/	IMA	M63	Read Live Data	
NSX	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
NSX	/	IMA	M63	Adjustment	SOC PRESET
NSX	/	IMA	M64	Read ECU Information	
NSX	/	IMA	M64	Read codes	
NSX	/	IMA	M64	Erase Codes	
NSX	/	IMA	M64	Read Freeze Frame Data	
NSX	/	IMA	M64	Read Live Data	
NSX	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
NSX	/	IMA	M64	Adjustment	SOC PRESET
NSX	/	IMA	M65	Read ECU Information	
NSX	/	IMA	M65	Read codes	
NSX	/	IMA	M65	Erase Codes	
NSX	/	IMA	M65	Read Freeze Frame Data	
NSX	/	IMA	M65	Read Live Data	
NSX	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
NSX	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
NSX	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
NSX	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
NSX	/	Intake Sounder Control System (ISC)	M6D	Read codes	
NSX	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
NSX	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
NSX	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
NSX	/	Night Vision System (INVS)	0XB1	Read ECU Information	
NSX	/	Night Vision System (INVS)	0XB1	Read codes	
NSX	/	Night Vision System (INVS)	0XB1	Erase Codes	
NSX	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
NSX	/	Night Vision System (INVS)	0XB1	Read Live Data	
NSX	/	Night Vision System (INVS)	0XB1	Adjustment	
NSX	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
NSX	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
NSX	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
NSX	/	i-SHIFT	0XB0	Read ECU Information	

NSX	/	i-SHIFT	0X80	Read codes	
NSX	/	i-SHIFT	0X80	Erase Codes	
NSX	/	i-SHIFT	0X80	Read Live Data	
NSX	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
NSX	/	Keyless Entry Control System (KAS)	M99	Read codes	
NSX	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
NSX	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
NSX	/	Keyless Entry Control System (KAS)	M99	Self Check	
NSX	/	Keyless Entry Control System (KAS)	M99	History Data	
NSX	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
NSX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
NSX	/	Keyless Entry Control System (KAS)	M99	Registration	
NSX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
NSX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
NSX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
NSX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
NSX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
NSX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
NSX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
NSX	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
NSX	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
NSX	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
NSX	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
NSX	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
NSX	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
NSX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
NSX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
NSX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
NSX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
NSX	/	Management ECU Module (ME)	M74	Read ECU Information	
NSX	/	Management ECU Module (ME)	M74	Read codes	
NSX	/	Management ECU Module (ME)	M74	Erase Codes	
NSX	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
NSX	/	Management ECU Module (ME)	M74	Read Live Data	
NSX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
NSX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
NSX	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
NSX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
NSX	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
NSX	/	Multi-view camera system (MVCS)	M7A	Read codes	
NSX	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
NSX	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
NSX	/	Multi-view camera system (MVCS)	M7A	Customization	
NSX	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out

NSX	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
NSX	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
NSX	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
NSX	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
NSX	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
NSX	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
NSX	/	Power Control Unit (PCU)	M83	Read ECU Information	
NSX	/	Power Control Unit (PCU)	M83	Read codes	
NSX	/	Power Control Unit (PCU)	M83	Erase Codes	
NSX	/	Power Control Unit (PCU)	M83	Read Live Data	
NSX	/	Power Control Unit (PCU)	M83	Self Check	
NSX	/	Power Control Unit (PCU)	M83	History Data	
NSX	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
NSX	/	Engine Control System (PGM-FI)	M23	Read codes	
NSX	/	Engine Control System (PGM-FI)	M23	Erase Codes	
NSX	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
NSX	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
NSX	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
NSX	/	Engine Control System (PGM-FI)	M23	Read Live Data	
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
NSX	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
NSX	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
NSX	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
NSX	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
NSX	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
NSX	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
NSX	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
NSX	/	Engine Control System (PGM-FI)	M50	Read codes	
NSX	/	Engine Control System (PGM-FI)	M50	Erase Codes	
NSX	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
NSX	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
NSX	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
NSX	/	Engine Control System (PGM-FI)	M50	Read Live Data	
NSX	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
NSX	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
NSX	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
NSX	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
NSX	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
NSX	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
NSX	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
NSX	/	Engine Control System (PGM-FI)	M86	Read codes	
NSX	/	Engine Control System (PGM-FI)	M86	Erase Codes	
NSX	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
NSX	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
NSX	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
NSX	/	Engine Control System (PGM-FI)	M86	Read Live Data	
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
NSX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
NSX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
NSX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
NSX	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
NSX	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
NSX	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
NSX	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
NSX	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
NSX	/	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
NSX	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	
NSX	/	PSR	M27	Read ECU Information	
NSX	/	PSR	M27	Read codes	
NSX	/	PSR	M27	Erase Codes	

NSX	/	PSR	M27	Read Live Data	
NSX	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
NSX	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
NSX	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
NSX	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
NSX	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
NSX	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
NSX	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
NSX	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
NSX	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
NSX	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
NSX	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
NSX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
NSX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
NSX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
NSX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
NSX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
NSX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
NSX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
NSX	/	Remote starter (RS)	M90	System Check	
NSX	/	Remote starter (RS)	M90	HISTORY	
NSX	/	Remote starter (RS)	M90	Registration	
NSX	/	Seat load cell (SWS)	M6F	Read ECU Information	
NSX	/	Seat load cell (SWS)	M6F	Read codes	
NSX	/	Seat load cell (SWS)	M6F	Erase Codes	
NSX	/	Seat load cell (SWS)	M6F	Read Live Data	
NSX	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
NSX	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
NSX	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
NSX	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
NSX	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
NSX	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
NSX	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
NSX	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
NSX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
NSX	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
NSX	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
NSX	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
NSX	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
NSX	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
NSX	/	Groove track drive unit (SLOT ECU)	M98	History Data	
NSX	/	Groove track drive unit (SLOT ECU)	M98	System Information	
NSX	/	Airbag Control System (SRS)	M9F	Read ECU Information	
NSX	/	Airbag Control System (SRS)	M9F	Read codes	
NSX	/	Airbag Control System (SRS)	M9F	Erase Codes	
NSX	/	Airbag Control System (SRS)	M9F	Read Live Data	
NSX	/	Airbag Control System (SRS)	MA0	Read ECU Information	
NSX	/	Airbag Control System (SRS)	MA0	Read codes	
NSX	/	Airbag Control System (SRS)	MA0	Erase Codes	
NSX	/	Airbag Control System (SRS)	MA0	Read Live Data	
NSX	/	Airbag Control System (SRS)	MA1	Read ECU Information	
NSX	/	Airbag Control System (SRS)	MA1	Read codes	
NSX	/	Airbag Control System (SRS)	MA1	Erase Codes	
NSX	/	Airbag Control System (SRS)	MA1	Read Live Data	
NSX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
NSX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
NSX	/	Airbag Control System (SRS)	M2A	Read codes	
NSX	/	Airbag Control System (SRS)	M2A	Erase Codes	
NSX	/	Airbag Control System (SRS)	M2A	Read Live Data	
NSX	/	Airbag Control System (SRS)	M9C	Read ECU Information	
NSX	/	Airbag Control System (SRS)	M9C	Read codes	
NSX	/	Airbag Control System (SRS)	M9C	Erase Codes	
NSX	/	Airbag Control System (SRS)	M9C	Read Live Data	
NSX	/	Airbag Control System (SRS)	M9D	Read ECU Information	
NSX	/	Airbag Control System (SRS)	M9D	Read codes	
NSX	/	Airbag Control System (SRS)	M9D	Erase Codes	
NSX	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
NSX	/	Airbag Control System (SRS)	M9D	Read Live Data	
NSX	/	Airbag Control System (SRS)	M9D	Parameter Information	
NSX	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization



NSX	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
NSX	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
NSX	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
NSX	/	Airbag Control System (SRS)	M9D	Function Test	
NSX	/	Airbag Control System (SRS)	M9D	System Information	
NSX	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
NSX	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
NSX	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
NSX	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
NSX	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
NSX	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
NSX	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
NSX	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
NSX	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
NSX	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
NSX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
NSX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
NSX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
NSX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
NSX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
NSX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
NSX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
NSX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
NSX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
NSX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
NSX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
NSX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
NSX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
NSX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
NSX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
NSX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
NSX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
NSX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
NSX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
NSX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
NSX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
ODYSSEY	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ODYSSEY	/	Four-wheel steering control system (4WS)	M52	Read codes	
ODYSSEY	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
ODYSSEY	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ODYSSEY	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
ODYSSEY	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ODYSSEY	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ODYSSEY	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
ODYSSEY	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ODYSSEY	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ODYSSEY	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Read codes	
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Erase Codes	
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Read Live Data	
ODYSSEY	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ODYSSEY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	
ODYSSEY	/	Automatic shift control system (A/T)	M3B	REPLACE PCM/TCM	
ODYSSEY	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
ODYSSEY	/	Automatic shift control system (A/T)	M3B	Read codes	
ODYSSEY	/	Automatic shift control system (A/T)	M3B	Erase Codes	
ODYSSEY	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ODYSSEY	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
ODYSSEY	/	Automatic shift control system (A/T)	M3B	Read Live Data	
ODYSSEY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ODYSSEY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ODYSSEY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
ODYSSEY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ODYSSEY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ODYSSEY	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
ODYSSEY	/	Automatic shift control system (A/T)	M3C	Read codes	
ODYSSEY	/	Automatic shift control system (A/T)	M3C	Erase Codes	
ODYSSEY	/	Automatic shift control system (A/T)	M81	Read ECU Information	
ODYSSEY	/	Automatic shift control system (A/T)	M81	Read codes	
ODYSSEY	/	Automatic shift control system (A/T)	M81	Erase Codes	
ODYSSEY	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ODYSSEY	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
ODYSSEY	/	Automatic shift control system (A/T)	M81	Read Live Data	
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ODYSSEY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test

ODYSSEY	/	Automatic shift control system (A/T)	M82	Read ECU Information	
ODYSSEY	/	Automatic shift control system (A/T)	M82	Read codes	
ODYSSEY	/	Automatic shift control system (A/T)	M82	Erase Codes	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
ODYSSEY	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
ODYSSEY	/	Active Engine Control Support System (ACM)	M06	Read codes	
ODYSSEY	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
ODYSSEY	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
ODYSSEY	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
ODYSSEY	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
ODYSSEY	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
ODYSSEY	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
ODYSSEY	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ODYSSEY	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
ODYSSEY	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
ODYSSEY	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
ODYSSEY	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
ODYSSEY	/	Active / Automatic Shock Absorber Control System (A MOD)	M06	Read ECU Information	
ODYSSEY	/	Active / Automatic Shock Absorber Control System (A MOD)	M06	Read codes	
ODYSSEY	/	Active / Automatic Shock Absorber Control System (A MOD)	M06	Erase Codes	
ODYSSEY	/	Active / Automatic Shock Absorber Control System (A MOD)	M06	Read Freeze Frame Data	
ODYSSEY	/	Active / Automatic Shock Absorber Control System (A MOD)	M06	Read Live Data	
ODYSSEY	/	Active / Automatic Shock Absorber Control System (A MOD)	M06	Function Test	Damper Force Operation Test
ODYSSEY	/	Active / Automatic Shock Absorber Control System (A MOD)	M06	Adjustment	Damper Stroke Calibration
ODYSSEY	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
ODYSSEY	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
ODYSSEY	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
ODYSSEY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
ODYSSEY	/	Transmission Control System (AT)	M18	Read ECU Information	
ODYSSEY	/	Transmission Control System (AT)	M18	Read codes	
ODYSSEY	/	Transmission Control System (AT)	M18	Erase Codes	
ODYSSEY	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
ODYSSEY	/	Transmission Control System (AT)	M18	Read Live Data	
ODYSSEY	/	Transmission Control System (AT)	M18	Adjustment	
ODYSSEY	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
ODYSSEY	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
ODYSSEY	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
ODYSSEY	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
ODYSSEY	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
ODYSSEY	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
ODYSSEY	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
ODYSSEY	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ODYSSEY	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
ODYSSEY	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
ODYSSEY	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	

ODYSSEY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
ODYSSEY	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
ODYSSEY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
ODYSSEY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
ODYSSEY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
ODYSSEY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
ODYSSEY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
ODYSSEY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
ODYSSEY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
ODYSSEY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
ODYSSEY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
ODYSSEY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
ODYSSEY	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
ODYSSEY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
ODYSSEY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
ODYSSEY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
ODYSSEY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
ODYSSEY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
ODYSSEY	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
ODYSSEY	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
ODYSSEY	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ODYSSEY	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ODYSSEY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ODYSSEY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ODYSSEY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	

ODYSSEY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ODYSSEY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ODYSSEY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ODYSSEY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ODYSSEY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ODYSSEY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ODYSSEY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ODYSSEY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ODYSSEY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ODYSSEY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
ODYSSEY	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ODYSSEY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ODYSSEY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
ODYSSEY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ODYSSEY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ODYSSEY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ODYSSEY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Security	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ODYSSEY	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
ODYSSEY	/	BODY ELECTRICAL/Security	MFF	History Data	
ODYSSEY	/	BODY ELECTRICAL/Security	MFF	History Clear	
ODYSSEY	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ODYSSEY	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ODYSSEY	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ODYSSEY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ODYSSEY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ODYSSEY	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ODYSSEY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	

ODYSSEY	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ODYSSEY	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ODYSSEY	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ODYSSEY	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
ODYSSEY	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ODYSSEY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
ODYSSEY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ODYSSEY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ODYSSEY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
ODYSSEY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ODYSSEY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ODYSSEY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ODYSSEY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ODYSSEY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ODYSSEY	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ODYSSEY	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ODYSSEY	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ODYSSEY	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
ODYSSEY	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ODYSSEY	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
ODYSSEY	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ODYSSEY	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ODYSSEY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
ODYSSEY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
ODYSSEY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
ODYSSEY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
ODYSSEY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
ODYSSEY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
ODYSSEY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
ODYSSEY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
ODYSSEY	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
ODYSSEY	/	DBW	M34	Read ECU Information	
ODYSSEY	/	DBW	M34	Read codes	
ODYSSEY	/	DBW	M34	Erase Codes	
ODYSSEY	/	DBW	M34	Read Freeze Frame Data	
ODYSSEY	/	DBW	M34	Read Live Data	
ODYSSEY	/	DBW	M34	Inspection	Idle Speed Adjust
ODYSSEY	/	DBW	M34	Inspection	Throttle Test
ODYSSEY	/	DBW	M34	ECM Reset	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC TEST
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off

ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
ODYSSEY	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
ODYSSEY	/	Capacitor Control System (EDLC)	M12	Read codes	
ODYSSEY	/	Capacitor Control System (EDLC)	M12	Erase Codes	
ODYSSEY	/	Capacitor Control System (EDLC)	M12	Read Live Data	
ODYSSEY	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
ODYSSEY	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
ODYSSEY	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
ODYSSEY	/	Electronic Brake Control System (EPB)	M1F	Read codes	
ODYSSEY	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
ODYSSEY	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
ODYSSEY	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
ODYSSEY	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
ODYSSEY	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
ODYSSEY	/	Electronic Brake Control System (EPB)	M3E	Read codes	
ODYSSEY	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
ODYSSEY	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
ODYSSEY	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
ODYSSEY	/	Electric Powertrain / IMA	M66	Read ECU Information	
ODYSSEY	/	Electric Powertrain / IMA	M66	Read codes	
ODYSSEY	/	Electric Powertrain / IMA	M66	Erase Codes	
ODYSSEY	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
ODYSSEY	/	Electric Powertrain / IMA	M66	Read Live Data	
ODYSSEY	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
ODYSSEY	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
ODYSSEY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
ODYSSEY	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ODYSSEY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ODYSSEY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
ODYSSEY	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ODYSSEY	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ODYSSEY	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ODYSSEY	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ODYSSEY	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ODYSSEY	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor

ODYSSEY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ODYSSEY	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ODYSSEY	/	New energy battery (EV)	M44	Read ECU Information	
ODYSSEY	/	New energy battery (EV)	M44	Read codes	
ODYSSEY	/	New energy battery (EV)	M44	Erase Codes	
ODYSSEY	/	New energy battery (EV)	M44	Read Freeze Frame Data	
ODYSSEY	/	New energy battery (EV)	M44	Read Live Data	
ODYSSEY	/	New energy battery (EV)	M44	Inspection	
ODYSSEY	/	New energy battery (EV)	M44	Adjustment	
ODYSSEY	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
ODYSSEY	/	Electronic vacuum pump (EVPS)	M21	Read codes	
ODYSSEY	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ODYSSEY	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ODYSSEY	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ODYSSEY	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ODYSSEY	/	Electronic vacuum pump (EVPS)	M22	Read codes	
ODYSSEY	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ODYSSEY	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ODYSSEY	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ODYSSEY	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ODYSSEY	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ODYSSEY	/	FCW LDW	M4E	Read ECU Information	
ODYSSEY	/	FCW LDW	M4E	Read codes	
ODYSSEY	/	FCW LDW	M4E	Erase Codes	
ODYSSEY	/	FCW LDW	M4E	Read Live Data	
ODYSSEY	/	FCW LDW	M4E	Function Test	FCW Drive
ODYSSEY	/	FCW LDW	M4E	Function Test	Left side lane departure warning
ODYSSEY	/	FCW LDW	M4E	Function Test	Right side lane departure warning
ODYSSEY	/	FCW LDW	M4E	Function Test	Indicator Drive
ODYSSEY	/	FCW LDW	M4E	Adjustment	
ODYSSEY	/	Instrument Display System (GAUGE)	M2C	Read codes	
ODYSSEY	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
ODYSSEY	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Read codes	
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Read codes	
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Read codes	
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ODYSSEY	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Read codes	
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA

ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ODYSSEY	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
ODYSSEY	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ODYSSEY	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
ODYSSEY	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
ODYSSEY	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ODYSSEY	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ODYSSEY	/	Intelligent Parking Control System (SPS)	M9B	Customize	
ODYSSEY	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ODYSSEY	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ODYSSEY	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ODYSSEY	/	Hydraulic booster control system (HBS)	M5F	Read codes	
ODYSSEY	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ODYSSEY	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ODYSSEY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ODYSSEY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ODYSSEY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ODYSSEY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ODYSSEY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ODYSSEY	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ODYSSEY	/	IMA	M63	Read ECU Information	
ODYSSEY	/	IMA	M63	Read codes	
ODYSSEY	/	IMA	M63	Erase Codes	
ODYSSEY	/	IMA	M63	Read Freeze Frame Data	
ODYSSEY	/	IMA	M63	Read Live Data	
ODYSSEY	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ODYSSEY	/	IMA	M63	Adjustment	SOC PRESET
ODYSSEY	/	IMA	M64	Read ECU Information	
ODYSSEY	/	IMA	M64	Read codes	
ODYSSEY	/	IMA	M64	Erase Codes	
ODYSSEY	/	IMA	M64	Read Freeze Frame Data	
ODYSSEY	/	IMA	M64	Read Live Data	
ODYSSEY	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ODYSSEY	/	IMA	M64	Adjustment	SOC PRESET
ODYSSEY	/	IMA	M65	Read ECU Information	
ODYSSEY	/	IMA	M65	Read codes	
ODYSSEY	/	IMA	M65	Erase Codes	
ODYSSEY	/	IMA	M65	Read Freeze Frame Data	
ODYSSEY	/	IMA	M65	Read Live Data	
ODYSSEY	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
ODYSSEY	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ODYSSEY	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ODYSSEY	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ODYSSEY	/	Intake Sounder Control System (ISC)	M6D	Read codes	
ODYSSEY	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ODYSSEY	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ODYSSEY	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ODYSSEY	/	Night Vision System (INVS)	0XB1	Read ECU Information	
ODYSSEY	/	Night Vision System (INVS)	0XB1	Read codes	
ODYSSEY	/	Night Vision System (INVS)	0XB1	Erase Codes	
ODYSSEY	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ODYSSEY	/	Night Vision System (INVS)	0XB1	Read Live Data	
ODYSSEY	/	Night Vision System (INVS)	0XB1	Adjustment	
ODYSSEY	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ODYSSEY	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ODYSSEY	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ODYSSEY	/	i-SHIFT	0XB0	Read ECU Information	
ODYSSEY	/	i-SHIFT	0XB0	Read codes	
ODYSSEY	/	i-SHIFT	0XB0	Erase Codes	
ODYSSEY	/	i-SHIFT	0XB0	Read Live Data	
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Read codes	
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Self Check	
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	History Data	
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ODYSSEY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving



ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ODYSSEY /	Keyless Entry Control System (KAS)	M99	Registration	
ODYSSEY /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ODYSSEY /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ODYSSEY /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
ODYSSEY /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
ODYSSEY /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
ODYSSEY /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
ODYSSEY /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
ODYSSEY /	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
ODYSSEY /	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
ODYSSEY /	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
ODYSSEY /	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
ODYSSEY /	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
ODYSSEY /	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
ODYSSEY /	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
ODYSSEY /	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
ODYSSEY /	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
ODYSSEY /	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
ODYSSEY /	Management ECU Module (ME)	M74	Read ECU Information	
ODYSSEY /	Management ECU Module (ME)	M74	Read codes	
ODYSSEY /	Management ECU Module (ME)	M74	Erase Codes	
ODYSSEY /	Management ECU Module (ME)	M74	Read Freeze Frame Data	
ODYSSEY /	Management ECU Module (ME)	M74	Read Live Data	
ODYSSEY /	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read ECU Information	
ODYSSEY /	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read codes	
ODYSSEY /	Multi-view camera and parking assist system (MVC/P, M26)	M26	Erase Codes	
ODYSSEY /	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read Live Data	
ODYSSEY /	Multi-view camera system (MVCS)	M7A	Read ECU Information	
ODYSSEY /	Multi-view camera system (MVCS)	M7A	Read codes	
ODYSSEY /	Multi-view camera system (MVCS)	M7A	Erase Codes	
ODYSSEY /	Multi-view camera system (MVCS)	M7A	Read Live Data	
ODYSSEY /	Multi-view camera system (MVCS)	M7A	Customization	
ODYSSEY /	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
ODYSSEY /	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
ODYSSEY /	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
ODYSSEY /	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
ODYSSEY /	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
ODYSSEY /	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
ODYSSEY /	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
ODYSSEY /	Power Control Unit (PCU)	M83	Read ECU Information	
ODYSSEY /	Power Control Unit (PCU)	M83	Read codes	
ODYSSEY /	Power Control Unit (PCU)	M83	Erase Codes	
ODYSSEY /	Power Control Unit (PCU)	M83	Read Live Data	
ODYSSEY /	Power Control Unit (PCU)	M83	Self Check	
ODYSSEY /	Power Control Unit (PCU)	M83	History Data	
ODYSSEY /	Engine Control System (PGM-FI)	M23	Read ECU Information	
ODYSSEY /	Engine Control System (PGM-FI)	M23	Read codes	
ODYSSEY /	Engine Control System (PGM-FI)	M23	Erase Codes	
ODYSSEY /	Engine Control System (PGM-FI)	M23	Readiness Codes	
ODYSSEY /	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
ODYSSEY /	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
ODYSSEY /	Engine Control System (PGM-FI)	M23	Read Live Data	
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
ODYSSEY /	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP

ODYSSEY	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ODYSSEY	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ODYSSEY	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
ODYSSEY	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ODYSSEY	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
ODYSSEY	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
ODYSSEY	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
ODYSSEY	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
ODYSSEY	/	Engine Control System (PGM-FI)	M50	Read codes	
ODYSSEY	/	Engine Control System (PGM-FI)	M50	Erase Codes	
ODYSSEY	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
ODYSSEY	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
ODYSSEY	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
ODYSSEY	/	Engine Control System (PGM-FI)	M50	Read Live Data	
ODYSSEY	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
ODYSSEY	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
ODYSSEY	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
ODYSSEY	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
ODYSSEY	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Read codes	
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Erase Codes	
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
ODYSSEY	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Read Live Data	
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ODYSSEY	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ODYSSEY	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
ODYSSEY	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ODYSSEY	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
ODYSSEY	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
ODYSSEY	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
ODYSSEY	/	PSR	M27	Read ECU Information	
ODYSSEY	/	PSR	M27	Read codes	
ODYSSEY	/	PSR	M27	Erase Codes	
ODYSSEY	/	PSR	M27	Read Live Data	
ODYSSEY	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ODYSSEY	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
ODYSSEY	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ODYSSEY	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ODYSSEY	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
ODYSSEY	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
ODYSSEY	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
ODYSSEY	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
ODYSSEY	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
ODYSSEY	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
ODYSSEY	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
ODYSSEY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
ODYSSEY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
ODYSSEY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
ODYSSEY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
ODYSSEY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
ODYSSEY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
ODYSSEY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
ODYSSEY	/	Remote starter (RS)	M90	System Check	
ODYSSEY	/	Remote starter (RS)	M90	HISTORY	
ODYSSEY	/	Remote starter (RS)	M90	Registration	
ODYSSEY	/	Seat load cell (SWS)	M6F	Read ECU Information	
ODYSSEY	/	Seat load cell (SWS)	M6F	Read codes	
ODYSSEY	/	Seat load cell (SWS)	M6F	Erase Codes	
ODYSSEY	/	Seat load cell (SWS)	M6F	Read Live Data	
ODYSSEY	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
ODYSSEY	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
ODYSSEY	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
ODYSSEY	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
ODYSSEY	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
ODYSSEY	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization

ODYSSEY	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
ODYSSEY	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ODYSSEY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
ODYSSEY	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
ODYSSEY	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
ODYSSEY	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
ODYSSEY	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
ODYSSEY	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
ODYSSEY	/	Groove track drive unit (SLOT ECU)	M98	History Data	
ODYSSEY	/	Groove track drive unit (SLOT ECU)	M98	System Information	
ODYSSEY	/	Airbag Control System (SRS)	M9F	Read ECU Information	
ODYSSEY	/	Airbag Control System (SRS)	M9F	Read codes	
ODYSSEY	/	Airbag Control System (SRS)	M9F	Erase Codes	
ODYSSEY	/	Airbag Control System (SRS)	M9F	Read Live Data	
ODYSSEY	/	Airbag Control System (SRS)	MA0	Read ECU Information	
ODYSSEY	/	Airbag Control System (SRS)	MA0	Read codes	
ODYSSEY	/	Airbag Control System (SRS)	MA0	Erase Codes	
ODYSSEY	/	Airbag Control System (SRS)	MA0	Read Live Data	
ODYSSEY	/	Airbag Control System (SRS)	MA1	Read ECU Information	
ODYSSEY	/	Airbag Control System (SRS)	MA1	Read codes	
ODYSSEY	/	Airbag Control System (SRS)	MA1	Erase Codes	
ODYSSEY	/	Airbag Control System (SRS)	MA1	Read Live Data	
ODYSSEY	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
ODYSSEY	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ODYSSEY	/	Airbag Control System (SRS)	M2A	Read codes	
ODYSSEY	/	Airbag Control System (SRS)	M2A	Erase Codes	
ODYSSEY	/	Airbag Control System (SRS)	M2A	Read Live Data	
ODYSSEY	/	Airbag Control System (SRS)	M9C	Read ECU Information	
ODYSSEY	/	Airbag Control System (SRS)	M9C	Read codes	
ODYSSEY	/	Airbag Control System (SRS)	M9C	Erase Codes	
ODYSSEY	/	Airbag Control System (SRS)	M9C	Read Live Data	
ODYSSEY	/	Airbag Control System (SRS)	M9D	Read ECU Information	
ODYSSEY	/	Airbag Control System (SRS)	M9D	Read codes	
ODYSSEY	/	Airbag Control System (SRS)	M9D	Erase Codes	
ODYSSEY	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
ODYSSEY	/	Airbag Control System (SRS)	M9D	Read Live Data	
ODYSSEY	/	Airbag Control System (SRS)	M9D	Parameter Information	
ODYSSEY	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
ODYSSEY	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
ODYSSEY	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
ODYSSEY	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
ODYSSEY	/	Airbag Control System (SRS)	M9D	Function Test	
ODYSSEY	/	Airbag Control System (SRS)	M9D	System Information	
ODYSSEY	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
ODYSSEY	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
ODYSSEY	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
ODYSSEY	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
ODYSSEY	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ODYSSEY	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ODYSSEY	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ODYSSEY	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ODYSSEY	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ODYSSEY	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ODYSSEY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ODYSSEY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ODYSSEY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ODYSSEY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ODYSSEY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	

ODYSSEY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ODYSSEY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ODYSSEY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ODYSSEY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
ODYSSEY V6	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ODYSSEY V6	/	Four-wheel steering control system (4WS)	M52	Read codes	
ODYSSEY V6	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
ODYSSEY V6	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ODYSSEY V6	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
ODYSSEY V6	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ODYSSEY V6	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ODYSSEY V6	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
ODYSSEY V6	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ODYSSEY V6	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ODYSSEY V6	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	Read codes	
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	Erase Codes	
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	Read Live Data	
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ODYSSEY V6	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
ODYSSEY V6	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
ODYSSEY V6	/	Automatic shift control system (A/T)	M3B	Read codes	
ODYSSEY V6	/	Automatic shift control system (A/T)	M3B	Erase Codes	
ODYSSEY V6	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ODYSSEY V6	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
ODYSSEY V6	/	Automatic shift control system (A/T)	M3B	Read Live Data	
ODYSSEY V6	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ODYSSEY V6	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ODYSSEY V6	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
ODYSSEY V6	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ODYSSEY V6	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
ODYSSEY V6	/	Automatic shift control system (A/T)	M3C	Read codes	
ODYSSEY V6	/	Automatic shift control system (A/T)	M3C	Erase Codes	
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Read ECU Information	
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Read codes	
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Erase Codes	
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Read Live Data	
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ODYSSEY V6	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
ODYSSEY V6	/	Automatic shift control system (A/T)	M82	Read ECU Information	
ODYSSEY V6	/	Automatic shift control system (A/T)	M82	Read codes	
ODYSSEY V6	/	Automatic shift control system (A/T)	M82	Erase Codes	
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read ECU Information	
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read codes	
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Erase Codes	
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Freeze Frame Data	
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Read Live Data	
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	Throttling Opening Angle Test
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 1
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BRAKE BOOSTER 2
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	LIGHT CHECK
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M61	Function Test	BUZZER CHECK
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read ECU Information	
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read codes	
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Erase Codes	
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Freeze Frame Data	
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Read Live Data	
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Adjustment	RADAR AIMING
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	BRAKE ACTUATOR 3
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ACC relay malfunction.
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INDICATOR LIGHT
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	INFORMATION DISPLAY
ODYSSEY V6	/	Adaptive Cruise (Constant Speed) Control System (AC	M62	Function Test	ALARM BUZZER
ODYSSEY V6	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
ODYSSEY V6	/	Active Engine Control Support System (ACM)	M06	Read codes	
ODYSSEY V6	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
ODYSSEY V6	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
ODYSSEY V6	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
ODYSSEY V6	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
ODYSSEY V6	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
ODYSSEY V6	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF

ODYSSEY V6 /	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ODYSSEY V6 /	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
ODYSSEY V6 /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
ODYSSEY V6 /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
ODYSSEY V6 /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
ODYSSEY V6 /	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
ODYSSEY V6 /	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
ODYSSEY V6 /	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
ODYSSEY V6 /	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
ODYSSEY V6 /	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
ODYSSEY V6 /	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
ODYSSEY V6 /	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
ODYSSEY V6 /	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
ODYSSEY V6 /	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
ODYSSEY V6 /	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
ODYSSEY V6 /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
ODYSSEY V6 /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
ODYSSEY V6 /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
ODYSSEY V6 /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
ODYSSEY V6 /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
ODYSSEY V6 /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
ODYSSEY V6 /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
ODYSSEY V6 /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
ODYSSEY V6 /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
ODYSSEY V6 /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
ODYSSEY V6 /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
ODYSSEY V6 /	Transmission Control System (AT)	M18	Read ECU Information	
ODYSSEY V6 /	Transmission Control System (AT)	M18	Read codes	
ODYSSEY V6 /	Transmission Control System (AT)	M18	Erase Codes	
ODYSSEY V6 /	Transmission Control System (AT)	M18	Read Freeze Frame Data	
ODYSSEY V6 /	Transmission Control System (AT)	M18	Read Live Data	
ODYSSEY V6 /	Transmission Control System (AT)	M18	Adjustment	
ODYSSEY V6 /	Active Torque Converter Control System (ATTTS)	M0E	Read ECU Information	
ODYSSEY V6 /	Active Torque Converter Control System (ATTTS)	M0E	Read codes	
ODYSSEY V6 /	Active Torque Converter Control System (ATTTS)	M0E	Erase Codes	
ODYSSEY V6 /	Active Torque Converter Control System (ATTTS)	M0E	Read Freeze Frame Data	
ODYSSEY V6 /	Active Torque Converter Control System (ATTTS)	M0E	Read Live Data	
ODYSSEY V6 /	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
ODYSSEY V6 /	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	STEERING ANGLE
ODYSSEY V6 /	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ODYSSEY V6 /	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ALL SENSORS
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
ODYSSEY V6 /	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
ODYSSEY V6 /	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
ODYSSEY V6 /	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
ODYSSEY V6 /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
ODYSSEY V6 /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
ODYSSEY V6 /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
ODYSSEY V6 /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
ODYSSEY V6 /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
ODYSSEY V6 /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
ODYSSEY V6 /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
ODYSSEY V6 /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
ODYSSEY V6 /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
ODYSSEY V6 /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
ODYSSEY V6 /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
ODYSSEY V6 /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
ODYSSEY V6 /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
ODYSSEY V6 /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
ODYSSEY V6 /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
ODYSSEY V6 /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
ODYSSEY V6 /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
ODYSSEY V6 /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
ODYSSEY V6 /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
ODYSSEY V6 /	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
ODYSSEY V6 /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
ODYSSEY V6 /	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
ODYSSEY V6 /	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
ODYSSEY V6 /	BODY ELECTRICAL/Door Locks	MFF	Read codes	
ODYSSEY V6 /	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
ODYSSEY V6 /	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
ODYSSEY V6 /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
ODYSSEY V6 /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
ODYSSEY V6 /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
ODYSSEY V6 /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
ODYSSEY V6 /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
ODYSSEY V6 /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
ODYSSEY V6 /	BODY ELECTRICAL/e-Call	MFF	Read codes	

ODYSSEY V6	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
ODYSSEY V6	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
ODYSSEY V6	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ODYSSEY V6	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ODYSSEY V6	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ODYSSEY V6	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ODYSSEY V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ODYSSEY V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ODYSSEY V6	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ODYSSEY V6	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ODYSSEY V6	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ODYSSEY V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ODYSSEY V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ODYSSEY V6	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ODYSSEY V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	

ODYSSEY V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ODYSSEY V6	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
ODYSSEY V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ODYSSEY V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ODYSSEY V6	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
ODYSSEY V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ODYSSEY V6	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ODYSSEY V6	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ODYSSEY V6	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Security	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ODYSSEY V6	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
ODYSSEY V6	/	BODY ELECTRICAL/Security	MFF	History Data	
ODYSSEY V6	/	BODY ELECTRICAL/Security	MFF	History Clear	
ODYSSEY V6	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ODYSSEY V6	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ODYSSEY V6	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ODYSSEY V6	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ODYSSEY V6	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ODYSSEY V6	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ODYSSEY V6	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
ODYSSEY V6	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ODYSSEY V6	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ODYSSEY V6	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ODYSSEY V6	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
ODYSSEY V6	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ODYSSEY V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
ODYSSEY V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ODYSSEY V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ODYSSEY V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
ODYSSEY V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ODYSSEY V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ODYSSEY V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ODYSSEY V6	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ODYSSEY V6	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ODYSSEY V6	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ODYSSEY V6	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ODYSSEY V6	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ODYSSEY V6	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
ODYSSEY V6	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ODYSSEY V6	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	

ODYSSEY V6 /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ODYSSEY V6 /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ODYSSEY V6 /	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read ECU Information	
ODYSSEY V6 /	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read codes	
ODYSSEY V6 /	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Erase Codes	
ODYSSEY V6 /	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Freeze Frame Data	
ODYSSEY V6 /	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Live Data	
ODYSSEY V6 /	Collision Mitigation Brake Control System (CMBS/CM!	M2E	CMBS (CMS) ACTIVATION HISTORY	
ODYSSEY V6 /	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	RADAR AIMING
ODYSSEY V6 /	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	CMBS Brake
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M1B		Read codes	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M33		Read codes	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		Read codes	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
ODYSSEY V6 /	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
ODYSSEY V6 /	DBW	M34	Read ECU Information	
ODYSSEY V6 /	DBW	M34	Read codes	
ODYSSEY V6 /	DBW	M34	Erase Codes	
ODYSSEY V6 /	DBW	M34	Read Freeze Frame Data	
ODYSSEY V6 /	DBW	M34	Read Live Data	
ODYSSEY V6 /	DBW	M34	Inspection	Idle Speed Adjust
ODYSSEY V6 /	DBW	M34	Inspection	Throttle Test
ODYSSEY V6 /	DBW	M34	ECM Reset	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Read codes	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M37	Read codes	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M85	Read codes	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
ODYSSEY V6 /	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off



ODYSSEY V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
ODYSSEY V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
ODYSSEY V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
ODYSSEY V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
ODYSSEY V6	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
ODYSSEY V6	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
ODYSSEY V6	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
ODYSSEY V6	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
ODYSSEY V6	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
ODYSSEY V6	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
ODYSSEY V6	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
ODYSSEY V6	/	Capacitor Control System (EDLC)	M12	Read codes	
ODYSSEY V6	/	Capacitor Control System (EDLC)	M12	Erase Codes	
ODYSSEY V6	/	Capacitor Control System (EDLC)	M12	Read Live Data	
ODYSSEY V6	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
ODYSSEY V6	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
ODYSSEY V6	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
ODYSSEY V6	/	Electronic Brake Control System (EPB)	M1F	Read codes	
ODYSSEY V6	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
ODYSSEY V6	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
ODYSSEY V6	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
ODYSSEY V6	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
ODYSSEY V6	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
ODYSSEY V6	/	Electronic Brake Control System (EPB)	M3E	Read codes	
ODYSSEY V6	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
ODYSSEY V6	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
ODYSSEY V6	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
ODYSSEY V6	/	Electric Powertrain / IMA	M66	Read ECU Information	
ODYSSEY V6	/	Electric Powertrain / IMA	M66	Read codes	
ODYSSEY V6	/	Electric Powertrain / IMA	M66	Erase Codes	
ODYSSEY V6	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
ODYSSEY V6	/	Electric Powertrain / IMA	M66	Read Live Data	
ODYSSEY V6	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
ODYSSEY V6	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
ODYSSEY V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
ODYSSEY V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ODYSSEY V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ODYSSEY V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
ODYSSEY V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ODYSSEY V6	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ODYSSEY V6	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ODYSSEY V6	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ODYSSEY V6	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ODYSSEY V6	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ODYSSEY V6	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ODYSSEY V6	/	New energy battery (EV)	M44	Read ECU Information	
ODYSSEY V6	/	New energy battery (EV)	M44	Read codes	
ODYSSEY V6	/	New energy battery (EV)	M44	Erase Codes	
ODYSSEY V6	/	New energy battery (EV)	M44	Read Freeze Frame Data	
ODYSSEY V6	/	New energy battery (EV)	M44	Read Live Data	
ODYSSEY V6	/	New energy battery (EV)	M44	Inspection	
ODYSSEY V6	/	New energy battery (EV)	M44	Adjustment	
ODYSSEY V6	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
ODYSSEY V6	/	Electronic vacuum pump (EVPS)	M21	Read codes	
ODYSSEY V6	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ODYSSEY V6	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ODYSSEY V6	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ODYSSEY V6	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ODYSSEY V6	/	Electronic vacuum pump (EVPS)	M22	Read codes	
ODYSSEY V6	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ODYSSEY V6	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ODYSSEY V6	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ODYSSEY V6	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ODYSSEY V6	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ODYSSEY V6	/	FCW LDW	M4E	Read ECU Information	
ODYSSEY V6	/	FCW LDW	M4E	Read codes	
ODYSSEY V6	/	FCW LDW	M4E	Erase Codes	
ODYSSEY V6	/	FCW LDW	M4E	Read Live Data	
ODYSSEY V6	/	FCW LDW	M4E	Function Test	FCW Drive

ODYSSEY V6	/	FCW LDW	M4E	Function Test	Left side lane departure warning
ODYSSEY V6	/	FCW LDW	M4E	Function Test	Right side lane departure warning
ODYSSEY V6	/	FCW LDW	M4E	Function Test	Indicator Drive
ODYSSEY V6	/	FCW LDW	M4E	Adjustment	
ODYSSEY V6	/	Instrument Display System (GAUGE)	M2C	Read codes	
ODYSSEY V6	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
ODYSSEY V6	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Read codes	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Read codes	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Read codes	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Read codes	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ODYSSEY V6	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
ODYSSEY V6	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ODYSSEY V6	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
ODYSSEY V6	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
ODYSSEY V6	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ODYSSEY V6	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ODYSSEY V6	/	Intelligent Parking Control System (SPS)	M9B	Customize	
ODYSSEY V6	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ODYSSEY V6	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ODYSSEY V6	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ODYSSEY V6	/	Hydraulic booster control system (HBS)	M5F	Read codes	
ODYSSEY V6	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ODYSSEY V6	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ODYSSEY V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ODYSSEY V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ODYSSEY V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ODYSSEY V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ODYSSEY V6	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ODYSSEY V6	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ODYSSEY V6	/	IMA	M63	Read ECU Information	
ODYSSEY V6	/	IMA	M63	Read codes	
ODYSSEY V6	/	IMA	M63	Erase Codes	
ODYSSEY V6	/	IMA	M63	Read Freeze Frame Data	
ODYSSEY V6	/	IMA	M63	Read Live Data	
ODYSSEY V6	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ODYSSEY V6	/	IMA	M63	Adjustment	SOC PRESET
ODYSSEY V6	/	IMA	M64	Read ECU Information	

ODYSSEY V6	/	IMA	M64	Read codes	
ODYSSEY V6	/	IMA	M64	Erase Codes	
ODYSSEY V6	/	IMA	M64	Read Freeze Frame Data	
ODYSSEY V6	/	IMA	M64	Read Live Data	
ODYSSEY V6	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ODYSSEY V6	/	IMA	M64	Adjustment	SOC PRESET
ODYSSEY V6	/	IMA	M65	Read ECU Information	
ODYSSEY V6	/	IMA	M65	Read codes	
ODYSSEY V6	/	IMA	M65	Erase Codes	
ODYSSEY V6	/	IMA	M65	Read Freeze Frame Data	
ODYSSEY V6	/	IMA	M65	Read Live Data	
ODYSSEY V6	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
ODYSSEY V6	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ODYSSEY V6	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ODYSSEY V6	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ODYSSEY V6	/	Intake Sounder Control System (ISC)	M6D	Read codes	
ODYSSEY V6	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ODYSSEY V6	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ODYSSEY V6	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ODYSSEY V6	/	Night Vision System (INVS)	0XB1	Read ECU Information	
ODYSSEY V6	/	Night Vision System (INVS)	0XB1	Read codes	
ODYSSEY V6	/	Night Vision System (INVS)	0XB1	Erase Codes	
ODYSSEY V6	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ODYSSEY V6	/	Night Vision System (INVS)	0XB1	Read Live Data	
ODYSSEY V6	/	Night Vision System (INVS)	0XB1	Adjustment	
ODYSSEY V6	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ODYSSEY V6	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ODYSSEY V6	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ODYSSEY V6	/	i-SHIFT	0XB0	Read ECU Information	
ODYSSEY V6	/	i-SHIFT	0XB0	Read codes	
ODYSSEY V6	/	i-SHIFT	0XB0	Erase Codes	
ODYSSEY V6	/	i-SHIFT	0XB0	Read Live Data	
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Read codes	
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Self Check	
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	History Data	
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCN Terminal) Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ODYSSEY V6	/	Keyless Entry Control System (KAS)	M99	Registration	
ODYSSEY V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ODYSSEY V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ODYSSEY V6	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	

ODYSSEY V6 /	Electronic Camera Lane Keeping Assist System (LKAS) M70	Read Freeze Frame Data	
ODYSSEY V6 /	Electronic Camera Lane Keeping Assist System (LKAS) M70	Read Live Data	
ODYSSEY V6 /	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	STATIC CAMERA AIMING
ODYSSEY V6 /	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	VIDEO OUTPUT
ODYSSEY V6 /	Electronically assisted lane keeping control system (Lk) M71	Read ECU Information	
ODYSSEY V6 /	Electronically assisted lane keeping control system (Lk) M71	Read codes	
ODYSSEY V6 /	Electronically assisted lane keeping control system (Lk) M71	Erase Codes	
ODYSSEY V6 /	Electronically assisted lane keeping control system (Lk) M71	Read Freeze Frame Data	
ODYSSEY V6 /	Electronically assisted lane keeping control system (Lk) M71	Read Live Data	
ODYSSEY V6 /	Electronically assisted lane keeping control system (Lk) M71	Adjustment	STEERING REWRITE
ODYSSEY V6 /	Electronically assisted lane keeping control system (Lk) M71	Customize	LDW OFFSET
ODYSSEY V6 /	Electronically assisted lane keeping control system (Lk) M71	Customize	GAIN ADJUST
ODYSSEY V6 /	Electronically assisted lane keeping control system (Lk) M71	Customize	DRIVING WILL
ODYSSEY V6 /	Electronically assisted lane keeping control system (Lk) M71	Customize	CONTROL DELAY
ODYSSEY V6 /	Management ECU Module (ME) M74	Read ECU Information	
ODYSSEY V6 /	Management ECU Module (ME) M74	Read codes	
ODYSSEY V6 /	Management ECU Module (ME) M74	Erase Codes	
ODYSSEY V6 /	Management ECU Module (ME) M74	Read Freeze Frame Data	
ODYSSEY V6 /	Management ECU Module (ME) M74	Read Live Data	
ODYSSEY V6 /	Multi-view camera and parking assist system (MVC/P) M26	Read ECU Information	
ODYSSEY V6 /	Multi-view camera and parking assist system (MVC/P) M26	Read codes	
ODYSSEY V6 /	Multi-view camera and parking assist system (MVC/P) M26	Erase Codes	
ODYSSEY V6 /	Multi-view camera and parking assist system (MVC/P) M26	Read Live Data	
ODYSSEY V6 /	Multi-view camera system (MVCS) M7A	Read ECU Information	
ODYSSEY V6 /	Multi-view camera system (MVCS) M7A	Read codes	
ODYSSEY V6 /	Multi-view camera system (MVCS) M7A	Erase Codes	
ODYSSEY V6 /	Multi-view camera system (MVCS) M7A	Read Live Data	
ODYSSEY V6 /	Multi-view camera system (MVCS) M7A	Customization	
ODYSSEY V6 /	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
ODYSSEY V6 /	Multi-view camera system (MVCS) M7A	Function Test	LED Light
ODYSSEY V6 /	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
ODYSSEY V6 /	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
ODYSSEY V6 /	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
ODYSSEY V6 /	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
ODYSSEY V6 /	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
ODYSSEY V6 /	Power Control Unit (PCU) M83	Read ECU Information	
ODYSSEY V6 /	Power Control Unit (PCU) M83	Read codes	
ODYSSEY V6 /	Power Control Unit (PCU) M83	Erase Codes	
ODYSSEY V6 /	Power Control Unit (PCU) M83	Read Live Data	
ODYSSEY V6 /	Power Control Unit (PCU) M83	Self Check	
ODYSSEY V6 /	Power Control Unit (PCU) M83	History Data	
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Read ECU Information	
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Read codes	
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Erase Codes	
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Readiness Codes	
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Read Live Data	
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	VIN CHECK	
ODYSSEY V6 /	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	Read ECU Information	
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	Read codes	
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	Erase Codes	
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	Readiness Codes	
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	Read Live Data	
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	VIN CHECK	
ODYSSEY V6 /	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
ODYSSEY V6 /	Engine Control System (PGM-FI) M86	Read ECU Information	
ODYSSEY V6 /	Engine Control System (PGM-FI) M86	Read codes	
ODYSSEY V6 /	Engine Control System (PGM-FI) M86	Erase Codes	
ODYSSEY V6 /	Engine Control System (PGM-FI) M86	Readiness Codes	
ODYSSEY V6 /	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
ODYSSEY V6 /	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
ODYSSEY V6 /	Engine Control System (PGM-FI) M86	Read Live Data	
ODYSSEY V6 /	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
ODYSSEY V6 /	Engine Control System (PGM-FI) M86	Inspection	EVAP Test

ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	ACM
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	VIN CHECK	
ODYSSEY V6 /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ODYSSEY V6 /	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
ODYSSEY V6 /	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
ODYSSEY V6 /	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
ODYSSEY V6 /	PSR	M27	Read ECU Information	
ODYSSEY V6 /	PSR	M27	Read codes	
ODYSSEY V6 /	PSR	M27	Erase Codes	
ODYSSEY V6 /	PSR	M27	Read Live Data	
ODYSSEY V6 /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ODYSSEY V6 /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
ODYSSEY V6 /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ODYSSEY V6 /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ODYSSEY V6 /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
ODYSSEY V6 /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
ODYSSEY V6 /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
ODYSSEY V6 /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
ODYSSEY V6 /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
ODYSSEY V6 /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
ODYSSEY V6 /	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
ODYSSEY V6 /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
ODYSSEY V6 /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
ODYSSEY V6 /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
ODYSSEY V6 /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
ODYSSEY V6 /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
ODYSSEY V6 /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
ODYSSEY V6 /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
ODYSSEY V6 /	Remote starter (RS)	M90	System Check	
ODYSSEY V6 /	Remote starter (RS)	M90	HISTORY	
ODYSSEY V6 /	Remote starter (RS)	M90	Registration	
ODYSSEY V6 /	Seat load cell (SWS)	M6F	Read ECU Information	
ODYSSEY V6 /	Seat load cell (SWS)	M6F	Read codes	
ODYSSEY V6 /	Seat load cell (SWS)	M6F	Erase Codes	
ODYSSEY V6 /	Seat load cell (SWS)	M6F	Read Live Data	
ODYSSEY V6 /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
ODYSSEY V6 /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
ODYSSEY V6 /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
ODYSSEY V6 /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
ODYSSEY V6 /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
ODYSSEY V6 /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
ODYSSEY V6 /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
ODYSSEY V6 /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ODYSSEY V6 /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
ODYSSEY V6 /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
ODYSSEY V6 /	Groove track drive unit (SLOT ECU)	M98	Read codes	
ODYSSEY V6 /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
ODYSSEY V6 /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
ODYSSEY V6 /	Groove track drive unit (SLOT ECU)	M98	Self Check	
ODYSSEY V6 /	Groove track drive unit (SLOT ECU)	M98	History Data	

ODYSSEY V6	/	Groove track drive unit (SLOT ECU)	M98	System Information	
ODYSSEY V6	/	Airbag Control System (SRS)	M9F	Read ECU Information	
ODYSSEY V6	/	Airbag Control System (SRS)	M9F	Read codes	
ODYSSEY V6	/	Airbag Control System (SRS)	M9F	Erase Codes	
ODYSSEY V6	/	Airbag Control System (SRS)	M9F	Read Live Data	
ODYSSEY V6	/	Airbag Control System (SRS)	MA0	Read ECU Information	
ODYSSEY V6	/	Airbag Control System (SRS)	MA0	Read codes	
ODYSSEY V6	/	Airbag Control System (SRS)	MA0	Erase Codes	
ODYSSEY V6	/	Airbag Control System (SRS)	MA0	Read Live Data	
ODYSSEY V6	/	Airbag Control System (SRS)	MA1	Read ECU Information	
ODYSSEY V6	/	Airbag Control System (SRS)	MA1	Read codes	
ODYSSEY V6	/	Airbag Control System (SRS)	MA1	Erase Codes	
ODYSSEY V6	/	Airbag Control System (SRS)	MA1	Read Live Data	
ODYSSEY V6	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
ODYSSEY V6	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ODYSSEY V6	/	Airbag Control System (SRS)	M2A	Read codes	
ODYSSEY V6	/	Airbag Control System (SRS)	M2A	Erase Codes	
ODYSSEY V6	/	Airbag Control System (SRS)	M2A	Read Live Data	
ODYSSEY V6	/	Airbag Control System (SRS)	M9C	Read ECU Information	
ODYSSEY V6	/	Airbag Control System (SRS)	M9C	Read codes	
ODYSSEY V6	/	Airbag Control System (SRS)	M9C	Erase Codes	
ODYSSEY V6	/	Airbag Control System (SRS)	M9C	Read Live Data	
ODYSSEY V6	/	Airbag Control System (SRS)	M9D	Read ECU Information	
ODYSSEY V6	/	Airbag Control System (SRS)	M9D	Read codes	
ODYSSEY V6	/	Airbag Control System (SRS)	M9D	Erase Codes	
ODYSSEY V6	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
ODYSSEY V6	/	Airbag Control System (SRS)	M9D	Read Live Data	
ODYSSEY V6	/	Airbag Control System (SRS)	M9D	Parameter Information	
ODYSSEY V6	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
ODYSSEY V6	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
ODYSSEY V6	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
ODYSSEY V6	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
ODYSSEY V6	/	Airbag Control System (SRS)	M9D	Function Test	
ODYSSEY V6	/	Airbag Control System (SRS)	M9D	System Information	
ODYSSEY V6	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
ODYSSEY V6	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
ODYSSEY V6	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
ODYSSEY V6	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
ODYSSEY V6	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ODYSSEY V6	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ODYSSEY V6	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ODYSSEY V6	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ODYSSEY V6	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ODYSSEY V6	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ODYSSEY V6	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ODYSSEY V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ODYSSEY V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ODYSSEY V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ODYSSEY V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
ODYSSEY V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ODYSSEY V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ODYSSEY V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ODYSSEY V6	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
ORTHIA	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
ORTHIA	/	Four-wheel steering control system (4WS)	M52	Read codes	
ORTHIA	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
ORTHIA	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
ORTHIA	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
ORTHIA	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
ORTHIA	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
ORTHIA	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
ORTHIA	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
ORTHIA	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
ORTHIA	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
ORTHIA	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
ORTHIA	/	Automatic shift control system (A/T)	M1E	Read codes	
ORTHIA	/	Automatic shift control system (A/T)	M1E	Erase Codes	
ORTHIA	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
ORTHIA	/	Automatic shift control system (A/T)	M1E	Read Live Data	
ORTHIA	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
ORTHIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
ORTHIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
ORTHIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ORTHIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ORTHIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ORTHIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ORTHIA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
ORTHIA	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
ORTHIA	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
ORTHIA	/	Automatic shift control system (A/T)	M3B	Read codes	
ORTHIA	/	Automatic shift control system (A/T)	M3B	Erase Codes	

ORThIA	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
ORThIA	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
ORThIA	/	Automatic shift control system (A/T)	M3B	Read Live Data	
ORThIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
ORThIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
ORThIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
ORThIA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
ORThIA	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
ORThIA	/	Automatic shift control system (A/T)	M3C	Read codes	
ORThIA	/	Automatic shift control system (A/T)	M3C	Erase Codes	
ORThIA	/	Automatic shift control system (A/T)	M81	Read ECU Information	
ORThIA	/	Automatic shift control system (A/T)	M81	Read codes	
ORThIA	/	Automatic shift control system (A/T)	M81	Erase Codes	
ORThIA	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
ORThIA	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
ORThIA	/	Automatic shift control system (A/T)	M81	Read Live Data	
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
ORThIA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
ORThIA	/	Automatic shift control system (A/T)	M82	Read ECU Information	
ORThIA	/	Automatic shift control system (A/T)	M82	Read codes	
ORThIA	/	Automatic shift control system (A/T)	M82	Erase Codes	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
ORThIA	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
ORThIA	/	Active Engine Control Support System (ACM)	M06	Read codes	
ORThIA	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
ORThIA	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
ORThIA	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
ORThIA	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
ORThIA	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
ORThIA	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
ORThIA	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
ORThIA	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
ORThIA	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
ORThIA	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
ORThIA	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
ORThIA	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
ORThIA	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
ORThIA	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
ORThIA	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
ORThIA	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
ORThIA	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
ORThIA	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
ORThIA	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
ORThIA	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
ORThIA	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
ORThIA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
ORThIA	/	Transmission Control System (AT)	M18	Read ECU Information	
ORThIA	/	Transmission Control System (AT)	M18	Read codes	
ORThIA	/	Transmission Control System (AT)	M18	Erase Codes	
ORThIA	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
ORThIA	/	Transmission Control System (AT)	M18	Read Live Data	
ORThIA	/	Transmission Control System (AT)	M18	Adjustment	

ORTHIA	/	Active Torque Converter Control System (ATTS)	MOE	Read ECU Information	
ORTHIA	/	Active Torque Converter Control System (ATTS)	MOE	Read codes	
ORTHIA	/	Active Torque Converter Control System (ATTS)	MOE	Erase Codes	
ORTHIA	/	Active Torque Converter Control System (ATTS)	MOE	Read Freeze Frame Data	
ORTHIA	/	Active Torque Converter Control System (ATTS)	MOE	Read Live Data	
ORTHIA	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
ORTHIA	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	STEERING ANGLE
ORTHIA	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
ORTHIA	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ALL SENSORS
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
ORTHIA	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
ORTHIA	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
ORTHIA	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
ORTHIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
ORTHIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
ORTHIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
ORTHIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
ORTHIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
ORTHIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
ORTHIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
ORTHIA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
ORTHIA	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
ORTHIA	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
ORTHIA	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
ORTHIA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
ORTHIA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
ORTHIA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
ORTHIA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
ORTHIA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
ORTHIA	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
ORTHIA	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
ORTHIA	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)



ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
ORTHIA	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
ORTHIA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
ORTHIA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
ORTHIA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
ORTHIA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
ORTHIA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
ORTHIA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
ORTHIA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
ORTHIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
ORTHIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
ORTHIA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
ORTHIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
ORTHIA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
ORTHIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
ORTHIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
ORTHIA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
ORTHIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
ORTHIA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
ORTHIA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
ORTHIA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
ORTHIA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	

ORThIA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
ORThIA	/	BODY ELECTRICAL/Security	MFF	Read codes	
ORThIA	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
ORThIA	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
ORThIA	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
ORThIA	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
ORThIA	/	BODY ELECTRICAL/Security	MFF	History Data	
ORThIA	/	BODY ELECTRICAL/Security	MFF	History Clear	
ORThIA	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
ORThIA	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
ORThIA	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
ORThIA	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
ORThIA	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
ORThIA	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
ORThIA	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
ORThIA	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
ORThIA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ORThIA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
ORThIA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
ORThIA	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
ORThIA	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
ORThIA	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
ORThIA	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
ORThIA	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
ORThIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
ORThIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
ORThIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
ORThIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
ORThIA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
ORThIA	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
ORThIA	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
ORThIA	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
ORThIA	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
ORThIA	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
ORThIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
ORThIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
ORThIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
ORThIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
ORThIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
ORThIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
ORThIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
ORThIA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
ORThIA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
ORThIA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
ORThIA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
ORThIA	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
ORThIA	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
ORThIA	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
ORThIA	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
ORThIA	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
ORThIA	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
ORThIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read ECU Information	
ORThIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read codes	
ORThIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Erase Codes	
ORThIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Freeze Frame Data	
ORThIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Live Data	
ORThIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	CMBS (CMS) ACTIVATION HISTORY	
ORThIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	RADAR AIMING
ORThIA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	CMBS Brake
ORThIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read ECU Information	
ORThIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read codes	
ORThIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Erase Codes	
ORThIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Freeze Frame Data	
ORThIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Live Data	
ORThIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	ECMPCM Reset	
ORThIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Lock Solenoid Test
ORThIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Solenoid Tests
ORThIA	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Electrical Oil Pump Activation
ORThIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Read ECU Information	
ORThIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Read codes	
ORThIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Erase Codes	
ORThIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Freeze Frame Data	
ORThIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Live Data	
ORThIA	/	Promise Automatic Transmission Control System (CVT M33	M33	ECMPCM Reset	
ORThIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Inhibitor Solenoid
ORThIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid A (LF)
ORThIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid B (RF)
ORThIA	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Start Clutch Feedback Learn
ORThIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read ECU Information	
ORThIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read codes	
ORThIA	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Erase Codes	

ORTHIA	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
ORTHIA	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
ORTHIA	/	Promise Automatic Transmission Control System (CVT M8D		ECM/PCM Reset	
ORTHIA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
ORTHIA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
ORTHIA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
ORTHIA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
ORTHIA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
ORTHIA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
ORTHIA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
ORTHIA	/	DBW	M34	Read ECU Information	
ORTHIA	/	DBW	M34	Read codes	
ORTHIA	/	DBW	M34	Erase Codes	
ORTHIA	/	DBW	M34	Read Freeze Frame Data	
ORTHIA	/	DBW	M34	Read Live Data	
ORTHIA	/	DBW	M34	Inspection	Idle Speed Adjust
ORTHIA	/	DBW	M34	Inspection	Throttle Test
ORTHIA	/	DBW	M34	ECM Reset	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
ORTHIA	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
ORTHIA	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
ORTHIA	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
ORTHIA	/	Capacitor Control System (EDLC)	M12	Read codes	
ORTHIA	/	Capacitor Control System (EDLC)	M12	Erase Codes	
ORTHIA	/	Capacitor Control System (EDLC)	M12	Read Live Data	
ORTHIA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
ORTHIA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
ORTHIA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
ORTHIA	/	Electronic Brake Control System (EPB)	M1F	Read codes	
ORTHIA	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
ORTHIA	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
ORTHIA	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
ORTHIA	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
ORTHIA	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
ORTHIA	/	Electronic Brake Control System (EPB)	M3E	Read codes	
ORTHIA	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
ORTHIA	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
ORTHIA	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
ORTHIA	/	Electric Powertrain / IMA	M66	Read ECU Information	
ORTHIA	/	Electric Powertrain / IMA	M66	Read codes	
ORTHIA	/	Electric Powertrain / IMA	M66	Erase Codes	
ORTHIA	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
ORTHIA	/	Electric Powertrain / IMA	M66	Read Live Data	

ORTHIA	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
ORTHIA	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
ORTHIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
ORTHIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
ORTHIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
ORTHIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
ORTHIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
ORTHIA	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
ORTHIA	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
ORTHIA	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
ORTHIA	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
ORTHIA	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
ORTHIA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
ORTHIA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
ORTHIA	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
ORTHIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
ORTHIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
ORTHIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
ORTHIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
ORTHIA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
ORTHIA	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
ORTHIA	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
ORTHIA	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
ORTHIA	/	New energy battery (EV)	M44	Read ECU Information	
ORTHIA	/	New energy battery (EV)	M44	Read codes	
ORTHIA	/	New energy battery (EV)	M44	Erase Codes	
ORTHIA	/	New energy battery (EV)	M44	Read Freeze Frame Data	
ORTHIA	/	New energy battery (EV)	M44	Read Live Data	
ORTHIA	/	New energy battery (EV)	M44	Inspection	
ORTHIA	/	New energy battery (EV)	M44	Adjustment	
ORTHIA	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
ORTHIA	/	Electronic vacuum pump (EVPS)	M21	Read codes	
ORTHIA	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
ORTHIA	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
ORTHIA	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
ORTHIA	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
ORTHIA	/	Electronic vacuum pump (EVPS)	M22	Read codes	
ORTHIA	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
ORTHIA	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
ORTHIA	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
ORTHIA	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
ORTHIA	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
ORTHIA	/	FCW LDW	M4E	Read ECU Information	
ORTHIA	/	FCW LDW	M4E	Read codes	
ORTHIA	/	FCW LDW	M4E	Erase Codes	
ORTHIA	/	FCW LDW	M4E	Read Live Data	
ORTHIA	/	FCW LDW	M4E	Function Test	FCW Drive
ORTHIA	/	FCW LDW	M4E	Function Test	Left side lane departure warning
ORTHIA	/	FCW LDW	M4E	Function Test	Right side lane departure warning
ORTHIA	/	FCW LDW	M4E	Function Test	Indicator Drive
ORTHIA	/	FCW LDW	M4E	Adjustment	
ORTHIA	/	Instrument Display System (GAUGE)	M2C	Read codes	
ORTHIA	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
ORTHIA	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Read codes	
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
ORTHIA	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
ORTHIA	/	Anti-lock brake control system (ABS)	M02	Read codes	
ORTHIA	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
ORTHIA	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
ORTHIA	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
ORTHIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA

ORTHIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Read codes	
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
ORTHIA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
ORTHIA	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Read codes	
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
ORTHIA	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
ORTHIA	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
ORTHIA	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
ORTHIA	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
ORTHIA	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
ORTHIA	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
ORTHIA	/	Intelligent Parking Control System (SPS)	M9B	Customize	
ORTHIA	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
ORTHIA	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
ORTHIA	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
ORTHIA	/	Hydraulic booster control system (HBS)	M5F	Read codes	
ORTHIA	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
ORTHIA	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
ORTHIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
ORTHIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
ORTHIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
ORTHIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
ORTHIA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
ORTHIA	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
ORTHIA	/	IMA	M63	Read ECU Information	
ORTHIA	/	IMA	M63	Read codes	
ORTHIA	/	IMA	M63	Erase Codes	
ORTHIA	/	IMA	M63	Read Freeze Frame Data	
ORTHIA	/	IMA	M63	Read Live Data	
ORTHIA	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
ORTHIA	/	IMA	M63	Adjustment	SOC PRESET
ORTHIA	/	IMA	M64	Read ECU Information	
ORTHIA	/	IMA	M64	Read codes	
ORTHIA	/	IMA	M64	Erase Codes	
ORTHIA	/	IMA	M64	Read Freeze Frame Data	
ORTHIA	/	IMA	M64	Read Live Data	
ORTHIA	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
ORTHIA	/	IMA	M64	Adjustment	SOC PRESET
ORTHIA	/	IMA	M65	Read ECU Information	
ORTHIA	/	IMA	M65	Read codes	
ORTHIA	/	IMA	M65	Erase Codes	
ORTHIA	/	IMA	M65	Read Freeze Frame Data	
ORTHIA	/	IMA	M65	Read Live Data	
ORTHIA	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
ORTHIA	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
ORTHIA	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
ORTHIA	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
ORTHIA	/	Intake Sounder Control System (ISC)	M6D	Read codes	
ORTHIA	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
ORTHIA	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
ORTHIA	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
ORTHIA	/	Night Vision System (INVS)	0XB1	Read ECU Information	
ORTHIA	/	Night Vision System (INVS)	0XB1	Read codes	
ORTHIA	/	Night Vision System (INVS)	0XB1	Erase Codes	
ORTHIA	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
ORTHIA	/	Night Vision System (INVS)	0XB1	Read Live Data	
ORTHIA	/	Night Vision System (INVS)	0XB1	Adjustment	
ORTHIA	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
ORTHIA	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
ORTHIA	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
ORTHIA	/	i-SHIFT	0XB0	Read ECU Information	
ORTHIA	/	i-SHIFT	0XB0	Read codes	
ORTHIA	/	i-SHIFT	0XB0	Erase Codes	
ORTHIA	/	i-SHIFT	0XB0	Read Live Data	

ORTHIA	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Read codes	
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Self Check	
ORTHIA	/	Keyless Entry Control System (KAS)	M99	History Data	
ORTHIA	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
ORTHIA	/	Keyless Entry Control System (KAS)	M99	Registration	
ORTHIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
ORTHIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
ORTHIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
ORTHIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
ORTHIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
ORTHIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
ORTHIA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
ORTHIA	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
ORTHIA	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
ORTHIA	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
ORTHIA	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
ORTHIA	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
ORTHIA	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
ORTHIA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
ORTHIA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
ORTHIA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
ORTHIA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
ORTHIA	/	Management ECU Module (ME)	M74	Read ECU Information	
ORTHIA	/	Management ECU Module (ME)	M74	Read codes	
ORTHIA	/	Management ECU Module (ME)	M74	Erase Codes	
ORTHIA	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
ORTHIA	/	Management ECU Module (ME)	M74	Read Live Data	
ORTHIA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
ORTHIA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
ORTHIA	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
ORTHIA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
ORTHIA	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
ORTHIA	/	Multi-view camera system (MVCS)	M7A	Read codes	
ORTHIA	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
ORTHIA	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
ORTHIA	/	Multi-view camera system (MVCS)	M7A	Customization	
ORTHIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
ORTHIA	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
ORTHIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
ORTHIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image

ORTHIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
ORTHIA	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
ORTHIA	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
ORTHIA	/	Power Control Unit (PCU)	M83	Read ECU Information	
ORTHIA	/	Power Control Unit (PCU)	M83	Read codes	
ORTHIA	/	Power Control Unit (PCU)	M83	Erase Codes	
ORTHIA	/	Power Control Unit (PCU)	M83	Read Live Data	
ORTHIA	/	Power Control Unit (PCU)	M83	Self Check	
ORTHIA	/	Power Control Unit (PCU)	M83	History Data	
ORTHIA	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
ORTHIA	/	Engine Control System (PGM-FI)	M23	Read codes	
ORTHIA	/	Engine Control System (PGM-FI)	M23	Erase Codes	
ORTHIA	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
ORTHIA	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
ORTHIA	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
ORTHIA	/	Engine Control System (PGM-FI)	M23	Read Live Data	
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
ORTHIA	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
ORTHIA	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
ORTHIA	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
ORTHIA	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
ORTHIA	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
ORTHIA	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
ORTHIA	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
ORTHIA	/	Engine Control System (PGM-FI)	M50	Read codes	
ORTHIA	/	Engine Control System (PGM-FI)	M50	Erase Codes	
ORTHIA	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
ORTHIA	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
ORTHIA	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
ORTHIA	/	Engine Control System (PGM-FI)	M50	Read Live Data	
ORTHIA	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
ORTHIA	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
ORTHIA	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
ORTHIA	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
ORTHIA	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
ORTHIA	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
ORTHIA	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
ORTHIA	/	Engine Control System (PGM-FI)	M86	Read codes	
ORTHIA	/	Engine Control System (PGM-FI)	M86	Erase Codes	
ORTHIA	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
ORTHIA	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
ORTHIA	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
ORTHIA	/	Engine Control System (PGM-FI)	M86	Read Live Data	
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
ORTHIA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
ORTHIA	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
ORTHIA	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
ORTHIA	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
ORTHIA	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
ORTHIA	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
ORTHIA	/	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
ORTHIA	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	
ORTHIA	/	PSR	M27	Read ECU Information	
ORTHIA	/	PSR	M27	Read codes	
ORTHIA	/	PSR	M27	Erase Codes	
ORTHIA	/	PSR	M27	Read Live Data	
ORTHIA	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
ORTHIA	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	

ORThIA	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
ORThIA	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
ORThIA	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
ORThIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
ORThIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
ORThIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
ORThIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
ORThIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
ORThIA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
ORThIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
ORThIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
ORThIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
ORThIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
ORThIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
ORThIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
ORThIA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
ORThIA	/	Remote starter (RS)	M90	System Check	
ORThIA	/	Remote starter (RS)	M90	HISTORY	
ORThIA	/	Remote starter (RS)	M90	Registration	
ORThIA	/	Seat load cell (SWS)	M6F	Read ECU Information	
ORThIA	/	Seat load cell (SWS)	M6F	Read codes	
ORThIA	/	Seat load cell (SWS)	M6F	Erase Codes	
ORThIA	/	Seat load cell (SWS)	M6F	Read Live Data	
ORThIA	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
ORThIA	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
ORThIA	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
ORThIA	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
ORThIA	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
ORThIA	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
ORThIA	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
ORThIA	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
ORThIA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
ORThIA	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
ORThIA	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
ORThIA	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
ORThIA	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
ORThIA	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
ORThIA	/	Groove track drive unit (SLOT ECU)	M98	History Data	
ORThIA	/	Groove track drive unit (SLOT ECU)	M98	System Information	
ORThIA	/	Airbag Control System (SRS)	M9F	Read ECU Information	
ORThIA	/	Airbag Control System (SRS)	M9F	Read codes	
ORThIA	/	Airbag Control System (SRS)	M9F	Erase Codes	
ORThIA	/	Airbag Control System (SRS)	M9F	Read Live Data	
ORThIA	/	Airbag Control System (SRS)	MA0	Read ECU Information	
ORThIA	/	Airbag Control System (SRS)	MA0	Read codes	
ORThIA	/	Airbag Control System (SRS)	MA0	Erase Codes	
ORThIA	/	Airbag Control System (SRS)	MA0	Read Live Data	
ORThIA	/	Airbag Control System (SRS)	MA1	Read ECU Information	
ORThIA	/	Airbag Control System (SRS)	MA1	Read codes	
ORThIA	/	Airbag Control System (SRS)	MA1	Erase Codes	
ORThIA	/	Airbag Control System (SRS)	MA1	Read Live Data	
ORThIA	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
ORThIA	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
ORThIA	/	Airbag Control System (SRS)	M2A	Read codes	
ORThIA	/	Airbag Control System (SRS)	M2A	Erase Codes	
ORThIA	/	Airbag Control System (SRS)	M2A	Read Live Data	
ORThIA	/	Airbag Control System (SRS)	M9C	Read ECU Information	
ORThIA	/	Airbag Control System (SRS)	M9C	Read codes	
ORThIA	/	Airbag Control System (SRS)	M9C	Erase Codes	
ORThIA	/	Airbag Control System (SRS)	M9C	Read Live Data	
ORThIA	/	Airbag Control System (SRS)	M9D	Read ECU Information	
ORThIA	/	Airbag Control System (SRS)	M9D	Read codes	
ORThIA	/	Airbag Control System (SRS)	M9D	Erase Codes	
ORThIA	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
ORThIA	/	Airbag Control System (SRS)	M9D	Read Live Data	
ORThIA	/	Airbag Control System (SRS)	M9D	Parameter Information	
ORThIA	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
ORThIA	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
ORThIA	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
ORThIA	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)



ORThIA	/	Airbag Control System (SRS)	M9D	Function Test	
ORThIA	/	Airbag Control System (SRS)	M9D	System Information	
ORThIA	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
ORThIA	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
ORThIA	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
ORThIA	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
ORThIA	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
ORThIA	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
ORThIA	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
ORThIA	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
ORThIA	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
ORThIA	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
ORThIA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
ORThIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
ORThIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
ORThIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
ORThIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
ORThIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
ORThIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
ORThIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
ORThIA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
PARTNER	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
PARTNER	/	Four-wheel steering control system (4WS)	M52	Read codes	
PARTNER	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
PARTNER	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
PARTNER	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
PARTNER	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
PARTNER	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
PARTNER	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
PARTNER	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
PARTNER	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
PARTNER	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
PARTNER	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
PARTNER	/	Automatic shift control system (A/T)	M1E	Read codes	
PARTNER	/	Automatic shift control system (A/T)	M1E	Erase Codes	
PARTNER	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
PARTNER	/	Automatic shift control system (A/T)	M1E	Read Live Data	
PARTNER	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
PARTNER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
PARTNER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
PARTNER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
PARTNER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
PARTNER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
PARTNER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
PARTNER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
PARTNER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	
PARTNER	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
PARTNER	/	Automatic shift control system (A/T)	M3B	Read codes	
PARTNER	/	Automatic shift control system (A/T)	M3B	Erase Codes	
PARTNER	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
PARTNER	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
PARTNER	/	Automatic shift control system (A/T)	M3B	Read Live Data	
PARTNER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
PARTNER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
PARTNER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
PARTNER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
PARTNER	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
PARTNER	/	Automatic shift control system (A/T)	M3C	Read codes	
PARTNER	/	Automatic shift control system (A/T)	M3C	Erase Codes	
PARTNER	/	Automatic shift control system (A/T)	M81	Read ECU Information	
PARTNER	/	Automatic shift control system (A/T)	M81	Read codes	
PARTNER	/	Automatic shift control system (A/T)	M81	Erase Codes	
PARTNER	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
PARTNER	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
PARTNER	/	Automatic shift control system (A/T)	M81	Read Live Data	
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
PARTNER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
PARTNER	/	Automatic shift control system (A/T)	M82	Read ECU Information	
PARTNER	/	Automatic shift control system (A/T)	M82	Read codes	
PARTNER	/	Automatic shift control system (A/T)	M82	Erase Codes	

PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Read ECU Information	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Read codes	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Erase Codes	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Read Freeze Frame Data	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Read Live Data	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	Throttle Opening Angle Test
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 1
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 2
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	LIGHT CHECK
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
PARTNER	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
PARTNER	/	Active Engine Control Support System (ACM) M06	Read codes	
PARTNER	/	Active Engine Control Support System (ACM) M06	Erase Codes	
PARTNER	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
PARTNER	/	Active Engine Control Support System (ACM) M06	Read Live Data	
PARTNER	/	Active Engine Control Support System (ACM) M06	ACM Reset	
PARTNER	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
PARTNER	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
PARTNER	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
PARTNER	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
PARTNER	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
PARTNER	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
PARTNER	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
PARTNER	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
PARTNER	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
PARTNER	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
PARTNER	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
PARTNER	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
PARTNER	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
PARTNER	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
PARTNER	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
PARTNER	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
PARTNER	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
PARTNER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
PARTNER	/	Transmission Control System (AT) M18	Read ECU Information	
PARTNER	/	Transmission Control System (AT) M18	Read codes	
PARTNER	/	Transmission Control System (AT) M18	Erase Codes	
PARTNER	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
PARTNER	/	Transmission Control System (AT) M18	Read Live Data	
PARTNER	/	Transmission Control System (AT) M18	Adjustment	
PARTNER	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
PARTNER	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
PARTNER	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
PARTNER	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
PARTNER	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
PARTNER	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
PARTNER	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
PARTNER	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
PARTNER	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
PARTNER	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
PARTNER	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting

PARTNER	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
PARTNER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
PARTNER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
PARTNER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
PARTNER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
PARTNER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
PARTNER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
PARTNER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
PARTNER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
PARTNER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
PARTNER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
PARTNER	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
PARTNER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
PARTNER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
PARTNER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
PARTNER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
PARTNER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
PARTNER	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
PARTNER	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
PARTNER	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
PARTNER	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
PARTNER	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
PARTNER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
PARTNER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
PARTNER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
PARTNER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer

PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
PARTNER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
PARTNER	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
PARTNER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
PARTNER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
PARTNER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
PARTNER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
PARTNER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
PARTNER	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
PARTNER	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
PARTNER	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
PARTNER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
PARTNER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
PARTNER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
PARTNER	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Security	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
PARTNER	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
PARTNER	/	BODY ELECTRICAL/Security	MFF	History Data	
PARTNER	/	BODY ELECTRICAL/Security	MFF	History Clear	
PARTNER	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
PARTNER	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
PARTNER	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
PARTNER	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
PARTNER	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
PARTNER	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
PARTNER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
PARTNER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
PARTNER	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
PARTNER	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
PARTNER	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	

PARTNER	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
PARTNER	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
PARTNER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
PARTNER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
PARTNER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
PARTNER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
PARTNER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
PARTNER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
PARTNER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
PARTNER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
PARTNER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
PARTNER	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
PARTNER	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
PARTNER	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
PARTNER	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
PARTNER	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
PARTNER	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
PARTNER	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
PARTNER	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
PARTNER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
PARTNER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
PARTNER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
PARTNER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
PARTNER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
PARTNER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
PARTNER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
PARTNER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
PARTNER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
PARTNER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
PARTNER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
PARTNER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
PARTNER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
PARTNER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
PARTNER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
PARTNER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
PARTNER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
PARTNER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
PARTNER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
PARTNER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
PARTNER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
PARTNER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
PARTNER	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
PARTNER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
PARTNER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
PARTNER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
PARTNER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
PARTNER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
PARTNER	/	DBW	M34	Read ECU Information	
PARTNER	/	DBW	M34	Read codes	
PARTNER	/	DBW	M34	Erase Codes	
PARTNER	/	DBW	M34	Read Freeze Frame Data	
PARTNER	/	DBW	M34	Read Live Data	
PARTNER	/	DBW	M34	Inspection	Idle Speed Adjust
PARTNER	/	DBW	M34	Inspection	Throttle Test
PARTNER	/	DBW	M34	ECM Reset	
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC TEST
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off

PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
PARTNER	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
PARTNER	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
PARTNER	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
PARTNER	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
PARTNER	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
PARTNER	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
PARTNER	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
PARTNER	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
PARTNER	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
PARTNER	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
PARTNER	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
PARTNER	/	Capacitor Control System (EDLC)	M12	Read codes	
PARTNER	/	Capacitor Control System (EDLC)	M12	Erase Codes	
PARTNER	/	Capacitor Control System (EDLC)	M12	Read Live Data	
PARTNER	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
PARTNER	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
PARTNER	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
PARTNER	/	Electronic Brake Control System (EPB)	M1F	Read codes	
PARTNER	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
PARTNER	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
PARTNER	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
PARTNER	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
PARTNER	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
PARTNER	/	Electronic Brake Control System (EPB)	M3E	Read codes	
PARTNER	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
PARTNER	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
PARTNER	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
PARTNER	/	Electric Powertrain / IMA	M66	Read ECU Information	
PARTNER	/	Electric Powertrain / IMA	M66	Read codes	
PARTNER	/	Electric Powertrain / IMA	M66	Erase Codes	
PARTNER	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
PARTNER	/	Electric Powertrain / IMA	M66	Read Live Data	
PARTNER	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
PARTNER	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
PARTNER	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
PARTNER	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
PARTNER	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
PARTNER	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
PARTNER	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
PARTNER	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
PARTNER	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
PARTNER	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
PARTNER	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
PARTNER	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
PARTNER	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
PARTNER	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
PARTNER	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
PARTNER	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
PARTNER	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
PARTNER	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
PARTNER	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
PARTNER	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
PARTNER	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
PARTNER	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
PARTNER	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
PARTNER	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
PARTNER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
PARTNER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
PARTNER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
PARTNER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
PARTNER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
PARTNER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
PARTNER	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
PARTNER	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	

PARTNER	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
PARTNER	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
PARTNER	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
PARTNER	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
PARTNER	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
PARTNER	/	New energy battery (EV)	M44	Read ECU Information	
PARTNER	/	New energy battery (EV)	M44	Read codes	
PARTNER	/	New energy battery (EV)	M44	Erase Codes	
PARTNER	/	New energy battery (EV)	M44	Read Freeze Frame Data	
PARTNER	/	New energy battery (EV)	M44	Read Live Data	
PARTNER	/	New energy battery (EV)	M44	Inspection	
PARTNER	/	New energy battery (EV)	M44	Adjustment	
PARTNER	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
PARTNER	/	Electronic vacuum pump (EVPS)	M21	Read codes	
PARTNER	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
PARTNER	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
PARTNER	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
PARTNER	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
PARTNER	/	Electronic vacuum pump (EVPS)	M22	Read codes	
PARTNER	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
PARTNER	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
PARTNER	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
PARTNER	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
PARTNER	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
PARTNER	/	FCW LDW	M4E	Read ECU Information	
PARTNER	/	FCW LDW	M4E	Read codes	
PARTNER	/	FCW LDW	M4E	Erase Codes	
PARTNER	/	FCW LDW	M4E	Read Live Data	
PARTNER	/	FCW LDW	M4E	Function Test	FCW Drive
PARTNER	/	FCW LDW	M4E	Function Test	Left side lane departure warning
PARTNER	/	FCW LDW	M4E	Function Test	Right side lane departure warning
PARTNER	/	FCW LDW	M4E	Function Test	Indicator Drive
PARTNER	/	FCW LDW	M4E	Adjustment	
PARTNER	/	Instrument Display System (GAUGE)	M2C	Read codes	
PARTNER	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
PARTNER	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
PARTNER	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
PARTNER	/	Anti-lock brake control system (ABS)	M01	Read codes	
PARTNER	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
PARTNER	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
PARTNER	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
PARTNER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
PARTNER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
PARTNER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
PARTNER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
PARTNER	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
PARTNER	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
PARTNER	/	Anti-lock brake control system (ABS)	M02	Read codes	
PARTNER	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
PARTNER	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
PARTNER	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
PARTNER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
PARTNER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
PARTNER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
PARTNER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
PARTNER	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
PARTNER	/	Anti-lock brake control system (ABS)	M03	Read codes	
PARTNER	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
PARTNER	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
PARTNER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
PARTNER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
PARTNER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
PARTNER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
PARTNER	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
PARTNER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
PARTNER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
PARTNER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
PARTNER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
PARTNER	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
PARTNER	/	Anti-lock brake control system (ABS)	M19	Read codes	
PARTNER	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
PARTNER	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
PARTNER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
PARTNER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
PARTNER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
PARTNER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
PARTNER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
PARTNER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test

PARTNER	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
PARTNER	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
PARTNER	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
PARTNER	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
PARTNER	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
PARTNER	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
PARTNER	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
PARTNER	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
PARTNER	/	Intelligent Parking Control System (SPS)	M9B	Customize	
PARTNER	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
PARTNER	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
PARTNER	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
PARTNER	/	Hydraulic booster control system (HBS)	M5F	Read codes	
PARTNER	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
PARTNER	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
PARTNER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
PARTNER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
PARTNER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
PARTNER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
PARTNER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
PARTNER	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
PARTNER	/	IMA	M63	Read ECU Information	
PARTNER	/	IMA	M63	Read codes	
PARTNER	/	IMA	M63	Erase Codes	
PARTNER	/	IMA	M63	Read Freeze Frame Data	
PARTNER	/	IMA	M63	Read Live Data	
PARTNER	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
PARTNER	/	IMA	M63	Adjustment	SOC PRESET
PARTNER	/	IMA	M64	Read ECU Information	
PARTNER	/	IMA	M64	Read codes	
PARTNER	/	IMA	M64	Erase Codes	
PARTNER	/	IMA	M64	Read Freeze Frame Data	
PARTNER	/	IMA	M64	Read Live Data	
PARTNER	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
PARTNER	/	IMA	M64	Adjustment	SOC PRESET
PARTNER	/	IMA	M65	Read ECU Information	
PARTNER	/	IMA	M65	Read codes	
PARTNER	/	IMA	M65	Erase Codes	
PARTNER	/	IMA	M65	Read Freeze Frame Data	
PARTNER	/	IMA	M65	Read Live Data	
PARTNER	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
PARTNER	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
PARTNER	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
PARTNER	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
PARTNER	/	Intake Sounder Control System (ISC)	M6D	Read codes	
PARTNER	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
PARTNER	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
PARTNER	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
PARTNER	/	Night Vision System (INVS)	0XB1	Read ECU Information	
PARTNER	/	Night Vision System (INVS)	0XB1	Read codes	
PARTNER	/	Night Vision System (INVS)	0XB1	Erase Codes	
PARTNER	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
PARTNER	/	Night Vision System (INVS)	0XB1	Read Live Data	
PARTNER	/	Night Vision System (INVS)	0XB1	Adjustment	
PARTNER	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
PARTNER	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
PARTNER	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
PARTNER	/	i-SHIFT	0XB0	Read ECU Information	
PARTNER	/	i-SHIFT	0XB0	Read codes	
PARTNER	/	i-SHIFT	0XB0	Erase Codes	
PARTNER	/	i-SHIFT	0XB0	Read Live Data	
PARTNER	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
PARTNER	/	Keyless Entry Control System (KAS)	M99	Read codes	
PARTNER	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
PARTNER	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
PARTNER	/	Keyless Entry Control System (KAS)	M99	Self Check	
PARTNER	/	Keyless Entry Control System (KAS)	M99	History Data	
PARTNER	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving



PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
PARTNER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
PARTNER	/	Keyless Entry Control System (KAS)	M99	Registration	
PARTNER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
PARTNER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
PARTNER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
PARTNER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
PARTNER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
PARTNER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
PARTNER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
PARTNER	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
PARTNER	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
PARTNER	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
PARTNER	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
PARTNER	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
PARTNER	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
PARTNER	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
PARTNER	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
PARTNER	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
PARTNER	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
PARTNER	/	Management ECU Module (ME)	M74	Read ECU Information	
PARTNER	/	Management ECU Module (ME)	M74	Read codes	
PARTNER	/	Management ECU Module (ME)	M74	Erase Codes	
PARTNER	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
PARTNER	/	Management ECU Module (ME)	M74	Read Live Data	
PARTNER	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
PARTNER	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
PARTNER	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
PARTNER	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
PARTNER	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
PARTNER	/	Multi-view camera system (MVCS)	M7A	Read codes	
PARTNER	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
PARTNER	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
PARTNER	/	Multi-view camera system (MVCS)	M7A	Customization	
PARTNER	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
PARTNER	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
PARTNER	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
PARTNER	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
PARTNER	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
PARTNER	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
PARTNER	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
PARTNER	/	Power Control Unit (PCU)	M83	Read ECU Information	
PARTNER	/	Power Control Unit (PCU)	M83	Read codes	
PARTNER	/	Power Control Unit (PCU)	M83	Erase Codes	
PARTNER	/	Power Control Unit (PCU)	M83	Read Live Data	
PARTNER	/	Power Control Unit (PCU)	M83	Self Check	
PARTNER	/	Power Control Unit (PCU)	M83	History Data	
PARTNER	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
PARTNER	/	Engine Control System (PGM-FI)	M23	Read codes	
PARTNER	/	Engine Control System (PGM-FI)	M23	Erase Codes	
PARTNER	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
PARTNER	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
PARTNER	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
PARTNER	/	Engine Control System (PGM-FI)	M23	Read Live Data	
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST

PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
PARTNER	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
PARTNER	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
PARTNER	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
PARTNER	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
PARTNER	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
PARTNER	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
PARTNER	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
PARTNER	/	Engine Control System (PGM-FI)	M50	Read codes	
PARTNER	/	Engine Control System (PGM-FI)	M50	Erase Codes	
PARTNER	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
PARTNER	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
PARTNER	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
PARTNER	/	Engine Control System (PGM-FI)	M50	Read Live Data	
PARTNER	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
PARTNER	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
PARTNER	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
PARTNER	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
PARTNER	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
PARTNER	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
PARTNER	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
PARTNER	/	Engine Control System (PGM-FI)	M86	Read codes	
PARTNER	/	Engine Control System (PGM-FI)	M86	Erase Codes	
PARTNER	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
PARTNER	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
PARTNER	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
PARTNER	/	Engine Control System (PGM-FI)	M86	Read Live Data	
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
PARTNER	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
PARTNER	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
PARTNER	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
PARTNER	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
PARTNER	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
PARTNER	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
PARTNER	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
PARTNER	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
PARTNER	/	PSR	M27	Read ECU Information	
PARTNER	/	PSR	M27	Read codes	
PARTNER	/	PSR	M27	Erase Codes	
PARTNER	/	PSR	M27	Read Live Data	
PARTNER	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
PARTNER	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
PARTNER	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
PARTNER	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
PARTNER	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
PARTNER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
PARTNER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
PARTNER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
PARTNER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
PARTNER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
PARTNER	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
PARTNER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
PARTNER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
PARTNER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
PARTNER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
PARTNER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
PARTNER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
PARTNER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
PARTNER	/	Remote starter (RS)	M90	System Check	
PARTNER	/	Remote starter (RS)	M90	HISTORY	
PARTNER	/	Remote starter (RS)	M90	Registration	
PARTNER	/	Seat load cell (SWS)	M6F	Read ECU Information	
PARTNER	/	Seat load cell (SWS)	M6F	Read codes	
PARTNER	/	Seat load cell (SWS)	M6F	Erase Codes	
PARTNER	/	Seat load cell (SWS)	M6F	Read Live Data	
PARTNER	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
PARTNER	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
PARTNER	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
PARTNER	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
PARTNER	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
PARTNER	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
PARTNER	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
PARTNER	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	

PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
PARTNER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
PARTNER	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
PARTNER	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
PARTNER	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
PARTNER	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
PARTNER	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
PARTNER	/	Groove track drive unit (SLOT ECU)	M98	History Data	
PARTNER	/	Groove track drive unit (SLOT ECU)	M98	System Information	
PARTNER	/	Airbag Control System (SRS)	M9F	Read ECU Information	
PARTNER	/	Airbag Control System (SRS)	M9F	Read codes	
PARTNER	/	Airbag Control System (SRS)	M9F	Erase Codes	
PARTNER	/	Airbag Control System (SRS)	M9F	Read Live Data	
PARTNER	/	Airbag Control System (SRS)	MA0	Read ECU Information	
PARTNER	/	Airbag Control System (SRS)	MA0	Read codes	
PARTNER	/	Airbag Control System (SRS)	MA0	Erase Codes	
PARTNER	/	Airbag Control System (SRS)	MA0	Read Live Data	
PARTNER	/	Airbag Control System (SRS)	MA1	Read ECU Information	
PARTNER	/	Airbag Control System (SRS)	MA1	Read codes	
PARTNER	/	Airbag Control System (SRS)	MA1	Erase Codes	
PARTNER	/	Airbag Control System (SRS)	MA1	Read Live Data	
PARTNER	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
PARTNER	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
PARTNER	/	Airbag Control System (SRS)	M2A	Read codes	
PARTNER	/	Airbag Control System (SRS)	M2A	Erase Codes	
PARTNER	/	Airbag Control System (SRS)	M2A	Read Live Data	
PARTNER	/	Airbag Control System (SRS)	M9C	Read ECU Information	
PARTNER	/	Airbag Control System (SRS)	M9C	Read codes	
PARTNER	/	Airbag Control System (SRS)	M9C	Erase Codes	
PARTNER	/	Airbag Control System (SRS)	M9C	Read Live Data	
PARTNER	/	Airbag Control System (SRS)	M9D	Read ECU Information	
PARTNER	/	Airbag Control System (SRS)	M9D	Read codes	
PARTNER	/	Airbag Control System (SRS)	M9D	Erase Codes	
PARTNER	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
PARTNER	/	Airbag Control System (SRS)	M9D	Read Live Data	
PARTNER	/	Airbag Control System (SRS)	M9D	Parameter Information	
PARTNER	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
PARTNER	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
PARTNER	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
PARTNER	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pre-tensioner For CMBS (CMS)
PARTNER	/	Airbag Control System (SRS)	M9D	Function Test	
PARTNER	/	Airbag Control System (SRS)	M9D	System Information	
PARTNER	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
PARTNER	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
PARTNER	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
PARTNER	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
PARTNER	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
PARTNER	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
PARTNER	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
PARTNER	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
PARTNER	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
PARTNER	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
PARTNER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
PARTNER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
PARTNER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
PARTNER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
PARTNER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
PARTNER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
PARTNER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
PARTNER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test

PARTNER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
PILOT	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
PILOT	/	Four-wheel steering control system (4WS)	M52	Read codes	
PILOT	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
PILOT	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
PILOT	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
PILOT	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
PILOT	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
PILOT	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
PILOT	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
PILOT	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
PILOT	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
PILOT	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
PILOT	/	Automatic shift control system (A/T)	M1E	Read codes	
PILOT	/	Automatic shift control system (A/T)	M1E	Erase Codes	
PILOT	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
PILOT	/	Automatic shift control system (A/T)	M1E	Read Live Data	
PILOT	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
PILOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
PILOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
PILOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
PILOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
PILOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
PILOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
PILOT	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
PILOT	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
PILOT	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
PILOT	/	Automatic shift control system (A/T)	M3B	Read codes	
PILOT	/	Automatic shift control system (A/T)	M3B	Erase Codes	
PILOT	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
PILOT	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
PILOT	/	Automatic shift control system (A/T)	M3B	Read Live Data	
PILOT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
PILOT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
PILOT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
PILOT	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
PILOT	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
PILOT	/	Automatic shift control system (A/T)	M3C	Read codes	
PILOT	/	Automatic shift control system (A/T)	M3C	Erase Codes	
PILOT	/	Automatic shift control system (A/T)	M81	Read ECU Information	
PILOT	/	Automatic shift control system (A/T)	M81	Read codes	
PILOT	/	Automatic shift control system (A/T)	M81	Erase Codes	
PILOT	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
PILOT	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
PILOT	/	Automatic shift control system (A/T)	M81	Read Live Data	
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
PILOT	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
PILOT	/	Automatic shift control system (A/T)	M82	Read ECU Information	
PILOT	/	Automatic shift control system (A/T)	M82	Read codes	
PILOT	/	Automatic shift control system (A/T)	M82	Erase Codes	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
PILOT	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
PILOT	/	Active Engine Control Support System (ACM)	M06	Read codes	
PILOT	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
PILOT	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
PILOT	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
PILOT	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
PILOT	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
PILOT	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
PILOT	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
PILOT	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
PILOT	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	

PILOT	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
PILOT	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
PILOT	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
PILOT	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
PILOT	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
PILOT	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
PILOT	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
PILOT	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
PILOT	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
PILOT	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
PILOT	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
PILOT	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
PILOT	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
PILOT	/	Transmission Control System (AT)	M18	Read ECU Information	
PILOT	/	Transmission Control System (AT)	M18	Read codes	
PILOT	/	Transmission Control System (AT)	M18	Erase Codes	
PILOT	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
PILOT	/	Transmission Control System (AT)	M18	Read Live Data	
PILOT	/	Transmission Control System (AT)	M18	Adjustment	
PILOT	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
PILOT	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
PILOT	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
PILOT	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
PILOT	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
PILOT	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
PILOT	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
PILOT	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
PILOT	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
PILOT	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
PILOT	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
PILOT	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
PILOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
PILOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
PILOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
PILOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
PILOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
PILOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
PILOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
PILOT	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
PILOT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
PILOT	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
PILOT	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
PILOT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
PILOT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
PILOT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
PILOT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
PILOT	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
PILOT	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	

PILOT	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
PILOT	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
PILOT	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
PILOT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
PILOT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
PILOT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
PILOT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
PILOT	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
PILOT	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
PILOT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
PILOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
PILOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
PILOT	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
PILOT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
PILOT	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door

PILOT	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
PILOT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
PILOT	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
PILOT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
PILOT	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
PILOT	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
PILOT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Security	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
PILOT	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
PILOT	/	BODY ELECTRICAL/Security	MFF	History Data	
PILOT	/	BODY ELECTRICAL/Security	MFF	History Clear	
PILOT	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
PILOT	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
PILOT	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
PILOT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
PILOT	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
PILOT	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
PILOT	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
PILOT	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
PILOT	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
PILOT	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
PILOT	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
PILOT	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
PILOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
PILOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
PILOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
PILOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
PILOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
PILOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
PILOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
PILOT	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
PILOT	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
PILOT	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
PILOT	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
PILOT	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
PILOT	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
PILOT	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
PILOT	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
PILOT	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
PILOT	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
PILOT	/	Collision Mitigation Brake Control System (CMBS/CM5 M2E)		Read ECU Information	

PILOT	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read codes	
PILOT	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Erase Codes	
PILOT	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read Freeze Frame Data	
PILOT	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read Live Data	
PILOT	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	CMBS (CMS) ACTIVATION HISTORY	
PILOT	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Miscellaneous Test	RADAR AIMING
PILOT	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Miscellaneous Test	CMBS Brake
PILOT	/	Promise Automatic Transmission Control System (CVT M1B	Read ECU Information	
PILOT	/	Promise Automatic Transmission Control System (CVT M1B	Read codes	
PILOT	/	Promise Automatic Transmission Control System (CVT M1B	Erase Codes	
PILOT	/	Promise Automatic Transmission Control System (CVT M1B	Read Freeze Frame Data	
PILOT	/	Promise Automatic Transmission Control System (CVT M1B	Read Live Data	
PILOT	/	Promise Automatic Transmission Control System (CVT M1B	ECMPCM Reset	
PILOT	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Lock Solenoid Test
PILOT	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Solenoid Tests
PILOT	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Electrical Oil Pump Activation
PILOT	/	Promise Automatic Transmission Control System (CVT M33	Read ECU Information	
PILOT	/	Promise Automatic Transmission Control System (CVT M33	Read codes	
PILOT	/	Promise Automatic Transmission Control System (CVT M33	Erase Codes	
PILOT	/	Promise Automatic Transmission Control System (CVT M33	Read Freeze Frame Data	
PILOT	/	Promise Automatic Transmission Control System (CVT M33	Read Live Data	
PILOT	/	Promise Automatic Transmission Control System (CVT M33	ECMPCM Reset	
PILOT	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
PILOT	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
PILOT	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
PILOT	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	Read codes	
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	ECMPCM Reset	
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
PILOT	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
PILOT	/	DBW M34	Read ECU Information	
PILOT	/	DBW M34	Read codes	
PILOT	/	DBW M34	Erase Codes	
PILOT	/	DBW M34	Read Freeze Frame Data	
PILOT	/	DBW M34	Read Live Data	
PILOT	/	DBW M34	Inspection	Idle Speed Adjust
PILOT	/	DBW M34	Inspection	Throttle Test
PILOT	/	DBW M34	ECM Reset	
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
PILOT	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
PILOT	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
PILOT	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
PILOT	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
PILOT	/	Diesel Engine Control System (DIESEL) M37	Read codes	
PILOT	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
PILOT	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
PILOT	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
PILOT	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
PILOT	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
PILOT	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
PILOT	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
PILOT	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
PILOT	/	Diesel Engine Control System (DIESEL) M85	Read codes	
PILOT	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
PILOT	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
PILOT	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
PILOT	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
PILOT	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
PILOT	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
PILOT	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
PILOT	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off



PILOT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
PILOT	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
PILOT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
PILOT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
PILOT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
PILOT	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset *Calculated PM Value'
PILOT	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
PILOT	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
PILOT	/	Capacitor Control System (EDLC)	M12	Read codes	
PILOT	/	Capacitor Control System (EDLC)	M12	Erase Codes	
PILOT	/	Capacitor Control System (EDLC)	M12	Read Live Data	
PILOT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
PILOT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
PILOT	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
PILOT	/	Electronic Brake Control System (EPB)	M1F	Read codes	
PILOT	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
PILOT	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
PILOT	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
PILOT	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
PILOT	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
PILOT	/	Electronic Brake Control System (EPB)	M3E	Read codes	
PILOT	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
PILOT	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
PILOT	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
PILOT	/	Electric Powertrain / IMA	M66	Read ECU Information	
PILOT	/	Electric Powertrain / IMA	M66	Read codes	
PILOT	/	Electric Powertrain / IMA	M66	Erase Codes	
PILOT	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
PILOT	/	Electric Powertrain / IMA	M66	Read Live Data	
PILOT	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
PILOT	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
PILOT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
PILOT	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
PILOT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
PILOT	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
PILOT	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
PILOT	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
PILOT	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
PILOT	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
PILOT	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
PILOT	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
PILOT	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
PILOT	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
PILOT	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
PILOT	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
PILOT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
PILOT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
PILOT	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
PILOT	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
PILOT	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
PILOT	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
PILOT	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
PILOT	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
PILOT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
PILOT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
PILOT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
PILOT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
PILOT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
PILOT	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
PILOT	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
PILOT	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
PILOT	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
PILOT	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
PILOT	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
PILOT	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
PILOT	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
PILOT	/	New energy battery (EV)	M44	Read ECU Information	
PILOT	/	New energy battery (EV)	M44	Read codes	
PILOT	/	New energy battery (EV)	M44	Erase Codes	
PILOT	/	New energy battery (EV)	M44	Read Freeze Frame Data	
PILOT	/	New energy battery (EV)	M44	Read Live Data	
PILOT	/	New energy battery (EV)	M44	Inspection	
PILOT	/	New energy battery (EV)	M44	Adjustment	
PILOT	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
PILOT	/	Electronic vacuum pump (EVPS)	M21	Read codes	
PILOT	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
PILOT	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
PILOT	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
PILOT	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
PILOT	/	Electronic vacuum pump (EVPS)	M22	Read codes	
PILOT	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
PILOT	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
PILOT	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
PILOT	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
PILOT	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
PILOT	/	FCW LDW	M4E	Read ECU Information	
PILOT	/	FCW LDW	M4E	Read codes	
PILOT	/	FCW LDW	M4E	Erase Codes	
PILOT	/	FCW LDW	M4E	Read Live Data	
PILOT	/	FCW LDW	M4E	Function Test	FCW Drive
PILOT	/	FCW LDW	M4E	Function Test	Left side lane departure warning
PILOT	/	FCW LDW	M4E	Function Test	Right side lane departure warning
PILOT	/	FCW LDW	M4E	Function Test	Indicator Drive

PILOT	/	FCW LDW	M4E	Adjustment	
PILOT	/	Instrument Display System (GAUGE)	M2C	Read codes	
PILOT	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
PILOT	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
PILOT	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
PILOT	/	Anti-lock brake control system (ABS)	M01	Read codes	
PILOT	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
PILOT	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
PILOT	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
PILOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
PILOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
PILOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
PILOT	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
PILOT	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
PILOT	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
PILOT	/	Anti-lock brake control system (ABS)	M02	Read codes	
PILOT	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
PILOT	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
PILOT	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
PILOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
PILOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
PILOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
PILOT	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
PILOT	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
PILOT	/	Anti-lock brake control system (ABS)	M03	Read codes	
PILOT	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
PILOT	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
PILOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
PILOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
PILOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
PILOT	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
PILOT	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
PILOT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
PILOT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
PILOT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
PILOT	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
PILOT	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
PILOT	/	Anti-lock brake control system (ABS)	M19	Read codes	
PILOT	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
PILOT	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
PILOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
PILOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
PILOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
PILOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
PILOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
PILOT	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
PILOT	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
PILOT	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
PILOT	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
PILOT	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
PILOT	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
PILOT	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
PILOT	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
PILOT	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
PILOT	/	Intelligent Parking Control System (SPS)	M9B	Customize	
PILOT	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
PILOT	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
PILOT	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
PILOT	/	Hydraulic booster control system (HBS)	M5F	Read codes	
PILOT	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
PILOT	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
PILOT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
PILOT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
PILOT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
PILOT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
PILOT	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
PILOT	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
PILOT	/	IMA	M63	Read ECU Information	
PILOT	/	IMA	M63	Read codes	
PILOT	/	IMA	M63	Erase Codes	
PILOT	/	IMA	M63	Read Freeze Frame Data	
PILOT	/	IMA	M63	Read Live Data	
PILOT	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
PILOT	/	IMA	M63	Adjustment	SOC PRESET
PILOT	/	IMA	M64	Read ECU Information	
PILOT	/	IMA	M64	Read codes	
PILOT	/	IMA	M64	Erase Codes	
PILOT	/	IMA	M64	Read Freeze Frame Data	

PILOT	/	IMA	M64	Read Live Data	
PILOT	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
PILOT	/	IMA	M64	Adjustment	SOC PRESET
PILOT	/	IMA	M65	Read ECU Information	
PILOT	/	IMA	M65	Read codes	
PILOT	/	IMA	M65	Erase Codes	
PILOT	/	IMA	M65	Read Freeze Frame Data	
PILOT	/	IMA	M65	Read Live Data	
PILOT	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
PILOT	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
PILOT	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
PILOT	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
PILOT	/	Intake Sounder Control System (ISC)	M6D	Read codes	
PILOT	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
PILOT	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
PILOT	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
PILOT	/	Night Vision System (INVS)	0XB1	Read ECU Information	
PILOT	/	Night Vision System (INVS)	0XB1	Read codes	
PILOT	/	Night Vision System (INVS)	0XB1	Erase Codes	
PILOT	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
PILOT	/	Night Vision System (INVS)	0XB1	Read Live Data	
PILOT	/	Night Vision System (INVS)	0XB1	Adjustment	
PILOT	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
PILOT	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
PILOT	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
PILOT	/	i-SHIFT	0XB0	Read ECU Information	
PILOT	/	i-SHIFT	0XB0	Read codes	
PILOT	/	i-SHIFT	0XB0	Erase Codes	
PILOT	/	i-SHIFT	0XB0	Read Live Data	
PILOT	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
PILOT	/	Keyless Entry Control System (KAS)	M99	Read codes	
PILOT	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
PILOT	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
PILOT	/	Keyless Entry Control System (KAS)	M99	Self Check	
PILOT	/	Keyless Entry Control System (KAS)	M99	History Data	
PILOT	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMODD Terminal) Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
PILOT	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
PILOT	/	Keyless Entry Control System (KAS)	M99	Registration	
PILOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
PILOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
PILOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
PILOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
PILOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
PILOT	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING

PILOT	/	Electronic Camera Lane Keeping Assist System (LKAS) M70	Miscellaneous Test	VIDEO OUTPUT
PILOT	/	Electronically assisted lane keeping control system (Lk M71	Read ECU Information	
PILOT	/	Electronically assisted lane keeping control system (Lk M71	Read codes	
PILOT	/	Electronically assisted lane keeping control system (Lk M71	Erase Codes	
PILOT	/	Electronically assisted lane keeping control system (Lk M71	Read Freeze Frame Data	
PILOT	/	Electronically assisted lane keeping control system (Lk M71	Read Live Data	
PILOT	/	Electronically assisted lane keeping control system (Lk M71	Adjustment	STEERING REWRITE
PILOT	/	Electronically assisted lane keeping control system (Lk M71	Customize	LDW OFFSET
PILOT	/	Electronically assisted lane keeping control system (Lk M71	Customize	GAIN ADJUST
PILOT	/	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
PILOT	/	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
PILOT	/	Management ECU Module (ME) M74	Read ECU Information	
PILOT	/	Management ECU Module (ME) M74	Read codes	
PILOT	/	Management ECU Module (ME) M74	Erase Codes	
PILOT	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
PILOT	/	Management ECU Module (ME) M74	Read Live Data	
PILOT	/	Multi-view camera and parking assist system (MVC/P, M26	Read ECU Information	
PILOT	/	Multi-view camera and parking assist system (MVC/P, M26	Read codes	
PILOT	/	Multi-view camera and parking assist system (MVC/P, M26	Erase Codes	
PILOT	/	Multi-view camera and parking assist system (MVC/P, M26	Read Live Data	
PILOT	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
PILOT	/	Multi-view camera system (MVCS) M7A	Read codes	
PILOT	/	Multi-view camera system (MVCS) M7A	Erase Codes	
PILOT	/	Multi-view camera system (MVCS) M7A	Read Live Data	
PILOT	/	Multi-view camera system (MVCS) M7A	Customization	
PILOT	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
PILOT	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
PILOT	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
PILOT	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
PILOT	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
PILOT	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
PILOT	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
PILOT	/	Power Control Unit (PCU) M83	Read ECU Information	
PILOT	/	Power Control Unit (PCU) M83	Read codes	
PILOT	/	Power Control Unit (PCU) M83	Erase Codes	
PILOT	/	Power Control Unit (PCU) M83	Read Live Data	
PILOT	/	Power Control Unit (PCU) M83	Self Check	
PILOT	/	Power Control Unit (PCU) M83	History Data	
PILOT	/	Engine Control System (PGM-FI) M23	Read ECU Information	
PILOT	/	Engine Control System (PGM-FI) M23	Read codes	
PILOT	/	Engine Control System (PGM-FI) M23	Erase Codes	
PILOT	/	Engine Control System (PGM-FI) M23	Readiness Codes	
PILOT	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
PILOT	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
PILOT	/	Engine Control System (PGM-FI) M23	Read Live Data	
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
PILOT	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
PILOT	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
PILOT	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
PILOT	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
PILOT	/	Engine Control System (PGM-FI) M23	VIN CHECK	
PILOT	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
PILOT	/	Engine Control System (PGM-FI) M50	Read ECU Information	
PILOT	/	Engine Control System (PGM-FI) M50	Read codes	
PILOT	/	Engine Control System (PGM-FI) M50	Erase Codes	
PILOT	/	Engine Control System (PGM-FI) M50	Readiness Codes	
PILOT	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
PILOT	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
PILOT	/	Engine Control System (PGM-FI) M50	Read Live Data	
PILOT	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
PILOT	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
PILOT	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
PILOT	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
PILOT	/	Engine Control System (PGM-FI) M50	VIN CHECK	
PILOT	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
PILOT	/	Engine Control System (PGM-FI) M86	Read ECU Information	
PILOT	/	Engine Control System (PGM-FI) M86	Read codes	
PILOT	/	Engine Control System (PGM-FI) M86	Erase Codes	
PILOT	/	Engine Control System (PGM-FI) M86	Readiness Codes	
PILOT	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
PILOT	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
PILOT	/	Engine Control System (PGM-FI) M86	Read Live Data	
PILOT	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
PILOT	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
PILOT	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
PILOT	/	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
PILOT	/	Engine Control System (PGM-FI) M86	Inspection	EGR TEST

PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
PILOT	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
PILOT	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
PILOT	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
PILOT	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
PILOT	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
PILOT	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
PILOT	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
PILOT	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
PILOT	/	PSR	M27	Read ECU Information	
PILOT	/	PSR	M27	Read codes	
PILOT	/	PSR	M27	Erase Codes	
PILOT	/	PSR	M27	Read Live Data	
PILOT	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
PILOT	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
PILOT	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
PILOT	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
PILOT	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
PILOT	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
PILOT	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
PILOT	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
PILOT	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
PILOT	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
PILOT	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
PILOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
PILOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
PILOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
PILOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
PILOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
PILOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
PILOT	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
PILOT	/	Remote starter (RS)	M90	System Check	
PILOT	/	Remote starter (RS)	M90	HISTORY	
PILOT	/	Remote starter (RS)	M90	Registration	
PILOT	/	Seat load cell (SWS)	M6F	Read ECU Information	
PILOT	/	Seat load cell (SWS)	M6F	Read codes	
PILOT	/	Seat load cell (SWS)	M6F	Erase Codes	
PILOT	/	Seat load cell (SWS)	M6F	Read Live Data	
PILOT	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
PILOT	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
PILOT	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
PILOT	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
PILOT	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
PILOT	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
PILOT	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
PILOT	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
PILOT	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
PILOT	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
PILOT	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
PILOT	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
PILOT	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
PILOT	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
PILOT	/	Groove track drive unit (SLOT ECU)	M98	History Data	
PILOT	/	Groove track drive unit (SLOT ECU)	M98	System Information	
PILOT	/	Airbag Control System (SRS)	M9F	Read ECU Information	
PILOT	/	Airbag Control System (SRS)	M9F	Read codes	

PILOT	/	Airbag Control System (SRS)	M9F	Erase Codes	
PILOT	/	Airbag Control System (SRS)	M9F	Read Live Data	
PILOT	/	Airbag Control System (SRS)	MA0	Read ECU Information	
PILOT	/	Airbag Control System (SRS)	MA0	Read codes	
PILOT	/	Airbag Control System (SRS)	MA0	Erase Codes	
PILOT	/	Airbag Control System (SRS)	MA0	Read Live Data	
PILOT	/	Airbag Control System (SRS)	MA1	Read ECU Information	
PILOT	/	Airbag Control System (SRS)	MA1	Read codes	
PILOT	/	Airbag Control System (SRS)	MA1	Erase Codes	
PILOT	/	Airbag Control System (SRS)	MA1	Read Live Data	
PILOT	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
PILOT	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
PILOT	/	Airbag Control System (SRS)	M2A	Read codes	
PILOT	/	Airbag Control System (SRS)	M2A	Erase Codes	
PILOT	/	Airbag Control System (SRS)	M2A	Read Live Data	
PILOT	/	Airbag Control System (SRS)	M9C	Read ECU Information	
PILOT	/	Airbag Control System (SRS)	M9C	Read codes	
PILOT	/	Airbag Control System (SRS)	M9C	Erase Codes	
PILOT	/	Airbag Control System (SRS)	M9C	Read Live Data	
PILOT	/	Airbag Control System (SRS)	M9D	Read ECU Information	
PILOT	/	Airbag Control System (SRS)	M9D	Read codes	
PILOT	/	Airbag Control System (SRS)	M9D	Erase Codes	
PILOT	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
PILOT	/	Airbag Control System (SRS)	M9D	Read Live Data	
PILOT	/	Airbag Control System (SRS)	M9D	Parameter Information	
PILOT	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
PILOT	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
PILOT	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
PILOT	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
PILOT	/	Airbag Control System (SRS)	M9D	Function Test	
PILOT	/	Airbag Control System (SRS)	M9D	System Information	
PILOT	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
PILOT	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
PILOT	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
PILOT	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
PILOT	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
PILOT	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
PILOT	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
PILOT	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
PILOT	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
PILOT	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
PILOT	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
PILOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
PILOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
PILOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
PILOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
PILOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
PILOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
PILOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
PILOT	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
PRELUDE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
PRELUDE	/	Four-wheel steering control system (4WS)	M52	Read codes	
PRELUDE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
PRELUDE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
PRELUDE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
PRELUDE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
PRELUDE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
PRELUDE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
PRELUDE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
PRELUDE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
PRELUDE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
PRELUDE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
PRELUDE	/	Automatic shift control system (A/T)	M1E	Read codes	
PRELUDE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
PRELUDE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
PRELUDE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
PRELUDE	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
PRELUDE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
PRELUDE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
PRELUDE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
PRELUDE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
PRELUDE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
PRELUDE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
PRELUDE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
PRELUDE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
PRELUDE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
PRELUDE	/	Automatic shift control system (A/T)	M3B	Read codes	
PRELUDE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
PRELUDE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
PRELUDE	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
PRELUDE	/	Automatic shift control system (A/T)	M3B	Read Live Data	

PRELUDE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
PRELUDE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
PRELUDE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
PRELUDE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
PRELUDE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
PRELUDE	/	Automatic shift control system (A/T)	M3C	Read codes	
PRELUDE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
PRELUDE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
PRELUDE	/	Automatic shift control system (A/T)	M81	Read codes	
PRELUDE	/	Automatic shift control system (A/T)	M81	Erase Codes	
PRELUDE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
PRELUDE	/	Automatic shift control system (A/T)	M81	ECMPCMC Reset	
PRELUDE	/	Automatic shift control system (A/T)	M81	Read Live Data	
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
PRELUDE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
PRELUDE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
PRELUDE	/	Automatic shift control system (A/T)	M82	Read codes	
PRELUDE	/	Automatic shift control system (A/T)	M82	Erase Codes	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
PRELUDE	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
PRELUDE	/	Active Engine Control Support System (ACM)	M06	Read codes	
PRELUDE	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
PRELUDE	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
PRELUDE	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
PRELUDE	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
PRELUDE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
PRELUDE	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
PRELUDE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
PRELUDE	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
PRELUDE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
PRELUDE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
PRELUDE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
PRELUDE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
PRELUDE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
PRELUDE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
PRELUDE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
PRELUDE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
PRELUDE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
PRELUDE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
PRELUDE	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
PRELUDE	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
PRELUDE	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
PRELUDE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
PRELUDE	/	Transmission Control System (AT)	M18	Read ECU Information	
PRELUDE	/	Transmission Control System (AT)	M18	Read codes	
PRELUDE	/	Transmission Control System (AT)	M18	Erase Codes	
PRELUDE	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
PRELUDE	/	Transmission Control System (AT)	M18	Read Live Data	
PRELUDE	/	Transmission Control System (AT)	M18	Adjustment	
PRELUDE	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
PRELUDE	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
PRELUDE	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	

PRELUDE	/	Active Torque Converter Control System (ATTS)	MOE	Read Freeze Frame Data	
PRELUDE	/	Active Torque Converter Control System (ATTS)	MOE	Read Live Data	
PRELUDE	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
PRELUDE	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	STEERING ANGLE
PRELUDE	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
PRELUDE	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ALL SENSORS
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
PRELUDE	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
PRELUDE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
PRELUDE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Function Test	Oncoming Vehicle Detection
PRELUDE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Function Test	Preceding Vehicle Detection
PRELUDE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
PRELUDE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
PRELUDE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Reset Operation
PRELUDE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Returning Operation
PRELUDE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Automatic Returning Distance
PRELUDE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Manual Returning Time
PRELUDE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr)	MFF	Adjustment	Reset to default
PRELUDE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
PRELUDE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
PRELUDE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
PRELUDE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
PRELUDE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
PRELUDE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
PRELUDE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
PRELUDE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
PRELUDE	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
PRELUDE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
PRELUDE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)



PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
PRELUDE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
PRELUDE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
PRELUDE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
PRELUDE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
PRELUDE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
PRELUDE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
PRELUDE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
PRELUDE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
PRELUDE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
PRELUDE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
PRELUDE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
PRELUDE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
PRELUDE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
PRELUDE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
PRELUDE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
PRELUDE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
PRELUDE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
PRELUDE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
PRELUDE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
PRELUDE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Security	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	

PRELUDE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
PRELUDE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
PRELUDE	/	BODY ELECTRICAL/Security	MFF	History Data	
PRELUDE	/	BODY ELECTRICAL/Security	MFF	History Clear	
PRELUDE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
PRELUDE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
PRELUDE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
PRELUDE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
PRELUDE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
PRELUDE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
PRELUDE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
PRELUDE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
PRELUDE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
PRELUDE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
PRELUDE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
PRELUDE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
PRELUDE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
PRELUDE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
PRELUDE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
PRELUDE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
PRELUDE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
PRELUDE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
PRELUDE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
PRELUDE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
PRELUDE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
PRELUDE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
PRELUDE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
PRELUDE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
PRELUDE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
PRELUDE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
PRELUDE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
PRELUDE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
PRELUDE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
PRELUDE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
PRELUDE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
PRELUDE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
PRELUDE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
PRELUDE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
PRELUDE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
PRELUDE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
PRELUDE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
PRELUDE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
PRELUDE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
PRELUDE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
PRELUDE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
PRELUDE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
PRELUDE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
PRELUDE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	

PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B	
PRELUDE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P	
PRELUDE	/	DBW	M34	Read ECU Information	
PRELUDE	/	DBW	M34	Read codes	
PRELUDE	/	DBW	M34	Erase Codes	
PRELUDE	/	DBW	M34	Read Freeze Frame Data	
PRELUDE	/	DBW	M34	Read Live Data	
PRELUDE	/	DBW	M34	Inspection	Idle Speed Adjust
PRELUDE	/	DBW	M34	Inspection	Throttle Test
PRELUDE	/	DBW	M34	ECM Reset	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
PRELUDE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
PRELUDE	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
PRELUDE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
PRELUDE	/	Capacitor Control System (EDLC)	M12	Read codes	
PRELUDE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
PRELUDE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
PRELUDE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
PRELUDE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
PRELUDE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
PRELUDE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
PRELUDE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
PRELUDE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
PRELUDE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
PRELUDE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
PRELUDE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
PRELUDE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
PRELUDE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
PRELUDE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
PRELUDE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
PRELUDE	/	Electric Powertrain / IMA	M66	Read ECU Information	
PRELUDE	/	Electric Powertrain / IMA	M66	Read codes	
PRELUDE	/	Electric Powertrain / IMA	M66	Erase Codes	
PRELUDE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
PRELUDE	/	Electric Powertrain / IMA	M66	Read Live Data	
PRELUDE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
PRELUDE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
PRELUDE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	

PRELUDE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
PRELUDE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
PRELUDE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
PRELUDE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
PRELUDE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
PRELUDE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
PRELUDE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
PRELUDE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
PRELUDE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
PRELUDE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
PRELUDE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
PRELUDE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
PRELUDE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
PRELUDE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
PRELUDE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
PRELUDE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
PRELUDE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
PRELUDE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
PRELUDE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
PRELUDE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
PRELUDE	/	New energy battery (EV)	M44	Read ECU Information	
PRELUDE	/	New energy battery (EV)	M44	Read codes	
PRELUDE	/	New energy battery (EV)	M44	Erase Codes	
PRELUDE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
PRELUDE	/	New energy battery (EV)	M44	Read Live Data	
PRELUDE	/	New energy battery (EV)	M44	Inspection	
PRELUDE	/	New energy battery (EV)	M44	Adjustment	
PRELUDE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
PRELUDE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
PRELUDE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
PRELUDE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
PRELUDE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
PRELUDE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
PRELUDE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
PRELUDE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
PRELUDE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
PRELUDE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
PRELUDE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
PRELUDE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
PRELUDE	/	FCW LDW	M4E	Read ECU Information	
PRELUDE	/	FCW LDW	M4E	Read codes	
PRELUDE	/	FCW LDW	M4E	Erase Codes	
PRELUDE	/	FCW LDW	M4E	Read Live Data	
PRELUDE	/	FCW LDW	M4E	Function Test	FCW Drive
PRELUDE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
PRELUDE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
PRELUDE	/	FCW LDW	M4E	Function Test	Indicator Drive
PRELUDE	/	FCW LDW	M4E	Adjustment	
PRELUDE	/	Instrument Display System (GAUGE)	M2C	Read codes	
PRELUDE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
PRELUDE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Read codes	
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Read codes	
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	

PRELUDE	/	Anti-lock brake control system (ABS)	M03	Read codes	
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
PRELUDE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
PRELUDE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Read codes	
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
PRELUDE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
PRELUDE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
PRELUDE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
PRELUDE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
PRELUDE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
PRELUDE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
PRELUDE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
PRELUDE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
PRELUDE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
PRELUDE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
PRELUDE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
PRELUDE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
PRELUDE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
PRELUDE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
PRELUDE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
PRELUDE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
PRELUDE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
PRELUDE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
PRELUDE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
PRELUDE	/	IMA	M63	Read ECU Information	
PRELUDE	/	IMA	M63	Read codes	
PRELUDE	/	IMA	M63	Erase Codes	
PRELUDE	/	IMA	M63	Read Freeze Frame Data	
PRELUDE	/	IMA	M63	Read Live Data	
PRELUDE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
PRELUDE	/	IMA	M63	Adjustment	SOC PRESET
PRELUDE	/	IMA	M64	Read ECU Information	
PRELUDE	/	IMA	M64	Read codes	
PRELUDE	/	IMA	M64	Erase Codes	
PRELUDE	/	IMA	M64	Read Freeze Frame Data	
PRELUDE	/	IMA	M64	Read Live Data	
PRELUDE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
PRELUDE	/	IMA	M64	Adjustment	SOC PRESET
PRELUDE	/	IMA	M65	Read ECU Information	
PRELUDE	/	IMA	M65	Read codes	
PRELUDE	/	IMA	M65	Erase Codes	
PRELUDE	/	IMA	M65	Read Freeze Frame Data	
PRELUDE	/	IMA	M65	Read Live Data	
PRELUDE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
PRELUDE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
PRELUDE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
PRELUDE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
PRELUDE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
PRELUDE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
PRELUDE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
PRELUDE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
PRELUDE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
PRELUDE	/	Night Vision System (INVS)	0XB1	Read codes	
PRELUDE	/	Night Vision System (INVS)	0XB1	Erase Codes	
PRELUDE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
PRELUDE	/	Night Vision System (INVS)	0XB1	Read Live Data	
PRELUDE	/	Night Vision System (INVS)	0XB1	Adjustment	
PRELUDE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
PRELUDE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
PRELUDE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
PRELUDE	/	i-SHIFT	0XB0	Read ECU Information	
PRELUDE	/	i-SHIFT	0XB0	Read codes	
PRELUDE	/	i-SHIFT	0XB0	Erase Codes	
PRELUDE	/	i-SHIFT	0XB0	Read Live Data	
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Read codes	
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	

PRELUDE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Self Check	
PRELUDE	/	Keyless Entry Control System (KAS)	M99	History Data	
PRELUDE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
PRELUDE	/	Keyless Entry Control System (KAS)	M99	Registration	
PRELUDE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
PRELUDE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
PRELUDE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
PRELUDE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
PRELUDE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
PRELUDE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
PRELUDE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
PRELUDE	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
PRELUDE	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
PRELUDE	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
PRELUDE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
PRELUDE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
PRELUDE	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
PRELUDE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
PRELUDE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
PRELUDE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
PRELUDE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
PRELUDE	/	Management ECU Module (ME)	M74	Read ECU Information	
PRELUDE	/	Management ECU Module (ME)	M74	Read codes	
PRELUDE	/	Management ECU Module (ME)	M74	Erase Codes	
PRELUDE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
PRELUDE	/	Management ECU Module (ME)	M74	Read Live Data	
PRELUDE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
PRELUDE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
PRELUDE	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
PRELUDE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
PRELUDE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
PRELUDE	/	Multi-view camera system (MVCS)	M7A	Read codes	
PRELUDE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
PRELUDE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
PRELUDE	/	Multi-view camera system (MVCS)	M7A	Customization	
PRELUDE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
PRELUDE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
PRELUDE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
PRELUDE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
PRELUDE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
PRELUDE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
PRELUDE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function

PRELUDE	/	Power Control Unit (PCU)	M83	Read ECU Information	
PRELUDE	/	Power Control Unit (PCU)	M83	Read codes	
PRELUDE	/	Power Control Unit (PCU)	M83	Erase Codes	
PRELUDE	/	Power Control Unit (PCU)	M83	Read Live Data	
PRELUDE	/	Power Control Unit (PCU)	M83	Self Check	
PRELUDE	/	Power Control Unit (PCU)	M83	History Data	
PRELUDE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
PRELUDE	/	Engine Control System (PGM-FI)	M23	Read codes	
PRELUDE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
PRELUDE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
PRELUDE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
PRELUDE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
PRELUDE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
PRELUDE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
PRELUDE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
PRELUDE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
PRELUDE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
PRELUDE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
PRELUDE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
PRELUDE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
PRELUDE	/	Engine Control System (PGM-FI)	M50	Read codes	
PRELUDE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
PRELUDE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
PRELUDE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
PRELUDE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
PRELUDE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
PRELUDE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
PRELUDE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
PRELUDE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
PRELUDE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
PRELUDE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
PRELUDE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
PRELUDE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
PRELUDE	/	Engine Control System (PGM-FI)	M86	Read codes	
PRELUDE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
PRELUDE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
PRELUDE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
PRELUDE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
PRELUDE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
PRELUDE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
PRELUDE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
PRELUDE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
PRELUDE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
PRELUDE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
PRELUDE	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
PRELUDE	/	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
PRELUDE	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	
PRELUDE	/	PSR	M27	Read ECU Information	
PRELUDE	/	PSR	M27	Read codes	
PRELUDE	/	PSR	M27	Erase Codes	
PRELUDE	/	PSR	M27	Read Live Data	
PRELUDE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
PRELUDE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
PRELUDE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
PRELUDE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
PRELUDE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION

PRELUDE /	Real-time four-wheel drive / intelligent control drive s M3A	Read codes	
PRELUDE /	Real-time four-wheel drive / intelligent control drive s M3A	Erase Codes	
PRELUDE /	Real-time four-wheel drive / intelligent control drive s M3A	Read Freeze Frame Data	
PRELUDE /	Real-time four-wheel drive / intelligent control drive s M3A	Read Live Data	
PRELUDE /	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	E-DPS Control Module Replacement
PRELUDE /	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	Longitudinal G Sensor Learning
PRELUDE /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read ECU Information	
PRELUDE /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read codes	
PRELUDE /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Erase Codes	
PRELUDE /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read Live Data	
PRELUDE /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Adjustment	
PRELUDE /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test	Monitor and Alarm
PRELUDE /	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test	Display Rear Camera output image
PRELUDE /	Remote starter (RS) M90	System Check	
PRELUDE /	Remote starter (RS) M90	HISTORY	
PRELUDE /	Remote starter (RS) M90	Registration	
PRELUDE /	Seat load cell (SWS) M6F	Read ECU Information	
PRELUDE /	Seat load cell (SWS) M6F	Read codes	
PRELUDE /	Seat load cell (SWS) M6F	Erase Codes	
PRELUDE /	Seat load cell (SWS) M6F	Read Live Data	
PRELUDE /	Seat load cell (SWS) M6F	System Check	SWS DTC CHECK
PRELUDE /	Seat load cell (SWS) M6F	System Check	Seat Output Check
PRELUDE /	Seat load cell (SWS) M6F	System Check	AFTER A VEHICLE COLLISION
PRELUDE /	Seat load cell (SWS) M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
PRELUDE /	Seat load cell (SWS) M6F	Adjustment	ODS Unit Initialization
PRELUDE /	Seat load cell (SWS) M6F	Adjustment	OPDS Initialization
PRELUDE /	Seat load cell (SWS) M6F	Adjustment	SWS Initialization
PRELUDE /	Seat load cell (SWS) M6F	Adjustment	E-Pretensioner For CMBS (CMS)
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M29	Read ECU Information	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M29	Read codes	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M29	Erase Codes	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M29	Readiness Codes	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M29	Read Freeze Frame Data	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M29	ECM/PCM Reset	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M29	Read Live Data	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M29	Inspection	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M29	Adjustment	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M29	VIN CHECK	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M29	Replace ECM/PCM	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Read ECU Information	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Read codes	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Erase Codes	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Read Freeze Frame Data	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Read Live Data	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Acceleration Device Test	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Clutch Coil Test	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Differential Torque	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
PRELUDE /	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M ALL Sensor	
PRELUDE /	Groove track drive unit (SLOT ECU) M98	Read ECU Information	
PRELUDE /	Groove track drive unit (SLOT ECU) M98	Read codes	
PRELUDE /	Groove track drive unit (SLOT ECU) M98	Erase Codes	
PRELUDE /	Groove track drive unit (SLOT ECU) M98	Read Live Data	
PRELUDE /	Groove track drive unit (SLOT ECU) M98	Self Check	
PRELUDE /	Groove track drive unit (SLOT ECU) M98	History Data	
PRELUDE /	Groove track drive unit (SLOT ECU) M98	System Information	
PRELUDE /	Airbag Control System (SRS) M9F	Read ECU Information	
PRELUDE /	Airbag Control System (SRS) M9F	Read codes	
PRELUDE /	Airbag Control System (SRS) M9F	Erase Codes	
PRELUDE /	Airbag Control System (SRS) M9F	Read Live Data	
PRELUDE /	Airbag Control System (SRS) MA0	Read ECU Information	
PRELUDE /	Airbag Control System (SRS) MA0	Read codes	
PRELUDE /	Airbag Control System (SRS) MA0	Erase Codes	
PRELUDE /	Airbag Control System (SRS) MA0	Read Live Data	
PRELUDE /	Airbag Control System (SRS) MA1	Read ECU Information	
PRELUDE /	Airbag Control System (SRS) MA1	Read codes	
PRELUDE /	Airbag Control System (SRS) MA1	Erase Codes	
PRELUDE /	Airbag Control System (SRS) MA1	Read Live Data	
PRELUDE /	Airbag Control System (SRS) MA1	Miscellaneous Test	OPDS Initialization
PRELUDE /	Airbag Control System (SRS) MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
PRELUDE /	Airbag Control System (SRS) M2A	Read codes	
PRELUDE /	Airbag Control System (SRS) M2A	Erase Codes	
PRELUDE /	Airbag Control System (SRS) M2A	Read Live Data	
PRELUDE /	Airbag Control System (SRS) M9C	Read ECU Information	
PRELUDE /	Airbag Control System (SRS) M9C	Read codes	
PRELUDE /	Airbag Control System (SRS) M9C	Erase Codes	
PRELUDE /	Airbag Control System (SRS) M9C	Read Live Data	
PRELUDE /	Airbag Control System (SRS) M9D	Read ECU Information	
PRELUDE /	Airbag Control System (SRS) M9D	Read codes	
PRELUDE /	Airbag Control System (SRS) M9D	Erase Codes	
PRELUDE /	Airbag Control System (SRS) M9D	Read Freeze Frame Data	
PRELUDE /	Airbag Control System (SRS) M9D	Read Live Data	
PRELUDE /	Airbag Control System (SRS) M9D	Parameter Information	
PRELUDE /	Airbag Control System (SRS) M9D	CALIBRATION	ODS Unit Initialization
PRELUDE /	Airbag Control System (SRS) M9D	CALIBRATION	OPDS Initialization
PRELUDE /	Airbag Control System (SRS) M9D	CALIBRATION	SWS Initialization
PRELUDE /	Airbag Control System (SRS) M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
PRELUDE /	Airbag Control System (SRS) M9D	Function Test	
PRELUDE /	Airbag Control System (SRS) M9D	System Information	
PRELUDE /	Variable Valve Timing Control System (SVT) MA2	Read ECU Information	



PRELUDE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
PRELUDE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
PRELUDE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
PRELUDE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
PRELUDE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
PRELUDE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
PRELUDE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
PRELUDE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
PRELUDE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
PRELUDE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
PRELUDE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
PRELUDE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
PRELUDE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
PRELUDE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
PRELUDE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
PRELUDE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
PRELUDE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
PRELUDE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
RAFAGA	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
RAFAGA	/	Four-wheel steering control system (4WS)	M52	Read codes	
RAFAGA	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
RAFAGA	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
RAFAGA	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
RAFAGA	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
RAFAGA	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
RAFAGA	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
RAFAGA	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
RAFAGA	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
RAFAGA	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
RAFAGA	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
RAFAGA	/	Automatic shift control system (A/T)	M1E	Read codes	
RAFAGA	/	Automatic shift control system (A/T)	M1E	Erase Codes	
RAFAGA	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
RAFAGA	/	Automatic shift control system (A/T)	M1E	Read Live Data	
RAFAGA	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
RAFAGA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
RAFAGA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
RAFAGA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
RAFAGA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
RAFAGA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
RAFAGA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
RAFAGA	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
RAFAGA	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
RAFAGA	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
RAFAGA	/	Automatic shift control system (A/T)	M3B	Read codes	
RAFAGA	/	Automatic shift control system (A/T)	M3B	Erase Codes	
RAFAGA	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
RAFAGA	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
RAFAGA	/	Automatic shift control system (A/T)	M3B	Read Live Data	
RAFAGA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
RAFAGA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
RAFAGA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
RAFAGA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
RAFAGA	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
RAFAGA	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
RAFAGA	/	Automatic shift control system (A/T)	M3C	Read codes	
RAFAGA	/	Automatic shift control system (A/T)	M3C	Erase Codes	
RAFAGA	/	Automatic shift control system (A/T)	M81	Read ECU Information	
RAFAGA	/	Automatic shift control system (A/T)	M81	Read codes	
RAFAGA	/	Automatic shift control system (A/T)	M81	Erase Codes	
RAFAGA	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
RAFAGA	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
RAFAGA	/	Automatic shift control system (A/T)	M81	Read Live Data	
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
RAFAGA	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
RAFAGA	/	Automatic shift control system (A/T)	M82	Read ECU Information	
RAFAGA	/	Automatic shift control system (A/T)	M82	Read codes	
RAFAGA	/	Automatic shift control system (A/T)	M82	Erase Codes	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	

RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Read Freeze Frame Data	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Read Live Data	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	Throttle Opening Angle Test
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 1
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 2
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	LIGHT CHECK
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
RAFAGA	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
RAFAGA	/	Active Engine Control Support System (ACM) M06	Read codes	
RAFAGA	/	Active Engine Control Support System (ACM) M06	Erase Codes	
RAFAGA	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
RAFAGA	/	Active Engine Control Support System (ACM) M06	Read Live Data	
RAFAGA	/	Active Engine Control Support System (ACM) M06	ACM Reset	
RAFAGA	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
RAFAGA	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
RAFAGA	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
RAFAGA	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
RAFAGA	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
RAFAGA	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
RAFAGA	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
RAFAGA	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
RAFAGA	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
RAFAGA	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
RAFAGA	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
RAFAGA	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
RAFAGA	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
RAFAGA	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
RAFAGA	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
RAFAGA	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
RAFAGA	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
RAFAGA	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
RAFAGA	/	Transmission Control System (AT) M18	Read ECU Information	
RAFAGA	/	Transmission Control System (AT) M18	Read codes	
RAFAGA	/	Transmission Control System (AT) M18	Erase Codes	
RAFAGA	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
RAFAGA	/	Transmission Control System (AT) M18	Read Live Data	
RAFAGA	/	Transmission Control System (AT) M18	Adjustment	
RAFAGA	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
RAFAGA	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
RAFAGA	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
RAFAGA	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
RAFAGA	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
RAFAGA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
RAFAGA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
RAFAGA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
RAFAGA	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
RAFAGA	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
RAFAGA	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
RAFAGA	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	

RAFAGA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes		
RAFAGA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data		
RAFAGA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection	
RAFAGA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection	
RAFAGA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation	
RAFAGA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu	
RAFAGA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation	
RAFAGA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation	
RAFAGA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance	
RAFAGA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time	
RAFAGA	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default	
RAFAGA	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
RAFAGA	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
RAFAGA	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
RAFAGA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
RAFAGA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
RAFAGA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
RAFAGA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
RAFAGA	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
RAFAGA	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
RAFAGA	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
RAFAGA	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
RAFAGA	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
RAFAGA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
RAFAGA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
RAFAGA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
RAFAGA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
RAFAGA	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	

RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
RAFAGA	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
RAFAGA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
RAFAGA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
RAFAGA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
RAFAGA	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
RAFAGA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
RAFAGA	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
RAFAGA	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
RAFAGA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
RAFAGA	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
RAFAGA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
RAFAGA	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
RAFAGA	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
RAFAGA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Security	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
RAFAGA	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
RAFAGA	/	BODY ELECTRICAL/Security	MFF	History Data	
RAFAGA	/	BODY ELECTRICAL/Security	MFF	History Clear	
RAFAGA	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
RAFAGA	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
RAFAGA	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
RAFAGA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
RAFAGA	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
RAFAGA	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
RAFAGA	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
RAFAGA	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
RAFAGA	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
RAFAGA	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
RAFAGA	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
RAFAGA	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
RAFAGA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	

RAFAGA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
RAFAGA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
RAFAGA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
RAFAGA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
RAFAGA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
RAFAGA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
RAFAGA	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
RAFAGA	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
RAFAGA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
RAFAGA	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
RAFAGA	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
RAFAGA	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
RAFAGA	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
RAFAGA	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
RAFAGA	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
RAFAGA	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
RAFAGA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E		Read ECU Information	
RAFAGA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E		Read codes	
RAFAGA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E		Erase Codes	
RAFAGA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E		Read Freeze Frame Data	
RAFAGA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E		Read Live Data	
RAFAGA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E		CMBS (CMS) ACTIVATION HISTORY	
RAFAGA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E		Miscellaneous Test	RADAR AIMING
RAFAGA	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E		Miscellaneous Test	CMBS Brake
RAFAGA	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
RAFAGA	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
RAFAGA	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
RAFAGA	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
RAFAGA	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
RAFAGA	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
RAFAGA	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
RAFAGA	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
RAFAGA	/	DBW	M34	Read ECU Information	
RAFAGA	/	DBW	M34	Read codes	
RAFAGA	/	DBW	M34	Erase Codes	
RAFAGA	/	DBW	M34	Read Freeze Frame Data	
RAFAGA	/	DBW	M34	Read Live Data	
RAFAGA	/	DBW	M34	Inspection	Idle Speed Adjust
RAFAGA	/	DBW	M34	Inspection	Throttle Test
RAFAGA	/	DBW	M34	ECM Reset	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test

RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
RAFAGA	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
RAFAGA	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
RAFAGA	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
RAFAGA	/	Capacitor Control System (EDLC)	M12	Read codes	
RAFAGA	/	Capacitor Control System (EDLC)	M12	Erase Codes	
RAFAGA	/	Capacitor Control System (EDLC)	M12	Read Live Data	
RAFAGA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
RAFAGA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
RAFAGA	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
RAFAGA	/	Electronic Brake Control System (EPB)	M1F	Read codes	
RAFAGA	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
RAFAGA	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
RAFAGA	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
RAFAGA	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
RAFAGA	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
RAFAGA	/	Electronic Brake Control System (EPB)	M3E	Read codes	
RAFAGA	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
RAFAGA	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
RAFAGA	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
RAFAGA	/	Electric Powertrain / IMA	M66	Read ECU Information	
RAFAGA	/	Electric Powertrain / IMA	M66	Read codes	
RAFAGA	/	Electric Powertrain / IMA	M66	Erase Codes	
RAFAGA	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
RAFAGA	/	Electric Powertrain / IMA	M66	Read Live Data	
RAFAGA	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
RAFAGA	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
RAFAGA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
RAFAGA	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
RAFAGA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
RAFAGA	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
RAFAGA	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
RAFAGA	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
RAFAGA	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
RAFAGA	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
RAFAGA	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
RAFAGA	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
RAFAGA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
RAFAGA	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
RAFAGA	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
RAFAGA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
RAFAGA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
RAFAGA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
RAFAGA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
RAFAGA	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
RAFAGA	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
RAFAGA	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	

RAFAGA	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
RAFAGA	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
RAFAGA	/	New energy battery (EV)	M44	Read ECU Information	
RAFAGA	/	New energy battery (EV)	M44	Read codes	
RAFAGA	/	New energy battery (EV)	M44	Erase Codes	
RAFAGA	/	New energy battery (EV)	M44	Read Freeze Frame Data	
RAFAGA	/	New energy battery (EV)	M44	Read Live Data	
RAFAGA	/	New energy battery (EV)	M44	Inspection	
RAFAGA	/	New energy battery (EV)	M44	Adjustment	
RAFAGA	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
RAFAGA	/	Electronic vacuum pump (EVPS)	M21	Read codes	
RAFAGA	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
RAFAGA	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
RAFAGA	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
RAFAGA	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
RAFAGA	/	Electronic vacuum pump (EVPS)	M22	Read codes	
RAFAGA	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
RAFAGA	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
RAFAGA	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
RAFAGA	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
RAFAGA	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
RAFAGA	/	FCW LDW	M4E	Read ECU Information	
RAFAGA	/	FCW LDW	M4E	Read codes	
RAFAGA	/	FCW LDW	M4E	Erase Codes	
RAFAGA	/	FCW LDW	M4E	Read Live Data	
RAFAGA	/	FCW LDW	M4E	Function Test	FCW Drive
RAFAGA	/	FCW LDW	M4E	Function Test	Left side lane departure warning
RAFAGA	/	FCW LDW	M4E	Function Test	Right side lane departure warning
RAFAGA	/	FCW LDW	M4E	Function Test	Indicator Drive
RAFAGA	/	FCW LDW	M4E	Adjustment	
RAFAGA	/	Instrument Display System (GAUGE)	M2C	Read codes	
RAFAGA	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
RAFAGA	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Read codes	
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Read codes	
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Read codes	
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
RAFAGA	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
RAFAGA	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Read codes	
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
RAFAGA	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	

RAFAGA	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
RAFAGA	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
RAFAGA	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
RAFAGA	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
RAFAGA	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
RAFAGA	/	Intelligent Parking Control System (SPS)	M9B	Customize	
RAFAGA	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
RAFAGA	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
RAFAGA	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
RAFAGA	/	Hydraulic booster control system (HBS)	M5F	Read codes	
RAFAGA	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
RAFAGA	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
RAFAGA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
RAFAGA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
RAFAGA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
RAFAGA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
RAFAGA	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
RAFAGA	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
RAFAGA	/	IMA	M63	Read ECU Information	
RAFAGA	/	IMA	M63	Read codes	
RAFAGA	/	IMA	M63	Erase Codes	
RAFAGA	/	IMA	M63	Read Freeze Frame Data	
RAFAGA	/	IMA	M63	Read Live Data	
RAFAGA	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
RAFAGA	/	IMA	M63	Adjustment	SOC PRESET
RAFAGA	/	IMA	M64	Read ECU Information	
RAFAGA	/	IMA	M64	Read codes	
RAFAGA	/	IMA	M64	Erase Codes	
RAFAGA	/	IMA	M64	Read Freeze Frame Data	
RAFAGA	/	IMA	M64	Read Live Data	
RAFAGA	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
RAFAGA	/	IMA	M64	Adjustment	SOC PRESET
RAFAGA	/	IMA	M65	Read ECU Information	
RAFAGA	/	IMA	M65	Read codes	
RAFAGA	/	IMA	M65	Erase Codes	
RAFAGA	/	IMA	M65	Read Freeze Frame Data	
RAFAGA	/	IMA	M65	Read Live Data	
RAFAGA	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
RAFAGA	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
RAFAGA	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
RAFAGA	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
RAFAGA	/	Intake Sounder Control System (ISC)	M6D	Read codes	
RAFAGA	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
RAFAGA	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
RAFAGA	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
RAFAGA	/	Night Vision System (INVS)	0XB1	Read ECU Information	
RAFAGA	/	Night Vision System (INVS)	0XB1	Read codes	
RAFAGA	/	Night Vision System (INVS)	0XB1	Erase Codes	
RAFAGA	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
RAFAGA	/	Night Vision System (INVS)	0XB1	Read Live Data	
RAFAGA	/	Night Vision System (INVS)	0XB1	Adjustment	
RAFAGA	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
RAFAGA	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
RAFAGA	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
RAFAGA	/	i-SHIFT	0XB0	Read ECU Information	
RAFAGA	/	i-SHIFT	0XB0	Read codes	
RAFAGA	/	i-SHIFT	0XB0	Erase Codes	
RAFAGA	/	i-SHIFT	0XB0	Read Live Data	
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Read codes	
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Self Check	
RAFAGA	/	Keyless Entry Control System (KAS)	M99	History Data	
RAFAGA	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna LDC Output



RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
RAFAGA	/	Keyless Entry Control System (KAS)	M99	Registration	
RAFAGA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
RAFAGA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
RAFAGA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
RAFAGA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
RAFAGA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
RAFAGA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
RAFAGA	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
RAFAGA	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
RAFAGA	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
RAFAGA	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
RAFAGA	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
RAFAGA	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
RAFAGA	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
RAFAGA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
RAFAGA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
RAFAGA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
RAFAGA	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
RAFAGA	/	Management ECU Module (ME)	M74	Read ECU Information	
RAFAGA	/	Management ECU Module (ME)	M74	Read codes	
RAFAGA	/	Management ECU Module (ME)	M74	Erase Codes	
RAFAGA	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
RAFAGA	/	Management ECU Module (ME)	M74	Read Live Data	
RAFAGA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
RAFAGA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
RAFAGA	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
RAFAGA	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
RAFAGA	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
RAFAGA	/	Multi-view camera system (MVCS)	M7A	Read codes	
RAFAGA	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
RAFAGA	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
RAFAGA	/	Multi-view camera system (MVCS)	M7A	Customization	
RAFAGA	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
RAFAGA	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
RAFAGA	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
RAFAGA	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
RAFAGA	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
RAFAGA	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
RAFAGA	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
RAFAGA	/	Power Control Unit (PCU)	M83	Read ECU Information	
RAFAGA	/	Power Control Unit (PCU)	M83	Read codes	
RAFAGA	/	Power Control Unit (PCU)	M83	Erase Codes	
RAFAGA	/	Power Control Unit (PCU)	M83	Read Live Data	
RAFAGA	/	Power Control Unit (PCU)	M83	Self Check	
RAFAGA	/	Power Control Unit (PCU)	M83	History Data	
RAFAGA	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
RAFAGA	/	Engine Control System (PGM-FI)	M23	Read codes	
RAFAGA	/	Engine Control System (PGM-FI)	M23	Erase Codes	
RAFAGA	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
RAFAGA	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
RAFAGA	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
RAFAGA	/	Engine Control System (PGM-FI)	M23	Read Live Data	
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
RAFAGA	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
RAFAGA	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN

RAFAGA	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
RAFAGA	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
RAFAGA	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
RAFAGA	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
RAFAGA	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
RAFAGA	/	Engine Control System (PGM-FI)	M50	Read codes	
RAFAGA	/	Engine Control System (PGM-FI)	M50	Erase Codes	
RAFAGA	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
RAFAGA	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
RAFAGA	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
RAFAGA	/	Engine Control System (PGM-FI)	M50	Read Live Data	
RAFAGA	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
RAFAGA	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
RAFAGA	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
RAFAGA	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
RAFAGA	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
RAFAGA	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
RAFAGA	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
RAFAGA	/	Engine Control System (PGM-FI)	M86	Read codes	
RAFAGA	/	Engine Control System (PGM-FI)	M86	Erase Codes	
RAFAGA	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
RAFAGA	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
RAFAGA	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
RAFAGA	/	Engine Control System (PGM-FI)	M86	Read Live Data	
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
RAFAGA	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
RAFAGA	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
RAFAGA	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
RAFAGA	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
RAFAGA	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
RAFAGA	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
RAFAGA	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
RAFAGA	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
RAFAGA	/	PSR	M27	Read ECU Information	
RAFAGA	/	PSR	M27	Read codes	
RAFAGA	/	PSR	M27	Erase Codes	
RAFAGA	/	PSR	M27	Read Live Data	
RAFAGA	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
RAFAGA	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
RAFAGA	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
RAFAGA	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
RAFAGA	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
RAFAGA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
RAFAGA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
RAFAGA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
RAFAGA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
RAFAGA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
RAFAGA	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
RAFAGA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
RAFAGA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
RAFAGA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
RAFAGA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
RAFAGA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
RAFAGA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
RAFAGA	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
RAFAGA	/	Remote starter (RS)	M90	System Check	
RAFAGA	/	Remote starter (RS)	M90	HISTORY	
RAFAGA	/	Remote starter (RS)	M90	Registration	
RAFAGA	/	Seat load cell (SWS)	M6F	Read ECU Information	
RAFAGA	/	Seat load cell (SWS)	M6F	Read codes	
RAFAGA	/	Seat load cell (SWS)	M6F	Erase Codes	
RAFAGA	/	Seat load cell (SWS)	M6F	Read Live Data	
RAFAGA	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
RAFAGA	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
RAFAGA	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
RAFAGA	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
RAFAGA	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
RAFAGA	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
RAFAGA	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
RAFAGA	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	

RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
RAFAGA	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
RAFAGA	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
RAFAGA	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
RAFAGA	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
RAFAGA	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
RAFAGA	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
RAFAGA	/	Groove track drive unit (SLOT ECU)	M98	History Data	
RAFAGA	/	Groove track drive unit (SLOT ECU)	M98	System Information	
RAFAGA	/	Airbag Control System (SRS)	M9F	Read ECU Information	
RAFAGA	/	Airbag Control System (SRS)	M9F	Read codes	
RAFAGA	/	Airbag Control System (SRS)	M9F	Erase Codes	
RAFAGA	/	Airbag Control System (SRS)	M9F	Read Live Data	
RAFAGA	/	Airbag Control System (SRS)	MA0	Read ECU Information	
RAFAGA	/	Airbag Control System (SRS)	MA0	Read codes	
RAFAGA	/	Airbag Control System (SRS)	MA0	Erase Codes	
RAFAGA	/	Airbag Control System (SRS)	MA0	Read Live Data	
RAFAGA	/	Airbag Control System (SRS)	MA1	Read ECU Information	
RAFAGA	/	Airbag Control System (SRS)	MA1	Read codes	
RAFAGA	/	Airbag Control System (SRS)	MA1	Erase Codes	
RAFAGA	/	Airbag Control System (SRS)	MA1	Read Live Data	
RAFAGA	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
RAFAGA	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
RAFAGA	/	Airbag Control System (SRS)	M2A	Read codes	
RAFAGA	/	Airbag Control System (SRS)	M2A	Erase Codes	
RAFAGA	/	Airbag Control System (SRS)	M2A	Read Live Data	
RAFAGA	/	Airbag Control System (SRS)	M9C	Read ECU Information	
RAFAGA	/	Airbag Control System (SRS)	M9C	Read codes	
RAFAGA	/	Airbag Control System (SRS)	M9C	Erase Codes	
RAFAGA	/	Airbag Control System (SRS)	M9C	Read Live Data	
RAFAGA	/	Airbag Control System (SRS)	M9D	Read ECU Information	
RAFAGA	/	Airbag Control System (SRS)	M9D	Read codes	
RAFAGA	/	Airbag Control System (SRS)	M9D	Erase Codes	
RAFAGA	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
RAFAGA	/	Airbag Control System (SRS)	M9D	Read Live Data	
RAFAGA	/	Airbag Control System (SRS)	M9D	Parameter Information	
RAFAGA	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
RAFAGA	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
RAFAGA	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
RAFAGA	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
RAFAGA	/	Airbag Control System (SRS)	M9D	Function Test	
RAFAGA	/	Airbag Control System (SRS)	M9D	System Information	
RAFAGA	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
RAFAGA	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
RAFAGA	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
RAFAGA	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
RAFAGA	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
RAFAGA	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
RAFAGA	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
RAFAGA	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
RAFAGA	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
RAFAGA	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
RAFAGA	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
RAFAGA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
RAFAGA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
RAFAGA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
RAFAGA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
RAFAGA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
RAFAGA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
RAFAGA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
RAFAGA	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
RIDGELINE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
RIDGELINE	/	Four-wheel steering control system (4WS)	M52	Read codes	

RIDGELINE /	Four-wheel steering control system (4WS)	M52	Erase Codes	
RIDGELINE /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
RIDGELINE /	Four-wheel steering control system (4WS)	M52	Read Live Data	
RIDGELINE /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
RIDGELINE /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
RIDGELINE /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
RIDGELINE /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
RIDGELINE /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
RIDGELINE /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
RIDGELINE /	Automatic shift control system (A/T)	M1E	Read ECU Information	
RIDGELINE /	Automatic shift control system (A/T)	M1E	Read codes	
RIDGELINE /	Automatic shift control system (A/T)	M1E	Erase Codes	
RIDGELINE /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
RIDGELINE /	Automatic shift control system (A/T)	M1E	Read Live Data	
RIDGELINE /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
RIDGELINE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
RIDGELINE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
RIDGELINE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
RIDGELINE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
RIDGELINE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
RIDGELINE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
RIDGELINE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
RIDGELINE /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
RIDGELINE /	Automatic shift control system (A/T)	M3B	Read ECU Information	
RIDGELINE /	Automatic shift control system (A/T)	M3B	Read codes	
RIDGELINE /	Automatic shift control system (A/T)	M3B	Erase Codes	
RIDGELINE /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
RIDGELINE /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
RIDGELINE /	Automatic shift control system (A/T)	M3B	Read Live Data	
RIDGELINE /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
RIDGELINE /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
RIDGELINE /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
RIDGELINE /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
RIDGELINE /	Automatic shift control system (A/T)	M3C	Read ECU Information	
RIDGELINE /	Automatic shift control system (A/T)	M3C	Read codes	
RIDGELINE /	Automatic shift control system (A/T)	M3C	Erase Codes	
RIDGELINE /	Automatic shift control system (A/T)	M81	Read ECU Information	
RIDGELINE /	Automatic shift control system (A/T)	M81	Read codes	
RIDGELINE /	Automatic shift control system (A/T)	M81	Erase Codes	
RIDGELINE /	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
RIDGELINE /	Automatic shift control system (A/T)	M81	ECMPCM Reset	
RIDGELINE /	Automatic shift control system (A/T)	M81	Read Live Data	
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
RIDGELINE /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
RIDGELINE /	Automatic shift control system (A/T)	M82	Read ECU Information	
RIDGELINE /	Automatic shift control system (A/T)	M82	Read codes	
RIDGELINE /	Automatic shift control system (A/T)	M82	Erase Codes	
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
RIDGELINE /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
RIDGELINE /	Active Engine Control Support System (ACM)	M06	Read ECU Information	
RIDGELINE /	Active Engine Control Support System (ACM)	M06	Read codes	
RIDGELINE /	Active Engine Control Support System (ACM)	M06	Erase Codes	
RIDGELINE /	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
RIDGELINE /	Active Engine Control Support System (ACM)	M06	Read Live Data	
RIDGELINE /	Active Engine Control Support System (ACM)	M06	ACM Reset	
RIDGELINE /	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
RIDGELINE /	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
RIDGELINE /	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
RIDGELINE /	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
RIDGELINE /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
RIDGELINE /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
RIDGELINE /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
RIDGELINE /	Active / Automatic Shock Absorber Control System (A MOD)		Read ECU Information	

RIDGELINE	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
RIDGELINE	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
RIDGELINE	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
RIDGELINE	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
RIDGELINE	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
RIDGELINE	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
RIDGELINE	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
RIDGELINE	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
RIDGELINE	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
RIDGELINE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
RIDGELINE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
RIDGELINE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
RIDGELINE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
RIDGELINE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
RIDGELINE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
RIDGELINE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
RIDGELINE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
RIDGELINE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
RIDGELINE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
RIDGELINE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
RIDGELINE	/	Transmission Control System (AT) M18	Read ECU Information	
RIDGELINE	/	Transmission Control System (AT) M18	Read codes	
RIDGELINE	/	Transmission Control System (AT) M18	Erase Codes	
RIDGELINE	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
RIDGELINE	/	Transmission Control System (AT) M18	Read Live Data	
RIDGELINE	/	Transmission Control System (AT) M18	Adjustment	
RIDGELINE	/	Active Torque Converter Control System (ATTS) MOE	Read ECU Information	
RIDGELINE	/	Active Torque Converter Control System (ATTS) MOE	Read codes	
RIDGELINE	/	Active Torque Converter Control System (ATTS) MOE	Erase Codes	
RIDGELINE	/	Active Torque Converter Control System (ATTS) MOE	Read Freeze Frame Data	
RIDGELINE	/	Active Torque Converter Control System (ATTS) MOE	Read Live Data	
RIDGELINE	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
RIDGELINE	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	STEERING ANGLE
RIDGELINE	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
RIDGELINE	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	ALL SENSORS
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
RIDGELINE	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
RIDGELINE	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
RIDGELINE	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
RIDGELINE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
RIDGELINE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
RIDGELINE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
RIDGELINE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
RIDGELINE	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
RIDGELINE	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
RIDGELINE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
RIDGELINE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
RIDGELINE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
RIDGELINE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
RIDGELINE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
RIDGELINE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
RIDGELINE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
RIDGELINE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
RIDGELINE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
RIDGELINE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
RIDGELINE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
RIDGELINE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
RIDGELINE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
RIDGELINE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
RIDGELINE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
RIDGELINE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
RIDGELINE	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
RIDGELINE	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
RIDGELINE	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
RIDGELINE	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
RIDGELINE	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
RIDGELINE	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
RIDGELINE	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
RIDGELINE	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
RIDGELINE	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
RIDGELINE	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
RIDGELINE	/	BODY ELECTRICAL/e-Call MFF	Read codes	
RIDGELINE	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
RIDGELINE	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
RIDGELINE	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
RIDGELINE	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
RIDGELINE	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
RIDGELINE	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	

RIDGELINE /	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
RIDGELINE /	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
RIDGELINE /	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
RIDGELINE /	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
RIDGELINE /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
RIDGELINE /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
RIDGELINE /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
RIDGELINE /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
RIDGELINE /	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
RIDGELINE /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
RIDGELINE /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
RIDGELINE /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
RIDGELINE /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
RIDGELINE /	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
RIDGELINE /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
RIDGELINE /	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	

RIDGELINE /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
RIDGELINE /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
RIDGELINE /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
RIDGELINE /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
RIDGELINE /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
RIDGELINE /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
RIDGELINE /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/Security	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Security	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Security	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
RIDGELINE /	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
RIDGELINE /	BODY ELECTRICAL/Security	MFF	History Data	
RIDGELINE /	BODY ELECTRICAL/Security	MFF	History Clear	
RIDGELINE /	BODY ELECTRICAL/Telematics	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
RIDGELINE /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
RIDGELINE /	BODY ELECTRICAL/Wiper	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
RIDGELINE /	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
RIDGELINE /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
RIDGELINE /	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
RIDGELINE /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
RIDGELINE /	BODY ELECTRICAL/YOP Security	MFF	Read codes	
RIDGELINE /	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
RIDGELINE /	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
RIDGELINE /	BODY ELECTRICAL/YOP Security	MFF	History Data	
RIDGELINE /	BODY ELECTRICAL/YOP Security	MFF	History Clear	
RIDGELINE /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
RIDGELINE /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
RIDGELINE /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
RIDGELINE /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
RIDGELINE /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
RIDGELINE /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
RIDGELINE /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
RIDGELINE /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
RIDGELINE /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
RIDGELINE /	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
RIDGELINE /	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
RIDGELINE /	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
RIDGELINE /	Urban Active Brake Control System (CBAS)	M32	Read codes	
RIDGELINE /	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
RIDGELINE /	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
RIDGELINE /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
RIDGELINE /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
RIDGELINE /	Collision Mitigation Brake Control System (CMBS/CM: M2E)		Read ECU Information	
RIDGELINE /	Collision Mitigation Brake Control System (CMBS/CM: M2E)		Read codes	
RIDGELINE /	Collision Mitigation Brake Control System (CMBS/CM: M2E)		Erase Codes	
RIDGELINE /	Collision Mitigation Brake Control System (CMBS/CM: M2E)		Read Freeze Frame Data	

RIDGELINE	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Read Live Data	
RIDGELINE	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	CMBS (CMS) ACTIVATION HISTORY	
RIDGELINE	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Miscellaneous Test	RADAR AIMING
RIDGELINE	/	Collision Mitigation Brake Control System (CMBS/CM# M2E	Miscellaneous Test	CMBS Brake
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M1B	Read ECU Information	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M1B	Read codes	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M1B	Erase Codes	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M1B	Read Freeze Frame Data	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M1B	Read Live Data	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M1B	ECMPCM Reset	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Lock Solenoid Test
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Solenoid Tests
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Electrical Oil Pump Activation
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M33	Read ECU Information	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M33	Read codes	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M33	Erase Codes	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M33	Read Freeze Frame Data	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M33	Read Live Data	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M33	ECMPCM Reset	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	Read codes	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	ECMPCM Reset	
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
RIDGELINE	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
RIDGELINE	/	DBW M34	Read ECU Information	
RIDGELINE	/	DBW M34	Read codes	
RIDGELINE	/	DBW M34	Erase Codes	
RIDGELINE	/	DBW M34	Read Freeze Frame Data	
RIDGELINE	/	DBW M34	Read Live Data	
RIDGELINE	/	DBW M34	Inspection	Idle Speed Adjust
RIDGELINE	/	DBW M34	Inspection	Throttle Test
RIDGELINE	/	DBW M34	ECM Reset	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M37	Read codes	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
RIDGELINE	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
RIDGELINE	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	Read codes	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
RIDGELINE	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status



RIDGELINE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
RIDGELINE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
RIDGELINE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
RIDGELINE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
RIDGELINE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
RIDGELINE	/	Capacitor Control System (EDLC)	M12	Read codes	
RIDGELINE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
RIDGELINE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
RIDGELINE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
RIDGELINE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
RIDGELINE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
RIDGELINE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
RIDGELINE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
RIDGELINE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
RIDGELINE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
RIDGELINE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
RIDGELINE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
RIDGELINE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
RIDGELINE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
RIDGELINE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
RIDGELINE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
RIDGELINE	/	Electric Powertrain / IMA	M66	Read ECU Information	
RIDGELINE	/	Electric Powertrain / IMA	M66	Read codes	
RIDGELINE	/	Electric Powertrain / IMA	M66	Erase Codes	
RIDGELINE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
RIDGELINE	/	Electric Powertrain / IMA	M66	Read Live Data	
RIDGELINE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
RIDGELINE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
RIDGELINE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
RIDGELINE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
RIDGELINE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
RIDGELINE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
RIDGELINE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
RIDGELINE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
RIDGELINE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
RIDGELINE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
RIDGELINE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
RIDGELINE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
RIDGELINE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
RIDGELINE	/	New energy battery (EV)	M44	Read ECU Information	
RIDGELINE	/	New energy battery (EV)	M44	Read codes	
RIDGELINE	/	New energy battery (EV)	M44	Erase Codes	
RIDGELINE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
RIDGELINE	/	New energy battery (EV)	M44	Read Live Data	
RIDGELINE	/	New energy battery (EV)	M44	Inspection	
RIDGELINE	/	New energy battery (EV)	M44	Adjustment	
RIDGELINE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
RIDGELINE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
RIDGELINE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
RIDGELINE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
RIDGELINE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
RIDGELINE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
RIDGELINE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
RIDGELINE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
RIDGELINE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
RIDGELINE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
RIDGELINE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
RIDGELINE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
RIDGELINE	/	FCW LDW	M4E	Read ECU Information	
RIDGELINE	/	FCW LDW	M4E	Read codes	
RIDGELINE	/	FCW LDW	M4E	Erase Codes	
RIDGELINE	/	FCW LDW	M4E	Read Live Data	
RIDGELINE	/	FCW LDW	M4E	Function Test	FCW Drive
RIDGELINE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
RIDGELINE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
RIDGELINE	/	FCW LDW	M4E	Function Test	Indicator Drive
RIDGELINE	/	FCW LDW	M4E	Adjustment	
RIDGELINE	/	Instrument Display System (GAUGE)	M2C	Read codes	
RIDGELINE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	

RIDGELINE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Read codes	
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Read codes	
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Read codes	
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
RIDGELINE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Read codes	
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
RIDGELINE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
RIDGELINE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
RIDGELINE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
RIDGELINE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
RIDGELINE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
RIDGELINE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
RIDGELINE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
RIDGELINE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
RIDGELINE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
RIDGELINE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
RIDGELINE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
RIDGELINE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
RIDGELINE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
RIDGELINE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
RIDGELINE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
RIDGELINE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
RIDGELINE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
RIDGELINE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
RIDGELINE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
RIDGELINE	/	IMA	M63	Read ECU Information	
RIDGELINE	/	IMA	M63	Read codes	
RIDGELINE	/	IMA	M63	Erase Codes	
RIDGELINE	/	IMA	M63	Read Freeze Frame Data	
RIDGELINE	/	IMA	M63	Read Live Data	
RIDGELINE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
RIDGELINE	/	IMA	M63	Adjustment	SOC PRESET
RIDGELINE	/	IMA	M64	Read ECU Information	
RIDGELINE	/	IMA	M64	Read codes	
RIDGELINE	/	IMA	M64	Erase Codes	
RIDGELINE	/	IMA	M64	Read Freeze Frame Data	
RIDGELINE	/	IMA	M64	Read Live Data	
RIDGELINE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
RIDGELINE	/	IMA	M64	Adjustment	SOC PRESET

RIDGELINE	/	IMA	M65	Read ECU Information	
RIDGELINE	/	IMA	M65	Read codes	
RIDGELINE	/	IMA	M65	Erase Codes	
RIDGELINE	/	IMA	M65	Read Freeze Frame Data	
RIDGELINE	/	IMA	M65	Read Live Data	
RIDGELINE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
RIDGELINE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
RIDGELINE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
RIDGELINE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
RIDGELINE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
RIDGELINE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
RIDGELINE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
RIDGELINE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
RIDGELINE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
RIDGELINE	/	Night Vision System (INVS)	0XB1	Read codes	
RIDGELINE	/	Night Vision System (INVS)	0XB1	Erase Codes	
RIDGELINE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
RIDGELINE	/	Night Vision System (INVS)	0XB1	Read Live Data	
RIDGELINE	/	Night Vision System (INVS)	0XB1	Adjustment	
RIDGELINE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
RIDGELINE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
RIDGELINE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
RIDGELINE	/	i-SHIFT	0XB0	Read ECU Information	
RIDGELINE	/	i-SHIFT	0XB0	Read codes	
RIDGELINE	/	i-SHIFT	0XB0	Erase Codes	
RIDGELINE	/	i-SHIFT	0XB0	Read Live Data	
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Read codes	
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Self Check	
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	History Data	
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMODC Terminal) Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
RIDGELINE	/	Keyless Entry Control System (KAS)	M99	Registration	
RIDGELINE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
RIDGELINE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
RIDGELINE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
RIDGELINE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
RIDGELINE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
RIDGELINE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
RIDGELINE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
RIDGELINE	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
RIDGELINE	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	

RIDGELINE	/	Electronically assisted lane keeping control system (Lk M71	Erase Codes	
RIDGELINE	/	Electronically assisted lane keeping control system (Lk M71	Read Freeze Frame Data	
RIDGELINE	/	Electronically assisted lane keeping control system (Lk M71	Read Live Data	
RIDGELINE	/	Electronically assisted lane keeping control system (Lk M71	Adjustment	STEERING REWRITE
RIDGELINE	/	Electronically assisted lane keeping control system (Lk M71	Customize	LDW OFFSET
RIDGELINE	/	Electronically assisted lane keeping control system (Lk M71	Customize	GAIN ADJUST
RIDGELINE	/	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
RIDGELINE	/	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
RIDGELINE	/	Management ECU Module (ME) M74	Read ECU Information	
RIDGELINE	/	Management ECU Module (ME) M74	Read codes	
RIDGELINE	/	Management ECU Module (ME) M74	Erase Codes	
RIDGELINE	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
RIDGELINE	/	Management ECU Module (ME) M74	Read Live Data	
RIDGELINE	/	Multi-view camera and parking assist system (MVC/P, M26	Read ECU Information	
RIDGELINE	/	Multi-view camera and parking assist system (MVC/P, M26	Read codes	
RIDGELINE	/	Multi-view camera and parking assist system (MVC/P, M26	Erase Codes	
RIDGELINE	/	Multi-view camera and parking assist system (MVC/P, M26	Read Live Data	
RIDGELINE	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
RIDGELINE	/	Multi-view camera system (MVCS) M7A	Read codes	
RIDGELINE	/	Multi-view camera system (MVCS) M7A	Erase Codes	
RIDGELINE	/	Multi-view camera system (MVCS) M7A	Read Live Data	
RIDGELINE	/	Multi-view camera system (MVCS) M7A	Customization	
RIDGELINE	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
RIDGELINE	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
RIDGELINE	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
RIDGELINE	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
RIDGELINE	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
RIDGELINE	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
RIDGELINE	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
RIDGELINE	/	Power Control Unit (PCU) M83	Read ECU Information	
RIDGELINE	/	Power Control Unit (PCU) M83	Read codes	
RIDGELINE	/	Power Control Unit (PCU) M83	Erase Codes	
RIDGELINE	/	Power Control Unit (PCU) M83	Read Live Data	
RIDGELINE	/	Power Control Unit (PCU) M83	Self Check	
RIDGELINE	/	Power Control Unit (PCU) M83	History Data	
RIDGELINE	/	Engine Control System (PGM-FI) M23	Read ECU Information	
RIDGELINE	/	Engine Control System (PGM-FI) M23	Read codes	
RIDGELINE	/	Engine Control System (PGM-FI) M23	Erase Codes	
RIDGELINE	/	Engine Control System (PGM-FI) M23	Readiness Codes	
RIDGELINE	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
RIDGELINE	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
RIDGELINE	/	Engine Control System (PGM-FI) M23	Read Live Data	
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
RIDGELINE	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
RIDGELINE	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
RIDGELINE	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
RIDGELINE	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
RIDGELINE	/	Engine Control System (PGM-FI) M23	VIN CHECK	
RIDGELINE	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
RIDGELINE	/	Engine Control System (PGM-FI) M50	Read ECU Information	
RIDGELINE	/	Engine Control System (PGM-FI) M50	Read codes	
RIDGELINE	/	Engine Control System (PGM-FI) M50	Erase Codes	
RIDGELINE	/	Engine Control System (PGM-FI) M50	Readiness Codes	
RIDGELINE	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
RIDGELINE	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
RIDGELINE	/	Engine Control System (PGM-FI) M50	Read Live Data	
RIDGELINE	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
RIDGELINE	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
RIDGELINE	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
RIDGELINE	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
RIDGELINE	/	Engine Control System (PGM-FI) M50	VIN CHECK	
RIDGELINE	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
RIDGELINE	/	Engine Control System (PGM-FI) M86	Read ECU Information	
RIDGELINE	/	Engine Control System (PGM-FI) M86	Read codes	
RIDGELINE	/	Engine Control System (PGM-FI) M86	Erase Codes	
RIDGELINE	/	Engine Control System (PGM-FI) M86	Readiness Codes	
RIDGELINE	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
RIDGELINE	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
RIDGELINE	/	Engine Control System (PGM-FI) M86	Read Live Data	
RIDGELINE	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
RIDGELINE	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
RIDGELINE	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
RIDGELINE	/	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
RIDGELINE	/	Engine Control System (PGM-FI) M86	Inspection	EGR TEST
RIDGELINE	/	Engine Control System (PGM-FI) M86	Inspection	VTEC TEST
RIDGELINE	/	Engine Control System (PGM-FI) M86	Inspection	IACV TEST
RIDGELINE	/	Engine Control System (PGM-FI) M86	Inspection	O2S TEST

RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection	ACM
RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
RIDGELINE /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
RIDGELINE /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
RIDGELINE /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
RIDGELINE /	Engine Control System (PGM-FI)	M86	VIN CHECK	
RIDGELINE /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
RIDGELINE /	Four-wheel precision steering control system (PAWSC M96		Read codes	
RIDGELINE /	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
RIDGELINE /	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
RIDGELINE /	PSR	M27	Read ECU Information	
RIDGELINE /	PSR	M27	Read codes	
RIDGELINE /	PSR	M27	Erase Codes	
RIDGELINE /	PSR	M27	Read Live Data	
RIDGELINE /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
RIDGELINE /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
RIDGELINE /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
RIDGELINE /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
RIDGELINE /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
RIDGELINE /	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
RIDGELINE /	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
RIDGELINE /	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
RIDGELINE /	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
RIDGELINE /	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
RIDGELINE /	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
RIDGELINE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
RIDGELINE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
RIDGELINE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
RIDGELINE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
RIDGELINE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
RIDGELINE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
RIDGELINE /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
RIDGELINE /	Remote starter (RS)	M90	System Check	
RIDGELINE /	Remote starter (RS)	M90	HISTORY	
RIDGELINE /	Remote starter (RS)	M90	Registration	
RIDGELINE /	Seat load cell (SWS)	M6F	Read ECU Information	
RIDGELINE /	Seat load cell (SWS)	M6F	Read codes	
RIDGELINE /	Seat load cell (SWS)	M6F	Erase Codes	
RIDGELINE /	Seat load cell (SWS)	M6F	Read Live Data	
RIDGELINE /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
RIDGELINE /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
RIDGELINE /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
RIDGELINE /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
RIDGELINE /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
RIDGELINE /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
RIDGELINE /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
RIDGELINE /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
RIDGELINE /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
RIDGELINE /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
RIDGELINE /	Groove track drive unit (SLOT ECU)	M98	Read codes	
RIDGELINE /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
RIDGELINE /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
RIDGELINE /	Groove track drive unit (SLOT ECU)	M98	Self Check	
RIDGELINE /	Groove track drive unit (SLOT ECU)	M98	History Data	
RIDGELINE /	Groove track drive unit (SLOT ECU)	M98	System Information	
RIDGELINE /	Airbag Control System (SRS)	M9F	Read ECU Information	
RIDGELINE /	Airbag Control System (SRS)	M9F	Read codes	
RIDGELINE /	Airbag Control System (SRS)	M9F	Erase Codes	
RIDGELINE /	Airbag Control System (SRS)	M9F	Read Live Data	
RIDGELINE /	Airbag Control System (SRS)	MA0	Read ECU Information	

RIDGELINE	/	Airbag Control System (SRS)	MA0	Read codes	
RIDGELINE	/	Airbag Control System (SRS)	MA0	Erase Codes	
RIDGELINE	/	Airbag Control System (SRS)	MA0	Read Live Data	
RIDGELINE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
RIDGELINE	/	Airbag Control System (SRS)	MA1	Read codes	
RIDGELINE	/	Airbag Control System (SRS)	MA1	Erase Codes	
RIDGELINE	/	Airbag Control System (SRS)	MA1	Read Live Data	
RIDGELINE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
RIDGELINE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
RIDGELINE	/	Airbag Control System (SRS)	M2A	Read codes	
RIDGELINE	/	Airbag Control System (SRS)	M2A	Erase Codes	
RIDGELINE	/	Airbag Control System (SRS)	M2A	Read Live Data	
RIDGELINE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
RIDGELINE	/	Airbag Control System (SRS)	M9C	Read codes	
RIDGELINE	/	Airbag Control System (SRS)	M9C	Erase Codes	
RIDGELINE	/	Airbag Control System (SRS)	M9C	Read Live Data	
RIDGELINE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
RIDGELINE	/	Airbag Control System (SRS)	M9D	Read codes	
RIDGELINE	/	Airbag Control System (SRS)	M9D	Erase Codes	
RIDGELINE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
RIDGELINE	/	Airbag Control System (SRS)	M9D	Read Live Data	
RIDGELINE	/	Airbag Control System (SRS)	M9D	Parameter Information	
RIDGELINE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
RIDGELINE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
RIDGELINE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
RIDGELINE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
RIDGELINE	/	Airbag Control System (SRS)	M9D	Function Test	
RIDGELINE	/	Airbag Control System (SRS)	M9D	System Information	
RIDGELINE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
RIDGELINE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
RIDGELINE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
RIDGELINE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
RIDGELINE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
RIDGELINE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
RIDGELINE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
RIDGELINE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
RIDGELINE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
RIDGELINE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
RIDGELINE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
RIDGELINE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
RIDGELINE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
RIDGELINE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
RIDGELINE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
RIDGELINE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
RIDGELINE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
RIDGELINE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
RIDGELINE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
S-MX	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
S-MX	/	Four-wheel steering control system (4WS)	M52	Read codes	
S-MX	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
S-MX	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
S-MX	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
S-MX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
S-MX	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
S-MX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
S-MX	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
S-MX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
S-MX	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
S-MX	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
S-MX	/	Automatic shift control system (A/T)	M1E	Read codes	
S-MX	/	Automatic shift control system (A/T)	M1E	Erase Codes	
S-MX	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
S-MX	/	Automatic shift control system (A/T)	M1E	Read Live Data	
S-MX	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
S-MX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
S-MX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
S-MX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
S-MX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
S-MX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
S-MX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
S-MX	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
S-MX	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
S-MX	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
S-MX	/	Automatic shift control system (A/T)	M3B	Read codes	
S-MX	/	Automatic shift control system (A/T)	M3B	Erase Codes	
S-MX	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
S-MX	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
S-MX	/	Automatic shift control system (A/T)	M3B	Read Live Data	
S-MX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
S-MX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
S-MX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B

S-MX	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
S-MX	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
S-MX	/	Automatic shift control system (A/T)	M3C	Read codes	
S-MX	/	Automatic shift control system (A/T)	M3C	Erase Codes	
S-MX	/	Automatic shift control system (A/T)	M81	Read ECU Information	
S-MX	/	Automatic shift control system (A/T)	M81	Read codes	
S-MX	/	Automatic shift control system (A/T)	M81	Erase Codes	
S-MX	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
S-MX	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
S-MX	/	Automatic shift control system (A/T)	M81	Read Live Data	
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
S-MX	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
S-MX	/	Automatic shift control system (A/T)	M82	Read ECU Information	
S-MX	/	Automatic shift control system (A/T)	M82	Read codes	
S-MX	/	Automatic shift control system (A/T)	M82	Erase Codes	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
S-MX	/	Active Engine Control Support System (ACM) M06	M06	Read ECU Information	
S-MX	/	Active Engine Control Support System (ACM) M06	M06	Read codes	
S-MX	/	Active Engine Control Support System (ACM) M06	M06	Erase Codes	
S-MX	/	Active Engine Control Support System (ACM) M06	M06	Read Freeze Frame Data	
S-MX	/	Active Engine Control Support System (ACM) M06	M06	Read Live Data	
S-MX	/	Active Engine Control Support System (ACM) M06	M06	ACM Reset	
S-MX	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Front ACM Solenoid ON/OFF
S-MX	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Rear ACM Solenoid ON/OFF
S-MX	/	Active Engine Control Support System (ACM) M06	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
S-MX	/	Active Engine Control Support System (ACM) M06	M06	Inspection	ACM Test
S-MX	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Read codes	
S-MX	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Erase Codes	
S-MX	/	Vehicle Acoustic Alarm Control System (AVAS) M10	M10	Read Live Data	
S-MX	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Read ECU Information	
S-MX	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Read codes	
S-MX	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Erase Codes	
S-MX	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Read Freeze Frame Data	
S-MX	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Read Live Data	
S-MX	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Function Test	Damper Force Operation Test
S-MX	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Adjustment	Damper Stroke Calibration
S-MX	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
S-MX	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
S-MX	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
S-MX	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
S-MX	/	Transmission Control System (AT) M18	M18	Read ECU Information	
S-MX	/	Transmission Control System (AT) M18	M18	Read codes	
S-MX	/	Transmission Control System (AT) M18	M18	Erase Codes	
S-MX	/	Transmission Control System (AT) M18	M18	Read Freeze Frame Data	
S-MX	/	Transmission Control System (AT) M18	M18	Read Live Data	
S-MX	/	Transmission Control System (AT) M18	M18	Adjustment	
S-MX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Read ECU Information	
S-MX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Read codes	
S-MX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Erase Codes	
S-MX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Read Freeze Frame Data	
S-MX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Read Live Data	
S-MX	/	Active Torque Converter Control System (ATTS) M0E	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE

S-MX	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	STEERING ANGLE
S-MX	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
S-MX	/	Active Torque Converter Control System (ATTS)	MOE	Miscellaneous Test	ALL SENSORS
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
S-MX	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
S-MX	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
S-MX	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
S-MX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
S-MX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
S-MX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
S-MX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
S-MX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
S-MX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
S-MX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
S-MX	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
S-MX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
S-MX	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
S-MX	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
S-MX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
S-MX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
S-MX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
S-MX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
S-MX	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
S-MX	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
S-MX	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
S-MX	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)



S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
S-MX	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
S-MX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
S-MX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
S-MX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
S-MX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
S-MX	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
S-MX	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
S-MX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
S-MX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
S-MX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
S-MX	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
S-MX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
S-MX	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
S-MX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
S-MX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
S-MX	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
S-MX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
S-MX	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
S-MX	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
S-MX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Security	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
S-MX	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command

S-MX	/	BODY ELECTRICAL/Security	MFF	History Data	
S-MX	/	BODY ELECTRICAL/Security	MFF	History Clear	
S-MX	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
S-MX	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
S-MX	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
S-MX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
S-MX	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
S-MX	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
S-MX	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
S-MX	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
S-MX	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
S-MX	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
S-MX	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
S-MX	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
S-MX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
S-MX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
S-MX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
S-MX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
S-MX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
S-MX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
S-MX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
S-MX	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
S-MX	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
S-MX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
S-MX	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
S-MX	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
S-MX	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
S-MX	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
S-MX	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
S-MX	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
S-MX	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
S-MX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read ECU Information	
S-MX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read codes	
S-MX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Erase Codes	
S-MX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Freeze Frame Data	
S-MX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Live Data	
S-MX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	CMBS (CMS) ACTIVATION HISTORY	
S-MX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	RADAR AIMING
S-MX	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	CMBS Brake
S-MX	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read ECU Information	
S-MX	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read codes	
S-MX	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Erase Codes	
S-MX	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Freeze Frame Data	
S-MX	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Live Data	
S-MX	/	Promise Automatic Transmission Control System (CVT M1B	M1B	ECMPCM Reset	
S-MX	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Lock Solenoid Test
S-MX	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Solenoid Tests
S-MX	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Electrical Oil Pump Activation
S-MX	/	Promise Automatic Transmission Control System (CVT M33	M33	Read ECU Information	
S-MX	/	Promise Automatic Transmission Control System (CVT M33	M33	Read codes	
S-MX	/	Promise Automatic Transmission Control System (CVT M33	M33	Erase Codes	
S-MX	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Freeze Frame Data	
S-MX	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Live Data	
S-MX	/	Promise Automatic Transmission Control System (CVT M33	M33	ECMPCM Reset	
S-MX	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Inhibitor Solenoid
S-MX	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid A (LF)
S-MX	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid B (RF)
S-MX	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Start Clutch Feedback Learn
S-MX	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read ECU Information	
S-MX	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read codes	
S-MX	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Erase Codes	
S-MX	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Freeze Frame Data	
S-MX	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Live Data	
S-MX	/	Promise Automatic Transmission Control System (CVT M8D	M8D	ECMPCM Reset	
S-MX	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Inhibitor Solenoid
S-MX	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid A (LF)
S-MX	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid B (RF)

S-MX	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn	
S-MX	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A	
S-MX	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B	
S-MX	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P	
S-MX	/	DBW	M34	Read ECU Information	
S-MX	/	DBW	M34	Read codes	
S-MX	/	DBW	M34	Erase Codes	
S-MX	/	DBW	M34	Read Freeze Frame Data	
S-MX	/	DBW	M34	Read Live Data	
S-MX	/	DBW	M34	Inspection	Idle Speed Adjust
S-MX	/	DBW	M34	Inspection	Throttle Test
S-MX	/	DBW	M34	ECM Reset	
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
S-MX	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
S-MX	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
S-MX	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
S-MX	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
S-MX	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
S-MX	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
S-MX	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
S-MX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
S-MX	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
S-MX	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
S-MX	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
S-MX	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
S-MX	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
S-MX	/	Capacitor Control System (EDLC)	M12	Read codes	
S-MX	/	Capacitor Control System (EDLC)	M12	Erase Codes	
S-MX	/	Capacitor Control System (EDLC)	M12	Read Live Data	
S-MX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
S-MX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
S-MX	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
S-MX	/	Electronic Brake Control System (EPB)	M1F	Read codes	
S-MX	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
S-MX	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
S-MX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
S-MX	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
S-MX	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
S-MX	/	Electronic Brake Control System (EPB)	M3E	Read codes	
S-MX	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
S-MX	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
S-MX	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
S-MX	/	Electric Powertrain / IMA	M66	Read ECU Information	
S-MX	/	Electric Powertrain / IMA	M66	Read codes	
S-MX	/	Electric Powertrain / IMA	M66	Erase Codes	
S-MX	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
S-MX	/	Electric Powertrain / IMA	M66	Read Live Data	
S-MX	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
S-MX	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
S-MX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
S-MX	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
S-MX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
S-MX	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	

S-MX	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
S-MX	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
S-MX	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
S-MX	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
S-MX	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
S-MX	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
S-MX	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
S-MX	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
S-MX	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
S-MX	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
S-MX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
S-MX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
S-MX	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
S-MX	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
S-MX	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
S-MX	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
S-MX	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
S-MX	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
S-MX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
S-MX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
S-MX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
S-MX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
S-MX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
S-MX	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
S-MX	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
S-MX	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
S-MX	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
S-MX	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
S-MX	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
S-MX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
S-MX	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
S-MX	/	New energy battery (EV)	M44	Read ECU Information	
S-MX	/	New energy battery (EV)	M44	Read codes	
S-MX	/	New energy battery (EV)	M44	Erase Codes	
S-MX	/	New energy battery (EV)	M44	Read Freeze Frame Data	
S-MX	/	New energy battery (EV)	M44	Read Live Data	
S-MX	/	New energy battery (EV)	M44	Inspection	
S-MX	/	New energy battery (EV)	M44	Adjustment	
S-MX	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
S-MX	/	Electronic vacuum pump (EVPS)	M21	Read codes	
S-MX	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
S-MX	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
S-MX	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
S-MX	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
S-MX	/	Electronic vacuum pump (EVPS)	M22	Read codes	
S-MX	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
S-MX	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
S-MX	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
S-MX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
S-MX	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
S-MX	/	FCW LDW	M4E	Read ECU Information	
S-MX	/	FCW LDW	M4E	Read codes	
S-MX	/	FCW LDW	M4E	Erase Codes	
S-MX	/	FCW LDW	M4E	Read Live Data	
S-MX	/	FCW LDW	M4E	Function Test	FCW Drive
S-MX	/	FCW LDW	M4E	Function Test	Left side lane departure warning
S-MX	/	FCW LDW	M4E	Function Test	Right side lane departure warning
S-MX	/	FCW LDW	M4E	Function Test	Indicator Drive
S-MX	/	FCW LDW	M4E	Adjustment	
S-MX	/	Instrument Display System (GAUGE)	M2C	Read codes	
S-MX	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
S-MX	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
S-MX	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
S-MX	/	Anti-lock brake control system (ABS)	M01	Read codes	
S-MX	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
S-MX	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
S-MX	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
S-MX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
S-MX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
S-MX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
S-MX	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
S-MX	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
S-MX	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
S-MX	/	Anti-lock brake control system (ABS)	M02	Read codes	
S-MX	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
S-MX	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
S-MX	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
S-MX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
S-MX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
S-MX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
S-MX	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
S-MX	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
S-MX	/	Anti-lock brake control system (ABS)	M03	Read codes	
S-MX	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
S-MX	/	Anti-lock brake control system (ABS)	M03	Read Live Data	

S-MX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
S-MX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
S-MX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
S-MX	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
S-MX	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
S-MX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
S-MX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
S-MX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
S-MX	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
S-MX	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
S-MX	/	Anti-lock brake control system (ABS)	M19	Read codes	
S-MX	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
S-MX	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
S-MX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
S-MX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
S-MX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
S-MX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
S-MX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
S-MX	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
S-MX	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
S-MX	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
S-MX	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
S-MX	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
S-MX	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
S-MX	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
S-MX	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
S-MX	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
S-MX	/	Intelligent Parking Control System (SPS)	M9B	Customize	
S-MX	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
S-MX	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
S-MX	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
S-MX	/	Hydraulic booster control system (HBS)	M5F	Read codes	
S-MX	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
S-MX	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
S-MX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
S-MX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
S-MX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
S-MX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
S-MX	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
S-MX	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
S-MX	/	IMA	M63	Read ECU Information	
S-MX	/	IMA	M63	Read codes	
S-MX	/	IMA	M63	Erase Codes	
S-MX	/	IMA	M63	Read Freeze Frame Data	
S-MX	/	IMA	M63	Read Live Data	
S-MX	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
S-MX	/	IMA	M63	Adjustment	SOC PRESET
S-MX	/	IMA	M64	Read ECU Information	
S-MX	/	IMA	M64	Read codes	
S-MX	/	IMA	M64	Erase Codes	
S-MX	/	IMA	M64	Read Freeze Frame Data	
S-MX	/	IMA	M64	Read Live Data	
S-MX	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
S-MX	/	IMA	M64	Adjustment	SOC PRESET
S-MX	/	IMA	M65	Read ECU Information	
S-MX	/	IMA	M65	Read codes	
S-MX	/	IMA	M65	Erase Codes	
S-MX	/	IMA	M65	Read Freeze Frame Data	
S-MX	/	IMA	M65	Read Live Data	
S-MX	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
S-MX	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
S-MX	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
S-MX	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
S-MX	/	Intake Sounder Control System (ISC)	M6D	Read codes	
S-MX	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
S-MX	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
S-MX	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
S-MX	/	Night Vision System (INVS)	0XB1	Read ECU Information	
S-MX	/	Night Vision System (INVS)	0XB1	Read codes	
S-MX	/	Night Vision System (INVS)	0XB1	Erase Codes	
S-MX	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
S-MX	/	Night Vision System (INVS)	0XB1	Read Live Data	
S-MX	/	Night Vision System (INVS)	0XB1	Adjustment	
S-MX	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
S-MX	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
S-MX	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
S-MX	/	i-SHIFT	0XB0	Read ECU Information	
S-MX	/	i-SHIFT	0XB0	Read codes	
S-MX	/	i-SHIFT	0XB0	Erase Codes	
S-MX	/	i-SHIFT	0XB0	Read Live Data	
S-MX	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
S-MX	/	Keyless Entry Control System (KAS)	M99	Read codes	
S-MX	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
S-MX	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
S-MX	/	Keyless Entry Control System (KAS)	M99	Self Check	
S-MX	/	Keyless Entry Control System (KAS)	M99	History Data	

S-MX	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC terminal) Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
S-MX	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
S-MX	/	Keyless Entry Control System (KAS)	M99	Registration	
S-MX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
S-MX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
S-MX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
S-MX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
S-MX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
S-MX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
S-MX	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
S-MX	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
S-MX	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
S-MX	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
S-MX	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
S-MX	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
S-MX	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
S-MX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
S-MX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
S-MX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
S-MX	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
S-MX	/	Management ECU Module (ME)	M74	Read ECU Information	
S-MX	/	Management ECU Module (ME)	M74	Read codes	
S-MX	/	Management ECU Module (ME)	M74	Erase Codes	
S-MX	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
S-MX	/	Management ECU Module (ME)	M74	Read Live Data	
S-MX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
S-MX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
S-MX	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
S-MX	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
S-MX	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
S-MX	/	Multi-view camera system (MVCS)	M7A	Read codes	
S-MX	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
S-MX	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
S-MX	/	Multi-view camera system (MVCS)	M7A	Customization	
S-MX	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
S-MX	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
S-MX	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
S-MX	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
S-MX	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
S-MX	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
S-MX	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
S-MX	/	Power Control Unit (PCU)	M83	Read ECU Information	
S-MX	/	Power Control Unit (PCU)	M83	Read codes	
S-MX	/	Power Control Unit (PCU)	M83	Erase Codes	

S-MX	/	Power Control Unit (PCU)	M83	Read Live Data	
S-MX	/	Power Control Unit (PCU)	M83	Self Check	
S-MX	/	Power Control Unit (PCU)	M83	History Data	
S-MX	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
S-MX	/	Engine Control System (PGM-FI)	M23	Read codes	
S-MX	/	Engine Control System (PGM-FI)	M23	Erase Codes	
S-MX	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
S-MX	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
S-MX	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
S-MX	/	Engine Control System (PGM-FI)	M23	Read Live Data	
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
S-MX	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
S-MX	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
S-MX	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
S-MX	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
S-MX	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
S-MX	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
S-MX	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
S-MX	/	Engine Control System (PGM-FI)	M50	Read codes	
S-MX	/	Engine Control System (PGM-FI)	M50	Erase Codes	
S-MX	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
S-MX	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
S-MX	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
S-MX	/	Engine Control System (PGM-FI)	M50	Read Live Data	
S-MX	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
S-MX	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
S-MX	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
S-MX	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
S-MX	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
S-MX	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
S-MX	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
S-MX	/	Engine Control System (PGM-FI)	M86	Read codes	
S-MX	/	Engine Control System (PGM-FI)	M86	Erase Codes	
S-MX	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
S-MX	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
S-MX	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
S-MX	/	Engine Control System (PGM-FI)	M86	Read Live Data	
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
S-MX	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
S-MX	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
S-MX	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
S-MX	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
S-MX	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
S-MX	/	Four-wheel precision steering control system (PAWSC M96)		Read codes	
S-MX	/	Four-wheel precision steering control system (PAWSC M96)		Erase Codes	
S-MX	/	Four-wheel precision steering control system (PAWSC M96)		Read Live Data	
S-MX	/	PSR	M27	Read ECU Information	
S-MX	/	PSR	M27	Read codes	
S-MX	/	PSR	M27	Erase Codes	
S-MX	/	PSR	M27	Read Live Data	
S-MX	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
S-MX	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
S-MX	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
S-MX	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
S-MX	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
S-MX	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
S-MX	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
S-MX	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	

S-MX	/	Real-time four-wheel drive / intelligent control drive s M3A	Read Live Data		
S-MX	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	E-DPS Control Module Replacement	
S-MX	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment	Longitudinal G Sensor Learning	
S-MX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
S-MX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
S-MX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
S-MX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
S-MX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
S-MX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
S-MX	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
S-MX	/	Remote starter (RS)	M90	System Check	
S-MX	/	Remote starter (RS)	M90	HISTORY	
S-MX	/	Remote starter (RS)	M90	Registration	
S-MX	/	Seat load cell (SWS)	M6F	Read ECU Information	
S-MX	/	Seat load cell (SWS)	M6F	Read codes	
S-MX	/	Seat load cell (SWS)	M6F	Erase Codes	
S-MX	/	Seat load cell (SWS)	M6F	Read Live Data	
S-MX	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
S-MX	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
S-MX	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
S-MX	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
S-MX	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
S-MX	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
S-MX	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
S-MX	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
S-MX	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
S-MX	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
S-MX	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
S-MX	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
S-MX	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
S-MX	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
S-MX	/	Groove track drive unit (SLOT ECU)	M98	History Data	
S-MX	/	Groove track drive unit (SLOT ECU)	M98	System Information	
S-MX	/	Airbag Control System (SRS)	M9F	Read ECU Information	
S-MX	/	Airbag Control System (SRS)	M9F	Read codes	
S-MX	/	Airbag Control System (SRS)	M9F	Erase Codes	
S-MX	/	Airbag Control System (SRS)	M9F	Read Live Data	
S-MX	/	Airbag Control System (SRS)	MA0	Read ECU Information	
S-MX	/	Airbag Control System (SRS)	MA0	Read codes	
S-MX	/	Airbag Control System (SRS)	MA0	Erase Codes	
S-MX	/	Airbag Control System (SRS)	MA0	Read Live Data	
S-MX	/	Airbag Control System (SRS)	MA1	Read ECU Information	
S-MX	/	Airbag Control System (SRS)	MA1	Read codes	
S-MX	/	Airbag Control System (SRS)	MA1	Erase Codes	
S-MX	/	Airbag Control System (SRS)	MA1	Read Live Data	
S-MX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
S-MX	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
S-MX	/	Airbag Control System (SRS)	M2A	Read codes	
S-MX	/	Airbag Control System (SRS)	M2A	Erase Codes	
S-MX	/	Airbag Control System (SRS)	M2A	Read Live Data	
S-MX	/	Airbag Control System (SRS)	M9C	Read ECU Information	
S-MX	/	Airbag Control System (SRS)	M9C	Read codes	
S-MX	/	Airbag Control System (SRS)	M9C	Erase Codes	
S-MX	/	Airbag Control System (SRS)	M9C	Read Live Data	
S-MX	/	Airbag Control System (SRS)	M9D	Read ECU Information	
S-MX	/	Airbag Control System (SRS)	M9D	Read codes	
S-MX	/	Airbag Control System (SRS)	M9D	Erase Codes	
S-MX	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
S-MX	/	Airbag Control System (SRS)	M9D	Read Live Data	
S-MX	/	Airbag Control System (SRS)	M9D	Parameter Information	
S-MX	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
S-MX	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
S-MX	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
S-MX	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
S-MX	/	Airbag Control System (SRS)	M9D	Function Test	
S-MX	/	Airbag Control System (SRS)	M9D	System Information	
S-MX	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
S-MX	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
S-MX	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
S-MX	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	



S-MX	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
S-MX	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
S-MX	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
S-MX	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
S-MX	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
S-MX	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
S-MX	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
S-MX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
S-MX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
S-MX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
S-MX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
S-MX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
S-MX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
S-MX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
S-MX	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
S2000	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
S2000	/	Four-wheel steering control system (4WS)	M52	Read codes	
S2000	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
S2000	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
S2000	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
S2000	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
S2000	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
S2000	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
S2000	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
S2000	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
S2000	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
S2000	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
S2000	/	Automatic shift control system (A/T)	M1E	Read codes	
S2000	/	Automatic shift control system (A/T)	M1E	Erase Codes	
S2000	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
S2000	/	Automatic shift control system (A/T)	M1E	Read Live Data	
S2000	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
S2000	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
S2000	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
S2000	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
S2000	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
S2000	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
S2000	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
S2000	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
S2000	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
S2000	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
S2000	/	Automatic shift control system (A/T)	M3B	Read codes	
S2000	/	Automatic shift control system (A/T)	M3B	Erase Codes	
S2000	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
S2000	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
S2000	/	Automatic shift control system (A/T)	M3B	Read Live Data	
S2000	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
S2000	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
S2000	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
S2000	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
S2000	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
S2000	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
S2000	/	Automatic shift control system (A/T)	M3C	Read codes	
S2000	/	Automatic shift control system (A/T)	M3C	Erase Codes	
S2000	/	Automatic shift control system (A/T)	M81	Read ECU Information	
S2000	/	Automatic shift control system (A/T)	M81	Read codes	
S2000	/	Automatic shift control system (A/T)	M81	Erase Codes	
S2000	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
S2000	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
S2000	/	Automatic shift control system (A/T)	M81	Read Live Data	
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
S2000	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFTP Motor Test
S2000	/	Automatic shift control system (A/T)	M82	Read ECU Information	
S2000	/	Automatic shift control system (A/T)	M82	Read codes	
S2000	/	Automatic shift control system (A/T)	M82	Erase Codes	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test

S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 1
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BRAKE BOOSTER 2
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	LIGHT CHECK
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
S2000	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
S2000	/	Active Engine Control Support System (ACM) M06	Read codes	
S2000	/	Active Engine Control Support System (ACM) M06	Erase Codes	
S2000	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
S2000	/	Active Engine Control Support System (ACM) M06	Read Live Data	
S2000	/	Active Engine Control Support System (ACM) M06	ACM Reset	
S2000	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
S2000	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
S2000	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
S2000	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
S2000	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
S2000	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
S2000	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
S2000	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
S2000	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
S2000	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
S2000	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
S2000	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
S2000	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
S2000	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
S2000	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
S2000	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
S2000	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
S2000	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
S2000	/	Transmission Control System (AT) M18	Read ECU Information	
S2000	/	Transmission Control System (AT) M18	Read codes	
S2000	/	Transmission Control System (AT) M18	Erase Codes	
S2000	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
S2000	/	Transmission Control System (AT) M18	Read Live Data	
S2000	/	Transmission Control System (AT) M18	Adjustment	
S2000	/	Active Torque Converter Control System (ATTTS) M0E	Read ECU Information	
S2000	/	Active Torque Converter Control System (ATTTS) M0E	Read codes	
S2000	/	Active Torque Converter Control System (ATTTS) M0E	Erase Codes	
S2000	/	Active Torque Converter Control System (ATTTS) M0E	Read Freeze Frame Data	
S2000	/	Active Torque Converter Control System (ATTTS) M0E	Read Live Data	
S2000	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
S2000	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	STEERING ANGLE
S2000	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
S2000	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	ALL SENSORS
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
S2000	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
S2000	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
S2000	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
S2000	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
S2000	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
S2000	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
S2000	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection

S2000	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection	
S2000	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation	
S2000	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu	
S2000	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation	
S2000	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation	
S2000	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance	
S2000	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time	
S2000	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default	
S2000	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
S2000	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
S2000	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
S2000	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
S2000	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
S2000	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
S2000	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
S2000	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
S2000	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
S2000	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
S2000	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
S2000	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
S2000	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
S2000	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
S2000	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
S2000	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
S2000	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
S2000	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
S2000	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
S2000	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
S2000	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
S2000	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
S2000	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
S2000	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
S2000	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
S2000	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command

S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
S2000	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
S2000	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
S2000	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
S2000	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
S2000	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
S2000	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
S2000	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
S2000	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
S2000	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
S2000	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
S2000	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
S2000	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
S2000	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
S2000	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Security	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
S2000	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
S2000	/	BODY ELECTRICAL/Security	MFF	History Data	
S2000	/	BODY ELECTRICAL/Security	MFF	History Clear	
S2000	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
S2000	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
S2000	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
S2000	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
S2000	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
S2000	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
S2000	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
S2000	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
S2000	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
S2000	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
S2000	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
S2000	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
S2000	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
S2000	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
S2000	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
S2000	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
S2000	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
S2000	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
S2000	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	

S2000	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
S2000	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
S2000	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
S2000	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
S2000	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
S2000	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
S2000	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
S2000	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
S2000	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
S2000	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
S2000	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
S2000	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
S2000	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
S2000	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Read ECU Information	
S2000	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Read codes	
S2000	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Erase Codes	
S2000	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Read Freeze Frame Data	
S2000	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Read Live Data	
S2000	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	CMBS (CMS) ACTIVATION HISTORY	
S2000	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Miscellaneous Test	RADAR AIMING
S2000	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E	M2E	Miscellaneous Test	CMBS Brake
S2000	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read ECU Information	
S2000	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read codes	
S2000	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Erase Codes	
S2000	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Freeze Frame Data	
S2000	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Live Data	
S2000	/	Promise Automatic Transmission Control System (CVT M1B	M1B	ECMPCM Reset	
S2000	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Lock Solenoid Test
S2000	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Solenoid Tests
S2000	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Electrical Oil Pump Activation
S2000	/	Promise Automatic Transmission Control System (CVT M33	M33	Read ECU Information	
S2000	/	Promise Automatic Transmission Control System (CVT M33	M33	Read codes	
S2000	/	Promise Automatic Transmission Control System (CVT M33	M33	Erase Codes	
S2000	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Freeze Frame Data	
S2000	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Live Data	
S2000	/	Promise Automatic Transmission Control System (CVT M33	M33	ECMPCM Reset	
S2000	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Inhibitor Solenoid
S2000	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid A (LF)
S2000	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid B (RF)
S2000	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Start Clutch Feedback Learn
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read ECU Information	
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read codes	
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Erase Codes	
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Freeze Frame Data	
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Live Data	
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	ECMPCM Reset	
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Inhibitor Solenoid
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid A (LF)
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid B (RF)
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Start Clutch Feedback Learn
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve A
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve B
S2000	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve O/P
S2000	/	DBW	M34	Read ECU Information	
S2000	/	DBW	M34	Read codes	
S2000	/	DBW	M34	Erase Codes	
S2000	/	DBW	M34	Read Freeze Frame Data	
S2000	/	DBW	M34	Read Live Data	
S2000	/	DBW	M34	Inspection	Idle Speed Adjust
S2000	/	DBW	M34	Inspection	Throttle Test
S2000	/	DBW	M34	ECM Reset	
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
S2000	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration

S2000	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
S2000	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
S2000	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
S2000	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
S2000	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
S2000	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
S2000	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
S2000	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
S2000	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
S2000	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
S2000	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
S2000	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
S2000	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
S2000	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
S2000	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
S2000	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
S2000	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
S2000	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
S2000	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
S2000	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
S2000	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
S2000	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
S2000	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
S2000	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
S2000	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
S2000	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
S2000	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
S2000	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
S2000	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
S2000	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
S2000	/	Capacitor Control System (EDLC)	M12	Read codes	
S2000	/	Capacitor Control System (EDLC)	M12	Erase Codes	
S2000	/	Capacitor Control System (EDLC)	M12	Read Live Data	
S2000	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
S2000	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
S2000	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
S2000	/	Electronic Brake Control System (EPB)	M1F	Read codes	
S2000	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
S2000	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
S2000	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
S2000	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
S2000	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
S2000	/	Electronic Brake Control System (EPB)	M3E	Read codes	
S2000	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
S2000	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
S2000	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
S2000	/	Electric Powertrain / IMA	M66	Read ECU Information	
S2000	/	Electric Powertrain / IMA	M66	Read codes	
S2000	/	Electric Powertrain / IMA	M66	Erase Codes	
S2000	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
S2000	/	Electric Powertrain / IMA	M66	Read Live Data	
S2000	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
S2000	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
S2000	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
S2000	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
S2000	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
S2000	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
S2000	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
S2000	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
S2000	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
S2000	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
S2000	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
S2000	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
S2000	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
S2000	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
S2000	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
S2000	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
S2000	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
S2000	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
S2000	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
S2000	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
S2000	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
S2000	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
S2000	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
S2000	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
S2000	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
S2000	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
S2000	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
S2000	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
S2000	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
S2000	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
S2000	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
S2000	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
S2000	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
S2000	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
S2000	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
S2000	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
S2000	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
S2000	/	New energy battery (EV)	M44	Read ECU Information	

S2000	/	New energy battery (EV)	M44	Read codes	
S2000	/	New energy battery (EV)	M44	Erase Codes	
S2000	/	New energy battery (EV)	M44	Read Freeze Frame Data	
S2000	/	New energy battery (EV)	M44	Read Live Data	
S2000	/	New energy battery (EV)	M44	Inspection	
S2000	/	New energy battery (EV)	M44	Adjustment	
S2000	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
S2000	/	Electronic vacuum pump (EVPS)	M21	Read codes	
S2000	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
S2000	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
S2000	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
S2000	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
S2000	/	Electronic vacuum pump (EVPS)	M22	Read codes	
S2000	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
S2000	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
S2000	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
S2000	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
S2000	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
S2000	/	FCW LDW	M4E	Read ECU Information	
S2000	/	FCW LDW	M4E	Read codes	
S2000	/	FCW LDW	M4E	Erase Codes	
S2000	/	FCW LDW	M4E	Read Live Data	
S2000	/	FCW LDW	M4E	Function Test	FCW Drive
S2000	/	FCW LDW	M4E	Function Test	Left side lane departure warning
S2000	/	FCW LDW	M4E	Function Test	Right side lane departure warning
S2000	/	FCW LDW	M4E	Function Test	Indicator Drive
S2000	/	FCW LDW	M4E	Adjustment	
S2000	/	Instrument Display System (GAUGE)	M2C	Read codes	
S2000	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
S2000	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
S2000	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
S2000	/	Anti-lock brake control system (ABS)	M01	Read codes	
S2000	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
S2000	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
S2000	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
S2000	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
S2000	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
S2000	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
S2000	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
S2000	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
S2000	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
S2000	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
S2000	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
S2000	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
S2000	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
S2000	/	Anti-lock brake control system (ABS)	M02	Read codes	
S2000	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
S2000	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
S2000	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
S2000	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
S2000	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
S2000	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
S2000	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
S2000	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
S2000	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
S2000	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
S2000	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
S2000	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
S2000	/	Anti-lock brake control system (ABS)	M03	Read codes	
S2000	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
S2000	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
S2000	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
S2000	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
S2000	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
S2000	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
S2000	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
S2000	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
S2000	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
S2000	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
S2000	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
S2000	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
S2000	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
S2000	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
S2000	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
S2000	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
S2000	/	Anti-lock brake control system (ABS)	M19	Read codes	
S2000	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
S2000	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
S2000	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
S2000	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
S2000	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
S2000	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
S2000	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
S2000	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
S2000	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
S2000	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
S2000	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
S2000	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
S2000	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
S2000	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
S2000	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
S2000	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
S2000	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	

S2000	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
S2000	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
S2000	/	Intelligent Parking Control System (SPS)	M9B	Customize	
S2000	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
S2000	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
S2000	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
S2000	/	Hydraulic booster control system (HBS)	M5F	Read codes	
S2000	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
S2000	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
S2000	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
S2000	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
S2000	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
S2000	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
S2000	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
S2000	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
S2000	/	IMA	M63	Read ECU Information	
S2000	/	IMA	M63	Read codes	
S2000	/	IMA	M63	Erase Codes	
S2000	/	IMA	M63	Read Freeze Frame Data	
S2000	/	IMA	M63	Read Live Data	
S2000	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
S2000	/	IMA	M63	Adjustment	SOC PRESET
S2000	/	IMA	M64	Read ECU Information	
S2000	/	IMA	M64	Read codes	
S2000	/	IMA	M64	Erase Codes	
S2000	/	IMA	M64	Read Freeze Frame Data	
S2000	/	IMA	M64	Read Live Data	
S2000	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
S2000	/	IMA	M64	Adjustment	SOC PRESET
S2000	/	IMA	M65	Read ECU Information	
S2000	/	IMA	M65	Read codes	
S2000	/	IMA	M65	Erase Codes	
S2000	/	IMA	M65	Read Freeze Frame Data	
S2000	/	IMA	M65	Read Live Data	
S2000	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
S2000	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
S2000	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
S2000	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
S2000	/	Intake Sounder Control System (ISC)	M6D	Read codes	
S2000	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
S2000	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
S2000	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
S2000	/	Night Vision System (INVS)	0XB1	Read ECU Information	
S2000	/	Night Vision System (INVS)	0XB1	Read codes	
S2000	/	Night Vision System (INVS)	0XB1	Erase Codes	
S2000	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
S2000	/	Night Vision System (INVS)	0XB1	Read Live Data	
S2000	/	Night Vision System (INVS)	0XB1	Adjustment	
S2000	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
S2000	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
S2000	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
S2000	/	i-SHIFT	0XB0	Read ECU Information	
S2000	/	i-SHIFT	0XB0	Read codes	
S2000	/	i-SHIFT	0XB0	Erase Codes	
S2000	/	i-SHIFT	0XB0	Read Live Data	
S2000	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
S2000	/	Keyless Entry Control System (KAS)	M99	Read codes	
S2000	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
S2000	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
S2000	/	Keyless Entry Control System (KAS)	M99	Self Check	
S2000	/	Keyless Entry Control System (KAS)	M99	History Data	
S2000	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output



S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
S2000	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
S2000	/	Keyless Entry Control System (KAS)	M99	Registration	
S2000	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
S2000	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
S2000	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
S2000	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
S2000	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
S2000	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
S2000	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
S2000	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
S2000	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
S2000	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
S2000	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
S2000	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
S2000	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
S2000	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
S2000	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
S2000	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
S2000	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
S2000	/	Management ECU Module (ME)	M74	Read ECU Information	
S2000	/	Management ECU Module (ME)	M74	Read codes	
S2000	/	Management ECU Module (ME)	M74	Erase Codes	
S2000	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
S2000	/	Management ECU Module (ME)	M74	Read Live Data	
S2000	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
S2000	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
S2000	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
S2000	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
S2000	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
S2000	/	Multi-view camera system (MVCS)	M7A	Read codes	
S2000	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
S2000	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
S2000	/	Multi-view camera system (MVCS)	M7A	Customization	
S2000	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
S2000	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
S2000	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
S2000	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
S2000	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
S2000	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
S2000	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
S2000	/	Power Control Unit (PCU)	M83	Read ECU Information	
S2000	/	Power Control Unit (PCU)	M83	Read codes	
S2000	/	Power Control Unit (PCU)	M83	Erase Codes	
S2000	/	Power Control Unit (PCU)	M83	Read Live Data	
S2000	/	Power Control Unit (PCU)	M83	Self Check	
S2000	/	Power Control Unit (PCU)	M83	History Data	
S2000	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
S2000	/	Engine Control System (PGM-FI)	M23	Read codes	
S2000	/	Engine Control System (PGM-FI)	M23	Erase Codes	
S2000	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
S2000	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
S2000	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
S2000	/	Engine Control System (PGM-FI)	M23	Read Live Data	
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
S2000	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
S2000	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
S2000	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
S2000	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
S2000	/	Engine Control System (PGM-FI)	M23	VIN CHECK	

S2000	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
S2000	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
S2000	/	Engine Control System (PGM-FI)	M50	Read codes	
S2000	/	Engine Control System (PGM-FI)	M50	Erase Codes	
S2000	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
S2000	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
S2000	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
S2000	/	Engine Control System (PGM-FI)	M50	Read Live Data	
S2000	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
S2000	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
S2000	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
S2000	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
S2000	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
S2000	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
S2000	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
S2000	/	Engine Control System (PGM-FI)	M86	Read codes	
S2000	/	Engine Control System (PGM-FI)	M86	Erase Codes	
S2000	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
S2000	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
S2000	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
S2000	/	Engine Control System (PGM-FI)	M86	Read Live Data	
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
S2000	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
S2000	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
S2000	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
S2000	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
S2000	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
S2000	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
S2000	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
S2000	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
S2000	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
S2000	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
S2000	/	PSR	M27	Read ECU Information	
S2000	/	PSR	M27	Read codes	
S2000	/	PSR	M27	Erase Codes	
S2000	/	PSR	M27	Read Live Data	
S2000	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
S2000	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
S2000	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
S2000	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
S2000	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
S2000	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
S2000	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
S2000	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
S2000	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
S2000	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
S2000	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
S2000	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
S2000	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
S2000	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
S2000	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
S2000	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
S2000	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
S2000	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
S2000	/	Remote starter (RS)	M90	System Check	
S2000	/	Remote starter (RS)	M90	HISTORY	
S2000	/	Remote starter (RS)	M90	Registration	
S2000	/	Seat load cell (SWS)	M6F	Read ECU Information	
S2000	/	Seat load cell (SWS)	M6F	Read codes	
S2000	/	Seat load cell (SWS)	M6F	Erase Codes	
S2000	/	Seat load cell (SWS)	M6F	Read Live Data	
S2000	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
S2000	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
S2000	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
S2000	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
S2000	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
S2000	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
S2000	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
S2000	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	

S2000	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
S2000	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
S2000	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
S2000	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
S2000	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
S2000	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
S2000	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
S2000	/	Groove track drive unit (SLOT ECU)	M98	History Data	
S2000	/	Groove track drive unit (SLOT ECU)	M98	System Information	
S2000	/	Airbag Control System (SRS)	M9F	Read ECU Information	
S2000	/	Airbag Control System (SRS)	M9F	Read codes	
S2000	/	Airbag Control System (SRS)	M9F	Erase Codes	
S2000	/	Airbag Control System (SRS)	M9F	Read Live Data	
S2000	/	Airbag Control System (SRS)	MA0	Read ECU Information	
S2000	/	Airbag Control System (SRS)	MA0	Read codes	
S2000	/	Airbag Control System (SRS)	MA0	Erase Codes	
S2000	/	Airbag Control System (SRS)	MA0	Read Live Data	
S2000	/	Airbag Control System (SRS)	MA1	Read ECU Information	
S2000	/	Airbag Control System (SRS)	MA1	Read codes	
S2000	/	Airbag Control System (SRS)	MA1	Erase Codes	
S2000	/	Airbag Control System (SRS)	MA1	Read Live Data	
S2000	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
S2000	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
S2000	/	Airbag Control System (SRS)	M2A	Read codes	
S2000	/	Airbag Control System (SRS)	M2A	Erase Codes	
S2000	/	Airbag Control System (SRS)	M2A	Read Live Data	
S2000	/	Airbag Control System (SRS)	M9C	Read ECU Information	
S2000	/	Airbag Control System (SRS)	M9C	Read codes	
S2000	/	Airbag Control System (SRS)	M9C	Erase Codes	
S2000	/	Airbag Control System (SRS)	M9C	Read Live Data	
S2000	/	Airbag Control System (SRS)	M9D	Read ECU Information	
S2000	/	Airbag Control System (SRS)	M9D	Read codes	
S2000	/	Airbag Control System (SRS)	M9D	Erase Codes	
S2000	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
S2000	/	Airbag Control System (SRS)	M9D	Read Live Data	
S2000	/	Airbag Control System (SRS)	M9D	Parameter Information	
S2000	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
S2000	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
S2000	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
S2000	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
S2000	/	Airbag Control System (SRS)	M9D	Function Test	
S2000	/	Airbag Control System (SRS)	M9D	System Information	
S2000	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
S2000	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
S2000	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
S2000	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
S2000	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
S2000	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
S2000	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
S2000	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
S2000	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
S2000	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
S2000	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
S2000	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
S2000	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
S2000	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
S2000	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
S2000	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
S2000	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
S2000	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
S2000	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
S2000	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
S2000	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
S2000	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
S2000	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
S2000	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
S2000	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
S2000	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
S2000	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
S2000	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
S2000	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
S2000	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
S2000	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
S660	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
S660	/	Four-wheel steering control system (4WS)	M52	Read codes	
S660	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
S660	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
S660	/	Four-wheel steering control system (4WS)	M52	Read Live Data	

S660	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
S660	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
S660	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
S660	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
S660	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
S660	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
S660	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
S660	/	Automatic shift control system (A/T)	M1E	Read codes	
S660	/	Automatic shift control system (A/T)	M1E	Erase Codes	
S660	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
S660	/	Automatic shift control system (A/T)	M1E	Read Live Data	
S660	/	Automatic shift control system (A/T)	M1E	ECMPCMC Reset	
S660	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
S660	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
S660	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
S660	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
S660	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
S660	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
S660	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
S660	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
S660	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
S660	/	Automatic shift control system (A/T)	M3B	Read codes	
S660	/	Automatic shift control system (A/T)	M3B	Erase Codes	
S660	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
S660	/	Automatic shift control system (A/T)	M3B	ECMPCMC Reset	
S660	/	Automatic shift control system (A/T)	M3B	Read Live Data	
S660	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
S660	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
S660	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
S660	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
S660	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
S660	/	Automatic shift control system (A/T)	M3C	Read codes	
S660	/	Automatic shift control system (A/T)	M3C	Erase Codes	
S660	/	Automatic shift control system (A/T)	M81	Read ECU Information	
S660	/	Automatic shift control system (A/T)	M81	Read codes	
S660	/	Automatic shift control system (A/T)	M81	Erase Codes	
S660	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
S660	/	Automatic shift control system (A/T)	M81	ECMPCMC Reset	
S660	/	Automatic shift control system (A/T)	M81	Read Live Data	
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
S660	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
S660	/	Automatic shift control system (A/T)	M82	Read ECU Information	
S660	/	Automatic shift control system (A/T)	M82	Read codes	
S660	/	Automatic shift control system (A/T)	M82	Erase Codes	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
S660	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
S660	/	Active Engine Control Support System (ACM)	M06	Read codes	
S660	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
S660	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
S660	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
S660	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
S660	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
S660	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
S660	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
S660	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
S660	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
S660	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
S660	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
S660	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
S660	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
S660	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
S660	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	

S660	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
S660	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
S660	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
S660	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
S660	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
S660	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
S660	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
S660	/	Transmission Control System (AT) M18	Read ECU Information	
S660	/	Transmission Control System (AT) M18	Read codes	
S660	/	Transmission Control System (AT) M18	Erase Codes	
S660	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
S660	/	Transmission Control System (AT) M18	Read Live Data	
S660	/	Transmission Control System (AT) M18	Adjustment	
S660	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
S660	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
S660	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
S660	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
S660	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
S660	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
S660	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
S660	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
S660	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
S660	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
S660	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
S660	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
S660	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
S660	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
S660	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
S660	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read codes	
S660	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Oncoming Vehicle Detection
S660	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Preceding Vehicle Detection
S660	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
S660	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
S660	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset Operation
S660	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Returning Operation
S660	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Automatic Returning Distance
S660	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Manual Returning Time
S660	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset to default
S660	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
S660	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
S660	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
S660	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
S660	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
S660	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
S660	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
S660	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
S660	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
S660	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
S660	/	BODY ELECTRICAL/e-Call MFF	Read codes	
S660	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
S660	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
S660	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
S660	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
S660	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
S660	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
S660	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	

S660	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
S660	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
S660	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
S660	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
S660	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
S660	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
S660	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
S660	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
S660	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
S660	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
S660	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
S660	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
S660	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
S660	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
S660	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
S660	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
S660	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
S660	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
S660	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
S660	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
S660	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
S660	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
S660	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
S660	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
S660	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
S660	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
S660	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
S660	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
S660	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
S660	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor

S660	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
S660	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
S660	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
S660	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
S660	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
S660	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
S660	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
S660	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
S660	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
S660	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
S660	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
S660	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
S660	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
S660	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
S660	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
S660	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
S660	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
S660	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
S660	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Security	MFF	Read codes	
S660	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
S660	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
S660	/	BODY ELECTRICAL/Security	MFF	History Data	
S660	/	BODY ELECTRICAL/Security	MFF	History Clear	
S660	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
S660	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
S660	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
S660	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
S660	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
S660	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
S660	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
S660	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
S660	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
S660	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
S660	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
S660	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
S660	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
S660	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
S660	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
S660	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
S660	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
S660	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
S660	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
S660	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
S660	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
S660	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
S660	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
S660	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
S660	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
S660	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
S660	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
S660	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
S660	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
S660	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
S660	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
S660	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
S660	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
S660	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
S660	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
S660	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
S660	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
S660	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
S660	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
S660	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
S660	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING

S660	/	Collision Mitigation Brake Control System (CMBS/CM	M2E	Miscellaneous Test	CMBS Brake
S660	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
S660	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
S660	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
S660	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
S660	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
S660	/	Promise Automatic Transmission Control System (CVT M1B		ECM/PCM Reset	
S660	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
S660	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
S660	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
S660	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
S660	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
S660	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
S660	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
S660	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
S660	/	Promise Automatic Transmission Control System (CVT M33		ECM/PCM Reset	
S660	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
S660	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
S660	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
S660	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
S660	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
S660	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
S660	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
S660	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
S660	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
S660	/	Promise Automatic Transmission Control System (CVT M8D		ECM/PCM Reset	
S660	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
S660	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
S660	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
S660	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
S660	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
S660	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
S660	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
S660	/	DBW	M34	Read ECU Information	
S660	/	DBW	M34	Read codes	
S660	/	DBW	M34	Erase Codes	
S660	/	DBW	M34	Read Freeze Frame Data	
S660	/	DBW	M34	Read Live Data	
S660	/	DBW	M34	Inspection	Idle Speed Adjust
S660	/	DBW	M34	Inspection	Throttle Test
S660	/	DBW	M34	ECM Reset	
S660	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
S660	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
S660	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
S660	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
S660	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
S660	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
S660	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
S660	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
S660	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
S660	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
S660	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
S660	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
S660	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
S660	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
S660	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
S660	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
S660	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
S660	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
S660	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
S660	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
S660	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
S660	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
S660	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
S660	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
S660	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
S660	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
S660	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
S660	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
S660	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
S660	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
S660	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
S660	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
S660	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
S660	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
S660	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
S660	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
S660	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
S660	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
S660	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
S660	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
S660	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
S660	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
S660	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
S660	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
S660	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
S660	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
S660	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
S660	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
S660	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
S660	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
S660	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
S660	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'



S660	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
S660	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
S660	/	Capacitor Control System (EDLC)	M12	Read codes	
S660	/	Capacitor Control System (EDLC)	M12	Erase Codes	
S660	/	Capacitor Control System (EDLC)	M12	Read Live Data	
S660	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
S660	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
S660	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
S660	/	Electronic Brake Control System (EPB)	M1F	Read codes	
S660	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
S660	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
S660	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
S660	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
S660	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
S660	/	Electronic Brake Control System (EPB)	M3E	Read codes	
S660	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
S660	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
S660	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
S660	/	Electric Powertrain / IMA	M66	Read ECU Information	
S660	/	Electric Powertrain / IMA	M66	Read codes	
S660	/	Electric Powertrain / IMA	M66	Erase Codes	
S660	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
S660	/	Electric Powertrain / IMA	M66	Read Live Data	
S660	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
S660	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
S660	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
S660	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
S660	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
S660	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
S660	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
S660	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
S660	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
S660	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
S660	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
S660	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
S660	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
S660	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
S660	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
S660	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
S660	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
S660	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
S660	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
S660	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
S660	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
S660	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
S660	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
S660	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
S660	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
S660	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
S660	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
S660	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
S660	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
S660	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
S660	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
S660	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
S660	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
S660	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
S660	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
S660	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
S660	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
S660	/	New energy battery (EV)	M44	Read ECU Information	
S660	/	New energy battery (EV)	M44	Read codes	
S660	/	New energy battery (EV)	M44	Erase Codes	
S660	/	New energy battery (EV)	M44	Read Freeze Frame Data	
S660	/	New energy battery (EV)	M44	Read Live Data	
S660	/	New energy battery (EV)	M44	Inspection	
S660	/	New energy battery (EV)	M44	Adjustment	
S660	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
S660	/	Electronic vacuum pump (EVPS)	M21	Read codes	
S660	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
S660	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
S660	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
S660	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
S660	/	Electronic vacuum pump (EVPS)	M22	Read codes	
S660	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
S660	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
S660	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
S660	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
S660	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
S660	/	FCW LDW	M4E	Read ECU Information	
S660	/	FCW LDW	M4E	Read codes	
S660	/	FCW LDW	M4E	Erase Codes	
S660	/	FCW LDW	M4E	Read Live Data	
S660	/	FCW LDW	M4E	Function Test	FCW Drive
S660	/	FCW LDW	M4E	Function Test	Left side lane departure warning
S660	/	FCW LDW	M4E	Function Test	Right side lane departure warning
S660	/	FCW LDW	M4E	Function Test	Indicator Drive
S660	/	FCW LDW	M4E	Adjustment	
S660	/	Instrument Display System (GAUGE)	M2C	Read codes	
S660	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
S660	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
S660	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
S660	/	Anti-lock brake control system (ABS)	M01	Read codes	

S660	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
S660	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
S660	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
S660	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
S660	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
S660	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
S660	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
S660	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
S660	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
S660	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
S660	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
S660	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
S660	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
S660	/	Anti-lock brake control system (ABS)	M02	Read codes	
S660	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
S660	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
S660	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
S660	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
S660	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
S660	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
S660	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
S660	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
S660	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
S660	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
S660	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
S660	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
S660	/	Anti-lock brake control system (ABS)	M03	Read codes	
S660	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
S660	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
S660	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
S660	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
S660	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
S660	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
S660	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
S660	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
S660	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
S660	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
S660	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
S660	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
S660	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
S660	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
S660	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
S660	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
S660	/	Anti-lock brake control system (ABS)	M19	Read codes	
S660	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
S660	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
S660	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
S660	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
S660	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
S660	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
S660	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
S660	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
S660	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
S660	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
S660	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
S660	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
S660	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
S660	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
S660	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
S660	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
S660	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
S660	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
S660	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
S660	/	Intelligent Parking Control System (SPS)	M9B	Customize	
S660	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
S660	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
S660	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
S660	/	Hydraulic booster control system (HBS)	M5F	Read codes	
S660	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
S660	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
S660	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
S660	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
S660	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
S660	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
S660	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
S660	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
S660	/	IMA	M63	Read ECU Information	
S660	/	IMA	M63	Read codes	
S660	/	IMA	M63	Erase Codes	
S660	/	IMA	M63	Read Freeze Frame Data	
S660	/	IMA	M63	Read Live Data	
S660	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
S660	/	IMA	M63	Adjustment	SOC PRESET
S660	/	IMA	M64	Read ECU Information	
S660	/	IMA	M64	Read codes	
S660	/	IMA	M64	Erase Codes	
S660	/	IMA	M64	Read Freeze Frame Data	
S660	/	IMA	M64	Read Live Data	
S660	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
S660	/	IMA	M64	Adjustment	SOC PRESET
S660	/	IMA	M65	Read ECU Information	
S660	/	IMA	M65	Read codes	
S660	/	IMA	M65	Erase Codes	

S660	/	IMA	M65	Read Freeze Frame Data	
S660	/	IMA	M65	Read Live Data	
S660	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
S660	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
S660	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
S660	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
S660	/	Intake Sounder Control System (ISC)	M6D	Read codes	
S660	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
S660	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
S660	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
S660	/	Night Vision System (INVS)	0XB1	Read ECU Information	
S660	/	Night Vision System (INVS)	0XB1	Read codes	
S660	/	Night Vision System (INVS)	0XB1	Erase Codes	
S660	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
S660	/	Night Vision System (INVS)	0XB1	Read Live Data	
S660	/	Night Vision System (INVS)	0XB1	Adjustment	
S660	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
S660	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
S660	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
S660	/	i-SHIFT	0XB0	Read ECU Information	
S660	/	i-SHIFT	0XB0	Read codes	
S660	/	i-SHIFT	0XB0	Erase Codes	
S660	/	i-SHIFT	0XB0	Read Live Data	
S660	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
S660	/	Keyless Entry Control System (KAS)	M99	Read codes	
S660	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
S660	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
S660	/	Keyless Entry Control System (KAS)	M99	Self Check	
S660	/	Keyless Entry Control System (KAS)	M99	History Data	
S660	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
S660	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
S660	/	Keyless Entry Control System (KAS)	M99	Registration	
S660	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
S660	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
S660	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
S660	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
S660	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
S660	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
S660	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
S660	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
S660	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
S660	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
S660	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
S660	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	

S660	/	Electronically assisted lane keeping control system (Lk M71	Adjustment	STEERING REWRITE
S660	/	Electronically assisted lane keeping control system (Lk M71	Customize	LDW OFFSET
S660	/	Electronically assisted lane keeping control system (Lk M71	Customize	GAIN ADJUST
S660	/	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
S660	/	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
S660	/	Management ECU Module (ME) M74	Read ECU Information	
S660	/	Management ECU Module (ME) M74	Read codes	
S660	/	Management ECU Module (ME) M74	Erase Codes	
S660	/	Management ECU Module (ME) M74	Read Freeze Frame Data	
S660	/	Management ECU Module (ME) M74	Read Live Data	
S660	/	Multi-view camera and parking assist system (MVC/P) M26	Read ECU Information	
S660	/	Multi-view camera and parking assist system (MVC/P) M26	Read codes	
S660	/	Multi-view camera and parking assist system (MVC/P) M26	Erase Codes	
S660	/	Multi-view camera and parking assist system (MVC/P) M26	Read Live Data	
S660	/	Multi-view camera system (MVCS) M7A	Read ECU Information	
S660	/	Multi-view camera system (MVCS) M7A	Read codes	
S660	/	Multi-view camera system (MVCS) M7A	Erase Codes	
S660	/	Multi-view camera system (MVCS) M7A	Read Live Data	
S660	/	Multi-view camera system (MVCS) M7A	Customization	
S660	/	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
S660	/	Multi-view camera system (MVCS) M7A	Function Test	LED Light
S660	/	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
S660	/	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
S660	/	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
S660	/	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
S660	/	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
S660	/	Power Control Unit (PCU) M83	Read ECU Information	
S660	/	Power Control Unit (PCU) M83	Read codes	
S660	/	Power Control Unit (PCU) M83	Erase Codes	
S660	/	Power Control Unit (PCU) M83	Read Live Data	
S660	/	Power Control Unit (PCU) M83	Self Check	
S660	/	Power Control Unit (PCU) M83	History Data	
S660	/	Engine Control System (PGM-FI) M23	Read ECU Information	
S660	/	Engine Control System (PGM-FI) M23	Read codes	
S660	/	Engine Control System (PGM-FI) M23	Erase Codes	
S660	/	Engine Control System (PGM-FI) M23	Readiness Codes	
S660	/	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
S660	/	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
S660	/	Engine Control System (PGM-FI) M23	Read Live Data	
S660	/	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
S660	/	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
S660	/	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
S660	/	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
S660	/	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
S660	/	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
S660	/	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
S660	/	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
S660	/	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
S660	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
S660	/	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
S660	/	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
S660	/	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
S660	/	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
S660	/	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
S660	/	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
S660	/	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
S660	/	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
S660	/	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
S660	/	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
S660	/	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
S660	/	Engine Control System (PGM-FI) M23	VIN CHECK	
S660	/	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
S660	/	Engine Control System (PGM-FI) M50	Read ECU Information	
S660	/	Engine Control System (PGM-FI) M50	Read codes	
S660	/	Engine Control System (PGM-FI) M50	Erase Codes	
S660	/	Engine Control System (PGM-FI) M50	Readiness Codes	
S660	/	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
S660	/	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
S660	/	Engine Control System (PGM-FI) M50	Read Live Data	
S660	/	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
S660	/	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
S660	/	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
S660	/	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
S660	/	Engine Control System (PGM-FI) M50	VIN CHECK	
S660	/	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
S660	/	Engine Control System (PGM-FI) M86	Read ECU Information	
S660	/	Engine Control System (PGM-FI) M86	Read codes	
S660	/	Engine Control System (PGM-FI) M86	Erase Codes	
S660	/	Engine Control System (PGM-FI) M86	Readiness Codes	
S660	/	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
S660	/	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
S660	/	Engine Control System (PGM-FI) M86	Read Live Data	
S660	/	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
S660	/	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
S660	/	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
S660	/	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
S660	/	Engine Control System (PGM-FI) M86	Inspection	EGR TEST
S660	/	Engine Control System (PGM-FI) M86	Inspection	VTEC TEST
S660	/	Engine Control System (PGM-FI) M86	Inspection	IACV TEST
S660	/	Engine Control System (PGM-FI) M86	Inspection	O2S TEST
S660	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
S660	/	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
S660	/	Engine Control System (PGM-FI) M86	Inspection	RADIATOR FAN

S660	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
S660	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
S660	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
S660	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
S660	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
S660	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
S660	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
S660	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
S660	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
S660	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
S660	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
S660	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
S660	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
S660	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
S660	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
S660	/	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
S660	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	
S660	/	PSR	M27	Read ECU Information	
S660	/	PSR	M27	Read codes	
S660	/	PSR	M27	Erase Codes	
S660	/	PSR	M27	Read Live Data	
S660	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
S660	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
S660	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
S660	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
S660	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
S660	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
S660	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
S660	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
S660	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
S660	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
S660	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
S660	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
S660	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
S660	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
S660	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
S660	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
S660	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
S660	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
S660	/	Remote starter (RS)	M90	System Check	
S660	/	Remote starter (RS)	M90	HISTORY	
S660	/	Remote starter (RS)	M90	Registration	
S660	/	Seat load cell (SWS)	M6F	Read ECU Information	
S660	/	Seat load cell (SWS)	M6F	Read codes	
S660	/	Seat load cell (SWS)	M6F	Erase Codes	
S660	/	Seat load cell (SWS)	M6F	Read Live Data	
S660	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
S660	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
S660	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
S660	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
S660	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
S660	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
S660	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
S660	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
S660	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
S660	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
S660	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
S660	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
S660	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
S660	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
S660	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
S660	/	Groove track drive unit (SLOT ECU)	M98	History Data	
S660	/	Groove track drive unit (SLOT ECU)	M98	System Information	
S660	/	Airbag Control System (SRS)	M9F	Read ECU Information	
S660	/	Airbag Control System (SRS)	M9F	Read codes	
S660	/	Airbag Control System (SRS)	M9F	Erase Codes	
S660	/	Airbag Control System (SRS)	M9F	Read Live Data	
S660	/	Airbag Control System (SRS)	MA0	Read ECU Information	
S660	/	Airbag Control System (SRS)	MA0	Read codes	
S660	/	Airbag Control System (SRS)	MA0	Erase Codes	
S660	/	Airbag Control System (SRS)	MA0	Read Live Data	

S660	/	Airbag Control System (SRS)	MA1	Read ECU Information	
S660	/	Airbag Control System (SRS)	MA1	Read codes	
S660	/	Airbag Control System (SRS)	MA1	Erase Codes	
S660	/	Airbag Control System (SRS)	MA1	Read Live Data	
S660	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
S660	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
S660	/	Airbag Control System (SRS)	M2A	Read codes	
S660	/	Airbag Control System (SRS)	M2A	Erase Codes	
S660	/	Airbag Control System (SRS)	M2A	Read Live Data	
S660	/	Airbag Control System (SRS)	M9C	Read ECU Information	
S660	/	Airbag Control System (SRS)	M9C	Read codes	
S660	/	Airbag Control System (SRS)	M9C	Erase Codes	
S660	/	Airbag Control System (SRS)	M9C	Read Live Data	
S660	/	Airbag Control System (SRS)	M9D	Read ECU Information	
S660	/	Airbag Control System (SRS)	M9D	Read codes	
S660	/	Airbag Control System (SRS)	M9D	Erase Codes	
S660	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
S660	/	Airbag Control System (SRS)	M9D	Read Live Data	
S660	/	Airbag Control System (SRS)	M9D	Parameter Information	
S660	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
S660	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
S660	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
S660	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
S660	/	Airbag Control System (SRS)	M9D	Function Test	
S660	/	Airbag Control System (SRS)	M9D	System Information	
S660	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
S660	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
S660	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
S660	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
S660	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
S660	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
S660	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
S660	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
S660	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
S660	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
S660	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
S660	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
S660	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
S660	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
S660	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
S660	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
S660	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
S660	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
S660	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
S660	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
S660	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
S660	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
S660	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
S660	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
S660	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
S660	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
S660	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
S660	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
S660	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
S660	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
S660	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
SABER	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
SABER	/	Four-wheel steering control system (4WS)	M52	Read codes	
SABER	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
SABER	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
SABER	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
SABER	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
SABER	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
SABER	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
SABER	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
SABER	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
SABER	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
SABER	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
SABER	/	Automatic shift control system (A/T)	M1E	Read codes	
SABER	/	Automatic shift control system (A/T)	M1E	Erase Codes	
SABER	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
SABER	/	Automatic shift control system (A/T)	M1E	Read Live Data	
SABER	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
SABER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
SABER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
SABER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
SABER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
SABER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
SABER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
SABER	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
SABER	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
SABER	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
SABER	/	Automatic shift control system (A/T)	M3B	Read codes	
SABER	/	Automatic shift control system (A/T)	M3B	Erase Codes	
SABER	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
SABER	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
SABER	/	Automatic shift control system (A/T)	M3B	Read Live Data	
SABER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
SABER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
SABER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
SABER	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
SABER	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
SABER	/	Automatic shift control system (A/T)	M3C	Read codes	

SABER	/	Automatic shift control system (A/T)	M3C	Erase Codes	
SABER	/	Automatic shift control system (A/T)	M81	Read ECU Information	
SABER	/	Automatic shift control system (A/T)	M81	Read codes	
SABER	/	Automatic shift control system (A/T)	M81	Erase Codes	
SABER	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
SABER	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
SABER	/	Automatic shift control system (A/T)	M81	Read Live Data	
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
SABER	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
SABER	/	Automatic shift control system (A/T)	M82	Read ECU Information	
SABER	/	Automatic shift control system (A/T)	M82	Read codes	
SABER	/	Automatic shift control system (A/T)	M82	Erase Codes	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
SABER	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
SABER	/	Active Engine Control Support System (ACM)	M06	Read codes	
SABER	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
SABER	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
SABER	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
SABER	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
SABER	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
SABER	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
SABER	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
SABER	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
SABER	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
SABER	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
SABER	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
SABER	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read ECU Information	
SABER	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read codes	
SABER	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Erase Codes	
SABER	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Freeze Frame Data	
SABER	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Live Data	
SABER	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Function Test	Damper Force Operation Test
SABER	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Adjustment	Damper Stroke Calibration
SABER	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
SABER	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
SABER	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
SABER	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
SABER	/	Transmission Control System (AT)	M18	Read ECU Information	
SABER	/	Transmission Control System (AT)	M18	Read codes	
SABER	/	Transmission Control System (AT)	M18	Erase Codes	
SABER	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
SABER	/	Transmission Control System (AT)	M18	Read Live Data	
SABER	/	Transmission Control System (AT)	M18	Adjustment	
SABER	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
SABER	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
SABER	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
SABER	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
SABER	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
SABER	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
SABER	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
SABER	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
SABER	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS

SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
SABER	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
SABER	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
SABER	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
SABER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
SABER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
SABER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
SABER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
SABER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
SABER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
SABER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
SABER	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
SABER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
SABER	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
SABER	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
SABER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
SABER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
SABER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
SABER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
SABER	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
SABER	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
SABER	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
SABER	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
SABER	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
SABER	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
SABER	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control



SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
SABER	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
SABER	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
SABER	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
SABER	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
SABER	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
SABER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
SABER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
SABER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
SABER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
SABER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
SABER	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
SABER	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
SABER	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
SABER	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
SABER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
SABER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
SABER	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
SABER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
SABER	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
SABER	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
SABER	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
SABER	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
SABER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
SABER	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
SABER	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
SABER	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Security	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
SABER	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
SABER	/	BODY ELECTRICAL/Security	MFF	History Data	
SABER	/	BODY ELECTRICAL/Security	MFF	History Clear	
SABER	/	BODY ELECTRICAL/Telematics	MFF	Read codes	

SABER	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
SABER	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
SABER	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
SABER	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
SABER	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
SABER	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
SABER	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
SABER	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
SABER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
SABER	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
SABER	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
SABER	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
SABER	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
SABER	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
SABER	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
SABER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
SABER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
SABER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
SABER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
SABER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
SABER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
SABER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
SABER	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
SABER	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
SABER	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
SABER	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
SABER	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
SABER	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
SABER	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
SABER	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
SABER	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
SABER	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
SABER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
SABER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
SABER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
SABER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
SABER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
SABER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
SABER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
SABER	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
SABER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
SABER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
SABER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
SABER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
SABER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
SABER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
SABER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
SABER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
SABER	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
SABER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
SABER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
SABER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
SABER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
SABER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
SABER	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
SABER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
SABER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
SABER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
SABER	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
SABER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
SABER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
SABER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
SABER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
SABER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
SABER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
SABER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
SABER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
SABER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
SABER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
SABER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
SABER	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B

SABER	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P	
SABER	/	DBW	M34	Read ECU Information	
SABER	/	DBW	M34	Read codes	
SABER	/	DBW	M34	Erase Codes	
SABER	/	DBW	M34	Read Freeze Frame Data	
SABER	/	DBW	M34	Read Live Data	
SABER	/	DBW	M34	Inspection	Idle Speed Adjust
SABER	/	DBW	M34	Inspection	Throttle Test
SABER	/	DBW	M34	ECM Reset	
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
SABER	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
SABER	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
SABER	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
SABER	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
SABER	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
SABER	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
SABER	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
SABER	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
SABER	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
SABER	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
SABER	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
SABER	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
SABER	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
SABER	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
SABER	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
SABER	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
SABER	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
SABER	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
SABER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
SABER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
SABER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
SABER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
SABER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
SABER	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
SABER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
SABER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
SABER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
SABER	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
SABER	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
SABER	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
SABER	/	Capacitor Control System (EDLC)	M12	Read codes	
SABER	/	Capacitor Control System (EDLC)	M12	Erase Codes	
SABER	/	Capacitor Control System (EDLC)	M12	Read Live Data	
SABER	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
SABER	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
SABER	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
SABER	/	Electronic Brake Control System (EPB)	M1F	Read codes	
SABER	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
SABER	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
SABER	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
SABER	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
SABER	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
SABER	/	Electronic Brake Control System (EPB)	M3E	Read codes	
SABER	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
SABER	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
SABER	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
SABER	/	Electric Powertrain / IMA	M66	Read ECU Information	
SABER	/	Electric Powertrain / IMA	M66	Read codes	
SABER	/	Electric Powertrain / IMA	M66	Erase Codes	
SABER	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
SABER	/	Electric Powertrain / IMA	M66	Read Live Data	
SABER	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
SABER	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
SABER	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
SABER	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
SABER	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
SABER	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
SABER	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
SABER	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
SABER	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	

SABER	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
SABER	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
SABER	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
SABER	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
SABER	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
SABER	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
SABER	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
SABER	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
SABER	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
SABER	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
SABER	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
SABER	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
SABER	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
SABER	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
SABER	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
SABER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
SABER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
SABER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
SABER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
SABER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
SABER	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
SABER	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
SABER	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
SABER	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
SABER	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
SABER	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
SABER	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
SABER	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
SABER	/	New energy battery (EV)	M44	Read ECU Information	
SABER	/	New energy battery (EV)	M44	Read codes	
SABER	/	New energy battery (EV)	M44	Erase Codes	
SABER	/	New energy battery (EV)	M44	Read Freeze Frame Data	
SABER	/	New energy battery (EV)	M44	Read Live Data	
SABER	/	New energy battery (EV)	M44	Inspection	
SABER	/	New energy battery (EV)	M44	Adjustment	
SABER	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
SABER	/	Electronic vacuum pump (EVPS)	M21	Read codes	
SABER	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
SABER	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
SABER	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
SABER	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
SABER	/	Electronic vacuum pump (EVPS)	M22	Read codes	
SABER	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
SABER	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
SABER	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
SABER	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
SABER	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
SABER	/	FCW LDW	M4E	Read ECU Information	
SABER	/	FCW LDW	M4E	Read codes	
SABER	/	FCW LDW	M4E	Erase Codes	
SABER	/	FCW LDW	M4E	Read Live Data	
SABER	/	FCW LDW	M4E	Function Test	FCW Drive
SABER	/	FCW LDW	M4E	Function Test	Left side lane departure warning
SABER	/	FCW LDW	M4E	Function Test	Right side lane departure warning
SABER	/	FCW LDW	M4E	Function Test	Indicator Drive
SABER	/	FCW LDW	M4E	Adjustment	
SABER	/	Instrument Display System (GAUGE)	M2C	Read codes	
SABER	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
SABER	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
SABER	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
SABER	/	Anti-lock brake control system (ABS)	M01	Read codes	
SABER	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
SABER	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
SABER	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
SABER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
SABER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
SABER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
SABER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
SABER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
SABER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
SABER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
SABER	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
SABER	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
SABER	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
SABER	/	Anti-lock brake control system (ABS)	M02	Read codes	
SABER	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
SABER	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
SABER	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
SABER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
SABER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
SABER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
SABER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
SABER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
SABER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
SABER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
SABER	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
SABER	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
SABER	/	Anti-lock brake control system (ABS)	M03	Read codes	
SABER	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
SABER	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
SABER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
SABER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
SABER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid

SABER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
SABER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
SABER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
SABER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
SABER	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
SABER	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
SABER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
SABER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
SABER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
SABER	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
SABER	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
SABER	/	Anti-lock brake control system (ABS)	M19	Read codes	
SABER	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
SABER	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
SABER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
SABER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
SABER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
SABER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
SABER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
SABER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
SABER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
SABER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
SABER	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
SABER	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
SABER	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
SABER	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
SABER	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
SABER	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
SABER	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
SABER	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
SABER	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
SABER	/	Intelligent Parking Control System (SPS)	M9B	Customize	
SABER	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
SABER	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
SABER	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
SABER	/	Hydraulic booster control system (HBS)	M5F	Read codes	
SABER	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
SABER	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
SABER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
SABER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
SABER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
SABER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
SABER	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
SABER	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
SABER	/	IMA	M63	Read ECU Information	
SABER	/	IMA	M63	Read codes	
SABER	/	IMA	M63	Erase Codes	
SABER	/	IMA	M63	Read Freeze Frame Data	
SABER	/	IMA	M63	Read Live Data	
SABER	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
SABER	/	IMA	M63	Adjustment	SOC PRESET
SABER	/	IMA	M64	Read ECU Information	
SABER	/	IMA	M64	Read codes	
SABER	/	IMA	M64	Erase Codes	
SABER	/	IMA	M64	Read Freeze Frame Data	
SABER	/	IMA	M64	Read Live Data	
SABER	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
SABER	/	IMA	M64	Adjustment	SOC PRESET
SABER	/	IMA	M65	Read ECU Information	
SABER	/	IMA	M65	Read codes	
SABER	/	IMA	M65	Erase Codes	
SABER	/	IMA	M65	Read Freeze Frame Data	
SABER	/	IMA	M65	Read Live Data	
SABER	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
SABER	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
SABER	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
SABER	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
SABER	/	Intake Sounder Control System (ISC)	M6D	Read codes	
SABER	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
SABER	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
SABER	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
SABER	/	Night Vision System (INVS)	0XB1	Read ECU Information	
SABER	/	Night Vision System (INVS)	0XB1	Read codes	
SABER	/	Night Vision System (INVS)	0XB1	Erase Codes	
SABER	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
SABER	/	Night Vision System (INVS)	0XB1	Read Live Data	
SABER	/	Night Vision System (INVS)	0XB1	Adjustment	
SABER	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
SABER	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
SABER	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
SABER	/	i-SHIFT	0XB0	Read ECU Information	
SABER	/	i-SHIFT	0XB0	Read codes	
SABER	/	i-SHIFT	0XB0	Erase Codes	
SABER	/	i-SHIFT	0XB0	Read Live Data	
SABER	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
SABER	/	Keyless Entry Control System (KAS)	M99	Read codes	
SABER	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
SABER	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
SABER	/	Keyless Entry Control System (KAS)	M99	Self Check	
SABER	/	Keyless Entry Control System (KAS)	M99	History Data	
SABER	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving

SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
SABER	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
SABER	/	Keyless Entry Control System (KAS)	M99	Registration	
SABER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
SABER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
SABER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
SABER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
SABER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
SABER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
SABER	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
SABER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
SABER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
SABER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
SABER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
SABER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
SABER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
SABER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
SABER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
SABER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
SABER	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
SABER	/	Management ECU Module (ME)	M74	Read ECU Information	
SABER	/	Management ECU Module (ME)	M74	Read codes	
SABER	/	Management ECU Module (ME)	M74	Erase Codes	
SABER	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
SABER	/	Management ECU Module (ME)	M74	Read Live Data	
SABER	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read ECU Information	
SABER	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read codes	
SABER	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Erase Codes	
SABER	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read Live Data	
SABER	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
SABER	/	Multi-view camera system (MVCS)	M7A	Read codes	
SABER	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
SABER	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
SABER	/	Multi-view camera system (MVCS)	M7A	Customization	
SABER	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
SABER	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
SABER	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
SABER	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
SABER	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
SABER	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
SABER	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
SABER	/	Power Control Unit (PCU)	M83	Read ECU Information	
SABER	/	Power Control Unit (PCU)	M83	Read codes	
SABER	/	Power Control Unit (PCU)	M83	Erase Codes	
SABER	/	Power Control Unit (PCU)	M83	Read Live Data	
SABER	/	Power Control Unit (PCU)	M83	Self Check	
SABER	/	Power Control Unit (PCU)	M83	History Data	

SABER	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
SABER	/	Engine Control System (PGM-FI)	M23	Read codes	
SABER	/	Engine Control System (PGM-FI)	M23	Erase Codes	
SABER	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
SABER	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
SABER	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
SABER	/	Engine Control System (PGM-FI)	M23	Read Live Data	
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
SABER	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
SABER	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
SABER	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
SABER	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
SABER	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
SABER	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
SABER	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
SABER	/	Engine Control System (PGM-FI)	M50	Read codes	
SABER	/	Engine Control System (PGM-FI)	M50	Erase Codes	
SABER	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
SABER	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
SABER	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
SABER	/	Engine Control System (PGM-FI)	M50	Read Live Data	
SABER	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
SABER	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
SABER	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
SABER	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
SABER	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
SABER	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
SABER	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
SABER	/	Engine Control System (PGM-FI)	M86	Read codes	
SABER	/	Engine Control System (PGM-FI)	M86	Erase Codes	
SABER	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
SABER	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
SABER	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
SABER	/	Engine Control System (PGM-FI)	M86	Read Live Data	
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
SABER	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
SABER	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
SABER	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
SABER	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
SABER	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
SABER	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
SABER	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
SABER	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
SABER	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
SABER	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
SABER	/	PSR	M27	Read ECU Information	
SABER	/	PSR	M27	Read codes	
SABER	/	PSR	M27	Erase Codes	
SABER	/	PSR	M27	Read Live Data	
SABER	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
SABER	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
SABER	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
SABER	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
SABER	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
SABER	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
SABER	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
SABER	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
SABER	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
SABER	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
SABER	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning

SABER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
SABER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
SABER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
SABER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
SABER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
SABER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
SABER	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
SABER	/	Remote starter (RS)	M90	System Check	
SABER	/	Remote starter (RS)	M90	HISTORY	
SABER	/	Remote starter (RS)	M90	Registration	
SABER	/	Seat load cell (SWS)	M6F	Read ECU Information	
SABER	/	Seat load cell (SWS)	M6F	Read codes	
SABER	/	Seat load cell (SWS)	M6F	Erase Codes	
SABER	/	Seat load cell (SWS)	M6F	Read Live Data	
SABER	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
SABER	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
SABER	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
SABER	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
SABER	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
SABER	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
SABER	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
SABER	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
SABER	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
SABER	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
SABER	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
SABER	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
SABER	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
SABER	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
SABER	/	Groove track drive unit (SLOT ECU)	M98	History Data	
SABER	/	Groove track drive unit (SLOT ECU)	M98	System Information	
SABER	/	Airbag Control System (SRS)	M9F	Read ECU Information	
SABER	/	Airbag Control System (SRS)	M9F	Read codes	
SABER	/	Airbag Control System (SRS)	M9F	Erase Codes	
SABER	/	Airbag Control System (SRS)	M9F	Read Live Data	
SABER	/	Airbag Control System (SRS)	MA0	Read ECU Information	
SABER	/	Airbag Control System (SRS)	MA0	Read codes	
SABER	/	Airbag Control System (SRS)	MA0	Erase Codes	
SABER	/	Airbag Control System (SRS)	MA0	Read Live Data	
SABER	/	Airbag Control System (SRS)	MA1	Read ECU Information	
SABER	/	Airbag Control System (SRS)	MA1	Read codes	
SABER	/	Airbag Control System (SRS)	MA1	Erase Codes	
SABER	/	Airbag Control System (SRS)	MA1	Read Live Data	
SABER	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
SABER	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
SABER	/	Airbag Control System (SRS)	M2A	Read codes	
SABER	/	Airbag Control System (SRS)	M2A	Erase Codes	
SABER	/	Airbag Control System (SRS)	M2A	Read Live Data	
SABER	/	Airbag Control System (SRS)	M9C	Read ECU Information	
SABER	/	Airbag Control System (SRS)	M9C	Read codes	
SABER	/	Airbag Control System (SRS)	M9C	Erase Codes	
SABER	/	Airbag Control System (SRS)	M9C	Read Live Data	
SABER	/	Airbag Control System (SRS)	M9D	Read ECU Information	
SABER	/	Airbag Control System (SRS)	M9D	Read codes	
SABER	/	Airbag Control System (SRS)	M9D	Erase Codes	
SABER	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
SABER	/	Airbag Control System (SRS)	M9D	Read Live Data	
SABER	/	Airbag Control System (SRS)	M9D	Parameter Information	
SABER	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
SABER	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
SABER	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
SABER	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
SABER	/	Airbag Control System (SRS)	M9D	Function Test	
SABER	/	Airbag Control System (SRS)	M9D	System Information	
SABER	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
SABER	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
SABER	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
SABER	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
SABER	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
SABER	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
SABER	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	



SABER	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
SABER	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
SABER	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
SABER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
SABER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
SABER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
SABER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
SABER	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
SABER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
SABER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
SABER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
SABER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
SABER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
SABER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
SABER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
SABER	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
SABER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
SABER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
SABER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
SABER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
SABER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
SABER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
SABER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
SABER	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Read codes	
SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
SHUTTLE	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
SHUTTLE	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
SHUTTLE	/	Automatic shift control system (A/T)	M1E	Read codes	
SHUTTLE	/	Automatic shift control system (A/T)	M1E	Erase Codes	
SHUTTLE	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
SHUTTLE	/	Automatic shift control system (A/T)	M1E	Read Live Data	
SHUTTLE	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
SHUTTLE	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
SHUTTLE	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
SHUTTLE	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
SHUTTLE	/	Automatic shift control system (A/T)	M3B	Read codes	
SHUTTLE	/	Automatic shift control system (A/T)	M3B	Erase Codes	
SHUTTLE	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
SHUTTLE	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
SHUTTLE	/	Automatic shift control system (A/T)	M3B	Read Live Data	
SHUTTLE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
SHUTTLE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
SHUTTLE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
SHUTTLE	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
SHUTTLE	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
SHUTTLE	/	Automatic shift control system (A/T)	M3C	Read codes	
SHUTTLE	/	Automatic shift control system (A/T)	M3C	Erase Codes	
SHUTTLE	/	Automatic shift control system (A/T)	M81	Read ECU Information	
SHUTTLE	/	Automatic shift control system (A/T)	M81	Read codes	
SHUTTLE	/	Automatic shift control system (A/T)	M81	Erase Codes	
SHUTTLE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
SHUTTLE	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
SHUTTLE	/	Automatic shift control system (A/T)	M81	Read Live Data	
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
SHUTTLE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
SHUTTLE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
SHUTTLE	/	Automatic shift control system (A/T)	M82	Read codes	
SHUTTLE	/	Automatic shift control system (A/T)	M82	Erase Codes	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK

SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	Function Test	BUZZER CHECK
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read ECU Information	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read codes	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
SHUTTLE	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
SHUTTLE	/	Active Engine Control Support System (ACM) M06	Read codes	
SHUTTLE	/	Active Engine Control Support System (ACM) M06	Erase Codes	
SHUTTLE	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
SHUTTLE	/	Active Engine Control Support System (ACM) M06	Read Live Data	
SHUTTLE	/	Active Engine Control Support System (ACM) M06	ACM Reset	
SHUTTLE	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
SHUTTLE	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
SHUTTLE	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
SHUTTLE	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
SHUTTLE	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
SHUTTLE	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
SHUTTLE	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
SHUTTLE	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
SHUTTLE	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
SHUTTLE	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
SHUTTLE	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
SHUTTLE	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
SHUTTLE	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
SHUTTLE	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
SHUTTLE	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
SHUTTLE	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
SHUTTLE	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
SHUTTLE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
SHUTTLE	/	Transmission Control System (AT) M18	Read ECU Information	
SHUTTLE	/	Transmission Control System (AT) M18	Read codes	
SHUTTLE	/	Transmission Control System (AT) M18	Erase Codes	
SHUTTLE	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
SHUTTLE	/	Transmission Control System (AT) M18	Read Live Data	
SHUTTLE	/	Transmission Control System (AT) M18	Adjustment	
SHUTTLE	/	Active Torque Converter Control System (ATTTS) M0E	Read ECU Information	
SHUTTLE	/	Active Torque Converter Control System (ATTTS) M0E	Read codes	
SHUTTLE	/	Active Torque Converter Control System (ATTTS) M0E	Erase Codes	
SHUTTLE	/	Active Torque Converter Control System (ATTTS) M0E	Read Freeze Frame Data	
SHUTTLE	/	Active Torque Converter Control System (ATTTS) M0E	Read Live Data	
SHUTTLE	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
SHUTTLE	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	STEERING ANGLE
SHUTTLE	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
SHUTTLE	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	ALL SENSORS
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
SHUTTLE	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
SHUTTLE	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
SHUTTLE	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu

SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
SHUTTLE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
SHUTTLE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes
SHUTTLE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes
SHUTTLE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data
SHUTTLE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment
SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes
SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes
SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data
SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Lock All Doors
SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Unlock Driver's Side Door
SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Unlock All Doors
SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Fuel Fill Door Open
SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Left Power Sliding Door
SHUTTLE	/	BODY ELECTRICAL/Door Locks	MFF	Right Power Sliding Door
SHUTTLE	/	BODY ELECTRICAL/e-Call	MFF	Read codes
SHUTTLE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes
SHUTTLE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data
SHUTTLE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data
SHUTTLE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes
SHUTTLE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes
SHUTTLE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data
SHUTTLE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection
SHUTTLE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Read codes
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Speedometer
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Tachometer
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	VSA/TCS Activation Indicator
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	VSA/TCS Indicator
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	ABS INDICATOR
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	EBD Indicator(Electronic Brake Display)
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Cruise Activation Indicator
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	MIL Status
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Daytime Running Lights Indicator(Canada)
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Engine Oil Pressure Indicator
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Charging System Indicator
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Cruise Control Main Switch Indicator
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Maintenance Required Indicator
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	High Beam Indicator
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Light On Indicator
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Low fuel level indicator
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Security Indicator
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Trip Meter
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (P)
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (R)
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (N)
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (P)
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (R)
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (D3)
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (1)
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (2)
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	A/T Gear Position Indicator (M)
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Sequential Sport Shift Mode Indicator
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Illumination Brightness Control
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Key Alarm Chime
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Headlight Alarm Chime
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Seatbelt Reminder Chime
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Self-diagnostic function
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Maintenance Minder
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment
SHUTTLE	/	BODY ELECTRICAL/Gauges	MFF	PAX Warning Reset
SHUTTLE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes
SHUTTLE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes
SHUTTLE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection
SHUTTLE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes
SHUTTLE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes
SHUTTLE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data
SHUTTLE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes
SHUTTLE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes
SHUTTLE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes
SHUTTLE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data
SHUTTLE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection
SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes
SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes
SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data
SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection
SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Trunk Lid Release Command
SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Keyless Buzzer
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Read codes
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Ignition Key Cylinder Light Command
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Interior Light Command
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Foot Light Command
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Left Turn Signal Command
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Right Turn Signal Command
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Hazard Flasher

SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
SHUTTLE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
SHUTTLE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
SHUTTLE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
SHUTTLE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
SHUTTLE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
SHUTTLE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
SHUTTLE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
SHUTTLE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
SHUTTLE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
SHUTTLE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
SHUTTLE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
SHUTTLE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/Security	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
SHUTTLE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
SHUTTLE	/	BODY ELECTRICAL/Security	MFF	History Data	
SHUTTLE	/	BODY ELECTRICAL/Security	MFF	History Clear	
SHUTTLE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
SHUTTLE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
SHUTTLE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
SHUTTLE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
SHUTTLE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
SHUTTLE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
SHUTTLE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
SHUTTLE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
SHUTTLE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
SHUTTLE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
SHUTTLE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
SHUTTLE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid

SHUTTLE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
SHUTTLE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
SHUTTLE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
SHUTTLE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
SHUTTLE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
SHUTTLE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
SHUTTLE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
SHUTTLE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
SHUTTLE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
SHUTTLE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read ECU Information	
SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read codes	
SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Erase Codes	
SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read Freeze Frame Data	
SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Read Live Data	
SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	CMBS (CMS) ACTIVATION HISTORY	
SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Miscellaneous Test	RADAR AIMING
SHUTTLE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> )	M2E	Miscellaneous Test	CMBS Brake
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
SHUTTLE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
SHUTTLE	/	DBW	M34	Read ECU Information	
SHUTTLE	/	DBW	M34	Read codes	
SHUTTLE	/	DBW	M34	Erase Codes	
SHUTTLE	/	DBW	M34	Read Freeze Frame Data	
SHUTTLE	/	DBW	M34	Read Live Data	
SHUTTLE	/	DBW	M34	Inspection	Idle Speed Adjust
SHUTTLE	/	DBW	M34	Inspection	Throttle Test
SHUTTLE	/	DBW	M34	ECM Reset	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear

SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
SHUTTLE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
SHUTTLE	/	Capacitor Control System (EDLC)	M12	Read codes	
SHUTTLE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
SHUTTLE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
SHUTTLE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
SHUTTLE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
SHUTTLE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
SHUTTLE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
SHUTTLE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
SHUTTLE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
SHUTTLE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
SHUTTLE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
SHUTTLE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
SHUTTLE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
SHUTTLE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
SHUTTLE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
SHUTTLE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
SHUTTLE	/	Electric Powertrain / IMA	M66	Read ECU Information	
SHUTTLE	/	Electric Powertrain / IMA	M66	Read codes	
SHUTTLE	/	Electric Powertrain / IMA	M66	Erase Codes	
SHUTTLE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
SHUTTLE	/	Electric Powertrain / IMA	M66	Read Live Data	
SHUTTLE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
SHUTTLE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
SHUTTLE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
SHUTTLE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
SHUTTLE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
SHUTTLE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
SHUTTLE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
SHUTTLE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
SHUTTLE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
SHUTTLE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
SHUTTLE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
SHUTTLE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
SHUTTLE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
SHUTTLE	/	New energy battery (EV)	M44	Read ECU Information	
SHUTTLE	/	New energy battery (EV)	M44	Read codes	
SHUTTLE	/	New energy battery (EV)	M44	Erase Codes	
SHUTTLE	/	New energy battery (EV)	M44	Read Freeze Frame Data	

SHUTTLE	/	New energy battery (EV)	M44	Read Live Data	
SHUTTLE	/	New energy battery (EV)	M44	Inspection	
SHUTTLE	/	New energy battery (EV)	M44	Adjustment	
SHUTTLE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
SHUTTLE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
SHUTTLE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
SHUTTLE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
SHUTTLE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
SHUTTLE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
SHUTTLE	/	FCW LDW	M4E	Read ECU Information	
SHUTTLE	/	FCW LDW	M4E	Read codes	
SHUTTLE	/	FCW LDW	M4E	Erase Codes	
SHUTTLE	/	FCW LDW	M4E	Read Live Data	
SHUTTLE	/	FCW LDW	M4E	Function Test	FCW Drive
SHUTTLE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
SHUTTLE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
SHUTTLE	/	FCW LDW	M4E	Function Test	Indicator Drive
SHUTTLE	/	FCW LDW	M4E	Adjustment	
SHUTTLE	/	Instrument Display System (GAUGE)	M2C	Read codes	
SHUTTLE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
SHUTTLE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Read codes	
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M01	Bleeding	ALL SENSORS
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Read codes	
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Read codes	
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
SHUTTLE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Read codes	
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
SHUTTLE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Customize	

SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
SHUTTLE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
SHUTTLE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
SHUTTLE	/	IMA	M63	Read ECU Information	
SHUTTLE	/	IMA	M63	Read codes	
SHUTTLE	/	IMA	M63	Erase Codes	
SHUTTLE	/	IMA	M63	Read Freeze Frame Data	
SHUTTLE	/	IMA	M63	Read Live Data	
SHUTTLE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
SHUTTLE	/	IMA	M63	Adjustment	SOC PRESET
SHUTTLE	/	IMA	M64	Read ECU Information	
SHUTTLE	/	IMA	M64	Read codes	
SHUTTLE	/	IMA	M64	Erase Codes	
SHUTTLE	/	IMA	M64	Read Freeze Frame Data	
SHUTTLE	/	IMA	M64	Read Live Data	
SHUTTLE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
SHUTTLE	/	IMA	M64	Adjustment	SOC PRESET
SHUTTLE	/	IMA	M65	Read ECU Information	
SHUTTLE	/	IMA	M65	Read codes	
SHUTTLE	/	IMA	M65	Erase Codes	
SHUTTLE	/	IMA	M65	Read Freeze Frame Data	
SHUTTLE	/	IMA	M65	Read Live Data	
SHUTTLE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
SHUTTLE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
SHUTTLE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
SHUTTLE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
SHUTTLE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
SHUTTLE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
SHUTTLE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
SHUTTLE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
SHUTTLE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
SHUTTLE	/	Night Vision System (INVS)	0XB1	Read codes	
SHUTTLE	/	Night Vision System (INVS)	0XB1	Erase Codes	
SHUTTLE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
SHUTTLE	/	Night Vision System (INVS)	0XB1	Read Live Data	
SHUTTLE	/	Night Vision System (INVS)	0XB1	Adjustment	
SHUTTLE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
SHUTTLE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
SHUTTLE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
SHUTTLE	/	i-SHIFT	0XB0	Read ECU Information	
SHUTTLE	/	i-SHIFT	0XB0	Read codes	
SHUTTLE	/	i-SHIFT	0XB0	Erase Codes	
SHUTTLE	/	i-SHIFT	0XB0	Read Live Data	
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Read codes	
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Self Check	
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	History Data	
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output



SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
SHUTTLE	/	Keyless Entry Control System (KAS)	M99	Registration	
SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
SHUTTLE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
SHUTTLE	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
SHUTTLE	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
SHUTTLE	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
SHUTTLE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
SHUTTLE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
SHUTTLE	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
SHUTTLE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
SHUTTLE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
SHUTTLE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
SHUTTLE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
SHUTTLE	/	Management ECU Module (ME)	M74	Read ECU Information	
SHUTTLE	/	Management ECU Module (ME)	M74	Read codes	
SHUTTLE	/	Management ECU Module (ME)	M74	Erase Codes	
SHUTTLE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
SHUTTLE	/	Management ECU Module (ME)	M74	Read Live Data	
SHUTTLE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
SHUTTLE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
SHUTTLE	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
SHUTTLE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Read codes	
SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Customization	
SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
SHUTTLE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
SHUTTLE	/	Power Control Unit (PCU)	M83	Read ECU Information	
SHUTTLE	/	Power Control Unit (PCU)	M83	Read codes	
SHUTTLE	/	Power Control Unit (PCU)	M83	Erase Codes	
SHUTTLE	/	Power Control Unit (PCU)	M83	Read Live Data	
SHUTTLE	/	Power Control Unit (PCU)	M83	Self Check	
SHUTTLE	/	Power Control Unit (PCU)	M83	History Data	
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Read codes	
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Erase Codes	
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
SHUTTLE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
SHUTTLE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
SHUTTLE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
SHUTTLE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
SHUTTLE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
SHUTTLE	/	Engine Control System (PGM-FI)	M50	Read codes	

SHUTTLE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
SHUTTLE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
SHUTTLE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
SHUTTLE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
SHUTTLE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
SHUTTLE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
SHUTTLE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
SHUTTLE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
SHUTTLE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
SHUTTLE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Read codes	
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
SHUTTLE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
SHUTTLE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
SHUTTLE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
SHUTTLE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
SHUTTLE	/	Four-wheel precision steering control system (PAWSC) M96	M96	Read codes	
SHUTTLE	/	Four-wheel precision steering control system (PAWSC) M96	M96	Erase Codes	
SHUTTLE	/	Four-wheel precision steering control system (PAWSC) M96	M96	Read Live Data	
SHUTTLE	/	PSR	M27	Read ECU Information	
SHUTTLE	/	PSR	M27	Read codes	
SHUTTLE	/	PSR	M27	Erase Codes	
SHUTTLE	/	PSR	M27	Read Live Data	
SHUTTLE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
SHUTTLE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
SHUTTLE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
SHUTTLE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
SHUTTLE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
SHUTTLE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
SHUTTLE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
SHUTTLE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
SHUTTLE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
SHUTTLE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
SHUTTLE	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
SHUTTLE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
SHUTTLE	/	Remote starter (RS)	M90	System Check	
SHUTTLE	/	Remote starter (RS)	M90	HISTORY	
SHUTTLE	/	Remote starter (RS)	M90	Registration	
SHUTTLE	/	Seat load cell (SWS)	M6F	Read ECU Information	
SHUTTLE	/	Seat load cell (SWS)	M6F	Read codes	
SHUTTLE	/	Seat load cell (SWS)	M6F	Erase Codes	
SHUTTLE	/	Seat load cell (SWS)	M6F	Read Live Data	
SHUTTLE	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
SHUTTLE	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
SHUTTLE	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
SHUTTLE	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
SHUTTLE	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
SHUTTLE	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
SHUTTLE	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
SHUTTLE	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	

SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
SHUTTLE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
SHUTTLE	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
SHUTTLE	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
SHUTTLE	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
SHUTTLE	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
SHUTTLE	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
SHUTTLE	/	Groove track drive unit (SLOT ECU)	M98	History Data	
SHUTTLE	/	Groove track drive unit (SLOT ECU)	M98	System Information	
SHUTTLE	/	Airbag Control System (SRS)	M9F	Read ECU Information	
SHUTTLE	/	Airbag Control System (SRS)	M9F	Read codes	
SHUTTLE	/	Airbag Control System (SRS)	M9F	Erase Codes	
SHUTTLE	/	Airbag Control System (SRS)	M9F	Read Live Data	
SHUTTLE	/	Airbag Control System (SRS)	MA0	Read ECU Information	
SHUTTLE	/	Airbag Control System (SRS)	MA0	Read codes	
SHUTTLE	/	Airbag Control System (SRS)	MA0	Erase Codes	
SHUTTLE	/	Airbag Control System (SRS)	MA0	Read Live Data	
SHUTTLE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
SHUTTLE	/	Airbag Control System (SRS)	MA1	Read codes	
SHUTTLE	/	Airbag Control System (SRS)	MA1	Erase Codes	
SHUTTLE	/	Airbag Control System (SRS)	MA1	Read Live Data	
SHUTTLE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
SHUTTLE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
SHUTTLE	/	Airbag Control System (SRS)	M2A	Read codes	
SHUTTLE	/	Airbag Control System (SRS)	M2A	Erase Codes	
SHUTTLE	/	Airbag Control System (SRS)	M2A	Read Live Data	
SHUTTLE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
SHUTTLE	/	Airbag Control System (SRS)	M9C	Read codes	
SHUTTLE	/	Airbag Control System (SRS)	M9C	Erase Codes	
SHUTTLE	/	Airbag Control System (SRS)	M9C	Read Live Data	
SHUTTLE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
SHUTTLE	/	Airbag Control System (SRS)	M9D	Read codes	
SHUTTLE	/	Airbag Control System (SRS)	M9D	Erase Codes	
SHUTTLE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
SHUTTLE	/	Airbag Control System (SRS)	M9D	Read Live Data	
SHUTTLE	/	Airbag Control System (SRS)	M9D	Parameter Information	
SHUTTLE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
SHUTTLE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
SHUTTLE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
SHUTTLE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
SHUTTLE	/	Airbag Control System (SRS)	M9D	Function Test	
SHUTTLE	/	Airbag Control System (SRS)	M9D	System Information	
SHUTTLE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
SHUTTLE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
SHUTTLE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
SHUTTLE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
SHUTTLE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
SHUTTLE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
SHUTTLE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
SHUTTLE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
SHUTTLE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
SHUTTLE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
SHUTTLE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
SHUTTLE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
SHUTTLE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
SHUTTLE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
SHUTTLE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
SHUTTLE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
SHUTTLE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
SHUTTLE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
SHUTTLE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
SHUTTLE HYBRID	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
SHUTTLE HYBRID	/	Four-wheel steering control system (4WS)	M52	Read codes	
SHUTTLE HYBRID	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
SHUTTLE HYBRID	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
SHUTTLE HYBRID	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
SHUTTLE HYBRID	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
SHUTTLE HYBRID	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
SHUTTLE HYBRID	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK

SHUTTLE HYBRID /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
SHUTTLE HYBRID /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
SHUTTLE HYBRID /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	Read ECU Information	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	Read codes	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	Erase Codes	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	Read Live Data	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3B	Read ECU Information	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3B	Read codes	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3B	Erase Codes	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3B	Read Live Data	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3C	Read ECU Information	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3C	Read codes	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M3C	Erase Codes	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Read ECU Information	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Read codes	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Erase Codes	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	ECMPCM Reset	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Read Live Data	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M82	Read ECU Information	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M82	Read codes	
SHUTTLE HYBRID /	Automatic shift control system (A/T)	M82	Erase Codes	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
SHUTTLE HYBRID /	Active Engine Control Support System (ACM)	M06	Read ECU Information	
SHUTTLE HYBRID /	Active Engine Control Support System (ACM)	M06	Read codes	
SHUTTLE HYBRID /	Active Engine Control Support System (ACM)	M06	Erase Codes	
SHUTTLE HYBRID /	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
SHUTTLE HYBRID /	Active Engine Control Support System (ACM)	M06	Read Live Data	
SHUTTLE HYBRID /	Active Engine Control Support System (ACM)	M06	ACM Reset	
SHUTTLE HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
SHUTTLE HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
SHUTTLE HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
SHUTTLE HYBRID /	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
SHUTTLE HYBRID /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
SHUTTLE HYBRID /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
SHUTTLE HYBRID /	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
SHUTTLE HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read ECU Information	
SHUTTLE HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read codes	
SHUTTLE HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Erase Codes	
SHUTTLE HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Freeze Frame Data	
SHUTTLE HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Live Data	
SHUTTLE HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Function Test	Damper Force Operation Test
SHUTTLE HYBRID /	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Adjustment	Damper Stroke Calibration

SHUTTLE HYBRID /	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
SHUTTLE HYBRID /	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
SHUTTLE HYBRID /	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
SHUTTLE HYBRID /	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
SHUTTLE HYBRID /	Transmission Control System (AT)	M18	Read ECU Information	
SHUTTLE HYBRID /	Transmission Control System (AT)	M18	Read codes	
SHUTTLE HYBRID /	Transmission Control System (AT)	M18	Erase Codes	
SHUTTLE HYBRID /	Transmission Control System (AT)	M18	Read Freeze Frame Data	
SHUTTLE HYBRID /	Transmission Control System (AT)	M18	Read Live Data	
SHUTTLE HYBRID /	Transmission Control System (AT)	M18	Adjustment	
SHUTTLE HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
SHUTTLE HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Read codes	
SHUTTLE HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
SHUTTLE HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
SHUTTLE HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
SHUTTLE HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
SHUTTLE HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
SHUTTLE HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
SHUTTLE HYBRID /	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	Select year
SHUTTLE HYBRID /	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
SHUTTLE HYBRID /	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
SHUTTLE HYBRID /	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
SHUTTLE HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
SHUTTLE HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
SHUTTLE HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
SHUTTLE HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
SHUTTLE HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
SHUTTLE HYBRID /	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
SHUTTLE HYBRID /	BODY ELECTRICAL/e-Call	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
SHUTTLE HYBRID /	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Read Live Data	

SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
SHUTTLE HYBRID /	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
SHUTTLE HYBRID /	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
SHUTTLE HYBRID /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
SHUTTLE HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
SHUTTLE HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
SHUTTLE HYBRID /	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
SHUTTLE HYBRID /	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
SHUTTLE HYBRID /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	

SHUTTLE HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
SHUTTLE HYBRID /	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
SHUTTLE HYBRID /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Security	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Security	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Security	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
SHUTTLE HYBRID /	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
SHUTTLE HYBRID /	BODY ELECTRICAL/Security	MFF	History Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Security	MFF	History Clear	
SHUTTLE HYBRID /	BODY ELECTRICAL/Telematics	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
SHUTTLE HYBRID /	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
SHUTTLE HYBRID /	BODY ELECTRICAL/Wiper	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
SHUTTLE HYBRID /	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
SHUTTLE HYBRID /	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
SHUTTLE HYBRID /	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP Security	MFF	Read codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP Security	MFF	History Data	
SHUTTLE HYBRID /	BODY ELECTRICAL/YOP Security	MFF	History Clear	
SHUTTLE HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
SHUTTLE HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
SHUTTLE HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
SHUTTLE HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
SHUTTLE HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
SHUTTLE HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
SHUTTLE HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
SHUTTLE HYBRID /	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
SHUTTLE HYBRID /	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
SHUTTLE HYBRID /	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
SHUTTLE HYBRID /	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
SHUTTLE HYBRID /	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
SHUTTLE HYBRID /	Urban Active Brake Control System (CBAS)	M32	Read codes	
SHUTTLE HYBRID /	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
SHUTTLE HYBRID /	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
SHUTTLE HYBRID /	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
SHUTTLE HYBRID /	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
SHUTTLE HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
SHUTTLE HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
SHUTTLE HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
SHUTTLE HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
SHUTTLE HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
SHUTTLE HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
SHUTTLE HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
SHUTTLE HYBRID /	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	

SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	Erase Codes	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	Read Freeze Frame Data	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	Read Live Data	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	ECMPCM Reset	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Lock Solenoid Test
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Shift Solenoid Tests
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M1B)	Miscellaneous Test	Electrical Oil Pump Activation
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M33)	Read ECU Information	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M33)	Read codes	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M33)	Erase Codes	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M33)	Read Freeze Frame Data	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M33)	Read Live Data	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M33)	ECMPCM Reset	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Read codes	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	ECMPCM Reset	
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B
SHUTTLE HYBRID /	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P
SHUTTLE HYBRID /	DBW M34	Read ECU Information	
SHUTTLE HYBRID /	DBW M34	Read codes	
SHUTTLE HYBRID /	DBW M34	Erase Codes	
SHUTTLE HYBRID /	DBW M34	Read Freeze Frame Data	
SHUTTLE HYBRID /	DBW M34	Read Live Data	
SHUTTLE HYBRID /	DBW M34	Inspection	Idle Speed Adjust
SHUTTLE HYBRID /	DBW M34	Inspection	Throttle Test
SHUTTLE HYBRID /	DBW M34	ECM Reset	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Read codes	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M37	Read codes	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M37	Erase Codes	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M37	Read Live Data	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Read codes	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Erase Codes	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Read Live Data	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
SHUTTLE HYBRID /	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
SHUTTLE HYBRID /	Capacitor Control System (EDLC) M12	Read codes	



SHUTTLE HYBRID /	Capacitor Control System (EDLC)	M12	Erase Codes	
SHUTTLE HYBRID /	Capacitor Control System (EDLC)	M12	Read Live Data	
SHUTTLE HYBRID /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
SHUTTLE HYBRID /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
SHUTTLE HYBRID /	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
SHUTTLE HYBRID /	Electronic Brake Control System (EPB)	M1F	Read codes	
SHUTTLE HYBRID /	Electronic Brake Control System (EPB)	M1F	Erase Codes	
SHUTTLE HYBRID /	Electronic Brake Control System (EPB)	M1F	Read Live Data	
SHUTTLE HYBRID /	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
SHUTTLE HYBRID /	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
SHUTTLE HYBRID /	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
SHUTTLE HYBRID /	Electronic Brake Control System (EPB)	M3E	Read codes	
SHUTTLE HYBRID /	Electronic Brake Control System (EPB)	M3E	Erase Codes	
SHUTTLE HYBRID /	Electronic Brake Control System (EPB)	M3E	Read Live Data	
SHUTTLE HYBRID /	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
SHUTTLE HYBRID /	Electric Powertrain / IMA	M66	Read ECU Information	
SHUTTLE HYBRID /	Electric Powertrain / IMA	M66	Read codes	
SHUTTLE HYBRID /	Electric Powertrain / IMA	M66	Erase Codes	
SHUTTLE HYBRID /	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
SHUTTLE HYBRID /	Electric Powertrain / IMA	M66	Read Live Data	
SHUTTLE HYBRID /	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
SHUTTLE HYBRID /	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
SHUTTLE HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
SHUTTLE HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
SHUTTLE HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
SHUTTLE HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
SHUTTLE HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
SHUTTLE HYBRID /	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
SHUTTLE HYBRID /	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
SHUTTLE HYBRID /	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
SHUTTLE HYBRID /	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
SHUTTLE HYBRID /	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M20	Read codes	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Read codes	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Read codes	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
SHUTTLE HYBRID /	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
SHUTTLE HYBRID /	New energy battery (EV)	M44	Read ECU Information	
SHUTTLE HYBRID /	New energy battery (EV)	M44	Read codes	
SHUTTLE HYBRID /	New energy battery (EV)	M44	Erase Codes	
SHUTTLE HYBRID /	New energy battery (EV)	M44	Read Freeze Frame Data	
SHUTTLE HYBRID /	New energy battery (EV)	M44	Read Live Data	
SHUTTLE HYBRID /	New energy battery (EV)	M44	Inspection	
SHUTTLE HYBRID /	New energy battery (EV)	M44	Adjustment	
SHUTTLE HYBRID /	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
SHUTTLE HYBRID /	Electronic vacuum pump (EVPS)	M21	Read codes	
SHUTTLE HYBRID /	Electronic vacuum pump (EVPS)	M21	Erase Codes	
SHUTTLE HYBRID /	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
SHUTTLE HYBRID /	Electronic vacuum pump (EVPS)	M21	Read Live Data	
SHUTTLE HYBRID /	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
SHUTTLE HYBRID /	Electronic vacuum pump (EVPS)	M22	Read codes	
SHUTTLE HYBRID /	Electronic vacuum pump (EVPS)	M22	Erase Codes	
SHUTTLE HYBRID /	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
SHUTTLE HYBRID /	Electronic vacuum pump (EVPS)	M22	Read Live Data	
SHUTTLE HYBRID /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
SHUTTLE HYBRID /	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
SHUTTLE HYBRID /	FCW LDW	M4E	Read ECU Information	
SHUTTLE HYBRID /	FCW LDW	M4E	Read codes	
SHUTTLE HYBRID /	FCW LDW	M4E	Erase Codes	
SHUTTLE HYBRID /	FCW LDW	M4E	Read Live Data	
SHUTTLE HYBRID /	FCW LDW	M4E	Function Test	FCW Drive
SHUTTLE HYBRID /	FCW LDW	M4E	Function Test	Left side lane departure warning
SHUTTLE HYBRID /	FCW LDW	M4E	Function Test	Right side lane departure warning
SHUTTLE HYBRID /	FCW LDW	M4E	Function Test	Indicator Drive
SHUTTLE HYBRID /	FCW LDW	M4E	Adjustment	
SHUTTLE HYBRID /	Instrument Display System (GAUGE)	M2C	Read codes	
SHUTTLE HYBRID /	Instrument Display System (GAUGE)	M2C	Erase Codes	
SHUTTLE HYBRID /	Instrument Display System (GAUGE)	M2C	Read Live Data	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Read ECU Information	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Read codes	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Erase Codes	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Read Live Data	

SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Read ECU Information	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Read codes	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Erase Codes	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Read Live Data	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Read ECU Information	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Read codes	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Erase Codes	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Read Live Data	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Pulser Test	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Read codes	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Erase Codes	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Read Live Data	
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
SHUTTLE HYBRID /	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
SHUTTLE HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
SHUTTLE HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read codes	
SHUTTLE HYBRID /	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
SHUTTLE HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
SHUTTLE HYBRID /	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
SHUTTLE HYBRID /	Intelligent Parking Control System (SPS)	M9B	Customize	
SHUTTLE HYBRID /	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
SHUTTLE HYBRID /	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
SHUTTLE HYBRID /	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
SHUTTLE HYBRID /	Hydraulic booster control system (HBS)	M5F	Read codes	
SHUTTLE HYBRID /	Hydraulic booster control system (HBS)	M5F	Erase Codes	
SHUTTLE HYBRID /	Hydraulic booster control system (HBS)	M5F	Read Live Data	
SHUTTLE HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
SHUTTLE HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
SHUTTLE HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
SHUTTLE HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
SHUTTLE HYBRID /	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
SHUTTLE HYBRID /	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
SHUTTLE HYBRID /	IMA	M63	Read ECU Information	
SHUTTLE HYBRID /	IMA	M63	Read codes	
SHUTTLE HYBRID /	IMA	M63	Erase Codes	
SHUTTLE HYBRID /	IMA	M63	Read Freeze Frame Data	
SHUTTLE HYBRID /	IMA	M63	Read Live Data	
SHUTTLE HYBRID /	IMA	M63	Function Test	IPU MODULE FAN DRIVE
SHUTTLE HYBRID /	IMA	M63	Adjustment	SOC PRESET
SHUTTLE HYBRID /	IMA	M64	Read ECU Information	
SHUTTLE HYBRID /	IMA	M64	Read codes	
SHUTTLE HYBRID /	IMA	M64	Erase Codes	
SHUTTLE HYBRID /	IMA	M64	Read Freeze Frame Data	
SHUTTLE HYBRID /	IMA	M64	Read Live Data	
SHUTTLE HYBRID /	IMA	M64	Function Test	IPU MODULE FAN DRIVE
SHUTTLE HYBRID /	IMA	M64	Adjustment	SOC PRESET
SHUTTLE HYBRID /	IMA	M65	Read ECU Information	
SHUTTLE HYBRID /	IMA	M65	Read codes	
SHUTTLE HYBRID /	IMA	M65	Erase Codes	
SHUTTLE HYBRID /	IMA	M65	Read Freeze Frame Data	
SHUTTLE HYBRID /	IMA	M65	Read Live Data	
SHUTTLE HYBRID /	IMA	M65	Function Test	IPU MODULE FAN DRIVE

SHUTTLE HYBRID /	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
SHUTTLE HYBRID /	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
SHUTTLE HYBRID /	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
SHUTTLE HYBRID /	Intake Sounder Control System (ISC)	M6D	Read codes	
SHUTTLE HYBRID /	Intake Sounder Control System (ISC)	M6D	Erase Codes	
SHUTTLE HYBRID /	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
SHUTTLE HYBRID /	Intake Sounder Control System (ISC)	M6D	Read Live Data	
SHUTTLE HYBRID /	Night Vision System (INVS)	0XB1	Read ECU Information	
SHUTTLE HYBRID /	Night Vision System (INVS)	0XB1	Read codes	
SHUTTLE HYBRID /	Night Vision System (INVS)	0XB1	Erase Codes	
SHUTTLE HYBRID /	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
SHUTTLE HYBRID /	Night Vision System (INVS)	0XB1	Read Live Data	
SHUTTLE HYBRID /	Night Vision System (INVS)	0XB1	Adjustment	
SHUTTLE HYBRID /	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
SHUTTLE HYBRID /	Night Vision System (INVS)	0XB1	Function Test	Camera Test
SHUTTLE HYBRID /	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
SHUTTLE HYBRID /	i-SHIFT	0XB0	Read ECU Information	
SHUTTLE HYBRID /	i-SHIFT	0XB0	Read codes	
SHUTTLE HYBRID /	i-SHIFT	0XB0	Erase Codes	
SHUTTLE HYBRID /	i-SHIFT	0XB0	Read Live Data	
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Read ECU Information	
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Read codes	
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Erase Codes	
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Read Live Data	
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Self Check	
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	History Data	
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
SHUTTLE HYBRID /	Keyless Entry Control System (KAS)	M99	Registration	
SHUTTLE HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
SHUTTLE HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
SHUTTLE HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
SHUTTLE HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
SHUTTLE HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
SHUTTLE HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
SHUTTLE HYBRID /	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
SHUTTLE HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
SHUTTLE HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
SHUTTLE HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
SHUTTLE HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
SHUTTLE HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
SHUTTLE HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
SHUTTLE HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
SHUTTLE HYBRID /	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST

SHUTTLE HYBRID /	Electronically assisted lane keeping control system (Lk M71	Customize	DRIVING WILL
SHUTTLE HYBRID /	Electronically assisted lane keeping control system (Lk M71	Customize	CONTROL DELAY
SHUTTLE HYBRID /	Management ECU Module (ME) M74	Read ECU Information	
SHUTTLE HYBRID /	Management ECU Module (ME) M74	Read codes	
SHUTTLE HYBRID /	Management ECU Module (ME) M74	Erase Codes	
SHUTTLE HYBRID /	Management ECU Module (ME) M74	Read Freeze Frame Data	
SHUTTLE HYBRID /	Management ECU Module (ME) M74	Read Live Data	
SHUTTLE HYBRID /	Multi-view camera and parking assist system (MVC/P) M26	Read ECU Information	
SHUTTLE HYBRID /	Multi-view camera and parking assist system (MVC/P) M26	Read codes	
SHUTTLE HYBRID /	Multi-view camera and parking assist system (MVC/P) M26	Erase Codes	
SHUTTLE HYBRID /	Multi-view camera and parking assist system (MVC/P) M26	Read Live Data	
SHUTTLE HYBRID /	Multi-view camera system (MVCS) M7A	Read ECU Information	
SHUTTLE HYBRID /	Multi-view camera system (MVCS) M7A	Read codes	
SHUTTLE HYBRID /	Multi-view camera system (MVCS) M7A	Erase Codes	
SHUTTLE HYBRID /	Multi-view camera system (MVCS) M7A	Read Live Data	
SHUTTLE HYBRID /	Multi-view camera system (MVCS) M7A	Customization	
SHUTTLE HYBRID /	Multi-view camera system (MVCS) M7A	Function Test	Monitor Out
SHUTTLE HYBRID /	Multi-view camera system (MVCS) M7A	Function Test	LED Light
SHUTTLE HYBRID /	Multi-view camera system (MVCS) M7A	Function Test	Front Camera Image
SHUTTLE HYBRID /	Multi-view camera system (MVCS) M7A	Function Test	Left Side Camera Image
SHUTTLE HYBRID /	Multi-view camera system (MVCS) M7A	Function Test	Right Side Camera Image
SHUTTLE HYBRID /	Multi-view camera system (MVCS) M7A	Function Test	Rear Camera Image
SHUTTLE HYBRID /	Multi-view camera system (MVCS) M7A	Function Test	MVC Function
SHUTTLE HYBRID /	Power Control Unit (PCU) M83	Read ECU Information	
SHUTTLE HYBRID /	Power Control Unit (PCU) M83	Read codes	
SHUTTLE HYBRID /	Power Control Unit (PCU) M83	Erase Codes	
SHUTTLE HYBRID /	Power Control Unit (PCU) M83	Read Live Data	
SHUTTLE HYBRID /	Power Control Unit (PCU) M83	Self Check	
SHUTTLE HYBRID /	Power Control Unit (PCU) M83	History Data	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Read ECU Information	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Read codes	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Erase Codes	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Readiness Codes	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Read Freeze Frame Data	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	ECM/PCM Reset	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Read Live Data	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	EVAP Test
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	IMT (IMRC) TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	EGR TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	IACV TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	VTC TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	VTEC TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	ETCS (TAC) TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	RADIATOR FAN
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	A/C CLUTCH
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP ON
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	FUEL PUMP OFF
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	ALL INJECTORS STOP
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	ONE INJECTOR STOP
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	CRUISE CONTROL CANCEL HISTORY
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Inspection	IDLE STOP STARTER COUNTER CHECK
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Adjustment	CRANK (CKP) PATTERN
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	TP POSITION CHECK	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	VIN CHECK	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M23	Replace ECM/PCM	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	Read ECU Information	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	Read codes	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	Erase Codes	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	Readiness Codes	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	Read Freeze Frame Data	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	ECM/PCM Reset	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	Read Live Data	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	Inspection	IDLE ADJUST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	Inspection	EVAP Test
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	Inspection	VTEC LOW V/T CHECK
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	Inspection	O2S TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	VIN CHECK	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M50	Replace ECM/PCM	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Read ECU Information	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Read codes	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Erase Codes	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Readiness Codes	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Read Freeze Frame Data	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	ECM/PCM Reset	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Read Live Data	
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection	IDLE ADJUST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection	EVAP Test
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection	VTC TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection	IMT (IMRC) TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection	EGR TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection	VTEC TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection	IACV TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection	O2S TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection	RADIATOR FAN
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection	A/C CLUTCH
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection	FUEL PUMP ON
SHUTTLE HYBRID /	Engine Control System (PGM-FI) M86	Inspection	FUEL PUMP OFF

SHUTTLE HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
SHUTTLE HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
SHUTTLE HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
SHUTTLE HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ACM
SHUTTLE HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
SHUTTLE HYBRID /	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
SHUTTLE HYBRID /	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
SHUTTLE HYBRID /	Engine Control System (PGM-FI)	M86	VIN CHECK	
SHUTTLE HYBRID /	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
SHUTTLE HYBRID /	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
SHUTTLE HYBRID /	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
SHUTTLE HYBRID /	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
SHUTTLE HYBRID /	PSR	M27	Read ECU Information	
SHUTTLE HYBRID /	PSR	M27	Read codes	
SHUTTLE HYBRID /	PSR	M27	Erase Codes	
SHUTTLE HYBRID /	PSR	M27	Read Live Data	
SHUTTLE HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
SHUTTLE HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
SHUTTLE HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
SHUTTLE HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
SHUTTLE HYBRID /	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
SHUTTLE HYBRID /	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
SHUTTLE HYBRID /	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
SHUTTLE HYBRID /	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
SHUTTLE HYBRID /	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
SHUTTLE HYBRID /	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
SHUTTLE HYBRID /	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
SHUTTLE HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
SHUTTLE HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
SHUTTLE HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
SHUTTLE HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
SHUTTLE HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
SHUTTLE HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
SHUTTLE HYBRID /	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
SHUTTLE HYBRID /	Remote starter (RS)	M90	System Check	
SHUTTLE HYBRID /	Remote starter (RS)	M90	HISTORY	
SHUTTLE HYBRID /	Remote starter (RS)	M90	Registration	
SHUTTLE HYBRID /	Seat load cell (SWS)	M6F	Read ECU Information	
SHUTTLE HYBRID /	Seat load cell (SWS)	M6F	Read codes	
SHUTTLE HYBRID /	Seat load cell (SWS)	M6F	Erase Codes	
SHUTTLE HYBRID /	Seat load cell (SWS)	M6F	Read Live Data	
SHUTTLE HYBRID /	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
SHUTTLE HYBRID /	Seat load cell (SWS)	M6F	System Check	Seat Output Check
SHUTTLE HYBRID /	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
SHUTTLE HYBRID /	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
SHUTTLE HYBRID /	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
SHUTTLE HYBRID /	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
SHUTTLE HYBRID /	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
SHUTTLE HYBRID /	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
SHUTTLE HYBRID /	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
SHUTTLE HYBRID /	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
SHUTTLE HYBRID /	Groove track drive unit (SLOT ECU)	M98	Read codes	
SHUTTLE HYBRID /	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
SHUTTLE HYBRID /	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
SHUTTLE HYBRID /	Groove track drive unit (SLOT ECU)	M98	Self Check	
SHUTTLE HYBRID /	Groove track drive unit (SLOT ECU)	M98	History Data	
SHUTTLE HYBRID /	Groove track drive unit (SLOT ECU)	M98	System Information	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9F	Read ECU Information	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9F	Read codes	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9F	Erase Codes	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9F	Read Live Data	
SHUTTLE HYBRID /	Airbag Control System (SRS)	MA0	Read ECU Information	
SHUTTLE HYBRID /	Airbag Control System (SRS)	MA0	Read codes	
SHUTTLE HYBRID /	Airbag Control System (SRS)	MA0	Erase Codes	
SHUTTLE HYBRID /	Airbag Control System (SRS)	MA0	Read Live Data	
SHUTTLE HYBRID /	Airbag Control System (SRS)	MA1	Read ECU Information	
SHUTTLE HYBRID /	Airbag Control System (SRS)	MA1	Read codes	
SHUTTLE HYBRID /	Airbag Control System (SRS)	MA1	Erase Codes	

SHUTTLE HYBRID /	Airbag Control System (SRS)	MA1	Read Live Data	
SHUTTLE HYBRID /	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
SHUTTLE HYBRID /	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
SHUTTLE HYBRID /	Airbag Control System (SRS)	M2A	Read codes	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M2A	Erase Codes	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M2A	Read Live Data	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9C	Read ECU Information	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9C	Read codes	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9C	Erase Codes	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9C	Read Live Data	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9D	Read ECU Information	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9D	Read codes	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9D	Erase Codes	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9D	Read Live Data	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9D	Parameter Information	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9D	Function Test	
SHUTTLE HYBRID /	Airbag Control System (SRS)	M9D	System Information	
SHUTTLE HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
SHUTTLE HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read codes	
SHUTTLE HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
SHUTTLE HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
SHUTTLE HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
SHUTTLE HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
SHUTTLE HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Inspection	
SHUTTLE HYBRID /	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
SHUTTLE HYBRID /	Variable Valve Timing Control System (SVT)	MA2	Function Test	
SHUTTLE HYBRID /	Variable Valve Timing Control System (SVT)	MA2	System Information	
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
SHUTTLE HYBRID /	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
SHUTTLE HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
SHUTTLE HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
SHUTTLE HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
SHUTTLE HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
SHUTTLE HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
SHUTTLE HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
SHUTTLE HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
SHUTTLE HYBRID /	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
SPIKE /	Four-wheel steering control system (4WS)	M52	Read ECU Information	
SPIKE /	Four-wheel steering control system (4WS)	M52	Read codes	
SPIKE /	Four-wheel steering control system (4WS)	M52	Erase Codes	
SPIKE /	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
SPIKE /	Four-wheel steering control system (4WS)	M52	Read Live Data	
SPIKE /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
SPIKE /	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
SPIKE /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
SPIKE /	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
SPIKE /	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
SPIKE /	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
SPIKE /	Automatic shift control system (A/T)	M1E	Read ECU Information	
SPIKE /	Automatic shift control system (A/T)	M1E	Read codes	
SPIKE /	Automatic shift control system (A/T)	M1E	Erase Codes	
SPIKE /	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
SPIKE /	Automatic shift control system (A/T)	M1E	Read Live Data	
SPIKE /	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
SPIKE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
SPIKE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
SPIKE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
SPIKE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
SPIKE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
SPIKE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
SPIKE /	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
SPIKE /	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
SPIKE /	Automatic shift control system (A/T)	M3B	Read ECU Information	
SPIKE /	Automatic shift control system (A/T)	M3B	Read codes	
SPIKE /	Automatic shift control system (A/T)	M3B	Erase Codes	
SPIKE /	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
SPIKE /	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
SPIKE /	Automatic shift control system (A/T)	M3B	Read Live Data	
SPIKE /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
SPIKE /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
SPIKE /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
SPIKE /	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
SPIKE /	Automatic shift control system (A/T)	M3C	Read ECU Information	
SPIKE /	Automatic shift control system (A/T)	M3C	Read codes	
SPIKE /	Automatic shift control system (A/T)	M3C	Erase Codes	
SPIKE /	Automatic shift control system (A/T)	M81	Read ECU Information	
SPIKE /	Automatic shift control system (A/T)	M81	Read codes	

SPIKE	/	Automatic shift control system (A/T)	M81	Erase Codes	
SPIKE	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
SPIKE	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
SPIKE	/	Automatic shift control system (A/T)	M81	Read Live Data	
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
SPIKE	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
SPIKE	/	Automatic shift control system (A/T)	M82	Read ECU Information	
SPIKE	/	Automatic shift control system (A/T)	M82	Read codes	
SPIKE	/	Automatic shift control system (A/T)	M82	Erase Codes	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
SPIKE	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
SPIKE	/	Active Engine Control Support System (ACM)	M06	Read codes	
SPIKE	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
SPIKE	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
SPIKE	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
SPIKE	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
SPIKE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
SPIKE	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
SPIKE	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
SPIKE	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
SPIKE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
SPIKE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
SPIKE	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
SPIKE	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
SPIKE	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
SPIKE	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
SPIKE	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
SPIKE	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
SPIKE	/	Transmission Control System (AT)	M18	Read ECU Information	
SPIKE	/	Transmission Control System (AT)	M18	Read codes	
SPIKE	/	Transmission Control System (AT)	M18	Erase Codes	
SPIKE	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
SPIKE	/	Transmission Control System (AT)	M18	Read Live Data	
SPIKE	/	Transmission Control System (AT)	M18	Adjustment	
SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
SPIKE	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	

SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
SPIKE	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
SPIKE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
SPIKE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
SPIKE	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
SPIKE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
SPIKE	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
SPIKE	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
SPIKE	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
SPIKE	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
SPIKE	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime



SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
SPIKE	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
SPIKE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
SPIKE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
SPIKE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
SPIKE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
SPIKE	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
SPIKE	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
SPIKE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
SPIKE	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
SPIKE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
SPIKE	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
SPIKE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
SPIKE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
SPIKE	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
SPIKE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
SPIKE	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
SPIKE	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
SPIKE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Security	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
SPIKE	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
SPIKE	/	BODY ELECTRICAL/Security	MFF	History Data	
SPIKE	/	BODY ELECTRICAL/Security	MFF	History Clear	
SPIKE	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red

SPIKE	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
SPIKE	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
SPIKE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
SPIKE	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
SPIKE	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
SPIKE	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
SPIKE	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
SPIKE	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
SPIKE	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
SPIKE	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
SPIKE	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
SPIKE	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
SPIKE	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
SPIKE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
SPIKE	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
SPIKE	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
SPIKE	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
SPIKE	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
SPIKE	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
SPIKE	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
SPIKE	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
SPIKE	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
SPIKE	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
SPIKE	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
SPIKE	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
SPIKE	/	DBW	M34	Read ECU Information	
SPIKE	/	DBW	M34	Read codes	

SPIKE	/	DBW	M34	Erase Codes	
SPIKE	/	DBW	M34	Read Freeze Frame Data	
SPIKE	/	DBW	M34	Read Live Data	
SPIKE	/	DBW	M34	Inspection	Idle Speed Adjust
SPIKE	/	DBW	M34	Inspection	Throttle Test
SPIKE	/	DBW	M34	ECM Reset	
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
SPIKE	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
SPIKE	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
SPIKE	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
SPIKE	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
SPIKE	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
SPIKE	/	Capacitor Control System (EDLC)	M12	Read codes	
SPIKE	/	Capacitor Control System (EDLC)	M12	Erase Codes	
SPIKE	/	Capacitor Control System (EDLC)	M12	Read Live Data	
SPIKE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
SPIKE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
SPIKE	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
SPIKE	/	Electronic Brake Control System (EPB)	M1F	Read codes	
SPIKE	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
SPIKE	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
SPIKE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
SPIKE	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
SPIKE	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
SPIKE	/	Electronic Brake Control System (EPB)	M3E	Read codes	
SPIKE	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
SPIKE	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
SPIKE	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
SPIKE	/	Electric Powertrain / IMA	M66	Read ECU Information	
SPIKE	/	Electric Powertrain / IMA	M66	Read codes	
SPIKE	/	Electric Powertrain / IMA	M66	Erase Codes	
SPIKE	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
SPIKE	/	Electric Powertrain / IMA	M66	Read Live Data	
SPIKE	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
SPIKE	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
SPIKE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
SPIKE	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
SPIKE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
SPIKE	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
SPIKE	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
SPIKE	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
SPIKE	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
SPIKE	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
SPIKE	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
SPIKE	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	

SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
SPIKE	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
SPIKE	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
SPIKE	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
SPIKE	/	New energy battery (EV)	M44	Read ECU Information	
SPIKE	/	New energy battery (EV)	M44	Read codes	
SPIKE	/	New energy battery (EV)	M44	Erase Codes	
SPIKE	/	New energy battery (EV)	M44	Read Freeze Frame Data	
SPIKE	/	New energy battery (EV)	M44	Read Live Data	
SPIKE	/	New energy battery (EV)	M44	Inspection	
SPIKE	/	New energy battery (EV)	M44	Adjustment	
SPIKE	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
SPIKE	/	Electronic vacuum pump (EVPS)	M21	Read codes	
SPIKE	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
SPIKE	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
SPIKE	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
SPIKE	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
SPIKE	/	Electronic vacuum pump (EVPS)	M22	Read codes	
SPIKE	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
SPIKE	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
SPIKE	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
SPIKE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
SPIKE	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
SPIKE	/	FCW LDW	M4E	Read ECU Information	
SPIKE	/	FCW LDW	M4E	Read codes	
SPIKE	/	FCW LDW	M4E	Erase Codes	
SPIKE	/	FCW LDW	M4E	Read Live Data	
SPIKE	/	FCW LDW	M4E	Function Test	FCW Drive
SPIKE	/	FCW LDW	M4E	Function Test	Left side lane departure warning
SPIKE	/	FCW LDW	M4E	Function Test	Right side lane departure warning
SPIKE	/	FCW LDW	M4E	Function Test	Indicator Drive
SPIKE	/	FCW LDW	M4E	Adjustment	
SPIKE	/	Instrument Display System (GAUGE)	M2C	Read codes	
SPIKE	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
SPIKE	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
SPIKE	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
SPIKE	/	Anti-lock brake control system (ABS)	M01	Read codes	
SPIKE	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
SPIKE	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
SPIKE	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
SPIKE	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
SPIKE	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
SPIKE	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
SPIKE	/	Anti-lock brake control system (ABS)	M02	Read codes	
SPIKE	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
SPIKE	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
SPIKE	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
SPIKE	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
SPIKE	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
SPIKE	/	Anti-lock brake control system (ABS)	M03	Read codes	
SPIKE	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
SPIKE	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA

SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
SPIKE	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
SPIKE	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
SPIKE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
SPIKE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
SPIKE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
SPIKE	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
SPIKE	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
SPIKE	/	Anti-lock brake control system (ABS)	M19	Read codes	
SPIKE	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
SPIKE	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
SPIKE	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
SPIKE	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
SPIKE	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
SPIKE	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Customize	
SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
SPIKE	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
SPIKE	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
SPIKE	/	Hydraulic booster control system (HBS)	M5F	Read codes	
SPIKE	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
SPIKE	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
SPIKE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
SPIKE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
SPIKE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
SPIKE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
SPIKE	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
SPIKE	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
SPIKE	/	IMA	M63	Read ECU Information	
SPIKE	/	IMA	M63	Read codes	
SPIKE	/	IMA	M63	Erase Codes	
SPIKE	/	IMA	M63	Read Freeze Frame Data	
SPIKE	/	IMA	M63	Read Live Data	
SPIKE	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
SPIKE	/	IMA	M63	Adjustment	SOC PRESET
SPIKE	/	IMA	M64	Read ECU Information	
SPIKE	/	IMA	M64	Read codes	
SPIKE	/	IMA	M64	Erase Codes	
SPIKE	/	IMA	M64	Read Freeze Frame Data	
SPIKE	/	IMA	M64	Read Live Data	
SPIKE	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
SPIKE	/	IMA	M64	Adjustment	SOC PRESET
SPIKE	/	IMA	M65	Read ECU Information	
SPIKE	/	IMA	M65	Read codes	
SPIKE	/	IMA	M65	Erase Codes	
SPIKE	/	IMA	M65	Read Freeze Frame Data	
SPIKE	/	IMA	M65	Read Live Data	
SPIKE	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
SPIKE	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
SPIKE	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
SPIKE	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
SPIKE	/	Intake Sounder Control System (ISC)	M6D	Read codes	
SPIKE	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
SPIKE	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
SPIKE	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
SPIKE	/	Night Vision System (INVS)	0XB1	Read ECU Information	
SPIKE	/	Night Vision System (INVS)	0XB1	Read codes	
SPIKE	/	Night Vision System (INVS)	0XB1	Erase Codes	
SPIKE	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
SPIKE	/	Night Vision System (INVS)	0XB1	Read Live Data	
SPIKE	/	Night Vision System (INVS)	0XB1	Adjustment	
SPIKE	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
SPIKE	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
SPIKE	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
SPIKE	/	i-SHIFT	0XB0	Read ECU Information	
SPIKE	/	i-SHIFT	0XB0	Read codes	
SPIKE	/	i-SHIFT	0XB0	Erase Codes	
SPIKE	/	i-SHIFT	0XB0	Read Live Data	
SPIKE	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
SPIKE	/	Keyless Entry Control System (KAS)	M99	Read codes	
SPIKE	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
SPIKE	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
SPIKE	/	Keyless Entry Control System (KAS)	M99	Self Check	
SPIKE	/	Keyless Entry Control System (KAS)	M99	History Data	
SPIKE	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving

SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
SPIKE	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
SPIKE	/	Keyless Entry Control System (KAS)	M99	Registration	
SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
SPIKE	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
SPIKE	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
SPIKE	/	Management ECU Module (ME)	M74	Read ECU Information	
SPIKE	/	Management ECU Module (ME)	M74	Read codes	
SPIKE	/	Management ECU Module (ME)	M74	Erase Codes	
SPIKE	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
SPIKE	/	Management ECU Module (ME)	M74	Read Live Data	
SPIKE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
SPIKE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
SPIKE	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
SPIKE	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
SPIKE	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
SPIKE	/	Multi-view camera system (MVCS)	M7A	Read codes	
SPIKE	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
SPIKE	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
SPIKE	/	Multi-view camera system (MVCS)	M7A	Customization	
SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
SPIKE	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
SPIKE	/	Power Control Unit (PCU)	M83	Read ECU Information	
SPIKE	/	Power Control Unit (PCU)	M83	Read codes	
SPIKE	/	Power Control Unit (PCU)	M83	Erase Codes	
SPIKE	/	Power Control Unit (PCU)	M83	Read Live Data	
SPIKE	/	Power Control Unit (PCU)	M83	Self Check	
SPIKE	/	Power Control Unit (PCU)	M83	History Data	
SPIKE	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
SPIKE	/	Engine Control System (PGM-FI)	M23	Read codes	
SPIKE	/	Engine Control System (PGM-FI)	M23	Erase Codes	

SPIKE	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
SPIKE	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
SPIKE	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
SPIKE	/	Engine Control System (PGM-FI)	M23	Read Live Data	
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
SPIKE	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
SPIKE	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
SPIKE	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
SPIKE	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
SPIKE	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
SPIKE	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
SPIKE	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
SPIKE	/	Engine Control System (PGM-FI)	M50	Read codes	
SPIKE	/	Engine Control System (PGM-FI)	M50	Erase Codes	
SPIKE	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
SPIKE	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
SPIKE	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
SPIKE	/	Engine Control System (PGM-FI)	M50	Read Live Data	
SPIKE	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
SPIKE	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
SPIKE	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
SPIKE	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
SPIKE	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
SPIKE	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
SPIKE	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
SPIKE	/	Engine Control System (PGM-FI)	M86	Read codes	
SPIKE	/	Engine Control System (PGM-FI)	M86	Erase Codes	
SPIKE	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
SPIKE	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
SPIKE	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
SPIKE	/	Engine Control System (PGM-FI)	M86	Read Live Data	
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
SPIKE	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
SPIKE	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
SPIKE	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
SPIKE	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
SPIKE	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
SPIKE	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
SPIKE	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
SPIKE	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
SPIKE	/	PSR	M27	Read ECU Information	
SPIKE	/	PSR	M27	Read codes	
SPIKE	/	PSR	M27	Erase Codes	
SPIKE	/	PSR	M27	Read Live Data	
SPIKE	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
SPIKE	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
SPIKE	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
SPIKE	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
SPIKE	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
SPIKE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
SPIKE	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
SPIKE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
SPIKE	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
SPIKE	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
SPIKE	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	

SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
SPIKE	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
SPIKE	/	Remote starter (RS)	M90	System Check	
SPIKE	/	Remote starter (RS)	M90	HISTORY	
SPIKE	/	Remote starter (RS)	M90	Registration	
SPIKE	/	Seat load cell (SWS)	M6F	Read ECU Information	
SPIKE	/	Seat load cell (SWS)	M6F	Read codes	
SPIKE	/	Seat load cell (SWS)	M6F	Erase Codes	
SPIKE	/	Seat load cell (SWS)	M6F	Read Live Data	
SPIKE	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
SPIKE	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
SPIKE	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
SPIKE	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
SPIKE	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
SPIKE	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
SPIKE	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
SPIKE	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
SPIKE	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
SPIKE	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
SPIKE	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
SPIKE	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
SPIKE	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
SPIKE	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
SPIKE	/	Groove track drive unit (SLOT ECU)	M98	History Data	
SPIKE	/	Groove track drive unit (SLOT ECU)	M98	System Information	
SPIKE	/	Airbag Control System (SRS)	M9F	Read ECU Information	
SPIKE	/	Airbag Control System (SRS)	M9F	Read codes	
SPIKE	/	Airbag Control System (SRS)	M9F	Erase Codes	
SPIKE	/	Airbag Control System (SRS)	M9F	Read Live Data	
SPIKE	/	Airbag Control System (SRS)	MA0	Read ECU Information	
SPIKE	/	Airbag Control System (SRS)	MA0	Read codes	
SPIKE	/	Airbag Control System (SRS)	MA0	Erase Codes	
SPIKE	/	Airbag Control System (SRS)	MA0	Read Live Data	
SPIKE	/	Airbag Control System (SRS)	MA1	Read ECU Information	
SPIKE	/	Airbag Control System (SRS)	MA1	Read codes	
SPIKE	/	Airbag Control System (SRS)	MA1	Erase Codes	
SPIKE	/	Airbag Control System (SRS)	MA1	Read Live Data	
SPIKE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
SPIKE	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
SPIKE	/	Airbag Control System (SRS)	M2A	Read codes	
SPIKE	/	Airbag Control System (SRS)	M2A	Erase Codes	
SPIKE	/	Airbag Control System (SRS)	M2A	Read Live Data	
SPIKE	/	Airbag Control System (SRS)	M9C	Read ECU Information	
SPIKE	/	Airbag Control System (SRS)	M9C	Read codes	
SPIKE	/	Airbag Control System (SRS)	M9C	Erase Codes	
SPIKE	/	Airbag Control System (SRS)	M9C	Read Live Data	
SPIKE	/	Airbag Control System (SRS)	M9D	Read ECU Information	
SPIKE	/	Airbag Control System (SRS)	M9D	Read codes	
SPIKE	/	Airbag Control System (SRS)	M9D	Erase Codes	
SPIKE	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
SPIKE	/	Airbag Control System (SRS)	M9D	Read Live Data	
SPIKE	/	Airbag Control System (SRS)	M9D	Parameter Information	
SPIKE	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
SPIKE	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
SPIKE	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
SPIKE	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
SPIKE	/	Airbag Control System (SRS)	M9D	Function Test	
SPIKE	/	Airbag Control System (SRS)	M9D	System Information	
SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
SPIKE	/	Variable Valve Timing Control System (SVT)	MA2	System Information	



SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
SPIKE	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
SPIKE	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
SPIRIOR	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
SPIRIOR	/	Four-wheel steering control system (4WS)	M52	Read codes	
SPIRIOR	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
SPIRIOR	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
SPIRIOR	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
SPIRIOR	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
SPIRIOR	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
SPIRIOR	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
SPIRIOR	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
SPIRIOR	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
SPIRIOR	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
SPIRIOR	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
SPIRIOR	/	Automatic shift control system (A/T)	M1E	Read codes	
SPIRIOR	/	Automatic shift control system (A/T)	M1E	Erase Codes	
SPIRIOR	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
SPIRIOR	/	Automatic shift control system (A/T)	M1E	Read Live Data	
SPIRIOR	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
SPIRIOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
SPIRIOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
SPIRIOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
SPIRIOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
SPIRIOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
SPIRIOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
SPIRIOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
SPIRIOR	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
SPIRIOR	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
SPIRIOR	/	Automatic shift control system (A/T)	M3B	Read codes	
SPIRIOR	/	Automatic shift control system (A/T)	M3B	Erase Codes	
SPIRIOR	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
SPIRIOR	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
SPIRIOR	/	Automatic shift control system (A/T)	M3B	Read Live Data	
SPIRIOR	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
SPIRIOR	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
SPIRIOR	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
SPIRIOR	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
SPIRIOR	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
SPIRIOR	/	Automatic shift control system (A/T)	M3C	Read codes	
SPIRIOR	/	Automatic shift control system (A/T)	M3C	Erase Codes	
SPIRIOR	/	Automatic shift control system (A/T)	M81	Read ECU Information	
SPIRIOR	/	Automatic shift control system (A/T)	M81	Read codes	
SPIRIOR	/	Automatic shift control system (A/T)	M81	Erase Codes	
SPIRIOR	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
SPIRIOR	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
SPIRIOR	/	Automatic shift control system (A/T)	M81	Read Live Data	
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
SPIRIOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
SPIRIOR	/	Automatic shift control system (A/T)	M82	Read ECU Information	
SPIRIOR	/	Automatic shift control system (A/T)	M82	Read codes	
SPIRIOR	/	Automatic shift control system (A/T)	M82	Erase Codes	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	

SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Erase Codes	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Freeze Frame Data	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Read Live Data	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
SPIRIOR	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
SPIRIOR	/	Active Engine Control Support System (ACM) M06	Read codes	
SPIRIOR	/	Active Engine Control Support System (ACM) M06	Erase Codes	
SPIRIOR	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
SPIRIOR	/	Active Engine Control Support System (ACM) M06	Read Live Data	
SPIRIOR	/	Active Engine Control Support System (ACM) M06	ACM Reset	
SPIRIOR	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
SPIRIOR	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
SPIRIOR	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
SPIRIOR	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
SPIRIOR	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
SPIRIOR	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
SPIRIOR	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
SPIRIOR	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
SPIRIOR	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
SPIRIOR	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
SPIRIOR	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
SPIRIOR	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
SPIRIOR	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
SPIRIOR	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
SPIRIOR	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
SPIRIOR	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
SPIRIOR	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
SPIRIOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
SPIRIOR	/	Transmission Control System (AT) M18	Read ECU Information	
SPIRIOR	/	Transmission Control System (AT) M18	Read codes	
SPIRIOR	/	Transmission Control System (AT) M18	Erase Codes	
SPIRIOR	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
SPIRIOR	/	Transmission Control System (AT) M18	Read Live Data	
SPIRIOR	/	Transmission Control System (AT) M18	Adjustment	
SPIRIOR	/	Active Torque Converter Control System (ATTTS) M0E	Read ECU Information	
SPIRIOR	/	Active Torque Converter Control System (ATTTS) M0E	Read codes	
SPIRIOR	/	Active Torque Converter Control System (ATTTS) M0E	Erase Codes	
SPIRIOR	/	Active Torque Converter Control System (ATTTS) M0E	Read Freeze Frame Data	
SPIRIOR	/	Active Torque Converter Control System (ATTTS) M0E	Read Live Data	
SPIRIOR	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
SPIRIOR	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	STEERING ANGLE
SPIRIOR	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
SPIRIOR	/	Active Torque Converter Control System (ATTTS) M0E	Miscellaneous Test	ALL SENSORS
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
SPIRIOR	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
SPIRIOR	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
SPIRIOR	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
SPIRIOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
SPIRIOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
SPIRIOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
SPIRIOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
SPIRIOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
SPIRIOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance

SPIRIOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
SPIRIOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
SPIRIOR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
SPIRIOR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
SPIRIOR	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
SPIRIOR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
SPIRIOR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
SPIRIOR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
SPIRIOR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
SPIRIOR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
SPIRIOR	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
SPIRIOR	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
SPIRIOR	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
SPIRIOR	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
SPIRIOR	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
SPIRIOR	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
SPIRIOR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
SPIRIOR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
SPIRIOR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command

SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
SPIRIOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
SPIRIOR	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
SPIRIOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
SPIRIOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
SPIRIOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
SPIRIOR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
SPIRIOR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
SPIRIOR	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
SPIRIOR	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
SPIRIOR	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
SPIRIOR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
SPIRIOR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
SPIRIOR	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
SPIRIOR	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Security	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
SPIRIOR	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
SPIRIOR	/	BODY ELECTRICAL/Security	MFF	History Data	
SPIRIOR	/	BODY ELECTRICAL/Security	MFF	History Clear	
SPIRIOR	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
SPIRIOR	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
SPIRIOR	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
SPIRIOR	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
SPIRIOR	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
SPIRIOR	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
SPIRIOR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
SPIRIOR	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
SPIRIOR	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
SPIRIOR	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
SPIRIOR	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
SPIRIOR	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
SPIRIOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
SPIRIOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
SPIRIOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
SPIRIOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
SPIRIOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
SPIRIOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
SPIRIOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
SPIRIOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	

SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
SPIRIOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
SPIRIOR	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
SPIRIOR	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
SPIRIOR	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
SPIRIOR	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
SPIRIOR	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
SPIRIOR	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
SPIRIOR	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
SPIRIOR	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
SPIRIOR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read ECU Information	
SPIRIOR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read codes	
SPIRIOR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Erase Codes	
SPIRIOR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Freeze Frame Data	
SPIRIOR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Read Live Data	
SPIRIOR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	CMBS (CMS) ACTIVATION HISTORY	
SPIRIOR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	RADAR AIMING
SPIRIOR	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E	M2E	Miscellaneous Test	CMBS Brake
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read ECU Information	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read codes	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Erase Codes	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Freeze Frame Data	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Read Live Data	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M1B	M1B	ECMPCM Reset	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Lock Solenoid Test
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Shift Solenoid Tests
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M1B	M1B	Miscellaneous Test	Electrical Oil Pump Activation
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M33	M33	Read ECU Information	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M33	M33	Read codes	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M33	M33	Erase Codes	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Freeze Frame Data	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M33	M33	Read Live Data	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M33	M33	ECMPCM Reset	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Inhibitor Solenoid
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid A (LF)
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	CAS Solenoid B (RF)
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M33	M33	Miscellaneous Test	Start Clutch Feedback Learn
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read ECU Information	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read codes	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Erase Codes	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Freeze Frame Data	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Read Live Data	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	ECMPCM Reset	
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Inhibitor Solenoid
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid A (LF)
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	CAS Solenoid B (RF)
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Start Clutch Feedback Learn
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve A
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve B
SPIRIOR	/	Promise Automatic Transmission Control System (CVT M8D	M8D	Miscellaneous Test	Shift solenoid Valve O/P
SPIRIOR	/	DBW	M34	Read ECU Information	
SPIRIOR	/	DBW	M34	Read codes	
SPIRIOR	/	DBW	M34	Erase Codes	
SPIRIOR	/	DBW	M34	Read Freeze Frame Data	
SPIRIOR	/	DBW	M34	Read Live Data	
SPIRIOR	/	DBW	M34	Inspection	Idle Speed Adjust
SPIRIOR	/	DBW	M34	Inspection	Throttle Test
SPIRIOR	/	DBW	M34	ECM Reset	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	

SPIRIOR	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
SPIRIOR	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
SPIRIOR	/	Capacitor Control System (EDLC)	M12	Read codes	
SPIRIOR	/	Capacitor Control System (EDLC)	M12	Erase Codes	
SPIRIOR	/	Capacitor Control System (EDLC)	M12	Read Live Data	
SPIRIOR	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
SPIRIOR	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
SPIRIOR	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
SPIRIOR	/	Electronic Brake Control System (EPB)	M1F	Read codes	
SPIRIOR	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
SPIRIOR	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
SPIRIOR	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
SPIRIOR	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
SPIRIOR	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
SPIRIOR	/	Electronic Brake Control System (EPB)	M3E	Read codes	
SPIRIOR	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
SPIRIOR	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
SPIRIOR	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
SPIRIOR	/	Electric Powertrain / IMA	M66	Read ECU Information	
SPIRIOR	/	Electric Powertrain / IMA	M66	Read codes	
SPIRIOR	/	Electric Powertrain / IMA	M66	Erase Codes	
SPIRIOR	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
SPIRIOR	/	Electric Powertrain / IMA	M66	Read Live Data	
SPIRIOR	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
SPIRIOR	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
SPIRIOR	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
SPIRIOR	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
SPIRIOR	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
SPIRIOR	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
SPIRIOR	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
SPIRIOR	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
SPIRIOR	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
SPIRIOR	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
SPIRIOR	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
SPIRIOR	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
SPIRIOR	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
SPIRIOR	/	New energy battery (EV)	M44	Read ECU Information	
SPIRIOR	/	New energy battery (EV)	M44	Read codes	
SPIRIOR	/	New energy battery (EV)	M44	Erase Codes	
SPIRIOR	/	New energy battery (EV)	M44	Read Freeze Frame Data	
SPIRIOR	/	New energy battery (EV)	M44	Read Live Data	
SPIRIOR	/	New energy battery (EV)	M44	Inspection	
SPIRIOR	/	New energy battery (EV)	M44	Adjustment	

SPIRIOR	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
SPIRIOR	/	Electronic vacuum pump (EVPS)	M21	Read codes	
SPIRIOR	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
SPIRIOR	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
SPIRIOR	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
SPIRIOR	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
SPIRIOR	/	Electronic vacuum pump (EVPS)	M22	Read codes	
SPIRIOR	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
SPIRIOR	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
SPIRIOR	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
SPIRIOR	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
SPIRIOR	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
SPIRIOR	/	FCW LDW	M4E	Read ECU Information	
SPIRIOR	/	FCW LDW	M4E	Read codes	
SPIRIOR	/	FCW LDW	M4E	Erase Codes	
SPIRIOR	/	FCW LDW	M4E	Read Live Data	
SPIRIOR	/	FCW LDW	M4E	Function Test	FCW Drive
SPIRIOR	/	FCW LDW	M4E	Function Test	Left side lane departure warning
SPIRIOR	/	FCW LDW	M4E	Function Test	Right side lane departure warning
SPIRIOR	/	FCW LDW	M4E	Function Test	Indicator Drive
SPIRIOR	/	FCW LDW	M4E	Adjustment	
SPIRIOR	/	Instrument Display System (GAUGE)	M2C	Read codes	
SPIRIOR	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
SPIRIOR	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Read codes	
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Read codes	
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Read codes	
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
SPIRIOR	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Read codes	
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
SPIRIOR	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
SPIRIOR	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
SPIRIOR	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
SPIRIOR	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
SPIRIOR	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
SPIRIOR	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
SPIRIOR	/	Intelligent Parking Control System (SPS)	M9B	Customize	
SPIRIOR	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
SPIRIOR	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
SPIRIOR	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	

SPIRIOR	/	Hydraulic booster control system (HBS)	M5F	Read codes	
SPIRIOR	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
SPIRIOR	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
SPIRIOR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
SPIRIOR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
SPIRIOR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
SPIRIOR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
SPIRIOR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
SPIRIOR	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
SPIRIOR	/	IMA	M63	Read ECU Information	
SPIRIOR	/	IMA	M63	Read codes	
SPIRIOR	/	IMA	M63	Erase Codes	
SPIRIOR	/	IMA	M63	Read Freeze Frame Data	
SPIRIOR	/	IMA	M63	Read Live Data	
SPIRIOR	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
SPIRIOR	/	IMA	M63	Adjustment	SOC PRESET
SPIRIOR	/	IMA	M64	Read ECU Information	
SPIRIOR	/	IMA	M64	Read codes	
SPIRIOR	/	IMA	M64	Erase Codes	
SPIRIOR	/	IMA	M64	Read Freeze Frame Data	
SPIRIOR	/	IMA	M64	Read Live Data	
SPIRIOR	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
SPIRIOR	/	IMA	M64	Adjustment	SOC PRESET
SPIRIOR	/	IMA	M65	Read ECU Information	
SPIRIOR	/	IMA	M65	Read codes	
SPIRIOR	/	IMA	M65	Erase Codes	
SPIRIOR	/	IMA	M65	Read Freeze Frame Data	
SPIRIOR	/	IMA	M65	Read Live Data	
SPIRIOR	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
SPIRIOR	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
SPIRIOR	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
SPIRIOR	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
SPIRIOR	/	Intake Sounder Control System (ISC)	M6D	Read codes	
SPIRIOR	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
SPIRIOR	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
SPIRIOR	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
SPIRIOR	/	Night Vision System (INVS)	0XB1	Read ECU Information	
SPIRIOR	/	Night Vision System (INVS)	0XB1	Read codes	
SPIRIOR	/	Night Vision System (INVS)	0XB1	Erase Codes	
SPIRIOR	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
SPIRIOR	/	Night Vision System (INVS)	0XB1	Read Live Data	
SPIRIOR	/	Night Vision System (INVS)	0XB1	Adjustment	
SPIRIOR	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
SPIRIOR	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
SPIRIOR	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
SPIRIOR	/	i-SHIFT	0XB0	Read ECU Information	
SPIRIOR	/	i-SHIFT	0XB0	Read codes	
SPIRIOR	/	i-SHIFT	0XB0	Erase Codes	
SPIRIOR	/	i-SHIFT	0XB0	Read Live Data	
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Read codes	
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Self Check	
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	History Data	
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output



SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
SPIRIOR	/	Keyless Entry Control System (KAS)	M99	Registration	
SPIRIOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
SPIRIOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
SPIRIOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
SPIRIOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
SPIRIOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
SPIRIOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
SPIRIOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
SPIRIOR	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
SPIRIOR	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
SPIRIOR	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
SPIRIOR	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
SPIRIOR	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
SPIRIOR	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
SPIRIOR	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
SPIRIOR	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
SPIRIOR	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
SPIRIOR	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
SPIRIOR	/	Management ECU Module (ME)	M74	Read ECU Information	
SPIRIOR	/	Management ECU Module (ME)	M74	Read codes	
SPIRIOR	/	Management ECU Module (ME)	M74	Erase Codes	
SPIRIOR	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
SPIRIOR	/	Management ECU Module (ME)	M74	Read Live Data	
SPIRIOR	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
SPIRIOR	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
SPIRIOR	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
SPIRIOR	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
SPIRIOR	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
SPIRIOR	/	Multi-view camera system (MVCS)	M7A	Read codes	
SPIRIOR	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
SPIRIOR	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
SPIRIOR	/	Multi-view camera system (MVCS)	M7A	Customization	
SPIRIOR	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
SPIRIOR	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
SPIRIOR	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
SPIRIOR	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
SPIRIOR	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
SPIRIOR	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
SPIRIOR	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
SPIRIOR	/	Power Control Unit (PCU)	M83	Read ECU Information	
SPIRIOR	/	Power Control Unit (PCU)	M83	Read codes	
SPIRIOR	/	Power Control Unit (PCU)	M83	Erase Codes	
SPIRIOR	/	Power Control Unit (PCU)	M83	Read Live Data	
SPIRIOR	/	Power Control Unit (PCU)	M83	Self Check	
SPIRIOR	/	Power Control Unit (PCU)	M83	History Data	
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Read codes	
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Erase Codes	
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
SPIRIOR	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Read Live Data	
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
SPIRIOR	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
SPIRIOR	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
SPIRIOR	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
SPIRIOR	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
SPIRIOR	/	Engine Control System (PGM-FI)	M50	Read codes	
SPIRIOR	/	Engine Control System (PGM-FI)	M50	Erase Codes	
SPIRIOR	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
SPIRIOR	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	

SPIRIOR	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
SPIRIOR	/	Engine Control System (PGM-FI)	M50	Read Live Data	
SPIRIOR	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
SPIRIOR	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
SPIRIOR	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
SPIRIOR	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
SPIRIOR	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Read codes	
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Erase Codes	
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
SPIRIOR	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Read Live Data	
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
SPIRIOR	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
SPIRIOR	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
SPIRIOR	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
SPIRIOR	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
SPIRIOR	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
SPIRIOR	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
SPIRIOR	/	PSR	M27	Read ECU Information	
SPIRIOR	/	PSR	M27	Read codes	
SPIRIOR	/	PSR	M27	Erase Codes	
SPIRIOR	/	PSR	M27	Read Live Data	
SPIRIOR	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
SPIRIOR	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
SPIRIOR	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
SPIRIOR	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
SPIRIOR	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
SPIRIOR	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
SPIRIOR	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
SPIRIOR	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
SPIRIOR	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
SPIRIOR	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
SPIRIOR	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
SPIRIOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
SPIRIOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
SPIRIOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
SPIRIOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
SPIRIOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
SPIRIOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
SPIRIOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
SPIRIOR	/	Remote starter (RS)	M90	System Check	
SPIRIOR	/	Remote starter (RS)	M90	HISTORY	
SPIRIOR	/	Remote starter (RS)	M90	Registration	
SPIRIOR	/	Seat load cell (SWS)	M6F	Read ECU Information	
SPIRIOR	/	Seat load cell (SWS)	M6F	Read codes	
SPIRIOR	/	Seat load cell (SWS)	M6F	Erase Codes	
SPIRIOR	/	Seat load cell (SWS)	M6F	Read Live Data	
SPIRIOR	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
SPIRIOR	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
SPIRIOR	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
SPIRIOR	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
SPIRIOR	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
SPIRIOR	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
SPIRIOR	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
SPIRIOR	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	

SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
SPIRIOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
SPIRIOR	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
SPIRIOR	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
SPIRIOR	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
SPIRIOR	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
SPIRIOR	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
SPIRIOR	/	Groove track drive unit (SLOT ECU)	M98	History Data	
SPIRIOR	/	Groove track drive unit (SLOT ECU)	M98	System Information	
SPIRIOR	/	Airbag Control System (SRS)	M9F	Read ECU Information	
SPIRIOR	/	Airbag Control System (SRS)	M9F	Read codes	
SPIRIOR	/	Airbag Control System (SRS)	M9F	Erase Codes	
SPIRIOR	/	Airbag Control System (SRS)	M9F	Read Live Data	
SPIRIOR	/	Airbag Control System (SRS)	MA0	Read ECU Information	
SPIRIOR	/	Airbag Control System (SRS)	MA0	Read codes	
SPIRIOR	/	Airbag Control System (SRS)	MA0	Erase Codes	
SPIRIOR	/	Airbag Control System (SRS)	MA0	Read Live Data	
SPIRIOR	/	Airbag Control System (SRS)	MA1	Read ECU Information	
SPIRIOR	/	Airbag Control System (SRS)	MA1	Read codes	
SPIRIOR	/	Airbag Control System (SRS)	MA1	Erase Codes	
SPIRIOR	/	Airbag Control System (SRS)	MA1	Read Live Data	
SPIRIOR	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
SPIRIOR	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
SPIRIOR	/	Airbag Control System (SRS)	M2A	Read codes	
SPIRIOR	/	Airbag Control System (SRS)	M2A	Erase Codes	
SPIRIOR	/	Airbag Control System (SRS)	M2A	Read Live Data	
SPIRIOR	/	Airbag Control System (SRS)	M9C	Read ECU Information	
SPIRIOR	/	Airbag Control System (SRS)	M9C	Read codes	
SPIRIOR	/	Airbag Control System (SRS)	M9C	Erase Codes	
SPIRIOR	/	Airbag Control System (SRS)	M9C	Read Live Data	
SPIRIOR	/	Airbag Control System (SRS)	M9D	Read ECU Information	
SPIRIOR	/	Airbag Control System (SRS)	M9D	Read codes	
SPIRIOR	/	Airbag Control System (SRS)	M9D	Erase Codes	
SPIRIOR	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
SPIRIOR	/	Airbag Control System (SRS)	M9D	Read Live Data	
SPIRIOR	/	Airbag Control System (SRS)	M9D	Parameter Information	
SPIRIOR	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
SPIRIOR	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
SPIRIOR	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
SPIRIOR	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
SPIRIOR	/	Airbag Control System (SRS)	M9D	Function Test	
SPIRIOR	/	Airbag Control System (SRS)	M9D	System Information	
SPIRIOR	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
SPIRIOR	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
SPIRIOR	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
SPIRIOR	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
SPIRIOR	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
SPIRIOR	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
SPIRIOR	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
SPIRIOR	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
SPIRIOR	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
SPIRIOR	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
SPIRIOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
SPIRIOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
SPIRIOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
SPIRIOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
SPIRIOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
SPIRIOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
SPIRIOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
SPIRIOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
SPIRIOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
STEP WGN	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
STEP WGN	/	Four-wheel steering control system (4WS)	M52	Read codes	
STEP WGN	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
STEP WGN	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
STEP WGN	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
STEP WGN	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
STEP WGN	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
STEP WGN	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
STEP WGN	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
STEP WGN	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
STEP WGN	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK

STEP WGN	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
STEP WGN	/	Automatic shift control system (A/T)	M1E	Read codes	
STEP WGN	/	Automatic shift control system (A/T)	M1E	Erase Codes	
STEP WGN	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
STEP WGN	/	Automatic shift control system (A/T)	M1E	Read Live Data	
STEP WGN	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
STEP WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
STEP WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
STEP WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
STEP WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
STEP WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
STEP WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
STEP WGN	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
STEP WGN	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
STEP WGN	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
STEP WGN	/	Automatic shift control system (A/T)	M3B	Read codes	
STEP WGN	/	Automatic shift control system (A/T)	M3B	Erase Codes	
STEP WGN	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
STEP WGN	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
STEP WGN	/	Automatic shift control system (A/T)	M3B	Read Live Data	
STEP WGN	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
STEP WGN	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
STEP WGN	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
STEP WGN	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
STEP WGN	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
STEP WGN	/	Automatic shift control system (A/T)	M3C	Read codes	
STEP WGN	/	Automatic shift control system (A/T)	M3C	Erase Codes	
STEP WGN	/	Automatic shift control system (A/T)	M81	Read ECU Information	
STEP WGN	/	Automatic shift control system (A/T)	M81	Read codes	
STEP WGN	/	Automatic shift control system (A/T)	M81	Erase Codes	
STEP WGN	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
STEP WGN	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
STEP WGN	/	Automatic shift control system (A/T)	M81	Read Live Data	
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
STEP WGN	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
STEP WGN	/	Automatic shift control system (A/T)	M82	Read ECU Information	
STEP WGN	/	Automatic shift control system (A/T)	M82	Read codes	
STEP WGN	/	Automatic shift control system (A/T)	M82	Erase Codes	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
STEP WGN	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
STEP WGN	/	Active Engine Control Support System (ACM)	M06	Read codes	
STEP WGN	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
STEP WGN	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
STEP WGN	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
STEP WGN	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
STEP WGN	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
STEP WGN	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
STEP WGN	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
STEP WGN	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
STEP WGN	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
STEP WGN	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
STEP WGN	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
STEP WGN	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read ECU Information	
STEP WGN	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read codes	
STEP WGN	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Erase Codes	
STEP WGN	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Freeze Frame Data	
STEP WGN	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Read Live Data	
STEP WGN	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Function Test	Damper Force Operation Test
STEP WGN	/	Active / Automatic Shock Absorber Control System (A MOD)	MOD	Adjustment	Damper Stroke Calibration
STEP WGN	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
STEP WGN	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
STEP WGN	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	

STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
STEP WGN	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
STEP WGN	/	Transmission Control System (AT) M18	Read ECU Information	
STEP WGN	/	Transmission Control System (AT) M18	Read codes	
STEP WGN	/	Transmission Control System (AT) M18	Erase Codes	
STEP WGN	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
STEP WGN	/	Transmission Control System (AT) M18	Read Live Data	
STEP WGN	/	Transmission Control System (AT) M18	Adjustment	
STEP WGN	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
STEP WGN	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
STEP WGN	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
STEP WGN	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
STEP WGN	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
STEP WGN	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
STEP WGN	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
STEP WGN	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
STEP WGN	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
STEP WGN	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
STEP WGN	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
STEP WGN	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Oncoming Vehicle Detection
STEP WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Function Test	Preceding Vehicle Detection
STEP WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
STEP WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
STEP WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset Operation
STEP WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Returning Operation
STEP WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Automatic Returning Distance
STEP WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Manual Returning Time
STEP WGN	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr) MFF	Adjustment	Reset to default
STEP WGN	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
STEP WGN	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
STEP WGN	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
STEP WGN	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
STEP WGN	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
STEP WGN	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
STEP WGN	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
STEP WGN	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
STEP WGN	/	BODY ELECTRICAL/e-Call MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
STEP WGN	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
STEP WGN	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
STEP WGN	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	
STEP WGN	/	BODY ELECTRICAL/Gauges MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Gauges MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Gauges MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Gauges MFF	Function Test	Speedometer
STEP WGN	/	BODY ELECTRICAL/Gauges MFF	Function Test	Tachometer
STEP WGN	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Activation Indicator

STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
STEP WGN	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
STEP WGN	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
STEP WGN	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
STEP WGN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
STEP WGN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
STEP WGN	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
STEP WGN	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
STEP WGN	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
STEP WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
STEP WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
STEP WGN	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
STEP WGN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
STEP WGN	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
STEP WGN	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
STEP WGN	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
STEP WGN	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
STEP WGN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
STEP WGN	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	

STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
STEP WGN	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
STEP WGN	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Security	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
STEP WGN	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
STEP WGN	/	BODY ELECTRICAL/Security	MFF	History Data	
STEP WGN	/	BODY ELECTRICAL/Security	MFF	History Clear	
STEP WGN	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
STEP WGN	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
STEP WGN	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
STEP WGN	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
STEP WGN	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
STEP WGN	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
STEP WGN	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
STEP WGN	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
STEP WGN	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
STEP WGN	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
STEP WGN	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
STEP WGN	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
STEP WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
STEP WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
STEP WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
STEP WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
STEP WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
STEP WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
STEP WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
STEP WGN	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
STEP WGN	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
STEP WGN	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
STEP WGN	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
STEP WGN	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
STEP WGN	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
STEP WGN	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
STEP WGN	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
STEP WGN	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
STEP WGN	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
STEP WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
STEP WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
STEP WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
STEP WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
STEP WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
STEP WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
STEP WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
STEP WGN	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
STEP WGN	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	

STEP WGN	/	Promise Automatic Transmission Control System (CVT M1B	ECMPCM Reset	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Lock Solenoid Test
STEP WGN	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Shift Solenoid Tests
STEP WGN	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Electrical Oil Pump Activation
STEP WGN	/	Promise Automatic Transmission Control System (CVT M33	Read ECU Information	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M33	Read codes	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M33	Erase Codes	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M33	Read Freeze Frame Data	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M33	Read Live Data	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M33	ECMPCM Reset	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
STEP WGN	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
STEP WGN	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
STEP WGN	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	Read codes	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	ECMPCM Reset	
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
STEP WGN	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
STEP WGN	/	DBW M34	Read ECU Information	
STEP WGN	/	DBW M34	Read codes	
STEP WGN	/	DBW M34	Erase Codes	
STEP WGN	/	DBW M34	Read Freeze Frame Data	
STEP WGN	/	DBW M34	Read Live Data	
STEP WGN	/	DBW M34	Inspection	Idle Speed Adjust
STEP WGN	/	DBW M34	Inspection	Throttle Test
STEP WGN	/	DBW M34	ECM Reset	
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
STEP WGN	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
STEP WGN	/	Diesel Engine Control System (DIESEL) M37	Replace ECM/PCM	
STEP WGN	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
STEP WGN	/	Diesel Engine Control System (DIESEL) M37	Read codes	
STEP WGN	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
STEP WGN	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
STEP WGN	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
STEP WGN	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
STEP WGN	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
STEP WGN	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
STEP WGN	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Read codes	
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
STEP WGN	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
STEP WGN	/	Capacitor Control System (EDLC) M12	Read codes	
STEP WGN	/	Capacitor Control System (EDLC) M12	Erase Codes	
STEP WGN	/	Capacitor Control System (EDLC) M12	Read Live Data	
STEP WGN	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge and Charge Test



STEP WGN	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
STEP WGN	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
STEP WGN	/	Electronic Brake Control System (EPB)	M1F	Read codes	
STEP WGN	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
STEP WGN	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
STEP WGN	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
STEP WGN	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
STEP WGN	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
STEP WGN	/	Electronic Brake Control System (EPB)	M3E	Read codes	
STEP WGN	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
STEP WGN	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
STEP WGN	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
STEP WGN	/	Electric Powertrain / IMA	M66	Read ECU Information	
STEP WGN	/	Electric Powertrain / IMA	M66	Read codes	
STEP WGN	/	Electric Powertrain / IMA	M66	Erase Codes	
STEP WGN	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
STEP WGN	/	Electric Powertrain / IMA	M66	Read Live Data	
STEP WGN	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
STEP WGN	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
STEP WGN	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
STEP WGN	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
STEP WGN	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
STEP WGN	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
STEP WGN	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
STEP WGN	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
STEP WGN	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
STEP WGN	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
STEP WGN	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
STEP WGN	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
STEP WGN	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
STEP WGN	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
STEP WGN	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
STEP WGN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
STEP WGN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
STEP WGN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
STEP WGN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
STEP WGN	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
STEP WGN	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
STEP WGN	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
STEP WGN	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
STEP WGN	/	New energy battery (EV)	M44	Read ECU Information	
STEP WGN	/	New energy battery (EV)	M44	Read codes	
STEP WGN	/	New energy battery (EV)	M44	Erase Codes	
STEP WGN	/	New energy battery (EV)	M44	Read Freeze Frame Data	
STEP WGN	/	New energy battery (EV)	M44	Read Live Data	
STEP WGN	/	New energy battery (EV)	M44	Inspection	
STEP WGN	/	New energy battery (EV)	M44	Adjustment	
STEP WGN	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
STEP WGN	/	Electronic vacuum pump (EVPS)	M21	Read codes	
STEP WGN	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
STEP WGN	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
STEP WGN	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
STEP WGN	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
STEP WGN	/	Electronic vacuum pump (EVPS)	M22	Read codes	
STEP WGN	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
STEP WGN	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
STEP WGN	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
STEP WGN	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
STEP WGN	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
STEP WGN	/	FCW LDW	M4E	Read ECU Information	
STEP WGN	/	FCW LDW	M4E	Read codes	
STEP WGN	/	FCW LDW	M4E	Erase Codes	
STEP WGN	/	FCW LDW	M4E	Read Live Data	
STEP WGN	/	FCW LDW	M4E	Function Test	FCW Drive
STEP WGN	/	FCW LDW	M4E	Function Test	Left side lane departure warning
STEP WGN	/	FCW LDW	M4E	Function Test	Right side lane departure warning
STEP WGN	/	FCW LDW	M4E	Function Test	Indicator Drive
STEP WGN	/	FCW LDW	M4E	Adjustment	
STEP WGN	/	Instrument Display System (GAUGE)	M2C	Read codes	
STEP WGN	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
STEP WGN	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Read codes	
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid

STEP WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Read codes	
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Read codes	
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
STEP WGN	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
STEP WGN	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Read codes	
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
STEP WGN	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
STEP WGN	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
STEP WGN	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
STEP WGN	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
STEP WGN	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
STEP WGN	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
STEP WGN	/	Intelligent Parking Control System (SPS)	M9B	Customize	
STEP WGN	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
STEP WGN	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
STEP WGN	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
STEP WGN	/	Hydraulic booster control system (HBS)	M5F	Read codes	
STEP WGN	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
STEP WGN	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
STEP WGN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
STEP WGN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
STEP WGN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
STEP WGN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
STEP WGN	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
STEP WGN	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
STEP WGN	/	IMA	M63	Read ECU Information	
STEP WGN	/	IMA	M63	Read codes	
STEP WGN	/	IMA	M63	Erase Codes	
STEP WGN	/	IMA	M63	Read Freeze Frame Data	
STEP WGN	/	IMA	M63	Read Live Data	
STEP WGN	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
STEP WGN	/	IMA	M63	Adjustment	SOC PRESET
STEP WGN	/	IMA	M64	Read ECU Information	
STEP WGN	/	IMA	M64	Read codes	
STEP WGN	/	IMA	M64	Erase Codes	
STEP WGN	/	IMA	M64	Read Freeze Frame Data	
STEP WGN	/	IMA	M64	Read Live Data	
STEP WGN	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
STEP WGN	/	IMA	M64	Adjustment	SOC PRESET
STEP WGN	/	IMA	M65	Read ECU Information	
STEP WGN	/	IMA	M65	Read codes	
STEP WGN	/	IMA	M65	Erase Codes	
STEP WGN	/	IMA	M65	Read Freeze Frame Data	
STEP WGN	/	IMA	M65	Read Live Data	
STEP WGN	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
STEP WGN	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
STEP WGN	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
STEP WGN	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	

STEP WGN	/	Intake Sounder Control System (ISC)	M6D	Read codes	
STEP WGN	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
STEP WGN	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
STEP WGN	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
STEP WGN	/	Night Vision System (INVS)	0XB1	Read ECU Information	
STEP WGN	/	Night Vision System (INVS)	0XB1	Read codes	
STEP WGN	/	Night Vision System (INVS)	0XB1	Erase Codes	
STEP WGN	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
STEP WGN	/	Night Vision System (INVS)	0XB1	Read Live Data	
STEP WGN	/	Night Vision System (INVS)	0XB1	Adjustment	
STEP WGN	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
STEP WGN	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
STEP WGN	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
STEP WGN	/	i-SHIFT	0XB0	Read ECU Information	
STEP WGN	/	i-SHIFT	0XB0	Read codes	
STEP WGN	/	i-SHIFT	0XB0	Erase Codes	
STEP WGN	/	i-SHIFT	0XB0	Read Live Data	
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Read codes	
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Self Check	
STEP WGN	/	Keyless Entry Control System (KAS)	M99	History Data	
STEP WGN	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
STEP WGN	/	Keyless Entry Control System (KAS)	M99	Registration	
STEP WGN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
STEP WGN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
STEP WGN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
STEP WGN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
STEP WGN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
STEP WGN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
STEP WGN	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
STEP WGN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
STEP WGN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
STEP WGN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
STEP WGN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
STEP WGN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
STEP WGN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
STEP WGN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
STEP WGN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
STEP WGN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
STEP WGN	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
STEP WGN	/	Management ECU Module (ME)	M74	Read ECU Information	

STEP WGN	/	Management ECU Module (ME)	M74	Read codes	
STEP WGN	/	Management ECU Module (ME)	M74	Erase Codes	
STEP WGN	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
STEP WGN	/	Management ECU Module (ME)	M74	Read Live Data	
STEP WGN	/	Multi-view camera and parking assist system (MVC/P, M26)		Read ECU Information	
STEP WGN	/	Multi-view camera and parking assist system (MVC/P, M26)		Read codes	
STEP WGN	/	Multi-view camera and parking assist system (MVC/P, M26)		Erase Codes	
STEP WGN	/	Multi-view camera and parking assist system (MVC/P, M26)		Read Live Data	
STEP WGN	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
STEP WGN	/	Multi-view camera system (MVCS)	M7A	Read codes	
STEP WGN	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
STEP WGN	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
STEP WGN	/	Multi-view camera system (MVCS)	M7A	Customization	
STEP WGN	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
STEP WGN	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
STEP WGN	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
STEP WGN	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
STEP WGN	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
STEP WGN	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
STEP WGN	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
STEP WGN	/	Power Control Unit (PCU)	M83	Read ECU Information	
STEP WGN	/	Power Control Unit (PCU)	M83	Read codes	
STEP WGN	/	Power Control Unit (PCU)	M83	Erase Codes	
STEP WGN	/	Power Control Unit (PCU)	M83	Read Live Data	
STEP WGN	/	Power Control Unit (PCU)	M83	Self Check	
STEP WGN	/	Power Control Unit (PCU)	M83	History Data	
STEP WGN	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
STEP WGN	/	Engine Control System (PGM-FI)	M23	Read codes	
STEP WGN	/	Engine Control System (PGM-FI)	M23	Erase Codes	
STEP WGN	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
STEP WGN	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
STEP WGN	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
STEP WGN	/	Engine Control System (PGM-FI)	M23	Read Live Data	
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
STEP WGN	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
STEP WGN	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
STEP WGN	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
STEP WGN	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
STEP WGN	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
STEP WGN	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
STEP WGN	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
STEP WGN	/	Engine Control System (PGM-FI)	M50	Read codes	
STEP WGN	/	Engine Control System (PGM-FI)	M50	Erase Codes	
STEP WGN	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
STEP WGN	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
STEP WGN	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
STEP WGN	/	Engine Control System (PGM-FI)	M50	Read Live Data	
STEP WGN	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
STEP WGN	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
STEP WGN	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
STEP WGN	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
STEP WGN	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
STEP WGN	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
STEP WGN	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
STEP WGN	/	Engine Control System (PGM-FI)	M86	Read codes	
STEP WGN	/	Engine Control System (PGM-FI)	M86	Erase Codes	
STEP WGN	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
STEP WGN	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
STEP WGN	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
STEP WGN	/	Engine Control System (PGM-FI)	M86	Read Live Data	
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY

STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
STEP WGN	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
STEP WGN	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
STEP WGN	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
STEP WGN	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
STEP WGN	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
STEP WGN	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
STEP WGN	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
STEP WGN	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
STEP WGN	/	PSR	M27	Read ECU Information	
STEP WGN	/	PSR	M27	Read codes	
STEP WGN	/	PSR	M27	Erase Codes	
STEP WGN	/	PSR	M27	Read Live Data	
STEP WGN	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
STEP WGN	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
STEP WGN	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
STEP WGN	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
STEP WGN	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
STEP WGN	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
STEP WGN	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
STEP WGN	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
STEP WGN	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
STEP WGN	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
STEP WGN	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
STEP WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
STEP WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
STEP WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
STEP WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
STEP WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
STEP WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
STEP WGN	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
STEP WGN	/	Remote starter (RS)	M90	System Check	
STEP WGN	/	Remote starter (RS)	M90	HISTORY	
STEP WGN	/	Remote starter (RS)	M90	Registration	
STEP WGN	/	Seat load cell (SWS)	M6F	Read ECU Information	
STEP WGN	/	Seat load cell (SWS)	M6F	Read codes	
STEP WGN	/	Seat load cell (SWS)	M6F	Erase Codes	
STEP WGN	/	Seat load cell (SWS)	M6F	Read Live Data	
STEP WGN	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
STEP WGN	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
STEP WGN	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
STEP WGN	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
STEP WGN	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
STEP WGN	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
STEP WGN	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
STEP WGN	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
STEP WGN	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
STEP WGN	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
STEP WGN	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
STEP WGN	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
STEP WGN	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
STEP WGN	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
STEP WGN	/	Groove track drive unit (SLOT ECU)	M98	History Data	
STEP WGN	/	Groove track drive unit (SLOT ECU)	M98	System Information	
STEP WGN	/	Airbag Control System (SRS)	M9F	Read ECU Information	
STEP WGN	/	Airbag Control System (SRS)	M9F	Read codes	
STEP WGN	/	Airbag Control System (SRS)	M9F	Erase Codes	
STEP WGN	/	Airbag Control System (SRS)	M9F	Read Live Data	
STEP WGN	/	Airbag Control System (SRS)	MA0	Read ECU Information	
STEP WGN	/	Airbag Control System (SRS)	MA0	Read codes	
STEP WGN	/	Airbag Control System (SRS)	MA0	Erase Codes	
STEP WGN	/	Airbag Control System (SRS)	MA0	Read Live Data	
STEP WGN	/	Airbag Control System (SRS)	MA1	Read ECU Information	
STEP WGN	/	Airbag Control System (SRS)	MA1	Read codes	
STEP WGN	/	Airbag Control System (SRS)	MA1	Erase Codes	
STEP WGN	/	Airbag Control System (SRS)	MA1	Read Live Data	
STEP WGN	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
STEP WGN	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light

STEP WGN	/	Airbag Control System (SRS)	M2A	Read codes	
STEP WGN	/	Airbag Control System (SRS)	M2A	Erase Codes	
STEP WGN	/	Airbag Control System (SRS)	M2A	Read Live Data	
STEP WGN	/	Airbag Control System (SRS)	M9C	Read ECU Information	
STEP WGN	/	Airbag Control System (SRS)	M9C	Read codes	
STEP WGN	/	Airbag Control System (SRS)	M9C	Erase Codes	
STEP WGN	/	Airbag Control System (SRS)	M9C	Read Live Data	
STEP WGN	/	Airbag Control System (SRS)	M9D	Read ECU Information	
STEP WGN	/	Airbag Control System (SRS)	M9D	Read codes	
STEP WGN	/	Airbag Control System (SRS)	M9D	Erase Codes	
STEP WGN	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
STEP WGN	/	Airbag Control System (SRS)	M9D	Read Live Data	
STEP WGN	/	Airbag Control System (SRS)	M9D	Parameter Information	
STEP WGN	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
STEP WGN	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
STEP WGN	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
STEP WGN	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
STEP WGN	/	Airbag Control System (SRS)	M9D	Function Test	
STEP WGN	/	Airbag Control System (SRS)	M9D	System Information	
STEP WGN	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
STEP WGN	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
STEP WGN	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
STEP WGN	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
STEP WGN	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
STEP WGN	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
STEP WGN	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
STEP WGN	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
STEP WGN	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
STEP WGN	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
STEP WGN	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
STEP WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
STEP WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
STEP WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
STEP WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
STEP WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
STEP WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
STEP WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
STEP WGN	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
STREAM	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
STREAM	/	Four-wheel steering control system (4WS)	M52	Read codes	
STREAM	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
STREAM	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
STREAM	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
STREAM	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
STREAM	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
STREAM	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
STREAM	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
STREAM	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
STREAM	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
STREAM	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
STREAM	/	Automatic shift control system (A/T)	M1E	Read codes	
STREAM	/	Automatic shift control system (A/T)	M1E	Erase Codes	
STREAM	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
STREAM	/	Automatic shift control system (A/T)	M1E	Read Live Data	
STREAM	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
STREAM	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
STREAM	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
STREAM	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
STREAM	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
STREAM	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
STREAM	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
STREAM	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
STREAM	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
STREAM	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
STREAM	/	Automatic shift control system (A/T)	M3B	Read codes	
STREAM	/	Automatic shift control system (A/T)	M3B	Erase Codes	
STREAM	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
STREAM	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
STREAM	/	Automatic shift control system (A/T)	M3B	Read Live Data	
STREAM	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
STREAM	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
STREAM	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
STREAM	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
STREAM	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
STREAM	/	Automatic shift control system (A/T)	M3C	Read codes	
STREAM	/	Automatic shift control system (A/T)	M3C	Erase Codes	
STREAM	/	Automatic shift control system (A/T)	M81	Read ECU Information	
STREAM	/	Automatic shift control system (A/T)	M81	Read codes	
STREAM	/	Automatic shift control system (A/T)	M81	Erase Codes	
STREAM	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
STREAM	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	

STREAM	/	Automatic shift control system (A/T)	M81	Read Live Data	
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
STREAM	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
STREAM	/	Automatic shift control system (A/T)	M82	Read ECU Information	
STREAM	/	Automatic shift control system (A/T)	M82	Read codes	
STREAM	/	Automatic shift control system (A/T)	M82	Erase Codes	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
STREAM	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
STREAM	/	Active Engine Control Support System (ACM)	M06	Read codes	
STREAM	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
STREAM	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
STREAM	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
STREAM	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
STREAM	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
STREAM	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
STREAM	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
STREAM	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
STREAM	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
STREAM	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
STREAM	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
STREAM	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
STREAM	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
STREAM	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
STREAM	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
STREAM	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
STREAM	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
STREAM	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
STREAM	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
STREAM	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
STREAM	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
STREAM	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
STREAM	/	Transmission Control System (AT)	M18	Read ECU Information	
STREAM	/	Transmission Control System (AT)	M18	Read codes	
STREAM	/	Transmission Control System (AT)	M18	Erase Codes	
STREAM	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
STREAM	/	Transmission Control System (AT)	M18	Read Live Data	
STREAM	/	Transmission Control System (AT)	M18	Adjustment	
STREAM	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
STREAM	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
STREAM	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
STREAM	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
STREAM	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
STREAM	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
STREAM	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
STREAM	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
STREAM	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator

STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
STREAM	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
STREAM	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
STREAM	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
STREAM	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
STREAM	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
STREAM	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
STREAM	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
STREAM	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
STREAM	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
STREAM	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
STREAM	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
STREAM	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
STREAM	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
STREAM	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
STREAM	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
STREAM	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
STREAM	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
STREAM	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
STREAM	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
STREAM	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
STREAM	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
STREAM	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
STREAM	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset



STREAM	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
STREAM	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
STREAM	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
STREAM	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
STREAM	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
STREAM	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
STREAM	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
STREAM	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
STREAM	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
STREAM	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
STREAM	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
STREAM	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
STREAM	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
STREAM	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
STREAM	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
STREAM	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
STREAM	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
STREAM	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
STREAM	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Security	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
STREAM	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
STREAM	/	BODY ELECTRICAL/Security	MFF	History Data	
STREAM	/	BODY ELECTRICAL/Security	MFF	History Clear	
STREAM	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
STREAM	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
STREAM	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	

STREAM	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
STREAM	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
STREAM	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
STREAM	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
STREAM	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
STREAM	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
STREAM	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
STREAM	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
STREAM	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
STREAM	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
STREAM	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
STREAM	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
STREAM	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
STREAM	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
STREAM	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
STREAM	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
STREAM	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
STREAM	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
STREAM	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
STREAM	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
STREAM	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
STREAM	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
STREAM	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
STREAM	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
STREAM	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
STREAM	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
STREAM	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
STREAM	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Read ECU Information	
STREAM	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Read codes	
STREAM	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Erase Codes	
STREAM	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Read Freeze Frame Data	
STREAM	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Read Live Data	
STREAM	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		CMBS (CMS) ACTIVATION HISTORY	
STREAM	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Miscellaneous Test	RADAR AIMING
STREAM	/	Collision Mitigation Brake Control System (CMBS/CM) M2E		Miscellaneous Test	CMBS Brake
STREAM	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
STREAM	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
STREAM	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
STREAM	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
STREAM	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
STREAM	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
STREAM	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
STREAM	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
STREAM	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
STREAM	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
STREAM	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
STREAM	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
STREAM	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
STREAM	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
STREAM	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
STREAM	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
STREAM	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
STREAM	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
STREAM	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		ECMPCM Reset	
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
STREAM	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
STREAM	/	DBW	M34	Read ECU Information	
STREAM	/	DBW	M34	Read codes	
STREAM	/	DBW	M34	Erase Codes	
STREAM	/	DBW	M34	Read Freeze Frame Data	
STREAM	/	DBW	M34	Read Live Data	

STREAM	/	DBW	M34	Inspection	Idle Speed Adjust
STREAM	/	DBW	M34	Inspection	Throttle Test
STREAM	/	DBW	M34	ECM Reset	
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
STREAM	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
STREAM	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
STREAM	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
STREAM	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
STREAM	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
STREAM	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
STREAM	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
STREAM	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
STREAM	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
STREAM	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
STREAM	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
STREAM	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
STREAM	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
STREAM	/	Capacitor Control System (EDLC)	M12	Read codes	
STREAM	/	Capacitor Control System (EDLC)	M12	Erase Codes	
STREAM	/	Capacitor Control System (EDLC)	M12	Read Live Data	
STREAM	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
STREAM	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
STREAM	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
STREAM	/	Electronic Brake Control System (EPB)	M1F	Read codes	
STREAM	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
STREAM	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
STREAM	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
STREAM	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
STREAM	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
STREAM	/	Electronic Brake Control System (EPB)	M3E	Read codes	
STREAM	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
STREAM	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
STREAM	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
STREAM	/	Electric Powertrain / IMA	M66	Read ECU Information	
STREAM	/	Electric Powertrain / IMA	M66	Read codes	
STREAM	/	Electric Powertrain / IMA	M66	Erase Codes	
STREAM	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
STREAM	/	Electric Powertrain / IMA	M66	Read Live Data	
STREAM	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
STREAM	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
STREAM	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
STREAM	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
STREAM	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
STREAM	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
STREAM	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
STREAM	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
STREAM	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
STREAM	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
STREAM	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
STREAM	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
STREAM	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
STREAM	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
STREAM	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	

STREAM	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
STREAM	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
STREAM	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
STREAM	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
STREAM	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
STREAM	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
STREAM	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
STREAM	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
STREAM	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
STREAM	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
STREAM	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
STREAM	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
STREAM	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
STREAM	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
STREAM	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
STREAM	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
STREAM	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
STREAM	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
STREAM	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
STREAM	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
STREAM	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
STREAM	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
STREAM	/	New energy battery (EV)	M44	Read ECU Information	
STREAM	/	New energy battery (EV)	M44	Read codes	
STREAM	/	New energy battery (EV)	M44	Erase Codes	
STREAM	/	New energy battery (EV)	M44	Read Freeze Frame Data	
STREAM	/	New energy battery (EV)	M44	Read Live Data	
STREAM	/	New energy battery (EV)	M44	Inspection	
STREAM	/	New energy battery (EV)	M44	Adjustment	
STREAM	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
STREAM	/	Electronic vacuum pump (EVPS)	M21	Read codes	
STREAM	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
STREAM	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
STREAM	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
STREAM	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
STREAM	/	Electronic vacuum pump (EVPS)	M22	Read codes	
STREAM	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
STREAM	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
STREAM	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
STREAM	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
STREAM	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
STREAM	/	FCW LDW	M4E	Read ECU Information	
STREAM	/	FCW LDW	M4E	Read codes	
STREAM	/	FCW LDW	M4E	Erase Codes	
STREAM	/	FCW LDW	M4E	Read Live Data	
STREAM	/	FCW LDW	M4E	Function Test	FCW Drive
STREAM	/	FCW LDW	M4E	Function Test	Left side lane departure warning
STREAM	/	FCW LDW	M4E	Function Test	Right side lane departure warning
STREAM	/	FCW LDW	M4E	Function Test	Indicator Drive
STREAM	/	FCW LDW	M4E	Adjustment	
STREAM	/	Instrument Display System (GAUGE)	M2C	Read codes	
STREAM	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
STREAM	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
STREAM	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
STREAM	/	Anti-lock brake control system (ABS)	M01	Read codes	
STREAM	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
STREAM	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
STREAM	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
STREAM	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
STREAM	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
STREAM	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
STREAM	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
STREAM	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
STREAM	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
STREAM	/	Anti-lock brake control system (ABS)	M02	Read codes	
STREAM	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
STREAM	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
STREAM	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
STREAM	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
STREAM	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
STREAM	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
STREAM	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
STREAM	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
STREAM	/	Anti-lock brake control system (ABS)	M03	Read codes	
STREAM	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
STREAM	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
STREAM	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
STREAM	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
STREAM	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
STREAM	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
STREAM	/	Anti-lock brake control system (ABS)	M03	Pulser Test	

STREAM	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
STREAM	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
STREAM	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
STREAM	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
STREAM	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
STREAM	/	Anti-lock brake control system (ABS)	M19	Read codes	
STREAM	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
STREAM	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
STREAM	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
STREAM	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
STREAM	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
STREAM	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
STREAM	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
STREAM	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
STREAM	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
STREAM	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
STREAM	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
STREAM	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
STREAM	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
STREAM	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
STREAM	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
STREAM	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
STREAM	/	Intelligent Parking Control System (SPS)	M9B	Customize	
STREAM	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
STREAM	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
STREAM	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
STREAM	/	Hydraulic booster control system (HBS)	M5F	Read codes	
STREAM	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
STREAM	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
STREAM	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
STREAM	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
STREAM	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
STREAM	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
STREAM	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
STREAM	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
STREAM	/	IMA	M63	Read ECU Information	
STREAM	/	IMA	M63	Read codes	
STREAM	/	IMA	M63	Erase Codes	
STREAM	/	IMA	M63	Read Freeze Frame Data	
STREAM	/	IMA	M63	Read Live Data	
STREAM	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
STREAM	/	IMA	M63	Adjustment	SOC PRESET
STREAM	/	IMA	M64	Read ECU Information	
STREAM	/	IMA	M64	Read codes	
STREAM	/	IMA	M64	Erase Codes	
STREAM	/	IMA	M64	Read Freeze Frame Data	
STREAM	/	IMA	M64	Read Live Data	
STREAM	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
STREAM	/	IMA	M64	Adjustment	SOC PRESET
STREAM	/	IMA	M65	Read ECU Information	
STREAM	/	IMA	M65	Read codes	
STREAM	/	IMA	M65	Erase Codes	
STREAM	/	IMA	M65	Read Freeze Frame Data	
STREAM	/	IMA	M65	Read Live Data	
STREAM	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
STREAM	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
STREAM	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
STREAM	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
STREAM	/	Intake Sounder Control System (ISC)	M6D	Read codes	
STREAM	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
STREAM	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
STREAM	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
STREAM	/	Night Vision System (INVS)	0XB1	Read ECU Information	
STREAM	/	Night Vision System (INVS)	0XB1	Read codes	
STREAM	/	Night Vision System (INVS)	0XB1	Erase Codes	
STREAM	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
STREAM	/	Night Vision System (INVS)	0XB1	Read Live Data	
STREAM	/	Night Vision System (INVS)	0XB1	Adjustment	
STREAM	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
STREAM	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
STREAM	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
STREAM	/	i-SHIFT	0XB0	Read ECU Information	
STREAM	/	i-SHIFT	0XB0	Read codes	
STREAM	/	i-SHIFT	0XB0	Erase Codes	
STREAM	/	i-SHIFT	0XB0	Read Live Data	
STREAM	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
STREAM	/	Keyless Entry Control System (KAS)	M99	Read codes	
STREAM	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
STREAM	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
STREAM	/	Keyless Entry Control System (KAS)	M99	Self Check	
STREAM	/	Keyless Entry Control System (KAS)	M99	History Data	
STREAM	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCONT Driving

STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IM OCD Terminal) Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
STREAM	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
STREAM	/	Keyless Entry Control System (KAS)	M99	Registration	
STREAM	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
STREAM	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
STREAM	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
STREAM	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
STREAM	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
STREAM	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
STREAM	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
STREAM	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
STREAM	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
STREAM	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
STREAM	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
STREAM	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
STREAM	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
STREAM	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
STREAM	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
STREAM	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
STREAM	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
STREAM	/	Management ECU Module (ME)	M74	Read ECU Information	
STREAM	/	Management ECU Module (ME)	M74	Read codes	
STREAM	/	Management ECU Module (ME)	M74	Erase Codes	
STREAM	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
STREAM	/	Management ECU Module (ME)	M74	Read Live Data	
STREAM	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
STREAM	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
STREAM	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
STREAM	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
STREAM	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
STREAM	/	Multi-view camera system (MVCS)	M7A	Read codes	
STREAM	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
STREAM	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
STREAM	/	Multi-view camera system (MVCS)	M7A	Customization	
STREAM	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
STREAM	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
STREAM	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
STREAM	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
STREAM	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
STREAM	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
STREAM	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
STREAM	/	Power Control Unit (PCU)	M83	Read ECU Information	
STREAM	/	Power Control Unit (PCU)	M83	Read codes	
STREAM	/	Power Control Unit (PCU)	M83	Erase Codes	
STREAM	/	Power Control Unit (PCU)	M83	Read Live Data	
STREAM	/	Power Control Unit (PCU)	M83	Self Check	
STREAM	/	Power Control Unit (PCU)	M83	History Data	
STREAM	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
STREAM	/	Engine Control System (PGM-FI)	M23	Read codes	
STREAM	/	Engine Control System (PGM-FI)	M23	Erase Codes	
STREAM	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
STREAM	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
STREAM	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	

STREAM	/	Engine Control System (PGM-FI)	M23	Read Live Data	
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
STREAM	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
STREAM	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
STREAM	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
STREAM	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
STREAM	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
STREAM	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
STREAM	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
STREAM	/	Engine Control System (PGM-FI)	M50	Read codes	
STREAM	/	Engine Control System (PGM-FI)	M50	Erase Codes	
STREAM	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
STREAM	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
STREAM	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
STREAM	/	Engine Control System (PGM-FI)	M50	Read Live Data	
STREAM	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
STREAM	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
STREAM	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
STREAM	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
STREAM	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
STREAM	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
STREAM	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
STREAM	/	Engine Control System (PGM-FI)	M86	Read codes	
STREAM	/	Engine Control System (PGM-FI)	M86	Erase Codes	
STREAM	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
STREAM	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
STREAM	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
STREAM	/	Engine Control System (PGM-FI)	M86	Read Live Data	
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
STREAM	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
STREAM	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
STREAM	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
STREAM	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
STREAM	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
STREAM	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
STREAM	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
STREAM	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
STREAM	/	PSR	M27	Read ECU Information	
STREAM	/	PSR	M27	Read codes	
STREAM	/	PSR	M27	Erase Codes	
STREAM	/	PSR	M27	Read Live Data	
STREAM	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
STREAM	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
STREAM	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
STREAM	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
STREAM	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
STREAM	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
STREAM	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
STREAM	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
STREAM	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
STREAM	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
STREAM	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
STREAM	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
STREAM	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
STREAM	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
STREAM	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
STREAM	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
STREAM	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm

STREAM	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
STREAM	/	Remote starter (RS)	M90	System Check	
STREAM	/	Remote starter (RS)	M90	HISTORY	
STREAM	/	Remote starter (RS)	M90	Registration	
STREAM	/	Seat load cell (SWS)	M6F	Read ECU Information	
STREAM	/	Seat load cell (SWS)	M6F	Read codes	
STREAM	/	Seat load cell (SWS)	M6F	Erase Codes	
STREAM	/	Seat load cell (SWS)	M6F	Read Live Data	
STREAM	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
STREAM	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
STREAM	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
STREAM	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
STREAM	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
STREAM	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
STREAM	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
STREAM	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
STREAM	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
STREAM	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
STREAM	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
STREAM	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
STREAM	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
STREAM	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
STREAM	/	Groove track drive unit (SLOT ECU)	M98	History Data	
STREAM	/	Groove track drive unit (SLOT ECU)	M98	System Information	
STREAM	/	Airbag Control System (SRS)	M9F	Read ECU Information	
STREAM	/	Airbag Control System (SRS)	M9F	Read codes	
STREAM	/	Airbag Control System (SRS)	M9F	Erase Codes	
STREAM	/	Airbag Control System (SRS)	M9F	Read Live Data	
STREAM	/	Airbag Control System (SRS)	MA0	Read ECU Information	
STREAM	/	Airbag Control System (SRS)	MA0	Read codes	
STREAM	/	Airbag Control System (SRS)	MA0	Erase Codes	
STREAM	/	Airbag Control System (SRS)	MA0	Read Live Data	
STREAM	/	Airbag Control System (SRS)	MA1	Read ECU Information	
STREAM	/	Airbag Control System (SRS)	MA1	Read codes	
STREAM	/	Airbag Control System (SRS)	MA1	Erase Codes	
STREAM	/	Airbag Control System (SRS)	MA1	Read Live Data	
STREAM	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
STREAM	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
STREAM	/	Airbag Control System (SRS)	M2A	Read codes	
STREAM	/	Airbag Control System (SRS)	M2A	Erase Codes	
STREAM	/	Airbag Control System (SRS)	M2A	Read Live Data	
STREAM	/	Airbag Control System (SRS)	M9C	Read ECU Information	
STREAM	/	Airbag Control System (SRS)	M9C	Read codes	
STREAM	/	Airbag Control System (SRS)	M9C	Erase Codes	
STREAM	/	Airbag Control System (SRS)	M9C	Read Live Data	
STREAM	/	Airbag Control System (SRS)	M9D	Read ECU Information	
STREAM	/	Airbag Control System (SRS)	M9D	Read codes	
STREAM	/	Airbag Control System (SRS)	M9D	Erase Codes	
STREAM	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
STREAM	/	Airbag Control System (SRS)	M9D	Read Live Data	
STREAM	/	Airbag Control System (SRS)	M9D	Parameter Information	
STREAM	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
STREAM	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
STREAM	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
STREAM	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
STREAM	/	Airbag Control System (SRS)	M9D	Function Test	
STREAM	/	Airbag Control System (SRS)	M9D	System Information	
STREAM	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
STREAM	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
STREAM	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
STREAM	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
STREAM	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
STREAM	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
STREAM	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
STREAM	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
STREAM	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
STREAM	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
STREAM	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
STREAM	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
STREAM	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	



STREAM	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
STREAM	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
STREAM	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
STREAM	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
STREAM	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
STREAM	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
STREAM	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
STREAM	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
STREAM	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
STREAM	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
STREAM	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
STREAM	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
STREAM	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
STREAM	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
STREAM	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
STREAM	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
STREAM	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
STREAM	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
THATS	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
THATS	/	Four-wheel steering control system (4WS)	M52	Read codes	
THATS	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
THATS	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
THATS	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
THATS	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
THATS	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
THATS	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
THATS	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
THATS	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
THATS	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
THATS	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
THATS	/	Automatic shift control system (A/T)	M1E	Read codes	
THATS	/	Automatic shift control system (A/T)	M1E	Erase Codes	
THATS	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
THATS	/	Automatic shift control system (A/T)	M1E	Read Live Data	
THATS	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
THATS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
THATS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
THATS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
THATS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
THATS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
THATS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
THATS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
THATS	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
THATS	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
THATS	/	Automatic shift control system (A/T)	M3B	Read codes	
THATS	/	Automatic shift control system (A/T)	M3B	Erase Codes	
THATS	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
THATS	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
THATS	/	Automatic shift control system (A/T)	M3B	Read Live Data	
THATS	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
THATS	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
THATS	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
THATS	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
THATS	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
THATS	/	Automatic shift control system (A/T)	M3C	Read codes	
THATS	/	Automatic shift control system (A/T)	M3C	Erase Codes	
THATS	/	Automatic shift control system (A/T)	M81	Read ECU Information	
THATS	/	Automatic shift control system (A/T)	M81	Read codes	
THATS	/	Automatic shift control system (A/T)	M81	Erase Codes	
THATS	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
THATS	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
THATS	/	Automatic shift control system (A/T)	M81	Read Live Data	
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
THATS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
THATS	/	Automatic shift control system (A/T)	M82	Read ECU Information	
THATS	/	Automatic shift control system (A/T)	M82	Read codes	
THATS	/	Automatic shift control system (A/T)	M82	Erase Codes	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	

THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Adjustment	RADAR AIMING
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	BRAKE ACTUATOR 3
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ACC relay malfunction.
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
THATS	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
THATS	/	Active Engine Control Support System (ACM) M06	Read codes	
THATS	/	Active Engine Control Support System (ACM) M06	Erase Codes	
THATS	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
THATS	/	Active Engine Control Support System (ACM) M06	Read Live Data	
THATS	/	Active Engine Control Support System (ACM) M06	ACM Reset	
THATS	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
THATS	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
THATS	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
THATS	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
THATS	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
THATS	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
THATS	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
THATS	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
THATS	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
THATS	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
THATS	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
THATS	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
THATS	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
THATS	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
THATS	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
THATS	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
THATS	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
THATS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
THATS	/	Transmission Control System (AT) M18	Read ECU Information	
THATS	/	Transmission Control System (AT) M18	Read codes	
THATS	/	Transmission Control System (AT) M18	Erase Codes	
THATS	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
THATS	/	Transmission Control System (AT) M18	Read Live Data	
THATS	/	Transmission Control System (AT) M18	Adjustment	
THATS	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
THATS	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
THATS	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
THATS	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
THATS	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
THATS	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
THATS	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
THATS	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
THATS	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
THATS	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
THATS	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
THATS	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
THATS	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
THATS	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
THATS	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
THATS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
THATS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
THATS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
THATS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
THATS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
THATS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
THATS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
THATS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
THATS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
THATS	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	

THATS	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
THATS	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
THATS	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
THATS	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
THATS	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
THATS	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
THATS	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
THATS	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
THATS	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
THATS	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
THATS	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
THATS	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
THATS	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
THATS	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
THATS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
THATS	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
THATS	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
THATS	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
THATS	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
THATS	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
THATS	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
THATS	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
THATS	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
THATS	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
THATS	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
THATS	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light

THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
THATS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
THATS	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
THATS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
THATS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
THATS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
THATS	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
THATS	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
THATS	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
THATS	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
THATS	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
THATS	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
THATS	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
THATS	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
THATS	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Security	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
THATS	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
THATS	/	BODY ELECTRICAL/Security	MFF	History Data	
THATS	/	BODY ELECTRICAL/Security	MFF	History Clear	
THATS	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
THATS	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
THATS	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
THATS	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
THATS	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
THATS	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
THATS	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
THATS	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
THATS	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
THATS	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
THATS	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
THATS	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
THATS	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
THATS	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
THATS	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
THATS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
THATS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
THATS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
THATS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
THATS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
THATS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
THATS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
THATS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid

THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
THATS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
THATS	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
THATS	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
THATS	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
THATS	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
THATS	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
THATS	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
THATS	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
THATS	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
THATS	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read ECU Information	
THATS	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read codes	
THATS	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Erase Codes	
THATS	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Freeze Frame Data	
THATS	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Read Live Data	
THATS	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	CMBS (CMS) ACTIVATION HISTORY	
THATS	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	RADAR AIMING
THATS	/	Collision Mitigation Brake Control System (CMBS/CM!	M2E	Miscellaneous Test	CMBS Brake
THATS	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
THATS	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
THATS	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
THATS	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
THATS	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
THATS	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
THATS	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
THATS	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
THATS	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
THATS	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
THATS	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
THATS	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
THATS	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
THATS	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
THATS	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
THATS	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
THATS	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
THATS	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
THATS	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		ECMPCM Reset	
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
THATS	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
THATS	/	DBW	M34	Read ECU Information	
THATS	/	DBW	M34	Read codes	
THATS	/	DBW	M34	Erase Codes	
THATS	/	DBW	M34	Read Freeze Frame Data	
THATS	/	DBW	M34	Read Live Data	
THATS	/	DBW	M34	Inspection	Idle Speed Adjust
THATS	/	DBW	M34	Inspection	Throttle Test
THATS	/	DBW	M34	ECM Reset	
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
THATS	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
THATS	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
THATS	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
THATS	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
THATS	/	Diesel Engine Control System (DIESEL)	M37	Read codes	

THATS	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
THATS	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
THATS	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
THATS	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
THATS	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
THATS	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
THATS	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
THATS	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
THATS	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
THATS	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
THATS	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
THATS	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
THATS	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
THATS	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
THATS	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
THATS	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
THATS	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
THATS	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
THATS	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
THATS	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
THATS	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
THATS	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
THATS	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
THATS	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
THATS	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
THATS	/	Capacitor Control System (EDLC)	M12	Read codes	
THATS	/	Capacitor Control System (EDLC)	M12	Erase Codes	
THATS	/	Capacitor Control System (EDLC)	M12	Read Live Data	
THATS	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
THATS	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
THATS	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
THATS	/	Electronic Brake Control System (EPB)	M1F	Read codes	
THATS	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
THATS	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
THATS	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
THATS	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
THATS	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
THATS	/	Electronic Brake Control System (EPB)	M3E	Read codes	
THATS	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
THATS	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
THATS	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
THATS	/	Electric Powertrain / IMA	M66	Read ECU Information	
THATS	/	Electric Powertrain / IMA	M66	Read codes	
THATS	/	Electric Powertrain / IMA	M66	Erase Codes	
THATS	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
THATS	/	Electric Powertrain / IMA	M66	Read Live Data	
THATS	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
THATS	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
THATS	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
THATS	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
THATS	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
THATS	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
THATS	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
THATS	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
THATS	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
THATS	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
THATS	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
THATS	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
THATS	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
THATS	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
THATS	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
THATS	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
THATS	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
THATS	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
THATS	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
THATS	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
THATS	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
THATS	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
THATS	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
THATS	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
THATS	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
THATS	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
THATS	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
THATS	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
THATS	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
THATS	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
THATS	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
THATS	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
THATS	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
THATS	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
THATS	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
THATS	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
THATS	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
THATS	/	New energy battery (EV)	M44	Read ECU Information	
THATS	/	New energy battery (EV)	M44	Read codes	
THATS	/	New energy battery (EV)	M44	Erase Codes	
THATS	/	New energy battery (EV)	M44	Read Freeze Frame Data	
THATS	/	New energy battery (EV)	M44	Read Live Data	
THATS	/	New energy battery (EV)	M44	Inspection	
THATS	/	New energy battery (EV)	M44	Adjustment	
THATS	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
THATS	/	Electronic vacuum pump (EVPS)	M21	Read codes	
THATS	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	

THATS	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
THATS	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
THATS	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
THATS	/	Electronic vacuum pump (EVPS)	M22	Read codes	
THATS	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
THATS	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
THATS	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
THATS	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
THATS	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
THATS	/	FCW LDW	M4E	Read ECU Information	
THATS	/	FCW LDW	M4E	Read codes	
THATS	/	FCW LDW	M4E	Erase Codes	
THATS	/	FCW LDW	M4E	Read Live Data	
THATS	/	FCW LDW	M4E	Function Test	FCW Drive
THATS	/	FCW LDW	M4E	Function Test	Left side lane departure warning
THATS	/	FCW LDW	M4E	Function Test	Right side lane departure warning
THATS	/	FCW LDW	M4E	Function Test	Indicator Drive
THATS	/	FCW LDW	M4E	Adjustment	
THATS	/	Instrument Display System (GAUGE)	M2C	Read codes	
THATS	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
THATS	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
THATS	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
THATS	/	Anti-lock brake control system (ABS)	M01	Read codes	
THATS	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
THATS	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
THATS	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
THATS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
THATS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
THATS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
THATS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
THATS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
THATS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
THATS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
THATS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
THATS	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
THATS	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
THATS	/	Anti-lock brake control system (ABS)	M02	Read codes	
THATS	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
THATS	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
THATS	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
THATS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
THATS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
THATS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
THATS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
THATS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
THATS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
THATS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
THATS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
THATS	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
THATS	/	Anti-lock brake control system (ABS)	M03	Read codes	
THATS	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
THATS	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
THATS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
THATS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
THATS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
THATS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
THATS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
THATS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
THATS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
THATS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
THATS	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
THATS	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
THATS	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
THATS	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
THATS	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
THATS	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
THATS	/	Anti-lock brake control system (ABS)	M19	Read codes	
THATS	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
THATS	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
THATS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
THATS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
THATS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
THATS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
THATS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
THATS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
THATS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
THATS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
THATS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
THATS	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
THATS	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
THATS	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
THATS	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
THATS	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
THATS	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
THATS	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
THATS	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
THATS	/	Intelligent Parking Control System (SPS)	M9B	Customize	
THATS	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
THATS	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
THATS	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
THATS	/	Hydraulic booster control system (HBS)	M5F	Read codes	
THATS	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
THATS	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	

THATS	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
THATS	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
THATS	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
THATS	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
THATS	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
THATS	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
THATS	/	IMA	M63	Read ECU Information	
THATS	/	IMA	M63	Read codes	
THATS	/	IMA	M63	Erase Codes	
THATS	/	IMA	M63	Read Freeze Frame Data	
THATS	/	IMA	M63	Read Live Data	
THATS	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
THATS	/	IMA	M63	Adjustment	SOC PRESET
THATS	/	IMA	M64	Read ECU Information	
THATS	/	IMA	M64	Read codes	
THATS	/	IMA	M64	Erase Codes	
THATS	/	IMA	M64	Read Freeze Frame Data	
THATS	/	IMA	M64	Read Live Data	
THATS	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
THATS	/	IMA	M64	Adjustment	SOC PRESET
THATS	/	IMA	M65	Read ECU Information	
THATS	/	IMA	M65	Read codes	
THATS	/	IMA	M65	Erase Codes	
THATS	/	IMA	M65	Read Freeze Frame Data	
THATS	/	IMA	M65	Read Live Data	
THATS	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
THATS	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
THATS	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
THATS	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
THATS	/	Intake Sounder Control System (ISC)	M6D	Read codes	
THATS	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
THATS	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
THATS	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
THATS	/	Night Vision System (INVS)	0XB1	Read ECU Information	
THATS	/	Night Vision System (INVS)	0XB1	Read codes	
THATS	/	Night Vision System (INVS)	0XB1	Erase Codes	
THATS	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
THATS	/	Night Vision System (INVS)	0XB1	Read Live Data	
THATS	/	Night Vision System (INVS)	0XB1	Adjustment	
THATS	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
THATS	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
THATS	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
THATS	/	i-SHIFT	0XB0	Read ECU Information	
THATS	/	i-SHIFT	0XB0	Read codes	
THATS	/	i-SHIFT	0XB0	Erase Codes	
THATS	/	i-SHIFT	0XB0	Read Live Data	
THATS	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
THATS	/	Keyless Entry Control System (KAS)	M99	Read codes	
THATS	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
THATS	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
THATS	/	Keyless Entry Control System (KAS)	M99	Self Check	
THATS	/	Keyless Entry Control System (KAS)	M99	History Data	
THATS	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMODC Terminal) Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output



THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
THATS	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
THATS	/	Keyless Entry Control System (KAS)	M99	Registration	
THATS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
THATS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
THATS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
THATS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
THATS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
THATS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
THATS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
THATS	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
THATS	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
THATS	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
THATS	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
THATS	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
THATS	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
THATS	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
THATS	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
THATS	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
THATS	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
THATS	/	Management ECU Module (ME)	M74	Read ECU Information	
THATS	/	Management ECU Module (ME)	M74	Read codes	
THATS	/	Management ECU Module (ME)	M74	Erase Codes	
THATS	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
THATS	/	Management ECU Module (ME)	M74	Read Live Data	
THATS	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
THATS	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
THATS	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
THATS	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
THATS	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
THATS	/	Multi-view camera system (MVCS)	M7A	Read codes	
THATS	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
THATS	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
THATS	/	Multi-view camera system (MVCS)	M7A	Customization	
THATS	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
THATS	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
THATS	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
THATS	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
THATS	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
THATS	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
THATS	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
THATS	/	Power Control Unit (PCU)	M83	Read ECU Information	
THATS	/	Power Control Unit (PCU)	M83	Read codes	
THATS	/	Power Control Unit (PCU)	M83	Erase Codes	
THATS	/	Power Control Unit (PCU)	M83	Read Live Data	
THATS	/	Power Control Unit (PCU)	M83	Self Check	
THATS	/	Power Control Unit (PCU)	M83	History Data	
THATS	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
THATS	/	Engine Control System (PGM-FI)	M23	Read codes	
THATS	/	Engine Control System (PGM-FI)	M23	Erase Codes	
THATS	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
THATS	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
THATS	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
THATS	/	Engine Control System (PGM-FI)	M23	Read Live Data	
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
THATS	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
THATS	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
THATS	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
THATS	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
THATS	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
THATS	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
THATS	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
THATS	/	Engine Control System (PGM-FI)	M50	Read codes	
THATS	/	Engine Control System (PGM-FI)	M50	Erase Codes	
THATS	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
THATS	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
THATS	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
THATS	/	Engine Control System (PGM-FI)	M50	Read Live Data	
THATS	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST

THATS	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
THATS	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
THATS	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
THATS	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
THATS	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
THATS	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
THATS	/	Engine Control System (PGM-FI)	M86	Read codes	
THATS	/	Engine Control System (PGM-FI)	M86	Erase Codes	
THATS	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
THATS	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
THATS	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
THATS	/	Engine Control System (PGM-FI)	M86	Read Live Data	
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
THATS	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
THATS	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
THATS	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
THATS	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
THATS	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
THATS	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
THATS	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
THATS	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
THATS	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
THATS	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
THATS	/	PSR	M27	Read ECU Information	
THATS	/	PSR	M27	Read codes	
THATS	/	PSR	M27	Erase Codes	
THATS	/	PSR	M27	Read Live Data	
THATS	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
THATS	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
THATS	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
THATS	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
THATS	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
THATS	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
THATS	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
THATS	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
THATS	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
THATS	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
THATS	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
THATS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
THATS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
THATS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
THATS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
THATS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
THATS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
THATS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
THATS	/	Remote starter (RS)	M90	System Check	
THATS	/	Remote starter (RS)	M90	HISTORY	
THATS	/	Remote starter (RS)	M90	Registration	
THATS	/	Seat load cell (SWS)	M6F	Read ECU Information	
THATS	/	Seat load cell (SWS)	M6F	Read codes	
THATS	/	Seat load cell (SWS)	M6F	Erase Codes	
THATS	/	Seat load cell (SWS)	M6F	Read Live Data	
THATS	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
THATS	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
THATS	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
THATS	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
THATS	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
THATS	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
THATS	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
THATS	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	

THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
THATS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
THATS	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
THATS	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
THATS	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
THATS	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
THATS	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
THATS	/	Groove track drive unit (SLOT ECU)	M98	History Data	
THATS	/	Groove track drive unit (SLOT ECU)	M98	System Information	
THATS	/	Airbag Control System (SRS)	M9F	Read ECU Information	
THATS	/	Airbag Control System (SRS)	M9F	Read codes	
THATS	/	Airbag Control System (SRS)	M9F	Erase Codes	
THATS	/	Airbag Control System (SRS)	M9F	Read Live Data	
THATS	/	Airbag Control System (SRS)	MA0	Read ECU Information	
THATS	/	Airbag Control System (SRS)	MA0	Read codes	
THATS	/	Airbag Control System (SRS)	MA0	Erase Codes	
THATS	/	Airbag Control System (SRS)	MA0	Read Live Data	
THATS	/	Airbag Control System (SRS)	MA1	Read ECU Information	
THATS	/	Airbag Control System (SRS)	MA1	Read codes	
THATS	/	Airbag Control System (SRS)	MA1	Erase Codes	
THATS	/	Airbag Control System (SRS)	MA1	Read Live Data	
THATS	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
THATS	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
THATS	/	Airbag Control System (SRS)	M2A	Read codes	
THATS	/	Airbag Control System (SRS)	M2A	Erase Codes	
THATS	/	Airbag Control System (SRS)	M2A	Read Live Data	
THATS	/	Airbag Control System (SRS)	M9C	Read ECU Information	
THATS	/	Airbag Control System (SRS)	M9C	Read codes	
THATS	/	Airbag Control System (SRS)	M9C	Erase Codes	
THATS	/	Airbag Control System (SRS)	M9C	Read Live Data	
THATS	/	Airbag Control System (SRS)	M9D	Read ECU Information	
THATS	/	Airbag Control System (SRS)	M9D	Read codes	
THATS	/	Airbag Control System (SRS)	M9D	Erase Codes	
THATS	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
THATS	/	Airbag Control System (SRS)	M9D	Read Live Data	
THATS	/	Airbag Control System (SRS)	M9D	Parameter Information	
THATS	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
THATS	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
THATS	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
THATS	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pre-tensioner For CMBS (CMS)
THATS	/	Airbag Control System (SRS)	M9D	Function Test	
THATS	/	Airbag Control System (SRS)	M9D	System Information	
THATS	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
THATS	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
THATS	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
THATS	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
THATS	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
THATS	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
THATS	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
THATS	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
THATS	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
THATS	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
THATS	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
THATS	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
THATS	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
THATS	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
THATS	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
THATS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
THATS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
THATS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
THATS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
THATS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
THATS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
THATS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
THATS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
THATS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
THATS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
THATS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
THATS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
THATS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
THATS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
THATS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
THATS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
TODAY	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
TODAY	/	Four-wheel steering control system (4WS)	M52	Read codes	
TODAY	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
TODAY	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
TODAY	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
TODAY	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
TODAY	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
TODAY	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
TODAY	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
TODAY	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
TODAY	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
TODAY	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
TODAY	/	Automatic shift control system (A/T)	M1E	Read codes	
TODAY	/	Automatic shift control system (A/T)	M1E	Erase Codes	

TODAY	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
TODAY	/	Automatic shift control system (A/T)	M1E	Read Live Data	
TODAY	/	Automatic shift control system (A/T)	M1E	ECMPCMC Reset	
TODAY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
TODAY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
TODAY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
TODAY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
TODAY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
TODAY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
TODAY	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
TODAY	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
TODAY	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
TODAY	/	Automatic shift control system (A/T)	M3B	Read codes	
TODAY	/	Automatic shift control system (A/T)	M3B	Erase Codes	
TODAY	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
TODAY	/	Automatic shift control system (A/T)	M3B	ECMPCMC Reset	
TODAY	/	Automatic shift control system (A/T)	M3B	Read Live Data	
TODAY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
TODAY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
TODAY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
TODAY	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
TODAY	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
TODAY	/	Automatic shift control system (A/T)	M3C	Read codes	
TODAY	/	Automatic shift control system (A/T)	M3C	Erase Codes	
TODAY	/	Automatic shift control system (A/T)	M81	Read ECU Information	
TODAY	/	Automatic shift control system (A/T)	M81	Read codes	
TODAY	/	Automatic shift control system (A/T)	M81	Erase Codes	
TODAY	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
TODAY	/	Automatic shift control system (A/T)	M81	ECMPCMC Reset	
TODAY	/	Automatic shift control system (A/T)	M81	Read Live Data	
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
TODAY	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
TODAY	/	Automatic shift control system (A/T)	M82	Read ECU Information	
TODAY	/	Automatic shift control system (A/T)	M82	Read codes	
TODAY	/	Automatic shift control system (A/T)	M82	Erase Codes	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
TODAY	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
TODAY	/	Active Engine Control Support System (ACM)	M06	Read codes	
TODAY	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
TODAY	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
TODAY	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
TODAY	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
TODAY	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
TODAY	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
TODAY	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
TODAY	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
TODAY	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
TODAY	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
TODAY	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
TODAY	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read ECU Information	
TODAY	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read codes	
TODAY	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Erase Codes	
TODAY	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read Freeze Frame Data	
TODAY	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Read Live Data	
TODAY	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Function Test	Damper Force Operation Test
TODAY	/	Active / Automatic Shock Absorber Control System (A MOD	MOD	Adjustment	Damper Stroke Calibration
TODAY	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
TODAY	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
TODAY	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	

TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
TODAY	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
TODAY	/	Transmission Control System (AT)	M18	Read ECU Information	
TODAY	/	Transmission Control System (AT)	M18	Read codes	
TODAY	/	Transmission Control System (AT)	M18	Erase Codes	
TODAY	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
TODAY	/	Transmission Control System (AT)	M18	Read Live Data	
TODAY	/	Transmission Control System (AT)	M18	Adjustment	
TODAY	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
TODAY	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
TODAY	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
TODAY	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
TODAY	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
TODAY	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
TODAY	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
TODAY	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
TODAY	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
TODAY	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
TODAY	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
TODAY	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
TODAY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
TODAY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
TODAY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
TODAY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
TODAY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
TODAY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
TODAY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
TODAY	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
TODAY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
TODAY	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
TODAY	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
TODAY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
TODAY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
TODAY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
TODAY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
TODAY	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
TODAY	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
TODAY	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
TODAY	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)

TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
TODAY	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
TODAY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
TODAY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
TODAY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
TODAY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
TODAY	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
TODAY	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
TODAY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
TODAY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
TODAY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
TODAY	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
TODAY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
TODAY	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
TODAY	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
TODAY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
TODAY	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
TODAY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
TODAY	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up

TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
TODAY	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
TODAY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Security	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
TODAY	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
TODAY	/	BODY ELECTRICAL/Security	MFF	History Data	
TODAY	/	BODY ELECTRICAL/Security	MFF	History Clear	
TODAY	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
TODAY	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
TODAY	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
TODAY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
TODAY	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
TODAY	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
TODAY	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
TODAY	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
TODAY	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
TODAY	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
TODAY	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
TODAY	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
TODAY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
TODAY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
TODAY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
TODAY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
TODAY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
TODAY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
TODAY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
TODAY	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
TODAY	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
TODAY	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
TODAY	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
TODAY	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
TODAY	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
TODAY	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
TODAY	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
TODAY	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
TODAY	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
TODAY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
TODAY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
TODAY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
TODAY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
TODAY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
TODAY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
TODAY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
TODAY	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
TODAY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
TODAY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
TODAY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
TODAY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
TODAY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
TODAY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
TODAY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
TODAY	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests

TODAY	/	Promise Automatic Transmission Control System (CVT M1B	Miscellaneous Test	Electrical Oil Pump Activation
TODAY	/	Promise Automatic Transmission Control System (CVT M33	Read ECU Information	
TODAY	/	Promise Automatic Transmission Control System (CVT M33	Read codes	
TODAY	/	Promise Automatic Transmission Control System (CVT M33	Erase Codes	
TODAY	/	Promise Automatic Transmission Control System (CVT M33	Read Freeze Frame Data	
TODAY	/	Promise Automatic Transmission Control System (CVT M33	Read Live Data	
TODAY	/	Promise Automatic Transmission Control System (CVT M33	ECM/PCM Reset	
TODAY	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Inhibitor Solenoid
TODAY	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid A (LF)
TODAY	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
TODAY	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	Read codes	
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	ECM/PCM Reset	
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
TODAY	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
TODAY	/	DBW M34	Read ECU Information	
TODAY	/	DBW M34	Read codes	
TODAY	/	DBW M34	Erase Codes	
TODAY	/	DBW M34	Read Freeze Frame Data	
TODAY	/	DBW M34	Read Live Data	
TODAY	/	DBW M34	Inspection	Idle Speed Adjust
TODAY	/	DBW M34	Inspection	Throttle Test
TODAY	/	DBW M34	ECM Reset	
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
TODAY	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
TODAY	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
TODAY	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
TODAY	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
TODAY	/	Diesel Engine Control System (DIESEL) M37	Read codes	
TODAY	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
TODAY	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
TODAY	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
TODAY	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
TODAY	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
TODAY	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
TODAY	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
TODAY	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
TODAY	/	Diesel Engine Control System (DIESEL) M85	Read codes	
TODAY	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
TODAY	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
TODAY	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
TODAY	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
TODAY	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
TODAY	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
TODAY	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
TODAY	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
TODAY	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
TODAY	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
TODAY	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
TODAY	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
TODAY	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
TODAY	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
TODAY	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
TODAY	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
TODAY	/	Capacitor Control System (EDLC) M12	Read codes	
TODAY	/	Capacitor Control System (EDLC) M12	Erase Codes	
TODAY	/	Capacitor Control System (EDLC) M12	Read Live Data	
TODAY	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge and Charge Test
TODAY	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge for Removal or Disposal
TODAY	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Usage History Clear
TODAY	/	Electronic Brake Control System (EPB) M1F	Read codes	



TODAY	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
TODAY	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
TODAY	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
TODAY	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
TODAY	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
TODAY	/	Electronic Brake Control System (EPB)	M3E	Read codes	
TODAY	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
TODAY	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
TODAY	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
TODAY	/	Electric Powertrain / IMA	M66	Read ECU Information	
TODAY	/	Electric Powertrain / IMA	M66	Read codes	
TODAY	/	Electric Powertrain / IMA	M66	Erase Codes	
TODAY	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
TODAY	/	Electric Powertrain / IMA	M66	Read Live Data	
TODAY	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
TODAY	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
TODAY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
TODAY	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
TODAY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
TODAY	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
TODAY	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
TODAY	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
TODAY	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
TODAY	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
TODAY	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
TODAY	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
TODAY	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
TODAY	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
TODAY	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
TODAY	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
TODAY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
TODAY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
TODAY	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
TODAY	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
TODAY	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
TODAY	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
TODAY	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
TODAY	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
TODAY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
TODAY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
TODAY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
TODAY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
TODAY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
TODAY	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
TODAY	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
TODAY	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
TODAY	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
TODAY	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
TODAY	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
TODAY	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
TODAY	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
TODAY	/	New energy battery (EV)	M44	Read ECU Information	
TODAY	/	New energy battery (EV)	M44	Read codes	
TODAY	/	New energy battery (EV)	M44	Erase Codes	
TODAY	/	New energy battery (EV)	M44	Read Freeze Frame Data	
TODAY	/	New energy battery (EV)	M44	Read Live Data	
TODAY	/	New energy battery (EV)	M44	Inspection	
TODAY	/	New energy battery (EV)	M44	Adjustment	
TODAY	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
TODAY	/	Electronic vacuum pump (EVPS)	M21	Read codes	
TODAY	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
TODAY	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
TODAY	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
TODAY	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
TODAY	/	Electronic vacuum pump (EVPS)	M22	Read codes	
TODAY	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
TODAY	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
TODAY	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
TODAY	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
TODAY	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
TODAY	/	FCW LDW	M4E	Read ECU Information	
TODAY	/	FCW LDW	M4E	Read codes	
TODAY	/	FCW LDW	M4E	Erase Codes	
TODAY	/	FCW LDW	M4E	Read Live Data	
TODAY	/	FCW LDW	M4E	Function Test	FCW Drive
TODAY	/	FCW LDW	M4E	Function Test	Left side lane departure warning
TODAY	/	FCW LDW	M4E	Function Test	Right side lane departure warning
TODAY	/	FCW LDW	M4E	Function Test	Indicator Drive
TODAY	/	FCW LDW	M4E	Adjustment	
TODAY	/	Instrument Display System (GAUGE)	M2C	Read codes	
TODAY	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
TODAY	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
TODAY	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
TODAY	/	Anti-lock brake control system (ABS)	M01	Read codes	
TODAY	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
TODAY	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
TODAY	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
TODAY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
TODAY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA

TODAY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
TODAY	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
TODAY	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
TODAY	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
TODAY	/	Anti-lock brake control system (ABS)	M02	Read codes	
TODAY	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
TODAY	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
TODAY	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
TODAY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
TODAY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
TODAY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
TODAY	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
TODAY	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
TODAY	/	Anti-lock brake control system (ABS)	M03	Read codes	
TODAY	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
TODAY	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
TODAY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
TODAY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
TODAY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
TODAY	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
TODAY	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
TODAY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
TODAY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
TODAY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
TODAY	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
TODAY	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
TODAY	/	Anti-lock brake control system (ABS)	M19	Read codes	
TODAY	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
TODAY	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
TODAY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
TODAY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
TODAY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
TODAY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
TODAY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
TODAY	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
TODAY	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
TODAY	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
TODAY	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
TODAY	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
TODAY	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
TODAY	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
TODAY	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
TODAY	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
TODAY	/	Intelligent Parking Control System (SPS)	M9B	Customize	
TODAY	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
TODAY	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
TODAY	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
TODAY	/	Hydraulic booster control system (HBS)	M5F	Read codes	
TODAY	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
TODAY	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
TODAY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
TODAY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
TODAY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
TODAY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
TODAY	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
TODAY	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
TODAY	/	IMA	M63	Read ECU Information	
TODAY	/	IMA	M63	Read codes	
TODAY	/	IMA	M63	Erase Codes	
TODAY	/	IMA	M63	Read Freeze Frame Data	
TODAY	/	IMA	M63	Read Live Data	
TODAY	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
TODAY	/	IMA	M63	Adjustment	SOC PRESET
TODAY	/	IMA	M64	Read ECU Information	
TODAY	/	IMA	M64	Read codes	
TODAY	/	IMA	M64	Erase Codes	
TODAY	/	IMA	M64	Read Freeze Frame Data	
TODAY	/	IMA	M64	Read Live Data	
TODAY	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
TODAY	/	IMA	M64	Adjustment	SOC PRESET
TODAY	/	IMA	M65	Read ECU Information	
TODAY	/	IMA	M65	Read codes	
TODAY	/	IMA	M65	Erase Codes	
TODAY	/	IMA	M65	Read Freeze Frame Data	
TODAY	/	IMA	M65	Read Live Data	
TODAY	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
TODAY	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
TODAY	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
TODAY	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
TODAY	/	Intake Sounder Control System (ISC)	M6D	Read codes	
TODAY	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
TODAY	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	

TODAY	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
TODAY	/	Night Vision System (INVS)	0XB1	Read ECU Information	
TODAY	/	Night Vision System (INVS)	0XB1	Read codes	
TODAY	/	Night Vision System (INVS)	0XB1	Erase Codes	
TODAY	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
TODAY	/	Night Vision System (INVS)	0XB1	Read Live Data	
TODAY	/	Night Vision System (INVS)	0XB1	Adjustment	
TODAY	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
TODAY	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
TODAY	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
TODAY	/	i-SHIFT	0XB0	Read ECU Information	
TODAY	/	i-SHIFT	0XB0	Read codes	
TODAY	/	i-SHIFT	0XB0	Erase Codes	
TODAY	/	i-SHIFT	0XB0	Read Live Data	
TODAY	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
TODAY	/	Keyless Entry Control System (KAS)	M99	Read codes	
TODAY	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
TODAY	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
TODAY	/	Keyless Entry Control System (KAS)	M99	Self Check	
TODAY	/	Keyless Entry Control System (KAS)	M99	History Data	
TODAY	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCONT Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
TODAY	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
TODAY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
TODAY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
TODAY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
TODAY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
TODAY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
TODAY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
TODAY	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
TODAY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
TODAY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
TODAY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
TODAY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
TODAY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
TODAY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
TODAY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
TODAY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
TODAY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
TODAY	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
TODAY	/	Management ECU Module (ME)	M74	Read ECU Information	
TODAY	/	Management ECU Module (ME)	M74	Read codes	
TODAY	/	Management ECU Module (ME)	M74	Erase Codes	
TODAY	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	

TODAY	/	Management ECU Module (ME)	M74	Read Live Data	
TODAY	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
TODAY	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
TODAY	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
TODAY	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
TODAY	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
TODAY	/	Multi-view camera system (MVCS)	M7A	Read codes	
TODAY	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
TODAY	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
TODAY	/	Multi-view camera system (MVCS)	M7A	Customization	
TODAY	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
TODAY	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
TODAY	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
TODAY	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
TODAY	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
TODAY	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
TODAY	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
TODAY	/	Power Control Unit (PCU)	M83	Read ECU Information	
TODAY	/	Power Control Unit (PCU)	M83	Read codes	
TODAY	/	Power Control Unit (PCU)	M83	Erase Codes	
TODAY	/	Power Control Unit (PCU)	M83	Read Live Data	
TODAY	/	Power Control Unit (PCU)	M83	Self Check	
TODAY	/	Power Control Unit (PCU)	M83	History Data	
TODAY	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
TODAY	/	Engine Control System (PGM-FI)	M23	Read codes	
TODAY	/	Engine Control System (PGM-FI)	M23	Erase Codes	
TODAY	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
TODAY	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
TODAY	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
TODAY	/	Engine Control System (PGM-FI)	M23	Read Live Data	
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
TODAY	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
TODAY	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
TODAY	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
TODAY	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
TODAY	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
TODAY	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
TODAY	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
TODAY	/	Engine Control System (PGM-FI)	M50	Read codes	
TODAY	/	Engine Control System (PGM-FI)	M50	Erase Codes	
TODAY	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
TODAY	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
TODAY	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
TODAY	/	Engine Control System (PGM-FI)	M50	Read Live Data	
TODAY	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
TODAY	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
TODAY	/	Engine Control System (PGM-FI)	M50	Inspection	VTC TEST
TODAY	/	Engine Control System (PGM-FI)	M50	Inspection	IMT (IMRC) TEST
TODAY	/	Engine Control System (PGM-FI)	M50	Inspection	EGR TEST
TODAY	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC TEST
TODAY	/	Engine Control System (PGM-FI)	M50	Inspection	IACV TEST
TODAY	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
TODAY	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
TODAY	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
TODAY	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
TODAY	/	Engine Control System (PGM-FI)	M86	Read codes	
TODAY	/	Engine Control System (PGM-FI)	M86	Erase Codes	
TODAY	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
TODAY	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
TODAY	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
TODAY	/	Engine Control System (PGM-FI)	M86	Read Live Data	
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST

TODAY	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
TODAY	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
TODAY	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
TODAY	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
TODAY	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
TODAY	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
TODAY	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
TODAY	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
TODAY	/	PSR	M27	Read ECU Information	
TODAY	/	PSR	M27	Read codes	
TODAY	/	PSR	M27	Erase Codes	
TODAY	/	PSR	M27	Read Live Data	
TODAY	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
TODAY	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
TODAY	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
TODAY	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
TODAY	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
TODAY	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read codes	
TODAY	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Erase Codes	
TODAY	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Freeze Frame Data	
TODAY	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Read Live Data	
TODAY	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	E-DPS Control Module Replacement
TODAY	/	Real-time four-wheel drive / intelligent control drive s M3A	M3A	Adjustment	Longitudinal G Sensor Learning
TODAY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
TODAY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
TODAY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
TODAY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
TODAY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
TODAY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
TODAY	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
TODAY	/	Remote starter (RS)	M90	System Check	
TODAY	/	Remote starter (RS)	M90	HISTORY	
TODAY	/	Remote starter (RS)	M90	Registration	
TODAY	/	Seat load cell (SWS)	M6F	Read ECU Information	
TODAY	/	Seat load cell (SWS)	M6F	Read codes	
TODAY	/	Seat load cell (SWS)	M6F	Erase Codes	
TODAY	/	Seat load cell (SWS)	M6F	Read Live Data	
TODAY	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
TODAY	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
TODAY	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
TODAY	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
TODAY	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
TODAY	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
TODAY	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
TODAY	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
TODAY	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
TODAY	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
TODAY	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
TODAY	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
TODAY	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
TODAY	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
TODAY	/	Groove track drive unit (SLOT ECU)	M98	History Data	
TODAY	/	Groove track drive unit (SLOT ECU)	M98	System Information	
TODAY	/	Airbag Control System (SRS)	M9F	Read ECU Information	
TODAY	/	Airbag Control System (SRS)	M9F	Read codes	
TODAY	/	Airbag Control System (SRS)	M9F	Erase Codes	
TODAY	/	Airbag Control System (SRS)	M9F	Read Live Data	
TODAY	/	Airbag Control System (SRS)	MA0	Read ECU Information	
TODAY	/	Airbag Control System (SRS)	MA0	Read codes	
TODAY	/	Airbag Control System (SRS)	MA0	Erase Codes	
TODAY	/	Airbag Control System (SRS)	MA0	Read Live Data	
TODAY	/	Airbag Control System (SRS)	MA1	Read ECU Information	
TODAY	/	Airbag Control System (SRS)	MA1	Read codes	
TODAY	/	Airbag Control System (SRS)	MA1	Erase Codes	
TODAY	/	Airbag Control System (SRS)	MA1	Read Live Data	
TODAY	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
TODAY	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
TODAY	/	Airbag Control System (SRS)	M2A	Read codes	
TODAY	/	Airbag Control System (SRS)	M2A	Erase Codes	
TODAY	/	Airbag Control System (SRS)	M2A	Read Live Data	

TODAY	/	Airbag Control System (SRS)	M9C	Read ECU Information	
TODAY	/	Airbag Control System (SRS)	M9C	Read codes	
TODAY	/	Airbag Control System (SRS)	M9C	Erase Codes	
TODAY	/	Airbag Control System (SRS)	M9C	Read Live Data	
TODAY	/	Airbag Control System (SRS)	M9D	Read ECU Information	
TODAY	/	Airbag Control System (SRS)	M9D	Read codes	
TODAY	/	Airbag Control System (SRS)	M9D	Erase Codes	
TODAY	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
TODAY	/	Airbag Control System (SRS)	M9D	Read Live Data	
TODAY	/	Airbag Control System (SRS)	M9D	Parameter Information	
TODAY	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
TODAY	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
TODAY	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
TODAY	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
TODAY	/	Airbag Control System (SRS)	M9D	Function Test	
TODAY	/	Airbag Control System (SRS)	M9D	System Information	
TODAY	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
TODAY	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
TODAY	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
TODAY	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
TODAY	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
TODAY	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
TODAY	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
TODAY	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
TODAY	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
TODAY	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
TODAY	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
TODAY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
TODAY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
TODAY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
TODAY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
TODAY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
TODAY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
TODAY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
TODAY	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
TORNEO	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
TORNEO	/	Four-wheel steering control system (4WS)	M52	Read codes	
TORNEO	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
TORNEO	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
TORNEO	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
TORNEO	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
TORNEO	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
TORNEO	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
TORNEO	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
TORNEO	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
TORNEO	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
TORNEO	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
TORNEO	/	Automatic shift control system (A/T)	M1E	Read codes	
TORNEO	/	Automatic shift control system (A/T)	M1E	Erase Codes	
TORNEO	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
TORNEO	/	Automatic shift control system (A/T)	M1E	Read Live Data	
TORNEO	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
TORNEO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
TORNEO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
TORNEO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
TORNEO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
TORNEO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
TORNEO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
TORNEO	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
TORNEO	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
TORNEO	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
TORNEO	/	Automatic shift control system (A/T)	M3B	Read codes	
TORNEO	/	Automatic shift control system (A/T)	M3B	Erase Codes	
TORNEO	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
TORNEO	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
TORNEO	/	Automatic shift control system (A/T)	M3B	Read Live Data	
TORNEO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
TORNEO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
TORNEO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
TORNEO	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
TORNEO	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
TORNEO	/	Automatic shift control system (A/T)	M3C	Read codes	
TORNEO	/	Automatic shift control system (A/T)	M3C	Erase Codes	
TORNEO	/	Automatic shift control system (A/T)	M81	Read ECU Information	
TORNEO	/	Automatic shift control system (A/T)	M81	Read codes	
TORNEO	/	Automatic shift control system (A/T)	M81	Erase Codes	
TORNEO	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
TORNEO	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
TORNEO	/	Automatic shift control system (A/T)	M81	Read Live Data	
TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A

TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
TORNEO	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
TORNEO	/	Automatic shift control system (A/T)	M82	Read ECU Information	
TORNEO	/	Automatic shift control system (A/T)	M82	Read codes	
TORNEO	/	Automatic shift control system (A/T)	M82	Erase Codes	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
TORNEO	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
TORNEO	/	Active Engine Control Support System (ACM)	M06	Read codes	
TORNEO	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
TORNEO	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
TORNEO	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
TORNEO	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
TORNEO	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
TORNEO	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
TORNEO	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
TORNEO	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
TORNEO	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
TORNEO	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
TORNEO	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
TORNEO	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Read ECU Information	
TORNEO	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Read codes	
TORNEO	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Erase Codes	
TORNEO	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Read Freeze Frame Data	
TORNEO	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Read Live Data	
TORNEO	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Function Test	Damper Force Operation Test
TORNEO	/	Active / Automatic Shock Absorber Control System (A MOD	M18	Adjustment	Damper Stroke Calibration
TORNEO	/	Active / Automatic Shock Absorber Control System (A M1A	M18	Read codes	
TORNEO	/	Active / Automatic Shock Absorber Control System (A M1A	M18	Erase Codes	
TORNEO	/	Active / Automatic Shock Absorber Control System (A M1A	M18	Read Live Data	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
TORNEO	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
TORNEO	/	Transmission Control System (AT)	M18	Read ECU Information	
TORNEO	/	Transmission Control System (AT)	M18	Read codes	
TORNEO	/	Transmission Control System (AT)	M18	Erase Codes	
TORNEO	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
TORNEO	/	Transmission Control System (AT)	M18	Read Live Data	
TORNEO	/	Transmission Control System (AT)	M18	Adjustment	
TORNEO	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
TORNEO	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
TORNEO	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
TORNEO	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
TORNEO	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
TORNEO	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
TORNEO	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
TORNEO	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
TORNEO	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON

TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
TORNEO	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
TORNEO	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
TORNEO	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
TORNEO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
TORNEO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
TORNEO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
TORNEO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
TORNEO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
TORNEO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
TORNEO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
TORNEO	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
TORNEO	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
TORNEO	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
TORNEO	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
TORNEO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
TORNEO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
TORNEO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
TORNEO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
TORNEO	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
TORNEO	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
TORNEO	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
TORNEO	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
TORNEO	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
TORNEO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	



TORNEO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
TORNEO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
TORNEO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
TORNEO	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
TORNEO	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
TORNEO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
TORNEO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
TORNEO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
TORNEO	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
TORNEO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
TORNEO	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
TORNEO	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
TORNEO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
TORNEO	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
TORNEO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
TORNEO	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
TORNEO	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
TORNEO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Security	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
TORNEO	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
TORNEO	/	BODY ELECTRICAL/Security	MFF	History Data	
TORNEO	/	BODY ELECTRICAL/Security	MFF	History Clear	
TORNEO	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
TORNEO	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
TORNEO	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
TORNEO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper

TORNEO	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
TORNEO	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
TORNEO	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
TORNEO	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
TORNEO	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
TORNEO	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
TORNEO	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
TORNEO	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
TORNEO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
TORNEO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
TORNEO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
TORNEO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
TORNEO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
TORNEO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
TORNEO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
TORNEO	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
TORNEO	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
TORNEO	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
TORNEO	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
TORNEO	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
TORNEO	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
TORNEO	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
TORNEO	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
TORNEO	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
TORNEO	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
TORNEO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read ECU Information	
TORNEO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read codes	
TORNEO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Erase Codes	
TORNEO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read Freeze Frame Data	
TORNEO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Read Live Data	
TORNEO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
TORNEO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Miscellaneous Test	RADAR AIMING
TORNEO	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)		Miscellaneous Test	CMBS Brake
TORNEO	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
TORNEO	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
TORNEO	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
TORNEO	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
TORNEO	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
TORNEO	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
TORNEO	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
TORNEO	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
TORNEO	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
TORNEO	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
TORNEO	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
TORNEO	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
TORNEO	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
TORNEO	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
TORNEO	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
TORNEO	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
TORNEO	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
TORNEO	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
TORNEO	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		ECMPCM Reset	
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
TORNEO	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
TORNEO	/	DBW	M34	Read ECU Information	
TORNEO	/	DBW	M34	Read codes	
TORNEO	/	DBW	M34	Erase Codes	
TORNEO	/	DBW	M34	Read Freeze Frame Data	
TORNEO	/	DBW	M34	Read Live Data	
TORNEO	/	DBW	M34	Inspection	Idle Speed Adjust
TORNEO	/	DBW	M34	Inspection	Throttle Test
TORNEO	/	DBW	M34	ECM Reset	

TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
TORNEO	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
TORNEO	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
TORNEO	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
TORNEO	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
TORNEO	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
TORNEO	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
TORNEO	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
TORNEO	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
TORNEO	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
TORNEO	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
TORNEO	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
TORNEO	/	Capacitor Control System (EDLC)	M12	Read codes	
TORNEO	/	Capacitor Control System (EDLC)	M12	Erase Codes	
TORNEO	/	Capacitor Control System (EDLC)	M12	Read Live Data	
TORNEO	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
TORNEO	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
TORNEO	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
TORNEO	/	Electronic Brake Control System (EPB)	M1F	Read codes	
TORNEO	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
TORNEO	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
TORNEO	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
TORNEO	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
TORNEO	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
TORNEO	/	Electronic Brake Control System (EPB)	M3E	Read codes	
TORNEO	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
TORNEO	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
TORNEO	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
TORNEO	/	Electric Powertrain / IMA	M66	Read ECU Information	
TORNEO	/	Electric Powertrain / IMA	M66	Read codes	
TORNEO	/	Electric Powertrain / IMA	M66	Erase Codes	
TORNEO	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
TORNEO	/	Electric Powertrain / IMA	M66	Read Live Data	
TORNEO	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
TORNEO	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
TORNEO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
TORNEO	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
TORNEO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
TORNEO	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
TORNEO	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
TORNEO	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
TORNEO	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
TORNEO	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
TORNEO	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
TORNEO	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
TORNEO	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
TORNEO	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
TORNEO	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
TORNEO	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
TORNEO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
TORNEO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear

TORNEO	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
TORNEO	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
TORNEO	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
TORNEO	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
TORNEO	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
TORNEO	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
TORNEO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
TORNEO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
TORNEO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
TORNEO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
TORNEO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
TORNEO	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
TORNEO	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
TORNEO	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
TORNEO	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
TORNEO	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
TORNEO	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
TORNEO	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
TORNEO	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
TORNEO	/	New energy battery (EV)	M44	Read ECU Information	
TORNEO	/	New energy battery (EV)	M44	Read codes	
TORNEO	/	New energy battery (EV)	M44	Erase Codes	
TORNEO	/	New energy battery (EV)	M44	Read Freeze Frame Data	
TORNEO	/	New energy battery (EV)	M44	Read Live Data	
TORNEO	/	New energy battery (EV)	M44	Inspection	
TORNEO	/	New energy battery (EV)	M44	Adjustment	
TORNEO	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
TORNEO	/	Electronic vacuum pump (EVPS)	M21	Read codes	
TORNEO	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
TORNEO	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
TORNEO	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
TORNEO	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
TORNEO	/	Electronic vacuum pump (EVPS)	M22	Read codes	
TORNEO	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
TORNEO	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
TORNEO	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
TORNEO	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
TORNEO	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
TORNEO	/	FCW LDW	M4E	Read ECU Information	
TORNEO	/	FCW LDW	M4E	Read codes	
TORNEO	/	FCW LDW	M4E	Erase Codes	
TORNEO	/	FCW LDW	M4E	Read Live Data	
TORNEO	/	FCW LDW	M4E	Function Test	FCW Drive
TORNEO	/	FCW LDW	M4E	Function Test	Left side lane departure warning
TORNEO	/	FCW LDW	M4E	Function Test	Right side lane departure warning
TORNEO	/	FCW LDW	M4E	Function Test	Indicator Drive
TORNEO	/	FCW LDW	M4E	Adjustment	
TORNEO	/	Instrument Display System (GAUGE)	M2C	Read codes	
TORNEO	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
TORNEO	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
TORNEO	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
TORNEO	/	Anti-lock brake control system (ABS)	M01	Read codes	
TORNEO	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
TORNEO	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
TORNEO	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
TORNEO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
TORNEO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
TORNEO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
TORNEO	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
TORNEO	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
TORNEO	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
TORNEO	/	Anti-lock brake control system (ABS)	M02	Read codes	
TORNEO	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
TORNEO	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
TORNEO	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
TORNEO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
TORNEO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
TORNEO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
TORNEO	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
TORNEO	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
TORNEO	/	Anti-lock brake control system (ABS)	M03	Read codes	
TORNEO	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
TORNEO	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
TORNEO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
TORNEO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
TORNEO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
TORNEO	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
TORNEO	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
TORNEO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
TORNEO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
TORNEO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser

TORNEO	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
TORNEO	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
TORNEO	/	Anti-lock brake control system (ABS)	M19	Read codes	
TORNEO	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
TORNEO	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
TORNEO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
TORNEO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
TORNEO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
TORNEO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
TORNEO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
TORNEO	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
TORNEO	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
TORNEO	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
TORNEO	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
TORNEO	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
TORNEO	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
TORNEO	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
TORNEO	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
TORNEO	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
TORNEO	/	Intelligent Parking Control System (SPS)	M9B	Customize	
TORNEO	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
TORNEO	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
TORNEO	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
TORNEO	/	Hydraulic booster control system (HBS)	M5F	Read codes	
TORNEO	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
TORNEO	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
TORNEO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
TORNEO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
TORNEO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
TORNEO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
TORNEO	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
TORNEO	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
TORNEO	/	IMA	M63	Read ECU Information	
TORNEO	/	IMA	M63	Read codes	
TORNEO	/	IMA	M63	Erase Codes	
TORNEO	/	IMA	M63	Read Freeze Frame Data	
TORNEO	/	IMA	M63	Read Live Data	
TORNEO	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
TORNEO	/	IMA	M63	Adjustment	SOC PRESET
TORNEO	/	IMA	M64	Read ECU Information	
TORNEO	/	IMA	M64	Read codes	
TORNEO	/	IMA	M64	Erase Codes	
TORNEO	/	IMA	M64	Read Freeze Frame Data	
TORNEO	/	IMA	M64	Read Live Data	
TORNEO	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
TORNEO	/	IMA	M64	Adjustment	SOC PRESET
TORNEO	/	IMA	M65	Read ECU Information	
TORNEO	/	IMA	M65	Read codes	
TORNEO	/	IMA	M65	Erase Codes	
TORNEO	/	IMA	M65	Read Freeze Frame Data	
TORNEO	/	IMA	M65	Read Live Data	
TORNEO	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
TORNEO	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
TORNEO	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
TORNEO	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
TORNEO	/	Intake Sounder Control System (ISC)	M6D	Read codes	
TORNEO	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
TORNEO	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
TORNEO	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
TORNEO	/	Night Vision System (INVS)	0XB1	Read ECU Information	
TORNEO	/	Night Vision System (INVS)	0XB1	Read codes	
TORNEO	/	Night Vision System (INVS)	0XB1	Erase Codes	
TORNEO	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
TORNEO	/	Night Vision System (INVS)	0XB1	Read Live Data	
TORNEO	/	Night Vision System (INVS)	0XB1	Adjustment	
TORNEO	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
TORNEO	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
TORNEO	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
TORNEO	/	i-SHIFT	0XB0	Read ECU Information	
TORNEO	/	i-SHIFT	0XB0	Read codes	
TORNEO	/	i-SHIFT	0XB0	Erase Codes	
TORNEO	/	i-SHIFT	0XB0	Read Live Data	
TORNEO	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
TORNEO	/	Keyless Entry Control System (KAS)	M99	Read codes	
TORNEO	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
TORNEO	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
TORNEO	/	Keyless Entry Control System (KAS)	M99	Self Check	
TORNEO	/	Keyless Entry Control System (KAS)	M99	History Data	
TORNEO	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOD Terminal) Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving

TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
TORNEO	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
TORNEO	/	Keyless Entry Control System (KAS)	M99	Registration	
TORNEO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
TORNEO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
TORNEO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
TORNEO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
TORNEO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
TORNEO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
TORNEO	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
TORNEO	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
TORNEO	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
TORNEO	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
TORNEO	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
TORNEO	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
TORNEO	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
TORNEO	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
TORNEO	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
TORNEO	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
TORNEO	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
TORNEO	/	Management ECU Module (ME)	M74	Read ECU Information	
TORNEO	/	Management ECU Module (ME)	M74	Read codes	
TORNEO	/	Management ECU Module (ME)	M74	Erase Codes	
TORNEO	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
TORNEO	/	Management ECU Module (ME)	M74	Read Live Data	
TORNEO	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read ECU Information	
TORNEO	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read codes	
TORNEO	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Erase Codes	
TORNEO	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read Live Data	
TORNEO	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
TORNEO	/	Multi-view camera system (MVCS)	M7A	Read codes	
TORNEO	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
TORNEO	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
TORNEO	/	Multi-view camera system (MVCS)	M7A	Customization	
TORNEO	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
TORNEO	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
TORNEO	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
TORNEO	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
TORNEO	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
TORNEO	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
TORNEO	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
TORNEO	/	Power Control Unit (PCU)	M83	Read ECU Information	
TORNEO	/	Power Control Unit (PCU)	M83	Read codes	
TORNEO	/	Power Control Unit (PCU)	M83	Erase Codes	
TORNEO	/	Power Control Unit (PCU)	M83	Read Live Data	
TORNEO	/	Power Control Unit (PCU)	M83	Self Check	
TORNEO	/	Power Control Unit (PCU)	M83	History Data	
TORNEO	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
TORNEO	/	Engine Control System (PGM-FI)	M23	Read codes	
TORNEO	/	Engine Control System (PGM-FI)	M23	Erase Codes	
TORNEO	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
TORNEO	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
TORNEO	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
TORNEO	/	Engine Control System (PGM-FI)	M23	Read Live Data	
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST

TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
TORNEO	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
TORNEO	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
TORNEO	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
TORNEO	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
TORNEO	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
TORNEO	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
TORNEO	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
TORNEO	/	Engine Control System (PGM-FI)	M50	Read codes	
TORNEO	/	Engine Control System (PGM-FI)	M50	Erase Codes	
TORNEO	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
TORNEO	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
TORNEO	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
TORNEO	/	Engine Control System (PGM-FI)	M50	Read Live Data	
TORNEO	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
TORNEO	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
TORNEO	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
TORNEO	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
TORNEO	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
TORNEO	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
TORNEO	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
TORNEO	/	Engine Control System (PGM-FI)	M86	Read codes	
TORNEO	/	Engine Control System (PGM-FI)	M86	Erase Codes	
TORNEO	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
TORNEO	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
TORNEO	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
TORNEO	/	Engine Control System (PGM-FI)	M86	Read Live Data	
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
TORNEO	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
TORNEO	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
TORNEO	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
TORNEO	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
TORNEO	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
TORNEO	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
TORNEO	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
TORNEO	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
TORNEO	/	PSR	M27	Read ECU Information	
TORNEO	/	PSR	M27	Read codes	
TORNEO	/	PSR	M27	Erase Codes	
TORNEO	/	PSR	M27	Read Live Data	
TORNEO	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
TORNEO	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
TORNEO	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
TORNEO	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
TORNEO	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
TORNEO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
TORNEO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
TORNEO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
TORNEO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
TORNEO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
TORNEO	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
TORNEO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
TORNEO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
TORNEO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
TORNEO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
TORNEO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
TORNEO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
TORNEO	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
TORNEO	/	Remote starter (RS)	M90	System Check	
TORNEO	/	Remote starter (RS)	M90	HISTORY	

TORNEO	/	Remote starter (RS)	M90	Registration	
TORNEO	/	Seat load cell (SWS)	M6F	Read ECU Information	
TORNEO	/	Seat load cell (SWS)	M6F	Read codes	
TORNEO	/	Seat load cell (SWS)	M6F	Erase Codes	
TORNEO	/	Seat load cell (SWS)	M6F	Read Live Data	
TORNEO	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
TORNEO	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
TORNEO	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
TORNEO	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
TORNEO	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
TORNEO	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
TORNEO	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
TORNEO	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
TORNEO	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
TORNEO	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
TORNEO	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
TORNEO	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
TORNEO	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
TORNEO	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
TORNEO	/	Groove track drive unit (SLOT ECU)	M98	History Data	
TORNEO	/	Groove track drive unit (SLOT ECU)	M98	System Information	
TORNEO	/	Airbag Control System (SRS)	M9F	Read ECU Information	
TORNEO	/	Airbag Control System (SRS)	M9F	Read codes	
TORNEO	/	Airbag Control System (SRS)	M9F	Erase Codes	
TORNEO	/	Airbag Control System (SRS)	M9F	Read Live Data	
TORNEO	/	Airbag Control System (SRS)	MA0	Read ECU Information	
TORNEO	/	Airbag Control System (SRS)	MA0	Read codes	
TORNEO	/	Airbag Control System (SRS)	MA0	Erase Codes	
TORNEO	/	Airbag Control System (SRS)	MA0	Read Live Data	
TORNEO	/	Airbag Control System (SRS)	MA1	Read ECU Information	
TORNEO	/	Airbag Control System (SRS)	MA1	Read codes	
TORNEO	/	Airbag Control System (SRS)	MA1	Erase Codes	
TORNEO	/	Airbag Control System (SRS)	MA1	Read Live Data	
TORNEO	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
TORNEO	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
TORNEO	/	Airbag Control System (SRS)	M2A	Read codes	
TORNEO	/	Airbag Control System (SRS)	M2A	Erase Codes	
TORNEO	/	Airbag Control System (SRS)	M2A	Read Live Data	
TORNEO	/	Airbag Control System (SRS)	M9C	Read ECU Information	
TORNEO	/	Airbag Control System (SRS)	M9C	Read codes	
TORNEO	/	Airbag Control System (SRS)	M9C	Erase Codes	
TORNEO	/	Airbag Control System (SRS)	M9C	Read Live Data	
TORNEO	/	Airbag Control System (SRS)	M9D	Read ECU Information	
TORNEO	/	Airbag Control System (SRS)	M9D	Read codes	
TORNEO	/	Airbag Control System (SRS)	M9D	Erase Codes	
TORNEO	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
TORNEO	/	Airbag Control System (SRS)	M9D	Read Live Data	
TORNEO	/	Airbag Control System (SRS)	M9D	Parameter Information	
TORNEO	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
TORNEO	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
TORNEO	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
TORNEO	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
TORNEO	/	Airbag Control System (SRS)	M9D	Function Test	
TORNEO	/	Airbag Control System (SRS)	M9D	System Information	
TORNEO	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
TORNEO	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
TORNEO	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
TORNEO	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
TORNEO	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
TORNEO	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
TORNEO	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
TORNEO	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
TORNEO	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
TORNEO	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	



TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
TORNEO	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
TORNEO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
TORNEO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
TORNEO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
TORNEO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
TORNEO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
TORNEO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
TORNEO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
TORNEO	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
UR-V	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
UR-V	/	Four-wheel steering control system (4WS)	M52	Read codes	
UR-V	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
UR-V	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
UR-V	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
UR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
UR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
UR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
UR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
UR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
UR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
UR-V	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
UR-V	/	Automatic shift control system (A/T)	M1E	Read codes	
UR-V	/	Automatic shift control system (A/T)	M1E	Erase Codes	
UR-V	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
UR-V	/	Automatic shift control system (A/T)	M1E	Read Live Data	
UR-V	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
UR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
UR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
UR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
UR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
UR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
UR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
UR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
UR-V	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
UR-V	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
UR-V	/	Automatic shift control system (A/T)	M3B	Read codes	
UR-V	/	Automatic shift control system (A/T)	M3B	Erase Codes	
UR-V	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
UR-V	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
UR-V	/	Automatic shift control system (A/T)	M3B	Read Live Data	
UR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
UR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
UR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
UR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
UR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid D
UR-V	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
UR-V	/	Automatic shift control system (A/T)	M3C	Read codes	
UR-V	/	Automatic shift control system (A/T)	M3C	Erase Codes	
UR-V	/	Automatic shift control system (A/T)	M81	Read ECU Information	
UR-V	/	Automatic shift control system (A/T)	M81	Read codes	
UR-V	/	Automatic shift control system (A/T)	M81	Erase Codes	
UR-V	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
UR-V	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
UR-V	/	Automatic shift control system (A/T)	M81	Read Live Data	
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
UR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
UR-V	/	Automatic shift control system (A/T)	M82	Read ECU Information	
UR-V	/	Automatic shift control system (A/T)	M82	Read codes	
UR-V	/	Automatic shift control system (A/T)	M82	Erase Codes	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.

UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INDICATOR LIGHT
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	INFORMATION DISPLAY
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	Function Test	ALARM BUZZER
UR-V	/	Active Engine Control Support System (ACM) M06	Read ECU Information	
UR-V	/	Active Engine Control Support System (ACM) M06	Read codes	
UR-V	/	Active Engine Control Support System (ACM) M06	Erase Codes	
UR-V	/	Active Engine Control Support System (ACM) M06	Read Freeze Frame Data	
UR-V	/	Active Engine Control Support System (ACM) M06	Read Live Data	
UR-V	/	Active Engine Control Support System (ACM) M06	ACM Reset	
UR-V	/	Active Engine Control Support System (ACM) M06	Inspection	Front ACM Solenoid ON/OFF
UR-V	/	Active Engine Control Support System (ACM) M06	Inspection	Rear ACM Solenoid ON/OFF
UR-V	/	Active Engine Control Support System (ACM) M06	Inspection	Front and Rear ACM Solenoids ON/OFF
UR-V	/	Active Engine Control Support System (ACM) M06	Inspection	ACM Test
UR-V	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read codes	
UR-V	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Erase Codes	
UR-V	/	Vehicle Acoustic Alarm Control System (AVAS) M10	Read Live Data	
UR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Read ECU Information	
UR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Read codes	
UR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Erase Codes	
UR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Read Freeze Frame Data	
UR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Read Live Data	
UR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Function Test	Damper Force Operation Test
UR-V	/	Active / Automatic Shock Absorber Control System (A MOD	Adjustment	Damper Stroke Calibration
UR-V	/	Active / Automatic Shock Absorber Control System (A M1A	Read codes	
UR-V	/	Active / Automatic Shock Absorber Control System (A M1A	Erase Codes	
UR-V	/	Active / Automatic Shock Absorber Control System (A M1A	Read Live Data	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read codes	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Erase Codes	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Freeze Frame Data	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Read Live Data	
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	ACC Brake (Brake Actuator)
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	CMBS Brake
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
UR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
UR-V	/	Transmission Control System (AT) M18	Read ECU Information	
UR-V	/	Transmission Control System (AT) M18	Read codes	
UR-V	/	Transmission Control System (AT) M18	Erase Codes	
UR-V	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
UR-V	/	Transmission Control System (AT) M18	Read Live Data	
UR-V	/	Transmission Control System (AT) M18	Adjustment	
UR-V	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
UR-V	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
UR-V	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
UR-V	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
UR-V	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
UR-V	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
UR-V	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
UR-V	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
UR-V	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
UR-V	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
UR-V	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
UR-V	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
UR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
UR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
UR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
UR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
UR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
UR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
UR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
UR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
UR-V	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor

UR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
UR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
UR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
UR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
UR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
UR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
UR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
UR-V	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
UR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
UR-V	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
UR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
UR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
UR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
UR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
UR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
UR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
UR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
UR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	

UR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
UR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
UR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
UR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
UR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
UR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
UR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
UR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
UR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
UR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
UR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
UR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
UR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Security	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
UR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
UR-V	/	BODY ELECTRICAL/Security	MFF	History Data	
UR-V	/	BODY ELECTRICAL/Security	MFF	History Clear	
UR-V	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
UR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
UR-V	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
UR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
UR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
UR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
UR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
UR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
UR-V	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
UR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
UR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
UR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
UR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
UR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
UR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
UR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
UR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
UR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
UR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
UR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid

UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
UR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
UR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
UR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
UR-V	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
UR-V	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
UR-V	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
UR-V	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
UR-V	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
UR-V	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
UR-V	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read ECU Information	
UR-V	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read codes	
UR-V	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Erase Codes	
UR-V	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Freeze Frame Data	
UR-V	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Live Data	
UR-V	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	CMBS (CMS) ACTIVATION HISTORY	
UR-V	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	RADAR AIMING
UR-V	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	CMBS Brake
UR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
UR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
UR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
UR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
UR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
UR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
UR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
UR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
UR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
UR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
UR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
UR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
UR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
UR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
UR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
UR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
UR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
UR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
UR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
UR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
UR-V	/	DBW	M34	Read ECU Information	
UR-V	/	DBW	M34	Read codes	
UR-V	/	DBW	M34	Erase Codes	
UR-V	/	DBW	M34	Read Freeze Frame Data	
UR-V	/	DBW	M34	Read Live Data	
UR-V	/	DBW	M34	Inspection	Idle Speed Adjust
UR-V	/	DBW	M34	Inspection	Throttle Test
UR-V	/	DBW	M34	ECM Reset	
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
UR-V	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
UR-V	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
UR-V	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
UR-V	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
UR-V	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
UR-V	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	

UR-V	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
UR-V	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
UR-V	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
UR-V	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
UR-V	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
UR-V	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
UR-V	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
UR-V	/	Capacitor Control System (EDLC)	M12	Read codes	
UR-V	/	Capacitor Control System (EDLC)	M12	Erase Codes	
UR-V	/	Capacitor Control System (EDLC)	M12	Read Live Data	
UR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
UR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
UR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
UR-V	/	Electronic Brake Control System (EPB)	M1F	Read codes	
UR-V	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
UR-V	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
UR-V	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
UR-V	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
UR-V	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
UR-V	/	Electronic Brake Control System (EPB)	M3E	Read codes	
UR-V	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
UR-V	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
UR-V	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
UR-V	/	Electric Powertrain / IMA	M66	Read ECU Information	
UR-V	/	Electric Powertrain / IMA	M66	Read codes	
UR-V	/	Electric Powertrain / IMA	M66	Erase Codes	
UR-V	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
UR-V	/	Electric Powertrain / IMA	M66	Read Live Data	
UR-V	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
UR-V	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
UR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
UR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
UR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
UR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
UR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
UR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
UR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
UR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
UR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
UR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
UR-V	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
UR-V	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
UR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
UR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
UR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
UR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
UR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
UR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
UR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
UR-V	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
UR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
UR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
UR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
UR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
UR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
UR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
UR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
UR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
UR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
UR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
UR-V	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
UR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
UR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
UR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
UR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
UR-V	/	New energy battery (EV)	M44	Read ECU Information	
UR-V	/	New energy battery (EV)	M44	Read codes	
UR-V	/	New energy battery (EV)	M44	Erase Codes	
UR-V	/	New energy battery (EV)	M44	Read Freeze Frame Data	
UR-V	/	New energy battery (EV)	M44	Read Live Data	
UR-V	/	New energy battery (EV)	M44	Inspection	
UR-V	/	New energy battery (EV)	M44	Adjustment	
UR-V	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
UR-V	/	Electronic vacuum pump (EVPS)	M21	Read codes	
UR-V	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
UR-V	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
UR-V	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
UR-V	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	

UR-V	/	Electronic vacuum pump (EVPS)	M22	Read codes	
UR-V	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
UR-V	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
UR-V	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
UR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
UR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
UR-V	/	FCW LDW	M4E	Read ECU Information	
UR-V	/	FCW LDW	M4E	Read codes	
UR-V	/	FCW LDW	M4E	Erase Codes	
UR-V	/	FCW LDW	M4E	Read Live Data	
UR-V	/	FCW LDW	M4E	Function Test	FCW Drive
UR-V	/	FCW LDW	M4E	Function Test	Left side lane departure warning
UR-V	/	FCW LDW	M4E	Function Test	Right side lane departure warning
UR-V	/	FCW LDW	M4E	Function Test	Indicator Drive
UR-V	/	FCW LDW	M4E	Adjustment	
UR-V	/	Instrument Display System (GAUGE)	M2C	Read codes	
UR-V	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
UR-V	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
UR-V	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
UR-V	/	Anti-lock brake control system (ABS)	M01	Read codes	
UR-V	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
UR-V	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
UR-V	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
UR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
UR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
UR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
UR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
UR-V	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
UR-V	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
UR-V	/	Anti-lock brake control system (ABS)	M02	Read codes	
UR-V	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
UR-V	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
UR-V	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
UR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
UR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
UR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
UR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
UR-V	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
UR-V	/	Anti-lock brake control system (ABS)	M03	Read codes	
UR-V	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
UR-V	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
UR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
UR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
UR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
UR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
UR-V	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
UR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
UR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
UR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
UR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
UR-V	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
UR-V	/	Anti-lock brake control system (ABS)	M19	Read codes	
UR-V	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
UR-V	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
UR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
UR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
UR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
UR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
UR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
UR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
UR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
UR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
UR-V	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
UR-V	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
UR-V	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
UR-V	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
UR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
UR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
UR-V	/	Intelligent Parking Control System (SPS)	M9B	Customize	
UR-V	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
UR-V	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
UR-V	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
UR-V	/	Hydraulic booster control system (HBS)	M5F	Read codes	
UR-V	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
UR-V	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
UR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
UR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
UR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test

UR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
UR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
UR-V	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
UR-V	/	IMA	M63	Read ECU Information	
UR-V	/	IMA	M63	Read codes	
UR-V	/	IMA	M63	Erase Codes	
UR-V	/	IMA	M63	Read Freeze Frame Data	
UR-V	/	IMA	M63	Read Live Data	
UR-V	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
UR-V	/	IMA	M63	Adjustment	SOC PRESET
UR-V	/	IMA	M64	Read ECU Information	
UR-V	/	IMA	M64	Read codes	
UR-V	/	IMA	M64	Erase Codes	
UR-V	/	IMA	M64	Read Freeze Frame Data	
UR-V	/	IMA	M64	Read Live Data	
UR-V	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
UR-V	/	IMA	M64	Adjustment	SOC PRESET
UR-V	/	IMA	M65	Read ECU Information	
UR-V	/	IMA	M65	Read codes	
UR-V	/	IMA	M65	Erase Codes	
UR-V	/	IMA	M65	Read Freeze Frame Data	
UR-V	/	IMA	M65	Read Live Data	
UR-V	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
UR-V	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
UR-V	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
UR-V	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
UR-V	/	Intake Sounder Control System (ISC)	M6D	Read codes	
UR-V	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
UR-V	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
UR-V	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
UR-V	/	Night Vision System (INVS)	0XB1	Read ECU Information	
UR-V	/	Night Vision System (INVS)	0XB1	Read codes	
UR-V	/	Night Vision System (INVS)	0XB1	Erase Codes	
UR-V	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
UR-V	/	Night Vision System (INVS)	0XB1	Read Live Data	
UR-V	/	Night Vision System (INVS)	0XB1	Adjustment	
UR-V	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
UR-V	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
UR-V	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
UR-V	/	i-SHIFT	0XB0	Read ECU Information	
UR-V	/	i-SHIFT	0XB0	Read codes	
UR-V	/	i-SHIFT	0XB0	Erase Codes	
UR-V	/	i-SHIFT	0XB0	Read Live Data	
UR-V	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
UR-V	/	Keyless Entry Control System (KAS)	M99	Read codes	
UR-V	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
UR-V	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
UR-V	/	Keyless Entry Control System (KAS)	M99	Self Check	
UR-V	/	Keyless Entry Control System (KAS)	M99	History Data	
UR-V	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCOD Terminal) Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)



UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
UR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
UR-V	/	Keyless Entry Control System (KAS)	M99	Registration	
UR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
UR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
UR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
UR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
UR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
UR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
UR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
UR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
UR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
UR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
UR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
UR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
UR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
UR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
UR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
UR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
UR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
UR-V	/	Management ECU Module (ME)	M74	Read ECU Information	
UR-V	/	Management ECU Module (ME)	M74	Read codes	
UR-V	/	Management ECU Module (ME)	M74	Erase Codes	
UR-V	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
UR-V	/	Management ECU Module (ME)	M74	Read Live Data	
UR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
UR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
UR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
UR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
UR-V	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
UR-V	/	Multi-view camera system (MVCS)	M7A	Read codes	
UR-V	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
UR-V	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
UR-V	/	Multi-view camera system (MVCS)	M7A	Customization	
UR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
UR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
UR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
UR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
UR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
UR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
UR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
UR-V	/	Power Control Unit (PCU)	M83	Read ECU Information	
UR-V	/	Power Control Unit (PCU)	M83	Read codes	
UR-V	/	Power Control Unit (PCU)	M83	Erase Codes	
UR-V	/	Power Control Unit (PCU)	M83	Read Live Data	
UR-V	/	Power Control Unit (PCU)	M83	Self Check	
UR-V	/	Power Control Unit (PCU)	M83	History Data	
UR-V	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
UR-V	/	Engine Control System (PGM-FI)	M23	Read codes	
UR-V	/	Engine Control System (PGM-FI)	M23	Erase Codes	
UR-V	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
UR-V	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
UR-V	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
UR-V	/	Engine Control System (PGM-FI)	M23	Read Live Data	
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
UR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
UR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
UR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
UR-V	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
UR-V	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
UR-V	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
UR-V	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
UR-V	/	Engine Control System (PGM-FI)	M50	Read codes	
UR-V	/	Engine Control System (PGM-FI)	M50	Erase Codes	
UR-V	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
UR-V	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
UR-V	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
UR-V	/	Engine Control System (PGM-FI)	M50	Read Live Data	
UR-V	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
UR-V	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
UR-V	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC Low V/T CHECK
UR-V	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST

UR-V	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
UR-V	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
UR-V	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
UR-V	/	Engine Control System (PGM-FI)	M86	Read codes	
UR-V	/	Engine Control System (PGM-FI)	M86	Erase Codes	
UR-V	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
UR-V	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
UR-V	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
UR-V	/	Engine Control System (PGM-FI)	M86	Read Live Data	
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
UR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
UR-V	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
UR-V	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
UR-V	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
UR-V	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
UR-V	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
UR-V	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
UR-V	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
UR-V	/	PSR	M27	Read ECU Information	
UR-V	/	PSR	M27	Read codes	
UR-V	/	PSR	M27	Erase Codes	
UR-V	/	PSR	M27	Read Live Data	
UR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
UR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
UR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
UR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
UR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
UR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
UR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
UR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
UR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
UR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
UR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
UR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
UR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
UR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
UR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
UR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
UR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
UR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
UR-V	/	Remote starter (RS)	M90	System Check	
UR-V	/	Remote starter (RS)	M90	HISTORY	
UR-V	/	Remote starter (RS)	M90	Registration	
UR-V	/	Seat load cell (SWS)	M6F	Read ECU Information	
UR-V	/	Seat load cell (SWS)	M6F	Read codes	
UR-V	/	Seat load cell (SWS)	M6F	Erase Codes	
UR-V	/	Seat load cell (SWS)	M6F	Read Live Data	
UR-V	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
UR-V	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
UR-V	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
UR-V	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
UR-V	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
UR-V	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
UR-V	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
UR-V	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	

UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
UR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
UR-V	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
UR-V	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
UR-V	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
UR-V	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
UR-V	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
UR-V	/	Groove track drive unit (SLOT ECU)	M98	History Data	
UR-V	/	Groove track drive unit (SLOT ECU)	M98	System Information	
UR-V	/	Airbag Control System (SRS)	M9F	Read ECU Information	
UR-V	/	Airbag Control System (SRS)	M9F	Read codes	
UR-V	/	Airbag Control System (SRS)	M9F	Erase Codes	
UR-V	/	Airbag Control System (SRS)	M9F	Read Live Data	
UR-V	/	Airbag Control System (SRS)	MA0	Read ECU Information	
UR-V	/	Airbag Control System (SRS)	MA0	Read codes	
UR-V	/	Airbag Control System (SRS)	MA0	Erase Codes	
UR-V	/	Airbag Control System (SRS)	MA0	Read Live Data	
UR-V	/	Airbag Control System (SRS)	MA1	Read ECU Information	
UR-V	/	Airbag Control System (SRS)	MA1	Read codes	
UR-V	/	Airbag Control System (SRS)	MA1	Erase Codes	
UR-V	/	Airbag Control System (SRS)	MA1	Read Live Data	
UR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
UR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
UR-V	/	Airbag Control System (SRS)	M2A	Read codes	
UR-V	/	Airbag Control System (SRS)	M2A	Erase Codes	
UR-V	/	Airbag Control System (SRS)	M2A	Read Live Data	
UR-V	/	Airbag Control System (SRS)	M9C	Read ECU Information	
UR-V	/	Airbag Control System (SRS)	M9C	Read codes	
UR-V	/	Airbag Control System (SRS)	M9C	Erase Codes	
UR-V	/	Airbag Control System (SRS)	M9C	Read Live Data	
UR-V	/	Airbag Control System (SRS)	M9D	Read ECU Information	
UR-V	/	Airbag Control System (SRS)	M9D	Read codes	
UR-V	/	Airbag Control System (SRS)	M9D	Erase Codes	
UR-V	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
UR-V	/	Airbag Control System (SRS)	M9D	Read Live Data	
UR-V	/	Airbag Control System (SRS)	M9D	Parameter Information	
UR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
UR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
UR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
UR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
UR-V	/	Airbag Control System (SRS)	M9D	Function Test	
UR-V	/	Airbag Control System (SRS)	M9D	System Information	
UR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
UR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
UR-V	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
UR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
UR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
UR-V	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
UR-V	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
UR-V	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
UR-V	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
UR-V	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
UR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
UR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
UR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
UR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
UR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
UR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
UR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
UR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
UR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
VAMOS	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
VAMOS	/	Four-wheel steering control system (4WS)	M52	Read codes	
VAMOS	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
VAMOS	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
VAMOS	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
VAMOS	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
VAMOS	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
VAMOS	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
VAMOS	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
VAMOS	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
VAMOS	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
VAMOS	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
VAMOS	/	Automatic shift control system (A/T)	M1E	Read codes	
VAMOS	/	Automatic shift control system (A/T)	M1E	Erase Codes	
VAMOS	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
VAMOS	/	Automatic shift control system (A/T)	M1E	Read Live Data	
VAMOS	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	

VAMOS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
VAMOS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
VAMOS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
VAMOS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
VAMOS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
VAMOS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
VAMOS	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
VAMOS	/	Automatic shift control system (A/T)	M3B	REPLACE PCM/TCM	
VAMOS	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
VAMOS	/	Automatic shift control system (A/T)	M3B	Read codes	
VAMOS	/	Automatic shift control system (A/T)	M3B	Erase Codes	
VAMOS	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
VAMOS	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
VAMOS	/	Automatic shift control system (A/T)	M3B	Read Live Data	
VAMOS	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
VAMOS	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
VAMOS	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
VAMOS	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
VAMOS	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
VAMOS	/	Automatic shift control system (A/T)	M3C	Read codes	
VAMOS	/	Automatic shift control system (A/T)	M3C	Erase Codes	
VAMOS	/	Automatic shift control system (A/T)	M81	Read ECU Information	
VAMOS	/	Automatic shift control system (A/T)	M81	Read codes	
VAMOS	/	Automatic shift control system (A/T)	M81	Erase Codes	
VAMOS	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
VAMOS	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
VAMOS	/	Automatic shift control system (A/T)	M81	Read Live Data	
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
VAMOS	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
VAMOS	/	Automatic shift control system (A/T)	M82	Read ECU Information	
VAMOS	/	Automatic shift control system (A/T)	M82	Read codes	
VAMOS	/	Automatic shift control system (A/T)	M82	Erase Codes	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
VAMOS	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
VAMOS	/	Active Engine Control Support System (ACM)	M06	Read codes	
VAMOS	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
VAMOS	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
VAMOS	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
VAMOS	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
VAMOS	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
VAMOS	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
VAMOS	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
VAMOS	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
VAMOS	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
VAMOS	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
VAMOS	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
VAMOS	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
VAMOS	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
VAMOS	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
VAMOS	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
VAMOS	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
VAMOS	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
VAMOS	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
VAMOS	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
VAMOS	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
VAMOS	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake

VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Brake Light (ACC Relay)
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Indicator Light
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Information Display
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
VAMOS	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
VAMOS	/	Transmission Control System (AT) M18	Read ECU Information	
VAMOS	/	Transmission Control System (AT) M18	Read codes	
VAMOS	/	Transmission Control System (AT) M18	Erase Codes	
VAMOS	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
VAMOS	/	Transmission Control System (AT) M18	Read Live Data	
VAMOS	/	Transmission Control System (AT) M18	Adjustment	
VAMOS	/	Active Torque Converter Control System (ATTS) MOE	Read ECU Information	
VAMOS	/	Active Torque Converter Control System (ATTS) MOE	Read codes	
VAMOS	/	Active Torque Converter Control System (ATTS) MOE	Erase Codes	
VAMOS	/	Active Torque Converter Control System (ATTS) MOE	Read Freeze Frame Data	
VAMOS	/	Active Torque Converter Control System (ATTS) MOE	Read Live Data	
VAMOS	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	ATTS TEST SHORT TIME MODE
VAMOS	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	STEERING ANGLE
VAMOS	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
VAMOS	/	Active Torque Converter Control System (ATTS) MOE	Miscellaneous Test	ALL SENSORS
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
VAMOS	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
VAMOS	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
VAMOS	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
VAMOS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
VAMOS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
VAMOS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
VAMOS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
VAMOS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
VAMOS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
VAMOS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
VAMOS	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
VAMOS	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
VAMOS	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
VAMOS	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
VAMOS	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
VAMOS	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
VAMOS	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
VAMOS	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
VAMOS	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
VAMOS	/	BODY ELECTRICAL/e-Call MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
VAMOS	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
VAMOS	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Function Test	Speedometer
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Function Test	Tachometer
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Activation Indicator
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Indicator
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Function Test	ABS INDICATOR
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Function Test	EBD Indicator(Electronic Brake Display)
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Function Test	Cruise Activation Indicator
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Function Test	MIL Status
VAMOS	/	BODY ELECTRICAL/Gauges MFF	Function Test	Daytime Running Lights Indicator(Canada)

VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
VAMOS	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
VAMOS	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
VAMOS	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
VAMOS	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
VAMOS	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
VAMOS	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
VAMOS	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
VAMOS	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
VAMOS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
VAMOS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
VAMOS	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
VAMOS	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
VAMOS	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
VAMOS	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
VAMOS	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
VAMOS	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
VAMOS	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
VAMOS	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down

VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
VAMOS	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
VAMOS	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Security	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
VAMOS	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
VAMOS	/	BODY ELECTRICAL/Security	MFF	History Data	
VAMOS	/	BODY ELECTRICAL/Security	MFF	History Clear	
VAMOS	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
VAMOS	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
VAMOS	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
VAMOS	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
VAMOS	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
VAMOS	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
VAMOS	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
VAMOS	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
VAMOS	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
VAMOS	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
VAMOS	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
VAMOS	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
VAMOS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
VAMOS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
VAMOS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
VAMOS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
VAMOS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
VAMOS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
VAMOS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
VAMOS	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
VAMOS	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
VAMOS	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
VAMOS	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
VAMOS	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
VAMOS	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
VAMOS	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
VAMOS	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
VAMOS	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
VAMOS	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
VAMOS	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
VAMOS	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
VAMOS	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
VAMOS	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
VAMOS	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
VAMOS	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
VAMOS	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
VAMOS	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
VAMOS	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
VAMOS	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
VAMOS	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
VAMOS	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
VAMOS	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
VAMOS	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
VAMOS	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
VAMOS	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
VAMOS	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
VAMOS	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
VAMOS	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	

VAMOS	/	Promise Automatic Transmission Control System (CVT M33)	Erase Codes	
VAMOS	/	Promise Automatic Transmission Control System (CVT M33)	Read Freeze Frame Data	
VAMOS	/	Promise Automatic Transmission Control System (CVT M33)	Read Live Data	
VAMOS	/	Promise Automatic Transmission Control System (CVT M33)	ECMPCM Reset	
VAMOS	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid
VAMOS	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)
VAMOS	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)
VAMOS	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information	
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes	
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes	
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data	
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data	
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	ECMPCM Reset	
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B
VAMOS	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P
VAMOS	/	DBW M34	Read ECU Information	
VAMOS	/	DBW M34	Read codes	
VAMOS	/	DBW M34	Erase Codes	
VAMOS	/	DBW M34	Read Freeze Frame Data	
VAMOS	/	DBW M34	Read Live Data	
VAMOS	/	DBW M34	Inspection	Idle Speed Adjust
VAMOS	/	DBW M34	Inspection	Throttle Test
VAMOS	/	DBW M34	ECM Reset	
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
VAMOS	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
VAMOS	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
VAMOS	/	Diesel Engine Control System (DIESEL) M37	Read codes	
VAMOS	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
VAMOS	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
VAMOS	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
VAMOS	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
VAMOS	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
VAMOS	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
VAMOS	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Read codes	
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
VAMOS	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
VAMOS	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
VAMOS	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
VAMOS	/	Capacitor Control System (EDLC) M12	Read codes	
VAMOS	/	Capacitor Control System (EDLC) M12	Erase Codes	
VAMOS	/	Capacitor Control System (EDLC) M12	Read Live Data	
VAMOS	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge and Charge Test
VAMOS	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge for Removal or Disposal
VAMOS	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Usage History Clear
VAMOS	/	Electronic Brake Control System (EPB) M1F	Read codes	
VAMOS	/	Electronic Brake Control System (EPB) M1F	Erase Codes	
VAMOS	/	Electronic Brake Control System (EPB) M1F	Read Live Data	
VAMOS	/	Electronic Brake Control System (EPB) M1F	Adjustment	Sensor Calibration



VAMOS	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
VAMOS	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
VAMOS	/	Electronic Brake Control System (EPB)	M3E	Read codes	
VAMOS	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
VAMOS	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
VAMOS	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
VAMOS	/	Electric Powertrain / IMA	M66	Read ECU Information	
VAMOS	/	Electric Powertrain / IMA	M66	Read codes	
VAMOS	/	Electric Powertrain / IMA	M66	Erase Codes	
VAMOS	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
VAMOS	/	Electric Powertrain / IMA	M66	Read Live Data	
VAMOS	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
VAMOS	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
VAMOS	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
VAMOS	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
VAMOS	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
VAMOS	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
VAMOS	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
VAMOS	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
VAMOS	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
VAMOS	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
VAMOS	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
VAMOS	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
VAMOS	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
VAMOS	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
VAMOS	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
VAMOS	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
VAMOS	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
VAMOS	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
VAMOS	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
VAMOS	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
VAMOS	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
VAMOS	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
VAMOS	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
VAMOS	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
VAMOS	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
VAMOS	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
VAMOS	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
VAMOS	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
VAMOS	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
VAMOS	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
VAMOS	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
VAMOS	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
VAMOS	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
VAMOS	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
VAMOS	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
VAMOS	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
VAMOS	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
VAMOS	/	New energy battery (EV)	M44	Read ECU Information	
VAMOS	/	New energy battery (EV)	M44	Read codes	
VAMOS	/	New energy battery (EV)	M44	Erase Codes	
VAMOS	/	New energy battery (EV)	M44	Read Freeze Frame Data	
VAMOS	/	New energy battery (EV)	M44	Read Live Data	
VAMOS	/	New energy battery (EV)	M44	Inspection	
VAMOS	/	New energy battery (EV)	M44	Adjustment	
VAMOS	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
VAMOS	/	Electronic vacuum pump (EVPS)	M21	Read codes	
VAMOS	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
VAMOS	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
VAMOS	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
VAMOS	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
VAMOS	/	Electronic vacuum pump (EVPS)	M22	Read codes	
VAMOS	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
VAMOS	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
VAMOS	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
VAMOS	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
VAMOS	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
VAMOS	/	FCW LDW	M4E	Read ECU Information	
VAMOS	/	FCW LDW	M4E	Read codes	
VAMOS	/	FCW LDW	M4E	Erase Codes	
VAMOS	/	FCW LDW	M4E	Read Live Data	
VAMOS	/	FCW LDW	M4E	Function Test	FCW Drive
VAMOS	/	FCW LDW	M4E	Function Test	Left side lane departure warning
VAMOS	/	FCW LDW	M4E	Function Test	Right side lane departure warning
VAMOS	/	FCW LDW	M4E	Function Test	Indicator Drive
VAMOS	/	FCW LDW	M4E	Adjustment	
VAMOS	/	Instrument Display System (GAUGE)	M2C	Read codes	
VAMOS	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
VAMOS	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
VAMOS	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
VAMOS	/	Anti-lock brake control system (ABS)	M01	Read codes	
VAMOS	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
VAMOS	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
VAMOS	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
VAMOS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
VAMOS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
VAMOS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
VAMOS	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
VAMOS	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS

VAMOS	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
VAMOS	/	Anti-lock brake control system (ABS)	M02	Read codes	
VAMOS	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
VAMOS	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
VAMOS	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
VAMOS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
VAMOS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
VAMOS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
VAMOS	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
VAMOS	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
VAMOS	/	Anti-lock brake control system (ABS)	M03	Read codes	
VAMOS	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
VAMOS	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
VAMOS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
VAMOS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
VAMOS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
VAMOS	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
VAMOS	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
VAMOS	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
VAMOS	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
VAMOS	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
VAMOS	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
VAMOS	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
VAMOS	/	Anti-lock brake control system (ABS)	M19	Read codes	
VAMOS	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
VAMOS	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
VAMOS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
VAMOS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
VAMOS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
VAMOS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
VAMOS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
VAMOS	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
VAMOS	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
VAMOS	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
VAMOS	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
VAMOS	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
VAMOS	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
VAMOS	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
VAMOS	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
VAMOS	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
VAMOS	/	Intelligent Parking Control System (SPS)	M9B	Customize	
VAMOS	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
VAMOS	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
VAMOS	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
VAMOS	/	Hydraulic booster control system (HBS)	M5F	Read codes	
VAMOS	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
VAMOS	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
VAMOS	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
VAMOS	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
VAMOS	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
VAMOS	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
VAMOS	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
VAMOS	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
VAMOS	/	IMA	M63	Read ECU Information	
VAMOS	/	IMA	M63	Read codes	
VAMOS	/	IMA	M63	Erase Codes	
VAMOS	/	IMA	M63	Read Freeze Frame Data	
VAMOS	/	IMA	M63	Read Live Data	
VAMOS	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
VAMOS	/	IMA	M63	Adjustment	SOC PRESET
VAMOS	/	IMA	M64	Read ECU Information	
VAMOS	/	IMA	M64	Read codes	
VAMOS	/	IMA	M64	Erase Codes	
VAMOS	/	IMA	M64	Read Freeze Frame Data	
VAMOS	/	IMA	M64	Read Live Data	
VAMOS	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
VAMOS	/	IMA	M64	Adjustment	SOC PRESET
VAMOS	/	IMA	M65	Read ECU Information	
VAMOS	/	IMA	M65	Read codes	
VAMOS	/	IMA	M65	Erase Codes	
VAMOS	/	IMA	M65	Read Freeze Frame Data	
VAMOS	/	IMA	M65	Read Live Data	
VAMOS	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
VAMOS	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
VAMOS	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
VAMOS	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
VAMOS	/	Intake Sounder Control System (ISC)	M6D	Read codes	
VAMOS	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
VAMOS	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
VAMOS	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
VAMOS	/	Night Vision System (INVS)	0XB1	Read ECU Information	
VAMOS	/	Night Vision System (INVS)	0XB1	Read codes	

VAMOS	/	Night Vision System (INVS)	0XB1	Erase Codes	
VAMOS	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
VAMOS	/	Night Vision System (INVS)	0XB1	Read Live Data	
VAMOS	/	Night Vision System (INVS)	0XB1	Adjustment	
VAMOS	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
VAMOS	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
VAMOS	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
VAMOS	/	i-SHIFT	0XB0	Read ECU Information	
VAMOS	/	i-SHIFT	0XB0	Read codes	
VAMOS	/	i-SHIFT	0XB0	Erase Codes	
VAMOS	/	i-SHIFT	0XB0	Read Live Data	
VAMOS	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
VAMOS	/	Keyless Entry Control System (KAS)	M99	Read codes	
VAMOS	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
VAMOS	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
VAMOS	/	Keyless Entry Control System (KAS)	M99	Self Check	
VAMOS	/	Keyless Entry Control System (KAS)	M99	History Data	
VAMOS	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCNT Terminal) Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
VAMOS	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
VAMOS	/	Keyless Entry Control System (KAS)	M99	Registration	
VAMOS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
VAMOS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
VAMOS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
VAMOS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
VAMOS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
VAMOS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
VAMOS	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
VAMOS	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
VAMOS	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
VAMOS	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
VAMOS	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
VAMOS	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
VAMOS	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
VAMOS	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
VAMOS	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
VAMOS	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
VAMOS	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
VAMOS	/	Management ECU Module (ME)	M74	Read ECU Information	
VAMOS	/	Management ECU Module (ME)	M74	Read codes	
VAMOS	/	Management ECU Module (ME)	M74	Erase Codes	
VAMOS	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
VAMOS	/	Management ECU Module (ME)	M74	Read Live Data	
VAMOS	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
VAMOS	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	

VAMOS	/	Multi-view camera and parking assist system (MVC/P, M26	Erase Codes	
VAMOS	/	Multi-view camera and parking assist system (MVC/P, M26	Read Live Data	
VAMOS	/	Multi-view camera system (MVCS)	Read ECU Information	
VAMOS	/	Multi-view camera system (MVCS)	Read codes	
VAMOS	/	Multi-view camera system (MVCS)	Erase Codes	
VAMOS	/	Multi-view camera system (MVCS)	Read Live Data	
VAMOS	/	Multi-view camera system (MVCS)	Customization	
VAMOS	/	Multi-view camera system (MVCS)	Function Test	Monitor Out
VAMOS	/	Multi-view camera system (MVCS)	Function Test	LED Light
VAMOS	/	Multi-view camera system (MVCS)	Function Test	Front Camera Image
VAMOS	/	Multi-view camera system (MVCS)	Function Test	Left Side Camera Image
VAMOS	/	Multi-view camera system (MVCS)	Function Test	Right Side Camera Image
VAMOS	/	Multi-view camera system (MVCS)	Function Test	Rear Camera Image
VAMOS	/	Multi-view camera system (MVCS)	Function Test	MVC Function
VAMOS	/	Power Control Unit (PCU)	Read ECU Information	
VAMOS	/	Power Control Unit (PCU)	Read codes	
VAMOS	/	Power Control Unit (PCU)	Erase Codes	
VAMOS	/	Power Control Unit (PCU)	Read Live Data	
VAMOS	/	Power Control Unit (PCU)	Self Check	
VAMOS	/	Power Control Unit (PCU)	History Data	
VAMOS	/	Engine Control System (PGM-FI)	Read ECU Information	
VAMOS	/	Engine Control System (PGM-FI)	Read codes	
VAMOS	/	Engine Control System (PGM-FI)	Erase Codes	
VAMOS	/	Engine Control System (PGM-FI)	Readiness Codes	
VAMOS	/	Engine Control System (PGM-FI)	Read Freeze Frame Data	
VAMOS	/	Engine Control System (PGM-FI)	ECM/PCM Reset	
VAMOS	/	Engine Control System (PGM-FI)	Read Live Data	
VAMOS	/	Engine Control System (PGM-FI)	Inspection	EVAP Test
VAMOS	/	Engine Control System (PGM-FI)	Inspection	IMT (IMRC) TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	EGR TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	IACV TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	VTC TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	VTEC TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	ETCS (TAC) TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	RADIATOR FAN
VAMOS	/	Engine Control System (PGM-FI)	Inspection	A/C CLUTCH
VAMOS	/	Engine Control System (PGM-FI)	Inspection	FUEL PUMP ON
VAMOS	/	Engine Control System (PGM-FI)	Inspection	FUEL PUMP OFF
VAMOS	/	Engine Control System (PGM-FI)	Inspection	ALL INJECTORS STOP
VAMOS	/	Engine Control System (PGM-FI)	Inspection	ONE INJECTOR STOP
VAMOS	/	Engine Control System (PGM-FI)	Inspection	CRUISE CONTROL CANCEL HISTORY
VAMOS	/	Engine Control System (PGM-FI)	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	IDLE STOP STARTER COUNTER CHECK
VAMOS	/	Engine Control System (PGM-FI)	Adjustment	CRANK (CKP) PATTERN
VAMOS	/	Engine Control System (PGM-FI)	Adjustment	Main Fuel Tank Alcohol Content Write Data
VAMOS	/	Engine Control System (PGM-FI)	TP POSITION CHECK	
VAMOS	/	Engine Control System (PGM-FI)	VIN CHECK	
VAMOS	/	Engine Control System (PGM-FI)	Replace ECM/PCM	
VAMOS	/	Engine Control System (PGM-FI)	Read ECU Information	
VAMOS	/	Engine Control System (PGM-FI)	Read codes	
VAMOS	/	Engine Control System (PGM-FI)	Erase Codes	
VAMOS	/	Engine Control System (PGM-FI)	Readiness Codes	
VAMOS	/	Engine Control System (PGM-FI)	Read Freeze Frame Data	
VAMOS	/	Engine Control System (PGM-FI)	ECM/PCM Reset	
VAMOS	/	Engine Control System (PGM-FI)	Read Live Data	
VAMOS	/	Engine Control System (PGM-FI)	Inspection	IDLE ADJUST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	EVAP Test
VAMOS	/	Engine Control System (PGM-FI)	Inspection	VTEC LOW V/T CHECK
VAMOS	/	Engine Control System (PGM-FI)	Inspection	O2S TEST
VAMOS	/	Engine Control System (PGM-FI)	VIN CHECK	
VAMOS	/	Engine Control System (PGM-FI)	Replace ECM/PCM	
VAMOS	/	Engine Control System (PGM-FI)	Read ECU Information	
VAMOS	/	Engine Control System (PGM-FI)	Read codes	
VAMOS	/	Engine Control System (PGM-FI)	Erase Codes	
VAMOS	/	Engine Control System (PGM-FI)	Readiness Codes	
VAMOS	/	Engine Control System (PGM-FI)	Read Freeze Frame Data	
VAMOS	/	Engine Control System (PGM-FI)	ECM/PCM Reset	
VAMOS	/	Engine Control System (PGM-FI)	Read Live Data	
VAMOS	/	Engine Control System (PGM-FI)	Inspection	IDLE ADJUST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	EVAP Test
VAMOS	/	Engine Control System (PGM-FI)	Inspection	VTC TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	IMT (IMRC) TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	EGR TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	VTEC TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	IACV TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	O2S TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
VAMOS	/	Engine Control System (PGM-FI)	Inspection	RADIATOR FAN
VAMOS	/	Engine Control System (PGM-FI)	Inspection	A/C CLUTCH
VAMOS	/	Engine Control System (PGM-FI)	Inspection	FUEL PUMP ON
VAMOS	/	Engine Control System (PGM-FI)	Inspection	FUEL PUMP OFF
VAMOS	/	Engine Control System (PGM-FI)	Inspection	ALL INJECTORS STOP
VAMOS	/	Engine Control System (PGM-FI)	Inspection	ONE INJECTOR STOP
VAMOS	/	Engine Control System (PGM-FI)	Inspection	CRUISE CONTROL CANCEL HISTORY
VAMOS	/	Engine Control System (PGM-FI)	Inspection	ACM
VAMOS	/	Engine Control System (PGM-FI)	Inspection	WGS TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	ABV TEST
VAMOS	/	Engine Control System (PGM-FI)	Inspection	FUEL PRESSURE TEST
VAMOS	/	Engine Control System (PGM-FI)	CRANK (CKP) PATTERN CLEAR	
VAMOS	/	Engine Control System (PGM-FI)	Adjustment	CRANK (CKP) PATTERN

VAMOS	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
VAMOS	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
VAMOS	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
VAMOS	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
VAMOS	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
VAMOS	/	PSR	M27	Read ECU Information	
VAMOS	/	PSR	M27	Read codes	
VAMOS	/	PSR	M27	Erase Codes	
VAMOS	/	PSR	M27	Read Live Data	
VAMOS	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
VAMOS	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
VAMOS	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
VAMOS	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
VAMOS	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
VAMOS	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
VAMOS	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
VAMOS	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
VAMOS	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
VAMOS	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
VAMOS	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
VAMOS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
VAMOS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
VAMOS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
VAMOS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
VAMOS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
VAMOS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
VAMOS	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
VAMOS	/	Remote starter (RS)	M90	System Check	
VAMOS	/	Remote starter (RS)	M90	HISTORY	
VAMOS	/	Remote starter (RS)	M90	Registration	
VAMOS	/	Seat load cell (SWS)	M6F	Read ECU Information	
VAMOS	/	Seat load cell (SWS)	M6F	Read codes	
VAMOS	/	Seat load cell (SWS)	M6F	Erase Codes	
VAMOS	/	Seat load cell (SWS)	M6F	Read Live Data	
VAMOS	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
VAMOS	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
VAMOS	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
VAMOS	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
VAMOS	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
VAMOS	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
VAMOS	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
VAMOS	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
VAMOS	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
VAMOS	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
VAMOS	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
VAMOS	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
VAMOS	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
VAMOS	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
VAMOS	/	Groove track drive unit (SLOT ECU)	M98	History Data	
VAMOS	/	Groove track drive unit (SLOT ECU)	M98	System Information	
VAMOS	/	Airbag Control System (SRS)	M9F	Read ECU Information	
VAMOS	/	Airbag Control System (SRS)	M9F	Read codes	
VAMOS	/	Airbag Control System (SRS)	M9F	Erase Codes	
VAMOS	/	Airbag Control System (SRS)	M9F	Read Live Data	
VAMOS	/	Airbag Control System (SRS)	MA0	Read ECU Information	
VAMOS	/	Airbag Control System (SRS)	MA0	Read codes	
VAMOS	/	Airbag Control System (SRS)	MA0	Erase Codes	
VAMOS	/	Airbag Control System (SRS)	MA0	Read Live Data	
VAMOS	/	Airbag Control System (SRS)	MA1	Read ECU Information	
VAMOS	/	Airbag Control System (SRS)	MA1	Read codes	
VAMOS	/	Airbag Control System (SRS)	MA1	Erase Codes	
VAMOS	/	Airbag Control System (SRS)	MA1	Read Live Data	
VAMOS	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
VAMOS	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
VAMOS	/	Airbag Control System (SRS)	M2A	Read codes	
VAMOS	/	Airbag Control System (SRS)	M2A	Erase Codes	
VAMOS	/	Airbag Control System (SRS)	M2A	Read Live Data	
VAMOS	/	Airbag Control System (SRS)	M9C	Read ECU Information	
VAMOS	/	Airbag Control System (SRS)	M9C	Read codes	
VAMOS	/	Airbag Control System (SRS)	M9C	Erase Codes	

VAMOS	/	Airbag Control System (SRS)	M9C	Read Live Data	
VAMOS	/	Airbag Control System (SRS)	M9D	Read ECU Information	
VAMOS	/	Airbag Control System (SRS)	M9D	Read codes	
VAMOS	/	Airbag Control System (SRS)	M9D	Erase Codes	
VAMOS	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
VAMOS	/	Airbag Control System (SRS)	M9D	Read Live Data	
VAMOS	/	Airbag Control System (SRS)	M9D	Parameter Information	
VAMOS	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
VAMOS	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
VAMOS	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
VAMOS	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
VAMOS	/	Airbag Control System (SRS)	M9D	Function Test	
VAMOS	/	Airbag Control System (SRS)	M9D	System Information	
VAMOS	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
VAMOS	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
VAMOS	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
VAMOS	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
VAMOS	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
VAMOS	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
VAMOS	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
VAMOS	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
VAMOS	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
VAMOS	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
VAMOS	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
VAMOS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
VAMOS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
VAMOS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
VAMOS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
VAMOS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
VAMOS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
VAMOS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
VAMOS	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
VEZEL	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
VEZEL	/	Four-wheel steering control system (4WS)	M52	Read codes	
VEZEL	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
VEZEL	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
VEZEL	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
VEZEL	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
VEZEL	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
VEZEL	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
VEZEL	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
VEZEL	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
VEZEL	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
VEZEL	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
VEZEL	/	Automatic shift control system (A/T)	M1E	Read codes	
VEZEL	/	Automatic shift control system (A/T)	M1E	Erase Codes	
VEZEL	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
VEZEL	/	Automatic shift control system (A/T)	M1E	Read Live Data	
VEZEL	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
VEZEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
VEZEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
VEZEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
VEZEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
VEZEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
VEZEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
VEZEL	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
VEZEL	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
VEZEL	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
VEZEL	/	Automatic shift control system (A/T)	M3B	Read codes	
VEZEL	/	Automatic shift control system (A/T)	M3B	Erase Codes	
VEZEL	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
VEZEL	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
VEZEL	/	Automatic shift control system (A/T)	M3B	Read Live Data	
VEZEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
VEZEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
VEZEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
VEZEL	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
VEZEL	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
VEZEL	/	Automatic shift control system (A/T)	M3C	Read codes	
VEZEL	/	Automatic shift control system (A/T)	M3C	Erase Codes	
VEZEL	/	Automatic shift control system (A/T)	M81	Read ECU Information	
VEZEL	/	Automatic shift control system (A/T)	M81	Read codes	
VEZEL	/	Automatic shift control system (A/T)	M81	Erase Codes	
VEZEL	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
VEZEL	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
VEZEL	/	Automatic shift control system (A/T)	M81	Read Live Data	
VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D

VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
VEZEL	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
VEZEL	/	Automatic shift control system (A/T)	M82	Read ECU Information	
VEZEL	/	Automatic shift control system (A/T)	M82	Read codes	
VEZEL	/	Automatic shift control system (A/T)	M82	Erase Codes	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
VEZEL	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
VEZEL	/	Active Engine Control Support System (ACM)	M06	Read codes	
VEZEL	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
VEZEL	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
VEZEL	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
VEZEL	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
VEZEL	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
VEZEL	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
VEZEL	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
VEZEL	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
VEZEL	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
VEZEL	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
VEZEL	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
VEZEL	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read ECU Information	
VEZEL	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read codes	
VEZEL	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Erase Codes	
VEZEL	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Freeze Frame Data	
VEZEL	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Read Live Data	
VEZEL	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Function Test	Damper Force Operation Test
VEZEL	/	Active / Automatic Shock Absorber Control System (A MOD)	M0D	Adjustment	Damper Stroke Calibration
VEZEL	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read codes	
VEZEL	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Erase Codes	
VEZEL	/	Active / Automatic Shock Absorber Control System (A M1A)	M1A	Read Live Data	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read codes	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Erase Codes	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Freeze Frame Data	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Read Live Data	
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	ACC Brake (Brake Actuator)
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	CMBS Brake
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Brake Light (ACC Relay)
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Indicator Light
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Information Display
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Function Test	Alarm Test
VEZEL	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)	M2B	Adjustment	Radar aiming
VEZEL	/	Transmission Control System (AT)	M18	Read ECU Information	
VEZEL	/	Transmission Control System (AT)	M18	Read codes	
VEZEL	/	Transmission Control System (AT)	M18	Erase Codes	
VEZEL	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
VEZEL	/	Transmission Control System (AT)	M18	Read Live Data	
VEZEL	/	Transmission Control System (AT)	M18	Adjustment	
VEZEL	/	Active Torque Converter Control System (ATTTS)	M0E	Read ECU Information	
VEZEL	/	Active Torque Converter Control System (ATTTS)	M0E	Read codes	
VEZEL	/	Active Torque Converter Control System (ATTTS)	M0E	Erase Codes	
VEZEL	/	Active Torque Converter Control System (ATTTS)	M0E	Read Freeze Frame Data	
VEZEL	/	Active Torque Converter Control System (ATTTS)	M0E	Read Live Data	
VEZEL	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
VEZEL	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	STEERING ANGLE
VEZEL	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
VEZEL	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ALL SENSORS
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF

VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
VEZEL	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
VEZEL	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
VEZEL	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
VEZEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
VEZEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
VEZEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
VEZEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
VEZEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
VEZEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
VEZEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
VEZEL	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
VEZEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
VEZEL	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
VEZEL	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
VEZEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
VEZEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
VEZEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
VEZEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
VEZEL	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
VEZEL	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
VEZEL	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
VEZEL	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
VEZEL	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
VEZEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
VEZEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	



VEZEL	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
VEZEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
VEZEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
VEZEL	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
VEZEL	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
VEZEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
VEZEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
VEZEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
VEZEL	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
VEZEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
VEZEL	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
VEZEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
VEZEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
VEZEL	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
VEZEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
VEZEL	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
VEZEL	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
VEZEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Security	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
VEZEL	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
VEZEL	/	BODY ELECTRICAL/Security	MFF	History Data	
VEZEL	/	BODY ELECTRICAL/Security	MFF	History Clear	
VEZEL	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
VEZEL	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
VEZEL	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
VEZEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
VEZEL	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
VEZEL	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	

VEZEL	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
VEZEL	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
VEZEL	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
VEZEL	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
VEZEL	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
VEZEL	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
VEZEL	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
VEZEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
VEZEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
VEZEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
VEZEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
VEZEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
VEZEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
VEZEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
VEZEL	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
VEZEL	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
VEZEL	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
VEZEL	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
VEZEL	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
VEZEL	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
VEZEL	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
VEZEL	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
VEZEL	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
VEZEL	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
VEZEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
VEZEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
VEZEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
VEZEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
VEZEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
VEZEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
VEZEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
VEZEL	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
VEZEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
VEZEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
VEZEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
VEZEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
VEZEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
VEZEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
VEZEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
VEZEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
VEZEL	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
VEZEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
VEZEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
VEZEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
VEZEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
VEZEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
VEZEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
VEZEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
VEZEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
VEZEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
VEZEL	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
VEZEL	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
VEZEL	/	DBW	M34	Read ECU Information	
VEZEL	/	DBW	M34	Read codes	
VEZEL	/	DBW	M34	Erase Codes	
VEZEL	/	DBW	M34	Read Freeze Frame Data	
VEZEL	/	DBW	M34	Read Live Data	
VEZEL	/	DBW	M34	Inspection	Idle Speed Adjust
VEZEL	/	DBW	M34	Inspection	Throttle Test
VEZEL	/	DBW	M34	ECM Reset	
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	

VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
VEZEL	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
VEZEL	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
VEZEL	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
VEZEL	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
VEZEL	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
VEZEL	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
VEZEL	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
VEZEL	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
VEZEL	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
VEZEL	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
VEZEL	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
VEZEL	/	Capacitor Control System (EDLC)	M12	Read codes	
VEZEL	/	Capacitor Control System (EDLC)	M12	Erase Codes	
VEZEL	/	Capacitor Control System (EDLC)	M12	Read Live Data	
VEZEL	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
VEZEL	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
VEZEL	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
VEZEL	/	Electronic Brake Control System (EPB)	M1F	Read codes	
VEZEL	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
VEZEL	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
VEZEL	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
VEZEL	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
VEZEL	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
VEZEL	/	Electronic Brake Control System (EPB)	M3E	Read codes	
VEZEL	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
VEZEL	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
VEZEL	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
VEZEL	/	Electric Powertrain / IMA	M66	Read ECU Information	
VEZEL	/	Electric Powertrain / IMA	M66	Read codes	
VEZEL	/	Electric Powertrain / IMA	M66	Erase Codes	
VEZEL	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
VEZEL	/	Electric Powertrain / IMA	M66	Read Live Data	
VEZEL	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
VEZEL	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
VEZEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
VEZEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
VEZEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
VEZEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
VEZEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
VEZEL	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
VEZEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
VEZEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
VEZEL	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
VEZEL	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
VEZEL	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
VEZEL	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
VEZEL	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
VEZEL	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
VEZEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
VEZEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
VEZEL	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
VEZEL	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
VEZEL	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	

VEZEL	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
VEZEL	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
VEZEL	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
VEZEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
VEZEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
VEZEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
VEZEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
VEZEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
VEZEL	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
VEZEL	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
VEZEL	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
VEZEL	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
VEZEL	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
VEZEL	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
VEZEL	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
VEZEL	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
VEZEL	/	New energy battery (EV)	M44	Read ECU Information	
VEZEL	/	New energy battery (EV)	M44	Read codes	
VEZEL	/	New energy battery (EV)	M44	Erase Codes	
VEZEL	/	New energy battery (EV)	M44	Read Freeze Frame Data	
VEZEL	/	New energy battery (EV)	M44	Read Live Data	
VEZEL	/	New energy battery (EV)	M44	Inspection	
VEZEL	/	New energy battery (EV)	M44	Adjustment	
VEZEL	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
VEZEL	/	Electronic vacuum pump (EVPS)	M21	Read codes	
VEZEL	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
VEZEL	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
VEZEL	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
VEZEL	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
VEZEL	/	Electronic vacuum pump (EVPS)	M22	Read codes	
VEZEL	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
VEZEL	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
VEZEL	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
VEZEL	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
VEZEL	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
VEZEL	/	FCW LDW	M4E	Read ECU Information	
VEZEL	/	FCW LDW	M4E	Read codes	
VEZEL	/	FCW LDW	M4E	Erase Codes	
VEZEL	/	FCW LDW	M4E	Read Live Data	
VEZEL	/	FCW LDW	M4E	Function Test	FCW Drive
VEZEL	/	FCW LDW	M4E	Function Test	Left side lane departure warning
VEZEL	/	FCW LDW	M4E	Function Test	Right side lane departure warning
VEZEL	/	FCW LDW	M4E	Function Test	Indicator Drive
VEZEL	/	FCW LDW	M4E	Adjustment	
VEZEL	/	Instrument Display System (GAUGE)	M2C	Read codes	
VEZEL	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
VEZEL	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
VEZEL	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
VEZEL	/	Anti-lock brake control system (ABS)	M01	Read codes	
VEZEL	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
VEZEL	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
VEZEL	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
VEZEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
VEZEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
VEZEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
VEZEL	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
VEZEL	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
VEZEL	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
VEZEL	/	Anti-lock brake control system (ABS)	M02	Read codes	
VEZEL	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
VEZEL	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
VEZEL	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
VEZEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
VEZEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
VEZEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
VEZEL	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
VEZEL	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
VEZEL	/	Anti-lock brake control system (ABS)	M03	Read codes	
VEZEL	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
VEZEL	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
VEZEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
VEZEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
VEZEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
VEZEL	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
VEZEL	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
VEZEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
VEZEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
VEZEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
VEZEL	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
VEZEL	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
VEZEL	/	Anti-lock brake control system (ABS)	M19	Read codes	

VEZEL	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
VEZEL	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
VEZEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
VEZEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
VEZEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
VEZEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
VEZEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
VEZEL	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
VEZEL	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
VEZEL	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
VEZEL	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
VEZEL	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
VEZEL	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
VEZEL	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
VEZEL	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
VEZEL	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
VEZEL	/	Intelligent Parking Control System (SPS)	M9B	Customize	
VEZEL	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
VEZEL	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
VEZEL	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
VEZEL	/	Hydraulic booster control system (HBS)	M5F	Read codes	
VEZEL	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
VEZEL	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
VEZEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
VEZEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
VEZEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
VEZEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
VEZEL	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
VEZEL	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
VEZEL	/	IMA	M63	Read ECU Information	
VEZEL	/	IMA	M63	Read codes	
VEZEL	/	IMA	M63	Erase Codes	
VEZEL	/	IMA	M63	Read Freeze Frame Data	
VEZEL	/	IMA	M63	Read Live Data	
VEZEL	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
VEZEL	/	IMA	M63	Adjustment	SOC PRESET
VEZEL	/	IMA	M64	Read ECU Information	
VEZEL	/	IMA	M64	Read codes	
VEZEL	/	IMA	M64	Erase Codes	
VEZEL	/	IMA	M64	Read Freeze Frame Data	
VEZEL	/	IMA	M64	Read Live Data	
VEZEL	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
VEZEL	/	IMA	M64	Adjustment	SOC PRESET
VEZEL	/	IMA	M65	Read ECU Information	
VEZEL	/	IMA	M65	Read codes	
VEZEL	/	IMA	M65	Erase Codes	
VEZEL	/	IMA	M65	Read Freeze Frame Data	
VEZEL	/	IMA	M65	Read Live Data	
VEZEL	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
VEZEL	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
VEZEL	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
VEZEL	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
VEZEL	/	Intake Sounder Control System (ISC)	M6D	Read codes	
VEZEL	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
VEZEL	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
VEZEL	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
VEZEL	/	Night Vision System (INVS)	0XB1	Read ECU Information	
VEZEL	/	Night Vision System (INVS)	0XB1	Read codes	
VEZEL	/	Night Vision System (INVS)	0XB1	Erase Codes	
VEZEL	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
VEZEL	/	Night Vision System (INVS)	0XB1	Read Live Data	
VEZEL	/	Night Vision System (INVS)	0XB1	Adjustment	
VEZEL	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
VEZEL	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
VEZEL	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
VEZEL	/	i-SHIFT	0XB0	Read ECU Information	
VEZEL	/	i-SHIFT	0XB0	Read codes	
VEZEL	/	i-SHIFT	0XB0	Erase Codes	
VEZEL	/	i-SHIFT	0XB0	Read Live Data	
VEZEL	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
VEZEL	/	Keyless Entry Control System (KAS)	M99	Read codes	
VEZEL	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
VEZEL	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
VEZEL	/	Keyless Entry Control System (KAS)	M99	Self Check	
VEZEL	/	Keyless Entry Control System (KAS)	M99	History Data	
VEZEL	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving

VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
VEZEL	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
VEZEL	/	Keyless Entry Control System (KAS)	M99	Registration	
VEZEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
VEZEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
VEZEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
VEZEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
VEZEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
VEZEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
VEZEL	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
VEZEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
VEZEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
VEZEL	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
VEZEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
VEZEL	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
VEZEL	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
VEZEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
VEZEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
VEZEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
VEZEL	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
VEZEL	/	Management ECU Module (ME)	M74	Read ECU Information	
VEZEL	/	Management ECU Module (ME)	M74	Read codes	
VEZEL	/	Management ECU Module (ME)	M74	Erase Codes	
VEZEL	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
VEZEL	/	Management ECU Module (ME)	M74	Read Live Data	
VEZEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
VEZEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
VEZEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
VEZEL	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
VEZEL	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
VEZEL	/	Multi-view camera system (MVCS)	M7A	Read codes	
VEZEL	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
VEZEL	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
VEZEL	/	Multi-view camera system (MVCS)	M7A	Customization	
VEZEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
VEZEL	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
VEZEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
VEZEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
VEZEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
VEZEL	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
VEZEL	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
VEZEL	/	Power Control Unit (PCU)	M83	Read ECU Information	
VEZEL	/	Power Control Unit (PCU)	M83	Read codes	
VEZEL	/	Power Control Unit (PCU)	M83	Erase Codes	
VEZEL	/	Power Control Unit (PCU)	M83	Read Live Data	
VEZEL	/	Power Control Unit (PCU)	M83	Self Check	
VEZEL	/	Power Control Unit (PCU)	M83	History Data	
VEZEL	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
VEZEL	/	Engine Control System (PGM-FI)	M23	Read codes	
VEZEL	/	Engine Control System (PGM-FI)	M23	Erase Codes	
VEZEL	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
VEZEL	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
VEZEL	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
VEZEL	/	Engine Control System (PGM-FI)	M23	Read Live Data	
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST

VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
VEZEL	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
VEZEL	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
VEZEL	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
VEZEL	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
VEZEL	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
VEZEL	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
VEZEL	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
VEZEL	/	Engine Control System (PGM-FI)	M50	Read codes	
VEZEL	/	Engine Control System (PGM-FI)	M50	Erase Codes	
VEZEL	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
VEZEL	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
VEZEL	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
VEZEL	/	Engine Control System (PGM-FI)	M50	Read Live Data	
VEZEL	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
VEZEL	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
VEZEL	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
VEZEL	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
VEZEL	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
VEZEL	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
VEZEL	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
VEZEL	/	Engine Control System (PGM-FI)	M86	Read codes	
VEZEL	/	Engine Control System (PGM-FI)	M86	Erase Codes	
VEZEL	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
VEZEL	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
VEZEL	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
VEZEL	/	Engine Control System (PGM-FI)	M86	Read Live Data	
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
VEZEL	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
VEZEL	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
VEZEL	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
VEZEL	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
VEZEL	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
VEZEL	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	
VEZEL	/	Four-wheel precision steering control system (PAWSC M96)	M96	Erase Codes	
VEZEL	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read Live Data	
VEZEL	/	PSR	M27	Read ECU Information	
VEZEL	/	PSR	M27	Read codes	
VEZEL	/	PSR	M27	Erase Codes	
VEZEL	/	PSR	M27	Read Live Data	
VEZEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
VEZEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
VEZEL	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
VEZEL	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
VEZEL	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
VEZEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
VEZEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
VEZEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
VEZEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
VEZEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
VEZEL	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
VEZEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
VEZEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
VEZEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
VEZEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
VEZEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
VEZEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
VEZEL	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
VEZEL	/	Remote starter (RS)	M90	System Check	
VEZEL	/	Remote starter (RS)	M90	HISTORY	
VEZEL	/	Remote starter (RS)	M90	Registration	
VEZEL	/	Seat load cell (SWS)	M6F	Read ECU Information	
VEZEL	/	Seat load cell (SWS)	M6F	Read codes	

VEZEL	/	Seat load cell (SWS)	M6F	Erase Codes	
VEZEL	/	Seat load cell (SWS)	M6F	Read Live Data	
VEZEL	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
VEZEL	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
VEZEL	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
VEZEL	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
VEZEL	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
VEZEL	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
VEZEL	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
VEZEL	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
VEZEL	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
VEZEL	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
VEZEL	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
VEZEL	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
VEZEL	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
VEZEL	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
VEZEL	/	Groove track drive unit (SLOT ECU)	M98	History Data	
VEZEL	/	Groove track drive unit (SLOT ECU)	M98	System Information	
VEZEL	/	Airbag Control System (SRS)	M9F	Read ECU Information	
VEZEL	/	Airbag Control System (SRS)	M9F	Read codes	
VEZEL	/	Airbag Control System (SRS)	M9F	Erase Codes	
VEZEL	/	Airbag Control System (SRS)	M9F	Read Live Data	
VEZEL	/	Airbag Control System (SRS)	MA0	Read ECU Information	
VEZEL	/	Airbag Control System (SRS)	MA0	Read codes	
VEZEL	/	Airbag Control System (SRS)	MA0	Erase Codes	
VEZEL	/	Airbag Control System (SRS)	MA0	Read Live Data	
VEZEL	/	Airbag Control System (SRS)	MA1	Read ECU Information	
VEZEL	/	Airbag Control System (SRS)	MA1	Read codes	
VEZEL	/	Airbag Control System (SRS)	MA1	Erase Codes	
VEZEL	/	Airbag Control System (SRS)	MA1	Read Live Data	
VEZEL	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
VEZEL	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
VEZEL	/	Airbag Control System (SRS)	M2A	Read codes	
VEZEL	/	Airbag Control System (SRS)	M2A	Erase Codes	
VEZEL	/	Airbag Control System (SRS)	M2A	Read Live Data	
VEZEL	/	Airbag Control System (SRS)	M9C	Read ECU Information	
VEZEL	/	Airbag Control System (SRS)	M9C	Read codes	
VEZEL	/	Airbag Control System (SRS)	M9C	Erase Codes	
VEZEL	/	Airbag Control System (SRS)	M9C	Read Live Data	
VEZEL	/	Airbag Control System (SRS)	M9D	Read ECU Information	
VEZEL	/	Airbag Control System (SRS)	M9D	Read codes	
VEZEL	/	Airbag Control System (SRS)	M9D	Erase Codes	
VEZEL	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
VEZEL	/	Airbag Control System (SRS)	M9D	Read Live Data	
VEZEL	/	Airbag Control System (SRS)	M9D	Parameter Information	
VEZEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
VEZEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
VEZEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
VEZEL	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
VEZEL	/	Airbag Control System (SRS)	M9D	Function Test	
VEZEL	/	Airbag Control System (SRS)	M9D	System Information	
VEZEL	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
VEZEL	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
VEZEL	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
VEZEL	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
VEZEL	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
VEZEL	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
VEZEL	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
VEZEL	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
VEZEL	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
VEZEL	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	



VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
VEZEL	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
VEZEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
VEZEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
VEZEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
VEZEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
VEZEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
VEZEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
VEZEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
VEZEL	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
VIGOR	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
VIGOR	/	Four-wheel steering control system (4WS)	M52	Read codes	
VIGOR	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
VIGOR	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
VIGOR	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
VIGOR	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
VIGOR	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
VIGOR	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
VIGOR	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
VIGOR	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
VIGOR	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
VIGOR	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
VIGOR	/	Automatic shift control system (A/T)	M1E	Read codes	
VIGOR	/	Automatic shift control system (A/T)	M1E	Erase Codes	
VIGOR	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
VIGOR	/	Automatic shift control system (A/T)	M1E	Read Live Data	
VIGOR	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
VIGOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
VIGOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
VIGOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
VIGOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
VIGOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
VIGOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
VIGOR	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
VIGOR	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
VIGOR	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
VIGOR	/	Automatic shift control system (A/T)	M3B	Read codes	
VIGOR	/	Automatic shift control system (A/T)	M3B	Erase Codes	
VIGOR	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
VIGOR	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
VIGOR	/	Automatic shift control system (A/T)	M3B	Read Live Data	
VIGOR	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
VIGOR	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
VIGOR	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
VIGOR	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
VIGOR	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
VIGOR	/	Automatic shift control system (A/T)	M3C	Read codes	
VIGOR	/	Automatic shift control system (A/T)	M3C	Erase Codes	
VIGOR	/	Automatic shift control system (A/T)	M81	Read ECU Information	
VIGOR	/	Automatic shift control system (A/T)	M81	Read codes	
VIGOR	/	Automatic shift control system (A/T)	M81	Erase Codes	
VIGOR	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
VIGOR	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
VIGOR	/	Automatic shift control system (A/T)	M81	Read Live Data	
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
VIGOR	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
VIGOR	/	Automatic shift control system (A/T)	M82	Read ECU Information	
VIGOR	/	Automatic shift control system (A/T)	M82	Read codes	
VIGOR	/	Automatic shift control system (A/T)	M82	Erase Codes	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER

VIGOR	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
VIGOR	/	Active Engine Control Support System (ACM)	M06	Read codes	
VIGOR	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
VIGOR	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
VIGOR	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
VIGOR	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
VIGOR	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
VIGOR	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
VIGOR	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
VIGOR	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
VIGOR	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
VIGOR	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
VIGOR	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
VIGOR	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
VIGOR	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
VIGOR	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
VIGOR	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
VIGOR	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
VIGOR	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
VIGOR	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
VIGOR	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
VIGOR	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
VIGOR	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
VIGOR	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
VIGOR	/	Transmission Control System (AT)	M18	Read ECU Information	
VIGOR	/	Transmission Control System (AT)	M18	Read codes	
VIGOR	/	Transmission Control System (AT)	M18	Erase Codes	
VIGOR	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
VIGOR	/	Transmission Control System (AT)	M18	Read Live Data	
VIGOR	/	Transmission Control System (AT)	M18	Adjustment	
VIGOR	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
VIGOR	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
VIGOR	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
VIGOR	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
VIGOR	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
VIGOR	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
VIGOR	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
VIGOR	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
VIGOR	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
VIGOR	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
VIGOR	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
VIGOR	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
VIGOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
VIGOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
VIGOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
VIGOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
VIGOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
VIGOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
VIGOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
VIGOR	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
VIGOR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
VIGOR	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
VIGOR	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	

VIGOR	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
VIGOR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
VIGOR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
VIGOR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
VIGOR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
VIGOR	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
VIGOR	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
VIGOR	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
VIGOR	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
VIGOR	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
VIGOR	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
VIGOR	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
VIGOR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
VIGOR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
VIGOR	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
VIGOR	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
VIGOR	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	

VIGOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
VIGOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
VIGOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
VIGOR	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
VIGOR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
VIGOR	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
VIGOR	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
VIGOR	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
VIGOR	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
VIGOR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
VIGOR	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
VIGOR	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
VIGOR	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Security	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
VIGOR	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
VIGOR	/	BODY ELECTRICAL/Security	MFF	History Data	
VIGOR	/	BODY ELECTRICAL/Security	MFF	History Clear	
VIGOR	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
VIGOR	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
VIGOR	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
VIGOR	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
VIGOR	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
VIGOR	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
VIGOR	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
VIGOR	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
VIGOR	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
VIGOR	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
VIGOR	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
VIGOR	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
VIGOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
VIGOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
VIGOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
VIGOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
VIGOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
VIGOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
VIGOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
VIGOR	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA

VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
VIGOR	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
VIGOR	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
VIGOR	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
VIGOR	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
VIGOR	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
VIGOR	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
VIGOR	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
VIGOR	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
VIGOR	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
VIGOR	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read ECU Information	
VIGOR	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read codes	
VIGOR	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Erase Codes	
VIGOR	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Freeze Frame Data	
VIGOR	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Read Live Data	
VIGOR	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	CMBS (CMS) ACTIVATION HISTORY	
VIGOR	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	RADAR AIMING
VIGOR	/	Collision Mitigation Brake Control System (CMBS/CM)	M2E	Miscellaneous Test	CMBS Brake
VIGOR	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
VIGOR	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
VIGOR	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
VIGOR	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
VIGOR	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
VIGOR	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
VIGOR	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
VIGOR	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
VIGOR	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
VIGOR	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
VIGOR	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
VIGOR	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
VIGOR	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
VIGOR	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
VIGOR	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
VIGOR	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
VIGOR	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)
VIGOR	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid B (RF)
VIGOR	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Start Clutch Feedback Learn
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		Read ECU Information	
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		Read codes	
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		Erase Codes	
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		Read Freeze Frame Data	
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		Read Live Data	
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		ECMPCM Reset	
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Inhibitor Solenoid
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid A (LF)
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	CAS Solenoid B (RF)
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Start Clutch Feedback Learn
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve A
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve B
VIGOR	/	Promise Automatic Transmission Control System (CVT M8D)		Miscellaneous Test	Shift solenoid Valve O/P
VIGOR	/	DBW	M34	Read ECU Information	
VIGOR	/	DBW	M34	Read codes	
VIGOR	/	DBW	M34	Erase Codes	
VIGOR	/	DBW	M34	Read Freeze Frame Data	
VIGOR	/	DBW	M34	Read Live Data	
VIGOR	/	DBW	M34	Inspection	Idle Speed Adjust
VIGOR	/	DBW	M34	Inspection	Throttle Test
VIGOR	/	DBW	M34	ECM Reset	
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
VIGOR	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
VIGOR	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
VIGOR	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
VIGOR	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
VIGOR	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
VIGOR	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
VIGOR	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
VIGOR	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
VIGOR	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test

VIGOR	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
VIGOR	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
VIGOR	/	Capacitor Control System (EDLC)	M12	Read codes	
VIGOR	/	Capacitor Control System (EDLC)	M12	Erase Codes	
VIGOR	/	Capacitor Control System (EDLC)	M12	Read Live Data	
VIGOR	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
VIGOR	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
VIGOR	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
VIGOR	/	Electronic Brake Control System (EPB)	M1F	Read codes	
VIGOR	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
VIGOR	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
VIGOR	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
VIGOR	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
VIGOR	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
VIGOR	/	Electronic Brake Control System (EPB)	M3E	Read codes	
VIGOR	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
VIGOR	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
VIGOR	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
VIGOR	/	Electric Powertrain / IMA	M66	Read ECU Information	
VIGOR	/	Electric Powertrain / IMA	M66	Read codes	
VIGOR	/	Electric Powertrain / IMA	M66	Erase Codes	
VIGOR	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
VIGOR	/	Electric Powertrain / IMA	M66	Read Live Data	
VIGOR	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
VIGOR	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
VIGOR	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
VIGOR	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
VIGOR	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
VIGOR	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
VIGOR	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
VIGOR	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
VIGOR	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
VIGOR	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
VIGOR	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
VIGOR	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
VIGOR	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
VIGOR	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
VIGOR	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
VIGOR	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
VIGOR	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
VIGOR	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
VIGOR	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
VIGOR	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
VIGOR	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
VIGOR	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
VIGOR	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
VIGOR	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
VIGOR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
VIGOR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
VIGOR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
VIGOR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
VIGOR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
VIGOR	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
VIGOR	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
VIGOR	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
VIGOR	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
VIGOR	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
VIGOR	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
VIGOR	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
VIGOR	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
VIGOR	/	New energy battery (EV)	M44	Read ECU Information	
VIGOR	/	New energy battery (EV)	M44	Read codes	
VIGOR	/	New energy battery (EV)	M44	Erase Codes	
VIGOR	/	New energy battery (EV)	M44	Read Freeze Frame Data	
VIGOR	/	New energy battery (EV)	M44	Read Live Data	
VIGOR	/	New energy battery (EV)	M44	Inspection	
VIGOR	/	New energy battery (EV)	M44	Adjustment	
VIGOR	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
VIGOR	/	Electronic vacuum pump (EVPS)	M21	Read codes	
VIGOR	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
VIGOR	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
VIGOR	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
VIGOR	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
VIGOR	/	Electronic vacuum pump (EVPS)	M22	Read codes	
VIGOR	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
VIGOR	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	

VIGOR	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
VIGOR	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
VIGOR	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
VIGOR	/	FCW LDW	M4E	Read ECU Information	
VIGOR	/	FCW LDW	M4E	Read codes	
VIGOR	/	FCW LDW	M4E	Erase Codes	
VIGOR	/	FCW LDW	M4E	Read Live Data	
VIGOR	/	FCW LDW	M4E	Function Test	FCW Drive
VIGOR	/	FCW LDW	M4E	Function Test	Left side lane departure warning
VIGOR	/	FCW LDW	M4E	Function Test	Right side lane departure warning
VIGOR	/	FCW LDW	M4E	Function Test	Indicator Drive
VIGOR	/	FCW LDW	M4E	Adjustment	
VIGOR	/	Instrument Display System (GAUGE)	M2C	Read codes	
VIGOR	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
VIGOR	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
VIGOR	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
VIGOR	/	Anti-lock brake control system (ABS)	M01	Read codes	
VIGOR	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
VIGOR	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
VIGOR	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
VIGOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
VIGOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
VIGOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
VIGOR	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
VIGOR	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
VIGOR	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
VIGOR	/	Anti-lock brake control system (ABS)	M02	Read codes	
VIGOR	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
VIGOR	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
VIGOR	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
VIGOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
VIGOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
VIGOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
VIGOR	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
VIGOR	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
VIGOR	/	Anti-lock brake control system (ABS)	M03	Read codes	
VIGOR	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
VIGOR	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
VIGOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
VIGOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
VIGOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
VIGOR	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
VIGOR	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
VIGOR	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
VIGOR	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
VIGOR	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
VIGOR	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
VIGOR	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
VIGOR	/	Anti-lock brake control system (ABS)	M19	Read codes	
VIGOR	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
VIGOR	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
VIGOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
VIGOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
VIGOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
VIGOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
VIGOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
VIGOR	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
VIGOR	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
VIGOR	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
VIGOR	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
VIGOR	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
VIGOR	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
VIGOR	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
VIGOR	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
VIGOR	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
VIGOR	/	Intelligent Parking Control System (SPS)	M9B	Customize	
VIGOR	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
VIGOR	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
VIGOR	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
VIGOR	/	Hydraulic booster control system (HBS)	M5F	Read codes	
VIGOR	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
VIGOR	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
VIGOR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
VIGOR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
VIGOR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
VIGOR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
VIGOR	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
VIGOR	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position

VIGOR	/	IMA	M63	Read ECU Information	
VIGOR	/	IMA	M63	Read codes	
VIGOR	/	IMA	M63	Erase Codes	
VIGOR	/	IMA	M63	Read Freeze Frame Data	
VIGOR	/	IMA	M63	Read Live Data	
VIGOR	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
VIGOR	/	IMA	M63	Adjustment	SOC PRESET
VIGOR	/	IMA	M64	Read ECU Information	
VIGOR	/	IMA	M64	Read codes	
VIGOR	/	IMA	M64	Erase Codes	
VIGOR	/	IMA	M64	Read Freeze Frame Data	
VIGOR	/	IMA	M64	Read Live Data	
VIGOR	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
VIGOR	/	IMA	M64	Adjustment	SOC PRESET
VIGOR	/	IMA	M65	Read ECU Information	
VIGOR	/	IMA	M65	Read codes	
VIGOR	/	IMA	M65	Erase Codes	
VIGOR	/	IMA	M65	Read Freeze Frame Data	
VIGOR	/	IMA	M65	Read Live Data	
VIGOR	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
VIGOR	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
VIGOR	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
VIGOR	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
VIGOR	/	Intake Sounder Control System (ISC)	M6D	Read codes	
VIGOR	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
VIGOR	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
VIGOR	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
VIGOR	/	Night Vision System (INVS)	0XB1	Read ECU Information	
VIGOR	/	Night Vision System (INVS)	0XB1	Read codes	
VIGOR	/	Night Vision System (INVS)	0XB1	Erase Codes	
VIGOR	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
VIGOR	/	Night Vision System (INVS)	0XB1	Read Live Data	
VIGOR	/	Night Vision System (INVS)	0XB1	Adjustment	
VIGOR	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
VIGOR	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
VIGOR	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
VIGOR	/	i-SHIFT	0XB0	Read ECU Information	
VIGOR	/	i-SHIFT	0XB0	Read codes	
VIGOR	/	i-SHIFT	0XB0	Erase Codes	
VIGOR	/	i-SHIFT	0XB0	Read Live Data	
VIGOR	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
VIGOR	/	Keyless Entry Control System (KAS)	M99	Read codes	
VIGOR	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
VIGOR	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
VIGOR	/	Keyless Entry Control System (KAS)	M99	Self Check	
VIGOR	/	Keyless Entry Control System (KAS)	M99	History Data	
VIGOR	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCED Terminal) Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving



VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
VIGOR	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
VIGOR	/	Keyless Entry Control System (KAS)	M99	Registration	
VIGOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
VIGOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
VIGOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
VIGOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
VIGOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
VIGOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
VIGOR	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
VIGOR	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
VIGOR	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
VIGOR	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
VIGOR	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
VIGOR	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
VIGOR	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
VIGOR	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
VIGOR	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
VIGOR	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
VIGOR	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
VIGOR	/	Management ECU Module (ME)	M74	Read ECU Information	
VIGOR	/	Management ECU Module (ME)	M74	Read codes	
VIGOR	/	Management ECU Module (ME)	M74	Erase Codes	
VIGOR	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
VIGOR	/	Management ECU Module (ME)	M74	Read Live Data	
VIGOR	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
VIGOR	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
VIGOR	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
VIGOR	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
VIGOR	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
VIGOR	/	Multi-view camera system (MVCS)	M7A	Read codes	
VIGOR	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
VIGOR	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
VIGOR	/	Multi-view camera system (MVCS)	M7A	Customization	
VIGOR	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
VIGOR	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
VIGOR	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
VIGOR	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
VIGOR	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
VIGOR	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
VIGOR	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
VIGOR	/	Power Control Unit (PCU)	M83	Read ECU Information	
VIGOR	/	Power Control Unit (PCU)	M83	Read codes	
VIGOR	/	Power Control Unit (PCU)	M83	Erase Codes	
VIGOR	/	Power Control Unit (PCU)	M83	Read Live Data	
VIGOR	/	Power Control Unit (PCU)	M83	Self Check	
VIGOR	/	Power Control Unit (PCU)	M83	History Data	
VIGOR	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
VIGOR	/	Engine Control System (PGM-FI)	M23	Read codes	
VIGOR	/	Engine Control System (PGM-FI)	M23	Erase Codes	
VIGOR	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
VIGOR	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
VIGOR	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
VIGOR	/	Engine Control System (PGM-FI)	M23	Read Live Data	
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
VIGOR	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
VIGOR	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
VIGOR	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
VIGOR	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
VIGOR	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
VIGOR	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
VIGOR	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
VIGOR	/	Engine Control System (PGM-FI)	M50	Read codes	
VIGOR	/	Engine Control System (PGM-FI)	M50	Erase Codes	
VIGOR	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
VIGOR	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
VIGOR	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
VIGOR	/	Engine Control System (PGM-FI)	M50	Read Live Data	
VIGOR	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
VIGOR	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
VIGOR	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
VIGOR	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
VIGOR	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
VIGOR	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
VIGOR	/	Engine Control System (PGM-FI)	M86	Read ECU Information	

VIGOR	/	Engine Control System (PGM-FI)	M86	Read codes	
VIGOR	/	Engine Control System (PGM-FI)	M86	Erase Codes	
VIGOR	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
VIGOR	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
VIGOR	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
VIGOR	/	Engine Control System (PGM-FI)	M86	Read Live Data	
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
VIGOR	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
VIGOR	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
VIGOR	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
VIGOR	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
VIGOR	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
VIGOR	/	Four-wheel precision steering control system (PAWSC M96		Read codes	
VIGOR	/	Four-wheel precision steering control system (PAWSC M96		Erase Codes	
VIGOR	/	Four-wheel precision steering control system (PAWSC M96		Read Live Data	
VIGOR	/	PSR	M27	Read ECU Information	
VIGOR	/	PSR	M27	Read codes	
VIGOR	/	PSR	M27	Erase Codes	
VIGOR	/	PSR	M27	Read Live Data	
VIGOR	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
VIGOR	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
VIGOR	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
VIGOR	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
VIGOR	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
VIGOR	/	Real-time four-wheel drive / intelligent control drive s M3A		Read codes	
VIGOR	/	Real-time four-wheel drive / intelligent control drive s M3A		Erase Codes	
VIGOR	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Freeze Frame Data	
VIGOR	/	Real-time four-wheel drive / intelligent control drive s M3A		Read Live Data	
VIGOR	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	E-DPS Control Module Replacement
VIGOR	/	Real-time four-wheel drive / intelligent control drive s M3A		Adjustment	Longitudinal G Sensor Learning
VIGOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
VIGOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
VIGOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
VIGOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
VIGOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
VIGOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
VIGOR	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
VIGOR	/	Remote starter (RS)	M90	System Check	
VIGOR	/	Remote starter (RS)	M90	HISTORY	
VIGOR	/	Remote starter (RS)	M90	Registration	
VIGOR	/	Seat load cell (SWS)	M6F	Read ECU Information	
VIGOR	/	Seat load cell (SWS)	M6F	Read codes	
VIGOR	/	Seat load cell (SWS)	M6F	Erase Codes	
VIGOR	/	Seat load cell (SWS)	M6F	Read Live Data	
VIGOR	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
VIGOR	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
VIGOR	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
VIGOR	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
VIGOR	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
VIGOR	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
VIGOR	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
VIGOR	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	

VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
VIGOR	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
VIGOR	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
VIGOR	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
VIGOR	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
VIGOR	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
VIGOR	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
VIGOR	/	Groove track drive unit (SLOT ECU)	M98	History Data	
VIGOR	/	Groove track drive unit (SLOT ECU)	M98	System Information	
VIGOR	/	Airbag Control System (SRS)	M9F	Read ECU Information	
VIGOR	/	Airbag Control System (SRS)	M9F	Read codes	
VIGOR	/	Airbag Control System (SRS)	M9F	Erase Codes	
VIGOR	/	Airbag Control System (SRS)	M9F	Read Live Data	
VIGOR	/	Airbag Control System (SRS)	MA0	Read ECU Information	
VIGOR	/	Airbag Control System (SRS)	MA0	Read codes	
VIGOR	/	Airbag Control System (SRS)	MA0	Erase Codes	
VIGOR	/	Airbag Control System (SRS)	MA0	Read Live Data	
VIGOR	/	Airbag Control System (SRS)	MA1	Read ECU Information	
VIGOR	/	Airbag Control System (SRS)	MA1	Read codes	
VIGOR	/	Airbag Control System (SRS)	MA1	Erase Codes	
VIGOR	/	Airbag Control System (SRS)	MA1	Read Live Data	
VIGOR	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
VIGOR	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
VIGOR	/	Airbag Control System (SRS)	M2A	Read codes	
VIGOR	/	Airbag Control System (SRS)	M2A	Erase Codes	
VIGOR	/	Airbag Control System (SRS)	M2A	Read Live Data	
VIGOR	/	Airbag Control System (SRS)	M9C	Read ECU Information	
VIGOR	/	Airbag Control System (SRS)	M9C	Read codes	
VIGOR	/	Airbag Control System (SRS)	M9C	Erase Codes	
VIGOR	/	Airbag Control System (SRS)	M9C	Read Live Data	
VIGOR	/	Airbag Control System (SRS)	M9D	Read ECU Information	
VIGOR	/	Airbag Control System (SRS)	M9D	Read codes	
VIGOR	/	Airbag Control System (SRS)	M9D	Erase Codes	
VIGOR	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
VIGOR	/	Airbag Control System (SRS)	M9D	Read Live Data	
VIGOR	/	Airbag Control System (SRS)	M9D	Parameter Information	
VIGOR	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
VIGOR	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
VIGOR	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
VIGOR	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
VIGOR	/	Airbag Control System (SRS)	M9D	Function Test	
VIGOR	/	Airbag Control System (SRS)	M9D	System Information	
VIGOR	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
VIGOR	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
VIGOR	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
VIGOR	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
VIGOR	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
VIGOR	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
VIGOR	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
VIGOR	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
VIGOR	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
VIGOR	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
VIGOR	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
VIGOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
VIGOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
VIGOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
VIGOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
VIGOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
VIGOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
VIGOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
VIGOR	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
WR-V	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
WR-V	/	Four-wheel steering control system (4WS)	M52	Read codes	
WR-V	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
WR-V	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
WR-V	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
WR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
WR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
WR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
WR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
WR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
WR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
WR-V	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
WR-V	/	Automatic shift control system (A/T)	M1E	Read codes	
WR-V	/	Automatic shift control system (A/T)	M1E	Erase Codes	
WR-V	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
WR-V	/	Automatic shift control system (A/T)	M1E	Read Live Data	
WR-V	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
WR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
WR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
WR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A

WR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
WR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
WR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
WR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
WR-V	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
WR-V	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
WR-V	/	Automatic shift control system (A/T)	M3B	Read codes	
WR-V	/	Automatic shift control system (A/T)	M3B	Erase Codes	
WR-V	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
WR-V	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
WR-V	/	Automatic shift control system (A/T)	M3B	Read Live Data	
WR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
WR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
WR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
WR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
WR-V	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
WR-V	/	Automatic shift control system (A/T)	M3C	Read codes	
WR-V	/	Automatic shift control system (A/T)	M3C	Erase Codes	
WR-V	/	Automatic shift control system (A/T)	M81	Read ECU Information	
WR-V	/	Automatic shift control system (A/T)	M81	Read codes	
WR-V	/	Automatic shift control system (A/T)	M81	Erase Codes	
WR-V	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
WR-V	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
WR-V	/	Automatic shift control system (A/T)	M81	Read Live Data	
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
WR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
WR-V	/	Automatic shift control system (A/T)	M82	Read ECU Information	
WR-V	/	Automatic shift control system (A/T)	M82	Read codes	
WR-V	/	Automatic shift control system (A/T)	M82	Erase Codes	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
WR-V	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
WR-V	/	Active Engine Control Support System (ACM)	M06	Read codes	
WR-V	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
WR-V	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
WR-V	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
WR-V	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
WR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
WR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
WR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
WR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
WR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
WR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
WR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
WR-V	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read ECU Information	
WR-V	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read codes	
WR-V	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Erase Codes	
WR-V	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Freeze Frame Data	
WR-V	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Read Live Data	
WR-V	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Function Test	Damper Force Operation Test
WR-V	/	Active / Automatic Shock Absorber Control System (A MOD	M0D	Adjustment	Damper Stroke Calibration
WR-V	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
WR-V	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
WR-V	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display

WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Function Test	Alarm Test
WR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	Adjustment	Radar aiming
WR-V	/	Transmission Control System (AT) M18	Read ECU Information	
WR-V	/	Transmission Control System (AT) M18	Read codes	
WR-V	/	Transmission Control System (AT) M18	Erase Codes	
WR-V	/	Transmission Control System (AT) M18	Read Freeze Frame Data	
WR-V	/	Transmission Control System (AT) M18	Read Live Data	
WR-V	/	Transmission Control System (AT) M18	Adjustment	
WR-V	/	Active Torque Converter Control System (ATTS) M0E	Read ECU Information	
WR-V	/	Active Torque Converter Control System (ATTS) M0E	Read codes	
WR-V	/	Active Torque Converter Control System (ATTS) M0E	Erase Codes	
WR-V	/	Active Torque Converter Control System (ATTS) M0E	Read Freeze Frame Data	
WR-V	/	Active Torque Converter Control System (ATTS) M0E	Read Live Data	
WR-V	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
WR-V	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	STEERING ANGLE
WR-V	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
WR-V	/	Active Torque Converter Control System (ATTS) M0E	Miscellaneous Test	ALL SENSORS
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Read ECU Information	
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Read codes	
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Erase Codes	
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Read Live Data	
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Left Side Alert Indicator ON
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Left Side Alert Indicator
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Right Side Alert Indicator ON
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Flash BSI Right Side Alert Indicator
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator ON
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Right Side 'Blind Spot Not Available' Message
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Left Side 'Blind Spot Not Available' Message
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Indicator OFF
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Check Blind Spot System Message
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	BSI Buzzer
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Inspection	Select year
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	Function Test	
WR-V	/	Driving Visual Blind Spot Information System (BSI) M14	History Clear	
WR-V	/	BODY ELECTRICAL/Active Cornering Light MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Active Cornering Light MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Adaptive Front Lighting MFF	Function Test	Adaptive Front Lighting
WR-V	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Auto A/C Sub display MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Oncoming Vehicle Detection
WR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Function Test	Preceding Vehicle Detection
WR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
WR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
WR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset Operation
WR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Returning Operation
WR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Automatic Returning Distance
WR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Manual Returning Time
WR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr MFF	Adjustment	Reset to default
WR-V	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Auto Light Leveling MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Auto Light Leveling MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Auto Light Leveling MFF	Function Test	Auto Leveling Adjust Motor
WR-V	/	BODY ELECTRICAL/Auto Light Leveling MFF	Adjustment	Sensor Initial Position Learning
WR-V	/	BODY ELECTRICAL/Door Locks MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Door Locks MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Door Locks MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Lock All Doors
WR-V	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock Driver's Side Door
WR-V	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Unlock All Doors
WR-V	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Fuel Fill Door Open
WR-V	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Left Power Sliding Door
WR-V	/	BODY ELECTRICAL/Door Locks MFF	Function Test	Right Power Sliding Door
WR-V	/	BODY ELECTRICAL/e-Call MFF	Read codes	
WR-V	/	BODY ELECTRICAL/e-Call MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/e-Call MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/e-Call MFF	Activation and Display E-Call unit data	
WR-V	/	BODY ELECTRICAL/Front Panel MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Front Panel MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Front Panel MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Front Panel MFF	Inspection	Front Panel Check
WR-V	/	BODY ELECTRICAL/Front Panel MFF	Function Test	Front Display Panel
WR-V	/	BODY ELECTRICAL/Gauges MFF	Read ECU Information	
WR-V	/	BODY ELECTRICAL/Gauges MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Gauges MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Gauges MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Gauges MFF	Function Test	Speedometer
WR-V	/	BODY ELECTRICAL/Gauges MFF	Function Test	Tachometer
WR-V	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Activation Indicator
WR-V	/	BODY ELECTRICAL/Gauges MFF	Function Test	VSA/TCS Indicator
WR-V	/	BODY ELECTRICAL/Gauges MFF	Function Test	ABS INDICATOR
WR-V	/	BODY ELECTRICAL/Gauges MFF	Function Test	EBD Indicator(Electronic Brake Display)
WR-V	/	BODY ELECTRICAL/Gauges MFF	Function Test	Cruise Activation Indicator
WR-V	/	BODY ELECTRICAL/Gauges MFF	Function Test	MIL Status
WR-V	/	BODY ELECTRICAL/Gauges MFF	Function Test	Daytime Running Lights Indicator(Canada)
WR-V	/	BODY ELECTRICAL/Gauges MFF	Function Test	Engine Oil Pressure Indicator
WR-V	/	BODY ELECTRICAL/Gauges MFF	Function Test	Charging System Indicator
WR-V	/	BODY ELECTRICAL/Gauges MFF	Function Test	Cruise Control Main Switch Indicator

WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
WR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
WR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
WR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
WR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
WR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
WR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
WR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
WR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
WR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
WR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
WR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
WR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
WR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
WR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
WR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
WR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
WR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
WR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down

WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
WR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
WR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Security	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
WR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
WR-V	/	BODY ELECTRICAL/Security	MFF	History Data	
WR-V	/	BODY ELECTRICAL/Security	MFF	History Clear	
WR-V	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
WR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
WR-V	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
WR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
WR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
WR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
WR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
WR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
WR-V	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
WR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
WR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
WR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
WR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
WR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
WR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
WR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
WR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
WR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
WR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
WR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
WR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
WR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
WR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
WR-V	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
WR-V	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
WR-V	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
WR-V	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
WR-V	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
WR-V	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
WR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read ECU Information	
WR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read codes	
WR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Erase Codes	
WR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Freeze Frame Data	
WR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Read Live Data	
WR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
WR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
WR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
WR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
WR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
WR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
WR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
WR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
WR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
WR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
WR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
WR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
WR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
WR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
WR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
WR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
WR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	

WR-V	/	Promise Automatic Transmission Control System (CVT M33)	ECMPCM Reset	
WR-V	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Inhibitor Solenoid
WR-V	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid A (LF)
WR-V	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	CAS Solenoid B (RF)
WR-V	/	Promise Automatic Transmission Control System (CVT M33)	Miscellaneous Test	Start Clutch Feedback Learn
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	Read ECU Information	
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	Read codes	
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	Erase Codes	
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	Read Freeze Frame Data	
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	Read Live Data	
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	ECMPCM Reset	
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Inhibitor Solenoid
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid A (LF)
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	CAS Solenoid B (RF)
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Start Clutch Feedback Learn
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve A
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve B
WR-V	/	Promise Automatic Transmission Control System (CVT M8D)	Miscellaneous Test	Shift solenoid Valve O/P
WR-V	/	DBW M34	Read ECU Information	
WR-V	/	DBW M34	Read codes	
WR-V	/	DBW M34	Erase Codes	
WR-V	/	DBW M34	Read Freeze Frame Data	
WR-V	/	DBW M34	Read Live Data	
WR-V	/	DBW M34	Inspection	Idle Speed Adjust
WR-V	/	DBW M34	Inspection	Throttle Test
WR-V	/	DBW M34	ECM Reset	
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
WR-V	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
WR-V	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
WR-V	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
WR-V	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
WR-V	/	Diesel Engine Control System (DIESEL) M37	Read codes	
WR-V	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
WR-V	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
WR-V	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
WR-V	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
WR-V	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
WR-V	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
WR-V	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
WR-V	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
WR-V	/	Diesel Engine Control System (DIESEL) M85	Read codes	
WR-V	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
WR-V	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
WR-V	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
WR-V	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
WR-V	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
WR-V	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
WR-V	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
WR-V	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
WR-V	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
WR-V	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
WR-V	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
WR-V	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
WR-V	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
WR-V	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
WR-V	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
WR-V	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
WR-V	/	Capacitor Control System (EDLC) M12	Read codes	
WR-V	/	Capacitor Control System (EDLC) M12	Erase Codes	
WR-V	/	Capacitor Control System (EDLC) M12	Read Live Data	
WR-V	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge and Charge Test
WR-V	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge for Removal or Disposal
WR-V	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Usage History Clear
WR-V	/	Electronic Brake Control System (EPB) M1F	Read codes	
WR-V	/	Electronic Brake Control System (EPB) M1F	Erase Codes	
WR-V	/	Electronic Brake Control System (EPB) M1F	Read Live Data	
WR-V	/	Electronic Brake Control System (EPB) M1F	Adjustment	Sensor Calibration
WR-V	/	Electronic Brake Control System (EPB) M1F	Adjustment	Brake Pad Maintenance Mode
WR-V	/	Electronic Brake Control System (EPB) M3E	Read ECU Information	
WR-V	/	Electronic Brake Control System (EPB) M3E	Read codes	



WR-V	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
WR-V	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
WR-V	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
WR-V	/	Electric Powertrain / IMA	M66	Read ECU Information	
WR-V	/	Electric Powertrain / IMA	M66	Read codes	
WR-V	/	Electric Powertrain / IMA	M66	Erase Codes	
WR-V	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
WR-V	/	Electric Powertrain / IMA	M66	Read Live Data	
WR-V	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
WR-V	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
WR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
WR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
WR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
WR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
WR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
WR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
WR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
WR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
WR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
WR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
WR-V	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
WR-V	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
WR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
WR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
WR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
WR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
WR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
WR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
WR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
WR-V	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
WR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
WR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
WR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
WR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
WR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
WR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
WR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
WR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
WR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
WR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
WR-V	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
WR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
WR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
WR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
WR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
WR-V	/	New energy battery (EV)	M44	Read ECU Information	
WR-V	/	New energy battery (EV)	M44	Read codes	
WR-V	/	New energy battery (EV)	M44	Erase Codes	
WR-V	/	New energy battery (EV)	M44	Read Freeze Frame Data	
WR-V	/	New energy battery (EV)	M44	Read Live Data	
WR-V	/	New energy battery (EV)	M44	Inspection	
WR-V	/	New energy battery (EV)	M44	Adjustment	
WR-V	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
WR-V	/	Electronic vacuum pump (EVPS)	M21	Read codes	
WR-V	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
WR-V	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
WR-V	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
WR-V	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
WR-V	/	Electronic vacuum pump (EVPS)	M22	Read codes	
WR-V	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
WR-V	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
WR-V	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
WR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
WR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
WR-V	/	FCW LDW	M4E	Read ECU Information	
WR-V	/	FCW LDW	M4E	Read codes	
WR-V	/	FCW LDW	M4E	Erase Codes	
WR-V	/	FCW LDW	M4E	Read Live Data	
WR-V	/	FCW LDW	M4E	Function Test	FCW Drive
WR-V	/	FCW LDW	M4E	Function Test	Left side lane departure warning
WR-V	/	FCW LDW	M4E	Function Test	Right side lane departure warning
WR-V	/	FCW LDW	M4E	Function Test	Indicator Drive
WR-V	/	FCW LDW	M4E	Adjustment	
WR-V	/	Instrument Display System (GAUGE)	M2C	Read codes	
WR-V	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
WR-V	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
WR-V	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
WR-V	/	Anti-lock brake control system (ABS)	M01	Read codes	
WR-V	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
WR-V	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
WR-V	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
WR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
WR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
WR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
WR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
WR-V	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
WR-V	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
WR-V	/	Anti-lock brake control system (ABS)	M02	Read codes	
WR-V	/	Anti-lock brake control system (ABS)	M02	Erase Codes	

WR-V	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
WR-V	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
WR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
WR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
WR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
WR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
WR-V	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
WR-V	/	Anti-lock brake control system (ABS)	M03	Read codes	
WR-V	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
WR-V	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
WR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
WR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
WR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
WR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
WR-V	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
WR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
WR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
WR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
WR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
WR-V	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
WR-V	/	Anti-lock brake control system (ABS)	M19	Read codes	
WR-V	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
WR-V	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
WR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
WR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
WR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
WR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
WR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
WR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
WR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
WR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
WR-V	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
WR-V	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
WR-V	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
WR-V	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
WR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
WR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
WR-V	/	Intelligent Parking Control System (SPS)	M9B	Customize	
WR-V	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
WR-V	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
WR-V	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
WR-V	/	Hydraulic booster control system (HBS)	M5F	Read codes	
WR-V	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
WR-V	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
WR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
WR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
WR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
WR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
WR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
WR-V	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
WR-V	/	IMA	M63	Read ECU Information	
WR-V	/	IMA	M63	Read codes	
WR-V	/	IMA	M63	Erase Codes	
WR-V	/	IMA	M63	Read Freeze Frame Data	
WR-V	/	IMA	M63	Read Live Data	
WR-V	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
WR-V	/	IMA	M63	Adjustment	SOC PRESET
WR-V	/	IMA	M64	Read ECU Information	
WR-V	/	IMA	M64	Read codes	
WR-V	/	IMA	M64	Erase Codes	
WR-V	/	IMA	M64	Read Freeze Frame Data	
WR-V	/	IMA	M64	Read Live Data	
WR-V	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
WR-V	/	IMA	M64	Adjustment	SOC PRESET
WR-V	/	IMA	M65	Read ECU Information	
WR-V	/	IMA	M65	Read codes	
WR-V	/	IMA	M65	Erase Codes	
WR-V	/	IMA	M65	Read Freeze Frame Data	
WR-V	/	IMA	M65	Read Live Data	
WR-V	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
WR-V	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
WR-V	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
WR-V	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
WR-V	/	Intake Sounder Control System (ISC)	M6D	Read codes	
WR-V	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
WR-V	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
WR-V	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
WR-V	/	Night Vision System (INVS)	0XB1	Read ECU Information	
WR-V	/	Night Vision System (INVS)	0XB1	Read codes	
WR-V	/	Night Vision System (INVS)	0XB1	Erase Codes	
WR-V	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
WR-V	/	Night Vision System (INVS)	0XB1	Read Live Data	

WR-V	/	Night Vision System (INVS)	0XB1	Adjustment	
WR-V	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
WR-V	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
WR-V	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
WR-V	/	i-SHIFT	0XB0	Read ECU Information	
WR-V	/	i-SHIFT	0XB0	Read codes	
WR-V	/	i-SHIFT	0XB0	Erase Codes	
WR-V	/	i-SHIFT	0XB0	Read Live Data	
WR-V	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
WR-V	/	Keyless Entry Control System (KAS)	M99	Read codes	
WR-V	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
WR-V	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
WR-V	/	Keyless Entry Control System (KAS)	M99	Self Check	
WR-V	/	Keyless Entry Control System (KAS)	M99	History Data	
WR-V	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
WR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
WR-V	/	Keyless Entry Control System (KAS)	M99	Registration	
WR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
WR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
WR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
WR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
WR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
WR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
WR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
WR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read ECU Information	
WR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read codes	
WR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Erase Codes	
WR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Freeze Frame Data	
WR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Read Live Data	
WR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Adjustment	STEERING REWRITE
WR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	LDW OFFSET
WR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	GAIN ADJUST
WR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	DRIVING WILL
WR-V	/	Electronically assisted lane keeping control system (Lk M71)	M71	Customize	CONTROL DELAY
WR-V	/	Management ECU Module (ME)	M74	Read ECU Information	
WR-V	/	Management ECU Module (ME)	M74	Read codes	
WR-V	/	Management ECU Module (ME)	M74	Erase Codes	
WR-V	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
WR-V	/	Management ECU Module (ME)	M74	Read Live Data	
WR-V	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read ECU Information	
WR-V	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read codes	
WR-V	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Erase Codes	
WR-V	/	Multi-view camera and parking assist system (MVC/P, M26)	M26	Read Live Data	
WR-V	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	

WR-V	/	Multi-view camera system (MVCS)	M7A	Read codes	
WR-V	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
WR-V	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
WR-V	/	Multi-view camera system (MVCS)	M7A	Customization	
WR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
WR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
WR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
WR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
WR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
WR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
WR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
WR-V	/	Power Control Unit (PCU)	M83	Read ECU Information	
WR-V	/	Power Control Unit (PCU)	M83	Read codes	
WR-V	/	Power Control Unit (PCU)	M83	Erase Codes	
WR-V	/	Power Control Unit (PCU)	M83	Read Live Data	
WR-V	/	Power Control Unit (PCU)	M83	Self Check	
WR-V	/	Power Control Unit (PCU)	M83	History Data	
WR-V	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
WR-V	/	Engine Control System (PGM-FI)	M23	Read codes	
WR-V	/	Engine Control System (PGM-FI)	M23	Erase Codes	
WR-V	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
WR-V	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
WR-V	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
WR-V	/	Engine Control System (PGM-FI)	M23	Read Live Data	
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
WR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
WR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
WR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
WR-V	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
WR-V	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
WR-V	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
WR-V	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
WR-V	/	Engine Control System (PGM-FI)	M50	Read codes	
WR-V	/	Engine Control System (PGM-FI)	M50	Erase Codes	
WR-V	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
WR-V	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
WR-V	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
WR-V	/	Engine Control System (PGM-FI)	M50	Read Live Data	
WR-V	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
WR-V	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
WR-V	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
WR-V	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
WR-V	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
WR-V	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
WR-V	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
WR-V	/	Engine Control System (PGM-FI)	M86	Read codes	
WR-V	/	Engine Control System (PGM-FI)	M86	Erase Codes	
WR-V	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
WR-V	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
WR-V	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
WR-V	/	Engine Control System (PGM-FI)	M86	Read Live Data	
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
WR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
WR-V	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
WR-V	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
WR-V	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
WR-V	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
WR-V	/	Four-wheel precision steering control system (PAWSC M96)	M96	Read codes	

WR-V	/	Four-wheel precision steering control system (PAWSC M96	Erase Codes
WR-V	/	Four-wheel precision steering control system (PAWSC M96	Read Live Data
WR-V	/	PSR M27	Read ECU Information
WR-V	/	PSR M27	Read codes
WR-V	/	PSR M27	Erase Codes
WR-V	/	PSR M27	Read Live Data
WR-V	/	Pedestrian Collision Protection System (PUH) M8C	Read ECU Information
WR-V	/	Pedestrian Collision Protection System (PUH) M8C	Read codes
WR-V	/	Pedestrian Collision Protection System (PUH) M8C	Erase Codes
WR-V	/	Pedestrian Collision Protection System (PUH) M8C	Read Live Data
WR-V	/	Pedestrian Collision Protection System (PUH) M8C	Miscellaneous Test
WR-V	/	Real-time four-wheel drive / intelligent control drive s M3A	WARNING DISPLAY FORCE ACTIVATION
WR-V	/	Real-time four-wheel drive / intelligent control drive s M3A	Read codes
WR-V	/	Real-time four-wheel drive / intelligent control drive s M3A	Erase Codes
WR-V	/	Real-time four-wheel drive / intelligent control drive s M3A	Read Freeze Frame Data
WR-V	/	Real-time four-wheel drive / intelligent control drive s M3A	Read Live Data
WR-V	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment
WR-V	/	Real-time four-wheel drive / intelligent control drive s M3A	E-DPS Control Module Replacement
WR-V	/	Real-time four-wheel drive / intelligent control drive s M3A	Adjustment
WR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Longitudinal G Sensor Learning
WR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read ECU Information
WR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read codes
WR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Erase Codes
WR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Read Live Data
WR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Adjustment
WR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Function Test
WR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Monitor and Alarm
WR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM) M8F	Display Rear Camera output image
WR-V	/	Remote starter (RS) M90	System Check
WR-V	/	Remote starter (RS) M90	HISTORY
WR-V	/	Remote starter (RS) M90	Registration
WR-V	/	Seat load cell (SWS) M6F	Read ECU Information
WR-V	/	Seat load cell (SWS) M6F	Read codes
WR-V	/	Seat load cell (SWS) M6F	Erase Codes
WR-V	/	Seat load cell (SWS) M6F	Read Live Data
WR-V	/	Seat load cell (SWS) M6F	System Check
WR-V	/	Seat load cell (SWS) M6F	SWS DTC CHECK
WR-V	/	Seat load cell (SWS) M6F	System Check
WR-V	/	Seat load cell (SWS) M6F	Seat Output Check
WR-V	/	Seat load cell (SWS) M6F	AFTER A VEHICLE COLLISION
WR-V	/	Seat load cell (SWS) M6F	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
WR-V	/	Seat load cell (SWS) M6F	Adjustment
WR-V	/	Seat load cell (SWS) M6F	ODS Unit Initialization
WR-V	/	Seat load cell (SWS) M6F	Adjustment
WR-V	/	Seat load cell (SWS) M6F	OPDS Initialization
WR-V	/	Seat load cell (SWS) M6F	Adjustment
WR-V	/	Seat load cell (SWS) M6F	SWS Initialization
WR-V	/	Seat load cell (SWS) M6F	Adjustment
WR-V	/	Seat load cell (SWS) M6F	E-Pretensioner For CMBS (CMS)
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M29	Read ECU Information
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M29	Read codes
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M29	Erase Codes
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M29	Readiness Codes
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M29	Read Freeze Frame Data
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M29	ECM/PCM Reset
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M29	Read Live Data
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M29	Inspection
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M29	Adjustment
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M29	VIN CHECK
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M29	Replace ECM/PCM
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Read ECU Information
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Read codes
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Erase Codes
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Read Freeze Frame Data
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Read Live Data
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Shift Solenoid Test
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Acceleration Device Test
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Function 1 Clutch Coil Test
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Differential Torque
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M Steering Angle Sensor
WR-V	/	Full-time four-wheel drive control system (SH-AWD) M97	Miscellaneous Test/Neutral M ALL Sensor
WR-V	/	Groove track drive unit (SLOT ECU) M98	Read ECU Information
WR-V	/	Groove track drive unit (SLOT ECU) M98	Read codes
WR-V	/	Groove track drive unit (SLOT ECU) M98	Erase Codes
WR-V	/	Groove track drive unit (SLOT ECU) M98	Read Live Data
WR-V	/	Groove track drive unit (SLOT ECU) M98	Self Check
WR-V	/	Groove track drive unit (SLOT ECU) M98	History Data
WR-V	/	Groove track drive unit (SLOT ECU) M98	System Information
WR-V	/	Airbag Control System (SRS) M9F	Read ECU Information
WR-V	/	Airbag Control System (SRS) M9F	Read codes
WR-V	/	Airbag Control System (SRS) M9F	Erase Codes
WR-V	/	Airbag Control System (SRS) M9F	Read Live Data
WR-V	/	Airbag Control System (SRS) MA0	Read ECU Information
WR-V	/	Airbag Control System (SRS) MA0	Read codes
WR-V	/	Airbag Control System (SRS) MA0	Erase Codes
WR-V	/	Airbag Control System (SRS) MA0	Read Live Data
WR-V	/	Airbag Control System (SRS) MA1	Read ECU Information
WR-V	/	Airbag Control System (SRS) MA1	Read codes
WR-V	/	Airbag Control System (SRS) MA1	Erase Codes
WR-V	/	Airbag Control System (SRS) MA1	Read Live Data
WR-V	/	Airbag Control System (SRS) MA1	Miscellaneous Test
WR-V	/	Airbag Control System (SRS) MA1	OPDS Initialization
WR-V	/	Airbag Control System (SRS) MA1	Miscellaneous Test
WR-V	/	Airbag Control System (SRS) M2A	Blinking Side Airbag Indicator Light
WR-V	/	Airbag Control System (SRS) M2A	Read codes
WR-V	/	Airbag Control System (SRS) M2A	Erase Codes
WR-V	/	Airbag Control System (SRS) M2A	Read Live Data
WR-V	/	Airbag Control System (SRS) M9C	Read ECU Information
WR-V	/	Airbag Control System (SRS) M9C	Read codes
WR-V	/	Airbag Control System (SRS) M9C	Erase Codes
WR-V	/	Airbag Control System (SRS) M9C	Read Live Data
WR-V	/	Airbag Control System (SRS) M9D	Read ECU Information
WR-V	/	Airbag Control System (SRS) M9D	Read codes

WR-V	/	Airbag Control System (SRS)	M9D	Erase Codes	
WR-V	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
WR-V	/	Airbag Control System (SRS)	M9D	Read Live Data	
WR-V	/	Airbag Control System (SRS)	M9D	Parameter Information	
WR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
WR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
WR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
WR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
WR-V	/	Airbag Control System (SRS)	M9D	Function Test	
WR-V	/	Airbag Control System (SRS)	M9D	System Information	
WR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
WR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
WR-V	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
WR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
WR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
WR-V	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
WR-V	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
WR-V	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
WR-V	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
WR-V	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
WR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
WR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
WR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
WR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
WR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
WR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
WR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
WR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
WR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
XR-V	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
XR-V	/	Four-wheel steering control system (4WS)	M52	Read codes	
XR-V	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
XR-V	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
XR-V	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
XR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
XR-V	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
XR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
XR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
XR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
XR-V	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
XR-V	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
XR-V	/	Automatic shift control system (A/T)	M1E	Read codes	
XR-V	/	Automatic shift control system (A/T)	M1E	Erase Codes	
XR-V	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
XR-V	/	Automatic shift control system (A/T)	M1E	Read Live Data	
XR-V	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
XR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
XR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
XR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
XR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
XR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
XR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
XR-V	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
XR-V	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
XR-V	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
XR-V	/	Automatic shift control system (A/T)	M3B	Read codes	
XR-V	/	Automatic shift control system (A/T)	M3B	Erase Codes	
XR-V	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
XR-V	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
XR-V	/	Automatic shift control system (A/T)	M3B	Read Live Data	
XR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
XR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
XR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
XR-V	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
XR-V	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
XR-V	/	Automatic shift control system (A/T)	M3C	Read codes	
XR-V	/	Automatic shift control system (A/T)	M3C	Erase Codes	
XR-V	/	Automatic shift control system (A/T)	M81	Read ECU Information	
XR-V	/	Automatic shift control system (A/T)	M81	Read codes	
XR-V	/	Automatic shift control system (A/T)	M81	Erase Codes	
XR-V	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
XR-V	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
XR-V	/	Automatic shift control system (A/T)	M81	Read Live Data	
XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B

XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
XR-V	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
XR-V	/	Automatic shift control system (A/T)	M82	Read ECU Information	
XR-V	/	Automatic shift control system (A/T)	M82	Read codes	
XR-V	/	Automatic shift control system (A/T)	M82	Erase Codes	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read ECU Information	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read codes	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Erase Codes	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Freeze Frame Data	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Read Live Data	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	Throttle Opening Angle Test
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 1
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BRAKE BOOSTER 2
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	LIGHT CHECK
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M61		Function Test	BUZZER CHECK
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read ECU Information	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read codes	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Erase Codes	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Freeze Frame Data	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Read Live Data	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Adjustment	RADAR AIMING
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	BRAKE ACTUATOR 3
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ACC relay malfunction.
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INDICATOR LIGHT
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	INFORMATION DISPLAY
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M62		Function Test	ALARM BUZZER
XR-V	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
XR-V	/	Active Engine Control Support System (ACM)	M06	Read codes	
XR-V	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
XR-V	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
XR-V	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
XR-V	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
XR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
XR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
XR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
XR-V	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
XR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
XR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
XR-V	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
XR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Read ECU Information	
XR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Read codes	
XR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Erase Codes	
XR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Read Freeze Frame Data	
XR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Read Live Data	
XR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Function Test	Damper Force Operation Test
XR-V	/	Active / Automatic Shock Absorber Control System (A MOD		Adjustment	Damper Stroke Calibration
XR-V	/	Active / Automatic Shock Absorber Control System (A M1A		Read codes	
XR-V	/	Active / Automatic Shock Absorber Control System (A M1A		Erase Codes	
XR-V	/	Active / Automatic Shock Absorber Control System (A M1A		Read Live Data	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read codes	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Erase Codes	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Freeze Frame Data	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Read Live Data	
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	ACC Brake (Brake Actuator)
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	CMBS Brake
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Brake Light (ACC Relay)
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Indicator Light
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Information Display
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Function Test	Alarm Test
XR-V	/	Adaptive Cruise (Constant Speed) Control System (AC M2B		Adjustment	Radar aiming
XR-V	/	Transmission Control System (AT)	M18	Read ECU Information	
XR-V	/	Transmission Control System (AT)	M18	Read codes	
XR-V	/	Transmission Control System (AT)	M18	Erase Codes	
XR-V	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
XR-V	/	Transmission Control System (AT)	M18	Read Live Data	
XR-V	/	Transmission Control System (AT)	M18	Adjustment	
XR-V	/	Active Torque Converter Control System (ATTTS)	M0E	Read ECU Information	
XR-V	/	Active Torque Converter Control System (ATTTS)	M0E	Read codes	
XR-V	/	Active Torque Converter Control System (ATTTS)	M0E	Erase Codes	
XR-V	/	Active Torque Converter Control System (ATTTS)	M0E	Read Freeze Frame Data	
XR-V	/	Active Torque Converter Control System (ATTTS)	M0E	Read Live Data	
XR-V	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ATTTS TEST SHORT TIME MODE
XR-V	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	STEERING ANGLE
XR-V	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
XR-V	/	Active Torque Converter Control System (ATTTS)	M0E	Miscellaneous Test	ALL SENSORS
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year

XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
XR-V	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
XR-V	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
XR-V	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
XR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
XR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
XR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
XR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
XR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
XR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
XR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
XR-V	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
XR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
XR-V	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
XR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
XR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
XR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
XR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
XR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
XR-V	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
XR-V	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
XR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
XR-V	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
XR-V	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
XR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
XR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	



XR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
XR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
XR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
XR-V	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
XR-V	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
XR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
XR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
XR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
XR-V	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
XR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
XR-V	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
XR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
XR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
XR-V	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
XR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
XR-V	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
XR-V	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
XR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Security	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
XR-V	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
XR-V	/	BODY ELECTRICAL/Security	MFF	History Data	
XR-V	/	BODY ELECTRICAL/Security	MFF	History Clear	
XR-V	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
XR-V	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
XR-V	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
XR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
XR-V	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
XR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	

XR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
XR-V	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
XR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
XR-V	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
XR-V	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
XR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
XR-V	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
XR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
XR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
XR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
XR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
XR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
XR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
XR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
XR-V	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
XR-V	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
XR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
XR-V	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
XR-V	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
XR-V	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
XR-V	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
XR-V	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
XR-V	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
XR-V	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
XR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read ECU Information	
XR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read codes	
XR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Erase Codes	
XR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Freeze Frame Data	
XR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Read Live Data	
XR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	CMBS (CMS) ACTIVATION HISTORY	
XR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	RADAR AIMING
XR-V	/	Collision Mitigation Brake Control System (CMBS/CM <sup>+</sup> M2E)	M2E	Miscellaneous Test	CMBS Brake
XR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read ECU Information	
XR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read codes	
XR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Erase Codes	
XR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Freeze Frame Data	
XR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Read Live Data	
XR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	ECMPCM Reset	
XR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Lock Solenoid Test
XR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Shift Solenoid Tests
XR-V	/	Promise Automatic Transmission Control System (CVT M1B)	M1B	Miscellaneous Test	Electrical Oil Pump Activation
XR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read ECU Information	
XR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read codes	
XR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Erase Codes	
XR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Freeze Frame Data	
XR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Read Live Data	
XR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	ECMPCM Reset	
XR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Inhibitor Solenoid
XR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid A (LF)
XR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	CAS Solenoid B (RF)
XR-V	/	Promise Automatic Transmission Control System (CVT M33)	M33	Miscellaneous Test	Start Clutch Feedback Learn
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read ECU Information	
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read codes	
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Erase Codes	
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Freeze Frame Data	
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Read Live Data	
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	ECMPCM Reset	
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Inhibitor Solenoid
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid A (LF)
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	CAS Solenoid B (RF)
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Start Clutch Feedback Learn
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve A
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve B
XR-V	/	Promise Automatic Transmission Control System (CVT M8D)	M8D	Miscellaneous Test	Shift solenoid Valve O/P
XR-V	/	DBW	M34	Read ECU Information	
XR-V	/	DBW	M34	Read codes	
XR-V	/	DBW	M34	Erase Codes	
XR-V	/	DBW	M34	Read Freeze Frame Data	
XR-V	/	DBW	M34	Read Live Data	
XR-V	/	DBW	M34	Inspection	Idle Speed Adjust
XR-V	/	DBW	M34	Inspection	Throttle Test
XR-V	/	DBW	M34	ECM Reset	
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	

XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
XR-V	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
XR-V	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
XR-V	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
XR-V	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
XR-V	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
XR-V	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
XR-V	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
XR-V	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
XR-V	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
XR-V	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Read codes	
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
XR-V	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
XR-V	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
XR-V	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
XR-V	/	Capacitor Control System (EDLC)	M12	Read codes	
XR-V	/	Capacitor Control System (EDLC)	M12	Erase Codes	
XR-V	/	Capacitor Control System (EDLC)	M12	Read Live Data	
XR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
XR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
XR-V	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
XR-V	/	Electronic Brake Control System (EPB)	M1F	Read codes	
XR-V	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
XR-V	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
XR-V	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
XR-V	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
XR-V	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
XR-V	/	Electronic Brake Control System (EPB)	M3E	Read codes	
XR-V	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
XR-V	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
XR-V	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
XR-V	/	Electric Powertrain / IMA	M66	Read ECU Information	
XR-V	/	Electric Powertrain / IMA	M66	Read codes	
XR-V	/	Electric Powertrain / IMA	M66	Erase Codes	
XR-V	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
XR-V	/	Electric Powertrain / IMA	M66	Read Live Data	
XR-V	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
XR-V	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
XR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
XR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
XR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
XR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
XR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
XR-V	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
XR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
XR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
XR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
XR-V	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
XR-V	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
XR-V	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
XR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
XR-V	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
XR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
XR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
XR-V	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
XR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
XR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
XR-V	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
XR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
XR-V	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	

XR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
XR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
XR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
XR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
XR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
XR-V	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
XR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
XR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
XR-V	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
XR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
XR-V	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
XR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
XR-V	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
XR-V	/	New energy battery (EV)	M44	Read ECU Information	
XR-V	/	New energy battery (EV)	M44	Read codes	
XR-V	/	New energy battery (EV)	M44	Erase Codes	
XR-V	/	New energy battery (EV)	M44	Read Freeze Frame Data	
XR-V	/	New energy battery (EV)	M44	Read Live Data	
XR-V	/	New energy battery (EV)	M44	Inspection	
XR-V	/	New energy battery (EV)	M44	Adjustment	
XR-V	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
XR-V	/	Electronic vacuum pump (EVPS)	M21	Read codes	
XR-V	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
XR-V	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
XR-V	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
XR-V	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
XR-V	/	Electronic vacuum pump (EVPS)	M22	Read codes	
XR-V	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
XR-V	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
XR-V	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
XR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
XR-V	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
XR-V	/	FCW LDW	M4E	Read ECU Information	
XR-V	/	FCW LDW	M4E	Read codes	
XR-V	/	FCW LDW	M4E	Erase Codes	
XR-V	/	FCW LDW	M4E	Read Live Data	
XR-V	/	FCW LDW	M4E	Function Test	FCW Drive
XR-V	/	FCW LDW	M4E	Function Test	Left side lane departure warning
XR-V	/	FCW LDW	M4E	Function Test	Right side lane departure warning
XR-V	/	FCW LDW	M4E	Function Test	Indicator Drive
XR-V	/	FCW LDW	M4E	Adjustment	
XR-V	/	Instrument Display System (GAUGE)	M2C	Read codes	
XR-V	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
XR-V	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
XR-V	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
XR-V	/	Anti-lock brake control system (ABS)	M01	Read codes	
XR-V	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
XR-V	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
XR-V	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
XR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
XR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
XR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
XR-V	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
XR-V	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
XR-V	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
XR-V	/	Anti-lock brake control system (ABS)	M02	Read codes	
XR-V	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
XR-V	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
XR-V	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
XR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
XR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
XR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
XR-V	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
XR-V	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
XR-V	/	Anti-lock brake control system (ABS)	M03	Read codes	
XR-V	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
XR-V	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
XR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
XR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
XR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
XR-V	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
XR-V	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
XR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
XR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
XR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
XR-V	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
XR-V	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
XR-V	/	Anti-lock brake control system (ABS)	M19	Read codes	
XR-V	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
XR-V	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
XR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid

XR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
XR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
XR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
XR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
XR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
XR-V	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
XR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
XR-V	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
XR-V	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
XR-V	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
XR-V	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
XR-V	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
XR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
XR-V	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
XR-V	/	Intelligent Parking Control System (SPS)	M9B	Customize	
XR-V	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
XR-V	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
XR-V	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
XR-V	/	Hydraulic booster control system (HBS)	M5F	Read codes	
XR-V	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
XR-V	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
XR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
XR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
XR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
XR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
XR-V	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
XR-V	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
XR-V	/	IMA	M63	Read ECU Information	
XR-V	/	IMA	M63	Read codes	
XR-V	/	IMA	M63	Erase Codes	
XR-V	/	IMA	M63	Read Freeze Frame Data	
XR-V	/	IMA	M63	Read Live Data	
XR-V	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
XR-V	/	IMA	M63	Adjustment	SOC PRESET
XR-V	/	IMA	M64	Read ECU Information	
XR-V	/	IMA	M64	Read codes	
XR-V	/	IMA	M64	Erase Codes	
XR-V	/	IMA	M64	Read Freeze Frame Data	
XR-V	/	IMA	M64	Read Live Data	
XR-V	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
XR-V	/	IMA	M64	Adjustment	SOC PRESET
XR-V	/	IMA	M65	Read ECU Information	
XR-V	/	IMA	M65	Read codes	
XR-V	/	IMA	M65	Erase Codes	
XR-V	/	IMA	M65	Read Freeze Frame Data	
XR-V	/	IMA	M65	Read Live Data	
XR-V	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
XR-V	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
XR-V	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
XR-V	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
XR-V	/	Intake Sounder Control System (ISC)	M6D	Read codes	
XR-V	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
XR-V	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
XR-V	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
XR-V	/	Night Vision System (INVS)	0XB1	Read ECU Information	
XR-V	/	Night Vision System (INVS)	0XB1	Read codes	
XR-V	/	Night Vision System (INVS)	0XB1	Erase Codes	
XR-V	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
XR-V	/	Night Vision System (INVS)	0XB1	Read Live Data	
XR-V	/	Night Vision System (INVS)	0XB1	Adjustment	
XR-V	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
XR-V	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
XR-V	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
XR-V	/	i-SHIFT	0XB0	Read ECU Information	
XR-V	/	i-SHIFT	0XB0	Read codes	
XR-V	/	i-SHIFT	0XB0	Erase Codes	
XR-V	/	i-SHIFT	0XB0	Read Live Data	
XR-V	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
XR-V	/	Keyless Entry Control System (KAS)	M99	Read codes	
XR-V	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
XR-V	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
XR-V	/	Keyless Entry Control System (KAS)	M99	Self Check	
XR-V	/	Keyless Entry Control System (KAS)	M99	History Data	
XR-V	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCED Terminal) Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving

XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
XR-V	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
XR-V	/	Keyless Entry Control System (KAS)	M99	Registration	
XR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
XR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
XR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
XR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
XR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
XR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
XR-V	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
XR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
XR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
XR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
XR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
XR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
XR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
XR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
XR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
XR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
XR-V	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
XR-V	/	Management ECU Module (ME)	M74	Read ECU Information	
XR-V	/	Management ECU Module (ME)	M74	Read codes	
XR-V	/	Management ECU Module (ME)	M74	Erase Codes	
XR-V	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
XR-V	/	Management ECU Module (ME)	M74	Read Live Data	
XR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
XR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
XR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
XR-V	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
XR-V	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
XR-V	/	Multi-view camera system (MVCS)	M7A	Read codes	
XR-V	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
XR-V	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
XR-V	/	Multi-view camera system (MVCS)	M7A	Customization	
XR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
XR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
XR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
XR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
XR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
XR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
XR-V	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
XR-V	/	Power Control Unit (PCU)	M83	Read ECU Information	
XR-V	/	Power Control Unit (PCU)	M83	Read codes	
XR-V	/	Power Control Unit (PCU)	M83	Erase Codes	
XR-V	/	Power Control Unit (PCU)	M83	Read Live Data	
XR-V	/	Power Control Unit (PCU)	M83	Self Check	
XR-V	/	Power Control Unit (PCU)	M83	History Data	
XR-V	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
XR-V	/	Engine Control System (PGM-FI)	M23	Read codes	
XR-V	/	Engine Control System (PGM-FI)	M23	Erase Codes	
XR-V	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
XR-V	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
XR-V	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
XR-V	/	Engine Control System (PGM-FI)	M23	Read Live Data	
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN

XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
XR-V	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
XR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
XR-V	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
XR-V	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
XR-V	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
XR-V	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
XR-V	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
XR-V	/	Engine Control System (PGM-FI)	M50	Read codes	
XR-V	/	Engine Control System (PGM-FI)	M50	Erase Codes	
XR-V	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
XR-V	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
XR-V	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
XR-V	/	Engine Control System (PGM-FI)	M50	Read Live Data	
XR-V	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
XR-V	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
XR-V	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
XR-V	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
XR-V	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
XR-V	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
XR-V	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
XR-V	/	Engine Control System (PGM-FI)	M86	Read codes	
XR-V	/	Engine Control System (PGM-FI)	M86	Erase Codes	
XR-V	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
XR-V	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
XR-V	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
XR-V	/	Engine Control System (PGM-FI)	M86	Read Live Data	
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
XR-V	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
XR-V	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
XR-V	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
XR-V	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
XR-V	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
XR-V	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
XR-V	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
XR-V	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
XR-V	/	PSR	M27	Read ECU Information	
XR-V	/	PSR	M27	Read codes	
XR-V	/	PSR	M27	Erase Codes	
XR-V	/	PSR	M27	Read Live Data	
XR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
XR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
XR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
XR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
XR-V	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
XR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
XR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
XR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
XR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
XR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
XR-V	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
XR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
XR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
XR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
XR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
XR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
XR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
XR-V	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
XR-V	/	Remote starter (RS)	M90	System Check	
XR-V	/	Remote starter (RS)	M90	HISTORY	
XR-V	/	Remote starter (RS)	M90	Registration	
XR-V	/	Seat load cell (SWS)	M6F	Read ECU Information	
XR-V	/	Seat load cell (SWS)	M6F	Read codes	
XR-V	/	Seat load cell (SWS)	M6F	Erase Codes	
XR-V	/	Seat load cell (SWS)	M6F	Read Live Data	
XR-V	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK

XR-V	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
XR-V	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
XR-V	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
XR-V	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
XR-V	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
XR-V	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
XR-V	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
XR-V	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
XR-V	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
XR-V	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
XR-V	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
XR-V	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
XR-V	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
XR-V	/	Groove track drive unit (SLOT ECU)	M98	History Data	
XR-V	/	Groove track drive unit (SLOT ECU)	M98	System Information	
XR-V	/	Airbag Control System (SRS)	M9F	Read ECU Information	
XR-V	/	Airbag Control System (SRS)	M9F	Read codes	
XR-V	/	Airbag Control System (SRS)	M9F	Erase Codes	
XR-V	/	Airbag Control System (SRS)	M9F	Read Live Data	
XR-V	/	Airbag Control System (SRS)	MA0	Read ECU Information	
XR-V	/	Airbag Control System (SRS)	MA0	Read codes	
XR-V	/	Airbag Control System (SRS)	MA0	Erase Codes	
XR-V	/	Airbag Control System (SRS)	MA0	Read Live Data	
XR-V	/	Airbag Control System (SRS)	MA1	Read ECU Information	
XR-V	/	Airbag Control System (SRS)	MA1	Read codes	
XR-V	/	Airbag Control System (SRS)	MA1	Erase Codes	
XR-V	/	Airbag Control System (SRS)	MA1	Read Live Data	
XR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
XR-V	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
XR-V	/	Airbag Control System (SRS)	M2A	Read codes	
XR-V	/	Airbag Control System (SRS)	M2A	Erase Codes	
XR-V	/	Airbag Control System (SRS)	M2A	Read Live Data	
XR-V	/	Airbag Control System (SRS)	M9C	Read ECU Information	
XR-V	/	Airbag Control System (SRS)	M9C	Read codes	
XR-V	/	Airbag Control System (SRS)	M9C	Erase Codes	
XR-V	/	Airbag Control System (SRS)	M9C	Read Live Data	
XR-V	/	Airbag Control System (SRS)	M9D	Read ECU Information	
XR-V	/	Airbag Control System (SRS)	M9D	Read codes	
XR-V	/	Airbag Control System (SRS)	M9D	Erase Codes	
XR-V	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
XR-V	/	Airbag Control System (SRS)	M9D	Read Live Data	
XR-V	/	Airbag Control System (SRS)	M9D	Parameter Information	
XR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
XR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
XR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
XR-V	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
XR-V	/	Airbag Control System (SRS)	M9D	Function Test	
XR-V	/	Airbag Control System (SRS)	M9D	System Information	
XR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
XR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
XR-V	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
XR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
XR-V	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
XR-V	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
XR-V	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
XR-V	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
XR-V	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
XR-V	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
XR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
XR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
XR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
XR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
XR-V	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
XR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
XR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
XR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
XR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
XR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
XR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
XR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	



XR-V	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
XR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
XR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
XR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
XR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
XR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
XR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
XR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
XR-V	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
Z	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
Z	/	Four-wheel steering control system (4WS)	M52	Read codes	
Z	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
Z	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
Z	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
Z	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
Z	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
Z	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
Z	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
Z	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
Z	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
Z	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
Z	/	Automatic shift control system (A/T)	M1E	Read codes	
Z	/	Automatic shift control system (A/T)	M1E	Erase Codes	
Z	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
Z	/	Automatic shift control system (A/T)	M1E	Read Live Data	
Z	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Z	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
Z	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
Z	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
Z	/	Automatic shift control system (A/T)	M3B	Read codes	
Z	/	Automatic shift control system (A/T)	M3B	Erase Codes	
Z	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
Z	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
Z	/	Automatic shift control system (A/T)	M3B	Read Live Data	
Z	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
Z	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
Z	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
Z	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
Z	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
Z	/	Automatic shift control system (A/T)	M3C	Read codes	
Z	/	Automatic shift control system (A/T)	M3C	Erase Codes	
Z	/	Automatic shift control system (A/T)	M81	Read ECU Information	
Z	/	Automatic shift control system (A/T)	M81	Read codes	
Z	/	Automatic shift control system (A/T)	M81	Erase Codes	
Z	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
Z	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
Z	/	Automatic shift control system (A/T)	M81	Read Live Data	
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Z	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
Z	/	Automatic shift control system (A/T)	M82	Read ECU Information	
Z	/	Automatic shift control system (A/T)	M82	Read codes	
Z	/	Automatic shift control system (A/T)	M82	Erase Codes	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read ECU Information	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read codes	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Erase Codes	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Freeze Frame Data	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Read Live Data	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	Throttle Opening Angle Test
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 1
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BRAKE BOOSTER 2
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	LIGHT CHECK
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M61)	M61	Function Test	BUZZER CHECK
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read ECU Information	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read codes	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Erase Codes	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Freeze Frame Data	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Read Live Data	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Adjustment	RADAR AIMING
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	BRAKE ACTUATOR 3
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ACC relay malfunction.
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INDICATOR LIGHT
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	INFORMATION DISPLAY
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M62)	M62	Function Test	ALARM BUZZER
Z	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
Z	/	Active Engine Control Support System (ACM)	M06	Read codes	
Z	/	Active Engine Control Support System (ACM)	M06	Erase Codes	

Z	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
Z	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
Z	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
Z	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
Z	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
Z	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
Z	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
Z	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
Z	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
Z	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
Z	/	Active / Automatic Shock Absorber Control System (A MOD)		Read ECU Information	
Z	/	Active / Automatic Shock Absorber Control System (A MOD)		Read codes	
Z	/	Active / Automatic Shock Absorber Control System (A MOD)		Erase Codes	
Z	/	Active / Automatic Shock Absorber Control System (A MOD)		Read Freeze Frame Data	
Z	/	Active / Automatic Shock Absorber Control System (A MOD)		Read Live Data	
Z	/	Active / Automatic Shock Absorber Control System (A MOD)		Function Test	Damper Force Operation Test
Z	/	Active / Automatic Shock Absorber Control System (A MOD)		Adjustment	Damper Stroke Calibration
Z	/	Active / Automatic Shock Absorber Control System (A M1A)		Read codes	
Z	/	Active / Automatic Shock Absorber Control System (A M1A)		Erase Codes	
Z	/	Active / Automatic Shock Absorber Control System (A M1A)		Read Live Data	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Read codes	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Erase Codes	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Read Freeze Frame Data	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Read Live Data	
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	ACC Brake (Brake Actuator)
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	CMBS Brake
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Brake Light (ACC Relay)
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Indicator Light
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Information Display
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Function Test	Alarm Test
Z	/	Adaptive Cruise (Constant Speed) Control System (AC M2B)		Adjustment	Radar aiming
Z	/	Transmission Control System (AT)	M18	Read ECU Information	
Z	/	Transmission Control System (AT)	M18	Read codes	
Z	/	Transmission Control System (AT)	M18	Erase Codes	
Z	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
Z	/	Transmission Control System (AT)	M18	Read Live Data	
Z	/	Transmission Control System (AT)	M18	Adjustment	
Z	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
Z	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
Z	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
Z	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
Z	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
Z	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
Z	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
Z	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
Z	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
Z	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
Z	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
Z	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
Z	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
Z	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
Z	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
Z	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
Z	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
Z	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
Z	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
Z	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
Z	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
Z	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door

Z	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
Z	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
Z	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
Z	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
Z	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
Z	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
Z	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
Z	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
Z	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
Z	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
Z	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
Z	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
Z	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
Z	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
Z	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
Z	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
Z	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
Z	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
Z	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
Z	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
Z	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
Z	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
Z	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
Z	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
Z	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
Z	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
Z	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
Z	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
Z	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator

Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
Z	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
Z	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
Z	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
Z	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
Z	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
Z	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
Z	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
Z	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
Z	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
Z	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
Z	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
Z	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
Z	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
Z	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
Z	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side
Z	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
Z	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
Z	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
Z	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
Z	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Security	MFF	Read codes	
Z	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
Z	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
Z	/	BODY ELECTRICAL/Security	MFF	History Data	
Z	/	BODY ELECTRICAL/Security	MFF	History Clear	
Z	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
Z	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
Z	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
Z	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
Z	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Z	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
Z	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Z	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
Z	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
Z	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
Z	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
Z	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
Z	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
Z	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
Z	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
Z	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
Z	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
Z	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
Z	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
Z	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	

Z	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
Z	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
Z	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
Z	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
Z	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
Z	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
Z	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>†</sup> M2E		Read ECU Information	
Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>†</sup> M2E		Read codes	
Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>†</sup> M2E		Erase Codes	
Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>†</sup> M2E		Read Freeze Frame Data	
Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>†</sup> M2E		Read Live Data	
Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>†</sup> M2E		CMBS (CMS) ACTIVATION HISTORY	
Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>†</sup> M2E		Miscellaneous Test	RADAR AIMING
Z	/	Collision Mitigation Brake Control System (CMBS/CM <sup>†</sup> M2E		Miscellaneous Test	CMBS Brake
Z	/	Promise Automatic Transmission Control System (CVT M1B		Read ECU Information	
Z	/	Promise Automatic Transmission Control System (CVT M1B		Read codes	
Z	/	Promise Automatic Transmission Control System (CVT M1B		Erase Codes	
Z	/	Promise Automatic Transmission Control System (CVT M1B		Read Freeze Frame Data	
Z	/	Promise Automatic Transmission Control System (CVT M1B		Read Live Data	
Z	/	Promise Automatic Transmission Control System (CVT M1B		ECMPCM Reset	
Z	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Lock Solenoid Test
Z	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Shift Solenoid Tests
Z	/	Promise Automatic Transmission Control System (CVT M1B		Miscellaneous Test	Electrical Oil Pump Activation
Z	/	Promise Automatic Transmission Control System (CVT M33		Read ECU Information	
Z	/	Promise Automatic Transmission Control System (CVT M33		Read codes	
Z	/	Promise Automatic Transmission Control System (CVT M33		Erase Codes	
Z	/	Promise Automatic Transmission Control System (CVT M33		Read Freeze Frame Data	
Z	/	Promise Automatic Transmission Control System (CVT M33		Read Live Data	
Z	/	Promise Automatic Transmission Control System (CVT M33		ECMPCM Reset	
Z	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Inhibitor Solenoid
Z	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid A (LF)
Z	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	CAS Solenoid B (RF)
Z	/	Promise Automatic Transmission Control System (CVT M33		Miscellaneous Test	Start Clutch Feedback Learn
Z	/	Promise Automatic Transmission Control System (CVT M8D		Read ECU Information	
Z	/	Promise Automatic Transmission Control System (CVT M8D		Read codes	
Z	/	Promise Automatic Transmission Control System (CVT M8D		Erase Codes	
Z	/	Promise Automatic Transmission Control System (CVT M8D		Read Freeze Frame Data	
Z	/	Promise Automatic Transmission Control System (CVT M8D		Read Live Data	
Z	/	Promise Automatic Transmission Control System (CVT M8D		ECMPCM Reset	
Z	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Inhibitor Solenoid
Z	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid A (LF)
Z	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	CAS Solenoid B (RF)
Z	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Start Clutch Feedback Learn
Z	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve A
Z	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve B
Z	/	Promise Automatic Transmission Control System (CVT M8D		Miscellaneous Test	Shift solenoid Valve O/P
Z	/	DBW	M34	Read ECU Information	
Z	/	DBW	M34	Read codes	
Z	/	DBW	M34	Erase Codes	
Z	/	DBW	M34	Read Freeze Frame Data	
Z	/	DBW	M34	Read Live Data	
Z	/	DBW	M34	Inspection	Idle Speed Adjust
Z	/	DBW	M34	Inspection	Throttle Test
Z	/	DBW	M34	ECM Reset	
Z	/	Diesel Engine Control System (DIESEL)	M1D	Read ECU Information	
Z	/	Diesel Engine Control System (DIESEL)	M1D	Read codes	
Z	/	Diesel Engine Control System (DIESEL)	M1D	Erase Codes	
Z	/	Diesel Engine Control System (DIESEL)	M1D	Read Freeze Frame Data	
Z	/	Diesel Engine Control System (DIESEL)	M1D	ECM/PCM Reset	
Z	/	Diesel Engine Control System (DIESEL)	M1D	Read Live Data	
Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Injector Test
Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	All Injectors Off
Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR TEST
Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	IMRC Test
Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Glow On/Off
Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	ACG On/Off
Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	A/C Clutch On/Off
Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Fuel Heater On/ Off
Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Radiator Fan Relay Test
Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	EGR Cooler Bypass Valve Test
Z	/	Diesel Engine Control System (DIESEL)	M1D	Inspection	Intake Shutter Test
Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Data Status
Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	IQA Write Data
Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Regeneration
Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	Reset 'Calculated PM Value'
Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	MAF Sensor Learning Clear
Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	A/F Sensor Learning Clear
Z	/	Diesel Engine Control System (DIESEL)	M1D	Adjustment	ISV Forced Learning
Z	/	Diesel Engine Control System (DIESEL)	M1D	VIN CHECK	
Z	/	Diesel Engine Control System (DIESEL)	M1D	Replace ECM/PCM	
Z	/	Diesel Engine Control System (DIESEL)	M37	Read ECU Information	
Z	/	Diesel Engine Control System (DIESEL)	M37	Read codes	
Z	/	Diesel Engine Control System (DIESEL)	M37	Erase Codes	
Z	/	Diesel Engine Control System (DIESEL)	M37	Read Freeze Frame Data	
Z	/	Diesel Engine Control System (DIESEL)	M37	ECM/PCM Reset	
Z	/	Diesel Engine Control System (DIESEL)	M37	Read Live Data	
Z	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Injector Test
Z	/	Diesel Engine Control System (DIESEL)	M37	Inspection	Compression Test
Z	/	Diesel Engine Control System (DIESEL)	M37	VIN CHECK	
Z	/	Diesel Engine Control System (DIESEL)	M85	Read ECU Information	
Z	/	Diesel Engine Control System (DIESEL)	M85	Read codes	

Z	/	Diesel Engine Control System (DIESEL)	M85	Erase Codes	
Z	/	Diesel Engine Control System (DIESEL)	M85	Read Freeze Frame Data	
Z	/	Diesel Engine Control System (DIESEL)	M85	ECM/PCM Reset	
Z	/	Diesel Engine Control System (DIESEL)	M85	Read Live Data	
Z	/	Diesel Engine Control System (DIESEL)	M85	Inspection	All Injectors Off
Z	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Rail Pressure Control Valve Test
Z	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Glow On/Off
Z	/	Diesel Engine Control System (DIESEL)	M85	Inspection	ACG On/Off
Z	/	Diesel Engine Control System (DIESEL)	M85	Inspection	A/C Clutch On/Off
Z	/	Diesel Engine Control System (DIESEL)	M85	Inspection	Fuel Heater On/ Off
Z	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Data Status
Z	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	IQA Write Data
Z	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
Z	/	Diesel Engine Control System (DIESEL)	M85	Adjustment	Reset 'Calculated PM Value'
Z	/	Diesel Engine Control System (DIESEL)	M85	VIN CHECK	
Z	/	Diesel Engine Control System (DIESEL)	M85	Replace ECM/PCM	
Z	/	Capacitor Control System (EDLC)	M12	Read codes	
Z	/	Capacitor Control System (EDLC)	M12	Erase Codes	
Z	/	Capacitor Control System (EDLC)	M12	Read Live Data	
Z	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge and Charge Test
Z	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Discharge for Removal or Disposal
Z	/	Capacitor Control System (EDLC)	M12	Inspection	EDLC Module Usage History Clear
Z	/	Electronic Brake Control System (EPB)	M1F	Read codes	
Z	/	Electronic Brake Control System (EPB)	M1F	Erase Codes	
Z	/	Electronic Brake Control System (EPB)	M1F	Read Live Data	
Z	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Sensor Calibration
Z	/	Electronic Brake Control System (EPB)	M1F	Adjustment	Brake Pad Maintenance Mode
Z	/	Electronic Brake Control System (EPB)	M3E	Read ECU Information	
Z	/	Electronic Brake Control System (EPB)	M3E	Read codes	
Z	/	Electronic Brake Control System (EPB)	M3E	Erase Codes	
Z	/	Electronic Brake Control System (EPB)	M3E	Read Live Data	
Z	/	Electronic Brake Control System (EPB)	M3E	Adjustment	Sensor Calibration
Z	/	Electric Powertrain / IMA	M66	Read ECU Information	
Z	/	Electric Powertrain / IMA	M66	Read codes	
Z	/	Electric Powertrain / IMA	M66	Erase Codes	
Z	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
Z	/	Electric Powertrain / IMA	M66	Read Live Data	
Z	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
Z	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
Z	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
Z	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
Z	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
Z	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
Z	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
Z	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
Z	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
Z	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
Z	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
Z	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
Z	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
Z	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
Z	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
Z	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
Z	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
Z	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
Z	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
Z	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
Z	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
Z	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
Z	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
Z	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
Z	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
Z	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
Z	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
Z	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
Z	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
Z	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
Z	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
Z	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
Z	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
Z	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
Z	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
Z	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
Z	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
Z	/	New energy battery (EV)	M44	Read ECU Information	
Z	/	New energy battery (EV)	M44	Read codes	
Z	/	New energy battery (EV)	M44	Erase Codes	
Z	/	New energy battery (EV)	M44	Read Freeze Frame Data	
Z	/	New energy battery (EV)	M44	Read Live Data	
Z	/	New energy battery (EV)	M44	Inspection	
Z	/	New energy battery (EV)	M44	Adjustment	
Z	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
Z	/	Electronic vacuum pump (EVPS)	M21	Read codes	
Z	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
Z	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
Z	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
Z	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
Z	/	Electronic vacuum pump (EVPS)	M22	Read codes	
Z	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
Z	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
Z	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
Z	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
Z	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1

Z	/	FCW LDW	M4E	Read ECU Information	
Z	/	FCW LDW	M4E	Read codes	
Z	/	FCW LDW	M4E	Erase Codes	
Z	/	FCW LDW	M4E	Read Live Data	
Z	/	FCW LDW	M4E	Function Test	FCW Drive
Z	/	FCW LDW	M4E	Function Test	Left side lane departure warning
Z	/	FCW LDW	M4E	Function Test	Right side lane departure warning
Z	/	FCW LDW	M4E	Function Test	Indicator Drive
Z	/	FCW LDW	M4E	Adjustment	
Z	/	Instrument Display System (GAUGE)	M2C	Read codes	
Z	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
Z	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
Z	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
Z	/	Anti-lock brake control system (ABS)	M01	Read codes	
Z	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
Z	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
Z	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
Z	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
Z	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
Z	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
Z	/	Anti-lock brake control system (ABS)	M02	Read codes	
Z	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
Z	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
Z	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid
Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
Z	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
Z	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
Z	/	Anti-lock brake control system (ABS)	M03	Read codes	
Z	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
Z	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
Z	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
Z	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
Z	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
Z	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
Z	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
Z	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
Z	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
Z	/	Anti-lock brake control system (ABS)	M19	Read codes	
Z	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
Z	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
Z	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
Z	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
Z	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
Z	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
Z	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
Z	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
Z	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
Z	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
Z	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
Z	/	Intelligent Parking Control System (SPS)	M9B	Customize	
Z	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
Z	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
Z	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
Z	/	Hydraulic booster control system (HBS)	M5F	Read codes	
Z	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
Z	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
Z	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
Z	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
Z	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
Z	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
Z	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
Z	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
Z	/	IMA	M63	Read ECU Information	
Z	/	IMA	M63	Read codes	
Z	/	IMA	M63	Erase Codes	

Z	/	IMA	M63	Read Freeze Frame Data	
Z	/	IMA	M63	Read Live Data	
Z	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
Z	/	IMA	M63	Adjustment	SOC PRESET
Z	/	IMA	M64	Read ECU Information	
Z	/	IMA	M64	Read codes	
Z	/	IMA	M64	Erase Codes	
Z	/	IMA	M64	Read Freeze Frame Data	
Z	/	IMA	M64	Read Live Data	
Z	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
Z	/	IMA	M64	Adjustment	SOC PRESET
Z	/	IMA	M65	Read ECU Information	
Z	/	IMA	M65	Read codes	
Z	/	IMA	M65	Erase Codes	
Z	/	IMA	M65	Read Freeze Frame Data	
Z	/	IMA	M65	Read Live Data	
Z	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
Z	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
Z	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
Z	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
Z	/	Intake Sounder Control System (ISC)	M6D	Read codes	
Z	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
Z	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
Z	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
Z	/	Night Vision System (INVS)	0XB1	Read ECU Information	
Z	/	Night Vision System (INVS)	0XB1	Read codes	
Z	/	Night Vision System (INVS)	0XB1	Erase Codes	
Z	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
Z	/	Night Vision System (INVS)	0XB1	Read Live Data	
Z	/	Night Vision System (INVS)	0XB1	Adjustment	
Z	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
Z	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test
Z	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
Z	/	i-SHIFT	0XB0	Read ECU Information	
Z	/	i-SHIFT	0XB0	Read codes	
Z	/	i-SHIFT	0XB0	Erase Codes	
Z	/	i-SHIFT	0XB0	Read Live Data	
Z	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
Z	/	Keyless Entry Control System (KAS)	M99	Read codes	
Z	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
Z	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
Z	/	Keyless Entry Control System (KAS)	M99	Self Check	
Z	/	Keyless Entry Control System (KAS)	M99	History Data	
Z	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOCD Terminal) Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
Z	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving



Z	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
Z	/	Keyless Entry Control System (KAS)	M99	Registration	
Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
Z	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
Z	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
Z	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
Z	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
Z	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
Z	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
Z	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
Z	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
Z	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
Z	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
Z	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
Z	/	Management ECU Module (ME)	M74	Read ECU Information	
Z	/	Management ECU Module (ME)	M74	Read codes	
Z	/	Management ECU Module (ME)	M74	Erase Codes	
Z	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
Z	/	Management ECU Module (ME)	M74	Read Live Data	
Z	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
Z	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
Z	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
Z	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
Z	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
Z	/	Multi-view camera system (MVCS)	M7A	Read codes	
Z	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
Z	/	Multi-view camera system (MVCS)	M7A	Read Live Data	
Z	/	Multi-view camera system (MVCS)	M7A	Customization	
Z	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
Z	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
Z	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
Z	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
Z	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
Z	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
Z	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
Z	/	Power Control Unit (PCU)	M83	Read ECU Information	
Z	/	Power Control Unit (PCU)	M83	Read codes	
Z	/	Power Control Unit (PCU)	M83	Erase Codes	
Z	/	Power Control Unit (PCU)	M83	Read Live Data	
Z	/	Power Control Unit (PCU)	M83	Self Check	
Z	/	Power Control Unit (PCU)	M83	History Data	
Z	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
Z	/	Engine Control System (PGM-FI)	M23	Read codes	
Z	/	Engine Control System (PGM-FI)	M23	Erase Codes	
Z	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
Z	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
Z	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
Z	/	Engine Control System (PGM-FI)	M23	Read Live Data	
Z	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
Z	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
Z	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
Z	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
Z	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
Z	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
Z	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
Z	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
Z	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
Z	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
Z	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
Z	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
Z	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
Z	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
Z	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
Z	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
Z	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
Z	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
Z	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
Z	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
Z	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
Z	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
Z	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
Z	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
Z	/	Engine Control System (PGM-FI)	M50	Read codes	
Z	/	Engine Control System (PGM-FI)	M50	Erase Codes	
Z	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
Z	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
Z	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
Z	/	Engine Control System (PGM-FI)	M50	Read Live Data	
Z	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
Z	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
Z	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
Z	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
Z	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
Z	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
Z	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
Z	/	Engine Control System (PGM-FI)	M86	Read codes	
Z	/	Engine Control System (PGM-FI)	M86	Erase Codes	
Z	/	Engine Control System (PGM-FI)	M86	Readiness Codes	

Z	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
Z	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
Z	/	Engine Control System (PGM-FI)	M86	Read Live Data	
Z	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
Z	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
Z	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
Z	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
Z	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
Z	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
Z	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
Z	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
Z	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
Z	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
Z	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
Z	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
Z	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
Z	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
Z	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
Z	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
Z	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
Z	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
Z	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
Z	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
Z	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
Z	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
Z	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
Z	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
Z	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
Z	/	Four-wheel precision steering control system (PAWSC)	M96	Read codes	
Z	/	Four-wheel precision steering control system (PAWSC)	M96	Erase Codes	
Z	/	Four-wheel precision steering control system (PAWSC)	M96	Read Live Data	
Z	/	PSR	M27	Read ECU Information	
Z	/	PSR	M27	Read codes	
Z	/	PSR	M27	Erase Codes	
Z	/	PSR	M27	Read Live Data	
Z	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
Z	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
Z	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
Z	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
Z	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
Z	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
Z	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
Z	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
Z	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
Z	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
Z	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
Z	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
Z	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
Z	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
Z	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
Z	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
Z	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
Z	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
Z	/	Remote starter (RS)	M90	System Check	
Z	/	Remote starter (RS)	M90	HISTORY	
Z	/	Remote starter (RS)	M90	Registration	
Z	/	Seat load cell (SWS)	M6F	Read ECU Information	
Z	/	Seat load cell (SWS)	M6F	Read codes	
Z	/	Seat load cell (SWS)	M6F	Erase Codes	
Z	/	Seat load cell (SWS)	M6F	Read Live Data	
Z	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
Z	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
Z	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
Z	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER's SEAT COMPONENT(S)
Z	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
Z	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
Z	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
Z	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
Z	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
Z	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
Z	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	

Z	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
Z	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
Z	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
Z	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
Z	/	Groove track drive unit (SLOT ECU)	M98	History Data	
Z	/	Groove track drive unit (SLOT ECU)	M98	System Information	
Z	/	Airbag Control System (SRS)	M9F	Read ECU Information	
Z	/	Airbag Control System (SRS)	M9F	Read codes	
Z	/	Airbag Control System (SRS)	M9F	Erase Codes	
Z	/	Airbag Control System (SRS)	M9F	Read Live Data	
Z	/	Airbag Control System (SRS)	MA0	Read ECU Information	
Z	/	Airbag Control System (SRS)	MA0	Read codes	
Z	/	Airbag Control System (SRS)	MA0	Erase Codes	
Z	/	Airbag Control System (SRS)	MA0	Read Live Data	
Z	/	Airbag Control System (SRS)	MA1	Read ECU Information	
Z	/	Airbag Control System (SRS)	MA1	Read codes	
Z	/	Airbag Control System (SRS)	MA1	Erase Codes	
Z	/	Airbag Control System (SRS)	MA1	Read Live Data	
Z	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
Z	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
Z	/	Airbag Control System (SRS)	M2A	Read codes	
Z	/	Airbag Control System (SRS)	M2A	Erase Codes	
Z	/	Airbag Control System (SRS)	M2A	Read Live Data	
Z	/	Airbag Control System (SRS)	M9C	Read ECU Information	
Z	/	Airbag Control System (SRS)	M9C	Read codes	
Z	/	Airbag Control System (SRS)	M9C	Erase Codes	
Z	/	Airbag Control System (SRS)	M9C	Read Live Data	
Z	/	Airbag Control System (SRS)	M9D	Read ECU Information	
Z	/	Airbag Control System (SRS)	M9D	Read codes	
Z	/	Airbag Control System (SRS)	M9D	Erase Codes	
Z	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
Z	/	Airbag Control System (SRS)	M9D	Read Live Data	
Z	/	Airbag Control System (SRS)	M9D	Parameter Information	
Z	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
Z	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
Z	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
Z	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
Z	/	Airbag Control System (SRS)	M9D	Function Test	
Z	/	Airbag Control System (SRS)	M9D	System Information	
Z	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
Z	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
Z	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
Z	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
Z	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
Z	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
Z	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
Z	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
Z	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
Z	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
Z	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
Z	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
Z	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
Z	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
Z	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
Z	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
Z	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test
Zest	/	Four-wheel steering control system (4WS)	M52	Read ECU Information	
Zest	/	Four-wheel steering control system (4WS)	M52	Read codes	
Zest	/	Four-wheel steering control system (4WS)	M52	Erase Codes	
Zest	/	Four-wheel steering control system (4WS)	M52	Read Freeze Frame Data	
Zest	/	Four-wheel steering control system (4WS)	M52	Read Live Data	
Zest	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL REWRITING
Zest	/	Four-wheel steering control system (4WS)	M52	Adjustment	NEUTRAL ADJUSTMENT
Zest	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT MAIN SENSOR NEUTRAL CHECK
Zest	/	Four-wheel steering control system (4WS)	M52	Inspection	FRONT SUB SENSOR NEUTRAL CHECK
Zest	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR MAIN SENSOR NEUTRAL CHECK
Zest	/	Four-wheel steering control system (4WS)	M52	Inspection	REAR SUB SENSOR NEUTRAL CHECK
Zest	/	Automatic shift control system (A/T)	M1E	Read ECU Information	
Zest	/	Automatic shift control system (A/T)	M1E	Read codes	
Zest	/	Automatic shift control system (A/T)	M1E	Erase Codes	
Zest	/	Automatic shift control system (A/T)	M1E	Read Freeze Frame Data	
Zest	/	Automatic shift control system (A/T)	M1E	Read Live Data	
Zest	/	Automatic shift control system (A/T)	M1E	ECMPCM Reset	
Zest	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Solenoid Tests
Zest	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Shift Lock Solenoid Test
Zest	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Zest	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Zest	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Zest	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control

Zest	/	Automatic shift control system (A/T)	M1E	Miscellaneous Test	Pressure Test Assistance Mode
Zest	/	Automatic shift control system (A/T)	M1E	REPLACE PCM/TCM	
Zest	/	Automatic shift control system (A/T)	M3B	Read ECU Information	
Zest	/	Automatic shift control system (A/T)	M3B	Read codes	
Zest	/	Automatic shift control system (A/T)	M3B	Erase Codes	
Zest	/	Automatic shift control system (A/T)	M3B	Read Freeze Frame Data	
Zest	/	Automatic shift control system (A/T)	M3B	ECMPCM Reset	
Zest	/	Automatic shift control system (A/T)	M3B	Read Live Data	
Zest	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Lockup Solenoid Test
Zest	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid A
Zest	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid B
Zest	/	Automatic shift control system (A/T)	M3B	Miscellaneous Test	Shift Solenoid C
Zest	/	Automatic shift control system (A/T)	M3C	Read ECU Information	
Zest	/	Automatic shift control system (A/T)	M3C	Read codes	
Zest	/	Automatic shift control system (A/T)	M3C	Erase Codes	
Zest	/	Automatic shift control system (A/T)	M81	Read ECU Information	
Zest	/	Automatic shift control system (A/T)	M81	Read codes	
Zest	/	Automatic shift control system (A/T)	M81	Erase Codes	
Zest	/	Automatic shift control system (A/T)	M81	Read Freeze Frame Data	
Zest	/	Automatic shift control system (A/T)	M81	ECMPCM Reset	
Zest	/	Automatic shift control system (A/T)	M81	Read Live Data	
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Lockup Solenoid Test
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid A
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid B
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid C
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid D
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Solenoid E
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve A
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve B
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control (Linear) Solenoid Valve C
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Shift Lock Solenoid Test
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Indicator Test
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	Clutch Pressure Control Solenoid Valve Control
Zest	/	Automatic shift control system (A/T)	M81	Miscellaneous Test	ATFP Motor Test
Zest	/	Automatic shift control system (A/T)	M82	Read ECU Information	
Zest	/	Automatic shift control system (A/T)	M82	Read codes	
Zest	/	Automatic shift control system (A/T)	M82	Erase Codes	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read ECU Information	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read codes	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Erase Codes	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Freeze Frame Data	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Read Live Data	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	Throttle Opening Angle Test
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 1
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BRAKE BOOSTER 2
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	LIGHT CHECK
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M61	M61	Function Test	BUZZER CHECK
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read ECU Information	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read codes	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Erase Codes	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Freeze Frame Data	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Read Live Data	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Adjustment	RADAR AIMING
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	BRAKE ACTUATOR 3
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ACC relay malfunction.
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INDICATOR LIGHT
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	INFORMATION DISPLAY
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M62	M62	Function Test	ALARM BUZZER
Zest	/	Active Engine Control Support System (ACM)	M06	Read ECU Information	
Zest	/	Active Engine Control Support System (ACM)	M06	Read codes	
Zest	/	Active Engine Control Support System (ACM)	M06	Erase Codes	
Zest	/	Active Engine Control Support System (ACM)	M06	Read Freeze Frame Data	
Zest	/	Active Engine Control Support System (ACM)	M06	Read Live Data	
Zest	/	Active Engine Control Support System (ACM)	M06	ACM Reset	
Zest	/	Active Engine Control Support System (ACM)	M06	Inspection	Front ACM Solenoid ON/OFF
Zest	/	Active Engine Control Support System (ACM)	M06	Inspection	Rear ACM Solenoid ON/OFF
Zest	/	Active Engine Control Support System (ACM)	M06	Inspection	Front and Rear ACM Solenoids ON/OFF
Zest	/	Active Engine Control Support System (ACM)	M06	Inspection	ACM Test
Zest	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read codes	
Zest	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Erase Codes	
Zest	/	Vehicle Acoustic Alarm Control System (AVAS)	M10	Read Live Data	
Zest	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Read ECU Information	
Zest	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Read codes	
Zest	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Erase Codes	
Zest	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Read Freeze Frame Data	
Zest	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Read Live Data	
Zest	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Function Test	Damper Force Operation Test
Zest	/	Active / Automatic Shock Absorber Control System (A MOD	M10	Adjustment	Damper Stroke Calibration
Zest	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read codes	
Zest	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Erase Codes	
Zest	/	Active / Automatic Shock Absorber Control System (A M1A	M1A	Read Live Data	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read codes	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Erase Codes	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Freeze Frame Data	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Read Live Data	
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	ACC Brake (Brake Actuator)
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	CMBS Brake
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Brake Light (ACC Relay)
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Indicator Light
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Information Display
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Function Test	Alarm Test
Zest	/	Adaptive Cruise (Constant Speed) Control System (AC M2B	M2B	Adjustment	Radar aiming
Zest	/	Transmission Control System (AT)	M18	Read ECU Information	

Zest	/	Transmission Control System (AT)	M18	Read codes	
Zest	/	Transmission Control System (AT)	M18	Erase Codes	
Zest	/	Transmission Control System (AT)	M18	Read Freeze Frame Data	
Zest	/	Transmission Control System (AT)	M18	Read Live Data	
Zest	/	Transmission Control System (AT)	M18	Adjustment	
Zest	/	Active Torque Converter Control System (ATTS)	M0E	Read ECU Information	
Zest	/	Active Torque Converter Control System (ATTS)	M0E	Read codes	
Zest	/	Active Torque Converter Control System (ATTS)	M0E	Erase Codes	
Zest	/	Active Torque Converter Control System (ATTS)	M0E	Read Freeze Frame Data	
Zest	/	Active Torque Converter Control System (ATTS)	M0E	Read Live Data	
Zest	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ATTS TEST SHORT TIME MODE
Zest	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	STEERING ANGLE
Zest	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	LATERAL G & YAW RATE SENSORS
Zest	/	Active Torque Converter Control System (ATTS)	M0E	Miscellaneous Test	ALL SENSORS
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Read ECU Information	
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Read codes	
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Erase Codes	
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Read Live Data	
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Left Side Alert Indicator ON
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Left Side Alert Indicator
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Right Side Alert Indicator ON
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Flash BSI Right Side Alert Indicator
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator ON
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Right Side 'Blind Spot Not Available' Message
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Left Side 'Blind Spot Not Available' Message
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Indicator OFF
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Check Blind Spot System Message
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	BSI Buzzer
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Inspection	Select year
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	Function Test	
Zest	/	Driving Visual Blind Spot Information System (BSI)	M14	History Clear	
Zest	/	BODY ELECTRICAL/Active Cornering Light	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Active Cornering Light	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Adaptive Front Lighting	MFF	Function Test	Adaptive Front Lighting
Zest	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Auto A/C Sub display	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Oncoming Vehicle Detection
Zest	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Function Test	Preceding Vehicle Detection
Zest	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Operation
Zest	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Auto High-Beam (High-Beam Support System) Adjustment Menu
Zest	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset Operation
Zest	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Returning Operation
Zest	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Automatic Returning Distance
Zest	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Manual Returning Time
Zest	/	BODY ELECTRICAL/Auto High-Beam (High-Beam Suppr	MFF	Adjustment	Reset to default
Zest	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Function Test	Auto Leveling Adjust Motor
Zest	/	BODY ELECTRICAL/Auto Light Leveling	MFF	Adjustment	Sensor Initial Position Learning
Zest	/	BODY ELECTRICAL/Door Locks	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Door Locks	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Door Locks	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Lock All Doors
Zest	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock Driver's Side Door
Zest	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Unlock All Doors
Zest	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Fuel Fill Door Open
Zest	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Left Power Sliding Door
Zest	/	BODY ELECTRICAL/Door Locks	MFF	Function Test	Right Power Sliding Door
Zest	/	BODY ELECTRICAL/e-Call	MFF	Read codes	
Zest	/	BODY ELECTRICAL/e-Call	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/e-Call	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/e-Call	MFF	Activation and Display E-Call unit data	
Zest	/	BODY ELECTRICAL/Front Panel	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Front Panel	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Front Panel	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Front Panel	MFF	Inspection	Front Panel Check
Zest	/	BODY ELECTRICAL/Front Panel	MFF	Function Test	Front Display Panel
Zest	/	BODY ELECTRICAL/Gauges	MFF	Read ECU Information	
Zest	/	BODY ELECTRICAL/Gauges	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Gauges	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Gauges	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Speedometer
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Tachometer
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Activation Indicator
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	VSA/TCS Indicator
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	ABS INDICATOR
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	EBD Indicator(Electronic Brake Display)
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Activation Indicator
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	MIL Status
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Daytime Running Lights Indicator(Canada)
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Engine Oil Pressure Indicator
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Charging System Indicator
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Cruise Control Main Switch Indicator
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Maintenance Required Indicator
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	High Beam Indicator
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Light On Indicator

Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Low fuel level indicator
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Security Indicator
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Trip Meter
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (N)
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (P)
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (R)
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (D3)
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (1)
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (2)
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	A/T Gear Position Indicator (M)
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Sequential Sport Shift Mode Indicator
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Illumination Brightness Control
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Key Alarm Chime
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Headlight Alarm Chime
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Seatbelt Reminder Chime
Zest	/	BODY ELECTRICAL/Gauges	MFF	Function Test	Self-diagnostic function
Zest	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	Maintenance Minder
Zest	/	BODY ELECTRICAL/Gauges	MFF	Adjustment	PAX Warning Reset
Zest	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Read codes	
Zest	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/HF LINK/TEL	MFF	Inspection	
Zest	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read codes	
Zest	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/HIP(Honda Information Platform)	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read codes	
Zest	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/HVAC/Climate Control	MFF	Inspection	Climate Control Unit Self Test
Zest	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Inspection	
Zest	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Trunk Lid Release Command
Zest	/	BODY ELECTRICAL/Keyless Transmitter	MFF	Function Test	Keyless Buzzer
Zest	/	BODY ELECTRICAL/Lighting	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Lighting	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Lighting	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Ignition Key Cylinder Light Command
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Interior Light Command
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Foot Light Command
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Left Turn Signal Command
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Right Turn Signal Command
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Hazard Flasher
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Rear Fog Light
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight Command
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Headlight High Beam Command
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Parking Light Command
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Auto Light Headlights
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Cargo Area Light
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Floor Light(Rear door ashtray light)
Zest	/	BODY ELECTRICAL/Lighting	MFF	Function Test	Head Light Cleaner
Zest	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Parking Sensor Module	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat Indicator
Zest	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Seat
Zest	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Power Mirror
Zest	/	BODY ELECTRICAL/Power Seat/Power Mirror	MFF	Function Test	Column Motor
Zest	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Power Sliding Door	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Power Sliding Door	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Left Power Sliding Door
Zest	/	BODY ELECTRICAL/Power Sliding Door	MFF	Function Test	Right Power Sliding Door
Zest	/	BODY ELECTRICAL/Power Tailgate	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Power Tailgate	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Power Tailgate	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG drive motor
Zest	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG clutch
Zest	/	BODY ELECTRICAL/Power Tailgate	MFF	Function Test	PTG release motor
Zest	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Trunk Lid Magnetic Clutch
Zest	/	BODY ELECTRICAL/Power Trunk Lid	MFF	Function Test	Power Release Latch Motor
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Up
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Driver's Window Down
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Up
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Front Passenger's Window Down
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Up
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Left Rear Window Down
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Down
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Right Rear Window Up
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Inspection	Power Window Relay Command
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Driver side

Zest	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Passenger side
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Left Rear
Zest	/	BODY ELECTRICAL/Power Windows	MFF	Adjustment	Power Window Reset for Right Rear
Zest	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Rear Seat Heater	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Security	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Security	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Security	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Security	MFF	Function Test	Horn Command
Zest	/	BODY ELECTRICAL/Security	MFF	Function Test	Hazard Signal Command
Zest	/	BODY ELECTRICAL/Security	MFF	History Data	
Zest	/	BODY ELECTRICAL/Security	MFF	History Clear	
Zest	/	BODY ELECTRICAL/Telematics	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Telematics	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Telematics	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Red
Zest	/	BODY ELECTRICAL/Telematics	MFF	Function Test	LED Operation - Green
Zest	/	BODY ELECTRICAL/Wiper	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Wiper	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/Wiper	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Zest	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Auto Wiper
Zest	/	BODY ELECTRICAL/Wiper	MFF	Function Test	Wiper
Zest	/	BODY ELECTRICAL/Wireless Charger	MFF	Read codes	
Zest	/	BODY ELECTRICAL/Wireless Charger	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/YOP ECU	MFF	Read codes	
Zest	/	BODY ELECTRICAL/YOP ECU	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/YOP ECU	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read codes	
Zest	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Data	
Zest	/	BODY ELECTRICAL/YOP R/C ENG Starter	MFF	History Clear	
Zest	/	BODY ELECTRICAL/YOP Security	MFF	Read codes	
Zest	/	BODY ELECTRICAL/YOP Security	MFF	Erase Codes	
Zest	/	BODY ELECTRICAL/YOP Security	MFF	Read Live Data	
Zest	/	BODY ELECTRICAL/YOP Security	MFF	History Data	
Zest	/	BODY ELECTRICAL/YOP Security	MFF	History Clear	
Zest	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read ECU Information	
Zest	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read codes	
Zest	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Erase Codes	
Zest	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Read Live Data	
Zest	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Front Solenoid
Zest	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Front Solenoid
Zest	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Left Rear Solenoid
Zest	/	Bosch Anti-Lock Brake Control System (BOSCH ABS)	M00	Bleeding	Right Rear Solenoid
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read ECU Information	
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read codes	
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Erase Codes	
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Read Live Data	
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front Solenoid
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front Solenoid
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear Solenoid
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear Solenoid
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Front VSA
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Front VSA
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Left Rear VSA
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Bleeding	Right Rear VSA
Zest	/	Bosch Vehicle Stability Control System (BOSCH VSA)	MA9	Neutral Rewrite	
Zest	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Read codes	
Zest	/	Engine Network Control Gateway (CAN GATEWAY)	M24	Erase Codes	
Zest	/	Urban Active Brake Control System (CBAS)	M32	Read ECU Information	
Zest	/	Urban Active Brake Control System (CBAS)	M32	Read codes	
Zest	/	Urban Active Brake Control System (CBAS)	M32	Erase Codes	
Zest	/	Urban Active Brake Control System (CBAS)	M32	Read Live Data	
Zest	/	Urban Active Brake Control System (CBAS)	M32	Function Test	City-Brake Active system drive
Zest	/	Urban Active Brake Control System (CBAS)	M32	Adjustment	Radar Correction for Windshield
Zest	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read ECU Information	
Zest	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read codes	
Zest	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Erase Codes	
Zest	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Freeze Frame Data	
Zest	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Read Live Data	
Zest	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		CMBS (CMS) ACTIVATION HISTORY	
Zest	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	RADAR AIMING
Zest	/	Collision Mitigation Brake Control System (CMBS/CM <sup>!</sup> M2E)		Miscellaneous Test	CMBS Brake
Zest	/	Promise Automatic Transmission Control System (CVT M1B)		Read ECU Information	
Zest	/	Promise Automatic Transmission Control System (CVT M1B)		Read codes	
Zest	/	Promise Automatic Transmission Control System (CVT M1B)		Erase Codes	
Zest	/	Promise Automatic Transmission Control System (CVT M1B)		Read Freeze Frame Data	
Zest	/	Promise Automatic Transmission Control System (CVT M1B)		Read Live Data	
Zest	/	Promise Automatic Transmission Control System (CVT M1B)		ECMPCM Reset	
Zest	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Lock Solenoid Test
Zest	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Shift Solenoid Tests
Zest	/	Promise Automatic Transmission Control System (CVT M1B)		Miscellaneous Test	Electrical Oil Pump Activation
Zest	/	Promise Automatic Transmission Control System (CVT M33)		Read ECU Information	
Zest	/	Promise Automatic Transmission Control System (CVT M33)		Read codes	
Zest	/	Promise Automatic Transmission Control System (CVT M33)		Erase Codes	
Zest	/	Promise Automatic Transmission Control System (CVT M33)		Read Freeze Frame Data	
Zest	/	Promise Automatic Transmission Control System (CVT M33)		Read Live Data	
Zest	/	Promise Automatic Transmission Control System (CVT M33)		ECMPCM Reset	
Zest	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	Inhibitor Solenoid
Zest	/	Promise Automatic Transmission Control System (CVT M33)		Miscellaneous Test	CAS Solenoid A (LF)

Zest	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	CAS Solenoid B (RF)
Zest	/	Promise Automatic Transmission Control System (CVT M33	Miscellaneous Test	Start Clutch Feedback Learn
Zest	/	Promise Automatic Transmission Control System (CVT M8D	Read ECU Information	
Zest	/	Promise Automatic Transmission Control System (CVT M8D	Read codes	
Zest	/	Promise Automatic Transmission Control System (CVT M8D	Erase Codes	
Zest	/	Promise Automatic Transmission Control System (CVT M8D	Read Freeze Frame Data	
Zest	/	Promise Automatic Transmission Control System (CVT M8D	Read Live Data	
Zest	/	Promise Automatic Transmission Control System (CVT M8D	ECM/PCM Reset	
Zest	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Inhibitor Solenoid
Zest	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid A (LF)
Zest	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	CAS Solenoid B (RF)
Zest	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Start Clutch Feedback Learn
Zest	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve A
Zest	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve B
Zest	/	Promise Automatic Transmission Control System (CVT M8D	Miscellaneous Test	Shift solenoid Valve O/P
Zest	/	DBW M34	Read ECU Information	
Zest	/	DBW M34	Read codes	
Zest	/	DBW M34	Erase Codes	
Zest	/	DBW M34	Read Freeze Frame Data	
Zest	/	DBW M34	Read Live Data	
Zest	/	DBW M34	Inspection	Idle Speed Adjust
Zest	/	DBW M34	Inspection	Throttle Test
Zest	/	DBW M34	ECM Reset	
Zest	/	Diesel Engine Control System (DIESEL) M1D	Read ECU Information	
Zest	/	Diesel Engine Control System (DIESEL) M1D	Read codes	
Zest	/	Diesel Engine Control System (DIESEL) M1D	Erase Codes	
Zest	/	Diesel Engine Control System (DIESEL) M1D	Read Freeze Frame Data	
Zest	/	Diesel Engine Control System (DIESEL) M1D	ECM/PCM Reset	
Zest	/	Diesel Engine Control System (DIESEL) M1D	Read Live Data	
Zest	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Injector Test
Zest	/	Diesel Engine Control System (DIESEL) M1D	Inspection	All Injectors Off
Zest	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR TEST
Zest	/	Diesel Engine Control System (DIESEL) M1D	Inspection	IMRC Test
Zest	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Glow On/Off
Zest	/	Diesel Engine Control System (DIESEL) M1D	Inspection	ACG On/Off
Zest	/	Diesel Engine Control System (DIESEL) M1D	Inspection	A/C Clutch On/Off
Zest	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Fuel Heater On/ Off
Zest	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Radiator Fan Relay Test
Zest	/	Diesel Engine Control System (DIESEL) M1D	Inspection	EGR Cooler Bypass Valve Test
Zest	/	Diesel Engine Control System (DIESEL) M1D	Inspection	Intake Shutter Test
Zest	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Data Status
Zest	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	IQA Write Data
Zest	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Regeneration
Zest	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	DPF Differential Pressure Sensor Initial Learn
Zest	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	Reset 'Calculated PM Value'
Zest	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	MAF Sensor Learning Clear
Zest	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	A/F Sensor Learning Clear
Zest	/	Diesel Engine Control System (DIESEL) M1D	Adjustment	ISV Forced Learning
Zest	/	Diesel Engine Control System (DIESEL) M1D	VIN CHECK	
Zest	/	Diesel Engine Control System (DIESEL) M1D	Replace ECM/PCM	
Zest	/	Diesel Engine Control System (DIESEL) M37	Read ECU Information	
Zest	/	Diesel Engine Control System (DIESEL) M37	Read codes	
Zest	/	Diesel Engine Control System (DIESEL) M37	Erase Codes	
Zest	/	Diesel Engine Control System (DIESEL) M37	Read Freeze Frame Data	
Zest	/	Diesel Engine Control System (DIESEL) M37	ECM/PCM Reset	
Zest	/	Diesel Engine Control System (DIESEL) M37	Read Live Data	
Zest	/	Diesel Engine Control System (DIESEL) M37	Inspection	Injector Test
Zest	/	Diesel Engine Control System (DIESEL) M37	Inspection	Compression Test
Zest	/	Diesel Engine Control System (DIESEL) M37	VIN CHECK	
Zest	/	Diesel Engine Control System (DIESEL) M85	Read ECU Information	
Zest	/	Diesel Engine Control System (DIESEL) M85	Read codes	
Zest	/	Diesel Engine Control System (DIESEL) M85	Erase Codes	
Zest	/	Diesel Engine Control System (DIESEL) M85	Read Freeze Frame Data	
Zest	/	Diesel Engine Control System (DIESEL) M85	ECM/PCM Reset	
Zest	/	Diesel Engine Control System (DIESEL) M85	Read Live Data	
Zest	/	Diesel Engine Control System (DIESEL) M85	Inspection	All Injectors Off
Zest	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Rail Pressure Control Valve Test
Zest	/	Diesel Engine Control System (DIESEL) M85	Inspection	Glow On/Off
Zest	/	Diesel Engine Control System (DIESEL) M85	Inspection	ACG On/Off
Zest	/	Diesel Engine Control System (DIESEL) M85	Inspection	A/C Clutch On/Off
Zest	/	Diesel Engine Control System (DIESEL) M85	Inspection	Fuel Heater On/ Off
Zest	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Data Status
Zest	/	Diesel Engine Control System (DIESEL) M85	Adjustment	IQA Write Data
Zest	/	Diesel Engine Control System (DIESEL) M85	Adjustment	DPF Differential Pressure Sensor Initial Learn
Zest	/	Diesel Engine Control System (DIESEL) M85	Adjustment	Reset 'Calculated PM Value'
Zest	/	Diesel Engine Control System (DIESEL) M85	VIN CHECK	
Zest	/	Diesel Engine Control System (DIESEL) M85	Replace ECM/PCM	
Zest	/	Capacitor Control System (EDLC) M12	Read codes	
Zest	/	Capacitor Control System (EDLC) M12	Erase Codes	
Zest	/	Capacitor Control System (EDLC) M12	Read Live Data	
Zest	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge and Charge Test
Zest	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Discharge for Removal or Disposal
Zest	/	Capacitor Control System (EDLC) M12	Inspection	EDLC Module Usage History Clear
Zest	/	Electronic Brake Control System (EPB) M1F	Read codes	
Zest	/	Electronic Brake Control System (EPB) M1F	Erase Codes	
Zest	/	Electronic Brake Control System (EPB) M1F	Read Live Data	
Zest	/	Electronic Brake Control System (EPB) M1F	Adjustment	Sensor Calibration
Zest	/	Electronic Brake Control System (EPB) M1F	Adjustment	Brake Pad Maintenance Mode
Zest	/	Electronic Brake Control System (EPB) M3E	Read ECU Information	
Zest	/	Electronic Brake Control System (EPB) M3E	Read codes	
Zest	/	Electronic Brake Control System (EPB) M3E	Erase Codes	
Zest	/	Electronic Brake Control System (EPB) M3E	Read Live Data	
Zest	/	Electronic Brake Control System (EPB) M3E	Adjustment	Sensor Calibration



Zest	/	Electric Powertrain / IMA	M66	Read ECU Information	
Zest	/	Electric Powertrain / IMA	M66	Read codes	
Zest	/	Electric Powertrain / IMA	M66	Erase Codes	
Zest	/	Electric Powertrain / IMA	M66	Read Freeze Frame Data	
Zest	/	Electric Powertrain / IMA	M66	Read Live Data	
Zest	/	Electric Powertrain / IMA	M66	Function Test	IPU MODULE FAN DRIVE TEST
Zest	/	Electric Powertrain / IMA	M66	Function Test	Motor Rotor Position Calibration
Zest	/	Electronic Servo Brake Control System (ESBCS)	M43	Read codes	
Zest	/	Electronic Servo Brake Control System (ESBCS)	M43	Erase Codes	
Zest	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Freeze Frame Data	
Zest	/	Electronic Servo Brake Control System (ESBCS)	M43	Read Live Data	
Zest	/	Electronic Servo Brake Control System (ESBCS)	M43	Adjustment	SENSOR 0 (ZERO) POSITION MEMORIZATION
Zest	/	Electronic Servo Brake Control System (ESBCS)	M43	Inspection	FORCED NON ASSIST MODE
Zest	/	Electronic Pretensioner Control System (EPCS)	M41	Read ECU Information	
Zest	/	Electronic Pretensioner Control System (EPCS)	M41	Read codes	
Zest	/	Electronic Pretensioner Control System (EPCS)	M41	Erase Codes	
Zest	/	Electronic Pretensioner Control System (EPCS)	M41	Read Live Data	
Zest	/	Electronic Power Steering Control System (EPS)	M20	Read codes	
Zest	/	Electronic Power Steering Control System (EPS)	M20	Erase Codes	
Zest	/	Electronic Power Steering Control System (EPS)	M20	Read Freeze Frame Data	
Zest	/	Electronic Power Steering Control System (EPS)	M20	Read Live Data	
Zest	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	STEERING END POSITION LEARNING
Zest	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	EPS Steering Angle Sensor Value Clear
Zest	/	Electronic Power Steering Control System (EPS)	M20	Adjustment	MA-EPS Control ON/OFF
Zest	/	Electronic Power Steering Control System (EPS)	M3F	Read ECU Information	
Zest	/	Electronic Power Steering Control System (EPS)	M3F	Read codes	
Zest	/	Electronic Power Steering Control System (EPS)	M3F	Erase Codes	
Zest	/	Electronic Power Steering Control System (EPS)	M3F	Read Freeze Frame Data	
Zest	/	Electronic Power Steering Control System (EPS)	M3F	Read Live Data	
Zest	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Torque Sensor Learn
Zest	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	PS Signal
Zest	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Frequency Change
Zest	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Steering Angle Sensor
Zest	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	Gear Ratio Sensor
Zest	/	Electronic Power Steering Control System (EPS)	M3F	Miscellaneous Test	A/C Fan Minimum
Zest	/	Electronic Power Steering Control System (EPS)	M6B	Read ECU Information	
Zest	/	Electronic Power Steering Control System (EPS)	M6B	Read codes	
Zest	/	Electronic Power Steering Control System (EPS)	M6B	Erase Codes	
Zest	/	Electronic Power Steering Control System (EPS)	M6B	Read Freeze Frame Data	
Zest	/	Electronic Power Steering Control System (EPS)	M6B	Read Live Data	
Zest	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	Torque Sensor Learn
Zest	/	Electronic Power Steering Control System (EPS)	M6B	Adjustment	EPS STEERING ANGLE SENSOR VALUE CLEAR
Zest	/	New energy battery (EV)	M44	Read ECU Information	
Zest	/	New energy battery (EV)	M44	Read codes	
Zest	/	New energy battery (EV)	M44	Erase Codes	
Zest	/	New energy battery (EV)	M44	Read Freeze Frame Data	
Zest	/	New energy battery (EV)	M44	Read Live Data	
Zest	/	New energy battery (EV)	M44	Inspection	
Zest	/	New energy battery (EV)	M44	Adjustment	
Zest	/	Electronic vacuum pump (EVPS)	M21	Read ECU Information	
Zest	/	Electronic vacuum pump (EVPS)	M21	Read codes	
Zest	/	Electronic vacuum pump (EVPS)	M21	Erase Codes	
Zest	/	Electronic vacuum pump (EVPS)	M21	Read Freeze Frame Data	
Zest	/	Electronic vacuum pump (EVPS)	M21	Read Live Data	
Zest	/	Electronic vacuum pump (EVPS)	M22	Read ECU Information	
Zest	/	Electronic vacuum pump (EVPS)	M22	Read codes	
Zest	/	Electronic vacuum pump (EVPS)	M22	Erase Codes	
Zest	/	Electronic vacuum pump (EVPS)	M22	Read Freeze Frame Data	
Zest	/	Electronic vacuum pump (EVPS)	M22	Read Live Data	
Zest	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 2
Zest	/	Electronic vacuum pump (EVPS)	M22	Function Test	Vacuum Line Condition Check 1
Zest	/	FCW LDW	M4E	Read ECU Information	
Zest	/	FCW LDW	M4E	Read codes	
Zest	/	FCW LDW	M4E	Erase Codes	
Zest	/	FCW LDW	M4E	Read Live Data	
Zest	/	FCW LDW	M4E	Function Test	FCW Drive
Zest	/	FCW LDW	M4E	Function Test	Left side lane departure warning
Zest	/	FCW LDW	M4E	Function Test	Right side lane departure warning
Zest	/	FCW LDW	M4E	Function Test	Indicator Drive
Zest	/	FCW LDW	M4E	Adjustment	
Zest	/	Instrument Display System (GAUGE)	M2C	Read codes	
Zest	/	Instrument Display System (GAUGE)	M2C	Erase Codes	
Zest	/	Instrument Display System (GAUGE)	M2C	Read Live Data	
Zest	/	Anti-lock brake control system (ABS)	M01	Read ECU Information	
Zest	/	Anti-lock brake control system (ABS)	M01	Read codes	
Zest	/	Anti-lock brake control system (ABS)	M01	Erase Codes	
Zest	/	Anti-lock brake control system (ABS)	M01	Read Freeze Frame Data	
Zest	/	Anti-lock brake control system (ABS)	M01	Read Live Data	
Zest	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front Solenoid
Zest	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front Solenoid
Zest	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear Solenoid
Zest	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear Solenoid
Zest	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Front VSA
Zest	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Front VSA
Zest	/	Anti-lock brake control system (ABS)	M01	Bleeding	Left Rear VSA
Zest	/	Anti-lock brake control system (ABS)	M01	Bleeding	Right Rear VSA
Zest	/	Anti-lock brake control system (ABS)	M01	Adjustment	ALL SENSORS
Zest	/	Anti-lock brake control system (ABS)	M02	Read ECU Information	
Zest	/	Anti-lock brake control system (ABS)	M02	Read codes	
Zest	/	Anti-lock brake control system (ABS)	M02	Erase Codes	
Zest	/	Anti-lock brake control system (ABS)	M02	Read Freeze Frame Data	
Zest	/	Anti-lock brake control system (ABS)	M02	Read Live Data	
Zest	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front Solenoid

Zest	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front Solenoid
Zest	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear Solenoid
Zest	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear Solenoid
Zest	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Front VSA
Zest	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Front VSA
Zest	/	Anti-lock brake control system (ABS)	M02	Bleeding	Left Rear VSA
Zest	/	Anti-lock brake control system (ABS)	M02	Bleeding	Right Rear VSA
Zest	/	Anti-lock brake control system (ABS)	M03	Read ECU Information	
Zest	/	Anti-lock brake control system (ABS)	M03	Read codes	
Zest	/	Anti-lock brake control system (ABS)	M03	Erase Codes	
Zest	/	Anti-lock brake control system (ABS)	M03	Read Live Data	
Zest	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front Solenoid
Zest	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front Solenoid
Zest	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear Solenoid
Zest	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear Solenoid
Zest	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Front VSA
Zest	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Front VSA
Zest	/	Anti-lock brake control system (ABS)	M03	Bleeding	Left Rear VSA
Zest	/	Anti-lock brake control system (ABS)	M03	Bleeding	Right Rear VSA
Zest	/	Anti-lock brake control system (ABS)	M03	Pulser Test	
Zest	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Front Pulser
Zest	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Front Pulser
Zest	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Left Rear Pulser
Zest	/	Anti-lock brake control system (ABS)	M03	Neutral Test	Right Rear Pulser
Zest	/	Anti-lock brake control system (ABS)	M03	MODE CLEAR	
Zest	/	Anti-lock brake control system (ABS)	M19	Read codes	
Zest	/	Anti-lock brake control system (ABS)	M19	Erase Codes	
Zest	/	Anti-lock brake control system (ABS)	M19	Read Live Data	
Zest	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front Solenoid
Zest	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front Solenoid
Zest	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear Solenoid
Zest	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear Solenoid
Zest	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Front VSA
Zest	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Front VSA
Zest	/	Anti-lock brake control system (ABS)	M19	Bleeding	Left Rear VSA
Zest	/	Anti-lock brake control system (ABS)	M19	Bleeding	Right Rear VSA
Zest	/	Anti-lock brake control system (ABS)	M19	Bleeding	Brake Light Relay/TSA Relay Test
Zest	/	Anti-lock brake control system (ABS)	M19	Adjustment	All Sensor
Zest	/	Anti-lock brake control system (ABS)	M19	Adjustment	Brake Pad Maintenance Mode
Zest	/	Anti-lock brake control system (ABS)	M19	Deflation Warning System	
Zest	/	Intelligent Parking Control System (SPS)	M9B	Read ECU Information	
Zest	/	Intelligent Parking Control System (SPS)	M9B	Read codes	
Zest	/	Intelligent Parking Control System (SPS)	M9B	Erase Codes	
Zest	/	Intelligent Parking Control System (SPS)	M9B	Read Freeze Frame Data	
Zest	/	Intelligent Parking Control System (SPS)	M9B	Read Live Data	
Zest	/	Intelligent Parking Control System (SPS)	M9B	Customize	
Zest	/	Intelligent Parking Control System (SPS)	M9B	Reset PA Unit	
Zest	/	Intelligent Parking Control System (SPS)	M9B	Function Test	Voice Guide Output Test
Zest	/	Hydraulic booster control system (HBS)	M5F	Read ECU Information	
Zest	/	Hydraulic booster control system (HBS)	M5F	Read codes	
Zest	/	Hydraulic booster control system (HBS)	M5F	Erase Codes	
Zest	/	Hydraulic booster control system (HBS)	M5F	Read Live Data	
Zest	/	Hydraulic booster control system (HBS)	M5F	Function Test	Accumulating Pressure Test
Zest	/	Hydraulic booster control system (HBS)	M5F	Function Test	Increasing Master Cylinder pressure Test
Zest	/	Hydraulic booster control system (HBS)	M5F	Function Test	Regenerative Brake Test
Zest	/	Hydraulic booster control system (HBS)	M5F	Function Test	Hydraulic Booster CAS Test
Zest	/	Hydraulic booster control system (HBS)	M5F	Function Test	Buzzer Test
Zest	/	Hydraulic booster control system (HBS)	M5F	Adjustment	Memorizing 0[zero] Position
Zest	/	IMA	M63	Read ECU Information	
Zest	/	IMA	M63	Read codes	
Zest	/	IMA	M63	Erase Codes	
Zest	/	IMA	M63	Read Freeze Frame Data	
Zest	/	IMA	M63	Read Live Data	
Zest	/	IMA	M63	Function Test	IPU MODULE FAN DRIVE
Zest	/	IMA	M63	Adjustment	SOC PRESET
Zest	/	IMA	M64	Read ECU Information	
Zest	/	IMA	M64	Read codes	
Zest	/	IMA	M64	Erase Codes	
Zest	/	IMA	M64	Read Freeze Frame Data	
Zest	/	IMA	M64	Read Live Data	
Zest	/	IMA	M64	Function Test	IPU MODULE FAN DRIVE
Zest	/	IMA	M64	Adjustment	SOC PRESET
Zest	/	IMA	M65	Read ECU Information	
Zest	/	IMA	M65	Read codes	
Zest	/	IMA	M65	Erase Codes	
Zest	/	IMA	M65	Read Freeze Frame Data	
Zest	/	IMA	M65	Read Live Data	
Zest	/	IMA	M65	Function Test	IPU MODULE FAN DRIVE
Zest	/	IMA	M65	Adjustment	MOTOR ROTOR POSITION CALIBRATION
Zest	/	Anti-theft settings control system (IMMOBI)	M68	Read Live Data	
Zest	/	Anti-theft settings control system (IMMOBI)	M68	Immobilizer Setup	
Zest	/	Intake Sounder Control System (ISC)	M6D	Read codes	
Zest	/	Intake Sounder Control System (ISC)	M6D	Erase Codes	
Zest	/	Intake Sounder Control System (ISC)	M6D	Read Freeze Frame Data	
Zest	/	Intake Sounder Control System (ISC)	M6D	Read Live Data	
Zest	/	Night Vision System (INVS)	0XB1	Read ECU Information	
Zest	/	Night Vision System (INVS)	0XB1	Read codes	
Zest	/	Night Vision System (INVS)	0XB1	Erase Codes	
Zest	/	Night Vision System (INVS)	0XB1	Read Freeze Frame Data	
Zest	/	Night Vision System (INVS)	0XB1	Read Live Data	
Zest	/	Night Vision System (INVS)	0XB1	Adjustment	
Zest	/	Night Vision System (INVS)	0XB1	Function Test	Head Up Display Test
Zest	/	Night Vision System (INVS)	0XB1	Function Test	Camera Test

Zest	/	Night Vision System (INVS)	0XB1	Function Test	Left Clutch Electromagnetic Coil Test
Zest	/	i-SHIFT	0XB0	Read ECU Information	
Zest	/	i-SHIFT	0XB0	Read codes	
Zest	/	i-SHIFT	0XB0	Erase Codes	
Zest	/	i-SHIFT	0XB0	Read Live Data	
Zest	/	Keyless Entry Control System (KAS)	M99	Read ECU Information	
Zest	/	Keyless Entry Control System (KAS)	M99	Read codes	
Zest	/	Keyless Entry Control System (KAS)	M99	Erase Codes	
Zest	/	Keyless Entry Control System (KAS)	M99	Read Live Data	
Zest	/	Keyless Entry Control System (KAS)	M99	Self Check	
Zest	/	Keyless Entry Control System (KAS)	M99	History Data	
Zest	/	Keyless Entry Control System (KAS)	M99	KEYLESS ACCESS System Menu	
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Immobilizer Indicator Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS System Indicator Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[NO KEYLESS ACCESS Remote] Indication
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[KEYLESS ACCESS Remote BATT] Indication
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Interior Buzzer Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Key Switch Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	IMOCNT Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNCONT Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	S-net line (IMOC Terminal) Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	IGNTRX Line Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 RXVCC Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 RXVCC Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXVCC Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXVCC Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver (Door) Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Front Passenger (Door) Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side Rear (Door) Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side Rear (Door) Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Driver Side-Glass Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Passenger Side-Glass Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[Exterior] Trunk/Tailgate/Rear Bumper Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Front Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Middle Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Cabin Rear Tray Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[Interior] Trunk/Rear Shelf Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver (Door) Antenna L DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Front Passenger (Door) Antenna L DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side Rear (Door) Antenna L DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side Rear (Door) Antenna L DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Driver Side-Glass Antenna L DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Passenger Side-Glass Antenna L DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Tailgate/Rear Bumper Antenna L DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Front Antenna L DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Middle Antenna L DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Antenna L DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Cabin Rear Tray Antenna L DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Trunk/Rear Shelf Antenna L DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	RF1 TXD DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	RF2 TXD DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	[DO NOT HAVE KEY] Indication
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Exterior Buzzer Driving (Short Time)
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Lock Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Door Unlock Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	Auto lock Cancel Switch Indicator Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 1 Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote - Customize Link To Driver 2 Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna Driving
Zest	/	Keyless Entry Control System (KAS)	M99	Function Test	KEYLESS ACCESS Remote SLOT Antenna DC Output
Zest	/	Keyless Entry Control System (KAS)	M99	Registration	
Zest	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read ECU Information	
Zest	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read codes	
Zest	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Erase Codes	
Zest	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Freeze Frame Data	
Zest	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Read Live Data	
Zest	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	STATIC CAMERA AIMING
Zest	/	Electronic Camera Lane Keeping Assist System (LKAS)	M70	Miscellaneous Test	VIDEO OUTPUT
Zest	/	Electronically assisted lane keeping control system (Lk)	M71	Read ECU Information	
Zest	/	Electronically assisted lane keeping control system (Lk)	M71	Read codes	
Zest	/	Electronically assisted lane keeping control system (Lk)	M71	Erase Codes	
Zest	/	Electronically assisted lane keeping control system (Lk)	M71	Read Freeze Frame Data	
Zest	/	Electronically assisted lane keeping control system (Lk)	M71	Read Live Data	
Zest	/	Electronically assisted lane keeping control system (Lk)	M71	Adjustment	STEERING REWRITE
Zest	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	LDW OFFSET
Zest	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	GAIN ADJUST
Zest	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	DRIVING WILL
Zest	/	Electronically assisted lane keeping control system (Lk)	M71	Customize	CONTROL DELAY
Zest	/	Management ECU Module (ME)	M74	Read ECU Information	
Zest	/	Management ECU Module (ME)	M74	Read codes	
Zest	/	Management ECU Module (ME)	M74	Erase Codes	
Zest	/	Management ECU Module (ME)	M74	Read Freeze Frame Data	
Zest	/	Management ECU Module (ME)	M74	Read Live Data	
Zest	/	Multi-view camera and parking assist system (MVC/P)	M26	Read ECU Information	
Zest	/	Multi-view camera and parking assist system (MVC/P)	M26	Read codes	
Zest	/	Multi-view camera and parking assist system (MVC/P)	M26	Erase Codes	
Zest	/	Multi-view camera and parking assist system (MVC/P)	M26	Read Live Data	
Zest	/	Multi-view camera system (MVCS)	M7A	Read ECU Information	
Zest	/	Multi-view camera system (MVCS)	M7A	Read codes	
Zest	/	Multi-view camera system (MVCS)	M7A	Erase Codes	
Zest	/	Multi-view camera system (MVCS)	M7A	Read Live Data	

Zest	/	Multi-view camera system (MVCS)	M7A	Customization	
Zest	/	Multi-view camera system (MVCS)	M7A	Function Test	Monitor Out
Zest	/	Multi-view camera system (MVCS)	M7A	Function Test	LED Light
Zest	/	Multi-view camera system (MVCS)	M7A	Function Test	Front Camera Image
Zest	/	Multi-view camera system (MVCS)	M7A	Function Test	Left Side Camera Image
Zest	/	Multi-view camera system (MVCS)	M7A	Function Test	Right Side Camera Image
Zest	/	Multi-view camera system (MVCS)	M7A	Function Test	Rear Camera Image
Zest	/	Multi-view camera system (MVCS)	M7A	Function Test	MVC Function
Zest	/	Power Control Unit (PCU)	M83	Read ECU Information	
Zest	/	Power Control Unit (PCU)	M83	Read codes	
Zest	/	Power Control Unit (PCU)	M83	Erase Codes	
Zest	/	Power Control Unit (PCU)	M83	Read Live Data	
Zest	/	Power Control Unit (PCU)	M83	Self Check	
Zest	/	Power Control Unit (PCU)	M83	History Data	
Zest	/	Engine Control System (PGM-FI)	M23	Read ECU Information	
Zest	/	Engine Control System (PGM-FI)	M23	Read codes	
Zest	/	Engine Control System (PGM-FI)	M23	Erase Codes	
Zest	/	Engine Control System (PGM-FI)	M23	Readiness Codes	
Zest	/	Engine Control System (PGM-FI)	M23	Read Freeze Frame Data	
Zest	/	Engine Control System (PGM-FI)	M23	ECM/PCM Reset	
Zest	/	Engine Control System (PGM-FI)	M23	Read Live Data	
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	EVAP Test
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	IMT (IMRC) TEST
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	EGR TEST
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	IACV TEST
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	VTC TEST
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	VTEC TEST
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	ETCS (TAC) TEST
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	RADIATOR FAN
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	A/C CLUTCH
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP ON
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	FUEL PUMP OFF
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	ALL INJECTORS STOP
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	ONE INJECTOR STOP
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	CRUISE CONTROL CANCEL HISTORY
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	TC WASTEGATE CONTROL SOLENOID VALVE TEST
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	TC BYPASS CONTROL SOLENOID VALVE TEST
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	TC BOOST CONTROL SOLENOID VALVE TEST
Zest	/	Engine Control System (PGM-FI)	M23	Inspection	IDLE STOP STARTER COUNTER CHECK
Zest	/	Engine Control System (PGM-FI)	M23	Adjustment	CRANK (CKP) PATTERN
Zest	/	Engine Control System (PGM-FI)	M23	Adjustment	Main Fuel Tank Alcohol Content Write Data
Zest	/	Engine Control System (PGM-FI)	M23	TP POSITION CHECK	
Zest	/	Engine Control System (PGM-FI)	M23	VIN CHECK	
Zest	/	Engine Control System (PGM-FI)	M23	Replace ECM/PCM	
Zest	/	Engine Control System (PGM-FI)	M50	Read ECU Information	
Zest	/	Engine Control System (PGM-FI)	M50	Read codes	
Zest	/	Engine Control System (PGM-FI)	M50	Erase Codes	
Zest	/	Engine Control System (PGM-FI)	M50	Readiness Codes	
Zest	/	Engine Control System (PGM-FI)	M50	Read Freeze Frame Data	
Zest	/	Engine Control System (PGM-FI)	M50	ECM/PCM Reset	
Zest	/	Engine Control System (PGM-FI)	M50	Read Live Data	
Zest	/	Engine Control System (PGM-FI)	M50	Inspection	IDLE ADJUST
Zest	/	Engine Control System (PGM-FI)	M50	Inspection	EVAP Test
Zest	/	Engine Control System (PGM-FI)	M50	Inspection	VTEC LOW V/T CHECK
Zest	/	Engine Control System (PGM-FI)	M50	Inspection	O2S TEST
Zest	/	Engine Control System (PGM-FI)	M50	VIN CHECK	
Zest	/	Engine Control System (PGM-FI)	M50	Replace ECM/PCM	
Zest	/	Engine Control System (PGM-FI)	M86	Read ECU Information	
Zest	/	Engine Control System (PGM-FI)	M86	Read codes	
Zest	/	Engine Control System (PGM-FI)	M86	Erase Codes	
Zest	/	Engine Control System (PGM-FI)	M86	Readiness Codes	
Zest	/	Engine Control System (PGM-FI)	M86	Read Freeze Frame Data	
Zest	/	Engine Control System (PGM-FI)	M86	ECM/PCM Reset	
Zest	/	Engine Control System (PGM-FI)	M86	Read Live Data	
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	IDLE ADJUST
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	EVAP Test
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	VTC TEST
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	IMT (IMRC) TEST
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	EGR TEST
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	VTEC TEST
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	IACV TEST
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	O2S TEST
Zest	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	ETCS (TAC) TEST
Zest	/	Engine Control System (PGM-FI)	M86	Inspection/ETCS (TAC) TEST	TP POSITION CHECK
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	RADIATOR FAN
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	A/C CLUTCH
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP ON
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PUMP OFF
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	ALL INJECTORS STOP
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	ONE INJECTOR STOP
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	CRUISE CONTROL CANCEL HISTORY
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	ACM
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	WGS TEST
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	ABV TEST
Zest	/	Engine Control System (PGM-FI)	M86	Inspection	FUEL PRESSURE TEST
Zest	/	Engine Control System (PGM-FI)	M86	CRANK (CKP) PATTERN CLEAR	
Zest	/	Engine Control System (PGM-FI)	M86	Adjustment	CRANK (CKP) PATTERN
Zest	/	Engine Control System (PGM-FI)	M86	VIN CHECK	
Zest	/	Engine Control System (PGM-FI)	M86	Replace ECM/PCM	
Zest	/	Four-wheel precision steering control system (PAWSC M96	M96	Read codes	
Zest	/	Four-wheel precision steering control system (PAWSC M96	M96	Erase Codes	
Zest	/	Four-wheel precision steering control system (PAWSC M96	M96	Read Live Data	
Zest	/	PSR	M27	Read ECU Information	

Zest	/	PSR	M27	Read codes	
Zest	/	PSR	M27	Erase Codes	
Zest	/	PSR	M27	Read Live Data	
Zest	/	Pedestrian Collision Protection System (PUH)	M8C	Read ECU Information	
Zest	/	Pedestrian Collision Protection System (PUH)	M8C	Read codes	
Zest	/	Pedestrian Collision Protection System (PUH)	M8C	Erase Codes	
Zest	/	Pedestrian Collision Protection System (PUH)	M8C	Read Live Data	
Zest	/	Pedestrian Collision Protection System (PUH)	M8C	Miscellaneous Test	WARNING DISPLAY FORCE ACTIVATION
Zest	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read codes	
Zest	/	Real-time four-wheel drive / intelligent control drive s	M3A	Erase Codes	
Zest	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Freeze Frame Data	
Zest	/	Real-time four-wheel drive / intelligent control drive s	M3A	Read Live Data	
Zest	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	E-DPS Control Module Replacement
Zest	/	Real-time four-wheel drive / intelligent control drive s	M3A	Adjustment	Longitudinal G Sensor Learning
Zest	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read ECU Information	
Zest	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read codes	
Zest	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Erase Codes	
Zest	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Read Live Data	
Zest	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Adjustment	
Zest	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Monitor and Alarm
Zest	/	Rear Camera - Cross Driving Monitor (RC-CTM)	M8F	Function Test	Display Rear Camera output image
Zest	/	Remote starter (RS)	M90	System Check	
Zest	/	Remote starter (RS)	M90	HISTORY	
Zest	/	Remote starter (RS)	M90	Registration	
Zest	/	Seat load cell (SWS)	M6F	Read ECU Information	
Zest	/	Seat load cell (SWS)	M6F	Read codes	
Zest	/	Seat load cell (SWS)	M6F	Erase Codes	
Zest	/	Seat load cell (SWS)	M6F	Read Live Data	
Zest	/	Seat load cell (SWS)	M6F	System Check	SWS DTC CHECK
Zest	/	Seat load cell (SWS)	M6F	System Check	Seat Output Check
Zest	/	Seat load cell (SWS)	M6F	System Check	AFTER A VEHICLE COLLISION
Zest	/	Seat load cell (SWS)	M6F	System Check	AFTER REPLACING FRONT PASSENGER'S SEAT COMPONENT(S)
Zest	/	Seat load cell (SWS)	M6F	Adjustment	ODS Unit Initialization
Zest	/	Seat load cell (SWS)	M6F	Adjustment	OPDS Initialization
Zest	/	Seat load cell (SWS)	M6F	Adjustment	SWS Initialization
Zest	/	Seat load cell (SWS)	M6F	Adjustment	E-Pretensioner For CMBS (CMS)
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read ECU Information	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read codes	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M29	Erase Codes	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M29	Readiness Codes	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Freeze Frame Data	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M29	ECM/PCM Reset	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M29	Read Live Data	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M29	Inspection	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M29	Adjustment	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M29	VIN CHECK	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M29	Replace ECM/PCM	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read ECU Information	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read codes	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Erase Codes	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Freeze Frame Data	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Read Live Data	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Shift Solenoid Test	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Acceleration Device Test	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Direct electromagnetic clutch Test	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Function 1 Clutch Coil Test	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Differential Torque	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M YAW Rate/Lateral Acceleration Sensor	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M Steering Angle Sensor	
Zest	/	Full-time four-wheel drive control system (SH-AWD)	M97	Miscellaneous Test/Neutral M ALL Sensor	
Zest	/	Groove track drive unit (SLOT ECU)	M98	Read ECU Information	
Zest	/	Groove track drive unit (SLOT ECU)	M98	Read codes	
Zest	/	Groove track drive unit (SLOT ECU)	M98	Erase Codes	
Zest	/	Groove track drive unit (SLOT ECU)	M98	Read Live Data	
Zest	/	Groove track drive unit (SLOT ECU)	M98	Self Check	
Zest	/	Groove track drive unit (SLOT ECU)	M98	History Data	
Zest	/	Groove track drive unit (SLOT ECU)	M98	System Information	
Zest	/	Airbag Control System (SRS)	M9F	Read ECU Information	
Zest	/	Airbag Control System (SRS)	M9F	Read codes	
Zest	/	Airbag Control System (SRS)	M9F	Erase Codes	
Zest	/	Airbag Control System (SRS)	M9F	Read Live Data	
Zest	/	Airbag Control System (SRS)	MA0	Read ECU Information	
Zest	/	Airbag Control System (SRS)	MA0	Read codes	
Zest	/	Airbag Control System (SRS)	MA0	Erase Codes	
Zest	/	Airbag Control System (SRS)	MA0	Read Live Data	
Zest	/	Airbag Control System (SRS)	MA1	Read ECU Information	
Zest	/	Airbag Control System (SRS)	MA1	Read codes	
Zest	/	Airbag Control System (SRS)	MA1	Erase Codes	
Zest	/	Airbag Control System (SRS)	MA1	Read Live Data	
Zest	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	OPDS Initialization
Zest	/	Airbag Control System (SRS)	MA1	Miscellaneous Test	Blinking Side Airbag Indicator Light
Zest	/	Airbag Control System (SRS)	M2A	Read codes	
Zest	/	Airbag Control System (SRS)	M2A	Erase Codes	
Zest	/	Airbag Control System (SRS)	M2A	Read Live Data	
Zest	/	Airbag Control System (SRS)	M9C	Read ECU Information	
Zest	/	Airbag Control System (SRS)	M9C	Read codes	
Zest	/	Airbag Control System (SRS)	M9C	Erase Codes	
Zest	/	Airbag Control System (SRS)	M9C	Read Live Data	
Zest	/	Airbag Control System (SRS)	M9D	Read ECU Information	
Zest	/	Airbag Control System (SRS)	M9D	Read codes	
Zest	/	Airbag Control System (SRS)	M9D	Erase Codes	
Zest	/	Airbag Control System (SRS)	M9D	Read Freeze Frame Data	
Zest	/	Airbag Control System (SRS)	M9D	Read Live Data	

Zest	/	Airbag Control System (SRS)	M9D	Parameter Information	
Zest	/	Airbag Control System (SRS)	M9D	CALIBRATION	ODS Unit Initialization
Zest	/	Airbag Control System (SRS)	M9D	CALIBRATION	OPDS Initialization
Zest	/	Airbag Control System (SRS)	M9D	CALIBRATION	SWS Initialization
Zest	/	Airbag Control System (SRS)	M9D	CALIBRATION	E-Pretensioner For CMBS (CMS)
Zest	/	Airbag Control System (SRS)	M9D	Function Test	
Zest	/	Airbag Control System (SRS)	M9D	System Information	
Zest	/	Variable Valve Timing Control System (SVT)	MA2	Read ECU Information	
Zest	/	Variable Valve Timing Control System (SVT)	MA2	Read codes	
Zest	/	Variable Valve Timing Control System (SVT)	MA2	Erase Codes	
Zest	/	Variable Valve Timing Control System (SVT)	MA2	Read Freeze Frame Data	
Zest	/	Variable Valve Timing Control System (SVT)	MA2	Read Live Data	
Zest	/	Variable Valve Timing Control System (SVT)	MA2	Parameter Information	
Zest	/	Variable Valve Timing Control System (SVT)	MA2	Inspection	
Zest	/	Variable Valve Timing Control System (SVT)	MA2	CALIBRATION	
Zest	/	Variable Valve Timing Control System (SVT)	MA2	Function Test	
Zest	/	Variable Valve Timing Control System (SVT)	MA2	System Information	
Zest	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read codes	
Zest	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Erase Codes	
Zest	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Read Live Data	
Zest	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Function Test	
Zest	/	Tire Pressure Monitoring Control System (TPMS)	M2D	Sensor ID Learning	
Zest	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read ECU Information	
Zest	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read codes	
Zest	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Erase Codes	
Zest	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Read Live Data	
Zest	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Warning Indicators
Zest	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Function Test	Sensor Position Check
Zest	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Sensor ID Learning	
Zest	/	Tire Pressure Monitoring Control System (TPMS)	MA8	Threshold Rewriting	
Zest	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read ECU Information	
Zest	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read codes	
Zest	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Erase Codes	
Zest	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Freeze Frame Data	
Zest	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Read Live Data	
Zest	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Initialization
Zest	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Left Clutch Electromagnetic Coil Test
Zest	/	Variable Torque Control Four-Drive System (VTM-4)	MAA	Miscellaneous Test	Right Clutch Electromagnetic Coil Test